


OUTSIDE MIRROR

B+: Battery positive voltage

○—○ : Continuity

Connection		Mirror operation
B+	GND	
A	C	Up
C	A	Down
C	D	Left
D	C	Right


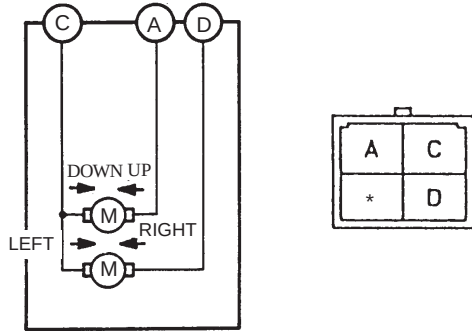


Switch position		Terminal						
		I	L	A	D	C	B	K
LH	Up	○	○—○					○
	Down	○	○	○				○
	Left	○	○	○	○			
	Right	○	○—○	○				
RH	Up	○	○			○		○
	Down	○	○			○		○
	Left	○	○			○	○	
	Right	○	○			○	○	

1. If not as specified, replace the power outside mirror.

POWER OUTSIDE MIRROR SWITCH REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the fuse block cover.
3. Remove the fuse block installation screws, and push the fuse block into the dashboard.
4. Insert your hand into the hole for the fuse block, and press the hooks of the power outside mirror switch.
5. Push the power outside mirror switch out, then remove it.
6. Disconnect the power outside mirror switch connector.

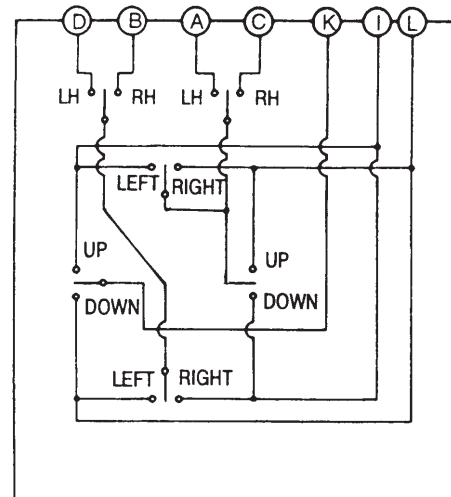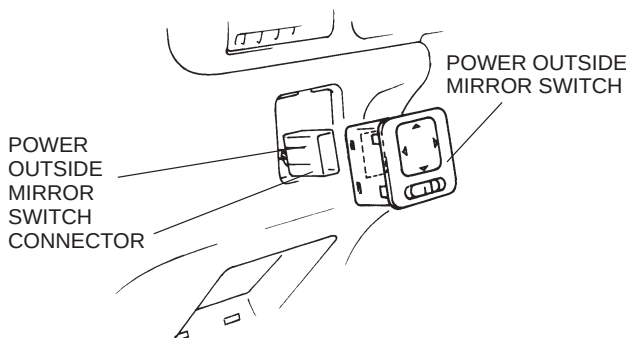

K	I			C	A
L	*	*	*	D	B

3. If not as specified, replace the power outside mirror switch.

7. Install in the reverse order of removal.

POWER OUTSIDE MIRROR SWITCH INSPECTION

1. Remove the power outside mirror switch. (Refer to POWER OUTSIDE MIRROR SWITCH REMOVAL/INSTALLATION.)
2. Inspect for continuity between the power outside mirror switch terminals using an ohmmeter.

REARVIEW MIRROR, REAR WINDOW DEFROSTER

REARVIEW MIRROR


REARVIEW MIRROR REMOVAL/INSTALLATION Regular Cab

Note

- The rearview mirror is attached to the interior light. (Refer to section T, INTERIOR LIGHTING SYSTEM, INTERIOR LIGHT REMOVAL/INSTALLATION, Regular Cab.)

Stretch Cab, Double Cab

- Remove in the order indicated in the table.
- Install in the reverse order of removal.

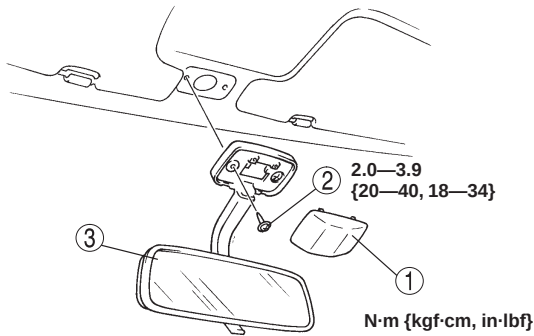


1	Cover
2	Screw
3	Rearview mirror

REAR WINDOW DEFROSTER

REAR WINDOW DEFROSTER SWITCH REMOVAL/INSTALLATION

- Disconnect the negative battery cable.
- Remove the meter hood.
- Press the hooks of the rear window defroster switch and push the switch out.

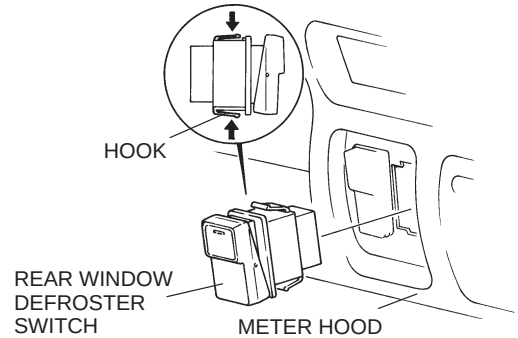


- Install in the reverse order of removal.

REAR WINDOW DEFROSTER SWITCH INSPECTION

- Remove the rear window defroster switch.
 - Inspect for continuity between the rear window defroster switch terminals using an ohmmeter.
- : Continuity ○—(V)—○ : Bulb

Switch position	Terminal			
	A	B	C	D
ON	○—(V)—○	○—○	○—○	○—○
OFF	○—(V)—○	○—○		

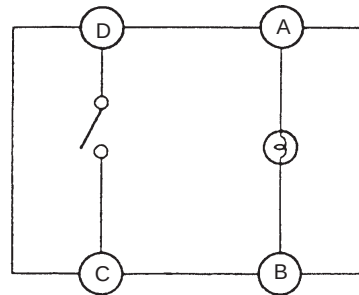

*	C	A
*	D	B

- If not as specified, replace the rear window defroster switch.

FILAMENT INSPECTION

- Turn the ignition switch to ON position.
- Turn the rear window defroster switch on.

Caution

- Directly touching the rear window defroster filament with the lead of the circuit tester will damage it. Wrap aluminum foil around the end of the lead and test the filament by touching it with the foil.