


DASHBOARD AND CONSOLE

DASHBOARD REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the driver-side air bag module. (Refer to section T, AIR BAG SYSTEM, DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.)
3. Remove the passenger-side air bag module. (Refer to section T, AIR BAG SYSTEM, PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.)
4. Remove the steering wheel. (Refer to section N, MANUAL STEERING, STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
5. Remove the installation bolts then lower the assembled steering shaft from the dashboard. (Refer to section N, MANUAL STEERING, STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
6. Remove the meter hood.
7. Remove the instrument cluster.
8. Remove the front console. (Refer to FRONT CONSOLE REMOVAL/INSTALLATION.)
9. Remove the glove compartment.
10. Remove the bonnet release cable installation nut.
11. Remove the A-pillar trims. (Refer to TRIM, A-PILLAR TRIM REMOVAL/INSTALLATION.)
12. Disconnect the wires for both the blower unit and the heater unit. (Refer to section U, CONTROL SYSTEM, CLIMATE CONTROL UNIT REMOVAL.) (Refer to section U, CONTROL SYSTEM, CLIMATE CONTROL UNIT INSTALLATION.)
13. Remove the fuse block.
14. Remove in the order indicated in the table.
15. Install in the reverse order of removal.
16. Adjust the wires for both the blower unit and the heater unit. (Refer to section U, CONTROL SYSTEM, CLIMATE CONTROL UNIT ADJUSTMENT.)

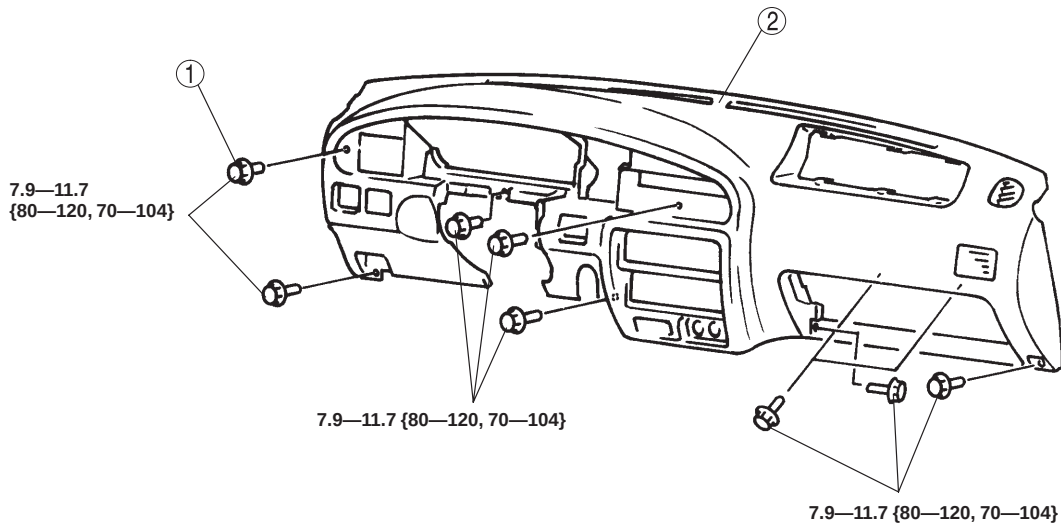

N·m {kgf·cm, in·lbf}


1	Bolt
---	------

2	Dashboard
---	-----------

DASHBOARD AND CONSOLE

DASHBOARD DISASSEMBLY/ASSEMBLY

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

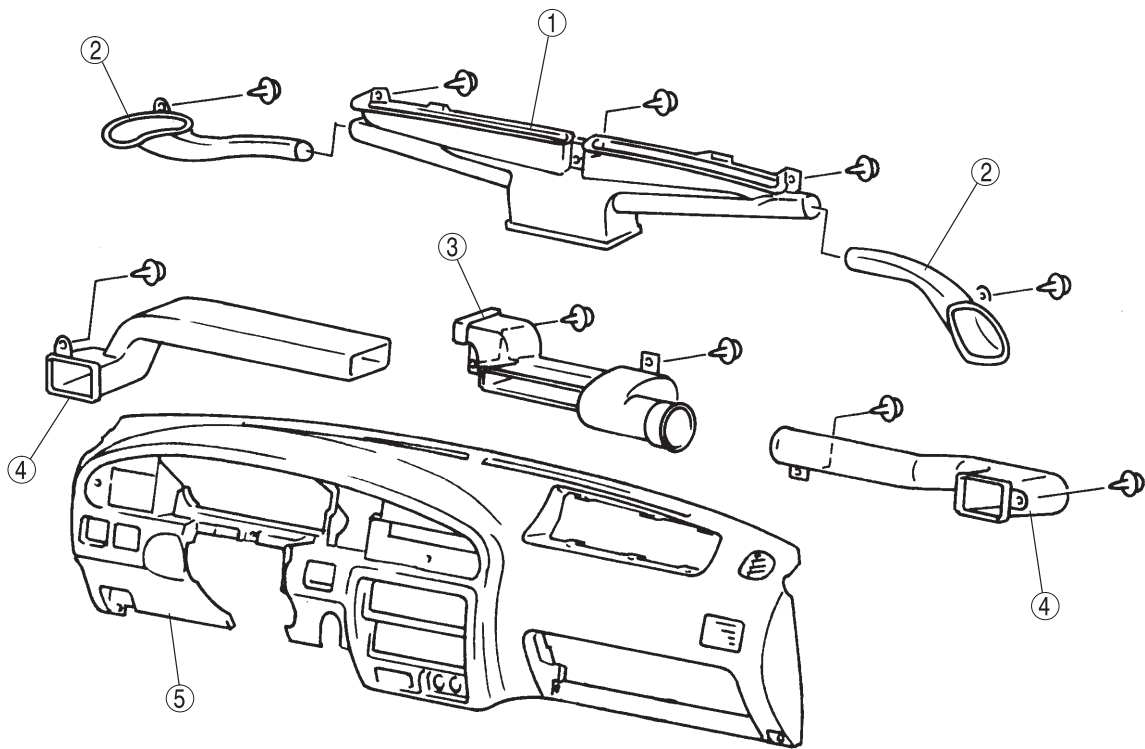


1	Defroster nozzle
2	Side demister nozzle
3	Center duct

4	Duct
5	Dashboard crash pad

DASHBOARD AND CONSOLE

DASHBOARD MEMBER REMOVAL/INSTALLATION


1. Remove the dashboard. (Refer to DASHBOARD REMOVAL/INSTALLATION.)
2. Remove the bolts, then remove the dashboard member.

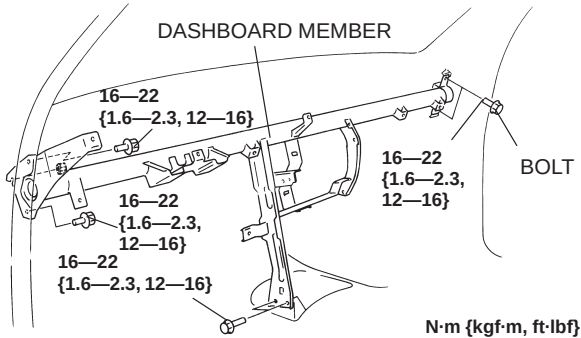

3. Install in the reverse order of removal.

COLUMN COVER REMOVAL/INSTALLATION

1. Remove the screws, then remove the column cover.

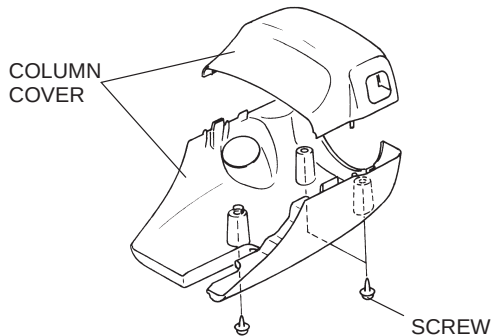


2. Install in the reverse order of removal.

FRONT CONSOLE REMOVAL/INSTALLATION

1. Remove the rear console.
2. For manual transaxle vehicle, remove the shift lever knob.
3. Remove the screws, then remove the front console.

Caution


- In order to prevent noise caused by interference with the dashboard, install the screws to the rear of the front console before installing the front of the front console.

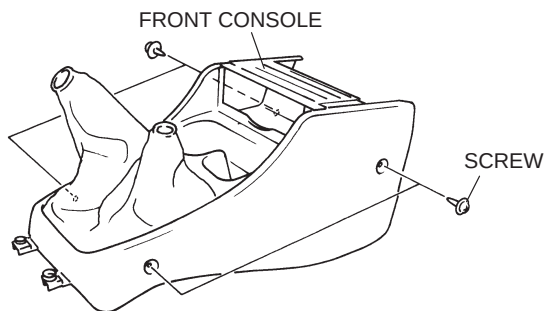

4. Install in the reverse order of removal.

FRONT CONSOLE DISASSEMBLY/ASSEMBLY


1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

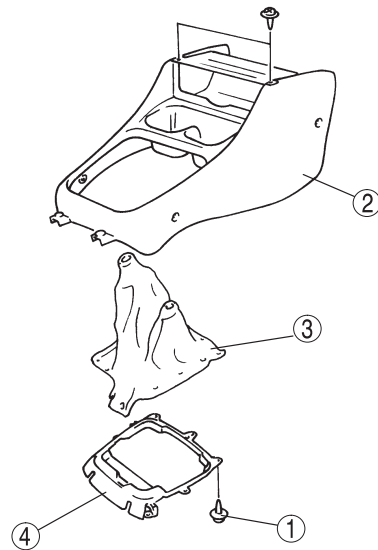

1	Screw
2	Front console
3	Boot
4	Set plate

REAR CONSOLE REMOVAL/INSTALLATION

1. Remove the screws.
2. Pull the rear console upward, then remove it.

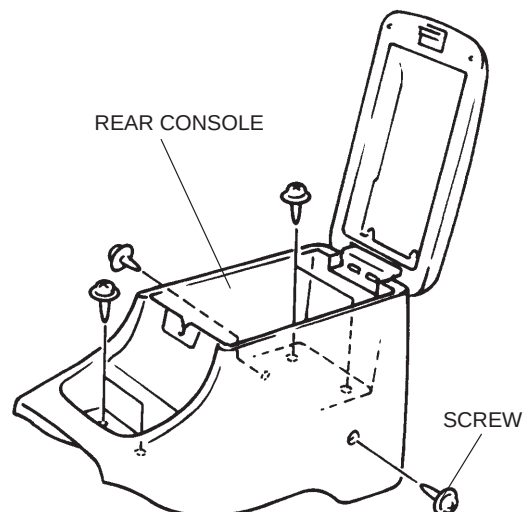


3. Install in the reverse order of removal.

DASHBOARD AND CONSOLE

REAR CONSOLE DISASSEMBLY/ASSEMBLY


1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

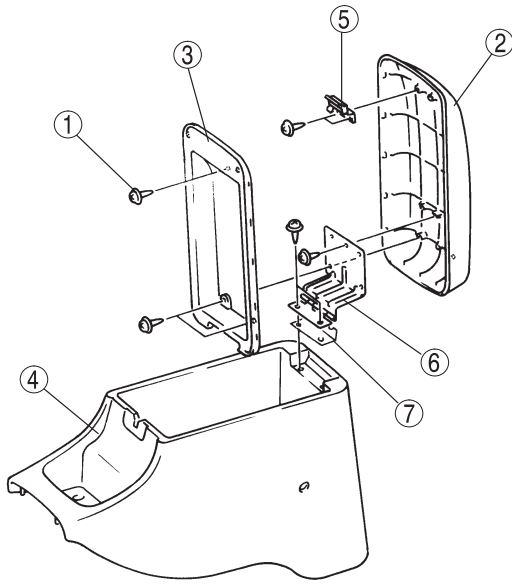

1	Screw
2	Console lid outer
3	Console lid inner
4	Rear console
5	Console lid lock
6	Console lid hinge
7	Console lid bracket

GLOVE COMPARTMENT REMOVAL/INSTALLATION


1. Open the glove compartment and bend the sides inward to disengage the pins.
2. Pull the glove compartment downward, then disengage clips A.

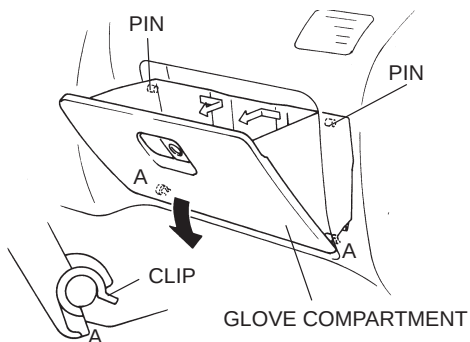

3. Install in the reverse order of removal.

METER HOOD REMOVAL/INSTALLATION

1. Remove the screws.
2. Pull the meter hood toward you, then disengage clips A and pins B.

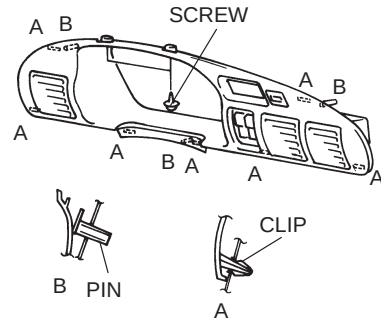

3. Disconnect the connectors, then remove the meter hood.
4. Install in the reverse order of removal.