


## TRIM

### A-PILLAR TRIM REMOVAL/INSTALLATION (VEHICLES BUILT UP TO 07/2002)


1. Remove the quarter upper trim. (Regular cab, stretch cab) (Refer to QUARTER UPPER TRIM REMOVAL/INSTALLATION.)
2. Remove the B-pillar upper trim. (Double cab) (Refer to B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
3. Pull the A-pillar trim toward you, then disengage clips A and pin B.
4. Pull the A-pillar trim upward, then disengage the hook.

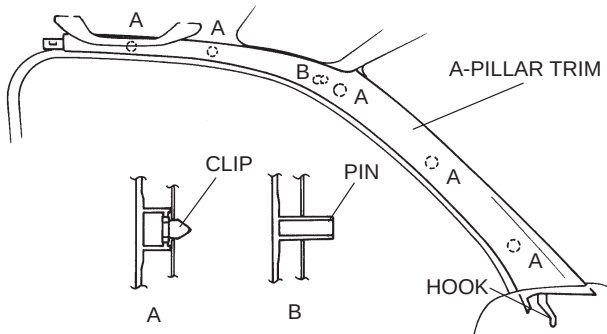

5. Install in the reverse order of removal.

### A-PILLAR TRIM REMOVAL/INSTALLATION (VEHICLES BUILT FROM 08/2002)

1. Remove the roof side trim. (See ROOF SIDE TRIM REMOVAL/INSTALLATION.)
2. Pull the A-pillar trim downward to disengage clips A and pin B.
3. Remove the A-pillar trim.

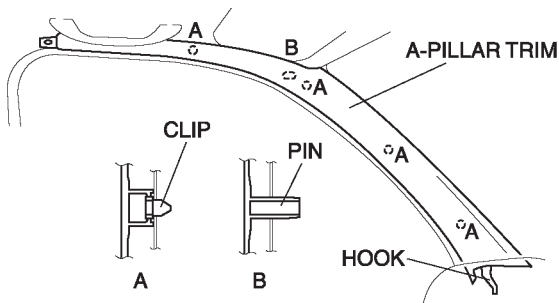


4. Install in the reverse order of removal.

### B-PILLAR TRIM REMOVAL/INSTALLATION (VEHICLES BUILT UP TO 07/2002)

#### Regular Cab


1. Turn over the seaming welt.
2. Remove the seat belt upper anchor installation bolt.
3. Remove the back upper trim.
4. Pull the B-pillar trim toward you, then disengage clips A and pins B.
5. Remove clip C.
6. Remove the seat belt from the B-pillar trim.

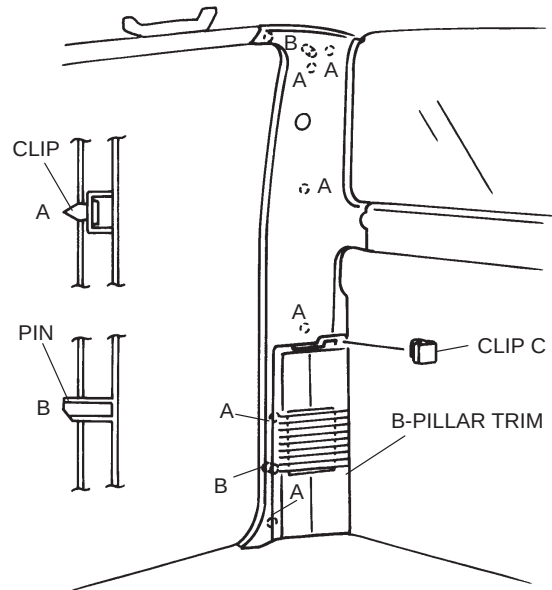

7. Install in the reverse order of removal.

### B-PILLAR TRIM REMOVAL/INSTALLATION (VEHICLES BUILT FROM 08/2002)


1. Remove the roof side trim. (See ROOF SIDE TRIM REMOVAL/INSTALLATION.)
2. Remove the back upper trim. (See BACK UPPER TRIM REMOVAL/INSTALLATION.)
3. Remove the back lower trim. (See BACK LOWER TRIM REMOVAL/INSTALLATION.)
4. Remove the fasteners B.
5. Pull the B-pillar trim to disengage clips A.
6. Remove the B-pillar trim.
7. Install in the reverse order of removal.

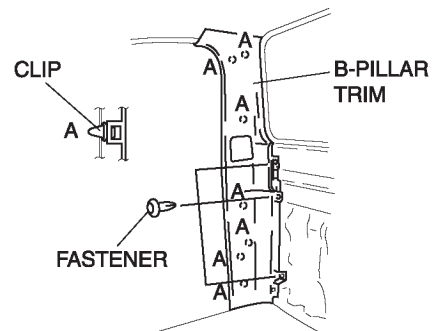

## B-PILLAR LOWER TRIM REMOVAL/INSTALLATION

### Double Cab

1. Remove the front scuff plate.
2. Remove the rear scuff plate.
3. Turn over the seaming welt.
4. Pull the B-pillar lower trim indicated by the arrow, then disengage clips A and pin B.
5. Remove the seat belt from B-pillar trim.
6. Pull the B-pillar lower trim upward, then disengage hooks C from the body.

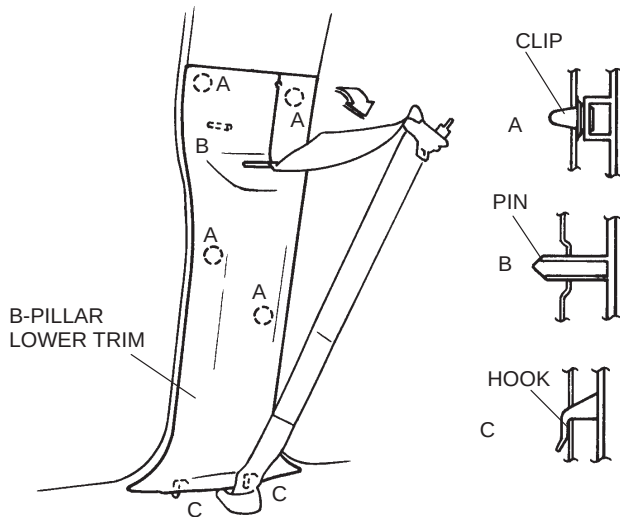


7. Install in the reverse order of removal.

## B-PILLAR UPPER TRIM REMOVAL/INSTALLATION

### Double Cab


1. Remove the B-pillar lower trim. (Refer to B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
2. Remove the front seat belt upper anchor installation bolt.
3. Remove the C-pillar trim. (Refer to C-PILLAR TRIM REMOVAL/INSTALLATION.)
4. Remove the fastener.
5. Pull the B-pillar upper trim toward you, then disengage clips A and pins B from the body.

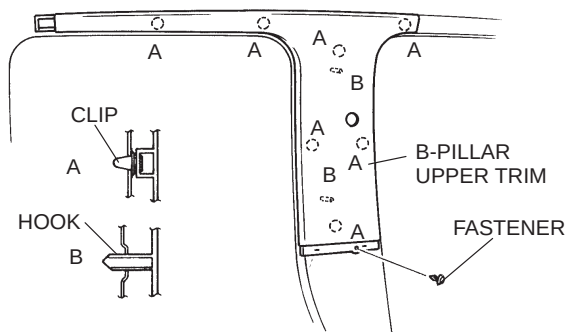

6. Install in the reverse order of removal.

## FRONT SIDE TRIM REMOVAL/INSTALLATION


1. Remove the scuff plate.
2. Loosen the nut.
3. Pull the front side trim in the direction indicated by the arrow, then remove it.

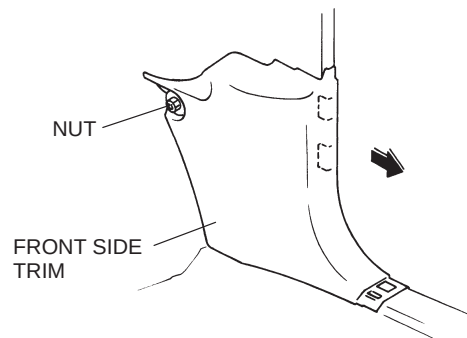

4. Install in the reverse order of removal.

## ROOF SIDE TRIM REMOVAL/INSTALLATION (STRETCH CAB - 4 DOOR)


1. Remove the screw on the hook.
2. Remove the hook.
3. Pull the roof side trim downward to disengage clips A and pin B.
4. Remove the roof side trim.

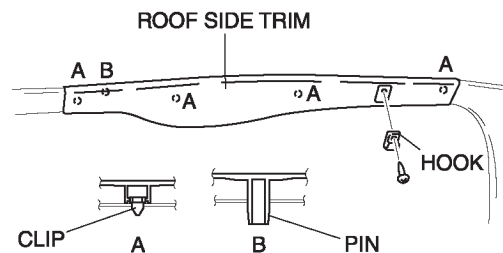

5. Install in the reverse order of removal.

## FRONT SCUFF PLATE REMOVAL/INSTALLATION

1. Remove the screws.
2. Pull the front scuff plate upward, then disengage pin A.

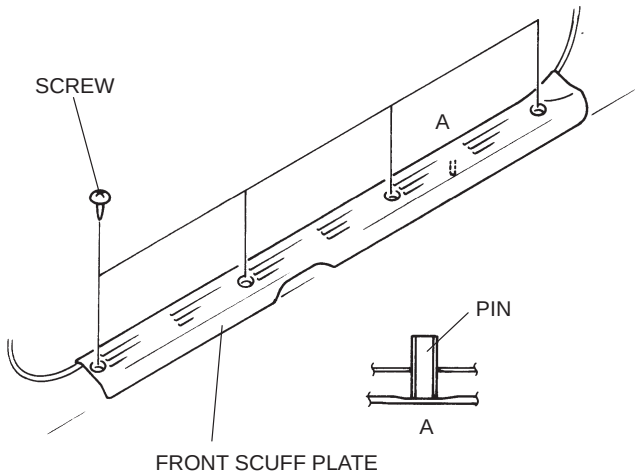


3. Install in the reverse order of removal.

## REAR SCUFF PLATE REMOVAL/INSTALLATION

### Double Cab


1. Remove the screw.
2. Pull the rear scuff plate upward, then disengage clips A and pin B.

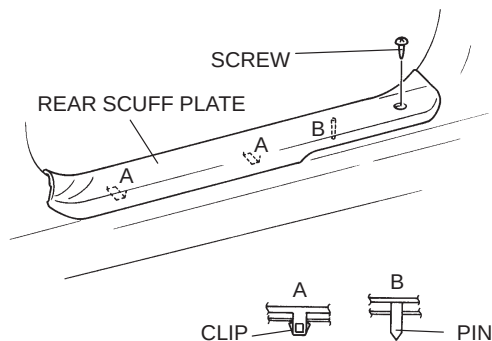

3. Install in the reverse order of removal.

## REAR SCUFF PLATE REMOVAL/INSTALLATION (STRETCH CAB – 4 DOOR)

1. Pull the scuff plate upward to disengage clips A and pin B.
2. Remove the scuff plate.

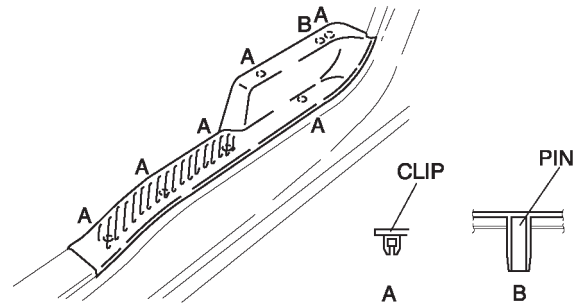


3. Install in the reverse order of removal.

## C-PILLAR TRIM REMOVAL/INSTALLATION

### Double Cab

1. Turn over the seaming welt.
2. Remove the rear seat. (Refer to SEAT, SEAT REMOVAL/INSTALLATION, Double Cab, Rear.)
3. Remove the rear seat belt upper anchor installation bolt.
4. Remove the fasteners.
5. Pull the C-pillar trim toward you, then disengage clips A and pin B.
6. Remove the seat belt from C-pillar trim.

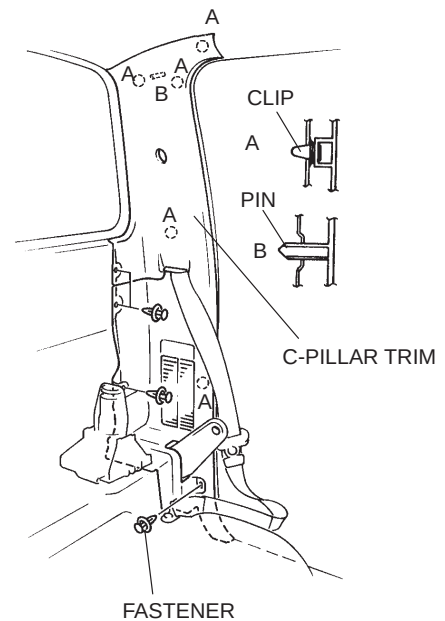

7. Pull the C-pillar trim upward, then remove it from the body.
8. Install in the reverse order of removal.

## QUARTER UPPER TRIM REMOVAL/INSTALLATION


### Stretch Cab

1. Remove the back upper trim.
2. Remove the upper anchor of the seat belt.
3. Remove the quarter window lock. (Refer to WINDOW GLASS, QUARTER WINDOW GLASS REMOVAL/INSTALLATION.)
4. Remove the hook.
5. Remove the fasteners.
6. Pull the quarter upper trim toward you, then disengage clips A and pins B.

## TRIM

### BACK UPPER TRIM REMOVAL/INSTALLATION


1. Insert a flathead screwdriver or equivalent in the gap between the rear window weatherstrip and back upper trim, then pull the back upper trim to disengage clips A and pins B.
2. Remove the back upper trim.

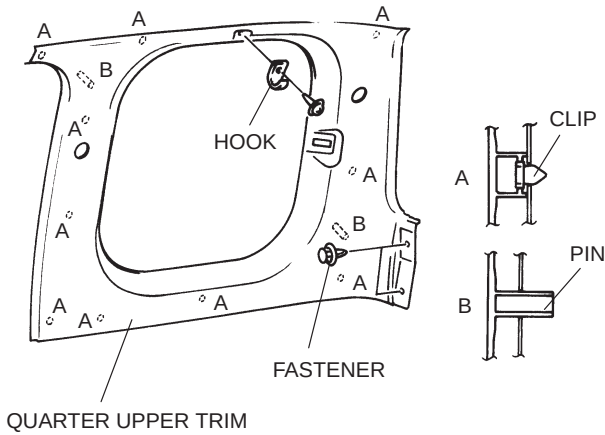


7. Install in the reverse order of removal.

### QUARTER LOWER TRIM REMOVAL/INSTALLATION Stretch Cab

1. Remove the quarter upper trim. (Refer to QUARTER UPPER TRIM REMOVAL/INSTALLATION.)
2. Remove the back lower trim.
3. Remove the fasteners.
4. Pull the quarter lower trim toward you, then disengage clips A and pins B.

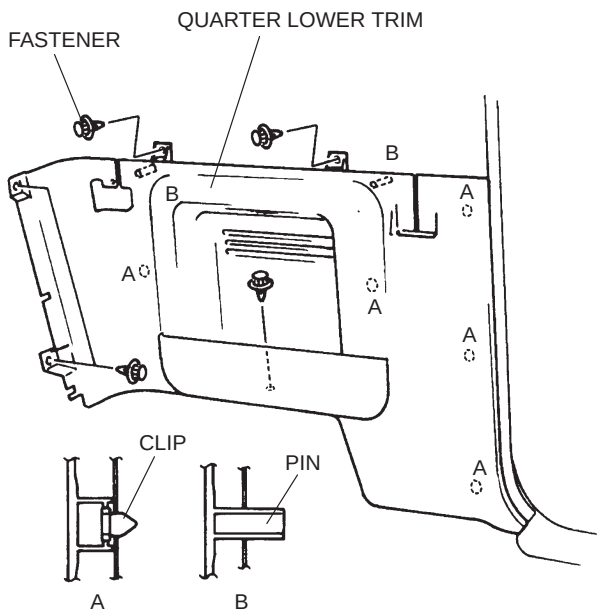


5. Install in the reverse order of removal.

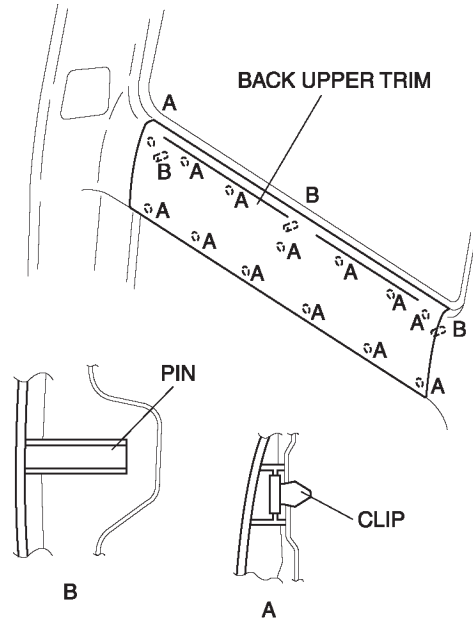

3. Install in the reverse order of removal.

### BACK LOWER TRIM REMOVAL/INSTALLATION



1. Remove the back upper trim. (See BACK UPPER TRIM REMOVAL/INSTALLATION.)
2. Remove the fasteners.
3. Remove the back lower trim.

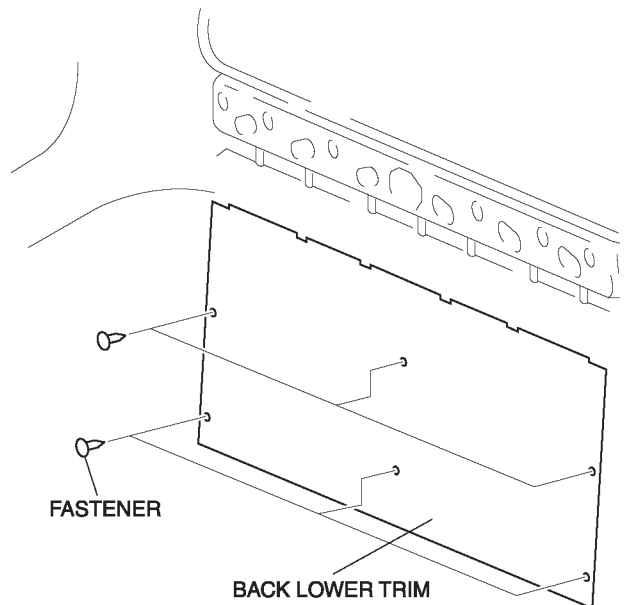

4. Install in the reverse order of removal.

## FRONT DOOR TRIM REMOVAL/INSTALLATION

1. Disconnect the negative battery cable if equipped with a power window system.
2. Remove the regulator handle if equipped.
3. Remove the inner garnish.
4. Remove the power window switch if equipped.
5. Remove the screws and the fastener.
6. Pull the front door trim toward you, then disengage clips A.
7. Pull the front door trim upward, then disengage hook B.

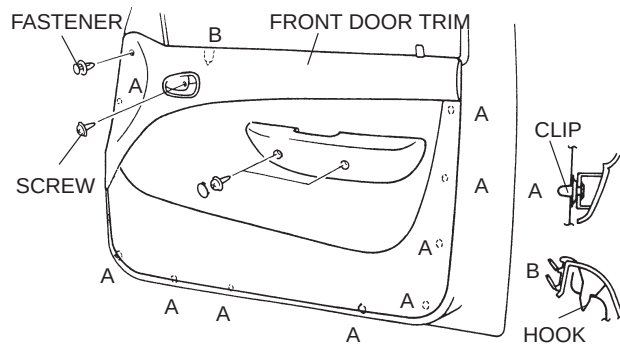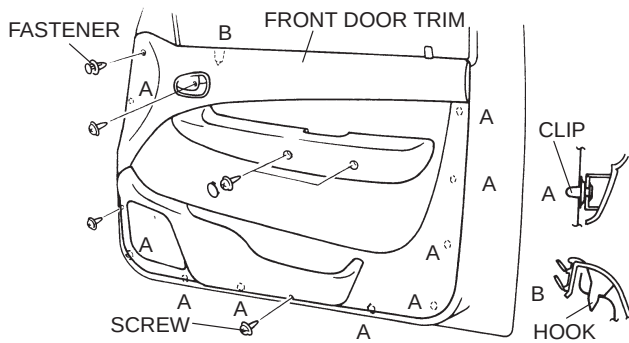


8. Install in the reverse order of removal.

## REAR DOOR TRIM REMOVAL/INSTALLATION

### Double cab


1. Disconnect the negative battery cable if equipped with power window.
2. Remove the regulator handle if equipped.
3. Remove the power window switch if equipped.
4. Remove the screws.
5. Remove the ashtray.
6. Pull the door trim toward you, then disengage clips A.

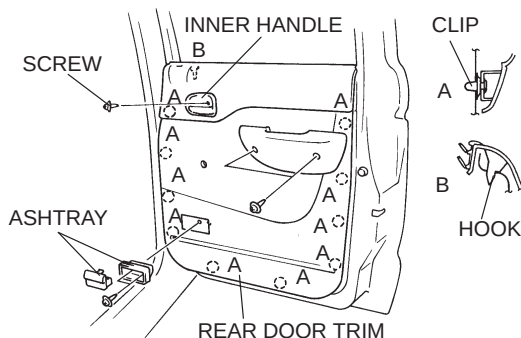

7. Extract the inner handle from the rear door trim.
8. Pull the rear door trim upward, then disengage hooks B.
9. Install in the reverse order of removal.

## REAR ACCESS PANEL TRIM REMOVAL/INSTALLATION (STRETCH CAB – 4 DOOR)

1. Remove the lower anchor bolt and upper anchor bolt. (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
2. Remove the fastener.
3. Remove the screw.
4. Remove pins A.
5. Pull the rear access panel trim to disengage clips A.
6. Remove the rear access panel trim with the seat belt pulled out through the seat belt hole.

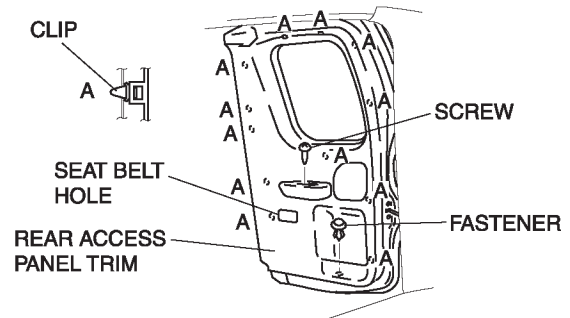

7. Install in the reverse order of removal.