



HEADLINER

HEADLINER REMOVAL/INSTALLATION

1. Remove the A-pillar trims.
2. Remove the B-pillar upper trims. (Refer to TRIM, B-PILLAR UPPER TRIM REMOVAL/INSTALLATION, Double Cab.)
3. Remove the quarter upper trims. (Refer to TRIM, QUARTER UPPER TRIM REMOVAL/INSTALLATION, Stretch Cab.)
4. Remove the C-pillar trims. (Refer to TRIM, C-PILLAR TRIM REMOVAL/INSTALLATION, Double Cab.)
5. Remove the assist handle.
6. Remove the rearview mirror.
7. Remove the sunvisors and adapters.
8. Remove the interior light. (Refer to section T, INTERIOR LIGHTING SYSTEM, INTERIOR LIGHT REMOVAL/INSTALLATION.)
9. Remove the fasteners, then remove the headliner.

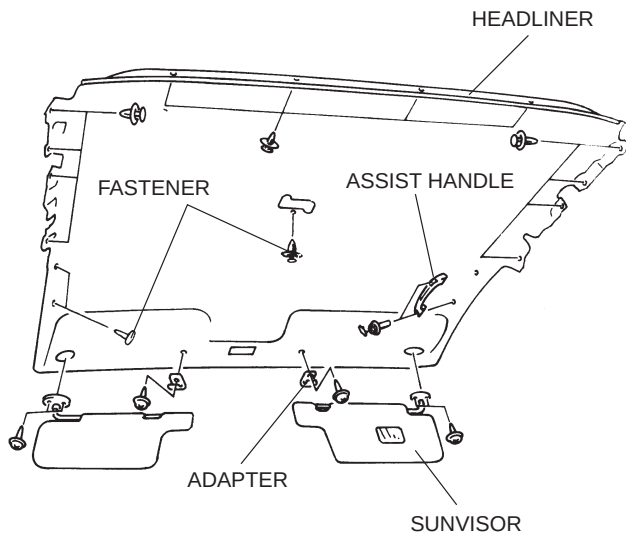

10. Remove the headliner from the vehicle through the passenger-side door.

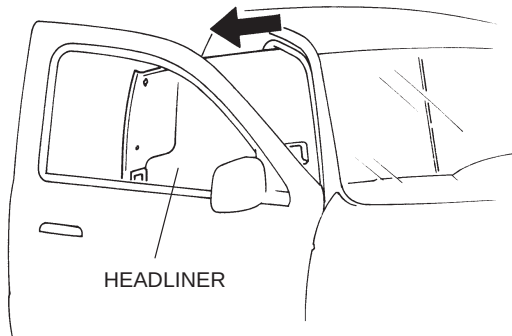


11. Install in the reverse order of removal.

FLOOR COVERING

FLOOR COVERING REMOVAL/INSTALLATION

Regular Cab, Stretch Cab

1. Remove the dashboard member. (Refer to DASHBOARD AND CONSOLE, DASHBOARD MEMBER REMOVAL/INSTALLATION.)
2. Remove the quarter lower trims. (Refer to TRIM, QUARTER LOWER TRIM REMOVAL/INSTALLATION, Stretch Cab.)
3. Remove the back lower trim.
4. Remove the front seats. (Refer to SEAT, SEAT REMOVAL/INSTALLATION, Regular Cab.) (Refer to SEAT, SEAT REMOVAL/INSTALLATION, Stretch Cab, Double cab, Front.)
5. Remove the rear seat. (Refer to SEAT, SEAT REMOVAL/INSTALLATION, Stretch Cab, Double cab, Rear.)
6. Remove the rear console bracket.
7. Remove the lower anchor installation bolts of front seat belts.
8. Remove the front side trims.
9. Remove the air outlet ducts. (Refer to section U, BASIC SYSTEM, AIR OUTLET DUCT REMOVAL/INSTALLATION.)
10. Remove the footrest.
11. Remove the fasteners, then remove the floor covering.

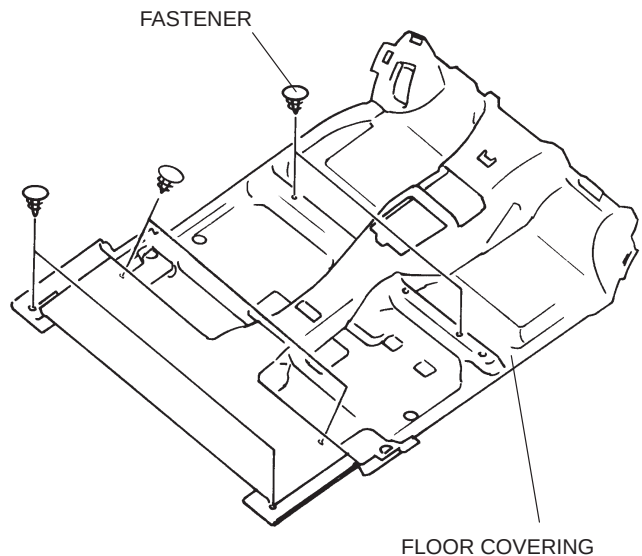


12. Install in the reverse order of removal.

Double cab

1. Remove the dashboard member. (Refer to DASHBOARD AND CONSOLE, DASHBOARD MEMBER REMOVAL/INSTALLATION.)
2. Remove the B-pillar lower trims. (Refer to TRIM, B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
3. Remove the C-pillar trims. (Refer to TRIM, C-PILLAR TRIM REMOVAL/INSTALLATION.)

FLOOR COVERING

4. Remove the front seats and rear seat. (Refer to SEAT, SEAT REMOVAL/INSTALLATION, Stretch Cab, Double cab, Front.) (Refer to SEAT, SEAT REMOVAL/INSTALLATION, Stretch Cab, Double cab, Rear.)
5. Remove the rear console bracket.
6. Remove the lower anchor installation bolts of front seat belts and rear seat belts.
7. Remove the front side trim.
8. Remove the air outlet duct. (Refer to section U, BASIC SYSTEM, AIR OUTLET DUCT REMOVAL/INSTALLATION.)
9. Remove the footrest.
10. Remove the fasteners, then remove the floor covering.

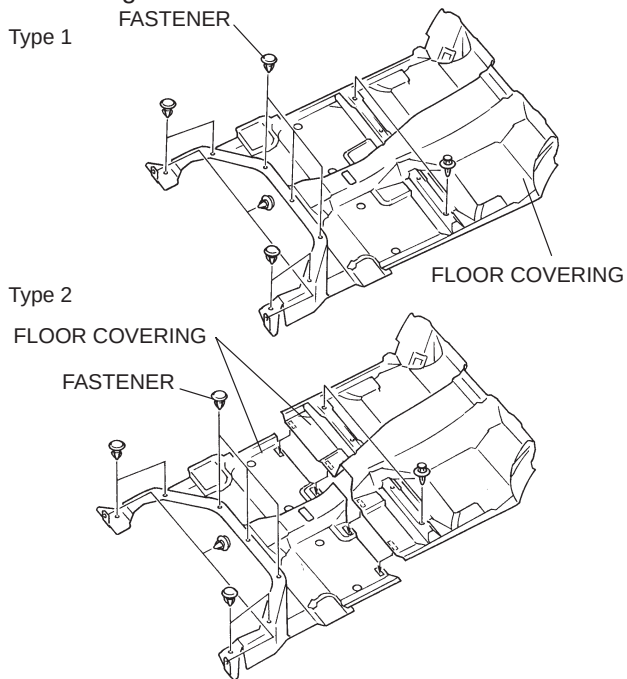

11. Install in the reverse order of removal.