

BODY ELECTRICAL SYSTEM

POWER SYSTEM	T- 3	BACK-UP LIGHT SWITCH	
FUSE SERVICE CAUTION	T- 3	REMOVAL/INSTALLATION	T-13
MAIN FUSE REMOVAL/INSTALLATION	T- 3	BACK-UP LIGHT SWITCH INSPECTION	T-13
IGNITION SWITCH		FLASHER UNIT	
REMOVAL/INSTALLATION	T- 3	REMOVAL/INSTALLATION	T-13
IGNITION SWITCH INSPECTION	T- 3	FLASHER UNIT INSPECTION (VEHICLES	
KEY REMINDER SWITCH		BUILT UP TO 07/2002)	T-14
REMOVAL/INSTALLATION	T- 3	FLASHER UNIT INSPECTION (VEHICLES	
KEY REMINDER SWITCH INSPECTION	T- 4	BUILT FROM 08/2002)	T-14
CIGARETTE LIGHTER		HEADLIGHT LEVELING ACTUATOR	
REMOVAL/INSTALLATION	T- 4	REMOVAL/INSTALLATION	T-15
CIGARETTE LIGHTER INSPECTION	T- 4	HEADLIGHT LEVELING ACTUATOR	
RELAY LOCATION	T- 5	INSPECTION	T-16
RELAY INSPECTION	T- 6	REAR FOG LIGHT RELAY	
EXTERIOR LIGHTING SYSTEM	T- 7	REMOVAL/INSTALLATION	T-17
FRONT COMBINATION LIGHT		REAR FOG LIGHT RELAY INSPECTION	T-17
REMOVAL/INSTALLATION	T- 7	RUNNING LIGHT RELAY	
HEADLIGHT AIMING	T- 7	REMOVAL/INSTALLATION	T-17
HEADLIGHT BULB		RUNNING LIGHT RELAY INSPECTION	T-17
REMOVAL/INSTALLATION	T- 7	INTERIOR LIGHTING SYSTEM	T-19
PARKING LIGHT BULB		INTERIOR LIGHT	
REMOVAL/INSTALLATION	T- 8	REMOVAL/INSTALLATION	T-19
FRONT TURN LIGHT		INTERIOR LIGHT INSPECTION	T-19
REMOVAL/INSTALLATION	T- 8	DOOR SWITCH	
FRONT TURN LIGHT BULB		REMOVAL/INSTALLATION	T-20
REMOVAL/INSTALLATION	T- 8	DOOR SWITCH INSPECTION	T-20
FRONT SIDE TURN LIGHT		PANEL LIGHT CONTROL SWITCH	
REMOVAL/INSTALLATION	T- 8	REMOVAL/INSTALLATION	T-20
REAR COMBINATION LIGHT		PANEL LIGHT CONTROL SWITCH	
REMOVAL/INSTALLATION	T- 9	INSPECTION	T-21
REAR COMBINATION LIGHT BULB		WIPER AND WASHER	T-22
REMOVAL/INSTALLATION	T- 9	WINDSHIELD WIPER MOTOR	
REAR FOG LIGHT		REMOVAL/INSTALLATION	T-21
REMOVAL/INSTALLATION	T- 9	WINDSHIELD WIPER MOTOR	
REAR FOG LIGHT BULB		INSPECTION	T-22
REMOVAL/INSTALLATION	T- 9	WINDSHIELD WIPER ARM AND BLADE	
LICENSE PLATE LIGHT		REMOVAL/INSTALLATION	T-22
REMOVAL/INSTALLATION	T- 10	WINDSHIELD WIPER ARM AND BLADE	
COMBINATION SWITCH		ADJUSTMENT	T-22
REMOVAL/INSTALLATION	T- 10	WINDSHIELD WIPER LINK	
COMBINATION SWITCH		REMOVAL/INSTALLATION	T-23
DISASSEMBLY/ASSEMBLY	T- 10	WINDSHIELD WASHER TANK	
LIGHT SWITCH		REMOVAL/INSTALLATION	T-23
REMOVAL/INSTALLATION	T- 10	WINDSHIELD WASHER MOTOR	
LIGHT SWITCH INSPECTION	T- 10	REMOVAL/INSTALLATION	T-23
HAZARD WARNING SWITCH		WINDSHIELD WASHER MOTOR	
REMOVAL/INSTALLATION	T- 11	INSPECTION	T-23
HAZARD WARNING		WINDSHIELD WASHER NOZZLE	
SWITCH INSPECTION	T- 11	REMOVAL	T-23
REAR FOG LIGHT SWITCH REMOVAL	T-12	WINDSHIELD WASHER NOZZLE	
REAR FOG LIGHT SWITCH		INSTALLATION	T-24
INSTALLATION	T-12	WINDSHIELD WASHER NOZZLE	
REAR FOG LIGHT SWITCH		ADJUSTMENT	T-24
INSPECTION	T-12	WINDSHIELD WASHER PIPE	
HEADLIGHT LEVELING SWITCH		REMOVAL/INSTALLATION	T-24
REMOVAL	T-12	WINDSHIELD WIPER AND WASHER	
HEADLIGHT LEVELING SWITCH		SWITCH REMOVAL/INSTALLATION	T-24
INSTALLATION	T-12	WINDSHIELD WIPER AND WASHER	
HEADLIGHT LEVELING SWITCH		SWITCH INSPECTION	T-24
INSPECTION	T-12	WARNING AND INDICATOR SYSTEM	T-25

BODY ELECTRICAL SYSTEM

INSTRUMENT CLUSTER REMOVAL/INSTALLATION	T-25	THEFT-DETERRENT CONTROL MODULE INSPECTION (VEHICLES BUILT UP TO 07/2002)	T-36
INSTRUMENT CLUSTER DISASSEMBLY/ASSEMBLY	T-25	THEFT-DETERRENT CONTROL MODULE INSPECTION (VEHICLES BUILT FROM 08/2002)	T-38
INSTRUMENT CLUSTER INSPECTION	T-25	THEFT-DETERRENT HORN REMOVAL/INSTALLATION	T-41
INSTRUMENT CLUSTER REPAIR	T-27	IMMOBILIZER SYSTEM	T-42
WARNING AND INDICATOR LIGHT BULB REMOVAL/INSTALLATION	T-27	IMMOBILIZER UNIT REMOVAL/INSTALLATION	T-41
FUEL GAUGE SENDER UNIT INSPECTION	T-27	IMMOBILIZER UNIT INSPECTION	T-42
WATER TEMPERATURE SENDER UNIT REMOVAL	T-28	COIL REMOVAL/INSTALLATION	T-43
WATER TEMPERATURE SENDER UNIT INSTALLATION	T-28	IMMOBILIZER SYSTEM REPROGRAM PROCEDURE	T-44
WATER TEMPERATURE SENDER UNIT INSPECTION	T-28	CODE WORD INPUT PROCEDURE	T-50
OIL PRESSURE SWITCH INSPECTION	T-28	AIR BAG SYSTEM	T-52
HORN REMOVAL/INSTALLATION	T-28	SERVICE WARNINGS	T-52
HORN RELAY REMOVAL/INSTALLATION ...	T-28	DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION	T-53
HORN RELAY INSPECTION	T-29	PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION	T-53
CLOCK REMOVAL/INSTALLATION	T-29	SAS UNIT REMOVAL/INSTALLATION	T-54
AUDIO	T-29	CLOCK SPRING REMOVAL/INSTALLATION	T-55
AUDIO UNIT REMOVAL	T-29	CLOCK SPRING ADJUSTMENT	T-55
AUDIO UNIT INSTALLATION	T-29	CLOCK SPRING INSPECTION	T-55
FRONT SPEAKER REMOVAL/INSTALLATION	T-29	AIR BAG MODULE DEPLOYMENT AUTHORIZATION PROCEDURE	T-56
FRONT SPEAKER INSPECTION	T-30	AIR BAG MODULE DEPLOYMENT PROCEDURE	T-56
REAR SPEAKER REMOVAL/INSTALLATION	T-30	AIR BAG MODULE DISPOSAL PROCEDURE	T-59
REAR SPEAKER INSPECTION	T-30	INSPECTION OF SST (DEPLOYMENT TOOL)	T-60
ROOF ANTENNA REMOVAL	T-31	ON-BOARD DIAGNOSTIC (IMMOBILIZER SYSTEM)	T-61
ROOF ANTENNA INSTALLATION	T-31	FOREWORD	T-61
ROOF ANTENNA INSPECTION	T-31	DTC TABLE	T-61
ANTENNA FEEDER REMOVAL/INSTALLATION	T-31	DTC 01	T-62
ANTENNA FEEDER INSPECTION	T-32	DTC 02	T-62
CONDENSER REMOVAL/INSTALLATION ...	T-32	DTC 03	T-62
THEFT-DETERRENT SYSTEM	T-33	DTC 11	T-63
STRUCTURAL VIEW	T-33	DTC 21	T-64
BONNET SWITCH REMOVAL/INSTALLATION	T-33	DTC 24	T-64
BONNET SWITCH INSPECTION	T-33	DTC 30	T-65
THEFT-DETERRENT HORN RELAY REMOVAL/INSTALLATION	T-33	ON-BOARD DIAGNOSTIC (AIR BAG SYSTEM)	T-66
THEFT-DETERRENT HORN RELAY INSPECTION	T-33	AIR BAG SYSTEM	T-66
THEFT-DETERRENT RELAY REMOVAL/INSTALLATION	T-33	TROUBLESHOOTING	T-73
THEFT-DETERRENT RELAY INSPECTION	T-33	AIR BAG SYSTEM	T-73
THEFT-DETERRENT CONTROL MODULE REMOVAL/INSTALLATION	T-33		