

POWER SYSTEM

FUSE SERVICE CAUTION


Caution

- Determine and correct the cause of the burnt fuse before replacing it with the specified type. If the fuse is replaced before doing this, it may burn again.


MAIN FUSE REMOVAL/INSTALLATION

- Disconnect the negative battery cable.
- Remove in the order indicated in the table.
- Install in the reverse order of removal.

G6, WL, WL TURBO, F2 CIS

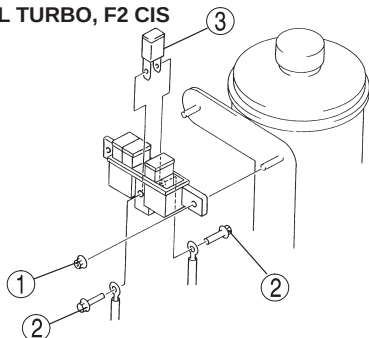


F2 CARB

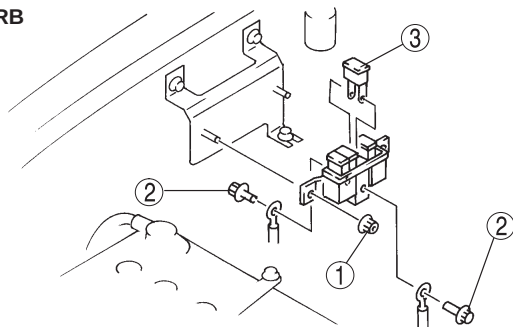

1	Nut
2	Bolt
3	Main fuse

IGNITION SWITCH REMOVAL/INSTALLATION

- Disconnect the negative battery cable.
- Remove the column cover.
- Disconnect the ignition switch connectors.
- Remove the screw to remove the ignition switch.

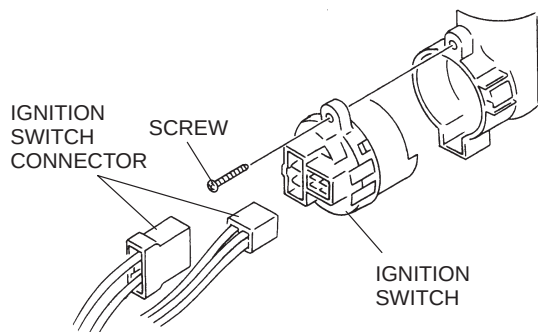


- Install in the reverse order of removal.

IGNITION SWITCH INSPECTION

- Remove the column cover.
- Disconnect the ignition switch connectors.
- Inspect for continuity between the ignition switch terminals using an ohmmeter.

○—○ : Continuity


Ignition key position	Terminal					
	2A	2B	1D	1C	1B	1A
LOCK						
ACC	○—○		○—○			
ON	○—○	○—○	○—○	○—○	○—○	
START	○—○	○—○		○—○		○—○

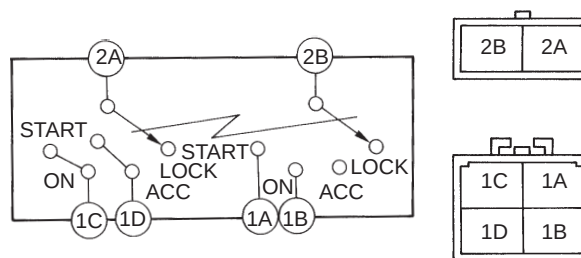

- If not as specified, replace the ignition switch.

KEY REMINDER SWITCH REMOVAL/INSTALLATION

- Disconnect the negative battery cable.
- Remove the column cover.
- Disconnect the key reminder switch connector.
- Remove the key reminder switch.

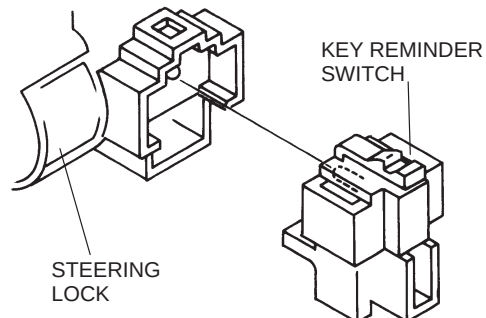

- Install in the reverse order of removal.



POWER SYSTEM

KEY REMINDER SWITCH INSPECTION

1. Remove the column cover.
2. Disconnect the key reminder switch connector.
3. Inspect for continuity between the key reminder switch terminals using an ohmmeter.


○—○ : Continuity

Key position	Terminal	
	A	B
Inserted	○	○
Removed		

 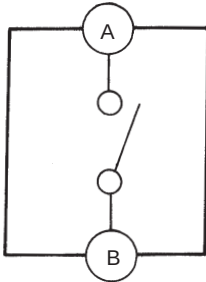

Socket Removal Note

1. Pry up the stopper with a tape-wrapped screwdriver.
2. Pull the socket by prying up the stopper.

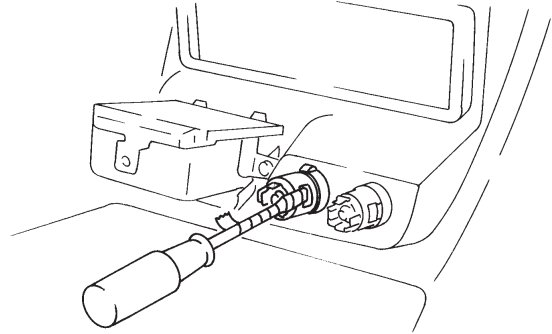


CIGARETTE LIGHTER INSPECTION

- Verify that the cigarette lighter plug will move normally **within 10—20 seconds**, after pressing the plug into the socket. If the plug does not move, replace the cigarette lighter.

4. If not as specified, replace the key reminder switch.

CIGARETTE LIGHTER REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the center panel.
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

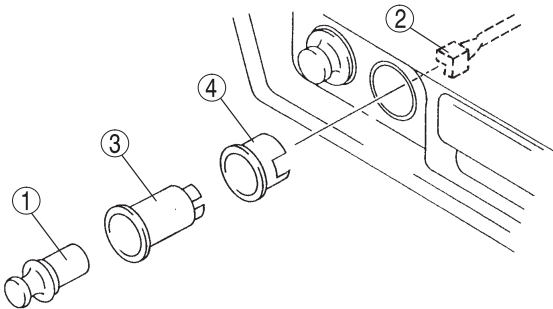


1	Cigarette lighter plug
2	Connector
3	Socket + Removal Note
4	Ring


POWER SYSTEM

RELAY LOCATION

L.H.D. MODEL

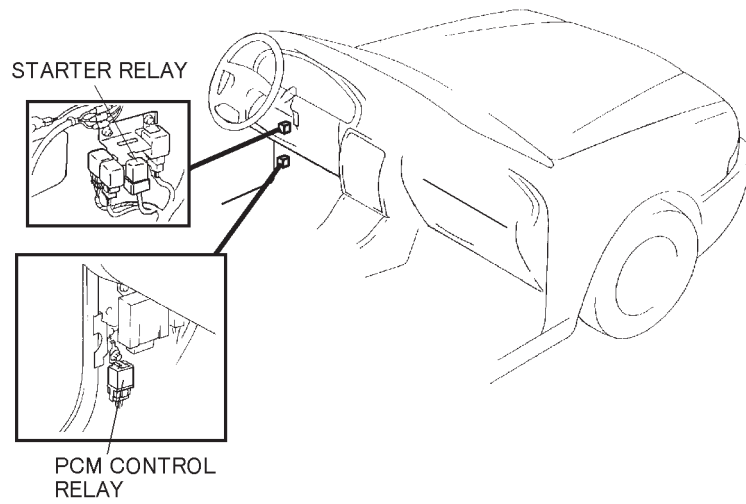

R.H.D. MODEL

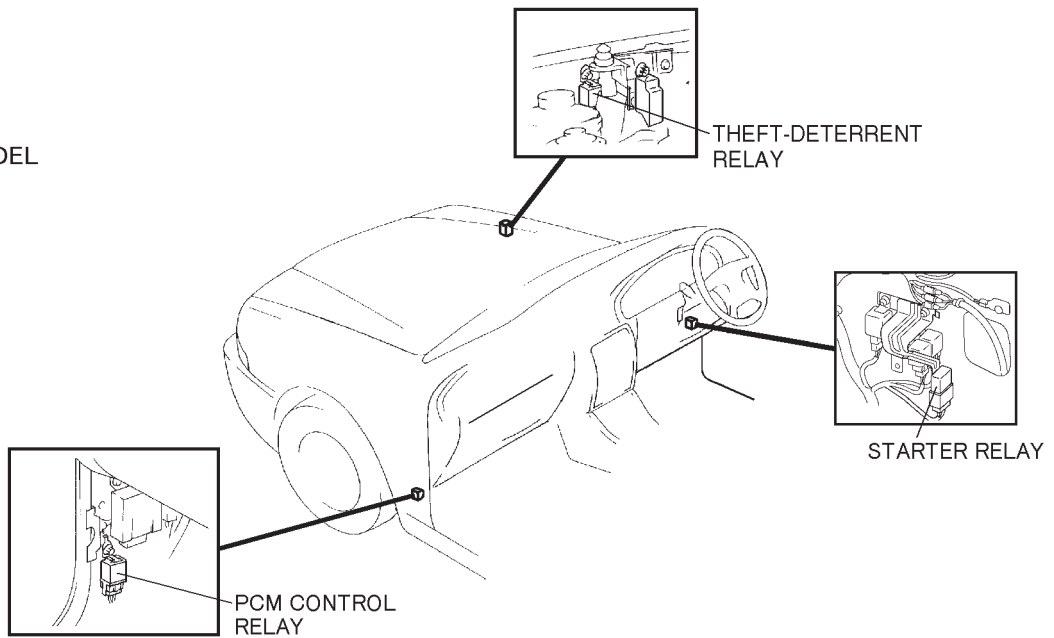

ZCF8110W101

POWER SYSTEM

RELAY INSPECTION

Relay Type

Terminal type		Parts name
Four-terminal	Type A	Starter relay
	Type B	PCM control relay

Note

- The inspection of theft-deterrent relay has not been changed.

- If not as specified, replace the relay.

○—○ : Continuity


Step	Terminal			
	A	B	C	D
1	○—○	○—○		
2	B+	GND	○—○	○—○

Y5A8110W151

Four-terminal

Type A

- Remove the relay.
- Inspect for continuity between the relay terminals using an ohmmeter.

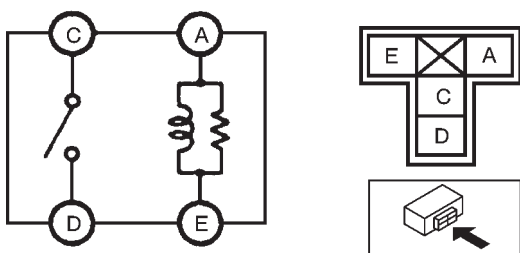

ZCF8110W102

- If not as specified, replace the relay.


○—○ : Continuity

Step	Terminal			
	A	E	C	D
1	○—○	○—○		
2	B+	GND	○—○	○—○

Z5U914WAK

Type B

- Remove the relay.
- Inspect for continuity between the relay terminals using an ohmmeter.

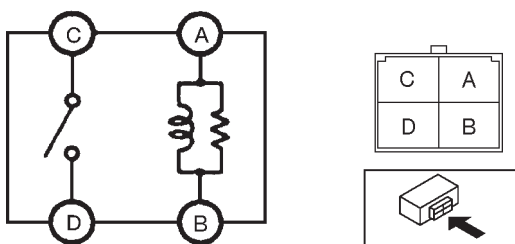

ZCF8110W103