


WARNING AND INDICATOR SYSTEM, AUDIO

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

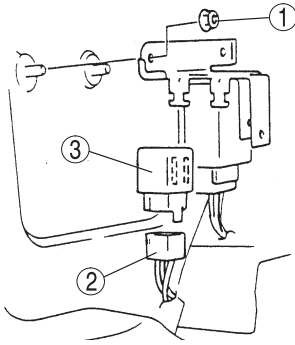



1	Nut
2	Horn relay connector
3	Horn relay

HORN RELAY INSPECTION

1. Remove the horn relay. (Refer to HORN RELAY REMOVAL/INSTALLATION.)
2. Inspect for continuity between the horn relay terminals using an ohmmeter.

○—○ : Continuity B+: Battery positive voltage


Step	Terminal			
	A	B	C	D
1	○—○	○—○		
2	B+	GND	○—○	○—○

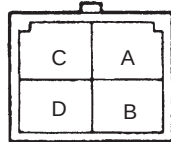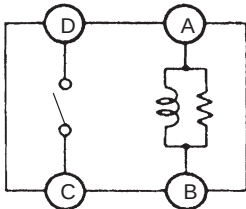

3. If not as specified, replace the horn relay.

CLOCK REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the meter hood. (Refer to section S, DASHBOARD AND CONSOLE, METER HOOD REMOVAL/INSTALLATION.)
3. Remove the screws and remove the clock.

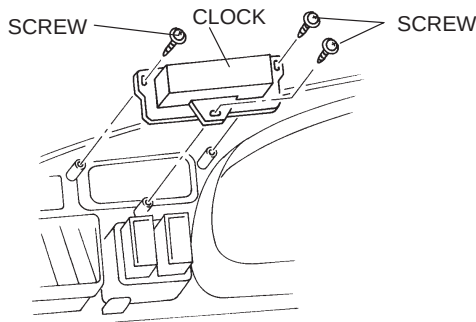


4. Install in the reverse order of removal.

AUDIO

AUDIO UNIT REMOVAL

1. Disconnect the negative battery cable.
2. With the beveled parts of the **SST** (Removing tool) facing inward, insert them into the unit.
3. Pull the **SST** (Removing tool) outward and rearward to slide out the unit.

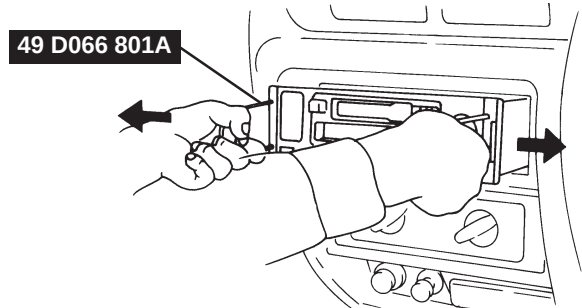

4. Disconnect the connectors and antenna jack.

AUDIO UNIT INSTALLATION

Caution

- If the harness or the antenna feeder is caught between the unit and dashboard, it may become the cause of trouble or malfunctions. Make certain that the wiring harness and antenna feeder are not caught between the unit and dashboard.

1. Connect the connectors and antenna jack.
2. Insert the unit until each clip clicks.
3. Connect the negative battery cable.

FRONT SPEAKER REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the front door trim. (Refer to section S, TRIM, FRONT DOOR TRIM REMOVAL/INSTALLATION.)

Caution

- When removing or installing a speaker, touching the radio cone paper could cause poor sound quality. When removing or installing a speaker, hold the speaker's bracket and handle with care.

3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

