


CONTROL SYSTEM

RESISTOR INSPECTION

1. Remove the glove compartment.
2. Disconnect the resistor connector.
3. Verify that the resistance between the terminals of the resistor is as shown in the table.


Terminal	Resistance (Ω)
1A-1B (2A)	R1: 0.43—0.47
1A-1C	R2: 1.04—1.16
1C-1D	R3: 1.47—1.63

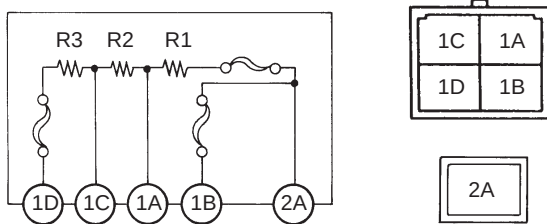

4. If not as specified, replace the resistor.

CLIMATE CONTROL UNIT REMOVAL


1. Disconnect the negative battery cable.
2. Remove the glove compartment.
3. Disconnect the air intake wire from the blower unit.
4. Disconnect the air mix wire and airflow mode wire from the heater unit.
5. With the beveled parts of the **SST** facing inward, insert them into the climate control unit.
6. Pull the **SST** outward and rearward to slide out the climate control unit.

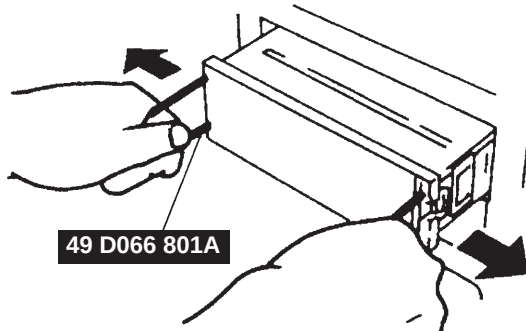

7. Disconnect the climate control unit connectors.

CLIMATE CONTROL UNIT INSTALLATION

1. Connect the climate control unit connectors.
2. Insert the climate control unit until each clip clicks.

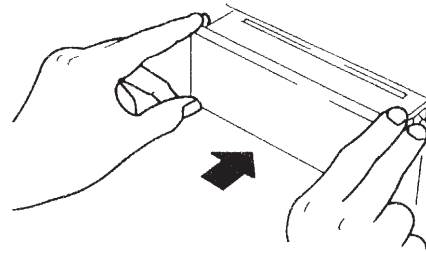


3. Adjust the wire of the climate control unit. (Refer to CLIMATE CONTROL UNIT WIRE ADJUSTMENT.)
4. Install the glove compartment.
5. Connect the negative battery cable.

Climate Control Unit Removal/Installation Note With heater core

- Set the temperature control dial at MAX COLD, the airflow mode control dial at DEF.


CLIMATE CONTROL UNIT DISASSEMBLY/ASSEMBLY

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

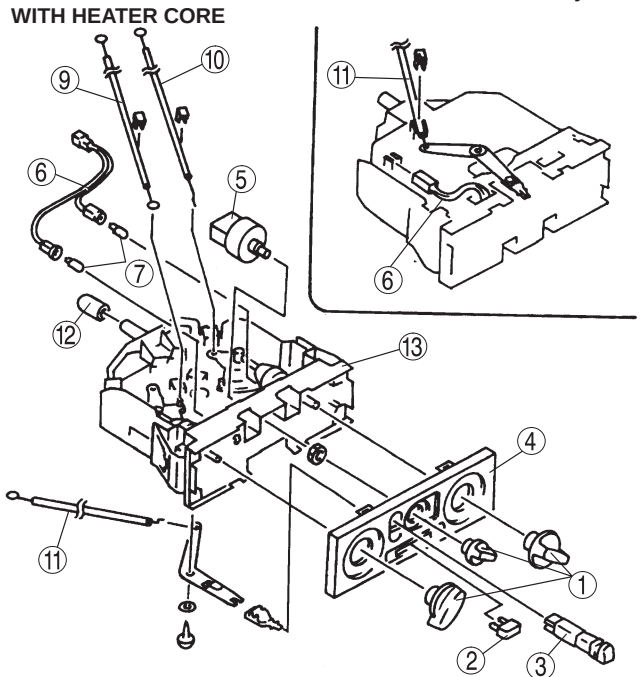

CONTROL SYSTEM


WITHOUT HEATER CORE

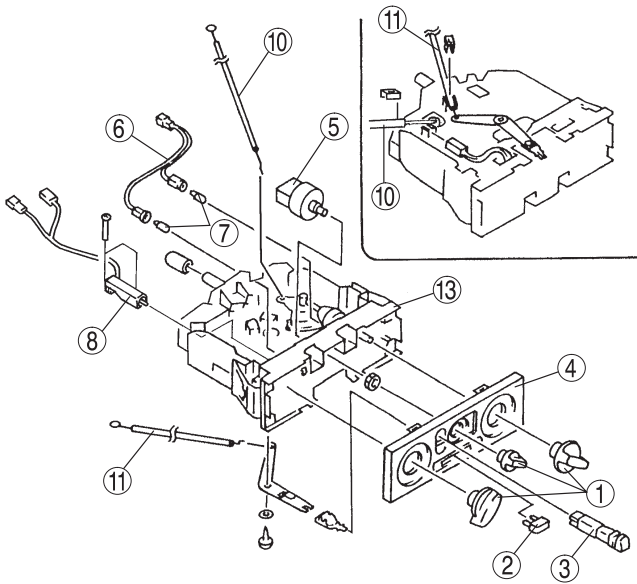

1	Dial
2	Knob + Removal Note
3	A/C switch
4	Panel
5	Fan switch
6	Climate control unit harness
7	Illumination bulb
8	A/C amplifier
9	Air mix wire
10	Airflow mode wire
11	Air intake wire
11	Cap
13	Body

Knob Removal Note

- Use a wire to push the knob from the reverse side and remove it as shown in the figure.

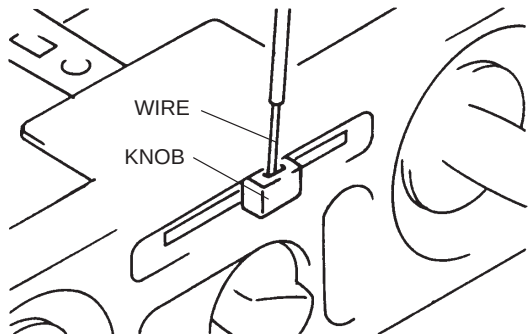


CLIMATE CONTROL UNIT WIRE ADJUSTMENT


Air Intake Wire

- Set the air intake lever at FRESH.
- Set the air intake link to FRESH in the direction of the arrow and insert a screwdriver into the set hole.

L.H.D.

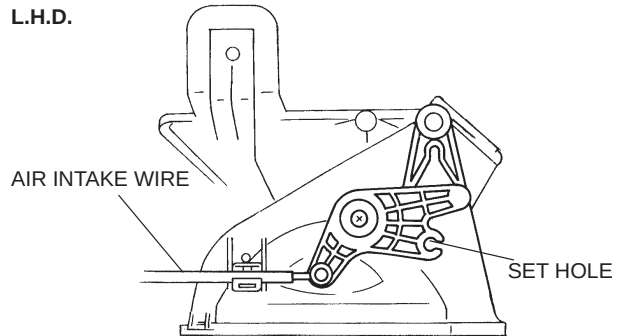


R.H.D.

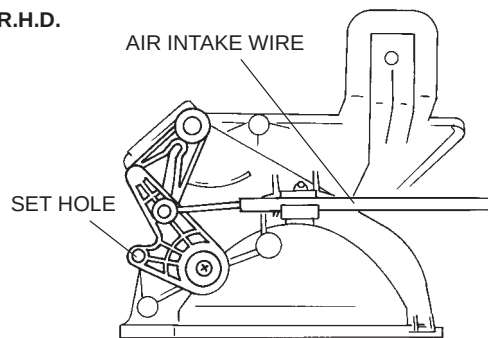

- Connect the air intake wire to the air intake link.
- Clamp the air intake wire to wire clamp.
- Verify that the air intake lever moves its full stroke.

Air Mix Wire (With heater core only)

- Set the temperature control dial at MAX COLD.
- Set the air mix link to MAX COLD in the direction of the arrow and insert a screwdriver into the set hole.

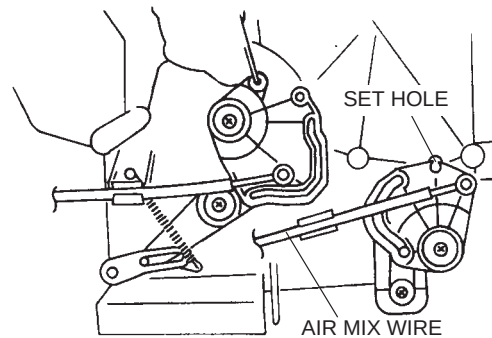

- Connect the air mix wire to the air mix link.
- Clamp the air mix wire to wire clamp.
- Verify that the temperature control dial moves its full stroke.