

HEATER AND AIR CONDITIONER SYSTEMS

SERVICE WARNINGS	U- 2	STRUCTURAL VIEW	U-19
HANDLING REFRIGERANT	U- 2	MAGNETIC CLUTCH	
STORING REFRIGERANT	U- 2	DISASSEMBLY/ASSEMBLY	U-20
SERVICE CAUTIONS	U- 2	MAGNETIC CLUTCH CLEARANCE	
HANDLING COMPRESSOR OIL	U- 2	ADJUSTMENT	U-20
REFRIGERANT SYSTEM SERVICE		MAGNETIC CLUTCH INSPECTION	U-21
PROCEDURES	U- 3	A/C RELAY No.1	
MANIFOLD GAUGE SET INSTALLATION	U- 3	REMOVAL/INSTALLATION	U-21
RECOVERY	U- 3	A/C RELAY No.1 INSPECTION	U-22
CHARGING	U- 3	A/C RELAY No.2	
REFILLING	U- 5	REMOVAL/INSTALLATION	U-22
REFRIGERANT CHARGE CHECK	U- 6	A/C RELAY No.2 INSPECTION	U-22
REFRIGERANT PRESSURE CHECK	U- 7	REFRIGERANT PRESSURE SWITCH	
PERFORMANCE TEST	U- 7	REMOVAL/INSTALLATION	U-22
BASIC SYSTEM	U- 8	REFRIGERANT PRESSURE SWITCH	
STRUCTURAL VIEW	U- 8	INSPECTION	U-23
BLOWER UNIT REMOVAL/INSTALLATION ..	U-10	THERMOSWITCH INSPECTION	U-23
BLOWER UNIT DISASSEMBLY/ASSEMBLY ..	U-10	BLOWER MOTOR	
COOLING UNIT REMOVAL/INSTALLATION ..	U-10	REMOVAL/INSTALLATION	U-24
COOLING UNIT DISASSEMBLY/ASSEMBLY ..	U-12	BLOWER MOTOR INSPECTION	U-24
EVAPORATOR INSPECTION	U-13	RESISTOR REMOVAL/INSTALLATION	U-24
HEATER UNIT REMOVAL/INSTALLATION ...	U-13	RESISTOR INSPECTION	U-25
HEATER UNIT DISASSEMBLY/ASSEMBLY ..	U-14	CLIMATE CONTROL UNIT REMOVAL	U-25
HEATER CORE INSPECTION	U-15	CLIMATE CONTROL UNIT INSTALLATION ..	U-25
A/C COMPRESSOR		CLIMATE CONTROL UNIT	
REMOVAL/INSTALLATION	U-15	DISASSEMBLY/ASSEMBLY	U-25
CONDENSER REMOVAL/INSTALLATION ...	U-16	CLIMATE CONTROL UNIT WIRE	
CONDENSER INSPECTION	U-16	ADJUSTMENT	U-26
RECEIVER/DRIER		CLIMATE CONTROL UNIT INSPECTION	U-27
REMOVAL/INSTALLATION	U-16	TROUBLESHOOTING	U-28
REFRIGERANT LINES		FOREWORD	U-28
REMOVAL/INSTALLATION	U-17	TROUBLESHOOTING INDEX	U-28
CONTROL SYSTEM	U-19	SYMPTOM TROUBLESHOOTING	U-28