

OTHER SYSTEM

GENERAL INFORMATION	40-3	ON-VEHICLE SERVICE	40-5
Description	40-3	Cigarette Lighter Assembly	40-5
Circuit Diagram	40-4	Removal	40-5
		Installation	40-6

GENERAL INFORMATION

Description

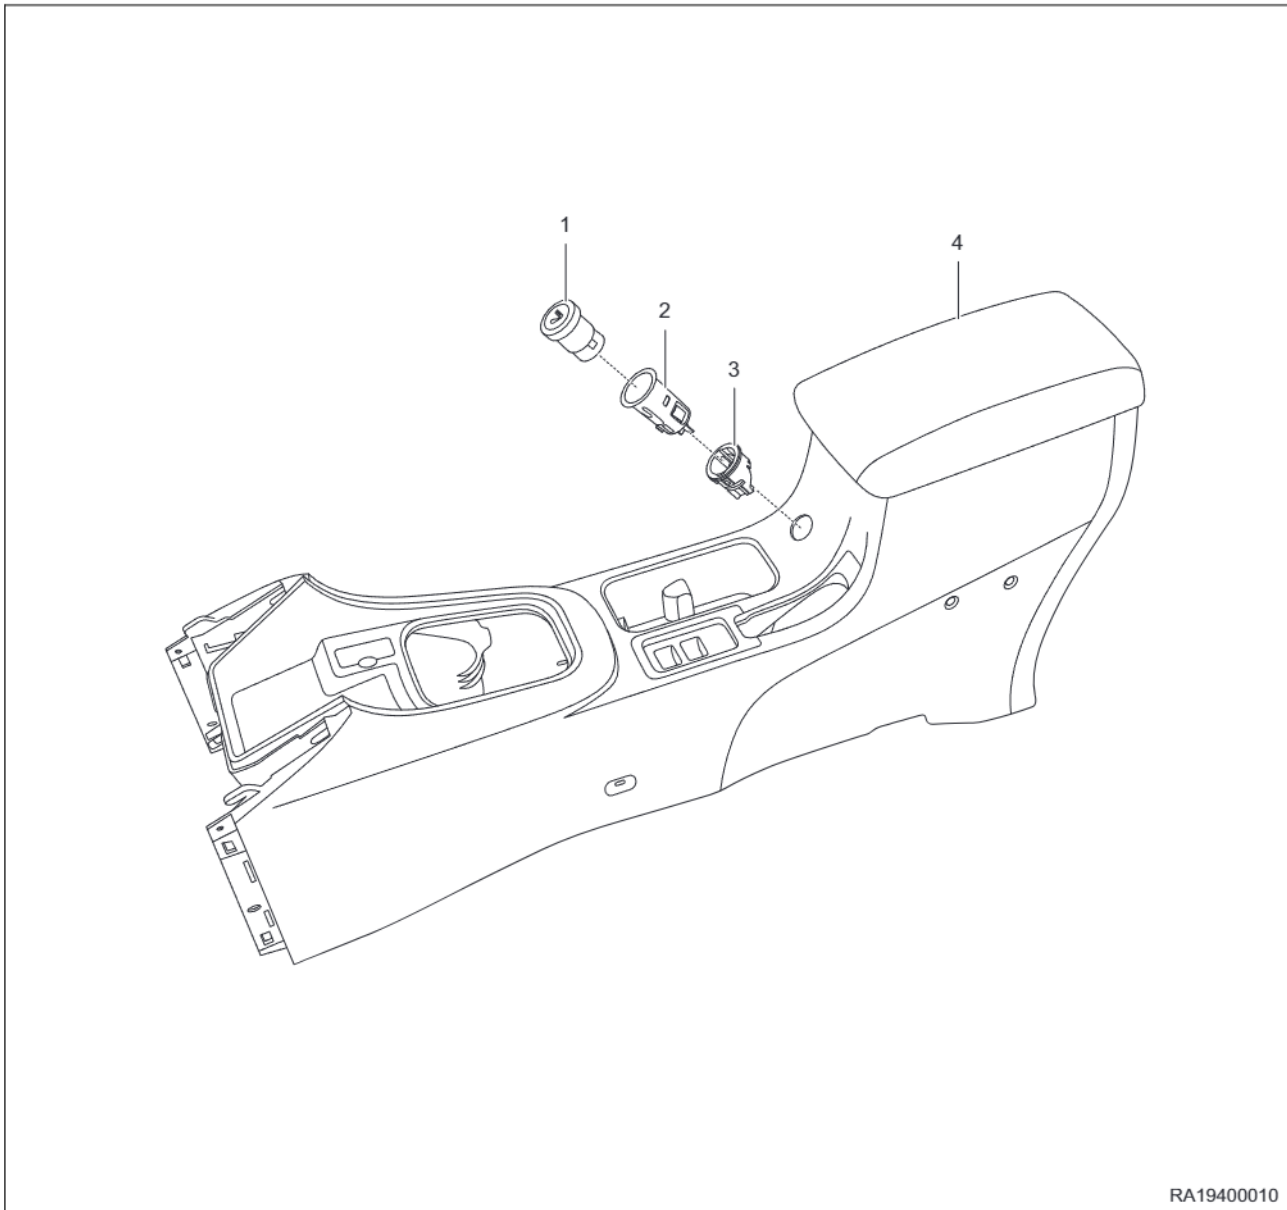

40

1 - Cigarette Lighter End	2 - Cigarette Lighter Fixing Bush
3 - Cigarette Lighter Housing	4 - Auxiliary Fascia Console Assembly



The cigarette lighter assembly is located on the auxiliary fascia console assembly.

CAUTION

- The rated voltage of cigarette lighter socket is 12 V. DO NOT use electrical equipment with higher rated voltage.

Circuit Diagram

System Circuit Diagram for Cigarette Lighter

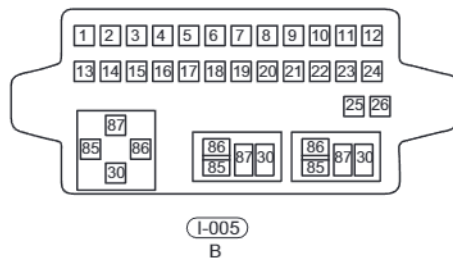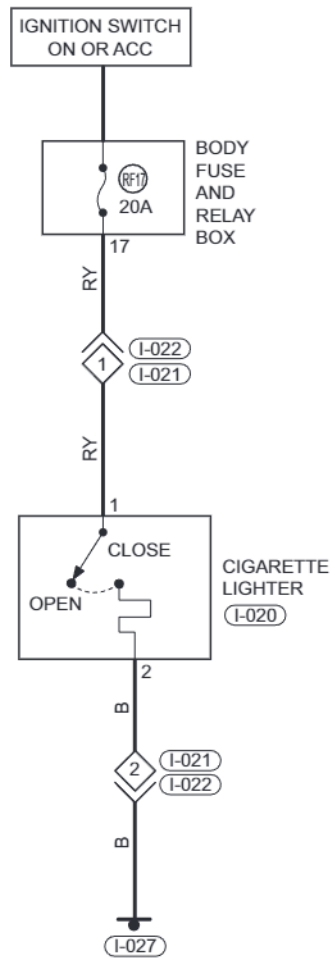

EA19400010

ON-VEHICLE SERVICE


Cigarette Lighter Assembly

Removal

CAUTION


- Make sure to wear safety equipment to prevent accidents when removing the cigarette lighter assembly.
- Appropriate force should be applied when removing the rear trunk trim assembly, and avoid operating roughly.
- DO NOT scratch the auxiliary fascia console assembly when removing the cigarette lighter assembly.

1. Turn off all the electrical equipment and ignition switch.
2. Disconnect the negative battery cable.
3. Remove the cigarette lighter assembly.
 - a. Remove the cigarette lighter end (1).

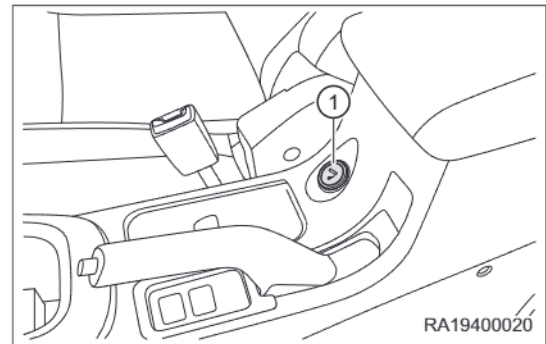


40


- b. Press the clips on the cigarette lighter housing in the directions of arrows as shown in the illustration, and using a screwdriver wrapped with protective tape, release the cigarette lighter fixing bush.

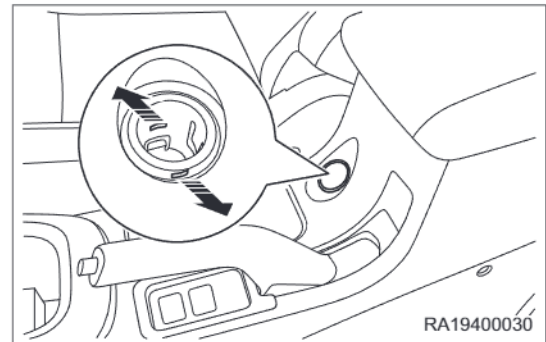

- c. Disconnect the cigarette lighter connector (arrow) and remove the cigarette lighter housing.

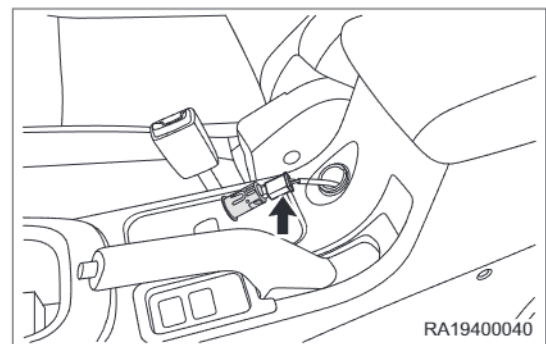

- d. Using a screwdriver wrapped with protective tape, pry the clips on the cigarette lighter housing and remove the cigarette lighter housing.

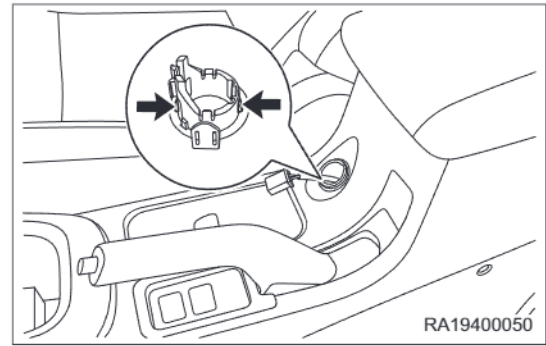

Installation

Installation is in the reverse order of removal.

CAUTION

- Check if the cigarette lighter operates normally after installing the cigarette lighter assembly.

