
GROUP 70

COMPONENT LOCATIONS

 
CONTENTS

RELAY.....	70-2
CONTROL UNIT.....	70-3
SENSOR.....	70-7
SOLENOID AND SOLENOID VALVE....	70-14
INSPECTION TERMINAL.....	70-17
FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR.....	70-17
GROUNDING CABLE.....	70-19
GROUNDING.....	70-20
OTHER DEVICES.....	70-23


RELAY

M17001000004USA0000010000




Name	Symbol	Name	Symbol
A/C compressor relay	A	Horn relay	A
A/T control relay	A	Injector relay	A
Blower relay	B	MFI relay	A
Condenser fan relay	A	Radiator fan relay	A
Daytime running light relay	A	Rear window defogger relay	B
Fan control relay	A	Selector lever assembly (incorporating shift lock control relay)	C
Fog light relay	A		
Headlight relay (high)	A	Starter relay	A
Headlight relay (low)	A	Theft-alarm horn relay	A
Heated seat relay	B	Throttle valve control servo relay	A

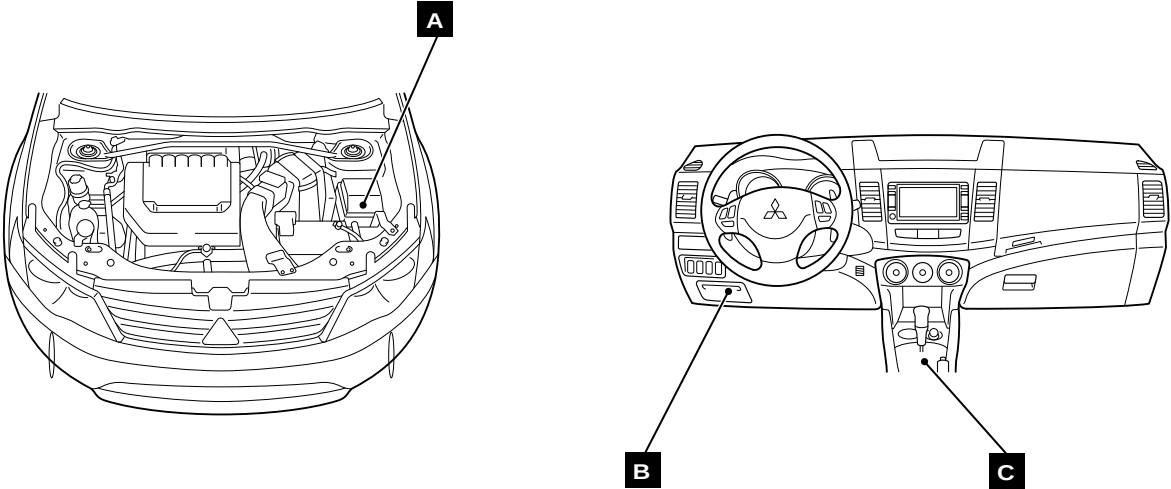

ZC6016430000

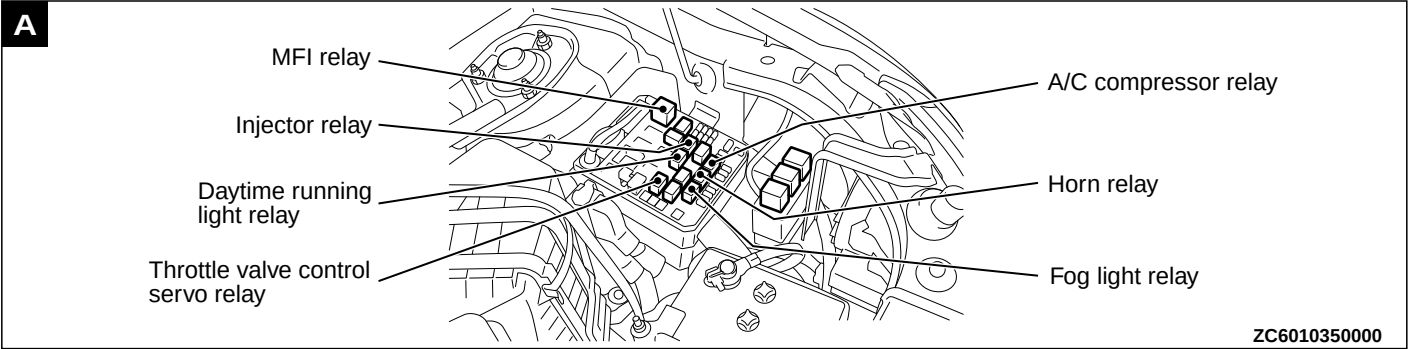 

ZC6010350000

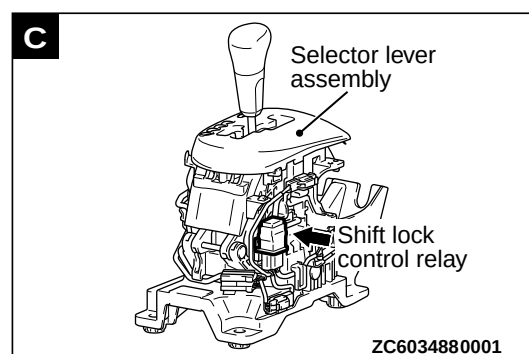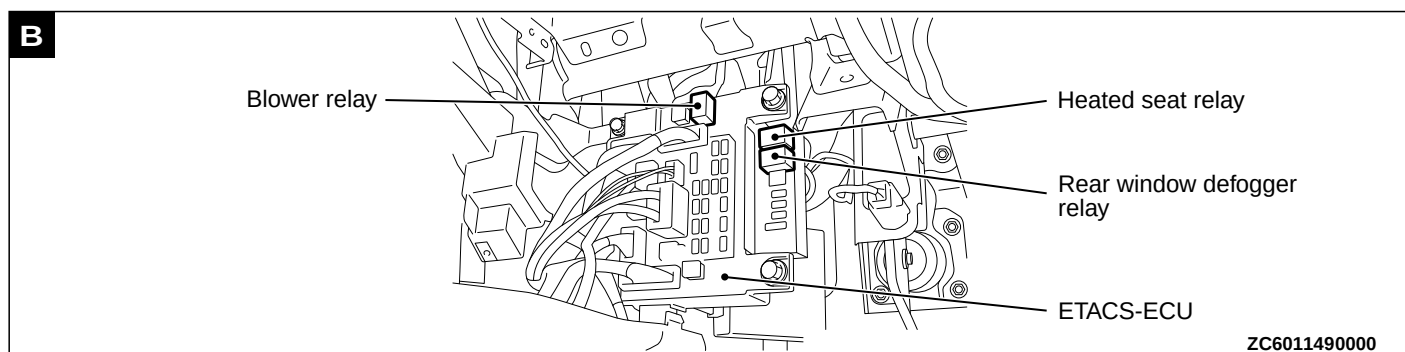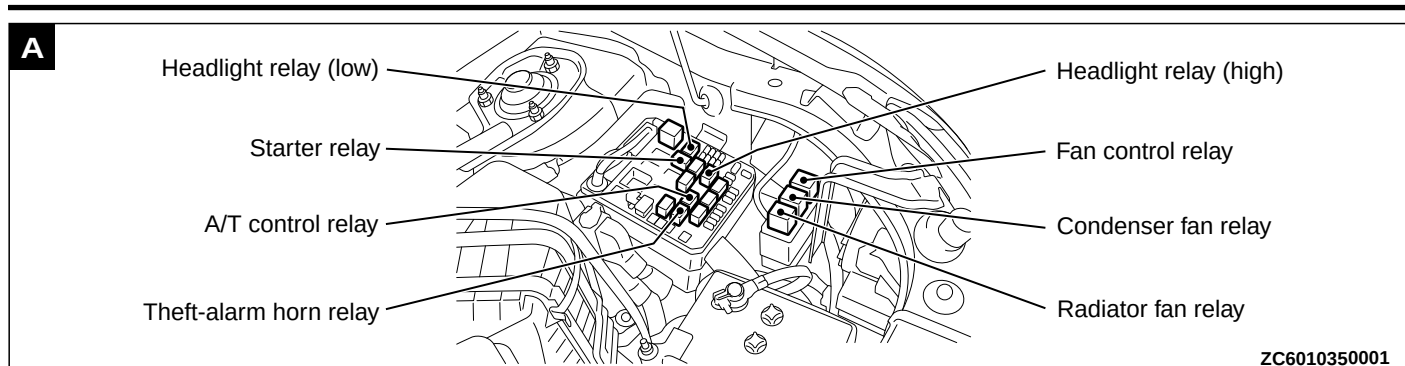   



CONTROL UNIT

M17001000007USA0000010000


Name	Symbol	Name	Symbol
A/C-ECU	M	Headlight automatic leveling-ECU	N
ABS-ECU	A	KOS-ECU	J
Audio visual navigation unit	F	Occupant classification-ECU	P
AWD-ECU	H	Power window main switch (incorporating CPU)	Q
CAN box unit	F	Receiver antenna module <vehicles with KOS>	I
Column switch (incorporating column-ECU)	D	SRS-ECU	K
Combination meter (incorporating CPU)	E	Sunroof assembly (incorporating sunroof-ECU)	O
Engine control module	B		
ETACS-ECU	G		
Hands free module	L	Transmission control module	H

COMPONENT LOCATIONS
CONTROL UNIT

Name	Symbol	Name	Symbol
Headlight assembly (incorporating discharge-ECU)	C	Wireless control module <vehicles without KOS>	I

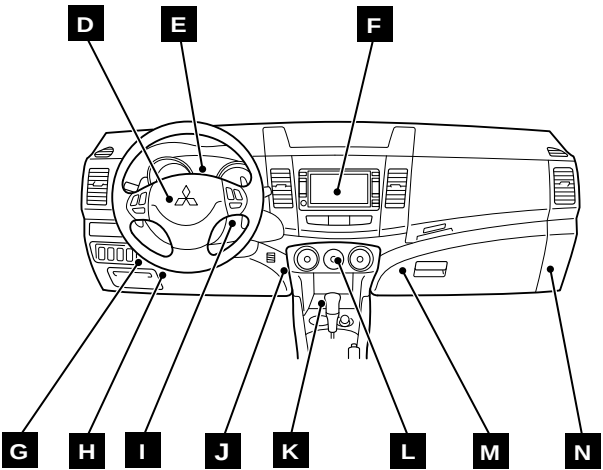 
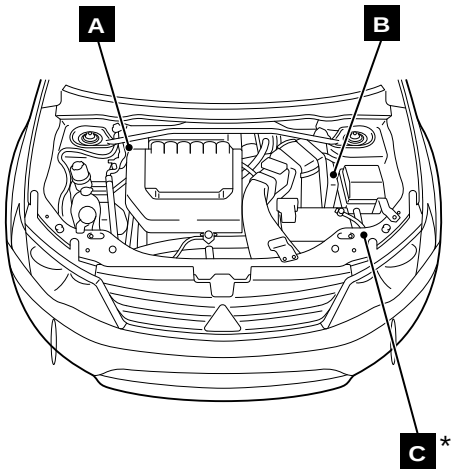 









ZC6016430002








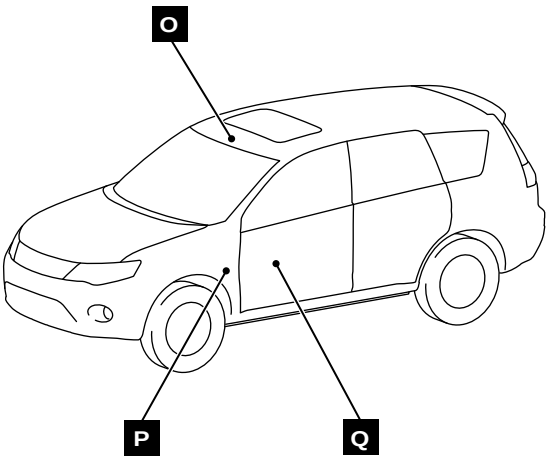 


ZC6033350000

                 *NOTE: The * symbols indicate equipment at both sides.*

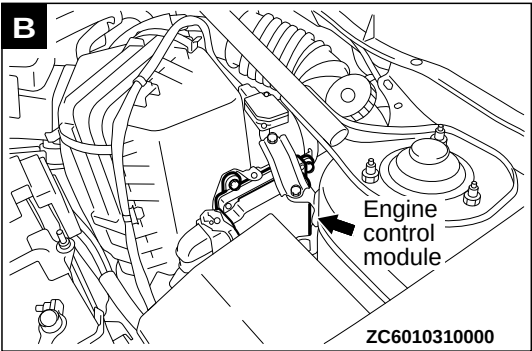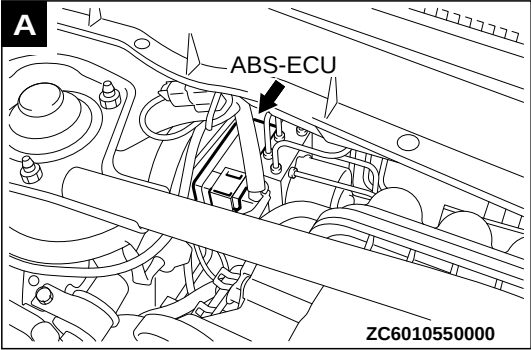

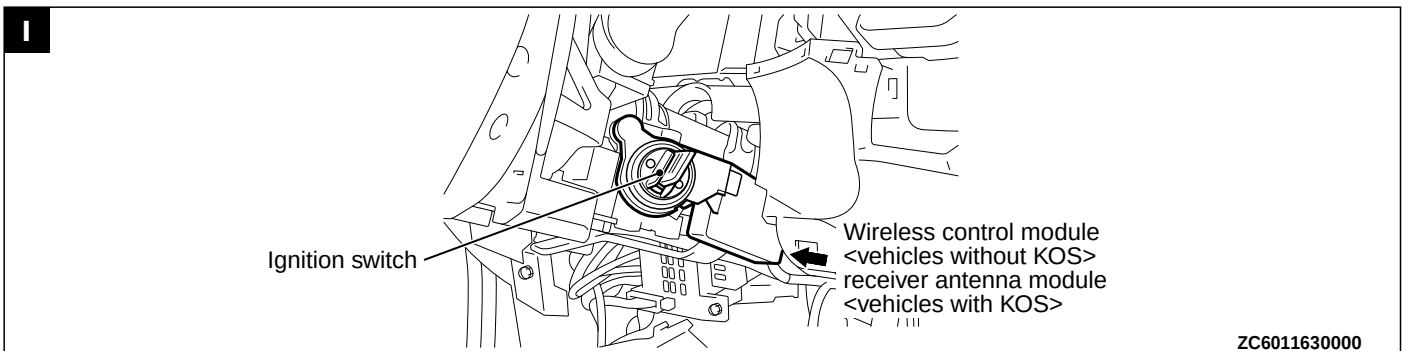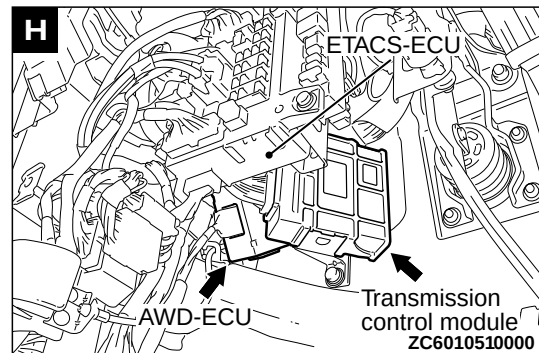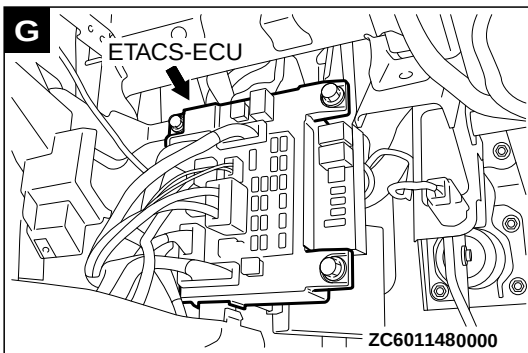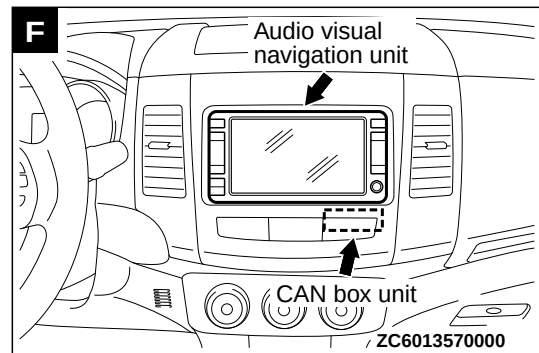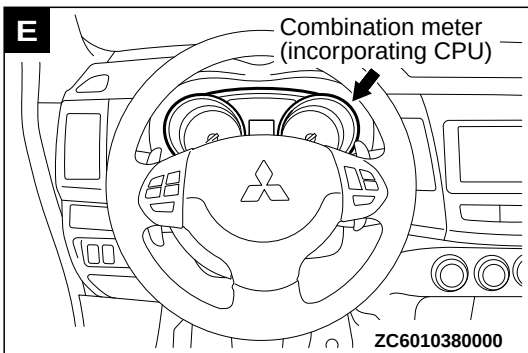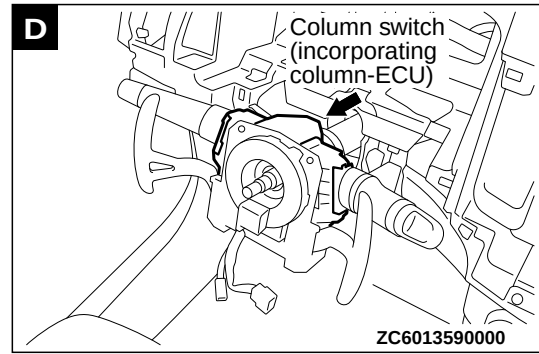
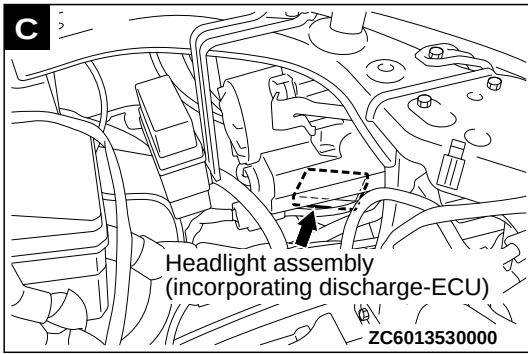


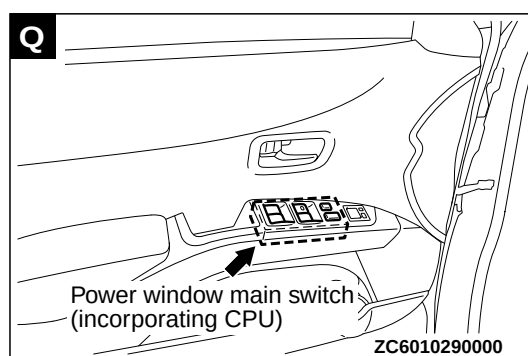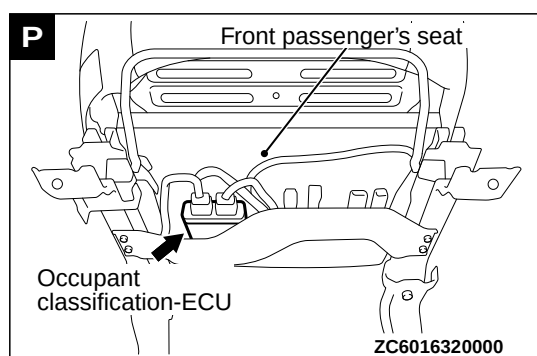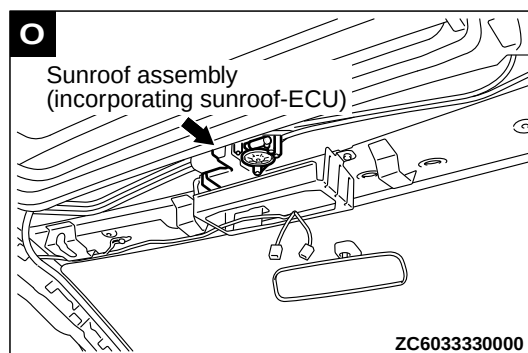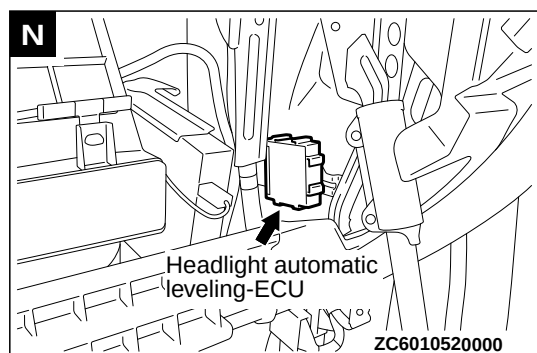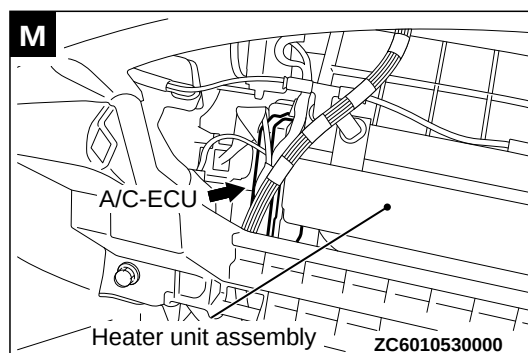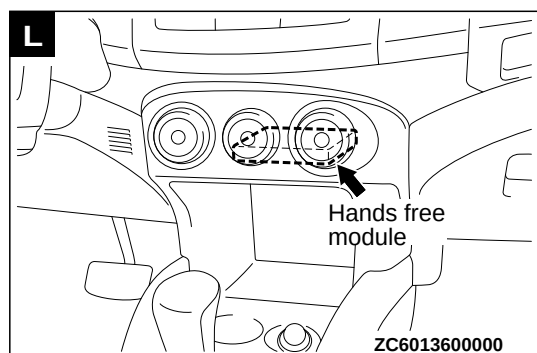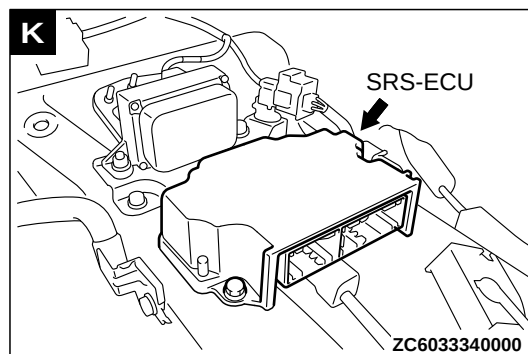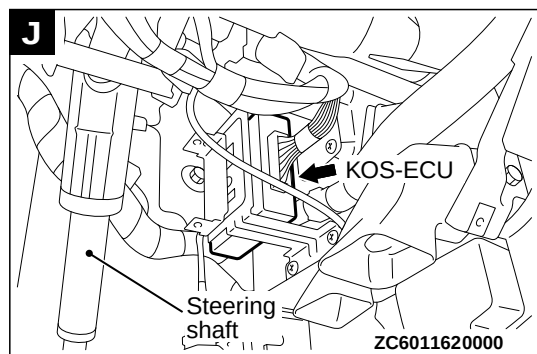



SENSOR

M17001000006USA0000010000





Name	Symbol	Name	Symbol
A/C pressure sensor	I	Knock sensor 2	C
Accelerator pedal position sensor	P	Left bank heated oxygen sensor (front)	J
Air thermo sensor	S	Left bank heated oxygen sensor (rear)	Z
Ambient temperature sensor	L	Manifold absolute pressure sensor	D
Camshaft position sensor	K	Mass airflow sensor	F
Center exhaust pipe heated oxygen sensor	W	Output shaft speed sensor	a
Crankshaft position sensor	A	Photo sensor	O
Engine coolant temperature sensor	E	Power steering pressure sensor	B
Front height sensor	X	Radiator sensor	H
Front impact sensor	M	Rear hight sensor	T
Front wheel speed sensor	b	Rear wheel speed sensor	g
Front paseenger's seat (incorporating weight sensor)	V	Right bank heated oxygen sensor (front)	Y
Fuel level sensor (sub)	U	Right bank heated oxygen sensor (rear)	Y
Fuel pump module (incorporating fuel level sensor (main) and fuel tank temperature sensor)	f	Seat slide sensor	c
		Side impact sensor (front)	e
Fuel tank differential pressure sensor	f	Side impact sensor (rear)	h
G and yaw rate sensor	R	Steering wheel sensor	N
Input shaft speed sensor	G	Throttle body assembly (incorporating throttle position sensor)	D
Interior temperature sensor	Q		
Knock sensor 1	C	Unlock sensor	d





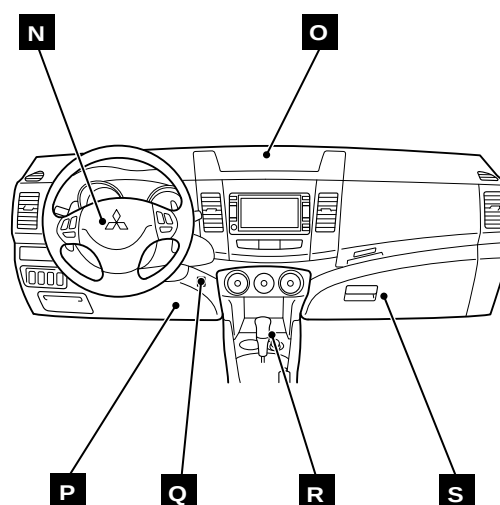 
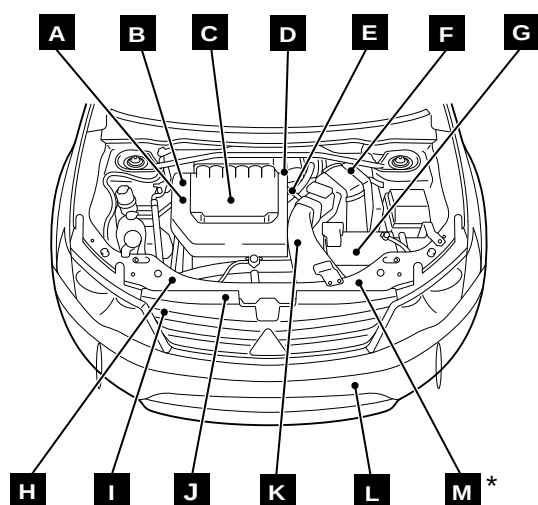 










ZC6016430004





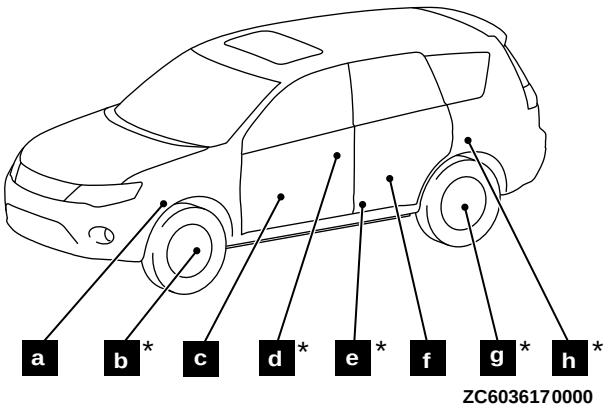 
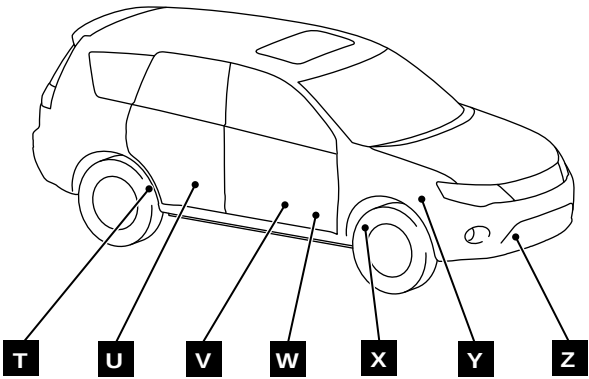 


                        *NOTE: The * symbols indicate equipment at both sides.*

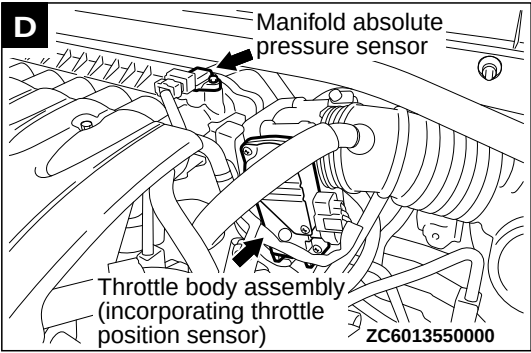
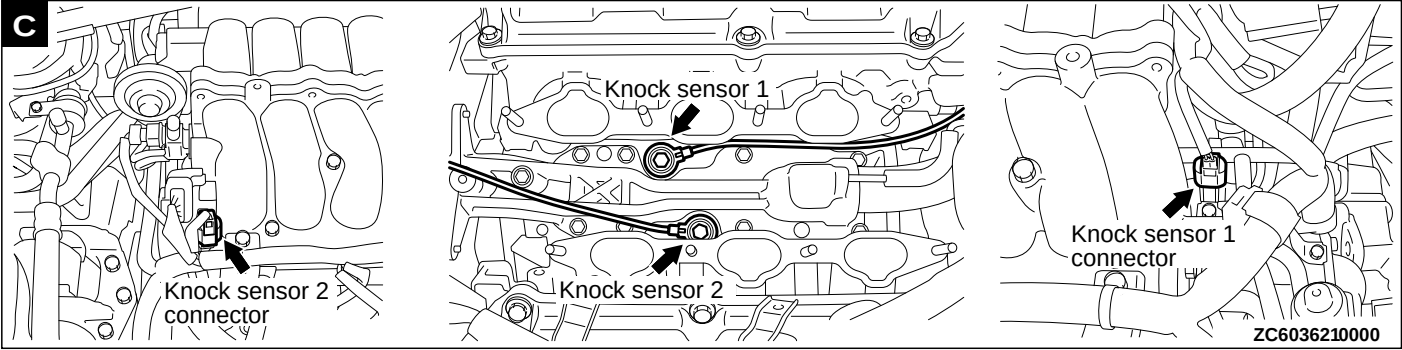
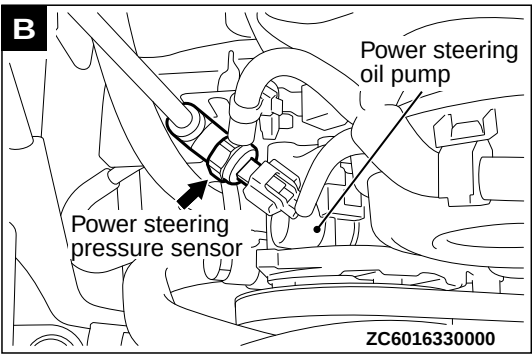
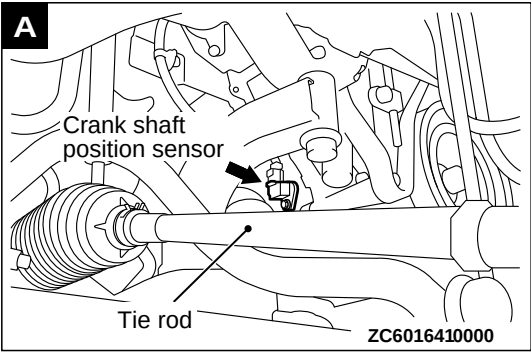


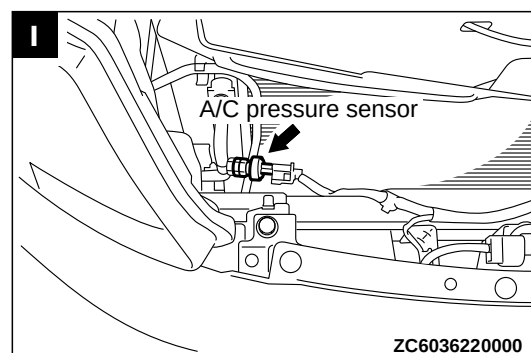
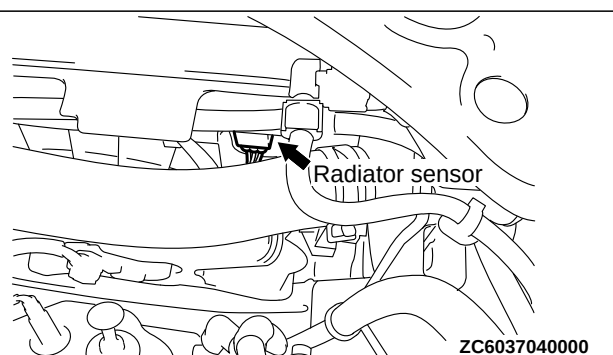
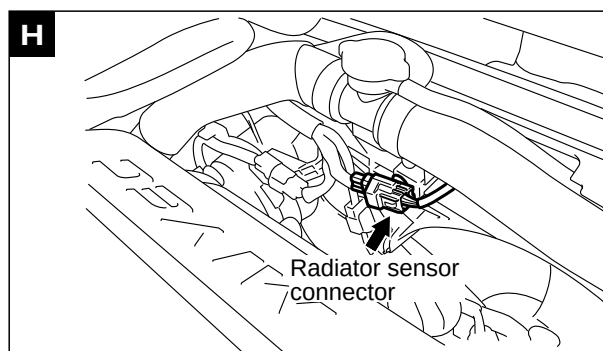
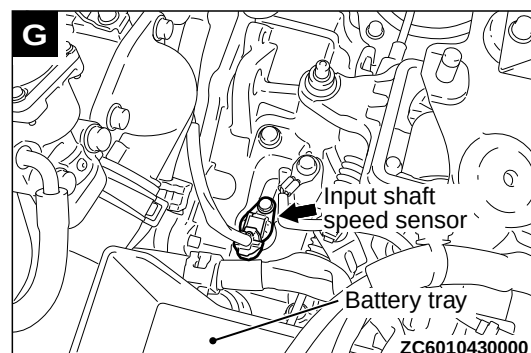
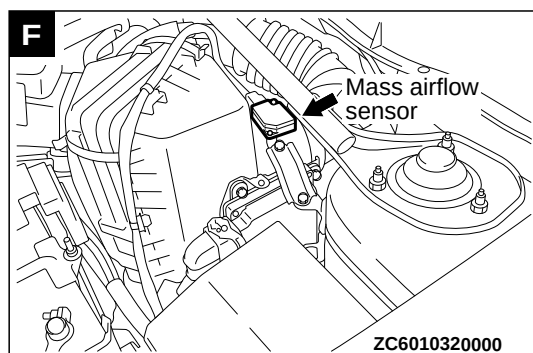
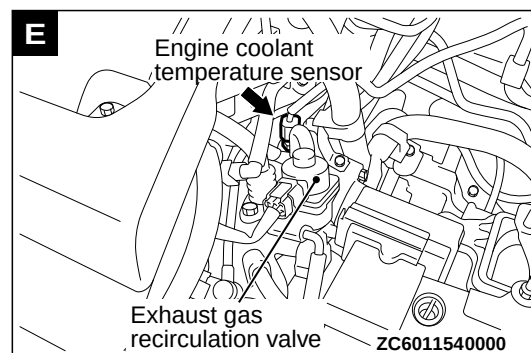


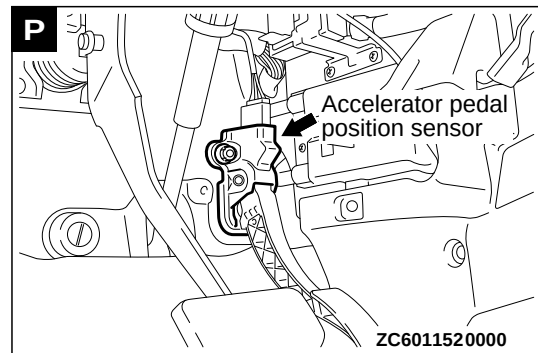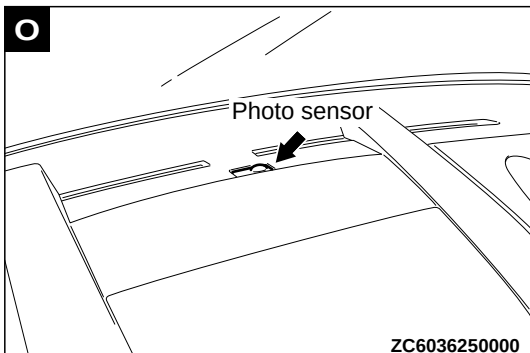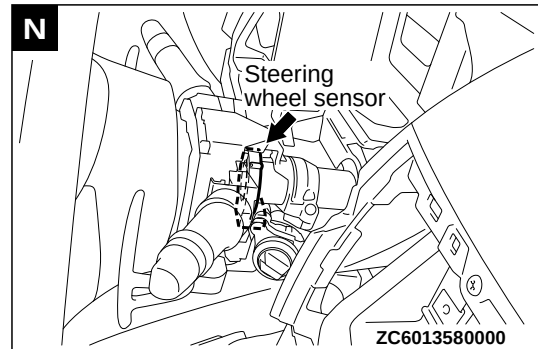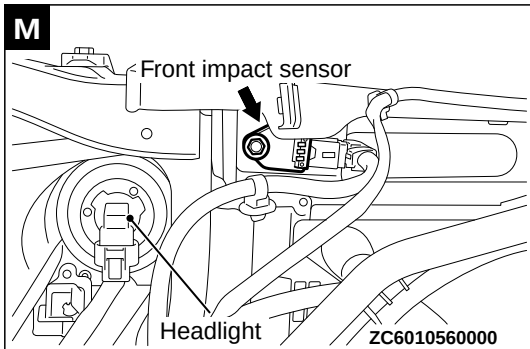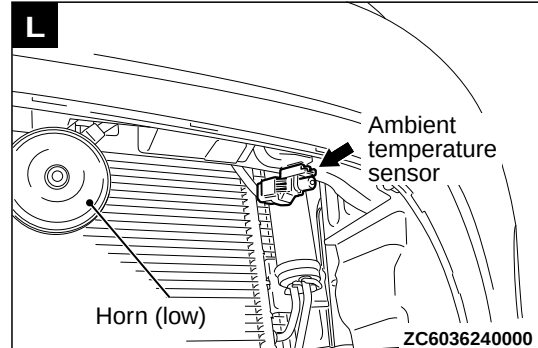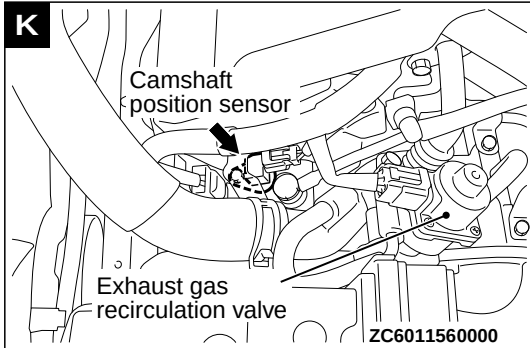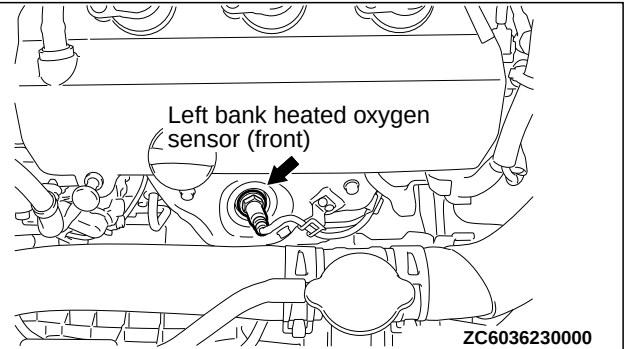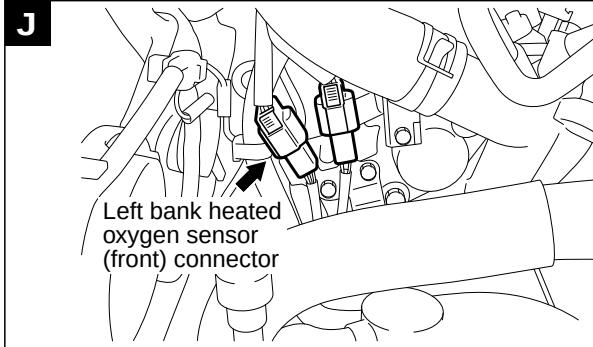

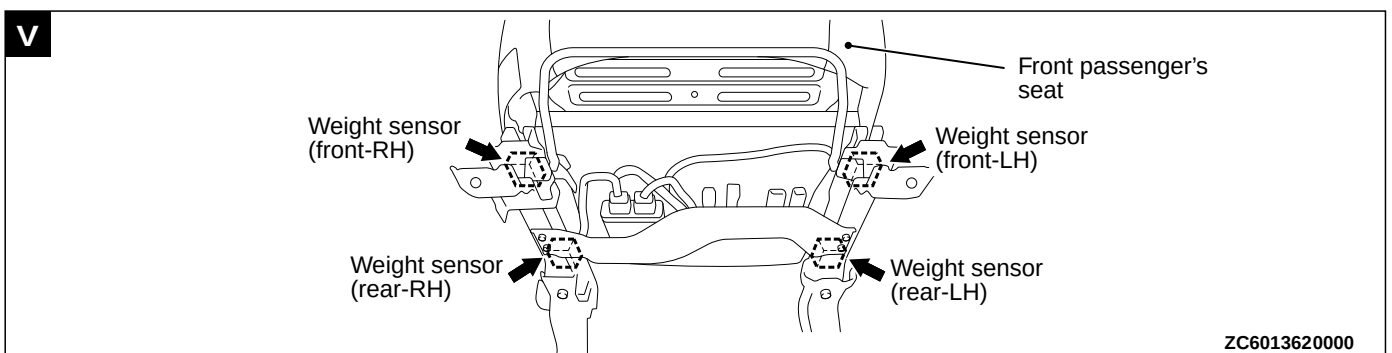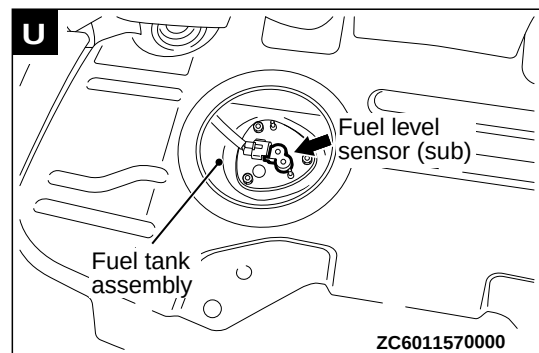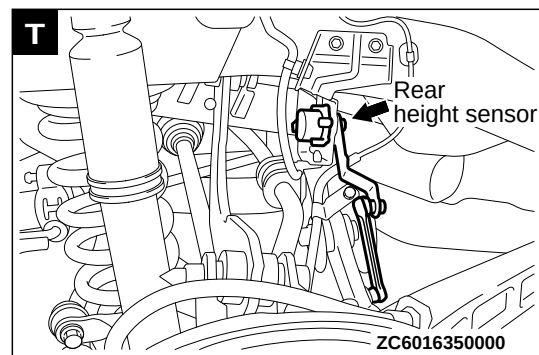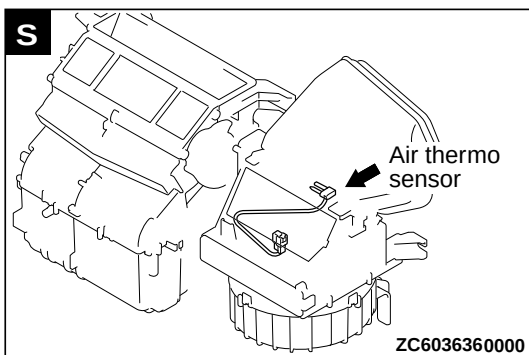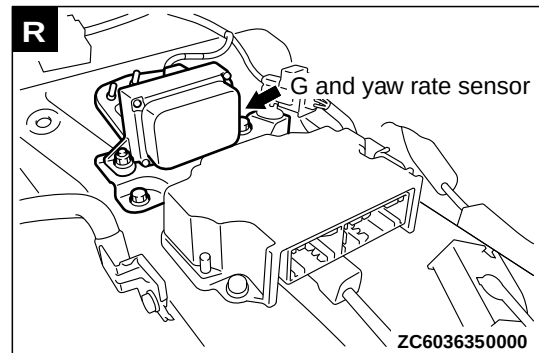
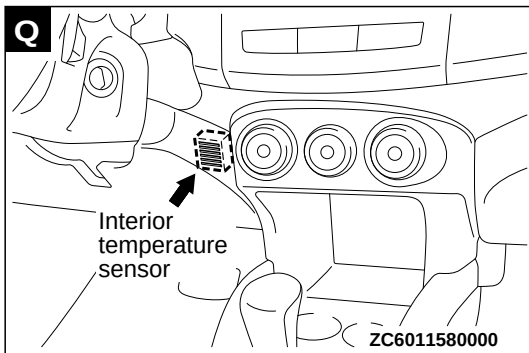


COMPONENT LOCATIONS
SENSOR

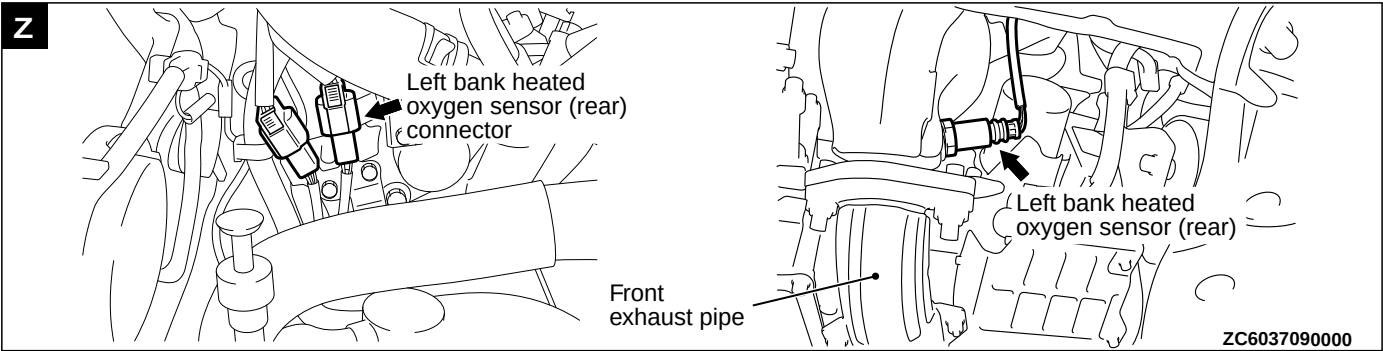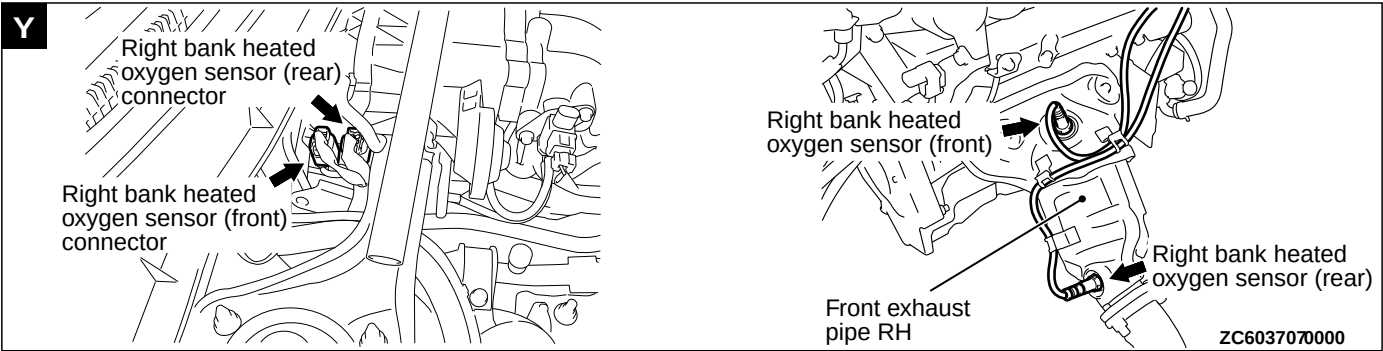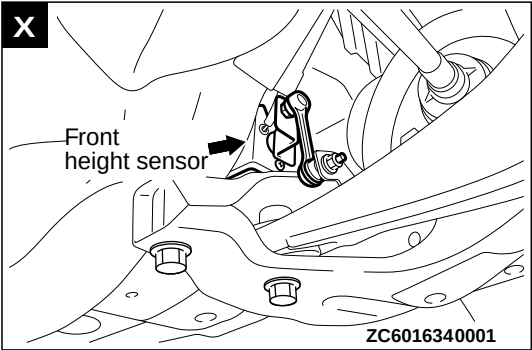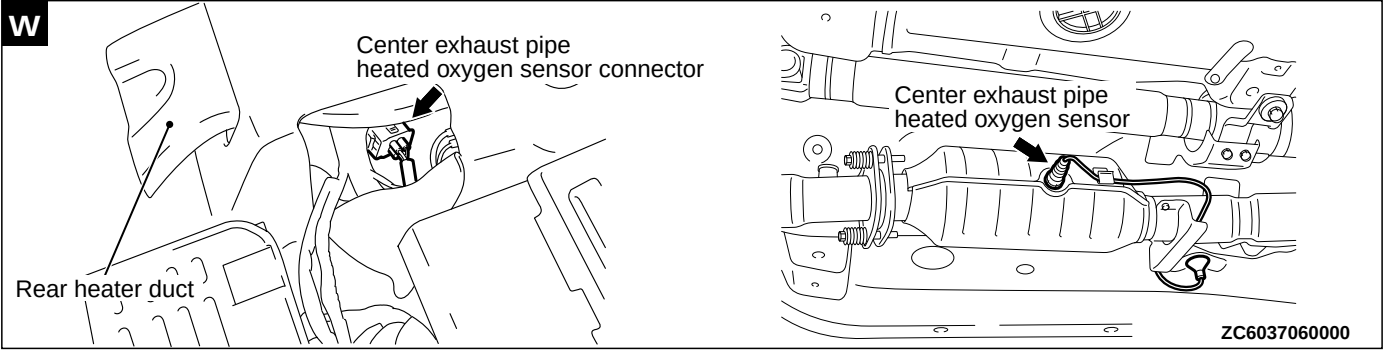    

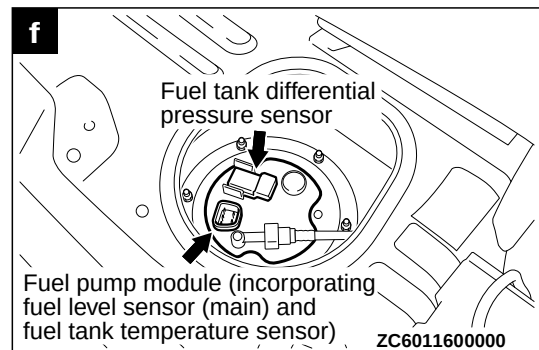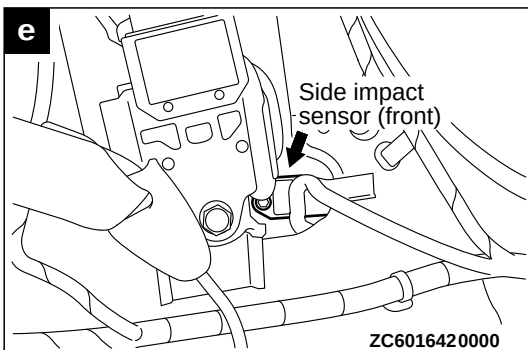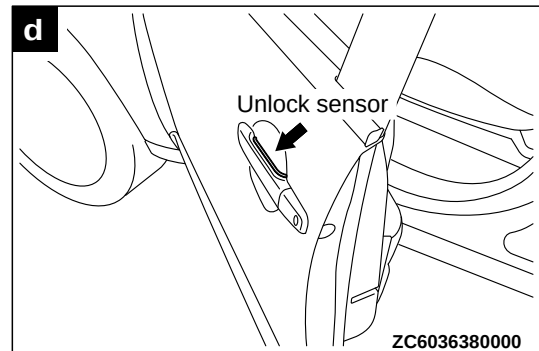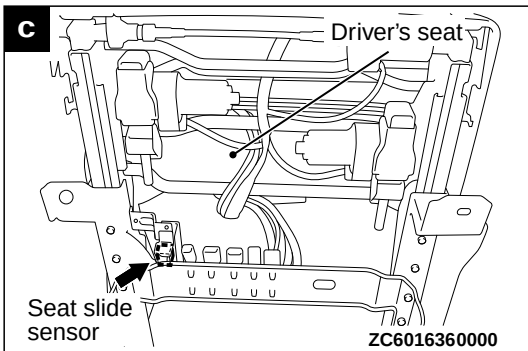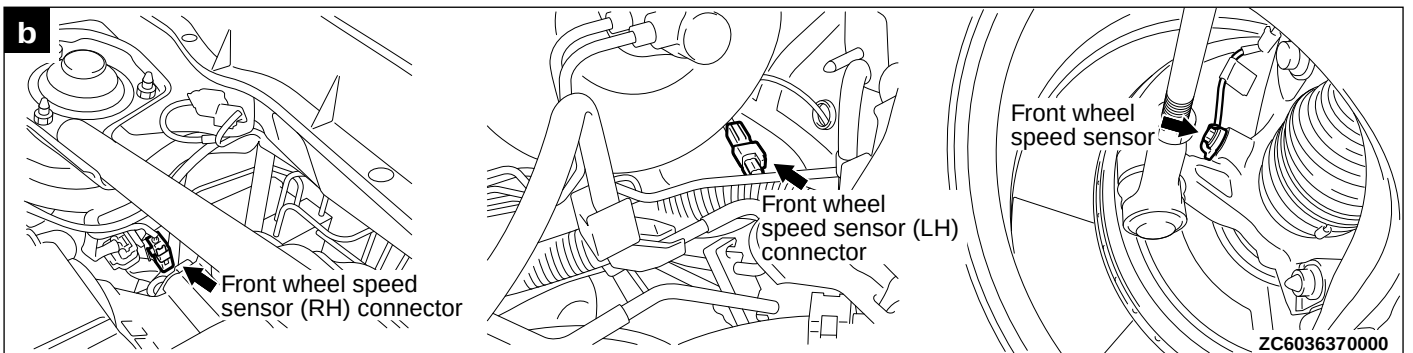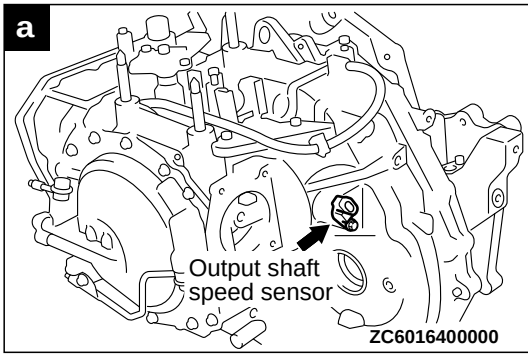      

 
 
COMPONENT LOCATIONS
SOLENOID AND SOLENOID VALVE

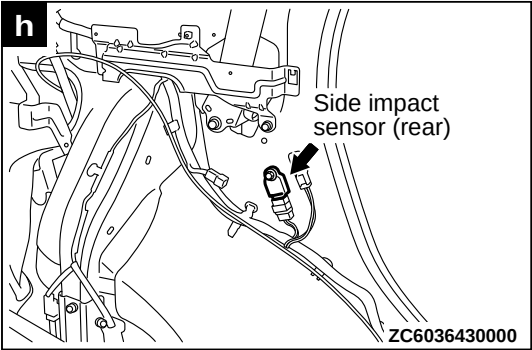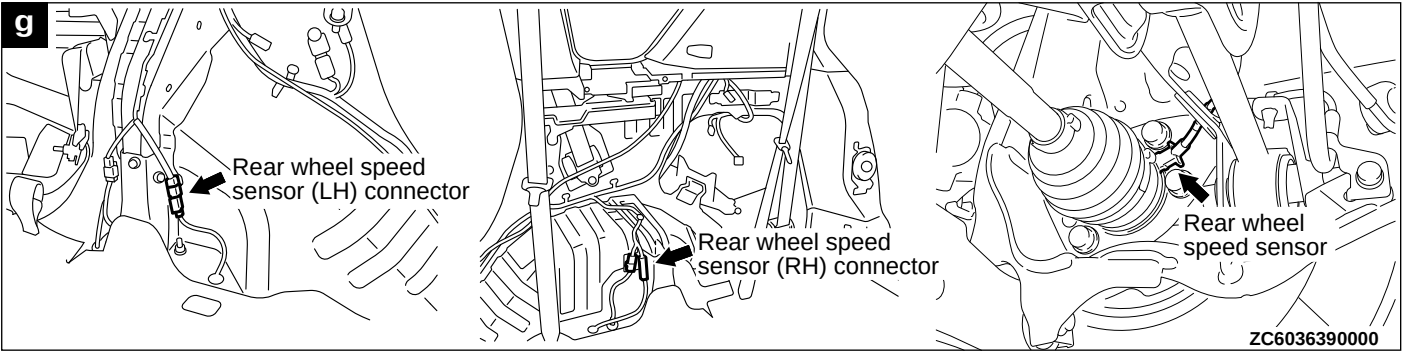


SOLENOID AND SOLENOID VALVE

M17001000008USA0000010000



Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	F	Exhaust gas recirculation valve	E
Engine oil control valve	D	Hydraulic unit (incorporating ABS solenoid valve) Selector lever assembly (incorporating shift lock solenoid)	B
Electronic control coupling solenoid AWD	H		G
Evaporative emission purge solenoid	C		
Evaporative emission ventilation solenoid	I	Variable intake air control solenoid valve	A




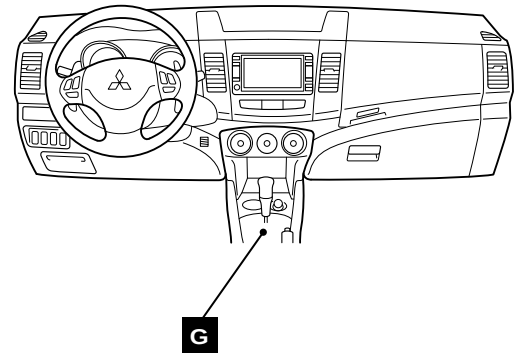 
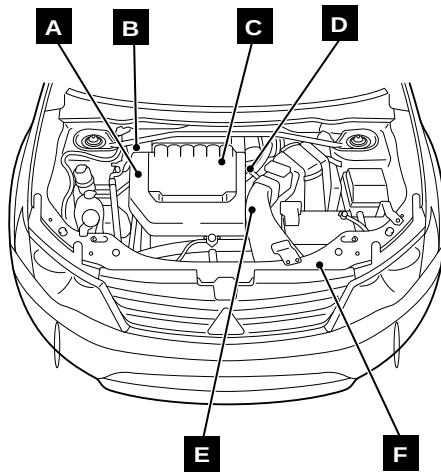 




ZC6016430003

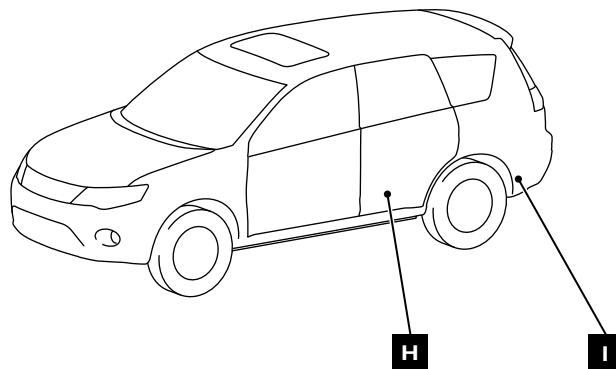 

ZC6033350001

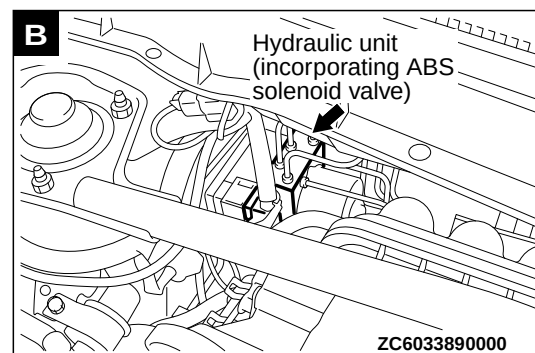 
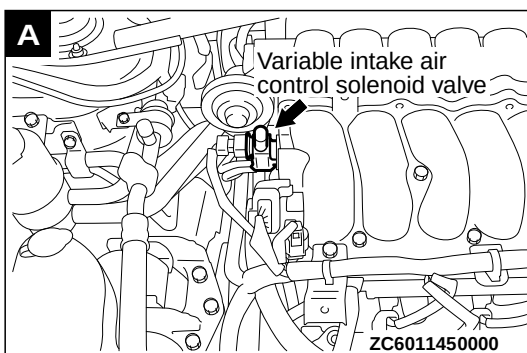 


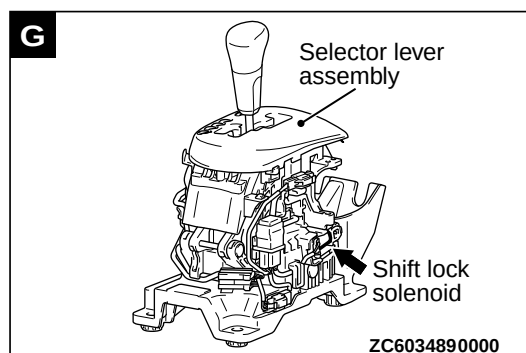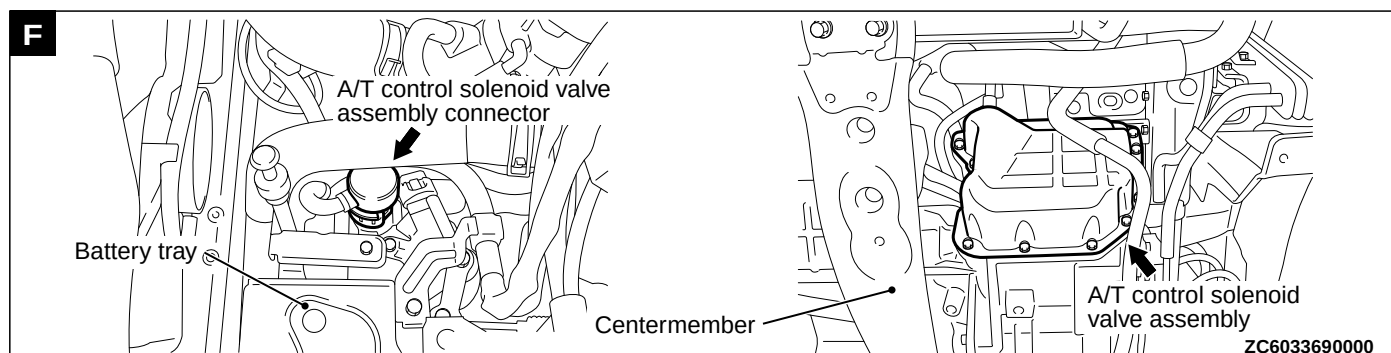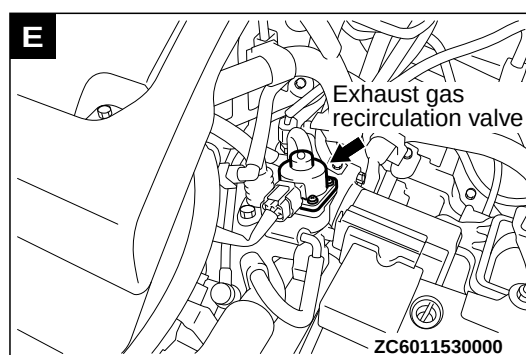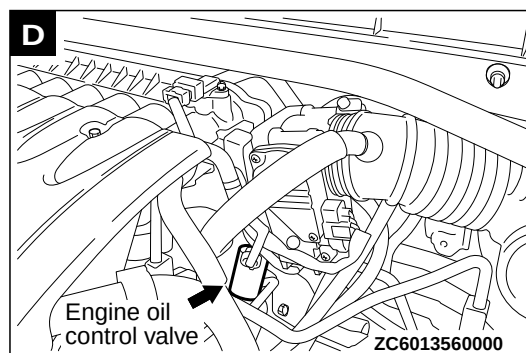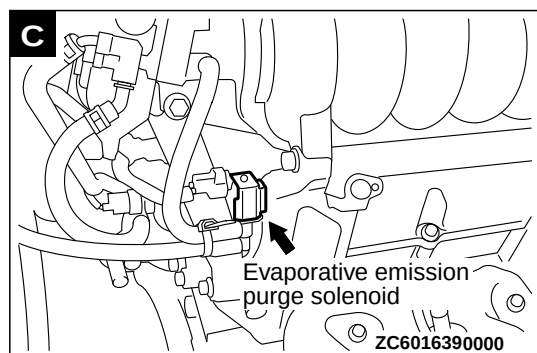       COMPONENT LOCATIONS
SOLENOID AND SOLENOID VALVE

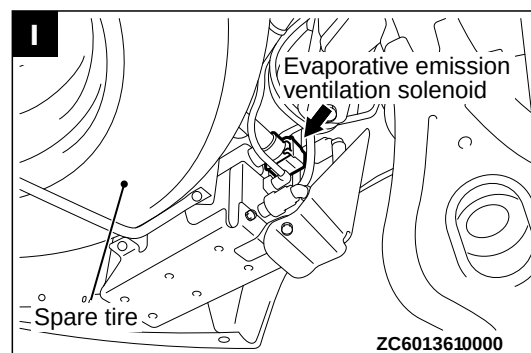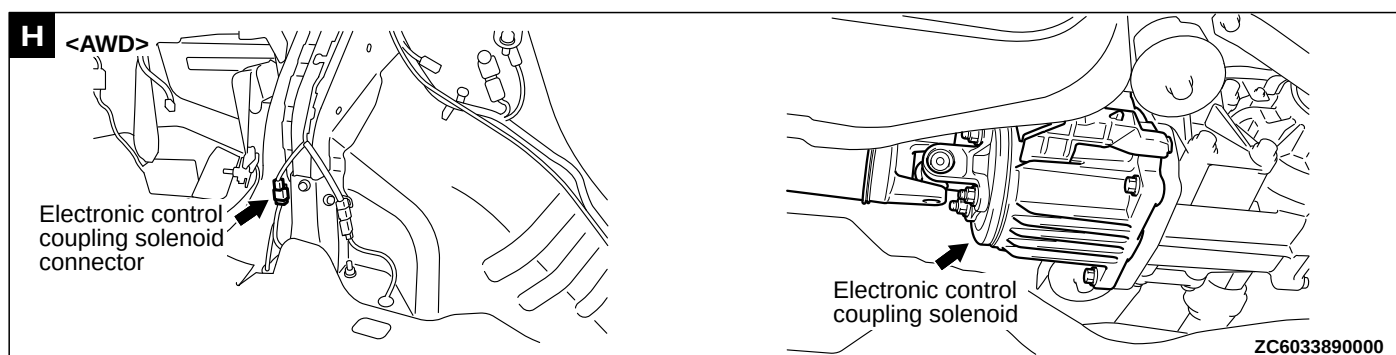

INSPECTION TERMINAL

  M17001000002USA0000010000

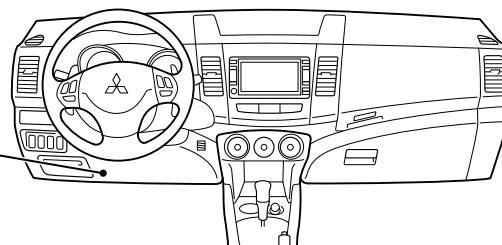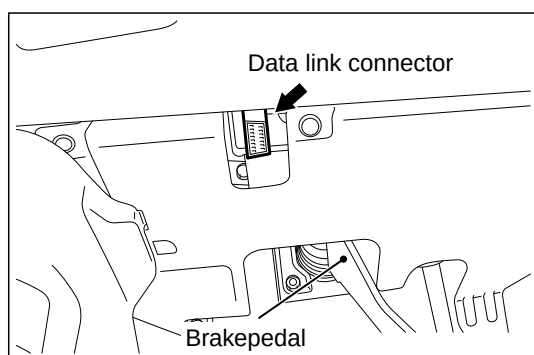

ZC6033320000



FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR

M17001000001USA0000010000





Name	Symbol	Name	Symbol
Fuse Nos.1 to 23 and No.31 to 32 (engine compartment relay box)	B	Fusible link Nos.21 (passenger compartment relay box)	C
Fuse Nos.2 to 19 (ETACS-ECU)	C	Fusible link Nos.24 to 30 (engine compartment relay box)	B


COMPONENT LOCATIONS
FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR

Name	Symbol	Name	Symbol
Fuse Nos.22 to 25 (passenger compartment relay box)	C	Fusible link Nos.33 to 37 (connected directly to battery positive terminal)	A
Fusible link Nos.1 and No.20 (ETACS-ECU)	C	IOD or storage connector	B

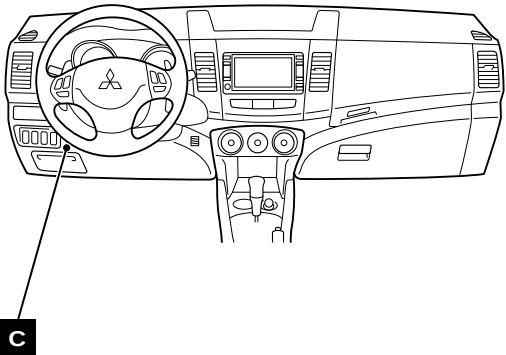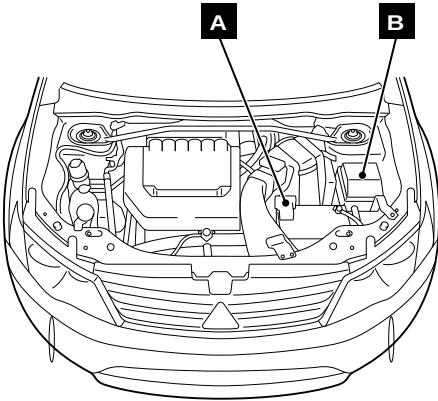  



ZC6016430001

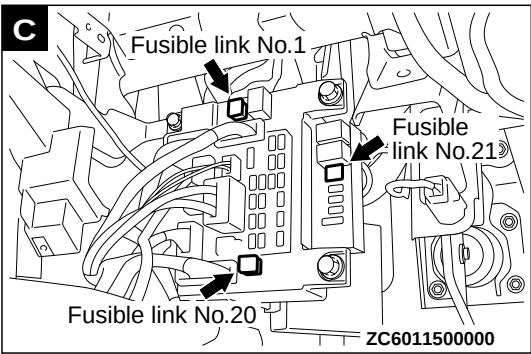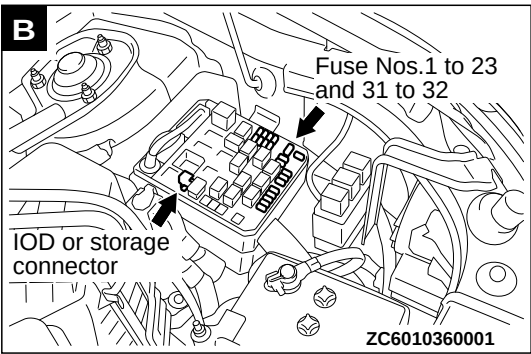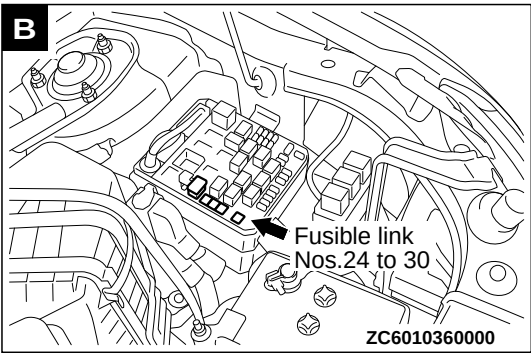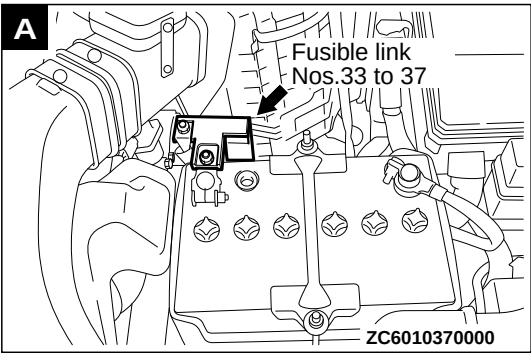    

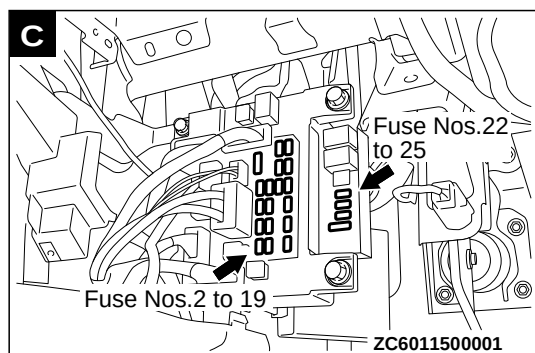 

GROUNDING CABLE

  
M17001000010USA0000010000

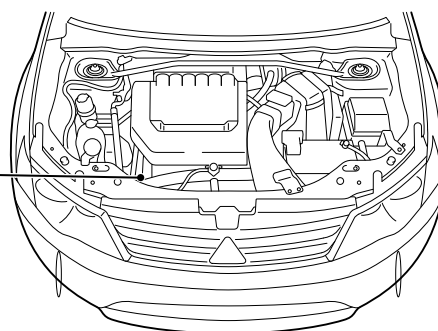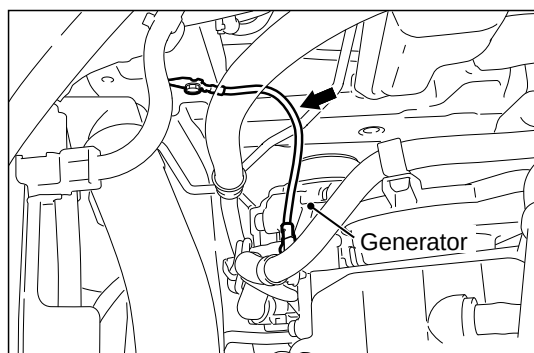

ZC6030410000



GROUNDING







 
M17001000003USA0000010000








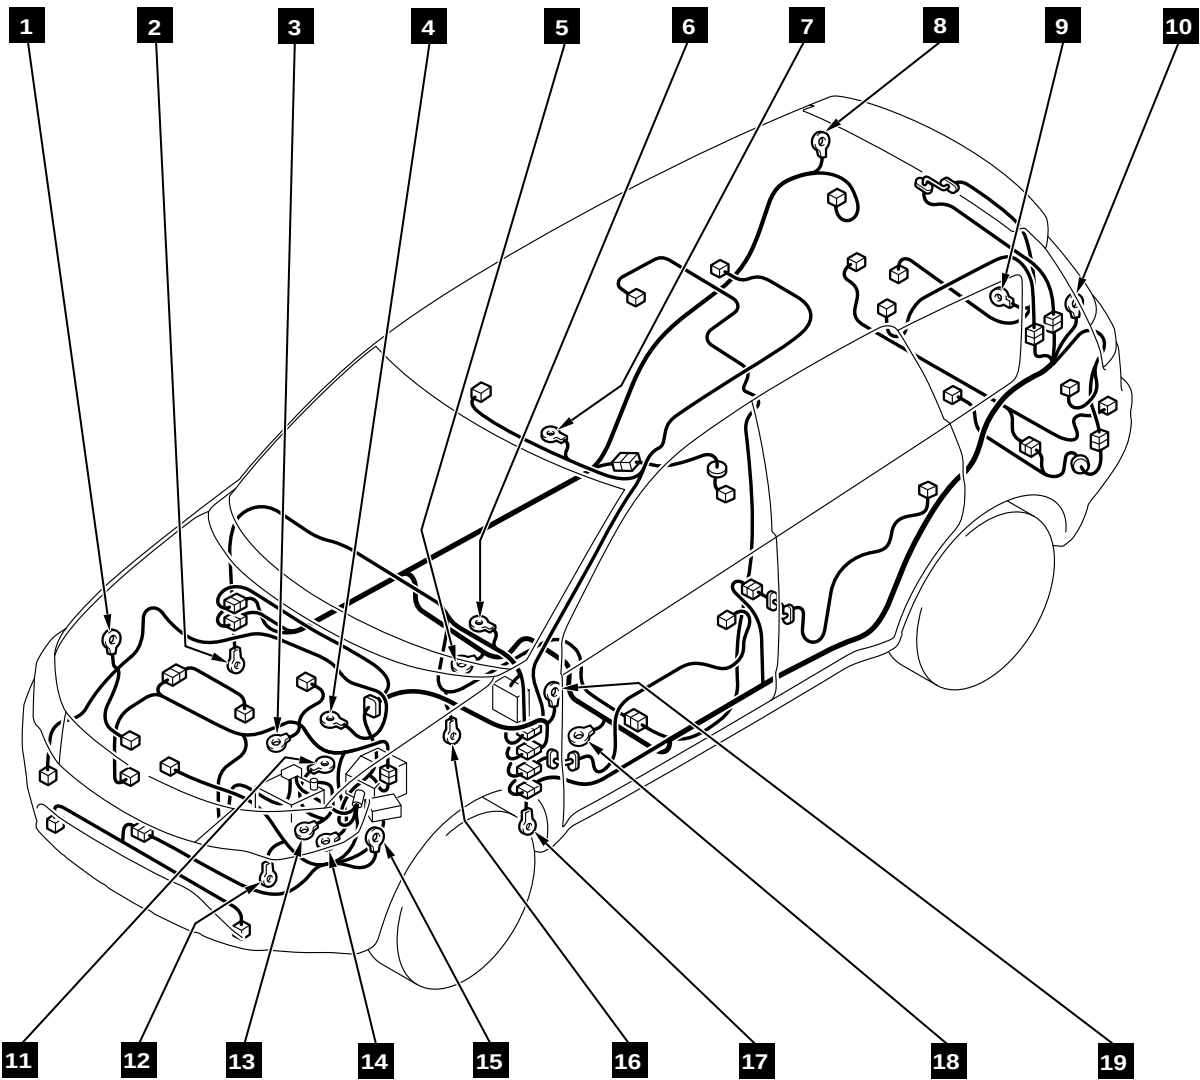


ZC6003220002

                 NOTE: 1 to 19 numbers correspond to the body ground point numbers in CIRCUIT DIAGRAMS.

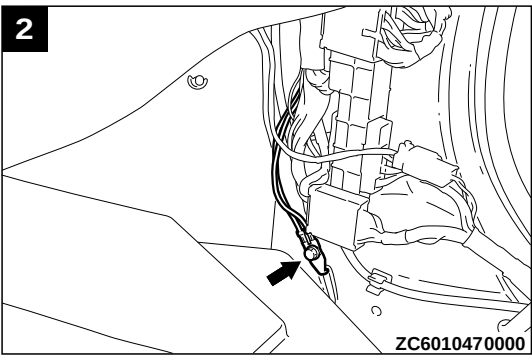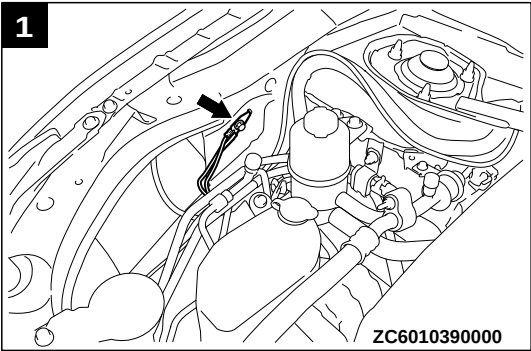


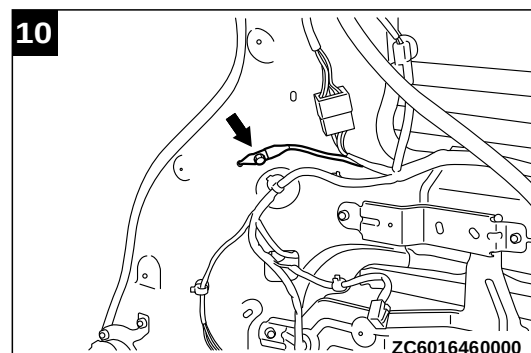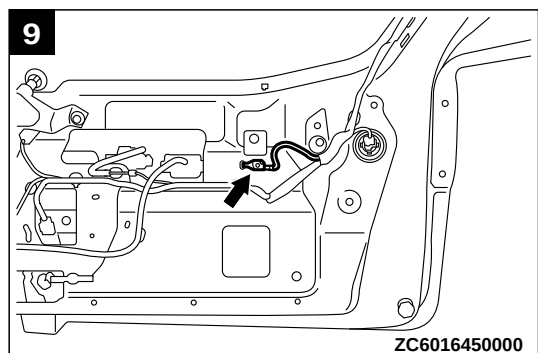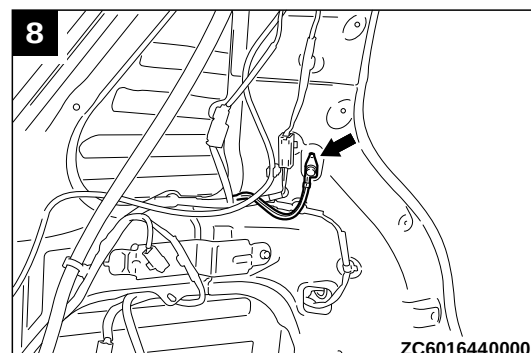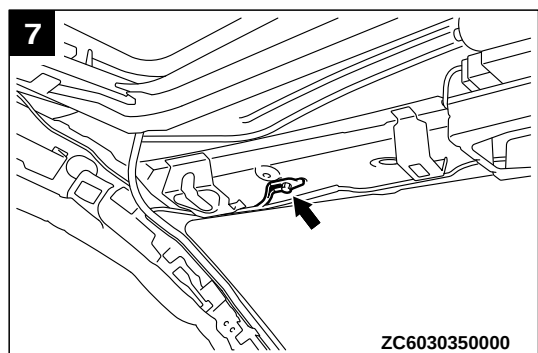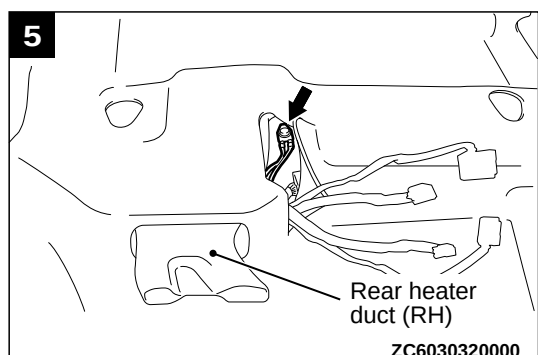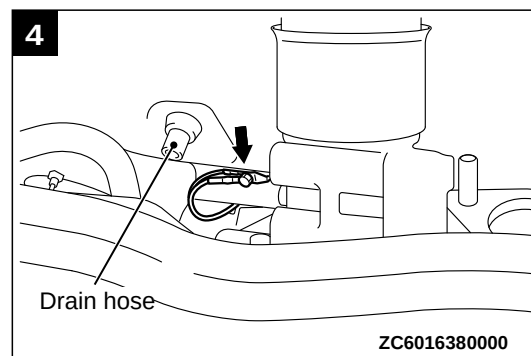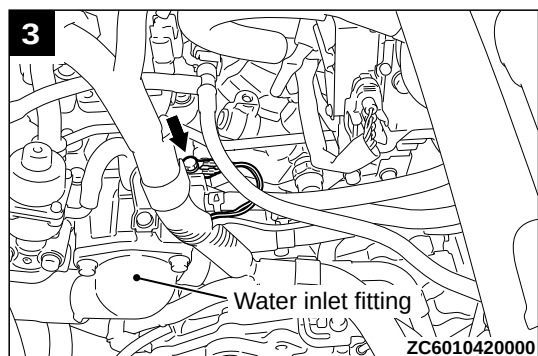

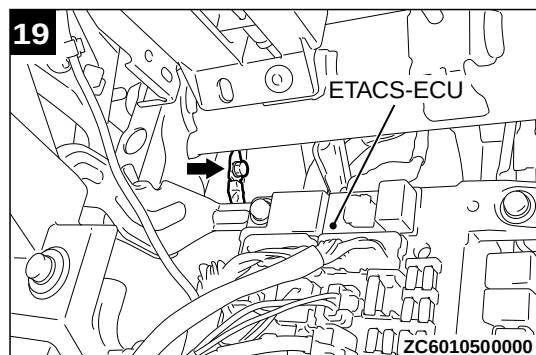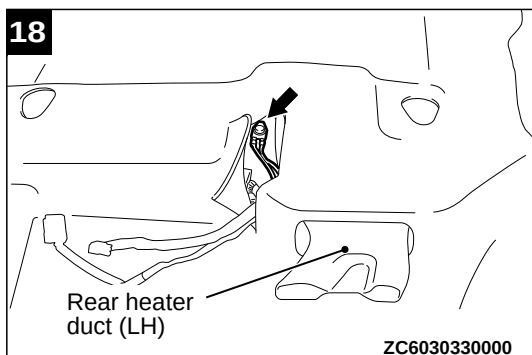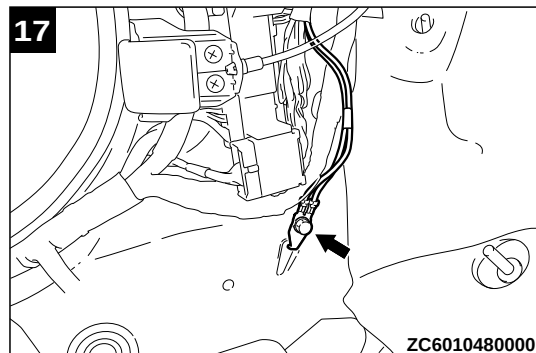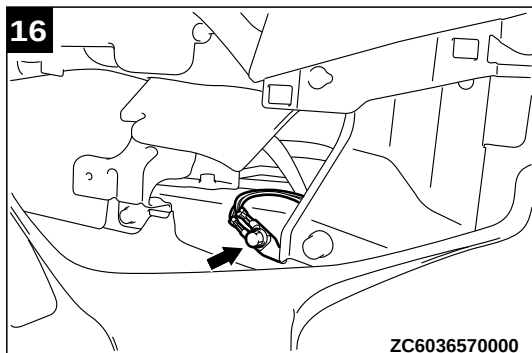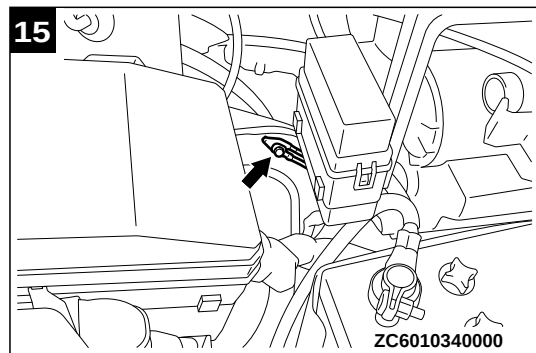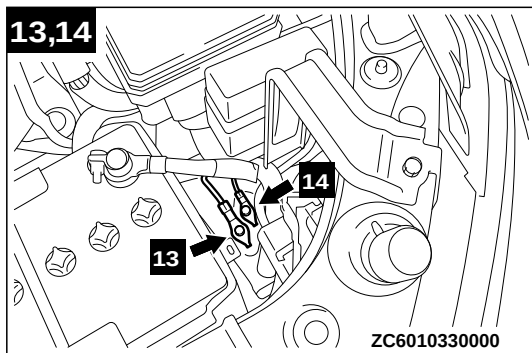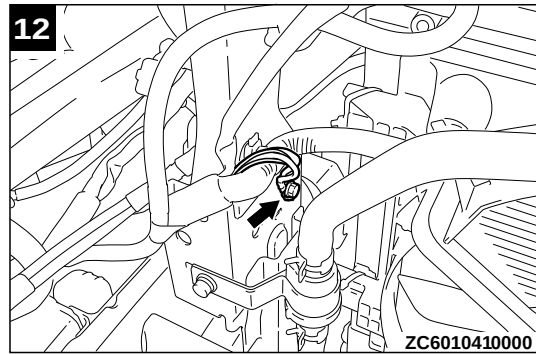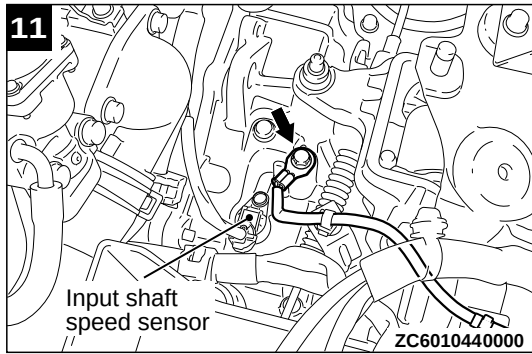

OTHER DEVICES

 M17001000056USA0000010000

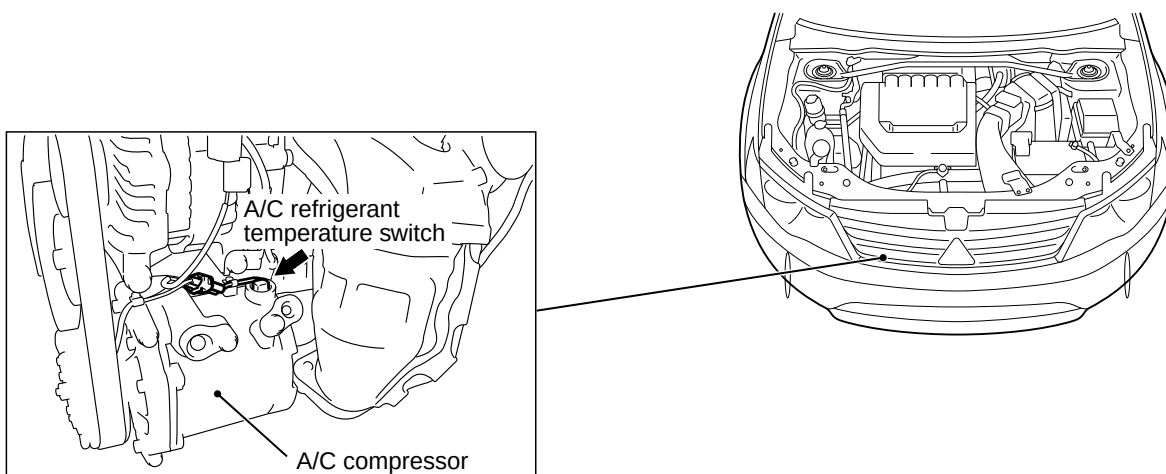

ZC6037030000

MEMO