

1 Fitting locations: middle part of vehicle

- ◆ ⇒ [“1.1 At front of interior”, page 15](#)
- ◆ ⇒ [“1.2 At rear of interior”, page 36](#)
- ◆ ⇒ [“1.3 Roof”, page 40](#)
- ◆ ⇒ [“1.4 Doors”, page 46](#)
- ◆ ⇒ [“1.5 Heater and air conditioning unit”, page 58](#)

Component	Chapter	Comment
Ignition/starter switch -D-	⇒ “1.1.11 Steering column”, page 29	
Immobiliser reader coil -D2-	⇒ “1.1.11 Steering column”, page 29	
Light switch -E1-	⇒ “1.1.3 Left footwell, LHD models”, page 20	For left-hand drive models
	⇒ “1.1.4 Right footwell, RHD models”, page 21	For right-hand drive models
Driver side belt switch -E24-	⇒ “1.1.14 Left front seat”, page 32	For left-hand drive models
	⇒ “1.1.15 Right front seat”, page 34	For right-hand drive models
Front passenger side belt switch -E25-	⇒ “1.1.15 Right front seat”, page 34	For left-hand drive models
	⇒ “1.1.14 Left front seat”, page 32	For right-hand drive models
Glove compartment light switch -E26-	⇒ “1.1.5 Front right of interior, LHD models”, page 22	For left-hand drive models
	⇒ “1.1.2 Front left of interior, RHD models”, page 18	For right-hand drive models
Driver side volume regulator -E67-	⇒ “1.1.7 Dash panel, LHD models”, page 25	For left-hand drive models
	⇒ “1.1.8 Dash panel, RHD models”, page 26	For right-hand drive models
Driver seat lumbar support adjustment switch -E176-	⇒ “1.1.14 Left front seat”, page 32	For left-hand drive models
	⇒ “1.1.15 Right front seat”, page 34	For right-hand drive models
Front passenger seat lumbar support adjustment switch -E177-	⇒ “1.1.15 Right front seat”, page 34	For left-hand drive models
	⇒ “1.1.14 Left front seat”, page 32	For right-hand drive models
Key operated switch to deactivate front passenger side airbag -E224-	⇒ “1.1.5 Front right of interior, LHD models”, page 22	For left-hand drive models
	⇒ “1.1.2 Front left of interior, RHD models”, page 18	For right-hand drive models
Rear lid remote release button -E233-	⇒ “1.4.1 Driver door, left-hand drive models”, page 46	For left-hand drive models
	⇒ “1.4.2 Driver door, right-hand drive models”, page 48	For right-hand drive models
Driver's side rear belt switch -E258-	⇒ “1.2.1 Rear interior, view from left”, page 37	
Passenger side rear belt switch -E259-	⇒ “1.2.1 Rear interior, view from left”, page 37	
Driver side interior locking button for central locking system -E308-	⇒ “1.4.1 Driver door, left-hand drive models”, page 46	For left-hand drive models

Component	Chapter	Comment
Front passenger side interior locking button for central locking system -E309-	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Selector lever -E313-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Sunroof button -E325-	⇒ "1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FU", page 44	
	⇒ "1.3.4 Roof, part 2, with sliding/tilting sunroof, 3FB", page 45	
Entry and start authorisation button -E408-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
Multifunction buttons on left in steering wheel -E440-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Multifunction buttons on right in steering wheel -E441-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Driver seat adjustment operating unit -E470-	⇒ "1.1.14 Left front seat", page 32	For left-hand drive models
	⇒ "1.1.15 Right front seat", page 34	For right-hand drive models
Front passenger seat adjustment operating unit -E471-	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models
Tiptronic switch to shift up -E479-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Tiptronic switch to shift down -E480-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Rear centre belt switch -E609-	⇒ "1.2.1 Rear interior, view from left", page 37	
Rear driver side interior locking button for central locking system -E717-	⇒ "1.4.5 Rear left door", page 54	
Rear passenger side interior locking button for central locking system -E718-	⇒ "1.4.6 Rear right door", page 56	
Interior mirror -EX5-	⇒ "1.3.1 Roof, part 1", page 41	
Exterior mirror adjuster -EX11-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Parking brake button -EX12-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Heater and air conditioning controls -EX21-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
Centre switch module in dash panel -EX22-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models

Component	Chapter	Comment
Window regulator switch in front passenger door -EX27-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Operating unit for driver door window regulator -EX36-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Operating unit in rear door, front passenger side -EX60-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Operating unit in rear driver side door -EX61-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Driver side vanity mirror contact switch -F147-	⇒ "1.3.1 Roof, part 1", page 41	
Front passenger side vanity mirror contact switch -F148-	⇒ "1.3.1 Roof, part 1", page 41	
Coil connector -F350-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Rear left brake pad wear sender -G36-	⇒ "1.2.1 Rear interior, view from left", page 37	
Rear right speed sensor -G44-	⇒ "1.2.2 Rear interior, view from right", page 39	
Rear left speed sensor -G46-	⇒ "1.2.1 Rear interior, view from left", page 37	
Seat occupied sensor, front passenger side -G128-	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models
Left vent temperature sender -G150-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Right vent temperature sender -G151-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Fuel level sender 2 -G169-	⇒ "1.2.2 Rear interior, view from right", page 39	For models with all-wheel drive
Rear seat occupied sensor, driver side -G177-	⇒ "1.2.1 Rear interior, view from left", page 37	
Rear seat occupied sensor, passenger side -G178-	⇒ "1.2.1 Rear interior, view from left", page 37	
Side airbag crash sensor on driver side -G179-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Side airbag crash sensor on front passenger side -G180-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Footwell vent temperature sender -G192-	⇒ "1.5.4 Climatronic, 9AK, KH5, part 2", page 62	
Rear side airbag crash sensor on driver side -G256-	⇒ "1.2.2 Rear interior, view from right", page 39	For left-hand drive models
	⇒ "1.2.1 Rear interior, view from left", page 37	For right-hand drive models

Component	Chapter	Comment
Rear side airbag crash sensor on front passenger side -G257-	⇒ "1.2.1 Rear interior, view from left", page 37	For left-hand drive models
	⇒ "1.2.2 Rear interior, view from right", page 39	For right-hand drive models
Evaporator output temperature sender -G263-	⇒ "1.5.1 Air conditioning system, KH6, part 1", page 58	For models with air conditioning system
	⇒ "1.5.3 Climatronic, 9AK, KH5, part 1", page 61	For models with Climatronic
Rain and light sensor -G397-	⇒ "1.3.1 Roof, part 1", page 41	
Driver door exterior handle contact sensor -G415-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Front passenger door exterior handle contact sensor -G416-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Contact sensor for rear left exterior door handle -G417-	⇒ "1.4.5 Rear left door", page 54	
Contact sensor for rear right exterior door handle -G418-	⇒ "1.4.6 Rear right door", page 56	
Heated steering wheel sender -G428-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Clutch position sender -G476-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Potentiometer for rear temperature selection -G538-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
Driver side seat position sensor -G553-	⇒ "1.1.14 Left front seat", page 32	For left-hand drive models
	⇒ "1.1.15 Right front seat", page 34	For right-hand drive models
Front passenger side seat position sensor -G554-	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models
Anti-theft alarm sensor -G578-	⇒ "1.3.1 Roof, part 1", page 41	
Rear centre seat occupied sensor -G1010-	⇒ "1.2.1 Rear interior, view from left", page 37	
Fuel delivery unit -GX1-	⇒ "1.2.2 Rear interior, view from right", page 39	
Accelerator pedal module -GX2-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Fuel tank leak detection module -GX36-	⇒ "1.2.2 Rear interior, view from right", page 39	
Horn plate -H-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Front parking aid warning buzzer -H22-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Fresh air blower control unit -J126-	⇒ "1.5.1 Air conditioning system, KH6, part 1", page 58	For models with air conditioning system
	⇒ "1.5.3 Climatronic, 9AK, KH5, part 1", page 61	For models with Climatronic
Airbag control unit -J234-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models

Component	Chapter	Comment
Sliding sunroof adjustment control unit -J245-	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
	⇒ "1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FU", page 44	
	⇒ "1.3.4 Roof, part 2, with sliding/tilting sunroof, 3FB", page 45	
Control unit in dash panel insert -J285-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
Driver door control unit -J386-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Front passenger door control unit -J387-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Parking aid control unit -J446-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Multifunction steering wheel control unit -J453-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Entry and start authorisation control unit -J518-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Onboard supply control unit -J519-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Digital sound package control unit -J525-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Steering column electronics control unit -J527-	⇒ "1.1.9 Steering wheel, part 1", page 27	
	⇒ "1.1.11 Steering column", page 29	
Data bus diagnostic interface -J533-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Fuel pump control unit -J538-	⇒ "1.2.2 Rear interior, view from right", page 39	
Chip card reader control unit -J676-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Display unit for front information display and operating unit control unit -J685-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
Seat occupied recognition control unit -J706-	⇒ "1.1.15 Right front seat", page 34	For models with US equipment only
Control unit for cornering light and headlight range control -J745-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models

Component	Chapter	Comment
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Control unit for electronic steering column lock -J764-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Control unit 1 for information electronics -J794-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Rear driver side door control unit -J926-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Rear passenger side door control unit -J927-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Control unit for overhead view camera -J928-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For right-hand drive models
Emergency call module control unit and communication unit -J949-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Control unit with rear driver side window regulator motor -J1016-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Control unit with rear passenger side window regulator motor -J1017-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Charger 1 for mobile devices -J1146-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Central locking SAFELOCK function warning lamp -K133-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Lane change assist warning lamp in driver side exterior mirror -K233-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Lane change assist warning lamp in front passenger side exterior mirror -K234-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Rear left footwell illumination bulb -L106-	⇒ "1.1.14 Left front seat", page 32	
Rear right footwell illumination bulb -L107-	⇒ "1.1.15 Right front seat", page 34	
Light 1 for front centre console ambient lighting -L193-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models

Component	Chapter	Comment
Light 2 for front centre console ambient lighting -L194-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Light 3 for front centre console ambient lighting -L195-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Light 1 for front left door background lighting -L199-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Light 1 for front right door background lighting -L200-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Light 1 for rear left door ambient lighting -L201-	⇒ "1.4.5 Rear left door", page 54	
Light 1 for rear right door ambient lighting -L202-	⇒ "1.4.6 Rear right door", page 56	
Light for driver side interior door handle illumination -L219-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Light for front passenger side interior door handle illumination -L220-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Light for rear driver side interior door handle illumination -L221-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Light for rear passenger side interior door handle illumination -L222-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Drink holder ambient lighting light -L232-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Light 3 for dash panel contour lighting -L245-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
Drink holder ambient lighting light 2 -L246-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Light for front left door contour lighting -L251-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Light for front right door contour lighting -L252-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models

Component	Chapter	Comment
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Light for rear left door contour lighting -L253-	⇒ "1.4.5 Rear left door", page 54	
Light for rear right door contour lighting -L254-	⇒ "1.4.6 Rear right door", page 56	
Driver side airbag igniter -N95-	⇒ "1.1.9 Steering wheel, part 1", page 27	
Front passenger side airbag igniter 1 -N131-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Rear belt tensioner igniter on driver side -N196-	⇒ "1.2.2 Rear interior, view from right", page 39	For left-hand drive models
	⇒ "1.2.1 Rear interior, view from left", page 37	For right-hand drive models
Rear belt tensioner igniter on front passenger side -N197-	⇒ "1.2.1 Rear interior, view from left", page 37	For left-hand drive models
	⇒ "1.2.2 Rear interior, view from right", page 39	For right-hand drive models
Side airbag igniter on driver side -N199-	⇒ "1.1.14 Left front seat", page 32	For left-hand drive models
	⇒ "1.1.15 Right front seat", page 34	For right-hand drive models
Side airbag igniter on front passenger side -N200-	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models
Rear side airbag igniter on driver side -N201-	⇒ "1.2.2 Rear interior, view from right", page 39	For left-hand drive models
	⇒ "1.2.1 Rear interior, view from left", page 37	For right-hand drive models
Rear side airbag igniter on front passenger side -N202-	⇒ "1.2.1 Rear interior, view from left", page 37	For left-hand drive models
	⇒ "1.2.2 Rear interior, view from right", page 39	For right-hand drive models
Driver side curtain airbag igniter -N251-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For left-hand drive models
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For right-hand drive models
Front passenger side curtain airbag igniter -N252-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Driver side knee airbag igniter -N295-	⇒ "1.1.3 Left footwell, LHD models", page 20	For models with US equipment only
Front passenger side knee airbag igniter -N296-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For models with US equipment only
Igniter for driver side seat belt tensioner 2 -N297-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For models with US equipment For models with 2.5l petrol engine
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For models with 2.5l petrol engine
Igniter for front passenger side seat belt tensioner 2 -N298-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For models with US equipment For models with 2.5l petrol engine
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For models with 2.5l petrol engine
Rear left shock absorber damping adjustment valve -N338-	⇒ "1.2.1 Rear interior, view from left", page 37	
Rear right shock absorber damping adjustment valve -N339-	⇒ "1.2.2 Rear interior, view from right", page 39	

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

Information in this document. Copyright by AUDI AG.

Component	Chapter	Comment
Ignition key withdrawal lock solenoid -N376-	⇒ "1.1.11 Steering column", page 29	
Front passenger airbag unit -NX3-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For models with US equipment only
Front passenger side seat belt -NX18-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Driver's side seat belt -NX19-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For left-hand drive models
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For right-hand drive models
Rear left treble loudspeaker -R14-	⇒ "1.4.5 Rear left door", page 54	
Rear left bass loudspeaker -R15-	⇒ "1.4.5 Rear left door", page 54	
Rear right treble loudspeaker -R16-	⇒ "1.4.6 Rear right door", page 56	
Rear right bass loudspeaker -R17-	⇒ "1.4.6 Rear right door", page 56	
Front left treble loudspeaker -R20-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Front left bass loudspeaker -R21-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Front right treble loudspeaker -R22-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For right-hand drive models
Front right bass loudspeaker -R23-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Telephone microphone -R38-	⇒ "1.3.1 Roof, part 1", page 41	
Internal microphone -R74-	⇒ "1.3.1 Roof, part 1", page 41	
TV tuner -R78-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For right-hand drive models
Front left mid-range loudspeaker -R103-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Front right mid-range loudspeaker -R104-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For right-hand drive models
Interior aerial 1 for entry and start system -R138-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Interior aerial 2 for entry and start system -R139-	⇒ "1.2.1 Rear interior, view from left", page 37	
Left front microphone -R140-	⇒ "1.3.1 Roof, part 1", page 41	
Front right microphone -R141-	⇒ "1.3.1 Roof, part 1", page 41	

Component	Chapter	Comment
Traffic data aerial -R173-	⇒ "1.3.1 Roof, part 1", page 41	
Centre loudspeaker -R208-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
Roof aerial -R216-	⇒ "1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA", page 43	
Centre loudspeaker 2 -R219-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
Front camera for driver assist systems -R242-	⇒ "1.3.1 Roof, part 1", page 41	
Left overhead view camera -R244-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Right overhead view camera -R245-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Dedicated short-range communication aerial -R269-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
USB hub -R293-	⇒ "1.1.7 Dash panel, LHD models", page 25	For left-hand drive models
	⇒ "1.1.8 Dash panel, RHD models", page 26	For right-hand drive models
LTE aerial 2 -R306-	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ Fitting locations: rear part of vehicle	According to equipment
Microphone for emergency call module -R321-	⇒ "1.3.1 Roof, part 1", page 41	
Emergency call module loudspeaker -R335-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Aerial for in-vehicle communication -R364-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Cigarette lighter -U1-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
12 V socket -U5-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Diagnostic connection -U31-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For right-hand drive models
USB charging socket 1 -U37-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models

Component	Chapter	Comment
USB charging socket 2 -U38-	⇒ “1.1.7 Dash panel, LHD models”, page 25	For left-hand drive models
	⇒ “1.1.8 Dash panel, RHD models”, page 26	For right-hand drive models
Sliding sunroof motor -V1-	⇒ “1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FU”, page 44	
	⇒ “1.3.4 Roof, part 2, with sliding/tilting sunroof, 3FB”, page 45	
Fresh air blower -V2-	⇒ “1.5.1 Air conditioning system, KH6, part 1”, page 58	For models with air conditioning system
	⇒ “1.5.3 Climatronic, 9AK, KH5, part 1”, page 61	For models with Climatronic
Driver seat longitudinal adjustment motor -V28-	⇒ “1.1.14 Left front seat”, page 32	For left-hand drive models
	⇒ “1.1.15 Right front seat”, page 34	For right-hand drive models
Front passenger seat longitudinal adjustment motor -V31-	⇒ “1.1.15 Right front seat”, page 34	For left-hand drive models
	⇒ “1.1.14 Left front seat”, page 32	For right-hand drive models
Driver seat backrest adjustment motor -V45-	⇒ “1.1.14 Left front seat”, page 32	For left-hand drive models
	⇒ “1.1.15 Right front seat”, page 34	For right-hand drive models
Front passenger seat backrest adjustment motor -V46-	⇒ “1.1.15 Right front seat”, page 34	For left-hand drive models
	⇒ “1.1.14 Left front seat”, page 32	For right-hand drive models
Temperature flap control motor -V68-	⇒ “1.5.2 Air conditioning system, KH6, part 2”, page 60	For models with air conditioning system
Defroster flap control motor -V107-	⇒ “1.5.3 Climatronic, 9AK, KH5, part 1”, page 61	
Air recirculation flap control motor -V113-	⇒ “1.5.1 Air conditioning system, KH6, part 1”, page 58	
Rear temperature flap control motor -V137-	⇒ “1.5.4 Climatronic, 9AK, KH5, part 2”, page 62	
Driver side window regulator motor -V147-	⇒ “1.4.1 Driver door, left-hand drive models”, page 46	For left-hand drive models
	⇒ “1.4.2 Driver door, right-hand drive models”, page 48	For right-hand drive models
Front passenger side window regulator motor -V148-	⇒ “1.4.3 Front passenger door, left-hand drive models”, page 50	For left-hand drive models
	⇒ “1.4.4 Front passenger door, right-hand drive models”, page 52	For right-hand drive models
Left temperature flap control motor -V158-	⇒ “1.5.4 Climatronic, 9AK, KH5, part 2”, page 62	For models with Climatronic
Right temperature flap control motor -V159-	⇒ “1.5.3 Climatronic, 9AK, KH5, part 1”, page 61	
Driver seat rake adjustment motor -V243-	⇒ “1.1.14 Left front seat”, page 32	For left-hand drive models
	⇒ “1.1.15 Right front seat”, page 34	For right-hand drive models
Front passenger seat rake adjustment motor -V244-	⇒ “1.1.15 Right front seat”, page 34	For left-hand drive models
	⇒ “1.1.14 Left front seat”, page 32	For right-hand drive models
Driver seat height adjustment motor -V245-	⇒ “1.1.14 Left front seat”, page 32	For left-hand drive models
	⇒ “1.1.15 Right front seat”, page 34	For right-hand drive models

Component	Chapter	Comment
Front passenger seat height adjustment motor -V246-	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models
Sunroof roller blind motor -V260-	⇒ "1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FU", page 44	
	⇒ "1.3.4 Roof, part 2, with sliding/tilting sunroof, 3FB", page 45	
Left parking brake motor -V282-	⇒ "1.2.1 Rear interior, view from left", page 37	
Right parking brake motor -V283-	⇒ "1.2.2 Rear interior, view from right", page 39	
Fresh air/air recirculation, air flow flap control motor -V425-	⇒ "1.5.3 Climatronic, 9AK, KH5, part 1", page 61	
Front air distribution flap control motor -V426-	⇒ "1.5.4 Climatronic, 9AK, KH5, part 2", page 62	For models with Climatronic
Air distribution flap control motor -V428-	⇒ "1.5.2 Air conditioning system, KH6, part 2", page 60	For models with air conditioning system
Rear driver side window regulator motor -V471-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Rear passenger side window regulator motor -V472-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Lumbar support for driver seat -VX2-	⇒ "1.1.14 Left front seat", page 32	For left-hand drive models
	⇒ "1.1.15 Right front seat", page 34	For right-hand drive models
Lumbar support for front passenger seat -VX3-	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models
Driver side exterior mirror -VX4-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Passenger side exterior mirror -VX5-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Driver door lock unit -VX21-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Front passenger door lock unit -VX22-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Rear door lock unit, driver side -VX83-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Rear door lock unit, front passenger side -VX84-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models

Component	Chapter	Comment
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Glove compartment light -W6-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Left footwell light -W9-	⇒ "1.1.3 Left footwell, LHD models", page 20	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Right footwell light -W10-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.4 Right footwell, RHD models", page 21	For right-hand drive models
Front passenger side illuminated vanity mirror -W14-	⇒ "1.3.1 Roof, part 1", page 41	
Driver side illuminated vanity mirror -W20-	⇒ "1.3.1 Roof, part 1", page 41	
Rear driver side entry light -W83-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Rear passenger side entry light -W84-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Light for driver door ambient lighting -W86-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Light for passenger door ambient lighting -W87-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Light for rear driver side door ambient lighting -W88-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Light for rear passenger side door ambient lighting -W89-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Driver side entry light -W92-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Front passenger side entry light -W93-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models
Light 2 for driver door ambient lighting -W97-	⇒ "1.4.1 Driver door, left-hand drive models", page 46	For left-hand drive models
	⇒ "1.4.2 Driver door, right-hand drive models", page 48	For right-hand drive models
Light 2 for front passenger door ambient lighting -W98-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 50	For left-hand drive models
	⇒ "1.4.4 Front passenger door, right-hand drive models", page 52	For right-hand drive models

Component	Chapter	Comment
Light 2 for rear driver side door ambient lighting -W99-	⇒ "1.4.5 Rear left door", page 54	For left-hand drive models
	⇒ "1.4.6 Rear right door", page 56	For right-hand drive models
Light 2 for rear front passenger side door ambient lighting -W100-	⇒ "1.4.6 Rear right door", page 56	For left-hand drive models
	⇒ "1.4.5 Rear left door", page 54	For right-hand drive models
Light for driver side sill panel moulding ambient lighting -W102-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For left-hand drive models
	⇒ "1.1.6 Front right of interior, RHD models", page 24	For right-hand drive models
Light for sill panel moulding ambient lighting, front passenger side -W103-	⇒ "1.1.5 Front right of interior, LHD models", page 22	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
Rear interior light -WX2-	⇒ "1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA", page 43	
Front roof module -WX3-	⇒ "1.1.1 Front left of interior, LHD models", page 15	For left-hand drive models
	⇒ "1.1.2 Front left of interior, RHD models", page 18	For right-hand drive models
	⇒ "1.3.1 Roof, part 1", page 41	
Selector lever position display -Y26-	⇒ "1.1.12 Centre console, LHD models", page 30	For left-hand drive models
	⇒ "1.1.13 Centre console, RHD models", page 31	For right-hand drive models
Heated backrest for driver seat -Z7-	⇒ "1.1.14 Left front seat", page 32	For left-hand drive models
	⇒ "1.1.15 Right front seat", page 34	For right-hand drive models
Heated backrest for front passenger seat -Z9-	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models
Auxiliary air heater element -Z35-	⇒ "1.5.2 Air conditioning system, KH6, part 2", page 60	
	⇒ "1.5.4 Climatronic, 9AK, KH5, part 2", page 62	
Heated steering wheel -Z36-	⇒ "1.1.9 Steering wheel, part 1", page 27	for vehicles with heated steering wheel
Heated seat extension, driver seat -Z37-	⇒ "1.1.14 Left front seat", page 32	For left-hand drive models
	⇒ "1.1.15 Right front seat", page 34	For right-hand drive models
Heated seat extension, front passenger seat -Z38-	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models
	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
Windscreen heater for front sensors -Z113-	⇒ "1.3.1 Roof, part 1", page 41	
Heated seat, driver side -ZX15-	⇒ "1.1.14 Left front seat", page 32	For left-hand drive models
	⇒ "1.1.15 Right front seat", page 34	For right-hand drive models
Heated seat, front passenger side -ZX16-	⇒ "1.1.15 Right front seat", page 34	For left-hand drive models
	⇒ "1.1.14 Left front seat", page 32	For right-hand drive models

1.1 At front of interior

- ◆ ⇒ [“1.1.1 Front left of interior, LHD models”, page 15](#)
- ◆ ⇒ [“1.1.2 Front left of interior, RHD models”, page 18](#)
- ◆ ⇒ [“1.1.3 Left footwell, LHD models”, page 20](#)
- ◆ ⇒ [“1.1.4 Right footwell, RHD models”, page 21](#)
- ◆ ⇒ [“1.1.5 Front right of interior, LHD models”, page 22](#)
- ◆ ⇒ [“1.1.6 Front right of interior, RHD models”, page 24](#)
- ◆ ⇒ [“1.1.7 Dash panel, LHD models”, page 25](#)
- ◆ ⇒ [“1.1.8 Dash panel, RHD models”, page 26](#)
- ◆ ⇒ [“1.1.9 Steering wheel, part 1”, page 27](#)
- ◆ ⇒ [“1.1.10 Steering wheel, part 2”, page 28](#)
- ◆ ⇒ [“1.1.11 Steering column”, page 29](#)
- ◆ ⇒ [“1.1.12 Centre console, LHD models”, page 30](#)
- ◆ ⇒ [“1.1.13 Centre console, RHD models”, page 31](#)
- ◆ ⇒ [“1.1.14 Left front seat”, page 32](#)
- ◆ ⇒ [“1.1.15 Right front seat”, page 34](#)

1.1.1 Front left of interior, LHD models



Note

For left-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 28-pin connector -T28b- , black

- ☐ Fitting location for right-hand drive models [⇒ item A \(page 18\)](#)

**B - 17-pin connector -T17a- , blue/
17-pin connector -T17ax- , blue**

- ☐ Fitting location for right-hand drive models [⇒ item B \(page 18\)](#)

**C - 17-pin connector -T17b- , black/
17-pin connector -T17bx- , black**

- ☐ Fitting location for right-hand drive models [⇒ item C \(page 18\)](#)

**D - 17-pin connector -T17c- , brown/
17-pin connector -T17cx- , brown**

- ☐ Fitting location for right-hand drive models [⇒ item D \(page 18\)](#)

**E - 17-pin connector -T17d- , red/
17-pin connector -T17dx- , red**

- ☐ Fitting location for right-hand drive models [⇒ item E \(page 18\)](#)

**F - 5-pin connector -T5c- , black/
5-pin connector -T5cx- , black**

- ☐ Fitting location for right-hand drive models [⇒ item F \(page 18\)](#)

**G - Single-pin connector -T1c- , black/
single-pin connector -T1cx- , black**

- ☐ Fitting location for right-hand drive models [⇒ item G \(page 18\)](#)

**H - 17-pin connector -T17e- , red/
17-pin connector -T17ex- , red**

- ☐ Fitting location for right-hand drive models [⇒ item H \(page 18\)](#)

**I - 6-pin connector -T6a- , green/
6-pin connector -T6ax- , green**

- ☐ Fitting location for right-hand drive models [⇒ item I \(page 18\)](#)

**J - 3-pin connector -T3c- , yellow/
3-pin connector -T3cx- , yellow**

- ☐ Fitting location for right-hand drive models [⇒ item J \(page 18\)](#)

**K - 5-pin connector -T5d- , black/
5-pin connector -T5dx- , black**

- ☐ Fitting location for right-hand drive models [⇒ item K \(page 18\)](#)

L - 27-pin connector -T27a- , black


- ☐ Fitting location for right-hand drive models [⇒ item L \(page 18\)](#)

1 - Driver side curtain airbag igniter -N251-

2 - Front left treble loudspeaker -R20-



Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information.

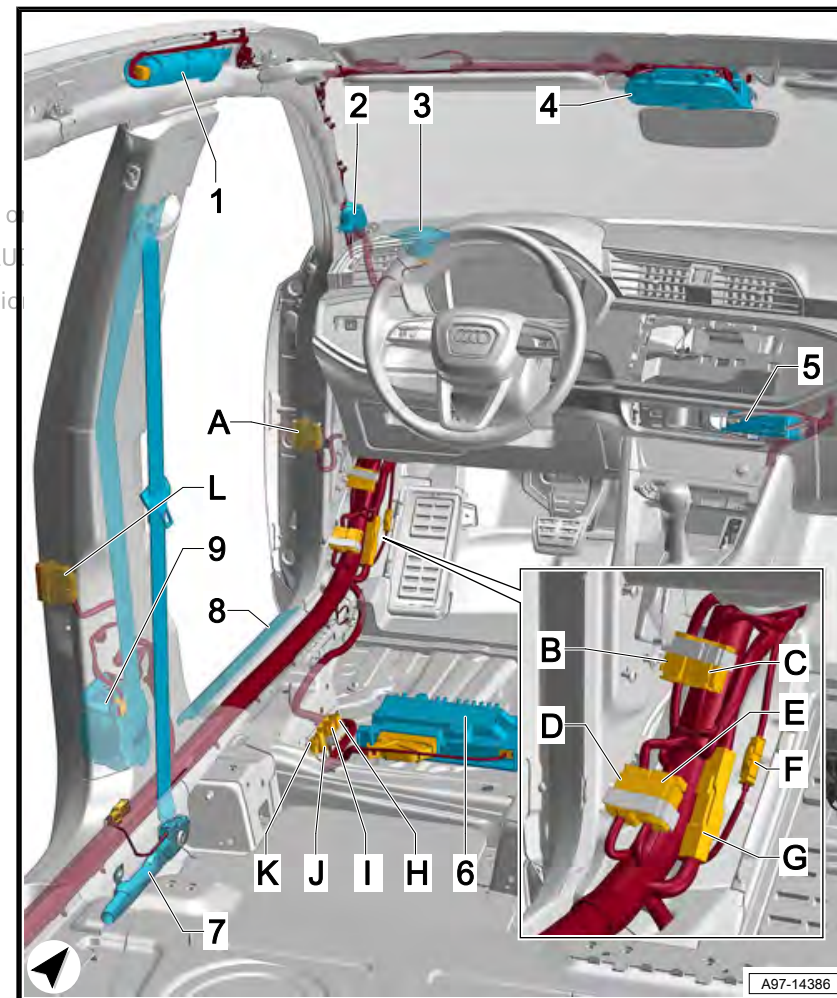

- 3 - Front left mid-range loudspeaker -R103-
- 4 - Front roof module -WX3-
- 5 - Emergency call module control unit and communication unit -J949-
- 6 - Digital sound package control unit -J525-
- 7 - Igniter for driver side seat belt tensioner 2 -N297-
- 8 - Light for driver side sill panel moulding ambient lighting -W102-
- 9 - Driver's side seat belt -NX19-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)


1.1.2 Front left of interior, RHD models



Note

For right-hand drive models

- A - 28-pin connector -T28b- , black
- B - 17-pin connector -T17a- , blue/ 17-pin connector -T17ax- , blue
- C - 17-pin connector -T17b- , black/ 17-pin connector -T17bx- , black
- D - 17-pin connector -T17c- , brown/ 17-pin connector -T17cx- , brown
- E - 17-pin connector -T17d- , red/ 17-pin connector -T17dx- , red
- F - 5-pin connector -T5c- , black/ 5-pin connector -T5cx- , black
- G - Single-pin connector -T1c- , black/ single-pin connector -T1cx- , black
- H - 17-pin connector -T17e- , red/ 17-pin connector -T17ex- , red
- I - 6-pin connector -T6a- , green / 6-pin connector -T6ax- , green
- J - 3-pin connector -T3c- , yellow/ 3-pin connector -T3cx- , yellow
- K - 5-pin connector -T5d- , black/ 5-pin connector -T5dx- , black
- L - 27-pin connector -T27a- , black
- 1 - Front passenger side curtain airbag igniter -N252-
- 2 - Front parking aid warning buzzer -H22-
- 3 - Front left treble loudspeaker -R20-
- 4 - Front left mid-range loudspeaker -R103-
- 5 - Left vent temperature sender -G150-
- 6 - Front passenger side airbag igniter 1 -N131-
- 7 - LTE aerial 2 -R306-
- 8 - Front roof module -WX3-
- 9 - Control unit 1 for information electronics -J794-
- 10 - Glove compartment light -W6-
- 11 - Emergency call module control unit and communication unit -J949-

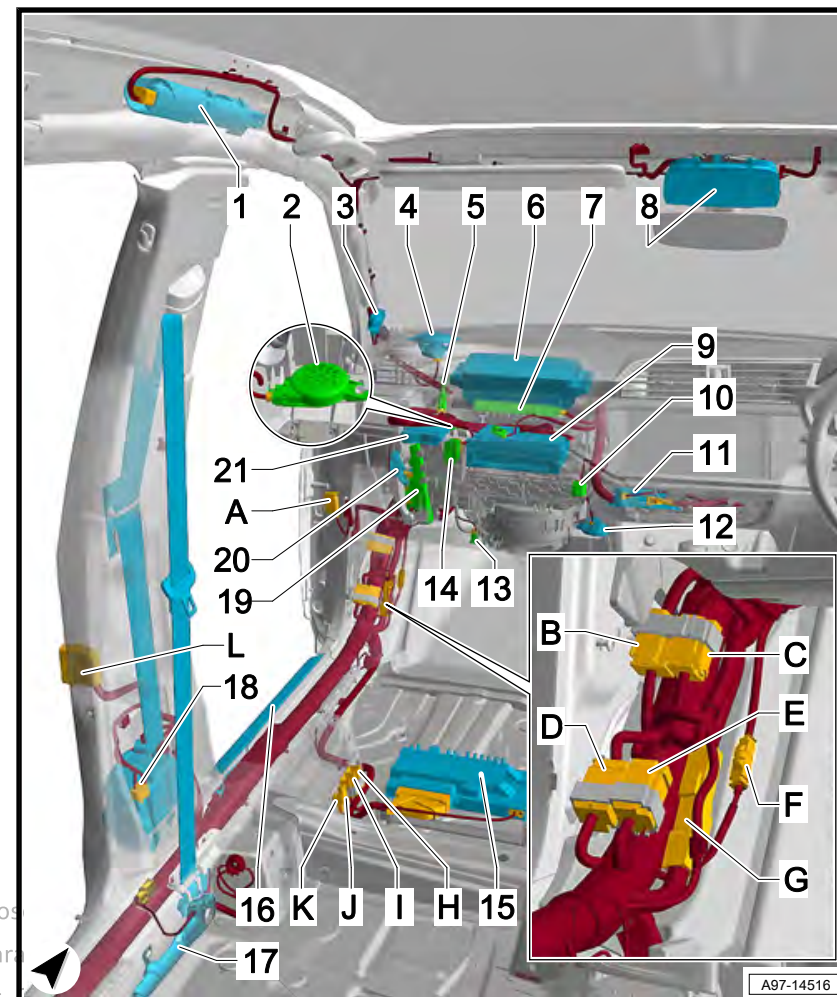

Protected by copyright. Copying for private or commercial purposes is permitted unless authorised by AUDI AG. AUDI AG does not guarantee with respect to the correctness of information in this document.

- 12 - Emergency call module loudspeaker -R335-
- 13 - Left footwell light -W9-
- 14 - Key operated switch to deactivate front passenger side airbag -E224-
- 15 - Digital sound package control unit -J525-
- 16 - Light for sill panel moulding ambient lighting, front passenger side -W103-
- 17 - Igniter for front passenger side seat belt tensioner 2 -N298-
- 18 - Front passenger side seat belt -NX18-
- 19 - Onboard supply control unit -J519-
- 20 - Glove compartment light switch -E26-
- 21 - Chip card reader control unit -J676-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.1.3 Left footwell, LHD models




Note

For left-hand drive models

- 1 - Light switch -E1-
- 2 - Left vent temperature sender -G150-
- 3 - Front parking aid warning buzzer -H22-
- 4 - Onboard supply control unit -J519-
- 5 - Parking aid control unit -J446-
- 6 - Data bus diagnostic interface -J533-
- 7 - Control unit for electronic steering column lock -J764-
- 8 - Control unit for cornering light and headlight range control -J745-
- 9 - Accelerator pedal module -GX2-
- 10 - Driver side knee airbag igniter -N295-
- 11 - Clutch position sender -G476-
- 12 - Left footwell light -W9-
- 13 - Diagnostic connection -U31-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized in writing by Audi AG. All rights reserved. with respect to the copyright.

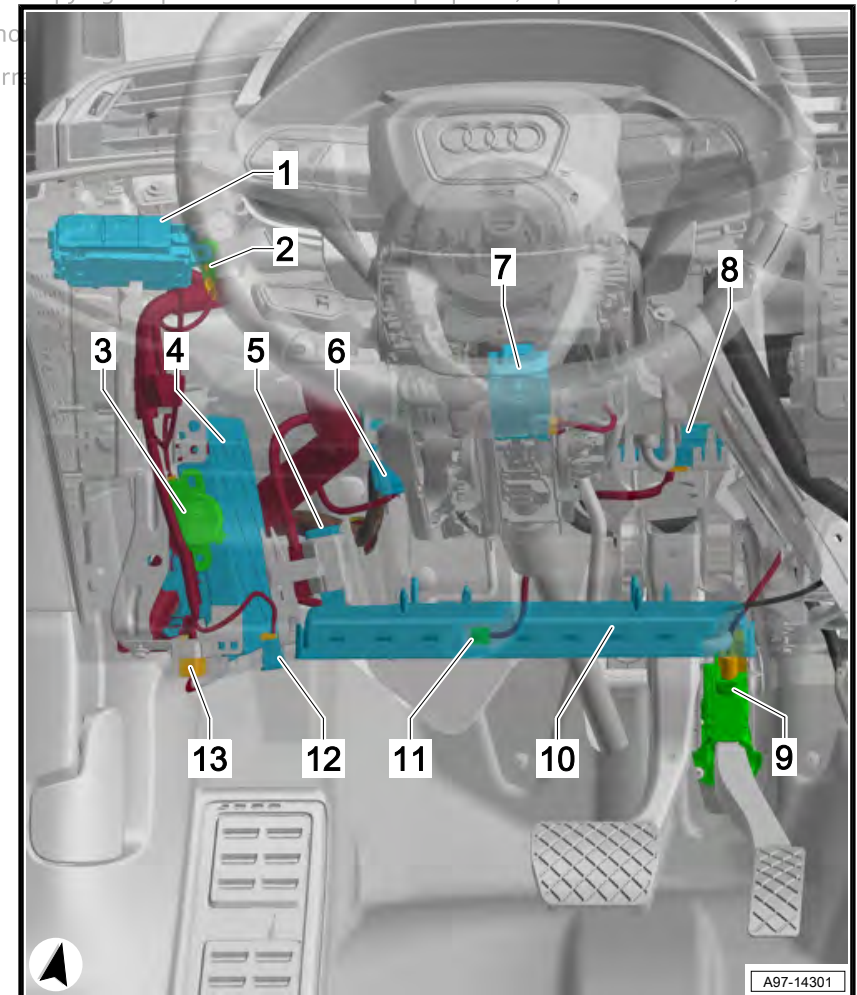

[Back to overview](#) ⇒ [page 1](#)

1.1.4 Right footwell, RHD models




Note

For right-hand drive models

- 1 - Light switch -E1-
- 2 - Right vent temperature sender -G151-
- 3 - Data bus diagnostic interface -J533-
- 4 - Control unit for cornering light and headlight range control -J745-
- 5 - Parking aid control unit -J446-
- 6 - Right footwell light -W10-
- 7 - Accelerator pedal module -GX2-
- 8 - Clutch position sender -G476-
- 9 - Entry and start authorisation control unit -J518-
- 10 - Control unit for electronic steering column lock -J764-



Protected by copyright. Copying for private or commercial purposes, in part or in full, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright

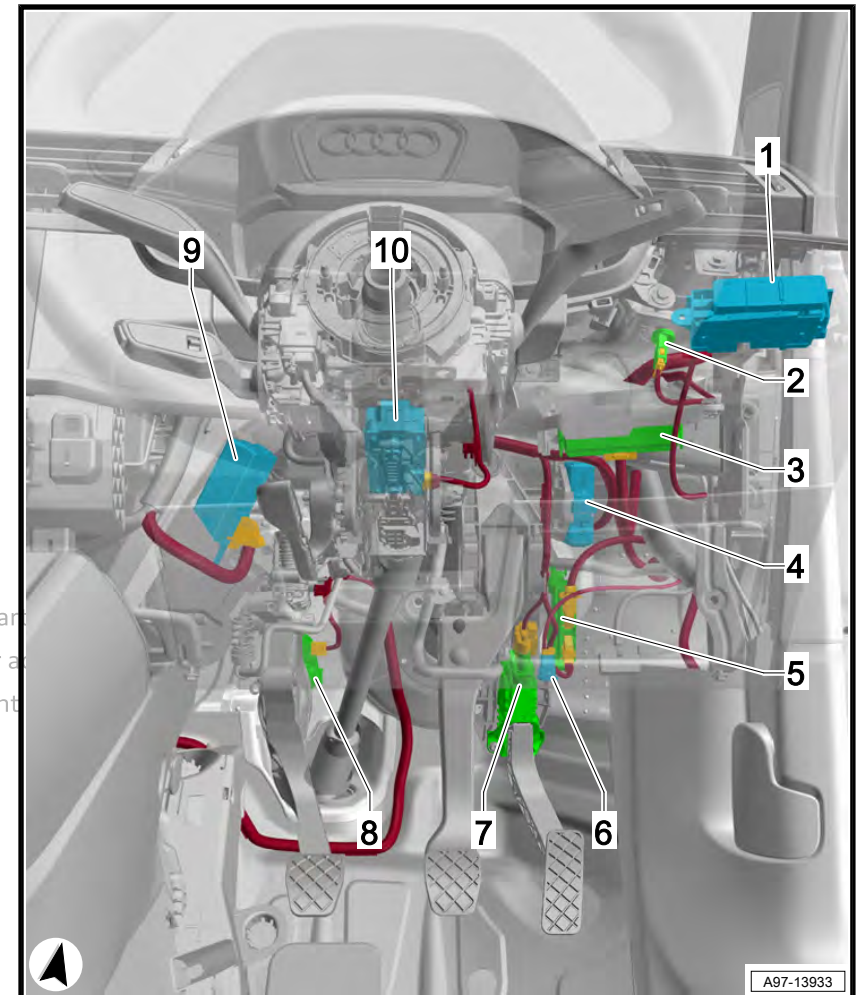

[Back to overview](#) ⇒ [page 1](#)

1.1.5 Front right of interior, LHD models



Note

For left-hand drive models

A - 17-pin connector -T17f-, black/
17-pin connector -T17fx-, black

- ❑ Fitting location for right-hand drive models ⇒ [item A \(page 24\)](#)

B - 17-pin connector -T17g-, brown/
17-pin connector -T17gx-, brown

- ❑ Fitting location for right-hand drive models ⇒ [item B \(page 24\)](#)

C - 17-pin connector -T17h-, red/
17-pin connector -T17hx-, red

- ❑ Fitting location for right-hand drive models ⇒ [item C \(page 24\)](#)

D - 28-pin connector -T28a-, black

- ❑ Fitting location for right-hand drive models ⇒ [item D \(page 24\)](#)

E - 27-pin connector -T27b-, black

- ❑ Fitting location for right-hand drive models ⇒ [item E \(page 24\)](#)

F - 17-pin connector -T17i-, red/
17-pin connector -T17ix-, red

- ❑ Fitting location for right-hand drive models ⇒ [item F \(page 24\)](#)

G - 6-pin connector -T6e-, green/
6-pin connector -T6ex-, green

- ❑ Fitting location for right-hand drive models ⇒ [item G \(page 24\)](#)


H - 3-pin connector -T3i-, yellow/
3-pin connector -T3ix-, yellow

- ❑ Fitting location for right-hand drive models ⇒ [item H \(page 24\)](#)

I - 6-pin connector -T6f-, black/
6-pin connector -T6fx-, black

- ❑ Fitting location for right-hand drive models ⇒ [item I \(page 24\)](#)

1 - Front passenger side airbag igniter 1 -N131-

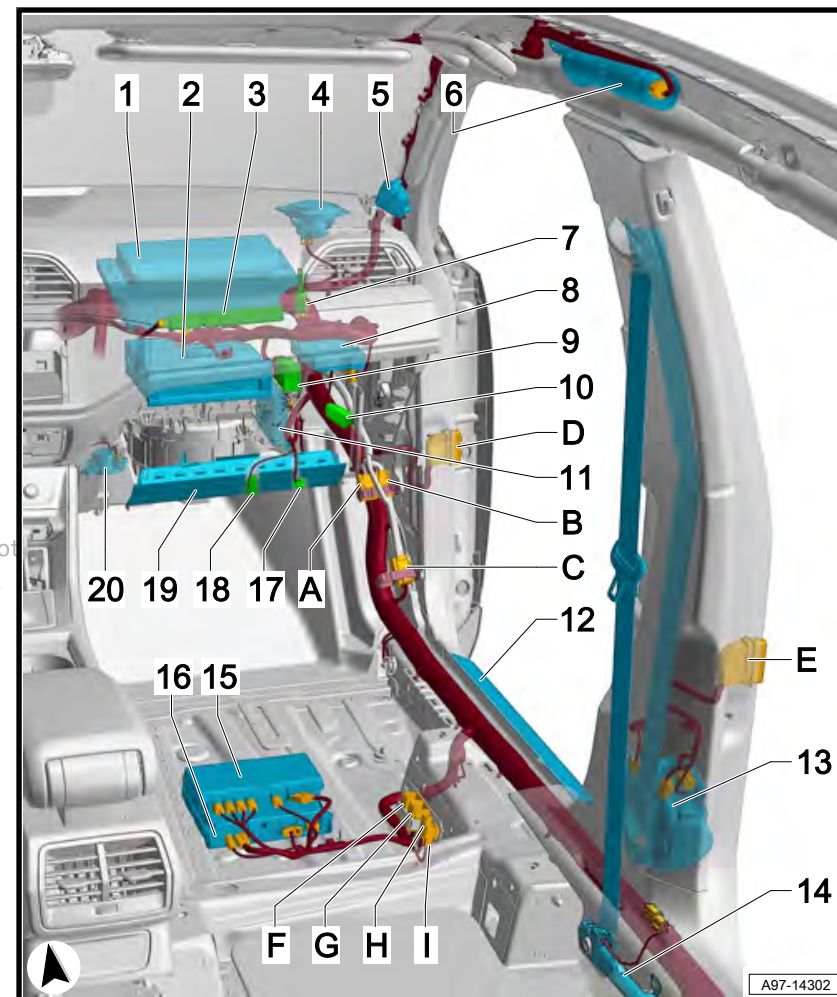

- 1 - Front passenger airbag unit -NX3-**
 - ☐ For models with US equipment only
- 2 - Control unit 1 for information electronics -J794-**
- 3 - LTE aerial 2 -R306-**
- 4 - Front right mid-range loudspeaker -R104-**
- 5 - Front right treble loudspeaker -R22-**
- 6 - Front passenger side curtain airbag igniter -N252-**
- 7 - Right vent temperature sender -G151-**
- 8 - Chip card reader control unit -J676-**
- 9 - Key operated switch to deactivate front passenger side airbag -E224-**
- 10 - Glove compartment light -W6-**
- 11 - Entry and start authorisation control unit -J518-**
- 12 - Light for sill panel moulding ambient lighting, front passenger side -W103-**
- 13 - Front passenger side seat belt -NX18-**
- 14 - Igniter for front passenger side seat belt tensioner 2 -N298-**
- 15 - Control unit for overhead view camera -J928-**
- 16 - TV tuner -R78-**
- 17 - Glove compartment light switch -E26-**
- 18 - Right footwell light -W10-**
- 19 - Front passenger side knee airbag igniter -N296-**
- 20 - Emergency call module loudspeaker -R335-**


[Back to overview](#) ⇒ [page 1](#)

1.1.6 Front right of interior, RHD models



Note

For right-hand drive models

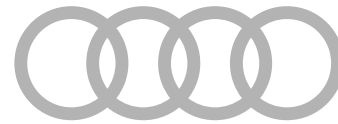

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

A - 17-pin connector -T17f- , black / 17-pin connector -T17fx- , black permitted unless authorised by Audi AG

B - 17-pin connector -T17g- , brown/ 17-pin connector -T17gx- , brown with respect to the correctness of

C - 17-pin connector -T17h- , red/ 17-pin connector -T17hx- , red

D - 28-pin connector -T28a- , black

E - 27-pin connector -T27b- , black

F - 17-pin connector -T17i- , red/ 17-pin connector -T17ix- , red

G - 6-pin connector -T6e- , green / 6-pin connector -T6ex- , green

H - 3-pin connector -T3i- , yellow/ 3-pin connector -T3ix- , yellow

I - 6-pin connector -T6f- , black/ 6-pin connector -T6fx- , black

1 - Front right mid-range loudspeaker -R104-

2 - Front right treble loudspeaker -R22-

3 - Driver side curtain airbag igniter -N251-

4 - Light for driver side sill panel moulding ambient lighting -W102-


5 - Diagnostic connection -U31-

6 - Driver's side seat belt -NX19-

7 - Igniter for driver side seat belt tensioner 2 -N297-

8 - TV tuner -R78-

9 - Control unit for overhead view camera -J928-

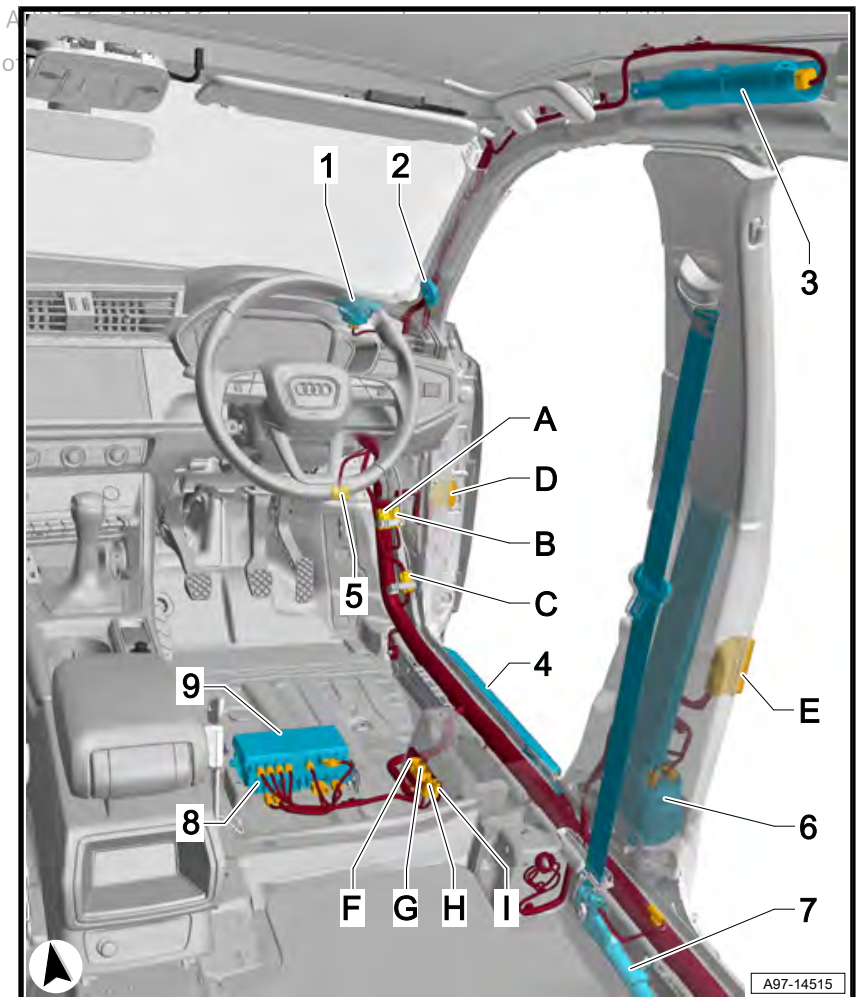

[Back to overview](#) ⇒ [page 1](#)

1.1.7 Dash panel, LHD models



Note

For left-hand drive models

1 - Control unit in dash panel insert -J285-

2 - Dedicated short-range communication aerial -R269-

3 - Centre loudspeaker -R208-

4 - Centre loudspeaker 2 -R219-

5 - Display unit for front information display and operating unit control unit -J685-

6 - Light 3 for dash panel contour lighting -L245-

7 - Heater and air conditioning controls -EX21-

8 - Driver side volume regulator -E67-


9 - Centre switch module in dash panel -EX22-

10 - USB hub -R293-

☐ According to equipment

10 - USB charging socket 2 -U38-

☐ According to equipment

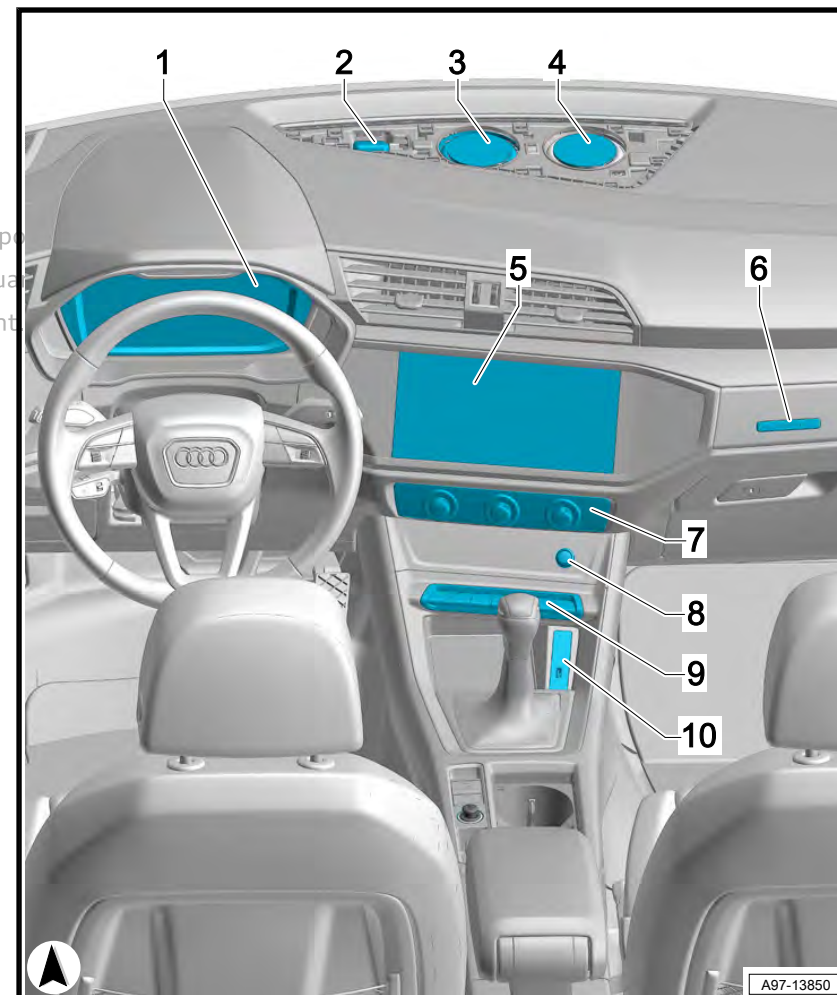

[Back to overview](#) ⇒ [page 1](#)

1.1.8 Dash panel, RHD models



Note

For right-hand drive models

1 - Display unit for front information display and operating unit control unit -J685-

2 - Entry and start authorisation button -E408-

3 - Centre switch module in dash panel -EX22-

4 - USB hub -R293-

☐ According to equipment
Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

4 - USB charging socket 2 -U38-

☐ According to equipment

5 - Driver side volume regulator -E67-

6 - Heater and air conditioning controls -EX21-


7 - Light 3 for dash panel contour lighting -L245-

8 - Centre loudspeaker 2 -R219-

9 - Centre loudspeaker -R208-

10 - Dedicated short-range communication aerial -R269-

11 - Control unit in dash panel insert -J285-

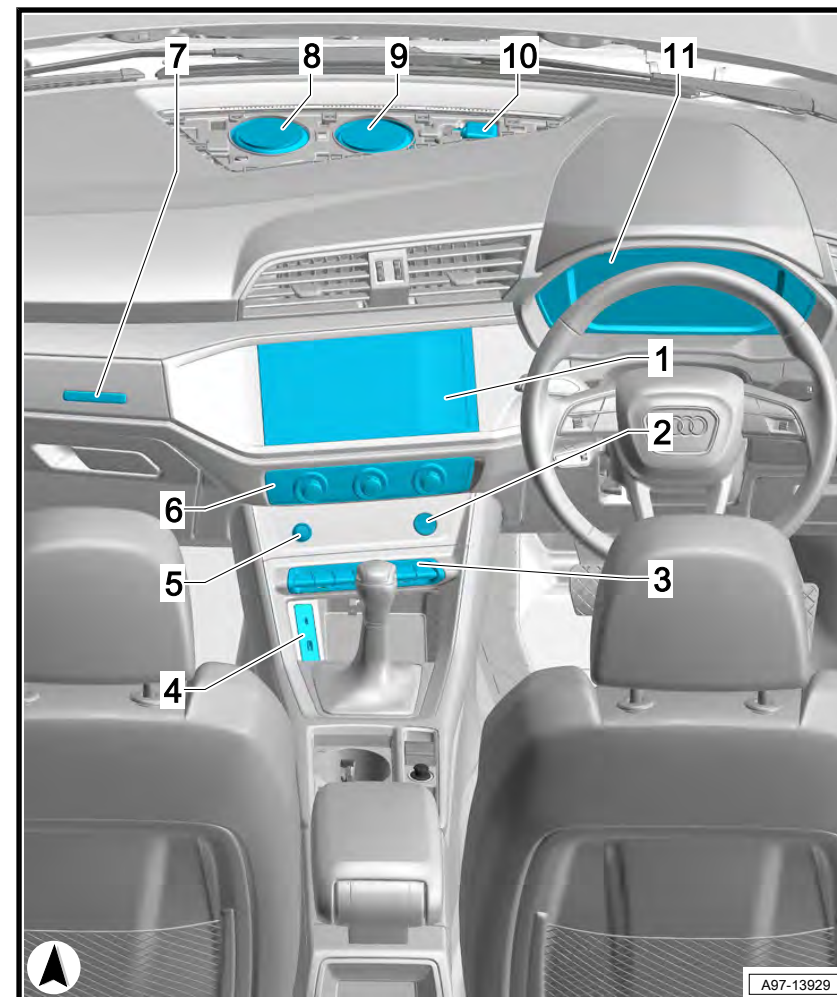

[back to overview](#)

1.1.9 Steering wheel, part 1

1 - Tiptronic switch to shift down -E480-

2 - Driver side airbag igniter -N95-

3 - Coil connector -F350-

4 - Heated steering wheel -Z36-

☐ for vehicles with heated steering wheel

☐ with heated steering wheel sender -G428-


5 - Tiptronic switch to shift up -E479-

6 - Multifunction buttons on right in steering wheel -E441-

☐ with integrated control unit for multifunction steering wheel -J453-

7 - Horn plate -H-


8 - Multifunction buttons on left in steering wheel -E440-

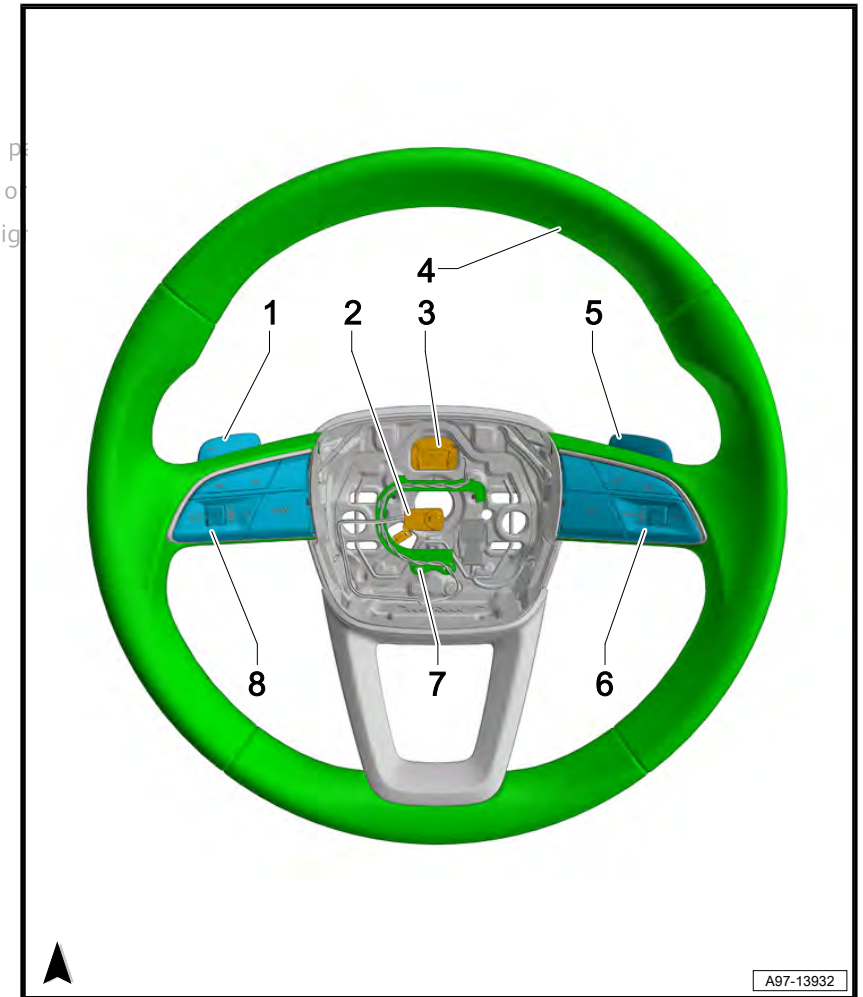

[Back to overview](#) ⇒ [page 1](#)

1.1.10 Steering wheel, part 2

A -
4-pin connector -T4ea- , black/ 4-pin connector -T4eax- , black

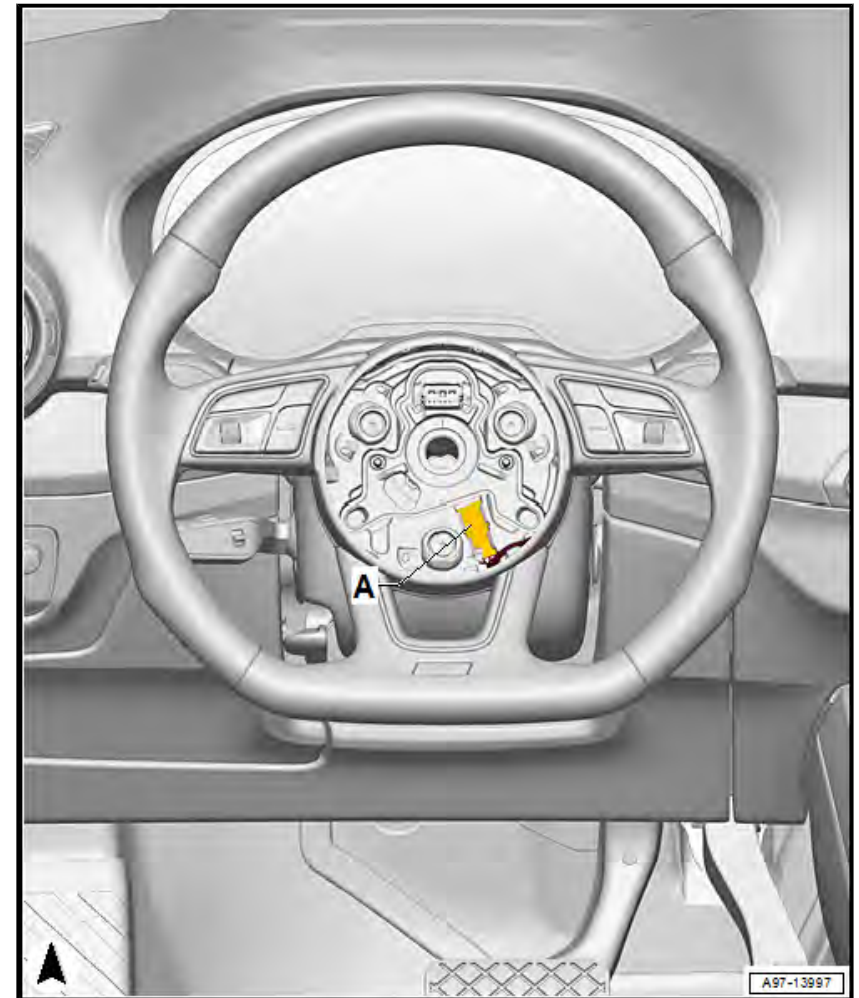

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


[Back to overview](#) ⇒ [page 1](#)

1.1.11 Steering column

- 1 - Steering column electronics control unit -J527-
- 2 - Immobiliser reader coil -D2-
- 2 - Ignition/starter switch -D-
- 3 - Ignition key withdrawal lock solenoid -N376-



Protected by copyright. Copying for
permitted unless authorised by AUDI
with respect to the correctness of in

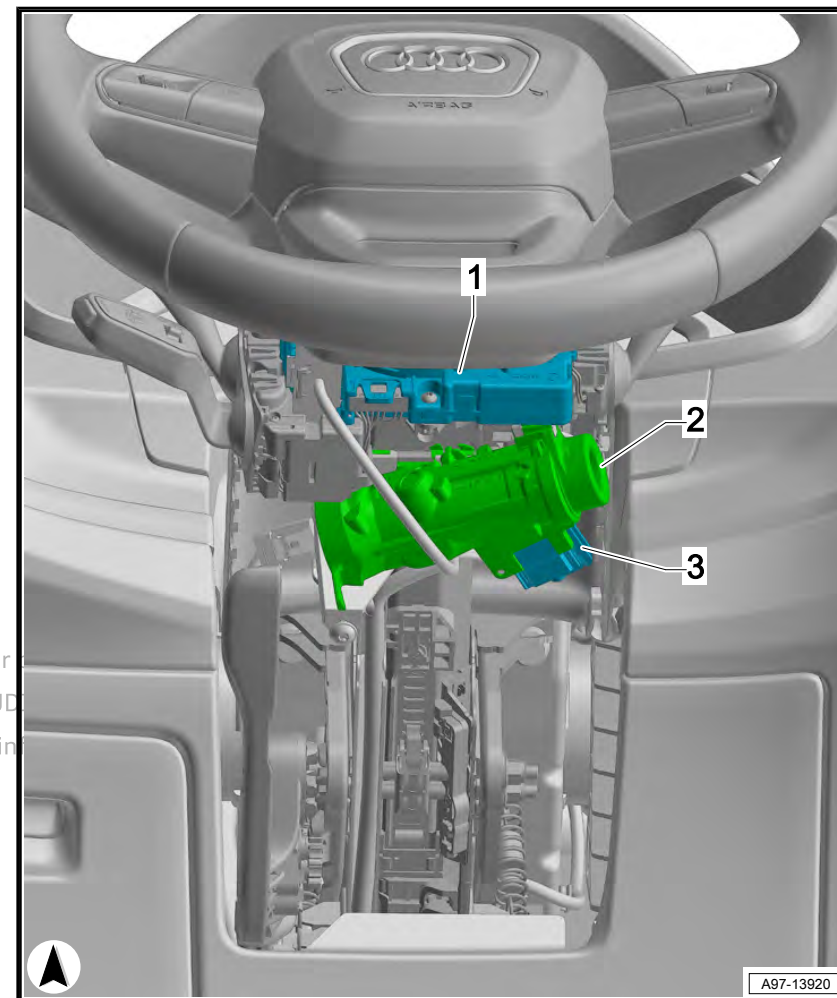

[Back to overview ⇒ page 1](#)

1.1.12 Centre console, LHD models




Note

For left-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Audi AG. This document is subject to change without notice. Audi AG is not responsible for the correctness of the information with respect to the correct fitting of the components.

- 1 - Entry and start authorisation button -E408-
- 2 - Light 3 for front centre console ambient lighting -L195-
- 3 - Light 2 for front centre console ambient lighting -L194-
 - ❑ For models with ambient lighting, version 1
- 3 - Light 1 for front centre console ambient lighting -L193-
 - ❑ For models with ambient lighting, version 2
- 4 - Interior aerial 1 for entry and start system -R138-
- 5 - Drink holder ambient lighting light -L232-
- 5 - Drink holder ambient lighting light 2 -L246-
- 6 - Aerial for in-vehicle communication -R364-
- 7 - USB charging socket 1 -U37-
- 8 - 12 V socket -U5-
- 9 - Potentiometer for rear temperature selection -G538-
- 10 - Cigarette lighter -U1-
- 11 - Parking brake button -EX12-
- 12 - Selector lever -E313-
 - ❑ with selector lever position display -Y26-
- 13 - Light 1 for front centre console ambient lighting -L193-
 - ❑ For models with ambient lighting, version 1
- 13 - Light 2 for front centre console ambient lighting -L194-
 - ❑ For models with ambient lighting, version 2
- 14 - Charger 1 for mobile devices -J1146-
- 15 - Airbag control unit -J234-

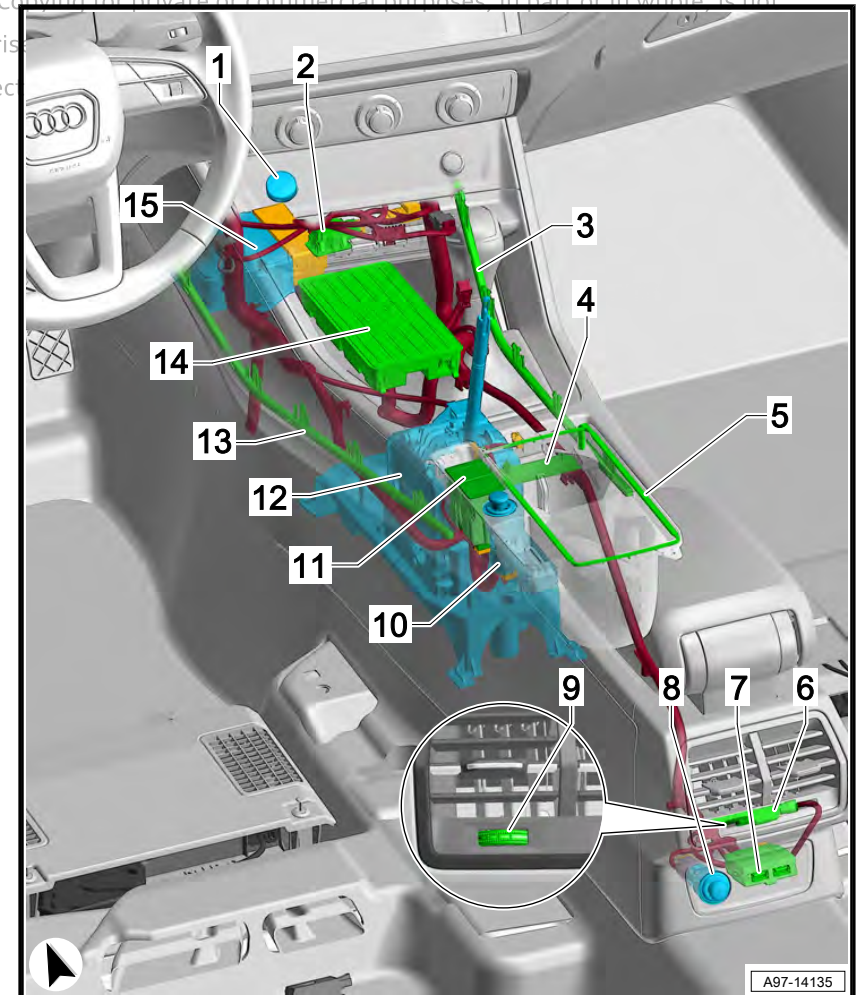

[Back to overview](#) ⇒ [page 1](#)

1.1.13 Centre console, RHD models




Note

For right-hand drive models

- 1 - Airbag control unit -J234-
- 2 - Light 2 for front centre console ambient lighting -L194-
 - ❑ For models with ambient lighting, version 1
- 2 - Light 1 for front centre console ambient lighting -L193-
 - ❑ For models with ambient lighting, version 2
- 3 - Charger 1 for mobile devices -J1146-
- 4 - Parking brake button -EX12-
- 5 - Selector lever -E313-
 - ❑ with selector lever position display -Y26-
- 6 - Cigarette lighter -U1-
- 7 - USB charging socket 1 -U37-
- 8 - Aerial for in-vehicle communication -R364-
- 9 - 12 V socket -U5-
- 10 - Drink holder ambient lighting light 2 -L246-
- 10 - Drink holder ambient lighting light -L232-
- 11 - Interior aerial 1 for entry and start system -R138-
- 12 - Light 1 for front centre console ambient lighting -L193-
 - ❑ For models with ambient lighting, version 1
- 12 - Light 2 for front centre console ambient lighting -L194-
 - ❑ For models with ambient lighting, version 2
- 13 - Light 3 for front centre console ambient lighting -L195-



Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. The copyright holder is not responsible for the correctness of information.

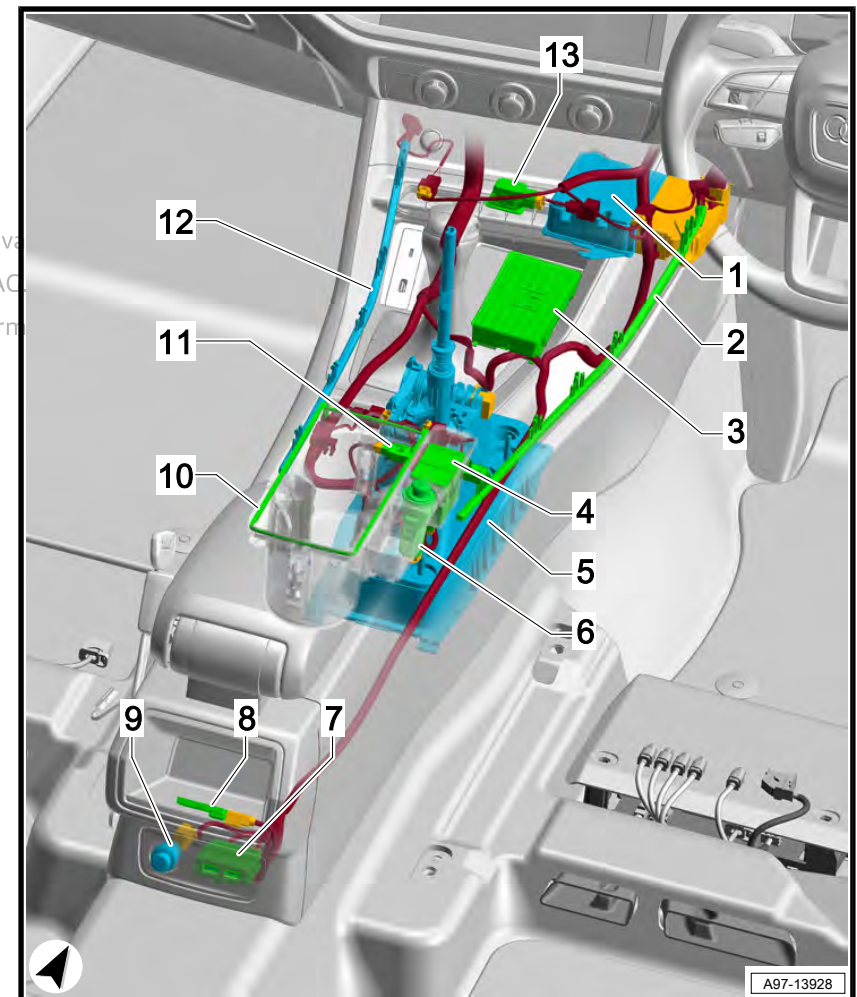

[Back to overview ⇒ page 1](#)

1.1.14 Left front seat

A - 2-pin connector -T2jo-, black/
2-pin connector -T2jox-, black

B - 12-pin connector -T12h-, black/
12-pin connector -T12hx-, black

1 - Driver seat longitudinal adjustment motor -V28-

☐ For left-hand drive models

1 - Front passenger seat longitudinal adjustment motor -V31-

☐ For right-hand drive models

2 - Driver side seat position sensor -G553-

☐ For left-hand drive models

2 - Front passenger side seat position sensor -G554-

☐ For right-hand drive models

3 - Heated seat, driver side -ZX15-

☐ For left-hand drive models

3 - Heated seat, front passenger side -ZX16-

☐ For right-hand drive models

3 - Heated seat extension, driver seat -Z37-

☐ For left-hand drive models

3 - Heated seat extension, front passenger seat -Z38-

☐ For right-hand drive models

4 - Driver side belt switch -E24-

☐ For left-hand drive models

4 - Front passenger side belt switch -E25-


☐ For right-hand drive models

5 - Driver seat backrest adjustment motor -V45-

☐ For left-hand drive models

5 - Front passenger seat backrest adjustment motor -V46-

☐ For right-hand drive models

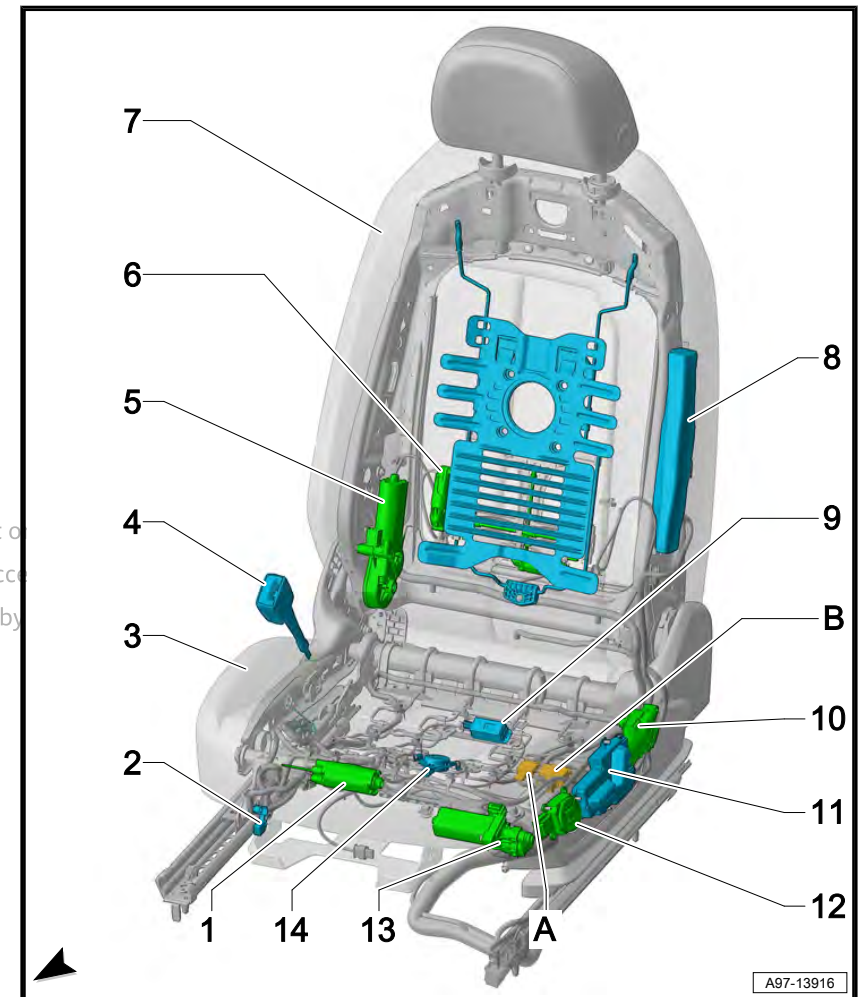

6 - Lumbar support for driver seat -VX2-

- ☐ For left-hand drive models

6 - Lumbar support for front passenger seat -VX3-

- ☐ For right-hand drive models

7 - Heated backrest for driver seat -Z7-

- ☐ For left-hand drive models

7 - Heated backrest for front passenger seat -Z9-

- ☐ For right-hand drive models

8 - Side airbag igniter on driver side -N199-

- ☐ For left-hand drive models

8 - Side airbag igniter on front passenger side -N200-

- ☐ For right-hand drive models

9 - Rear left footwell illumination bulb -L106-**10 - Driver seat height adjustment motor -V245-**

- ☐ For left-hand drive models

10 - Front passenger seat height adjustment motor -V246-

- ☐ For right-hand drive models

11 - Driver seat adjustment operating unit -E470-

- ☐ For left-hand drive models

11 - Front passenger seat adjustment operating unit -E471-

- ☐ For right-hand drive models

12 - Driver seat lumbar support adjustment switch -E176-

- ☐ For left-hand drive models

12 - Front passenger seat lumbar support adjustment switch -E177-

- ☐ For right-hand drive models

13 - Driver seat rake adjustment motor -V243-

- ☐ For left-hand drive models

13 - Front passenger seat rake adjustment motor -V244-

- ☐ For right-hand drive models

14 - Seat occupied sensor, front passenger side -G128-

- ☐ For right-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.1.15 Right front seat

A - 2-pin connector -T2jp-, black/
2-pin connector -T2jpx-, black

B - 12-pin connector -T12i-, black/
12-pin connector -T12ix-, black

1 - Side airbag igniter on front passenger side -N200-

☐ For left-hand drive models

1 - Side airbag igniter on driver side -N199-

☐ For right-hand drive models

2 - Lumbar support for front passenger seat -VX3-

☐ For left-hand drive models

2 - Lumbar support for driver seat -VX2-

☐ For right-hand drive models

3 - Heated backrest for front passenger seat -Z9-

☐ For left-hand drive models

3 - Heated backrest for driver seat -Z7-

☐ For right-hand drive models

4 - Front passenger seat backrest adjustment motor -V46-

☐ For left-hand drive models

4 - Driver seat backrest adjustment motor -V45-

☐ For right-hand drive models

5 - Front passenger side belt switch -E25-

☐ For left-hand drive models

5 - Driver side belt switch -E24-

☐ For right-hand drive models

6 - Front passenger side seat position sensor -G554-


☐ For left-hand drive models

6 - Driver side seat position sensor -G553-

☐ For right-hand drive models



Protected by copyright. Copying is not permitted unless authorised by Audi AG with respect to the correct use of the information.

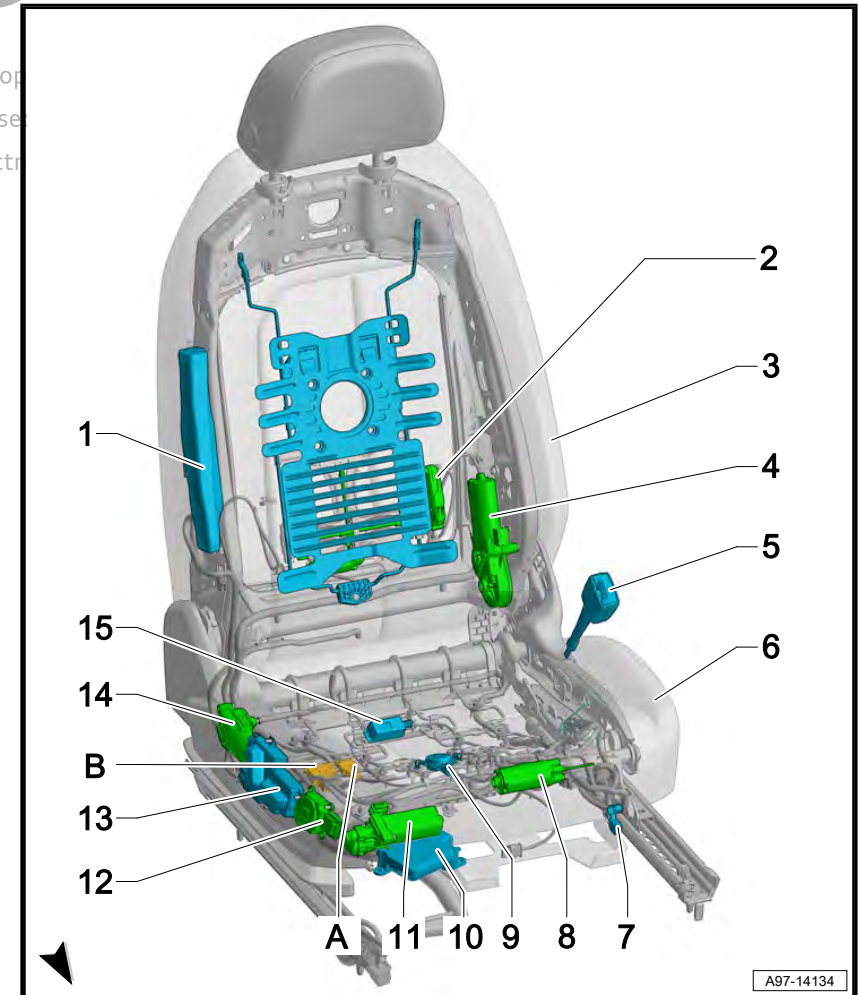

6 - Heated seat extension, front passenger seat -Z38-

- ☐ For left-hand drive models

6 - Heated seat extension, driver seat -Z37-

- ☐ For right-hand drive models

7 - Heated seat, front passenger side -ZX16-

- ☐ For left-hand drive models

7 - Heated seat, driver side -ZX15-

- ☐ For right-hand drive models

8 - Front passenger seat longitudinal adjustment motor -V31-

- ☐ For left-hand drive models

8 - Driver seat longitudinal adjustment motor -V28-

- ☐ For right-hand drive models

9 - Seat occupied sensor, front passenger side -G128-

- ☐ For left-hand drive models

10 - Seat occupied recognition control unit -J706-

- ☐ For models with US equipment only

11 - Front passenger seat rake adjustment motor -V244-

- ☐ For left-hand drive models

11 - Driver seat rake adjustment motor -V243-

- ☐ For right-hand drive models

12 - Front passenger seat lumbar support adjustment switch -E177-

- ☐ For left-hand drive models

12 - Driver seat lumbar support adjustment switch -E176-

- ☐ For right-hand drive models

13 - Front passenger seat adjustment operating unit -E471-

- ☐ For left-hand drive models

13 - Driver seat adjustment operating unit -E470-

- ☐ For right-hand drive models

14 - Front passenger seat height adjustment motor -V246-

- ☐ For left-hand drive models

14 - Driver seat height adjustment motor -V245-

- ☐ For right-hand drive models

15 - Rear right footwell illumination bulb -L107-

Back to overview ⇒ [page 1](#)

1.2 Rear interior

◆ ⇒ [“1.2.1 Rear interior, view from left”, page 37](#)

◆ ⇒ [“1.2.2 Rear interior, view from right”, page 39](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.2.1 Rear interior, view from left

A - 3-pin connector -T3f- , yellow/
3-pin connector -T3fx- , yellow

B - 2-pin connector -T2z- , black/
2-pin connector -T2zx- , black

C - 2-pin connector -T2aa- , green/
2-pin connector -T2aax- , green

1 - Rear belt tensioner igniter on front passenger side -N197-

☐ For left-hand drive models

1 - Rear belt tensioner igniter on driver side -N196-

☐ For right-hand drive models

2 - Rear side airbag igniter on front passenger side -N202-

☐ For left-hand drive models

2 - Rear side airbag igniter on driver side -N201-

☐ For right-hand drive models

3 - Rear left shock absorber damping adjustment valve -N338-

4 - Rear left speed sensor -G46-

5 - Left parking brake motor -V282-

6 - Rear left brake pad wear sender -G36-

7 - Interior aerial 2 for entry and start system -R139-

8 - Driver's side rear belt switch -E258-

☐ For left-hand drive models

8 - Passenger side rear belt switch -E259-

☐ For right-hand drive models

9 - Rear centre belt switch -E609-

10 - Passenger side rear belt switch -E259-

☐ For left-hand drive models

10 - Driver's side rear belt switch -E258-


☐ For right-hand drive models

11 - Rear seat occupied sensor, driver side -G177-

☐ For left-hand drive models



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

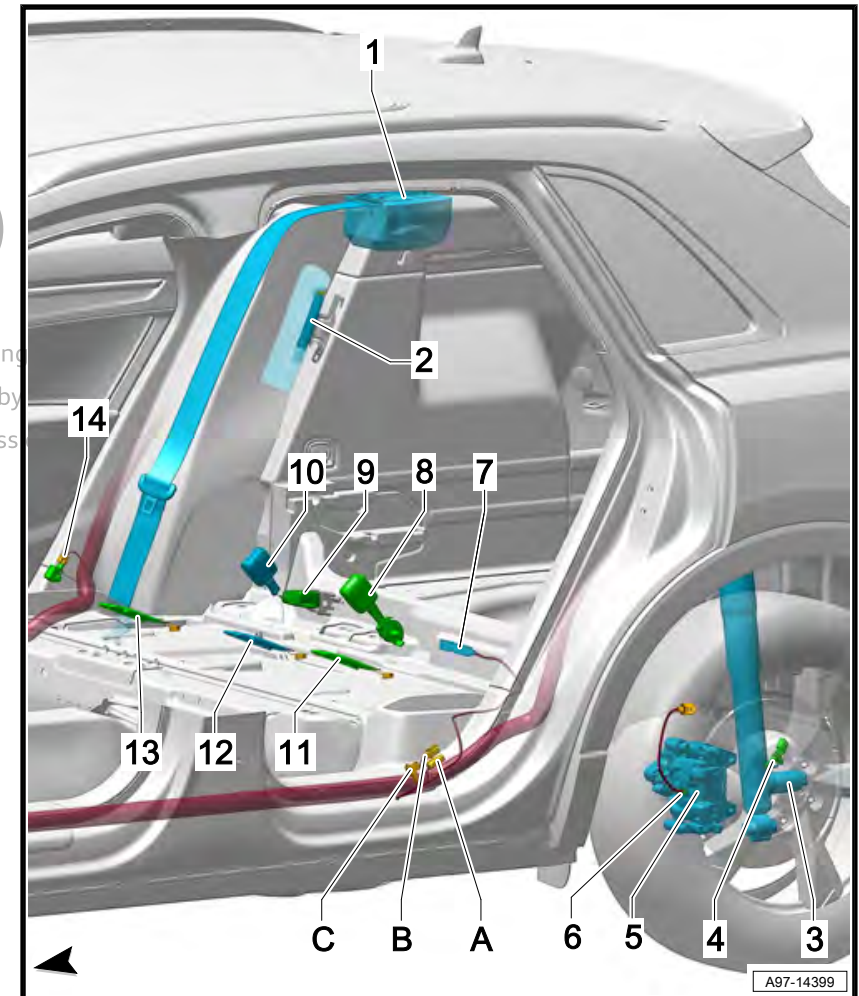

11 - Rear seat occupied sensor, passenger side -G178-

- ☐ For right-hand drive models

12 - Rear centre seat occupied sensor -G1010-**13 - Rear seat occupied sensor, passenger side -G178-**

- ☐ For left-hand drive models

13 - Rear seat occupied sensor, driver side -G177-

- ☐ For right-hand drive models

14 - Rear side airbag crash sensor on front passenger side -G257-

- ☐ For left-hand drive models

14 - Rear side airbag crash sensor on driver side -G256-

- ☐ For right-hand drive models

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.2.2 Rear interior, view from right

A - 6-pin connector -T6d- , black/
6-pin connector -T6dx- , black

☐ For models with all-wheel drive

B - 2-pin connector -T2iu- , black/
2-pin connector -T2iux- , black

C - 3-pin connector -T3da- , yellow/
3-pin connector -T3dax- , yellow

1 - Rear belt tensioner igniter on driver side -N196-

☐ For left-hand drive models

1 - Rear belt tensioner igniter on front passenger side -N197-

☐ For right-hand drive models

2 - Rear side airbag igniter on front passenger side -N202-

☐ For right-hand drive models

2 - Rear side airbag igniter on driver side -N201-

☐ For left-hand drive models

3 - Rear side airbag crash sensor on driver side -G256-

☐ For left-hand drive models

3 - Rear side airbag crash sensor on front passenger side -G257-

☐ For right-hand drive models

4 - Fuel level sender 2 -G169-

☐ For models with all-wheel drive

5 - Fuel pump control unit -J538-

☐ For models with front-wheel drive

6 - Fuel delivery unit -GX1-

☐ For models with front-wheel drive


7 - Fuel pump control unit -J538-

☐ For models with all-wheel drive

☐ Not for models with 2.5l petrol engine

8 - Fuel delivery unit -GX1-

☐ For models with all-wheel drive

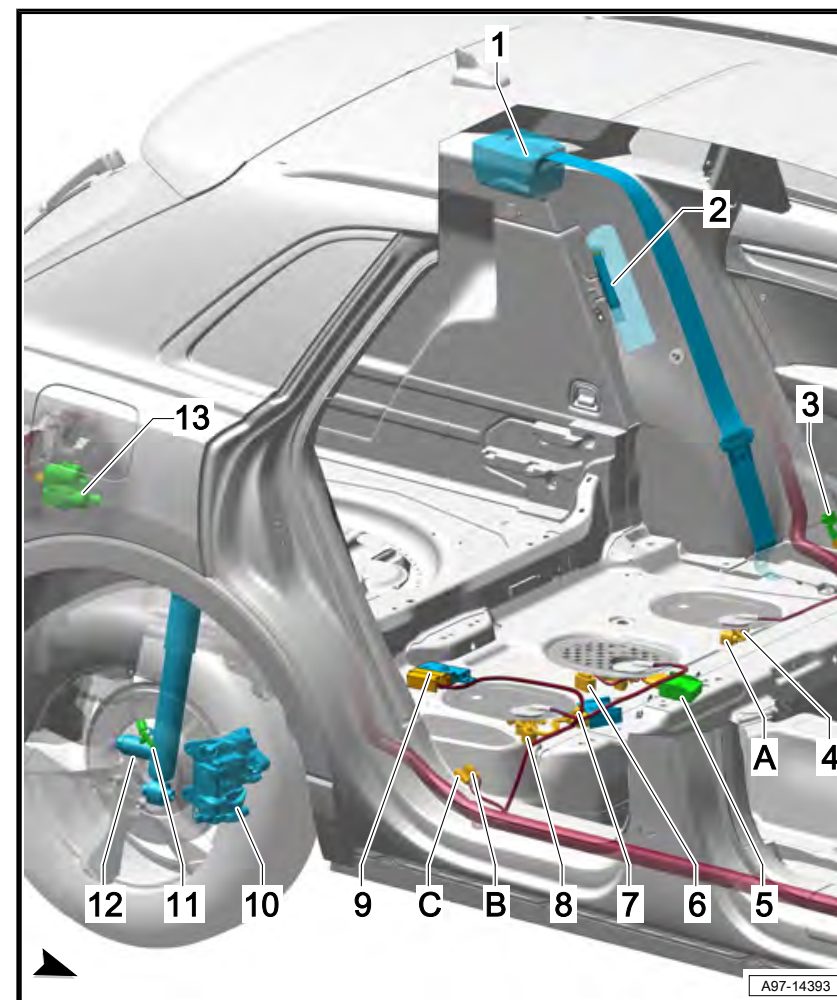

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

9 - Fuel pump control unit -J538-

- ☐ For models with 2.5l petrol engine
- ☐ For models with all-wheel drive

10 - Right parking brake motor -V283-**11 - Rear right speed sensor -G44-****12 - Rear right shock absorber damping adjustment valve -N339-****13 - Fuel tank leak detection module -GX36-**

Back to overview ⇒ [page 1](#)

1.3 Roof

- ◆ ⇒ ["1.3.1 Roof, part 1", page 41](#)
- ◆ ⇒ ["1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA", page 43](#)
- ◆ ⇒ ["1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FU", page 44](#)
- ◆ ⇒ ["1.3.4 Roof, part 2, with sliding/tilting sunroof, 3FB", page 45](#)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.3.1 Roof, part 1

- 1 - Rain and light sensor -G397-
- 2 - Windscreen heater for front sensors -Z113-
- 3 - Front passenger side vanity mirror contact switch -F148-
 - ☐ For left-hand drive models
- 3 - Driver side vanity mirror contact switch -F147-
 - ☐ For right-hand drive models
- 4 - Front passenger side illuminated vanity mirror -W14-
 - ☐ For left-hand drive models
- 4 - Driver side illuminated vanity mirror -W20-
 - ☐ For right-hand drive models
- 5 - Telephone microphone -R38-
 - ☐ with integrated front roof module -WX3-
 - ☐ For right-hand drive models
- 5 - Microphone for emergency call module -R321-
 - ☐ with integrated front roof module -WX3-
 - ☐ For models with equipment for Russia
- 5 - Front right microphone -R141-
 - ☐ with integrated front roof module -WX3-
 - ☐ According to equipment
 - ☐ From July 2019
- 6 - Anti-theft alarm sensor -G578-
- 7 - Telephone microphone -R38-
 - ☐ with integrated front roof module -WX3-
 - ☐ According to equipment
 - ☐ From July 2019
- 7 - Left front microphone -R140-
 - ☐ with integrated front roof module -WX3-
 - ☐ For left-hand drive models
- 8 - Internal microphone -R74-
 - ☐ with integrated front roof module -WX3-



Protected by copyright. Copying for private or permitted unless authorised by AUDI AG. AUD with respect to the correctness of information

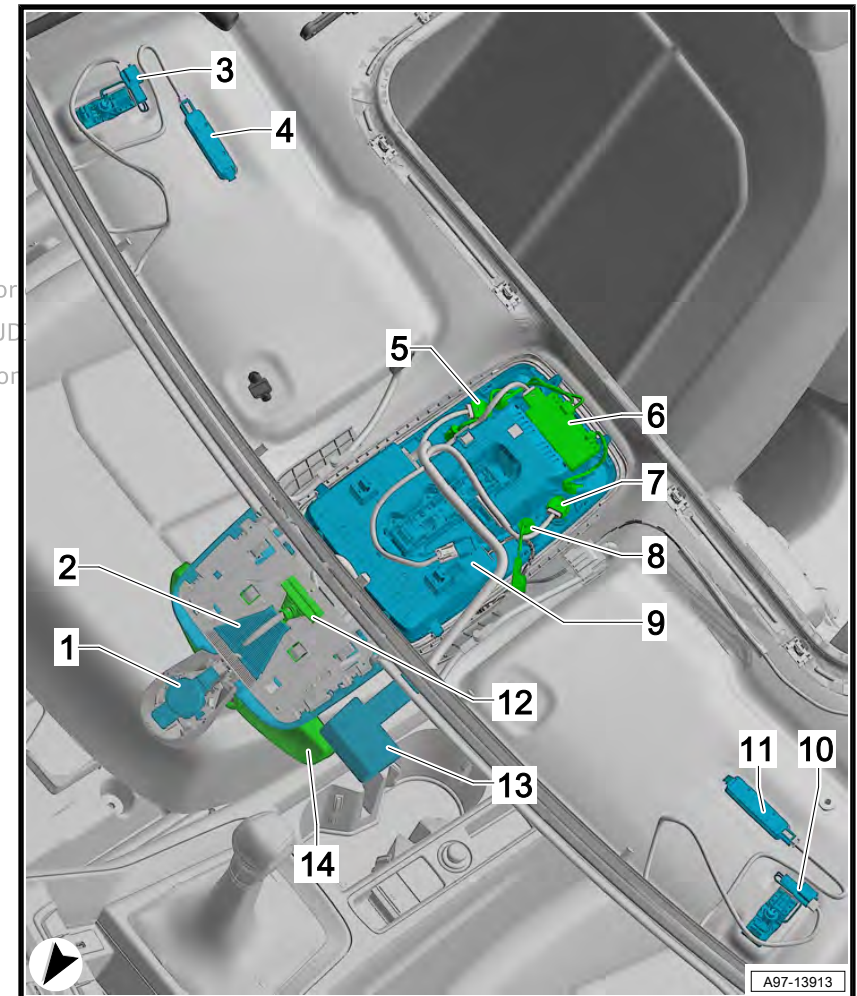

9 - Front roof module -WX3-

10 - Driver side vanity mirror contact switch -F147-

- ☐ For left-hand drive models

10 - Front passenger side vanity mirror contact switch -F148-

- ☐ For right-hand drive models

11 - Driver side illuminated vanity mirror -W20-

- ☐ For left-hand drive models

11 - Front passenger side illuminated vanity mirror -W14-

- ☐ For right-hand drive models

12 - Front camera for driver assist systems -R242-

13 - Traffic data aerial -R173-

14 - Interior mirror -EX5-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview](#) ⇒ [page 1](#)

1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA



Note


For models with no sliding/tilting sunroof

1 - Rear interior light -WX2-

2 - Roof aerial -R216-



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

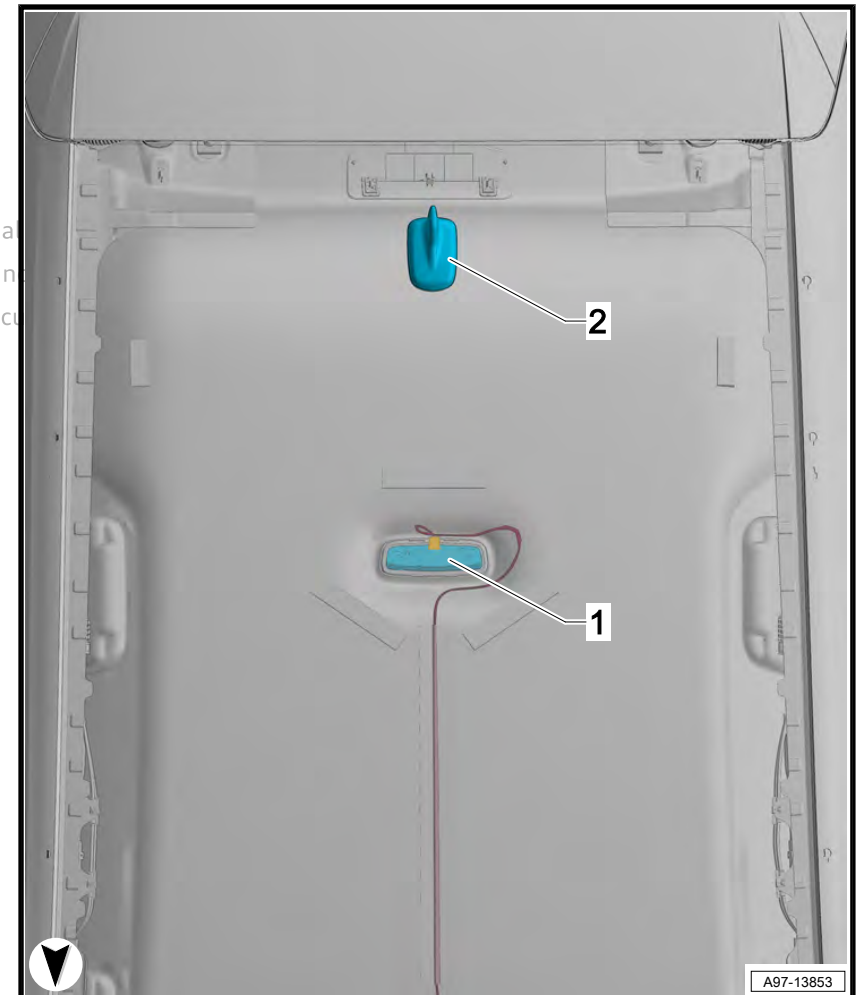

[Back to overview](#) ⇒ [page 1](#)

1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FU




Note

For models with sliding/tilting sunroof

- 1 - Sunroof roller blind motor -V260-
- 2 - Sliding sunroof motor -V1-
- 3 - Sliding sunroof adjustment control unit -J245-
- 4 - Sunroof button -E325-



Protected by copyright. Copying is not permitted unless authorised by Audi AG with respect to the correctness of the information.

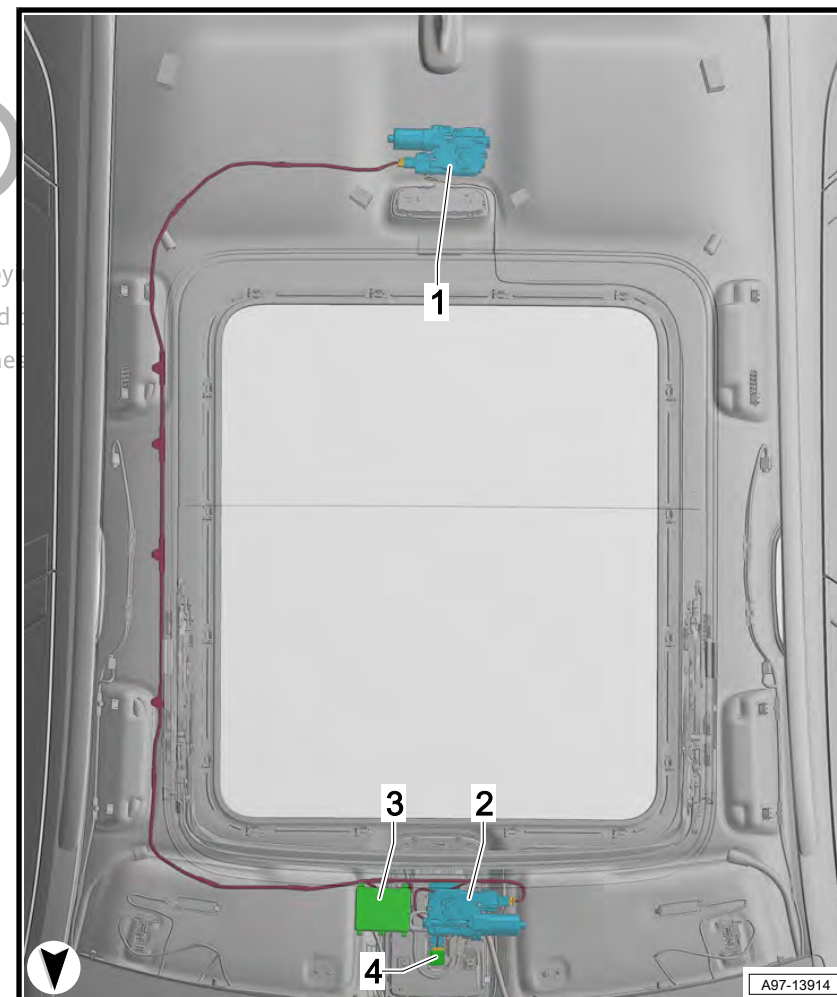

1.3.4 Roof, part 2, with sliding/tilting sunroof, 3FB



Note

For models with sliding/tilting sunroof

- 1 - Sliding sunroof motor -V1-
- 2 - Sunroof button -E325-
- 3 - Sliding sunroof adjustment control unit -J245-
- 4 - Sunroof roller blind motor -V260-



Back to overview ⇒ [page 1](#)

1.4 Doors

- ◆ ⇒ ["1.4.1 Driver door, left-hand drive models", page 46](#)
- ◆ ⇒ ["1.4.2 Driver door, right-hand drive models", page 48](#)
- ◆ ⇒ ["1.4.3 Front passenger door, left-hand drive models", page 50](#)
- ◆ ⇒ ["1.4.4 Front passenger door, right-hand drive models", page 52](#)
- ◆ ⇒ ["1.4.5 Rear left door", page 54](#)
- ◆ ⇒ ["1.4.6 Rear right door", page 56](#)

1.4.1 Driver door, left-hand drive models



Note

For left-hand drive models

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

**A - 5-pin connector -T5an-, black/
5-pin connector -T5anx-, black**

- ☐ For models with background lighting
- ☐ Fitting location for right-hand drive models ⇒ [item A \(page 52\)](#)

B - 28-pin connector -T28bx-, black

- ☐ Fitting location for right-hand drive models ⇒ [item B \(page 52\)](#)

1 - Light for front left door contour lighting -L251-

2 - Driver door lock unit -VX21-

3 - Driver door exterior handle contact sensor -G415-

4 - Operating unit for driver door window regulator -EX36-

5 - Side airbag crash sensor on driver side -G179-

6 - Light for driver door ambient lighting -W86-

- ☐ For models with ambient lighting, version 1

6 - Light 1 for front left door background lighting -L199-

- ☐ For models with ambient lighting, version 2

7 - Light for driver side interior door handle illumination -L219-

8 - Driver side interior locking button for central locking system -E308-

9 - Driver side exterior mirror -VX4-

- ☐ with lane change assist warning lamp in driver side exterior mirror -K233-

10 - Central locking SAFELOCK function warning lamp -K133-

11 - Driver side window regulator motor -V147-

12 - Driver door control unit -J386-

13 - Front left bass loudspeaker -R21-


14 - Rear lid remote release button -E233-

15 - Left overhead view camera -R244-

16 - Driver side entry light -W92-

17 - Exterior mirror adjuster -EX11-

18 - Light 2 for driver door ambient lighting -W97-

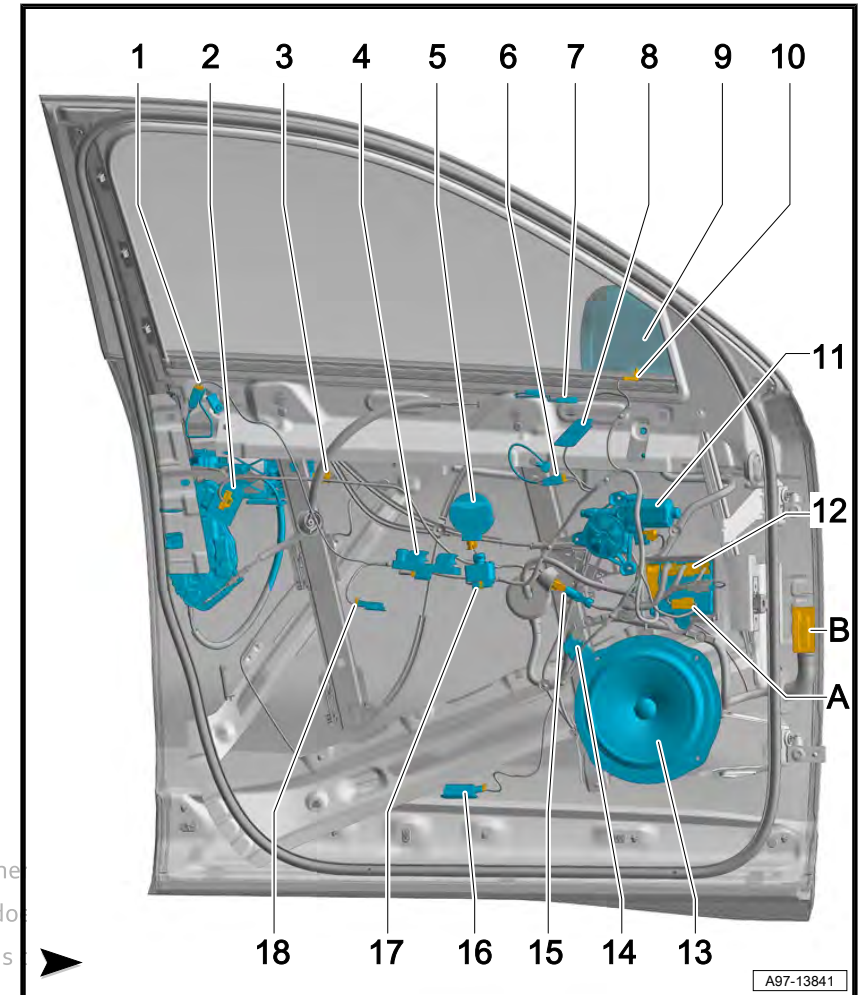

Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

[Back to overview ⇒ page 1](#)

1.4.2 Driver door, right-hand drive models



Note

For right-hand drive models

A - 28-pin connector -T28ax-, black

B - 5-pin connector -T5ar-, black/ 5-pin connector -T5arx-, black

□ For models with background lighting

1 - Driver door control unit -J386-

2 - Driver side window regulator motor -V147-

3 - Central locking SAFELOCK function warning lamp -K133-

4 - Driver side exterior mirror -VX4-

□ with lane change assist warning lamp in driver side exterior mirror -K233-

5 - Light for driver side interior door handle illumination -L219-

6 - Driver side interior locking button for central locking system -E308-

7 - Light for driver door ambient lighting -W86-

□ For models with ambient lighting, version 1

7 - Light 1 for front right door background lighting -L200-

□ For models with ambient lighting, version 2

8 - Side airbag crash sensor on driver side -G179-

9 - Driver door exterior handle contact sensor -G415-

10 - Light for front right door contour lighting -L252-

11 - Driver door lock unit -VX21-


12 - Light 2 for driver door ambient lighting -W97-

13 - Operating unit for driver door window regulator -EX36-

14 - Exterior mirror adjuster -EX11-

15 - Driver side entry light -W92-

16 - Right overhead view camera -R245-

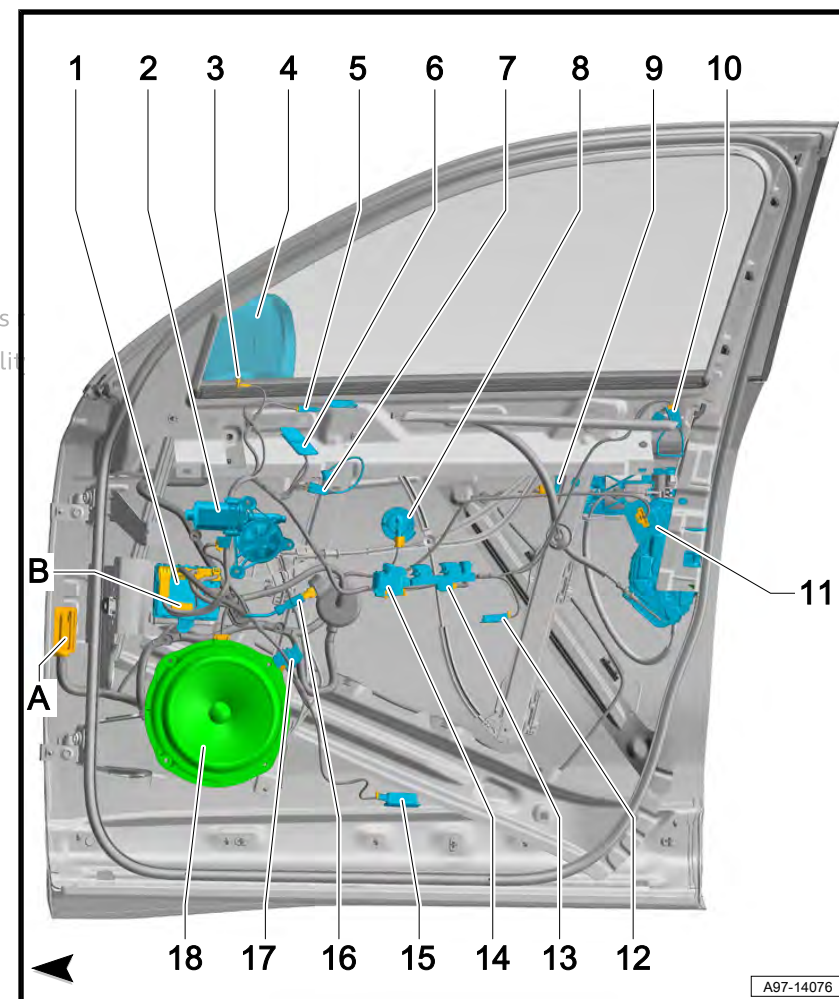

17 - Rear lid remote release button -E233-

18 - Front right bass loudspeaker -R23-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.4.3 Front passenger door, left-hand drive models



Note

For left-hand drive models

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 28-pin connector -T28ax- , black

- ☐ Fitting location for right-hand drive models ⇒ [item A \(page 48\)](#)

**B - 5-pin connector -T5ar- , black/
5-pin connector -T5arx- , black**

- ☐ For models with background lighting
- ☐ Fitting location for right-hand drive models ⇒ [item B \(page 48\)](#)

1 - Front passenger door control unit -J387-

2 - Front passenger side window regulator motor -V148-

3 - Passenger side exterior mirror -VX5-

- ☐ with lane change assist warning lamp in passenger side exterior mirror -K234-

4 - Light for front passenger side interior door handle illumination -L220-

5 - Front passenger side interior locking button for central locking system -E309-

6 - Light for passenger door ambient lighting -W87-

- ☐ For models with ambient lighting, version 1

6 - Light 1 for front right door background lighting -L200-

- ☐ For models with ambient lighting, version 2

7 - Side airbag crash sensor on front passenger side -G180-

8 - Front passenger door exterior handle contact sensor -G416-

9 - Light for front right door contour lighting -L252-


10 - Front passenger door lock unit -VX22-

11 - Light 2 for front passenger door ambient lighting -W98-

12 - Front passenger side entry light -W93-

13 - Window regulator switch in front passenger door -EX27-

14 - Right overhead view camera -R245-

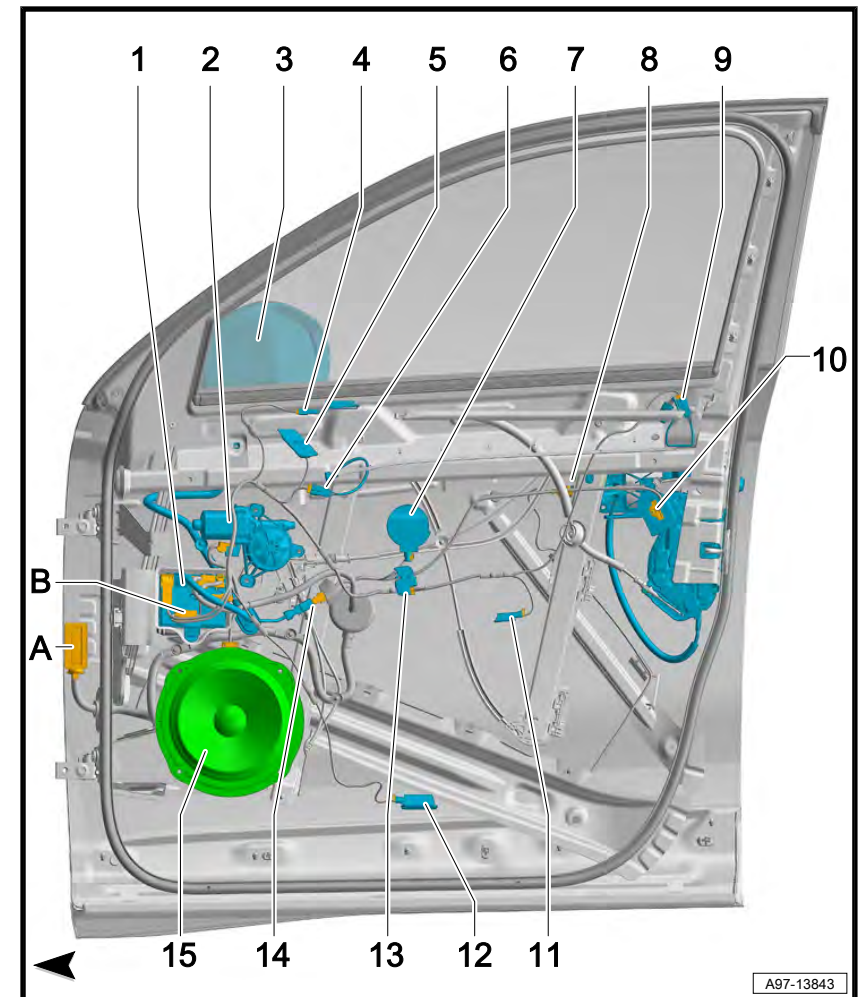

15 - Front right bass loudspeaker -R23-

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.4.4 Front passenger door, right-hand drive models



Note

For right-hand drive models

A - 5-pin connector -T5an- , black/ 5-pin connector -T5anx- , black

☐ For models with background lighting

B - 28-pin connector -T28bx- , black

1 - Light for front left door contour lighting -L251-

2 - Front passenger door lock unit -VX22-

3 - Front passenger door exterior handle contact sensor -G416-

4 - Window regulator switch in front passenger door -EX27-

5 - Side airbag crash sensor on front passenger side -G180-

6 - Light for passenger door ambient lighting -W87-

☐ For models with ambient lighting, version 1

6 - Light 1 for front left door background lighting -L199-

☐ For models with ambient lighting, version 2

7 - Light for front passenger side interior door handle illumination -L220-

8 - Front passenger side interior locking button for central locking system -E309-

9 - Passenger side exterior mirror -VX5-

☐ with lane change assist warning lamp in passenger side exterior mirror -K234-

10 - not assigned

11 - Front passenger side window regulator motor -V148-


12 - Front passenger door control unit -J387-

13 - Front left bass loudspeaker -R21-

14 - not assigned

15 - Left overhead view camera -R244-

16 - Front passenger side entry light -W93-

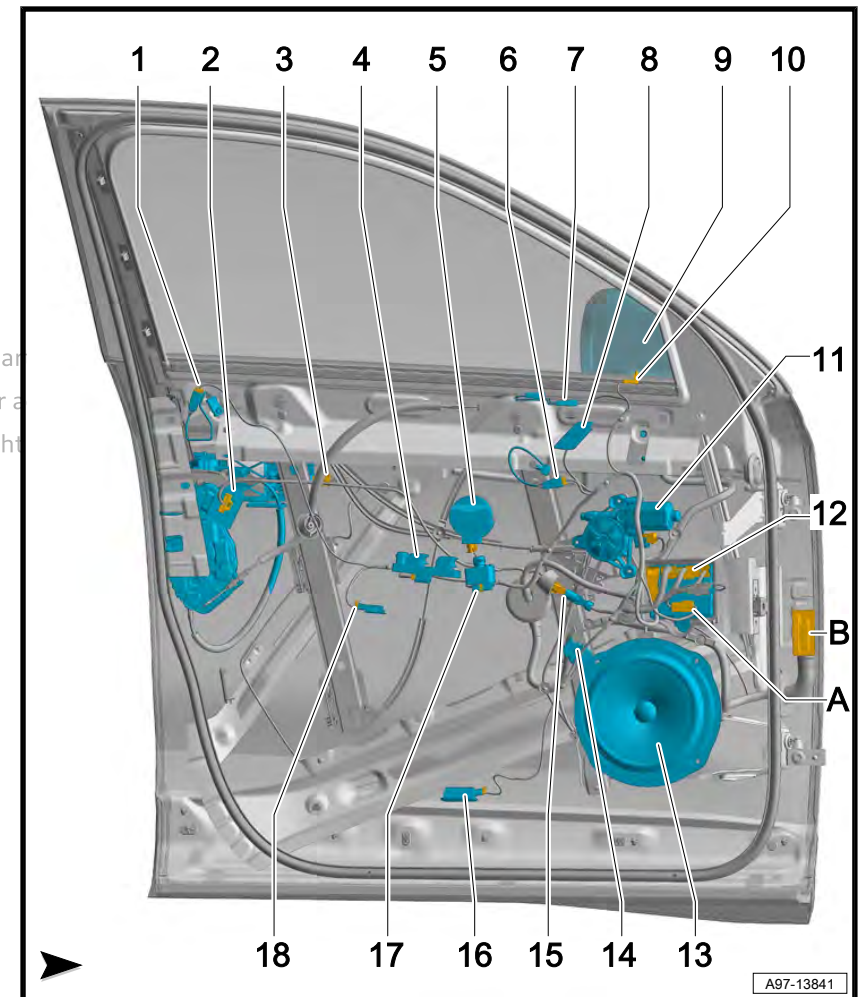

17 - not assigned

18 - Light 2 for front passenger door ambient lighting -W98-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.4.5 Rear left door

A - 2-pin connector -T2fi- , black/
2-pin connector -T2fix- , black

- ☐ For models with background lighting

B - 27-pin connector -T27ax- , black

1 - Rear door lock unit, driver side -VX83-

- ☐ For left-hand drive models

1 - Rear door lock unit, front passenger side -VX84-

- ☐ For right-hand drive models

1 - Contact sensor for rear left exterior door handle -G417-

- ☐ For models with US equipment

2 - Light for rear left door contour lighting -L253-

3 - Light 1 for rear left door ambient lighting -L201-

- ☐ For models with ambient lighting, version 2

3 - Light for rear driver side door ambient lighting -W88-

- ☐ For models with ambient lighting, version 1
- ☐ For left-hand drive models

3 - Light for rear passenger side door ambient lighting -W89-

- ☐ For models with ambient lighting, version 1
- ☐ For right-hand drive models

4 - Light for rear driver side interior door handle illumination -L221-

- ☐ For left-hand drive models

4 - Light for rear passenger side interior door handle illumination -L222-

- ☐ For right-hand drive models

5 - Rear driver side interior locking button for central locking system -E717-

- ☐ For models with US equipment
- ☐ For models with equipment for China only


6 - Rear left treble loudspeaker -R14-

7 - Rear driver side door control unit -J926-

- ☐ For left-hand drive models



Protected by copyright. Copy
permitted unless authorised
with respect to the correctness

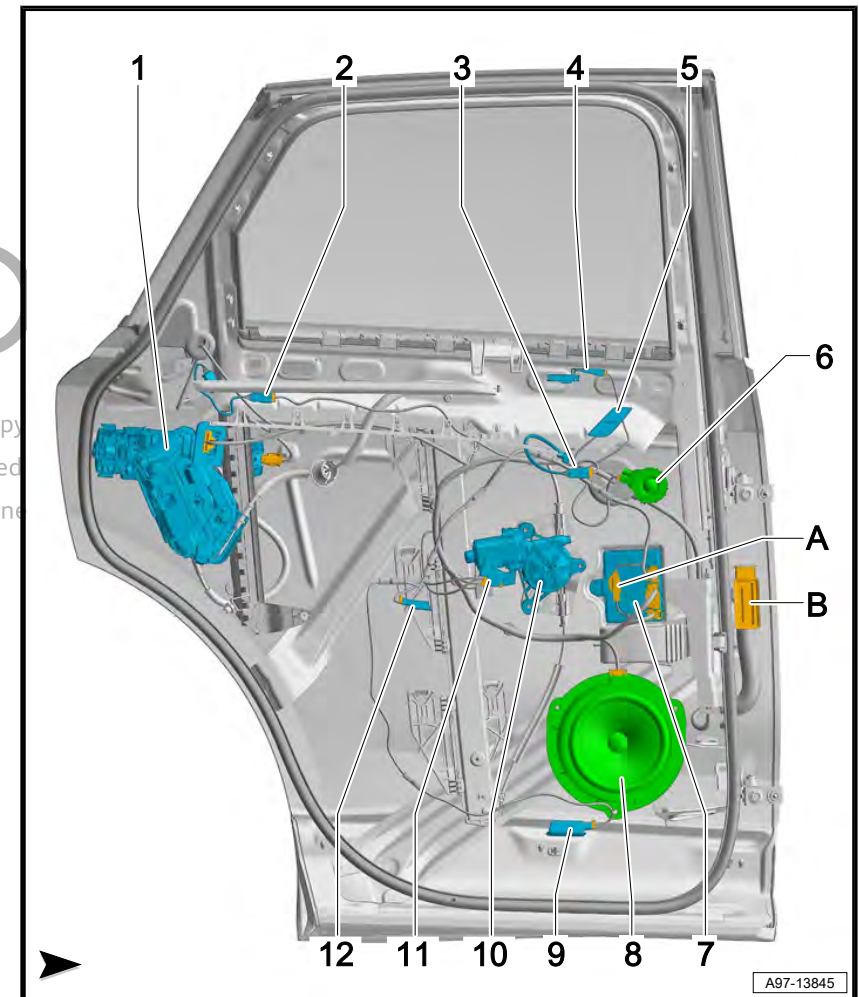

7 - Rear passenger side door control unit -J927-

- ☐ For right-hand drive models

8 - Rear left bass loudspeaker -R15-**9 - Rear driver side entry light -W83-**

- ☐ For left-hand drive models

9 - Rear passenger side entry light -W84-

- ☐ For right-hand drive models

10 - Rear driver side window regulator motor -V471-

- ☐ with integrated control unit with rear driver side window regulator motor -J1016-
- ☐ According to equipment
- ☐ For left-hand drive models

10 - Rear driver side window regulator motor -V471-

- ☐ According to equipment
- ☐ For left-hand drive models

10 - Rear passenger side window regulator motor -V472-

- ☐ with integrated control unit with rear passenger side window regulator motor -J1017-
- ☐ According to equipment
- ☐ For right-hand drive models

10 - Rear passenger side window regulator motor -V472-

- ☐ According to equipment
- ☐ For right-hand drive models

11 - Operating unit in rear driver side door -EX61-

- ☐ For left-hand drive models

11 - Operating unit in rear door, front passenger side -EX60-

- ☐ For right-hand drive models

12 - Light 2 for rear driver side door ambient lighting -W99-

- ☐ For left-hand drive models

12 - Light 2 for rear front passenger side door ambient lighting -W100-

- ☐ For right-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.4.6 Rear right door

A - 2-pin connector -T2fm-, black/
2-pin connector -T2fmx-, black

- ☐ For models with background lighting

B - 27-pin connector -T27bx-, black

1 - Rear right treble loudspeaker -R16-

2 - Rear passenger side interior locking button for central locking system -E718-

- ☐ For models with US equipment
- ☐ For models with equipment for China only

3 - Light for rear passenger side interior door handle illumination -L222-

- ☐ For left-hand drive models

3 - Light for rear driver side interior door handle illumination -L221-

- ☐ For right-hand drive models

4 - Light 1 for rear right door ambient lighting -L202-

- ☐ For models with ambient lighting, version 2

4 - Light for rear passenger side door ambient lighting -W89-

- ☐ For models with ambient lighting, version 1
- ☐ For left-hand drive models

4 - Light for rear driver side door ambient lighting -W88-

- ☐ For models with ambient lighting, version 1
- ☐ For right-hand drive models

5 - Light for rear right door contour lighting -L254-

6 - Rear door lock unit, front passenger side -VX84-

- ☐ For left-hand drive models

6 - Rear door lock unit, driver side -VX83-


- ☐ For right-hand drive models

6 - Contact sensor for rear right exterior door handle -G418-

- ☐ For models with US equipment

7 - Light 2 for rear front passenger side door ambient lighting -W100-

- ☐ For left-hand drive models

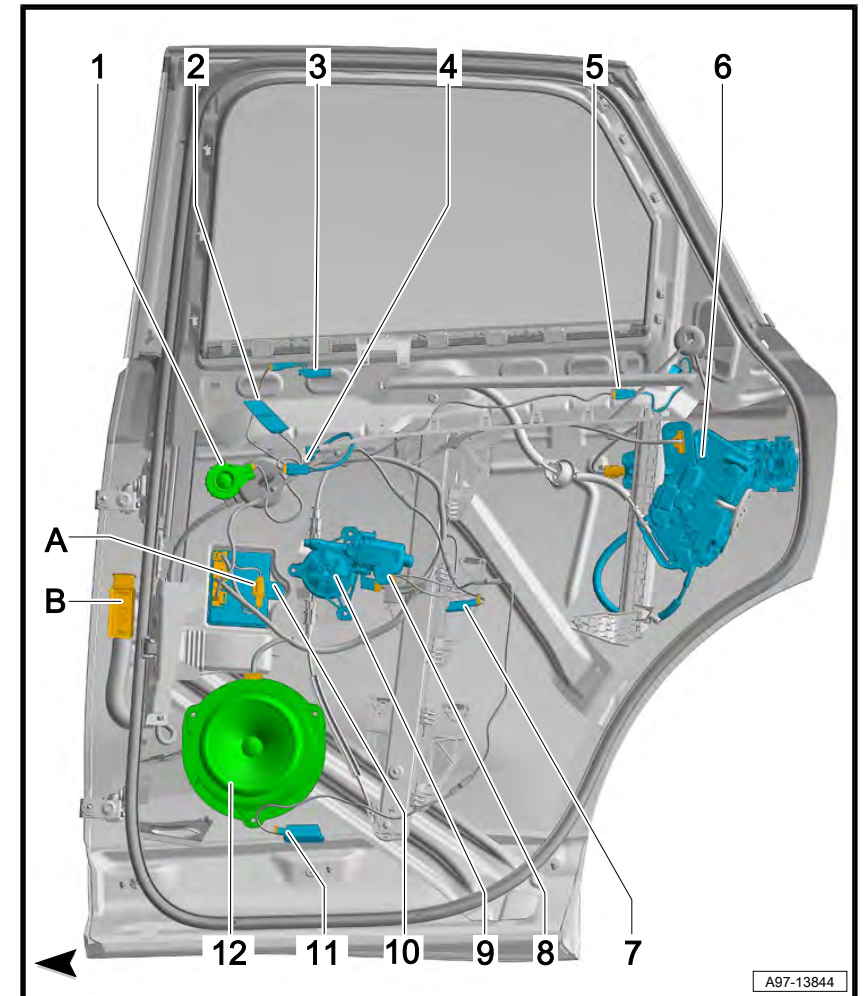

7 - Light 2 for rear driver side door ambient lighting -W99-

- ☐ For right-hand drive models

8 - Operating unit in rear door, front passenger side -EX60-

- ☐ For left-hand drive models

8 - Operating unit in rear driver side door -EX61-

- ☐ For right-hand drive models

9 - Rear passenger side window regulator motor -V472-

- ☐ with integrated control unit with rear passenger side window regulator motor -J1017-
- ☐ According to equipment
- ☐ For left-hand drive models

9 - Rear passenger side window regulator motor -V472-

- ☐ According to equipment
- ☐ For left-hand drive models

9 - Rear driver side window regulator motor -V471-

- ☐ with integrated control unit with rear driver side window regulator motor -J1016-
- ☐ According to equipment
- ☐ For right-hand drive models

9 - Rear driver side window regulator motor -V471-

- ☐ According to equipment
- ☐ For right-hand drive models

10 - Rear passenger side door control unit -J927-

- ☐ For left-hand drive models

10 - Rear driver side door control unit -J926-

- ☐ For right-hand drive models

11 - Rear passenger side entry light -W84-

- ☐ For left-hand drive models

11 - Rear driver side entry light -W83-

- ☐ For right-hand drive models

12 - Rear right bass loudspeaker -R17-

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview](#) ⇒ [page 1](#)

1.5 Heater and air conditioning unit

- ◆ ⇒ [“1.5.1 Air conditioning system, KH6, part 1”, page 58](#)
- ◆ ⇒ [“1.5.2 Air conditioning system, KH6, part 2”, page 60](#)
- ◆ ⇒ [“1.5.3 Climatronic, 9AK, KH5, part 1”, page 61](#)
- ◆ ⇒ [“1.5.4 Climatronic, 9AK, KH5, part 2”, page 62](#)

1.5.1 Air conditioning system, KH6, part 1



Note

For models with air conditioning system

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1 - Air recirculation flap control motor -V113-

2 - Fresh air blower control unit -J126-

- ☐ For models with air conditioning system
- ☐ Fitting location for models with Climatronic ⇒ [Item 3 \(page 61\)](#)

3 - Fresh air blower -V2-


- ☐ For models with air conditioning system
- ☐ Fitting location for models with Climatronic ⇒ [Item 4 \(page 61\)](#)

4 - Evaporator output temperature sender -G263-

- ☐ For models with air conditioning system
- ☐ Fitting location for models with Climatronic ⇒ [Item 6 \(page 61\)](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

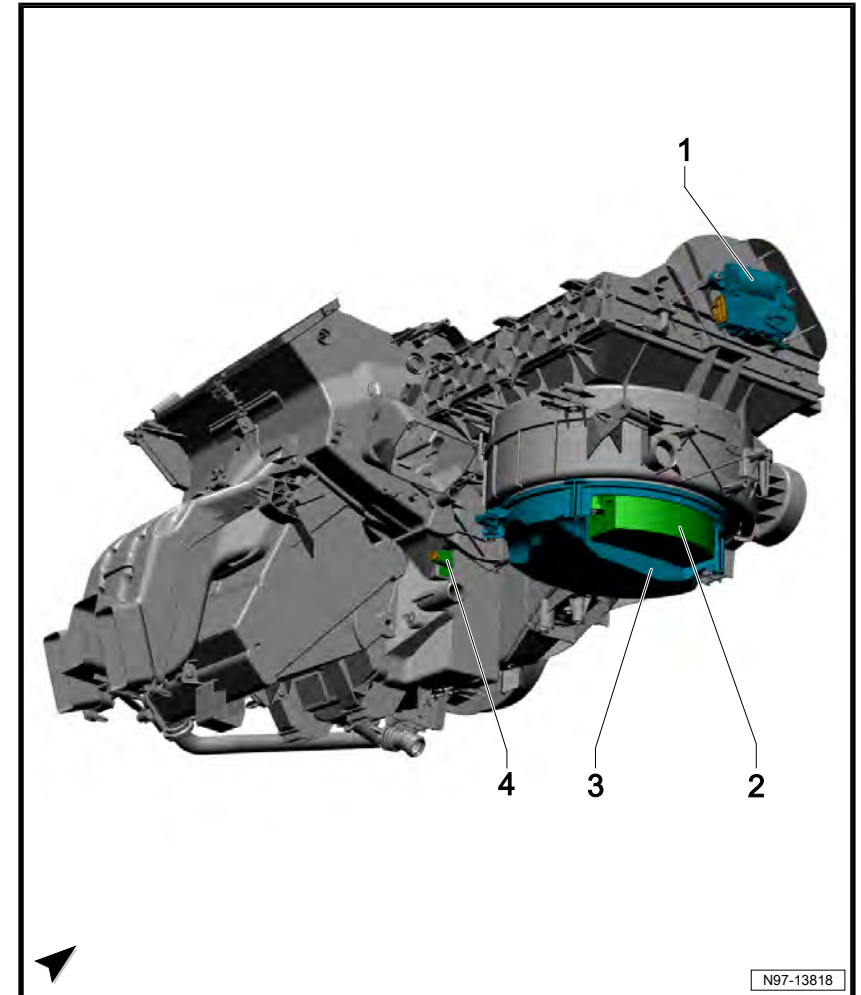

[Back to overview](#) ⇒ [page 1](#)

1.5.2 Air conditioning system, KH6, part 2



Note

For models with air conditioning system


1 - Air distribution flap control motor -V428-

2 - Auxiliary air heater element -Z35-

3 - Temperature flap control motor -V68-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

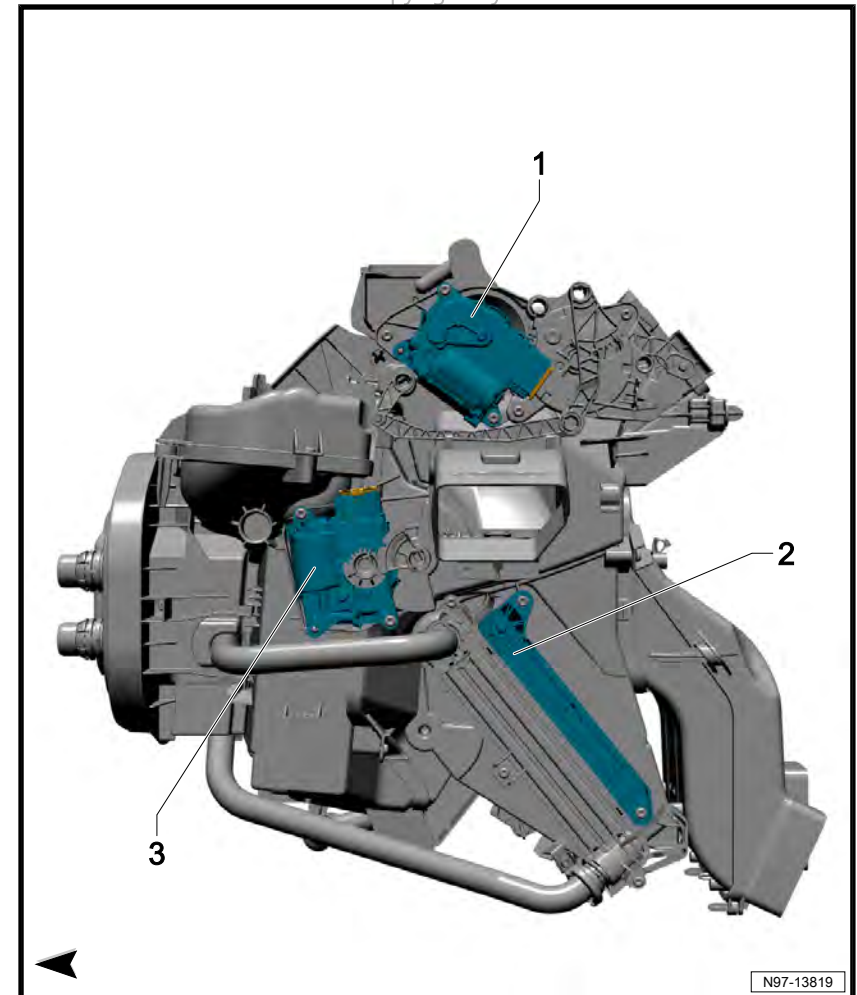

[Back to overview](#) ⇒ [page 1](#)

1.5.3 Climatronic, 9AK, KH5, part 1



Note

For models with Climatronic

1 - Defroster flap control motor -V107-

2 - Fresh air/air recirculation, air flow flap control motor -V425-

3 - Fresh air blower control unit -J126-

- ☐ For models with Climatronic
- ☐ Fitting location for models with air conditioning system ⇒ [item 2 \(page 59\)](#)

4 - Fresh air blower -V2-

- ☐ For models with Climatronic
- ☐ Fitting location for models with air conditioning system ⇒ [Item 3 \(page 59\)](#)


5 - Right temperature flap control motor -V159-

6 - Evaporator output temperature sender -G263-

- ☐ For models with Climatronic
- ☐ Fitting location for models with air conditioning system ⇒ [item 4 \(page 59\)](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of the information.

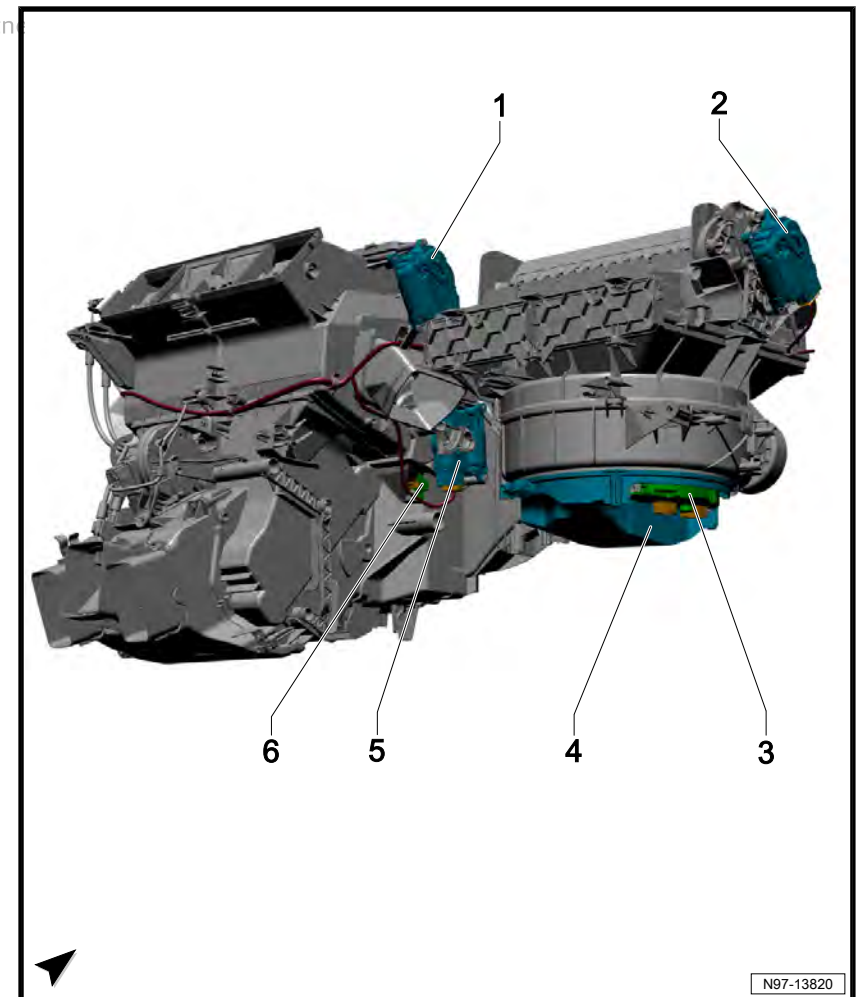

[Back to overview](#) ⇒ [page 1](#)

1.5.4 Climatronic, 9AK, KH5, part 2




Note

For models with Climatronic

- 1 - Front air distribution flap control motor -V426-
- 2 - Footwell vent temperature sender -G192-
- 3 - Rear temperature flap control motor -V137-
☐ According to equipment
- 4 - Auxiliary air heater element -Z35-
- 5 - Left temperature flap control motor -V158-



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

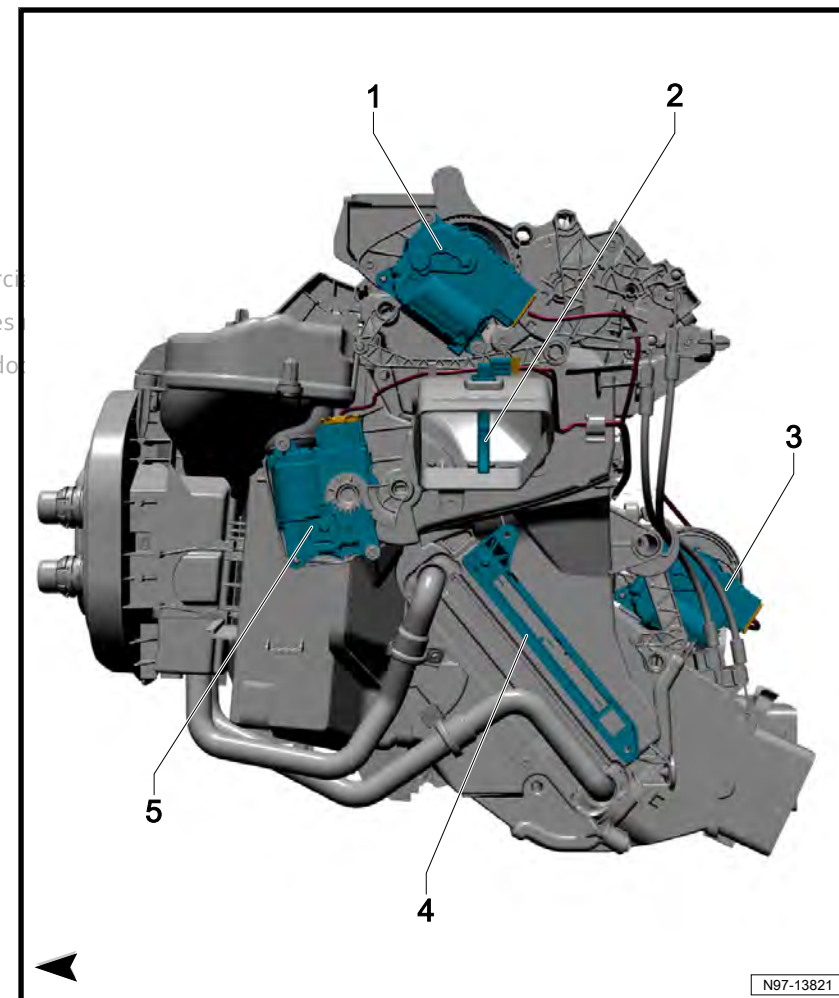

N97-13821

Back to overview ⇒ [page 1](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.