



Driver or Passenger Seat Removal and Installation

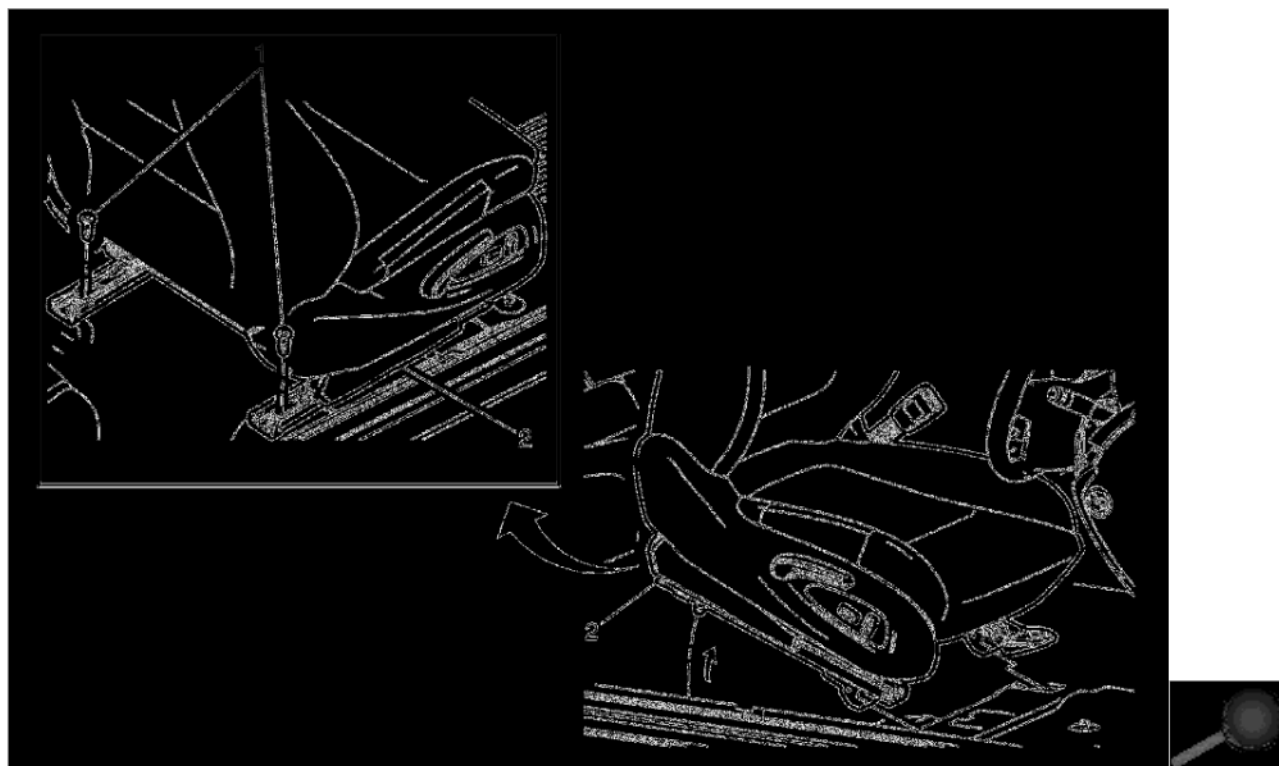

Driver or Passenger Seat Removal and Installation

Callout	Component Name
Warning: Refer to SIR Warning. Preliminary Procedures Disable the SIR system. Refer to SIR Disabling and Enabling.	
1	Driver or Passenger Seat Bolt (Qty: 2) Caution: Refer to Fastener Caution. Procedure Adjust the seat to the forward position to gain access to the rear bolts. Tighten 45 N•m (33 lb ft)
2	Driver or Passenger Seat Assembly Procedure 1. Disconnect the front seat electrical connector, and passenger presence system connector, if equipped. 2. With the aid of an assistant remove the front seat, by tilting the seat forward, and then lifting and pulling the seat rearwards to disengage the 4 front foot hooks.


Front Seat Adjuster Release Lever Replacement (Ute)

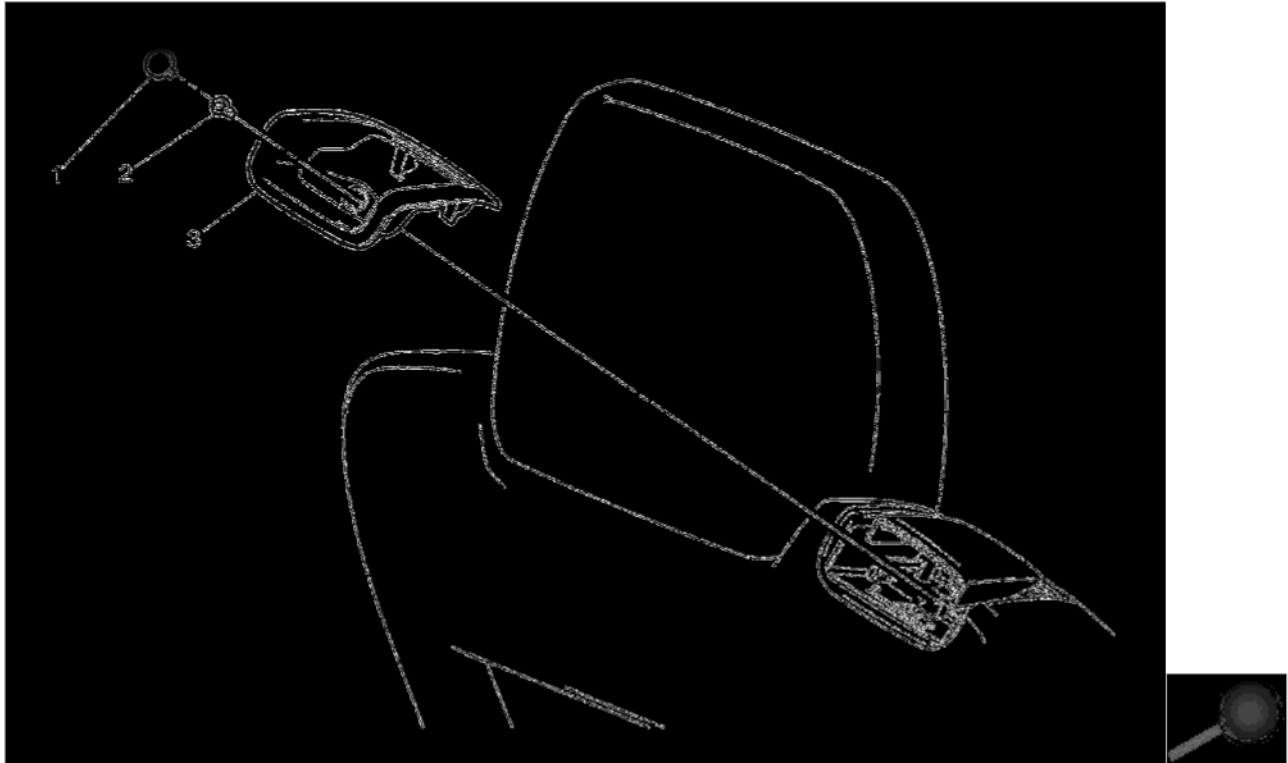

Front Seat Adjuster Release Lever Replacement

Callout	Component Name
1	Front Seat Adjuster Release Lever Cap
2	Front Seat Adjuster Release Lever Fastener (Qty: 2) Caution: Refer to Fastener Caution .
3	Front Seat Adjuster Release Lever Caution: Do not twist the cover during removal. Twisting the cover may cause the component to break. Procedure Firmly grasp both sides of the release lever pulling upward to disengage.


Front Seat Adjuster Knob Replacement (8-Way Power)

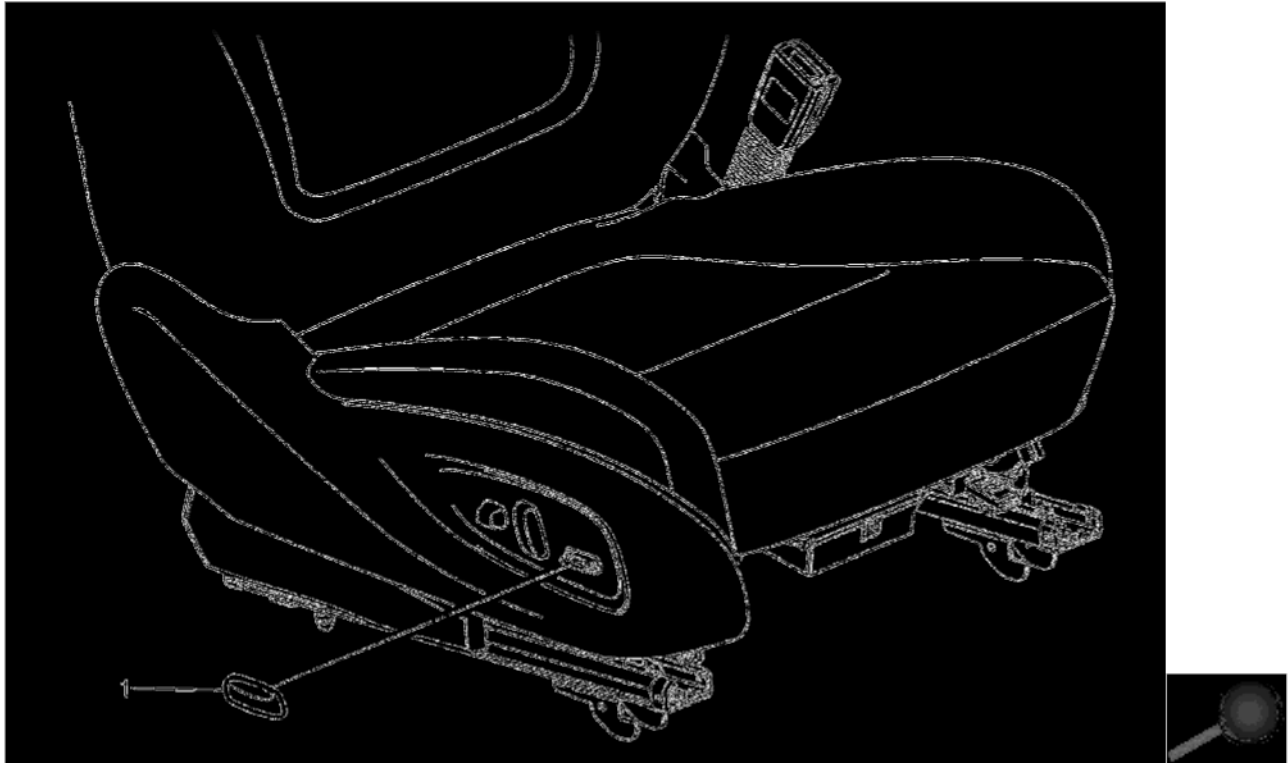

Front Seat Adjuster Knob Replacement

Callout	Component Name
1	Front Seat Adjuster Knob Procedure Use a flat-bladed tool to release the adjuster knob from the front seat cushion outer finish cover.


Driver or Passenger Seat Adjuster Handle Replacement (2-Way Manual and 4-Way Hybrid)

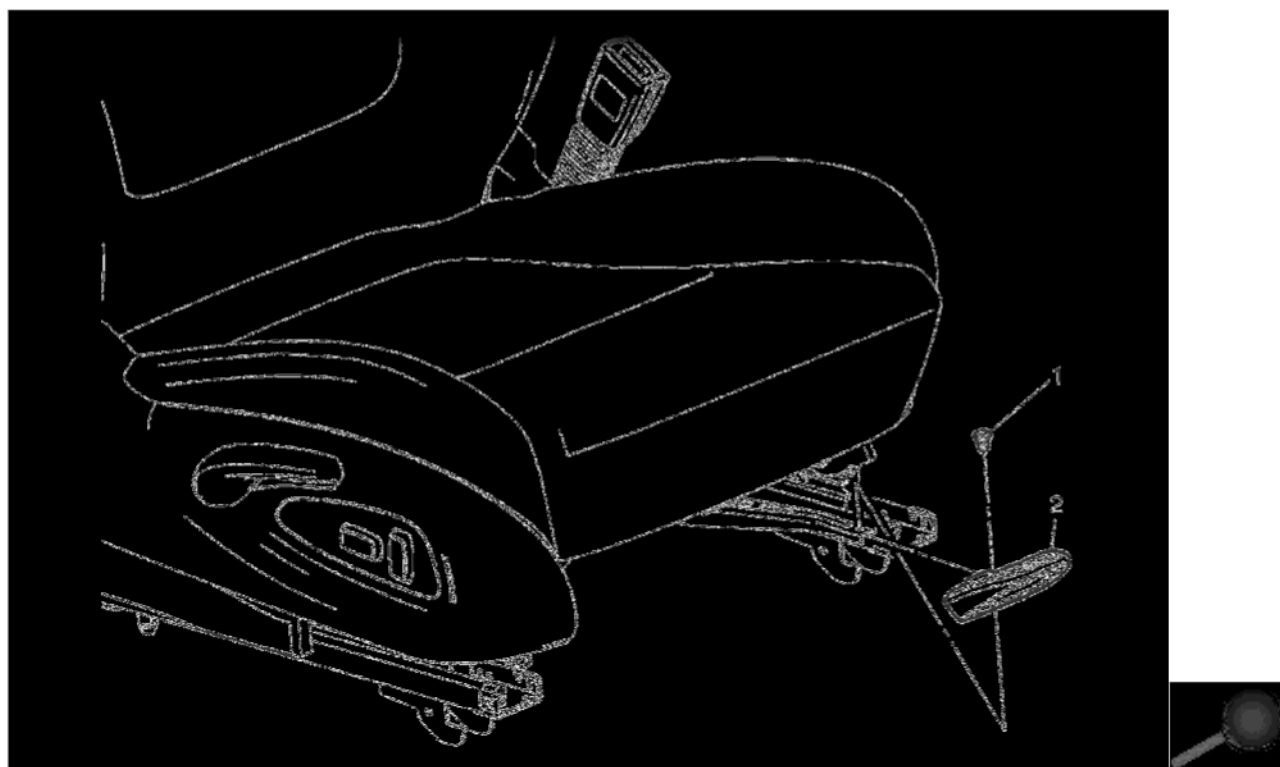

Driver or Passenger Seat Adjuster Handle Replacement

Callout	Component Name
1	Driver or Passenger Seat Adjuster Handle Fastener Caution: Refer to Fastener Caution .
2	Driver or Passenger Seat Adjuster Handle


Driver or Passenger Seat Head Restraint Replacement

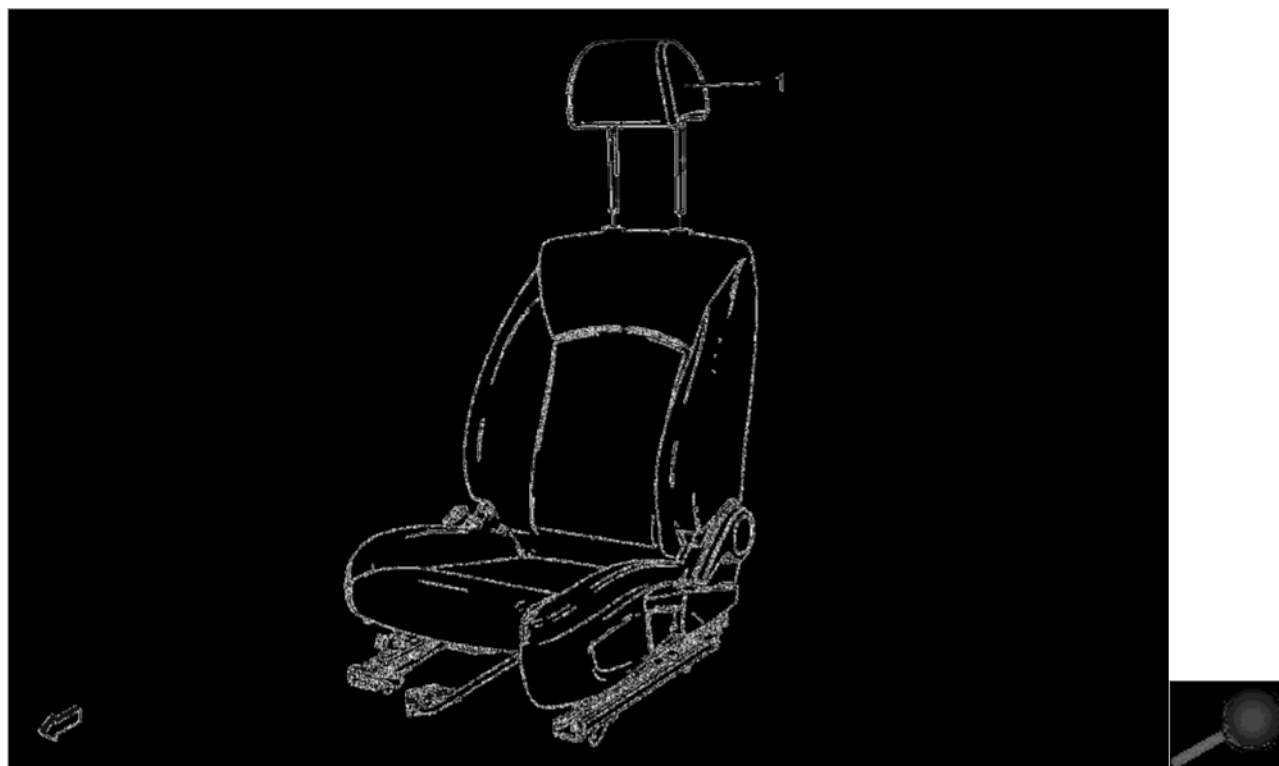

Driver or Passenger Seat Head Restraint Replacement

Callout	Component Name
1	Front Seat Head Restraint Procedure 1. Raise the headrest to the full upward position. 2. Push both flush button on the head restraint guide. 3. Remove the head restraint by pulling up on the restraint.


Driver or Passenger Seat Head Restraint Guide Replacement

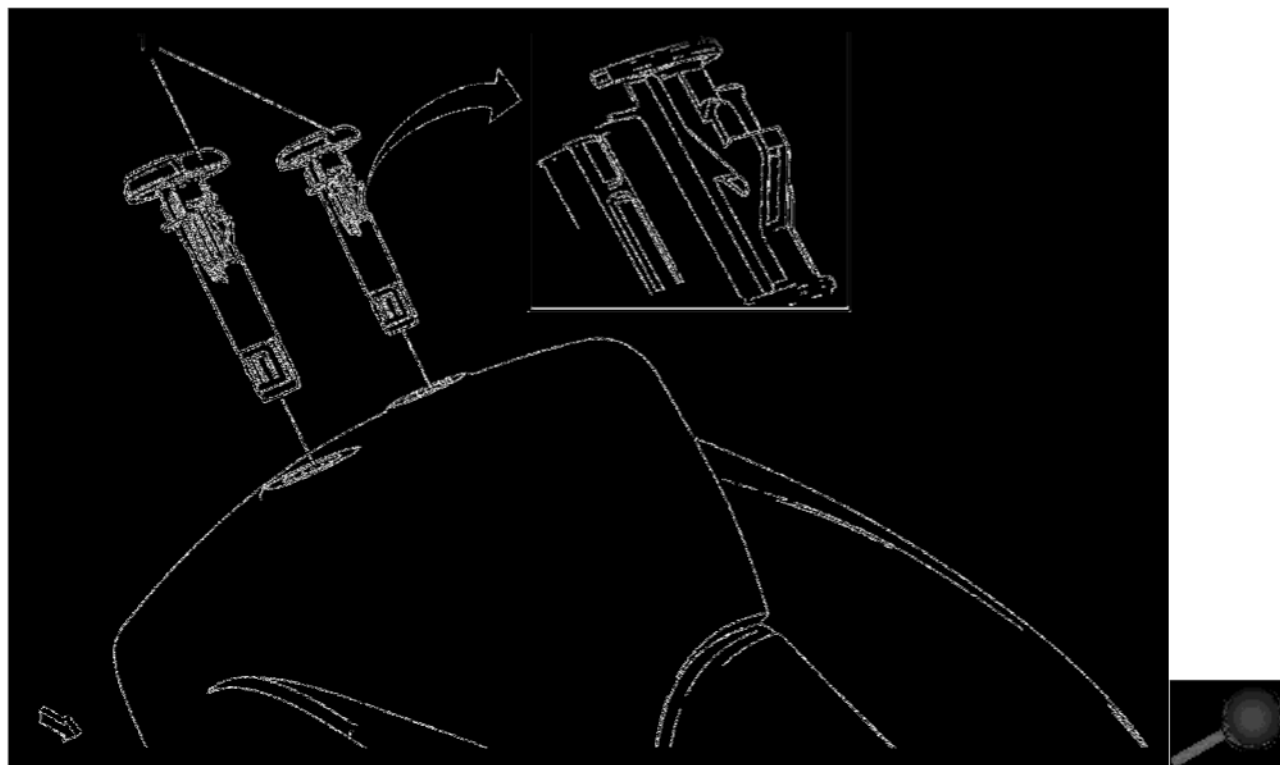

Driver or Passenger Seat Head Restraint Guide Replacement

Callout	Component Name
Preliminary Procedures Remove the driver or passenger seat head restraint. Refer to Driver or Passenger Seat Head Restraint Replacement .	
1	Driver or Passenger Seat Head Restraint Guide (Qty: 2) Procedure Using a suitable flat-bladed tool, slide the tool inside the guide until it finds the slot. Then pull the plastic slot inward to release the lock tab whilst pulling on the guide to remove it from the seat back frame.


Front Seat Head Restraint Guide Bezel Replacement

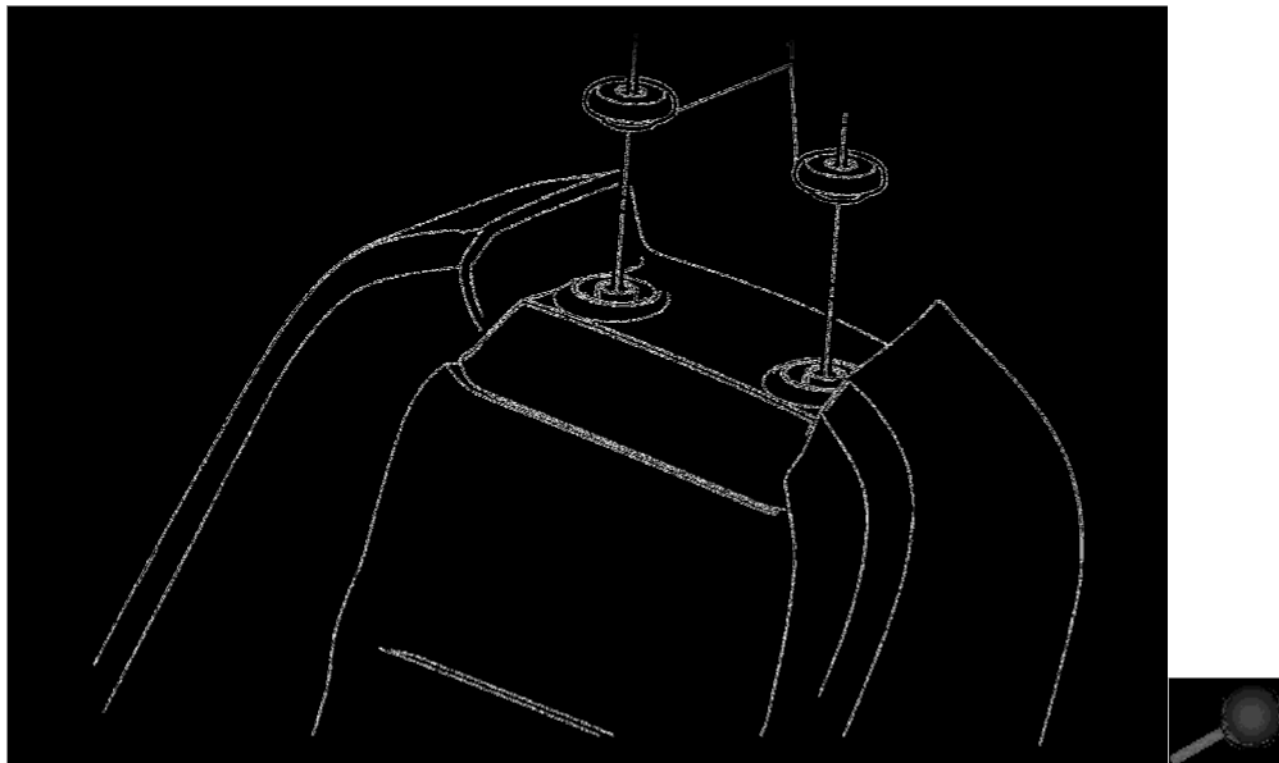

Front Seat Head Restraint Guide Bezel Replacement

Callout	Component Name
Preliminary Procedure Remove the driver or passenger seat head restraint. Refer to Driver or Passenger Seat Head Restraint Replacement	
1	Front Seat Head Restraint Guide Bezel (Qty: 2) Procedure Using an appropriate flat bladed tool, lever the bezel off the head restraint guide. Note: The bezels are not identical and will only reattach to their respective head restraint guides.


Driver or Passenger Seat Adjuster Finish Cover Replacement

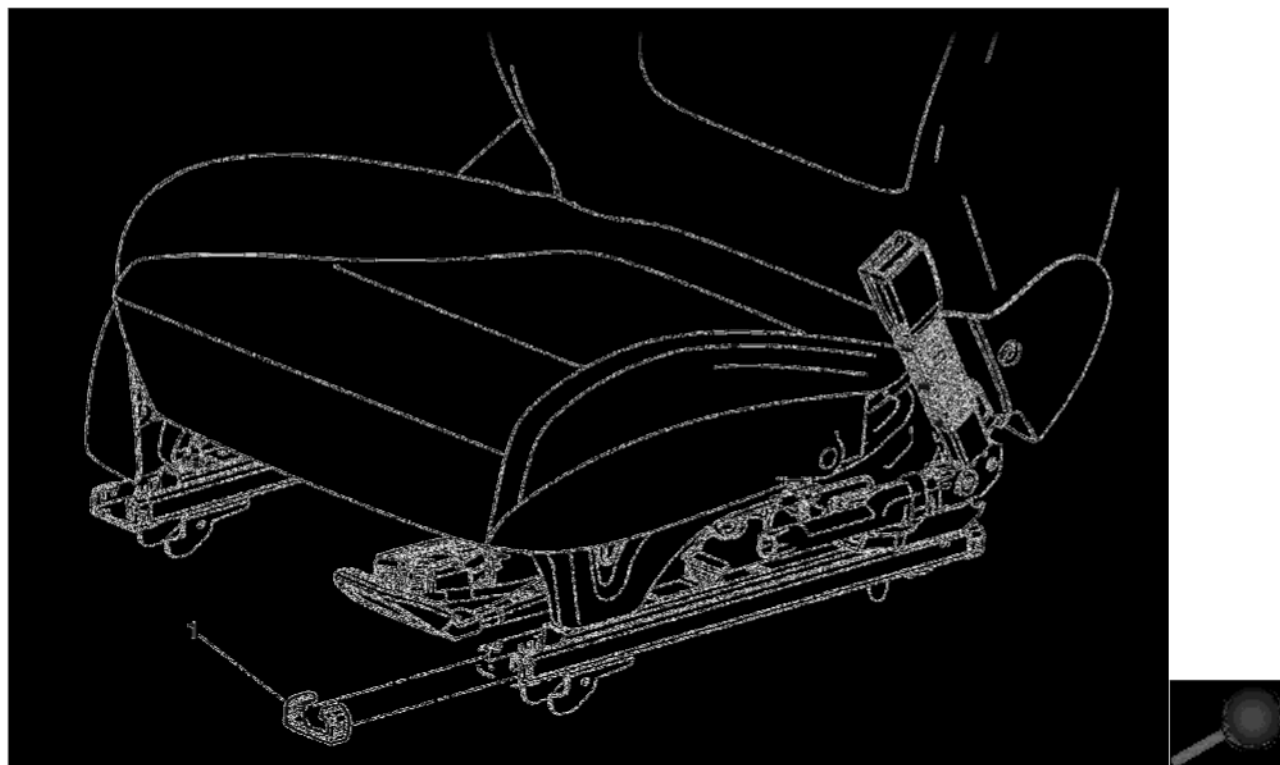

Driver or Passenger Seat Adjuster Finish Cover Replacement

Callout	Component Name
1	Driver or Passenger Seat Adjuster Finish Cover Caution: Do not twist the cover during removal. Twisting the cover may cause the component to break. Procedure 1. Adjust the seat to the full rearward position to gain access to the finish cover. 2. Firmly grasp both sides of the finish cover pulling the sides outward to disengage the top of the cover off of the track. 3. Remove the finish cover by sliding the cover forward and then pull down on the finish cover to disengage it from the track.


Front Seat Outer Recliner Finish Cover Bracket Replacement

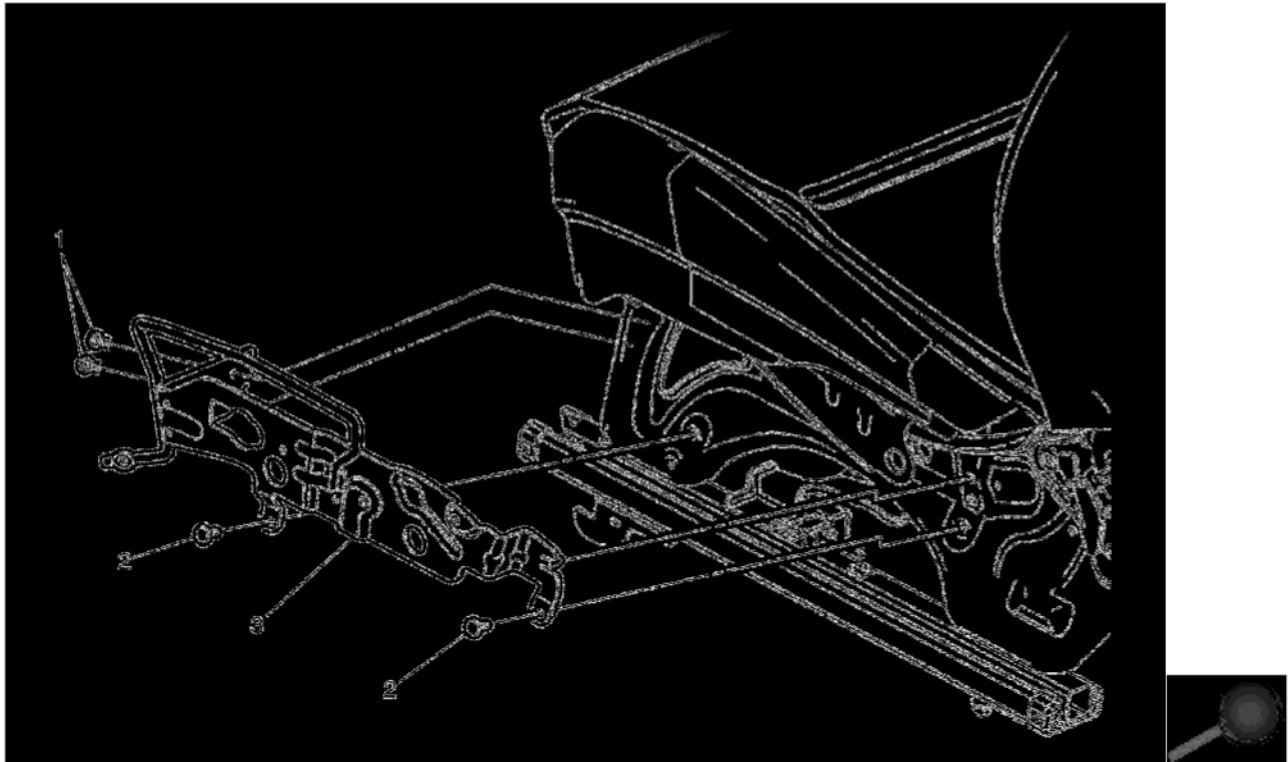

Front Seat Outer Recliner Finish Cover Bracket Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Removal and Installation. 2. Remove the front seat cushion outer finish cover. Refer to Front Seat Cushion Outer Finish Cover Replacement. 3. Remove the driver or passenger seat inner recliner finish cover. Refer to Driver or Passenger Seat Inner Recliner Finish Cover Replacement. 4. Remove the front seat recliner control, if equipped. Refer to Front Seat Recliner Control Replacement.	
1	Front Seat Outer Recliner Finish Cover Bracket Retainer (Qty: 2) Caution: Refer to Fastener Caution .
2	Front Seat Outer Recliner Finish Cover Bracket Retaining Nut (Qty: 2) Caution: Refer to Fastener Caution . Tighten 3 N•m (27 lb in)
3	Front Seat Outer Recliner Finish Cover Bracket


Driver or Passenger Seat Inner Recliner Finish Cover Replacement

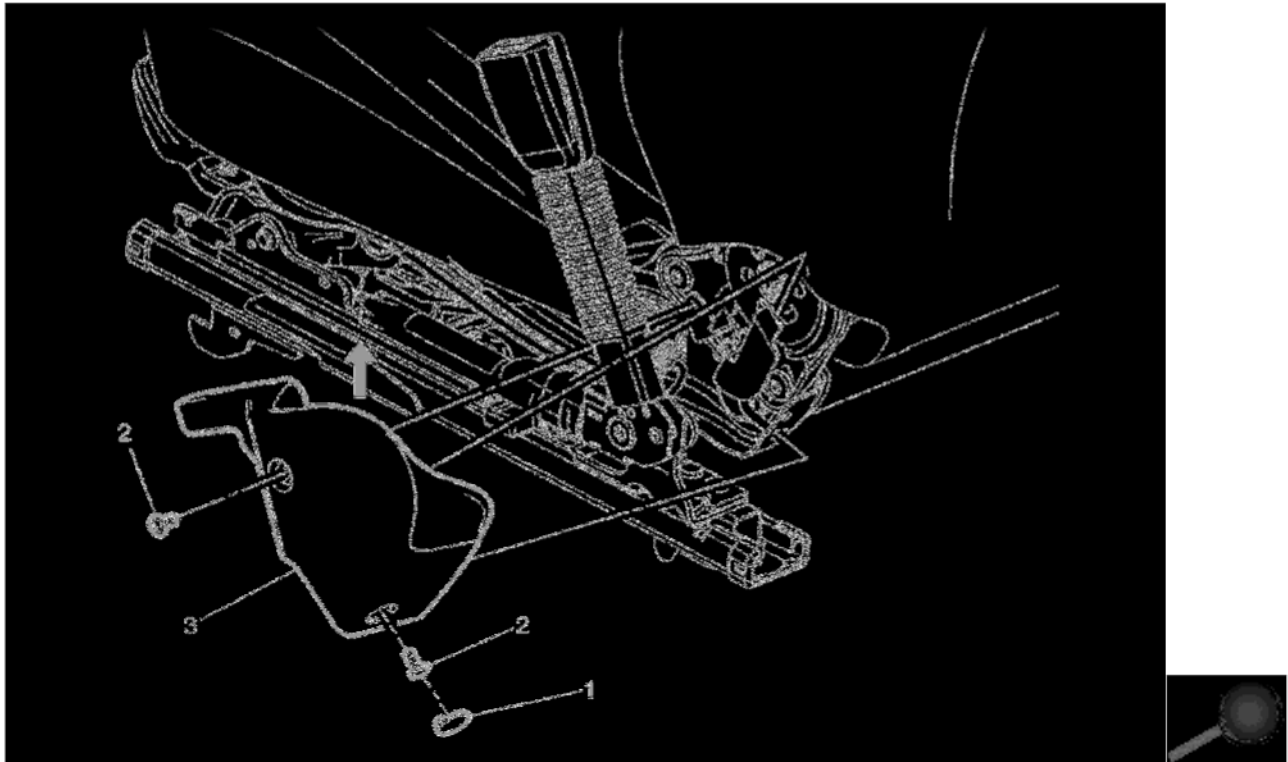

Driver or Passenger Seat Inner Recliner Finish Cover Replacement

Callout	Component Name
Preliminary Procedure Remove the driver or passenger seat. Refer to Driver or Passenger Seat Removal and Installation .	
1	Driver or Passenger Seat Inner Recliner Finish Cover Fastener Cap Procedure Pull back the toe kick cover to gain access to the rear fastener and cap.
2	Driver or Passenger Seat Inner Recliner Finish Cover Fastener (Qty: 2) Caution: Refer to Fastener Caution .
3	Driver or Passenger Seat Inner Recliner Finish Cover Procedure Remove the inner finish cover by pulling upward.


Driver or Passenger Seat Cushion Frame Replacement

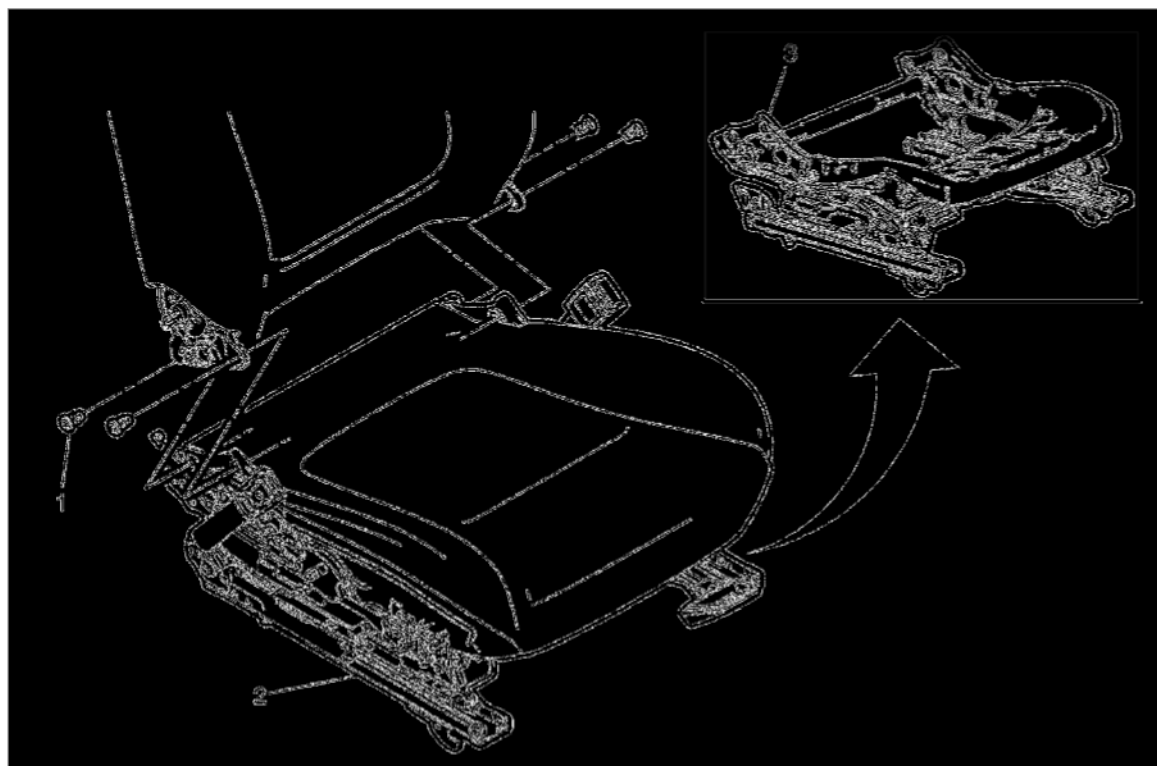

Driver or Passenger Seat Cushion Frame Replacement

Callout	Component Name
Warning: Refer to SIR Warning. Preliminary Procedure Remove the front seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement.	
1	Driver or Passenger Seat Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution. Tighten 35 N·m (26 lb ft) Procedure Remove the front seat recliner control bracket to gain access to the seat cushion frame bolt.
2	Driver or Passenger Seat Cushion Frame Assembly Procedure Disconnect any electrical connections, if equipped.
3	Driver or Passenger Seat Cushion Frame Procedure If replacing with a new front seat cushion frame, transfer components as necessary.


Front Seat Cushion Support Replacement

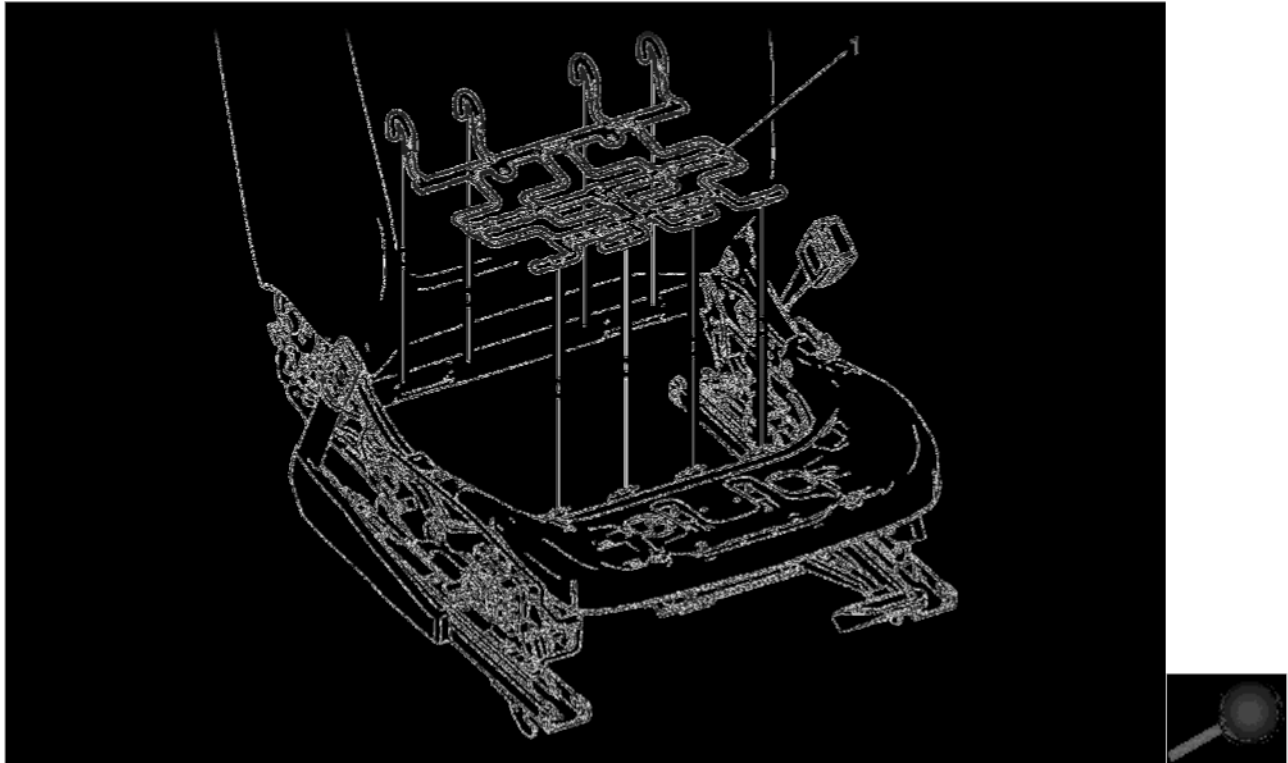

Front Seat Cushion Support Replacement

Callout	Component Name
Warning: Refer to SIR Warning Preliminary Procedure 1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Removal and Installation 2. Remove the front seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement	
1	Driver or Passenger Seat Cushion Pad Support Spring Procedure 1. Disconnect any electrical connectors. 2. Transfer components as necessary.


Front Seat Cushion Outer Finish Cover Replacement

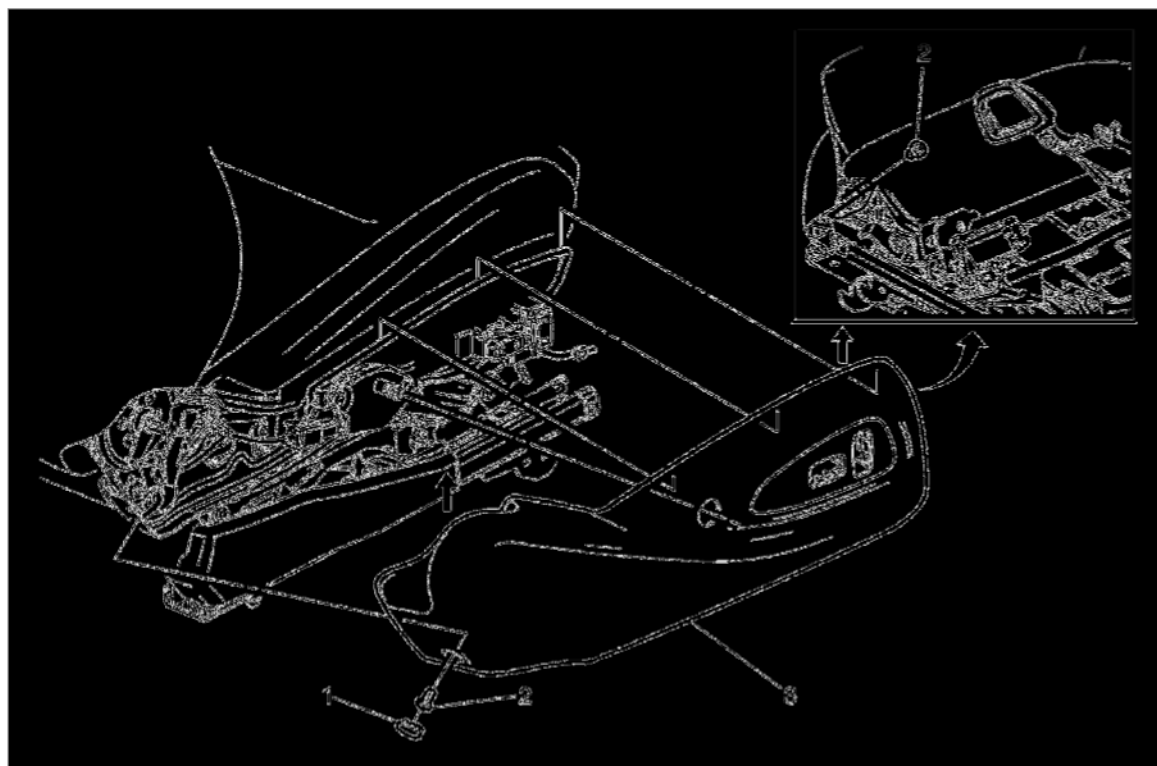

Front Seat Cushion Outer Finish Cover Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the front seat back recliner handle. Refer to Front Seat Back Recliner Handle Replacement. 2. Remove the front seat adjuster switch knobs, if equipped. Refer to Driver or Passenger Seat Adjuster Switch Replacement.	
1	Front Seat Cushion Outer Finish Cover Cap
2	Front Seat Cushion Outer Finish Cover Retainer (Qty: 2) Caution: Refer to Fastener Caution .
3	Driver or Passenger Seat Cushion Outer Finish Panel Procedure 1. Pull back the toe kick cover to gain access to the rear fastener. 2. Remove the outer finish panel by pulling upward near the retainer clip locations. 3. Disconnect the electrical connectors. 4. If replacing the finish panel, transfer components as necessary.


Front Seat Cushion Cover and Pad Replacement

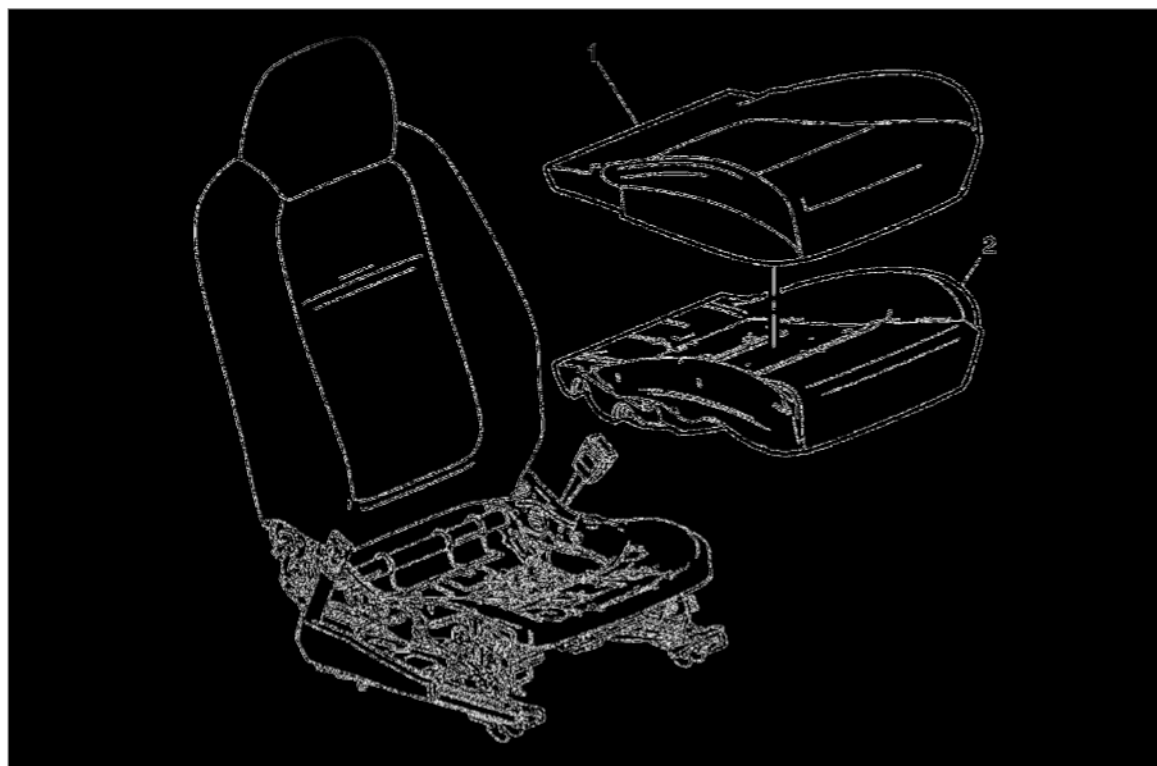

Front Seat Cushion Cover and Pad Replacement

Callout	Component Name
Warning: Refer to SIR Warning. Preliminary Procedures 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Removal and Installation. 3. Remove the driver or passenger seat inner recliner finish cover. Refer to Driver or Passenger Seat Inner Recliner Finish Cover Replacement. 4. Remove the front seat cushion outer finish cover. Refer to Front Seat Cushion Outer Finish Cover Replacement.	
1	Front Seat Cushion Cover Procedure 1. Disengage the J-channel retainers from the seat cushion frame. 2. Disconnect any electrical connectors, if equipped. 3. Remove the seat cushion cover and pad from the seat cushion frame as an assembly. 4. Carefully remove the OKE clips retaining the cover to the pad. 5. Pull the cover away from the pad to disengage the retainers.
2	Front Seat Cushion Pad

Driver or Passenger Seat Back Cover and Pad Replacement

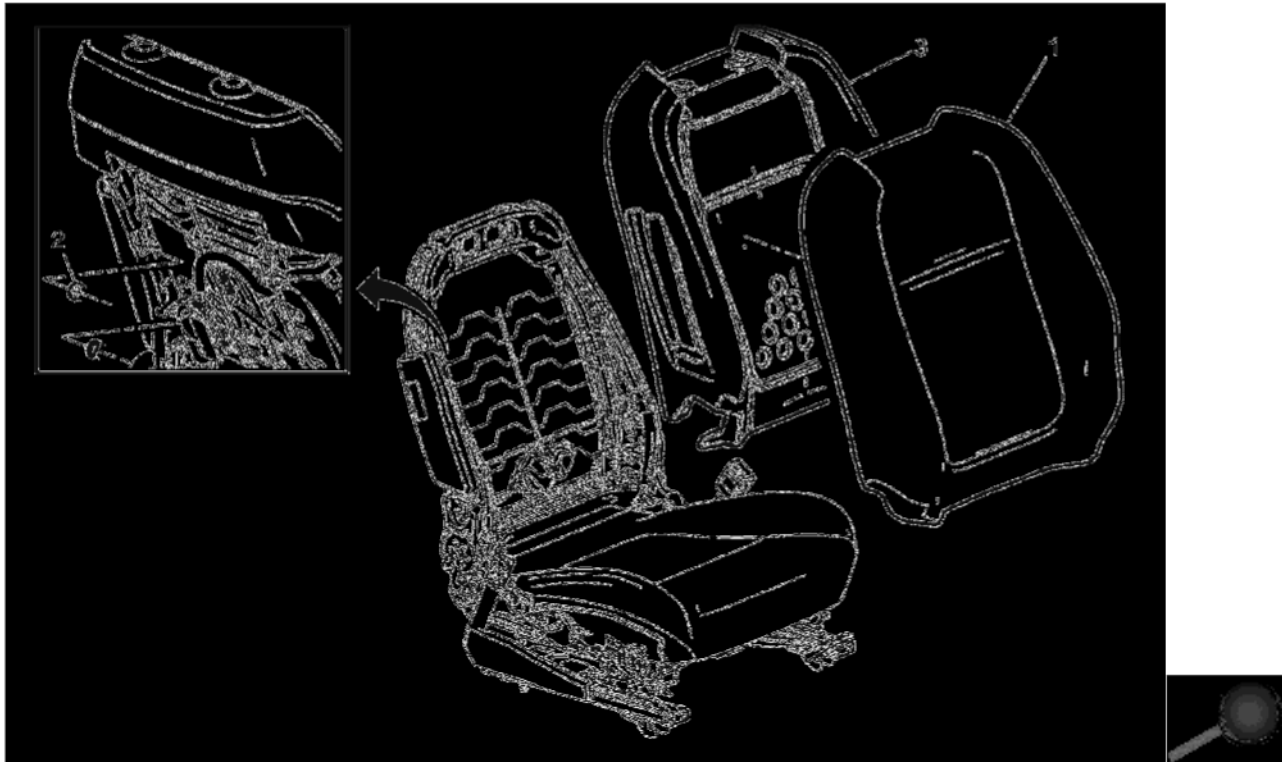


Driver or Passenger Seat Back Cover and Pad Replacement

Callout	Component Name
Warning: Refer to SIR Warning. Warning: Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury. Preliminary Procedures 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Removal and Installation. 3. Remove the front seat back recliner handle, if equipped. Refer to Front Seat Back Recliner Handle Replacement. 4. Remove the driver or passenger head restraint guide. Refer to Driver or Passenger Seat Head Restraint Guide Replacement. 5. Remove the driver or passenger seat inner recliner finish cover. Refer to Driver or Passenger Seat Inner Recliner Finish Cover Replacement. 6. Remove the front seat cushion finish cover. Refer to Front Seat Cushion Outer Finish Cover Replacement. 7. Remove the front seat outboard seat back airbag. Refer to Front Seat Outboard Seat Back Airbag Replacement.	
1	Driver or Passenger Seat Back Cushion Cover
Procedure	

Callout	Component Name
	1. Disconnect any electrical connectors, if equipped. 2. Disengage the J-channel retainers securing the cover underneath the seat back and the assembly from the seat frame.
2	Driver or Passenger Seat Side Inflatable Restraint Module Nut (Qty: 2) Caution: Refer to Fastener Caution. Tighten 5.5 N•m (49 lb in)
3	Driver or Passenger Seat Back Cushion Pad Procedure Separate the seat cushion cover from the seat cushion pad by pulling the cover away from the pad.

Driver or Passenger Seat Back Cushion Frame Replacement

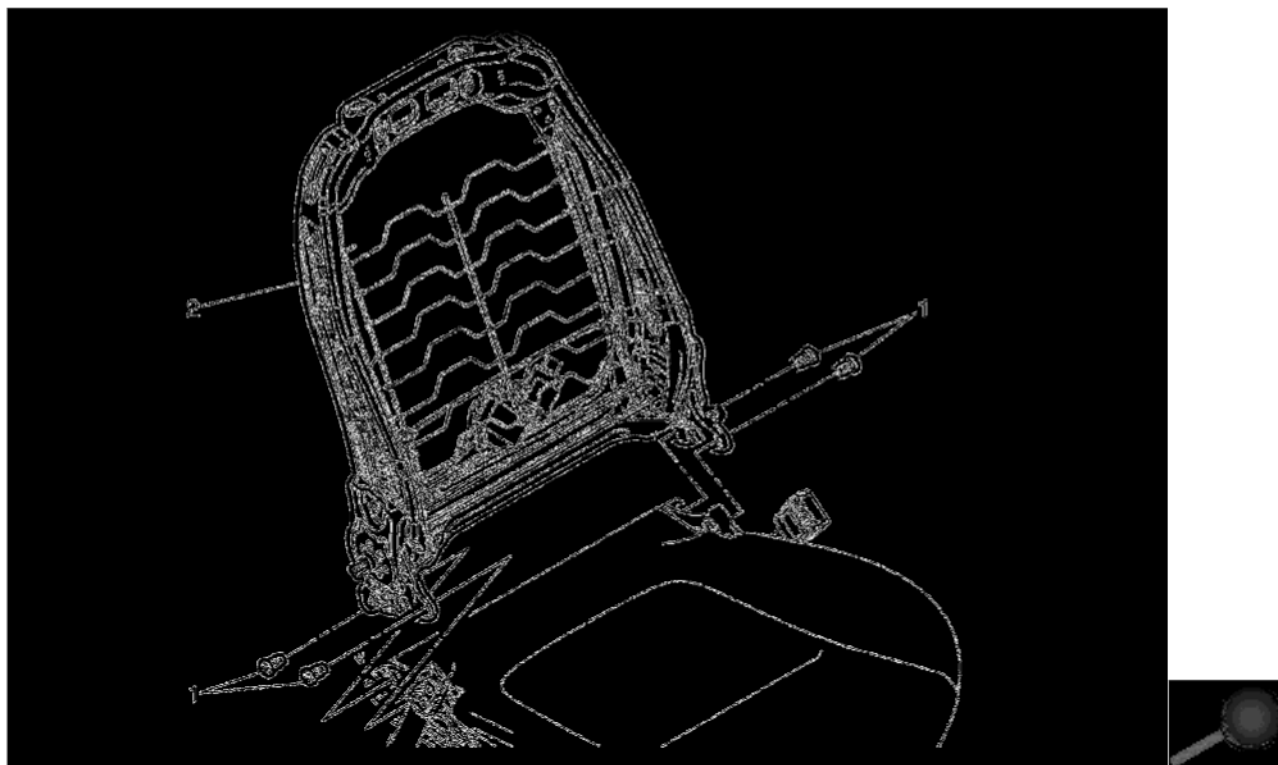


Driver or Passenger Seat Back Cushion Frame Replacement

Callout	Component Name
Warning: Refer to SIR Warning. Warning: Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury. Preliminary Procedures 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Removal and Installation. 3. Remove the driver or passenger seat back cushion cover and pad. Refer to Driver or Passenger Seat Back Cover and Pad Replacement.	
1	Driver or Passenger Seat Back Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution. Procedure Remove the front seat recliner control bracket to gain access to the seat cushion frame bolt. Tighten 35 N•m (26 lb ft)
2	Driver or Passenger Seat Back Cushion Frame Procedure

Callout	Component Name
	1. Disconnect electrical connectors as needed. 2. Transfer components as necessary.


Front Seat Recliner Knob Replacement (Manual)

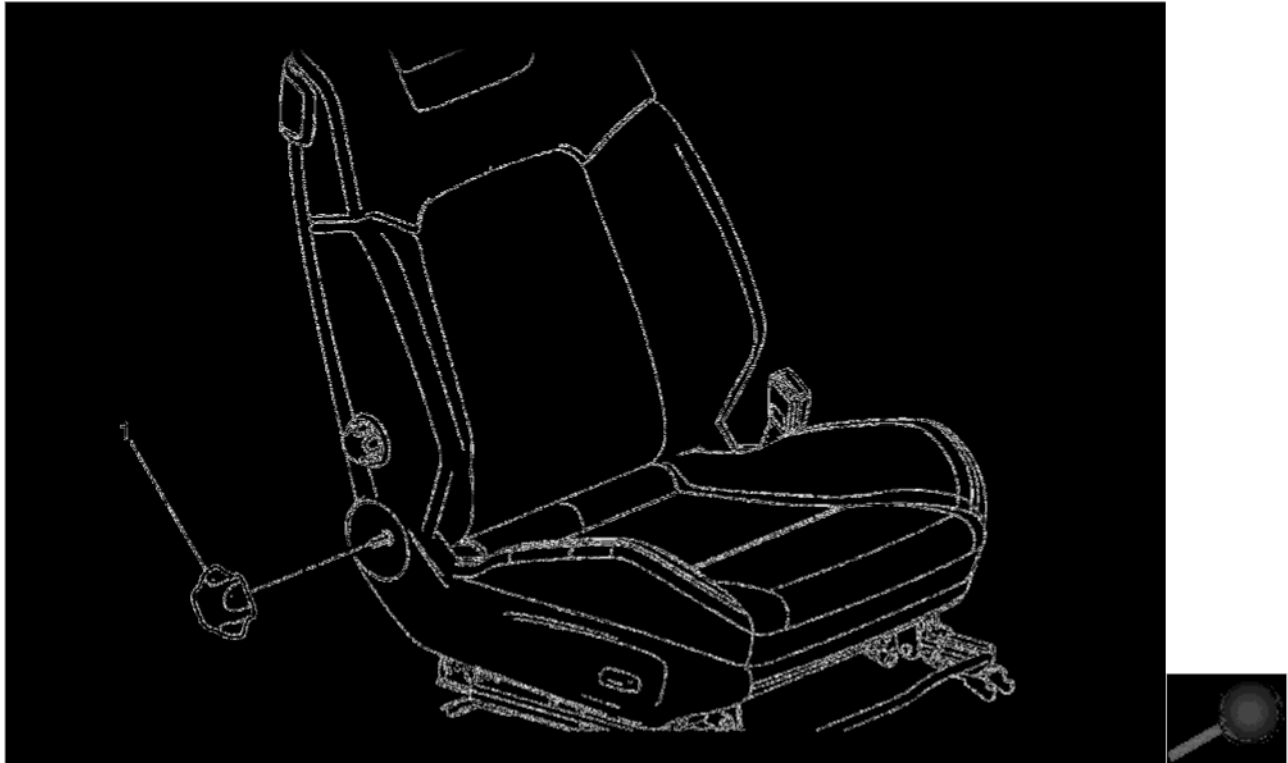

Front Seat Recliner Knob Replacement

Callout	Component Name
1	Front Seat Recliner Knob Procedure Use a flat-bladed tool to release the recliner knob from the front seat cushion outer finish cover.


Front Seat Recliner Control Replacement (2-Way Manual and 4-Way Hybrid)

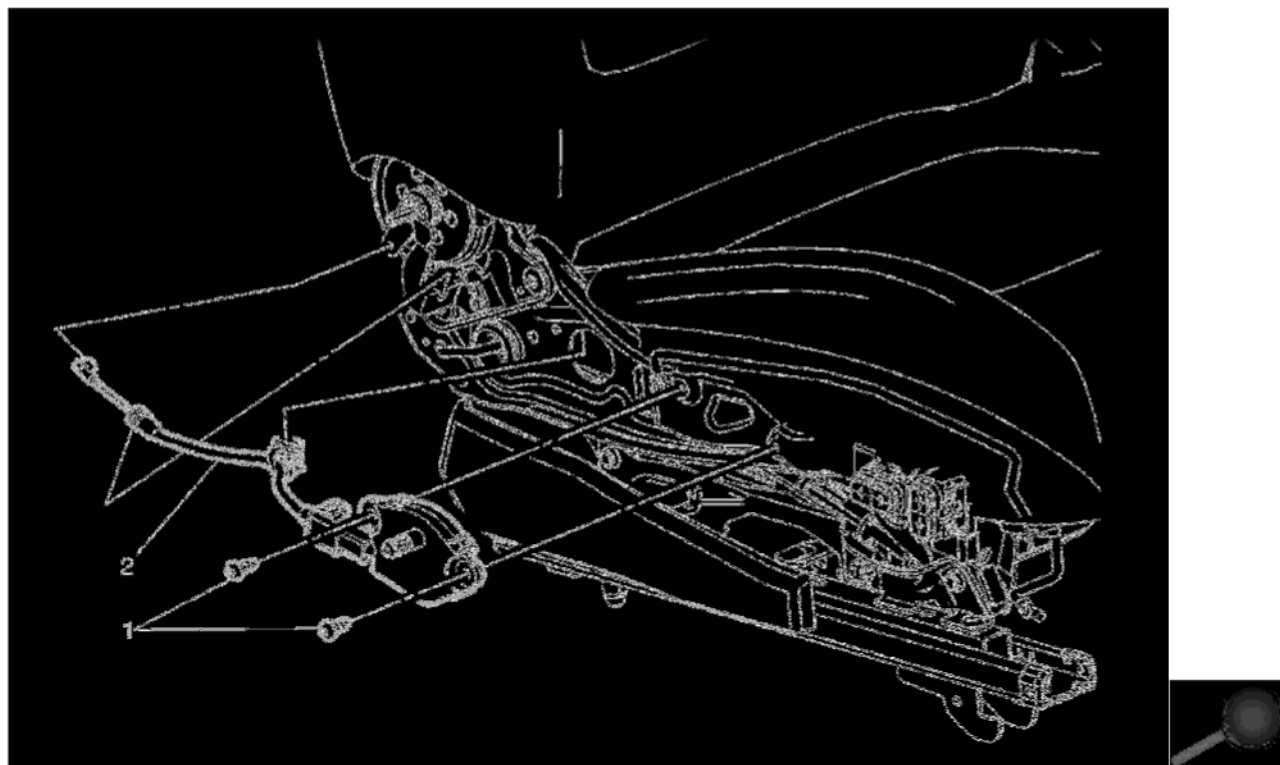

Front Seat Recliner Control Replacement

Callout	Component Name
Preliminary Procedure Remove the front seat cushion outer finish cover. Refer to Front Seat Cushion Outer Finish Cover Replacement .	
1	Front Seat Recliner Control Fastener (Qty: 2) Caution: Refer to Fastener Caution .
2	Front Seat Recliner Control Procedure 1. Note the location and routing of the cable prior to removal in order to ensure proper reinstallation. 2. Detach the recliner cable from the seat cushion outer finish panel bracket. 3. Disengage the recliner cable clip from the seat cushion frame.


Front Seat Back Recliner Handle Replacement (2-Way Manual and 4-Way Hybrid)

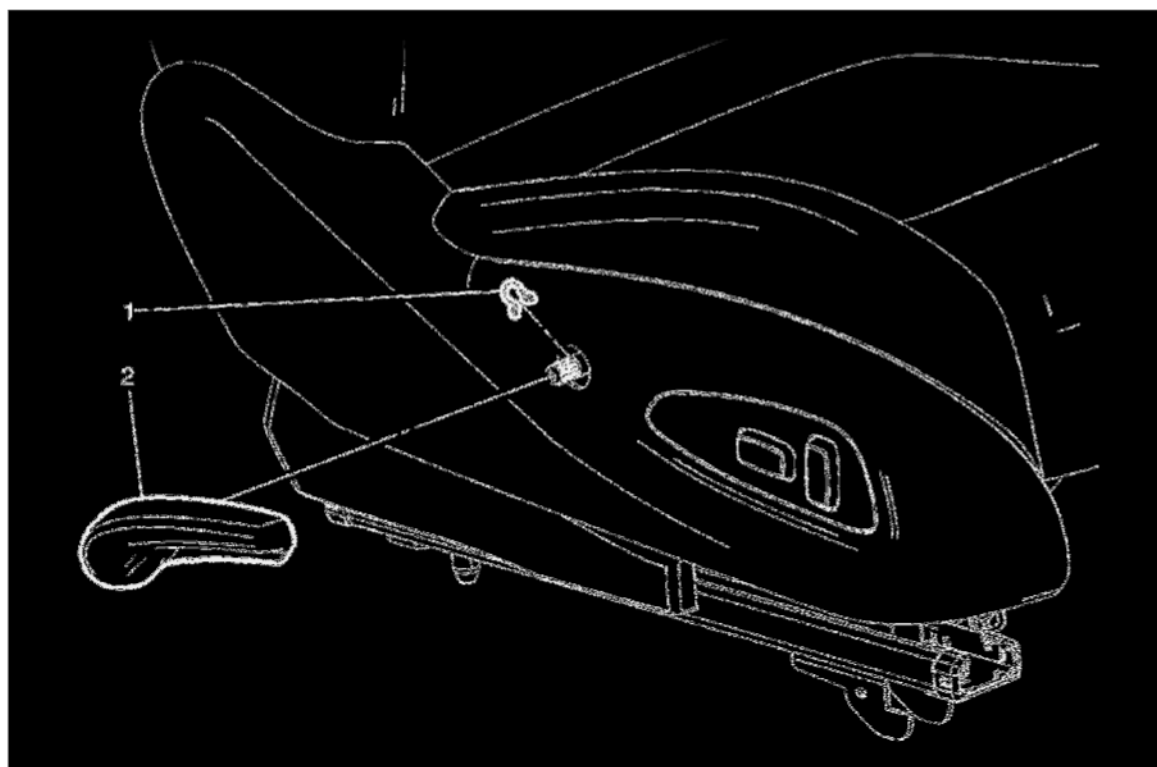

Front Seat Back Recliner Handle Replacement

Callout	Component Name
1	Driver or Passenger Seat Recliner Handle Clip
2	Driver or Passenger Seat Recliner Handle Procedure Use a flat-bladed tool to release the recliner handle from the front seat cushion outer finish cover.


Driver or Passenger Seat Back Cushion Latch Release Handle Replacement (Ute)

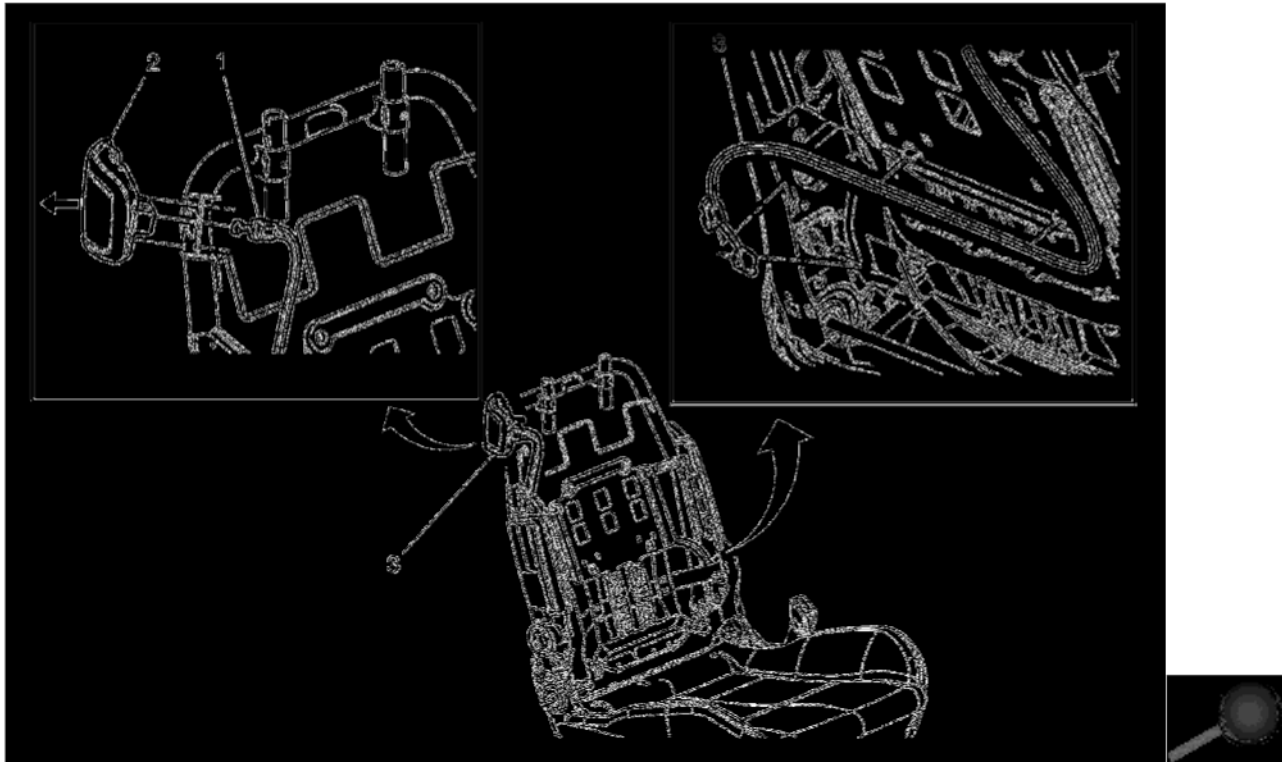

Driver or Passenger Seat Back Cushion Latch Release Handle Replacement

Callout	Component Name
Warning: Refer to SIR Warning . Preliminary Procedure 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the driver or passenger seat back cushion cover and pad. Refer to Driver or Passenger Seat Back Cover and Pad Replacement.	
1	Driver or Passenger Seat Back Cushion Latch Release Handle Cable Procedure 1. Note the location and routing of the handle cable prior to removal in order to ensure proper reinstallation. 2. Disconnect the cables from the handle.
2	Driver or Passenger Seat Back Cushion Latch Release Handle Procedure Slide the handle rearward off the seat back frame bracket.
3	Driver or Passenger Seat Back Cushion Latch Release Handle Assembly Procedure Disconnect the cables from both side of the seat back frame.

Front Seat Easy Entry Handle Replacement (Ute)

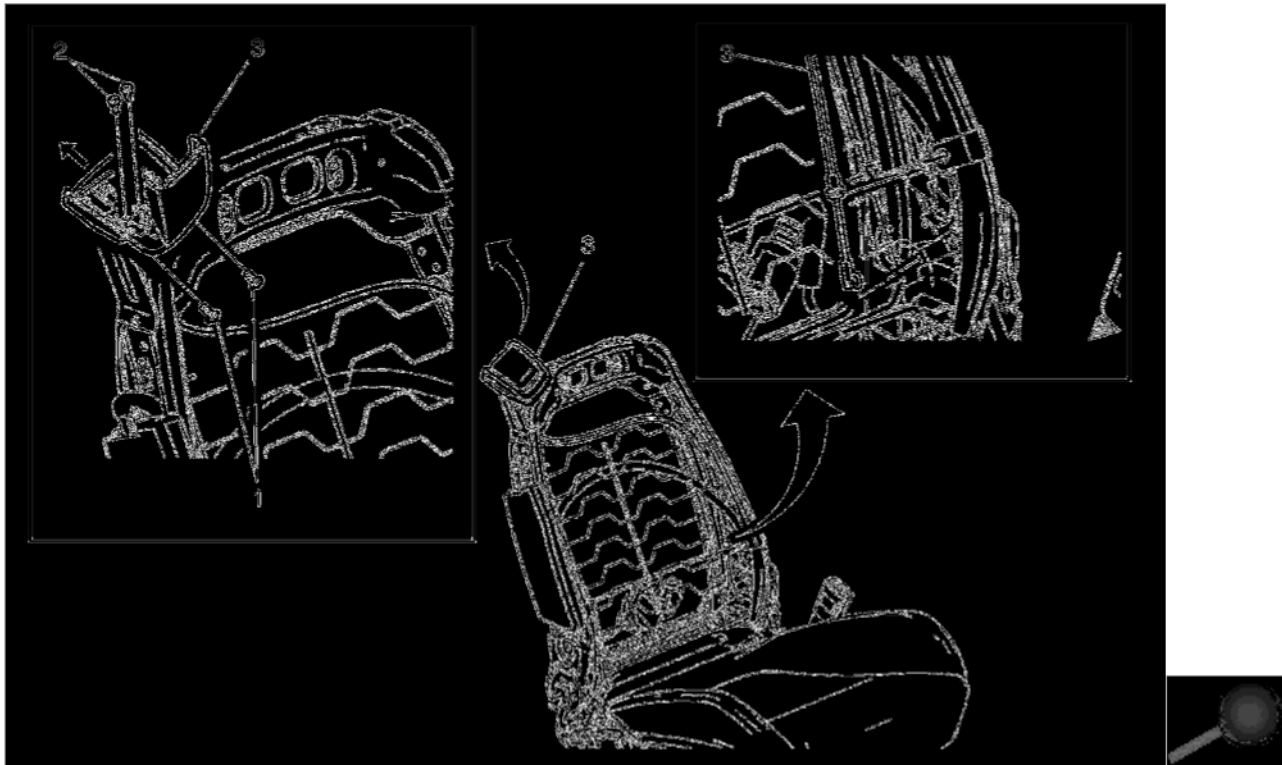


Front Seat Easy Entry Handle Replacement

Callout	Component Name
Warning: Refer to SIR Warning . Preliminary Procedure 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the driver or passenger seat back cushion cover and pad. Refer to Driver or Passenger Seat Back Cover and Pad Replacement.	
1	Front Seat Easy Entry Handle Fastener (Qty: 2) Caution: Refer to Fastener Caution .
2	Front Seat Easy Entry Handle Spacer (Qty: 2)
3	Front Seat Easy Entry Handle Procedure 1. Note the location and routing of the handle cable prior to removal in order to ensure proper reinstallation. 2. Disconnect the cables from both the upper and lower recliner frame brackets. 3. Slide the handle and cable assembly rearward off the seat back frame bracket tab to remove.

[2014 Holden VF Sedan](#) | [VF/WN - Sedan, Ute, Sportwagon, Caprice, Lumina, HSV Service Manual 5617662](#) | [Seats](#) |
[Seat Hardware, Trim, and Upholstery](#) | [Repair Instructions](#) | **Document ID: 3238921**


Driver or Passenger Seat Lumbar Support Actuator Knob Replacement

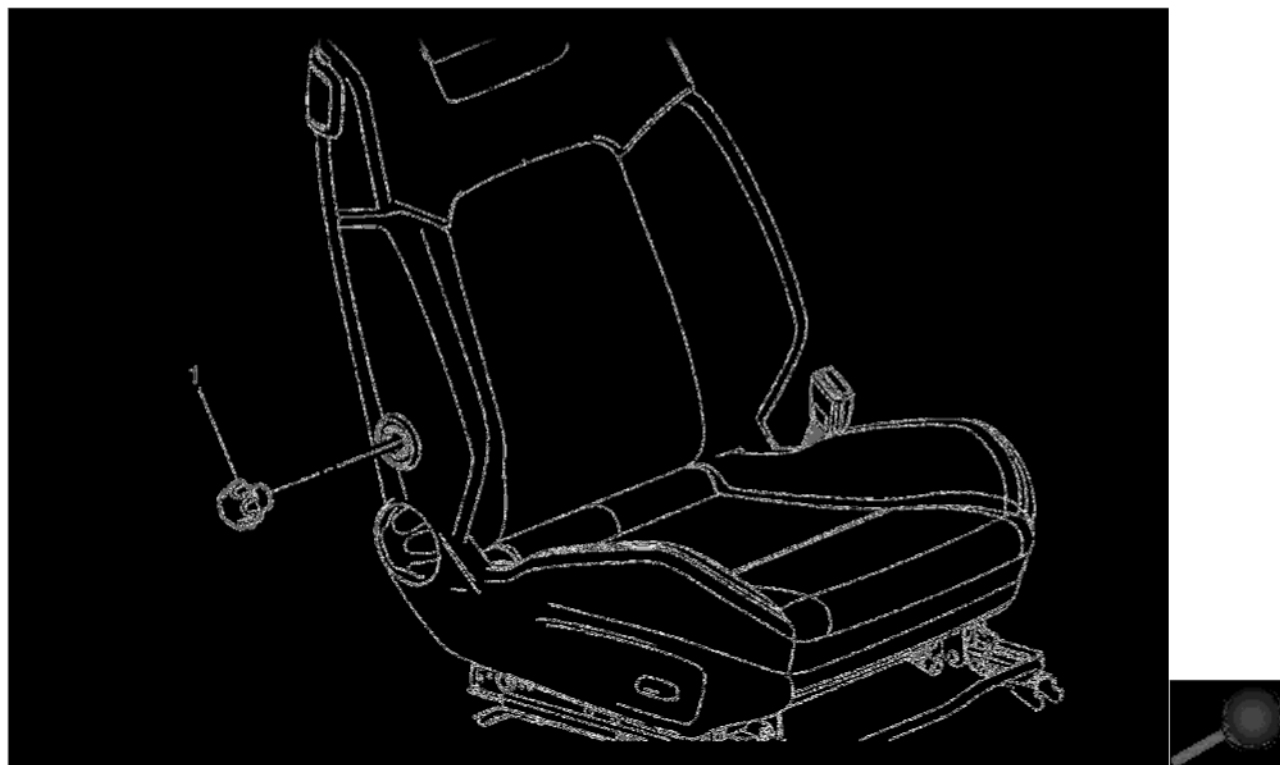

Driver or Passenger Seat Lumbar Support Actuator Knob Replacement

Callout	Component Name
1	Driver or Passenger Seat Lumbar Support Actuator Knob Procedure Use a flat-bladed tool to release the lumbar support actuator knob from the seat back frame.

Rear Seat Armrest Replacement (Sedan)

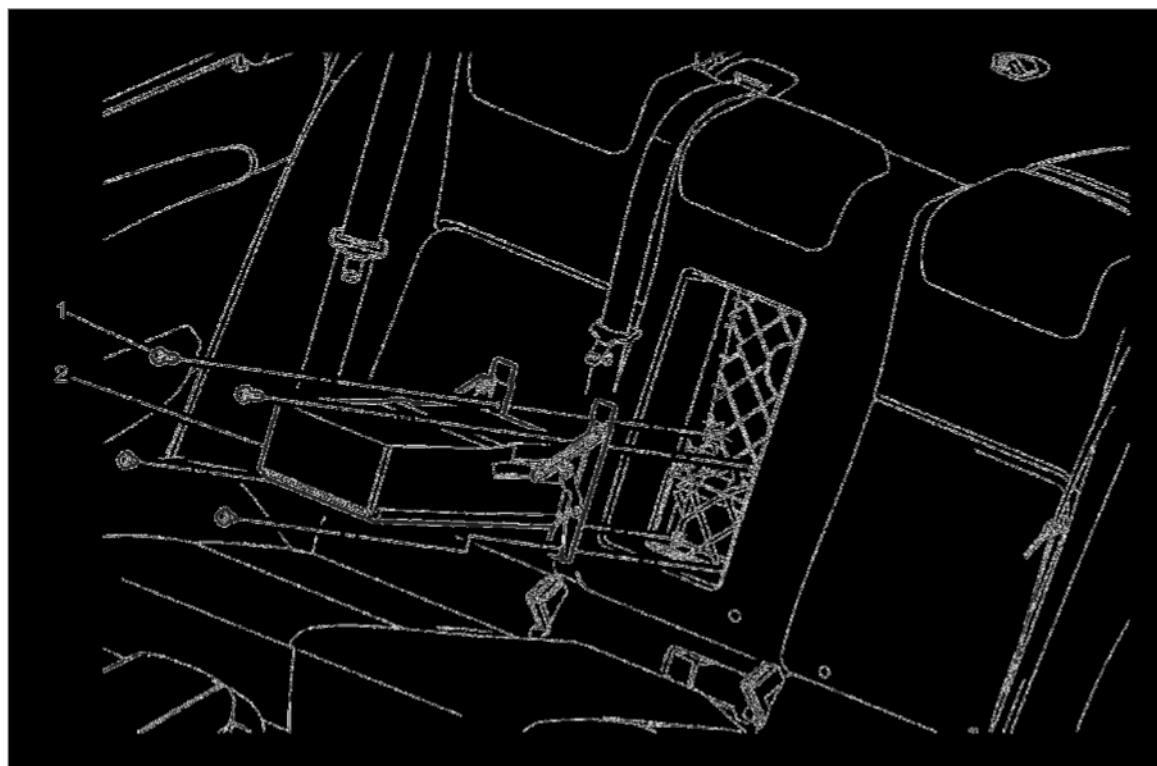


Rear Seat Armrest Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation .	
1	Rear Seat Armrest Fastener (Qty: 4) Caution: Refer to Fastener Caution . Procedure Lower the armrest and disengage the trim flat to gain access to the bolts.
2	Rear Seat Armrest Procedure Remove the armrest assembly by sliding it up and out.


Rear Seat Armrest Replacement (Sportwagon)

Removal Procedure

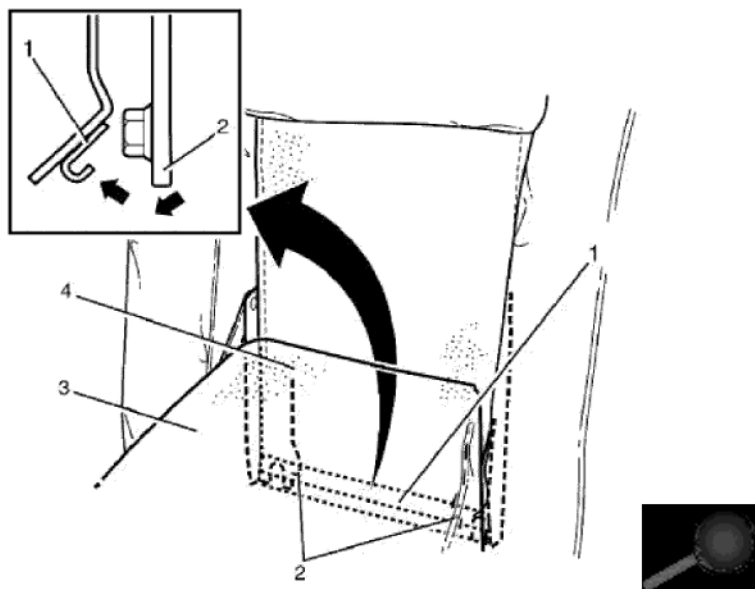

Note: Adjust the armrest (3) to a suitable position to access the right rear seat back cover retainer (1).


1. Carefully pull down on the right rear seat back cover retainer (1) and detach the trim flap (4) from the trim flap retainer (2).

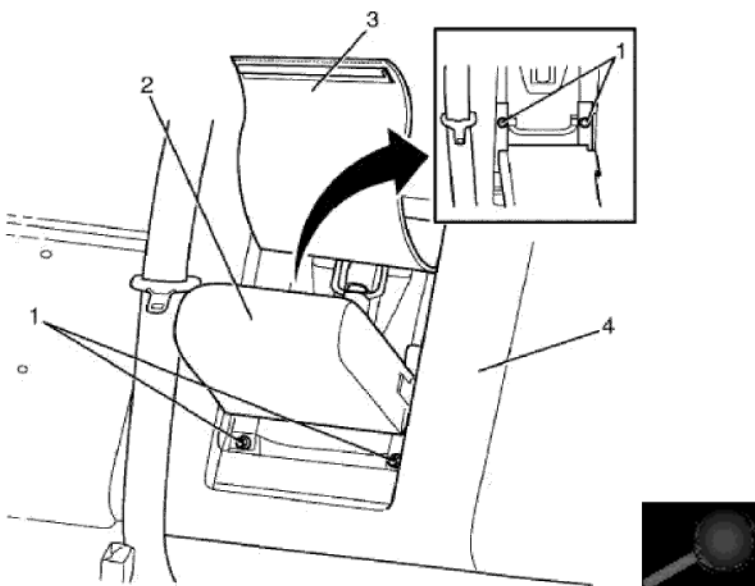

Note: Lift the right rear seat back cover trim flap (3) to expose the armrest to right rear seat back frame retaining bolts (1).

2. Remove the right rear seat back armrest to the right rear seat back frame retaining bolts (1).
3. Remove the right rear seat back armrest assembly (2) from the right rear seat back assembly (4).

Installation Procedure

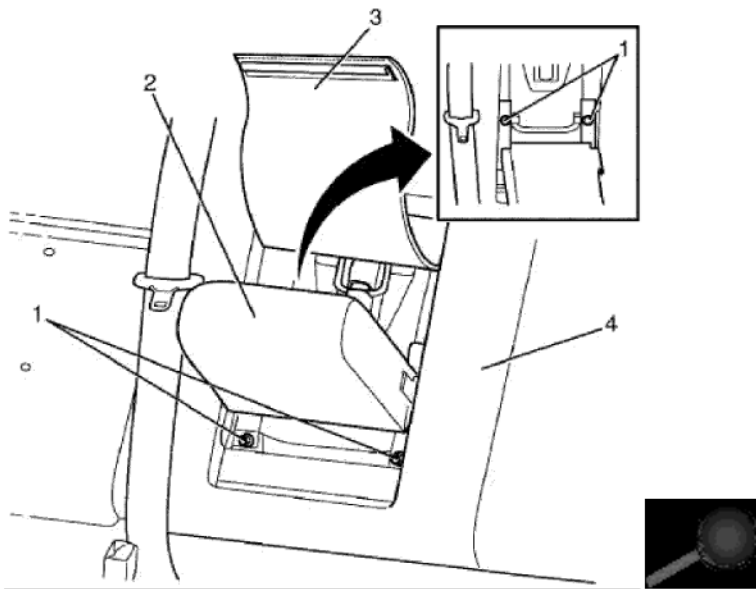


1. Install the right rear seat back armrest assembly (2) to the right rear seat back assembly (4).

Caution: Refer to [Fastener Caution](#).

2. Install the right rear seat back armrest to right rear seat back frame retaining bolts (1).

Tighten


Tighten the bolts to 4 N•m (35 lb in).

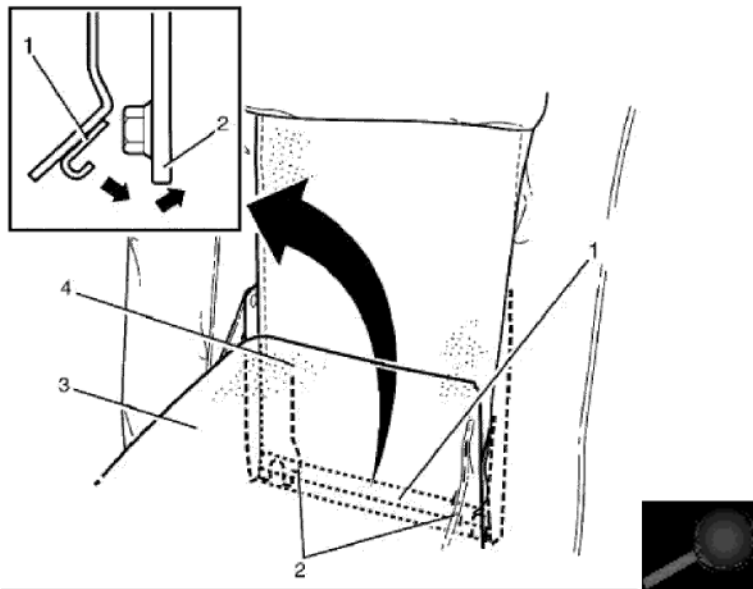

Note: Adjust the armrest (3) to a suitable position to access the right rear seat back cover retainer (1).

3. Carefully pull down on the right rear seat back cover retainer (1) and attach the trim flap (4) to the trim flap retainer (2).


Rear Seat Armrest Hinge Replacement (Sedan)

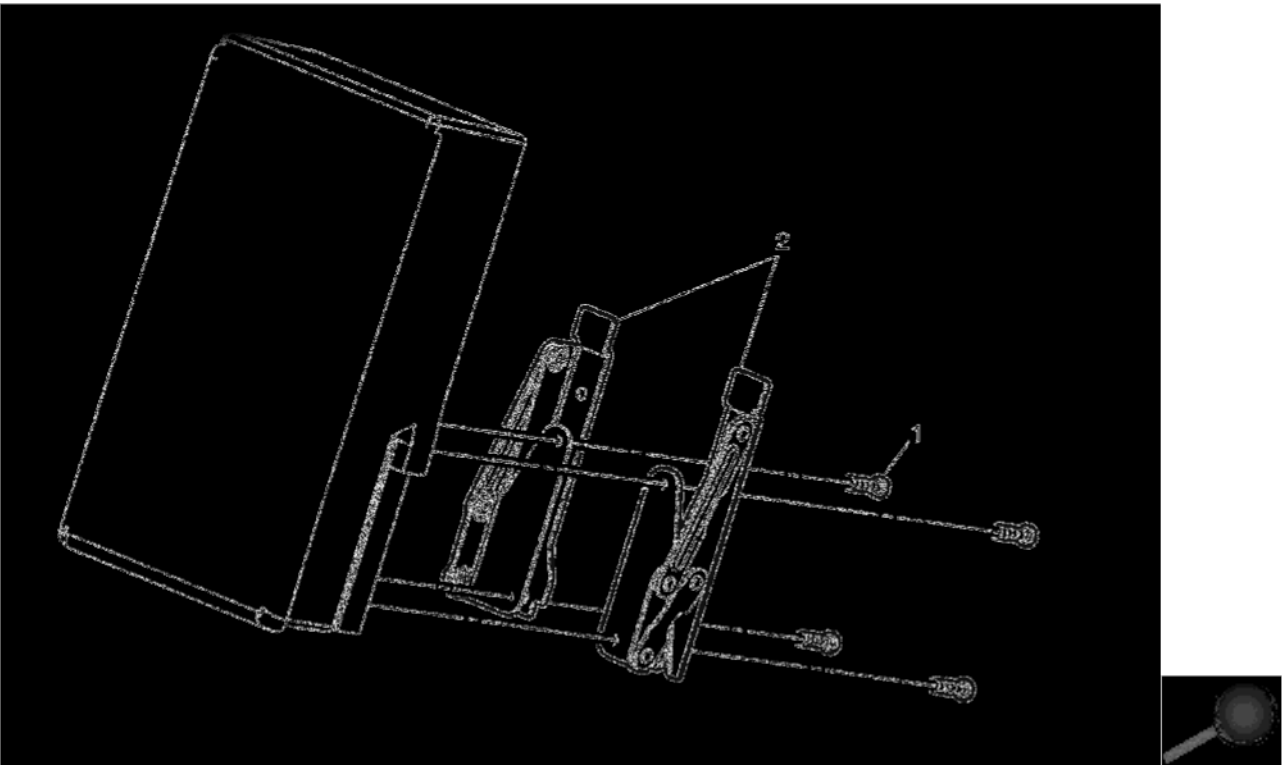

Rear Seat Armrest Hinge Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat armrest. Refer to Rear Seat Armrest Replacement	
1	Rear Seat Armrest Hinge Fastener (Qty: 4) Caution: Refer to Fastener Caution .
2	Rear Seat Armrest Hinge (Qty: 2)


Rear Seat Armrest Cover Replacement

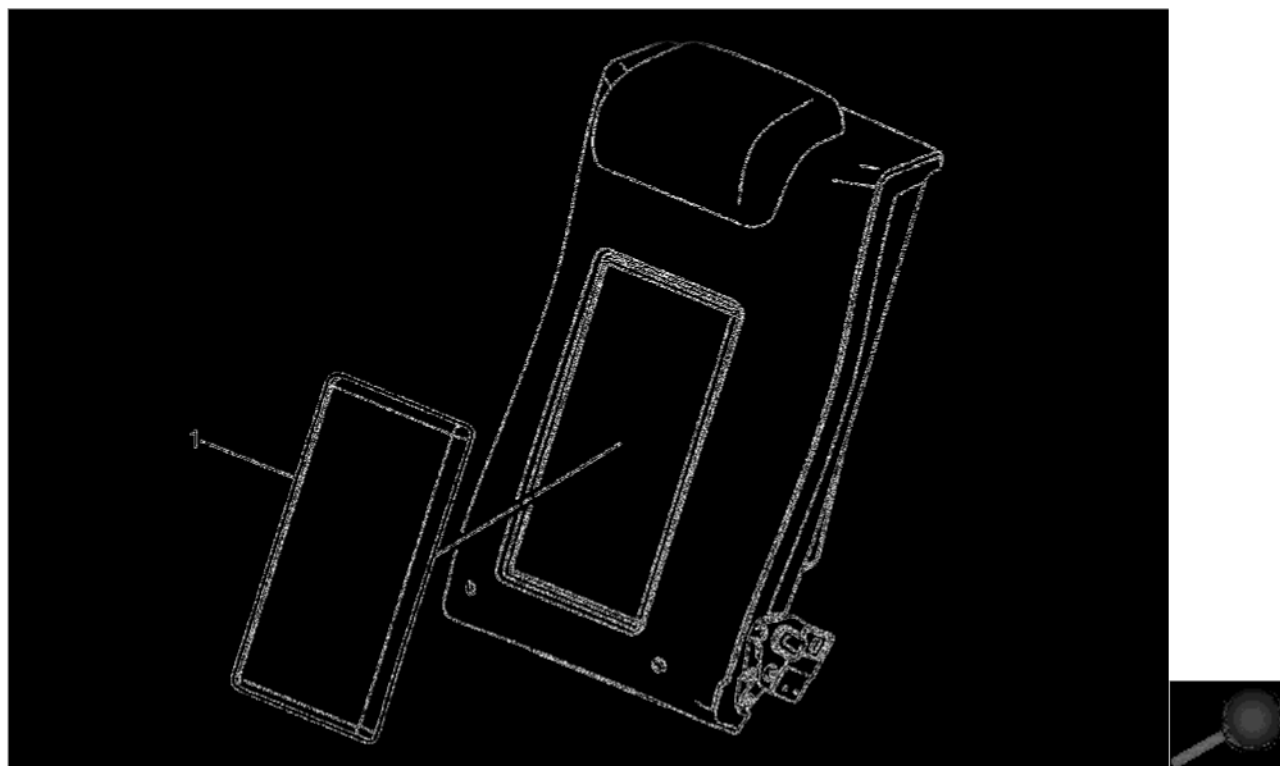

Rear Seat Armrest Cover Replacement

Callout	Component Name
1	Rear Seat Armrest Cover


Rear Seat Armrest Compartment Door Latch Replacement

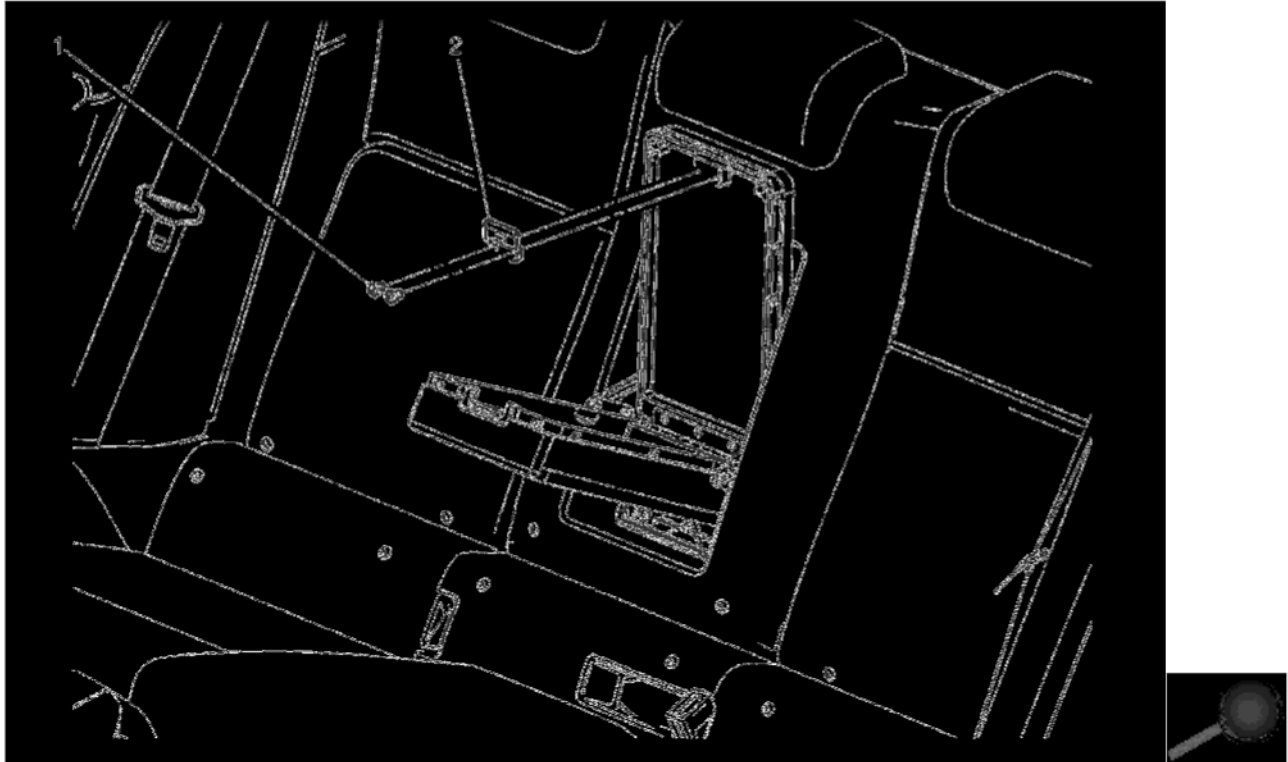

Rear Seat Armrest Compartment Door Latch Replacement

Callout	Component Name
1	Rear Seat Armrest Compartment Door Latch Fasteners (Qty: 2) Caution: Refer to Fastener Caution . Procedure Fold the rear seat center cushion armrest down to gain access to the compartment door latch fasteners.
2	Rear Seat Armrest Compartment Door Latch


Rear Seat Head Restraint Replacement

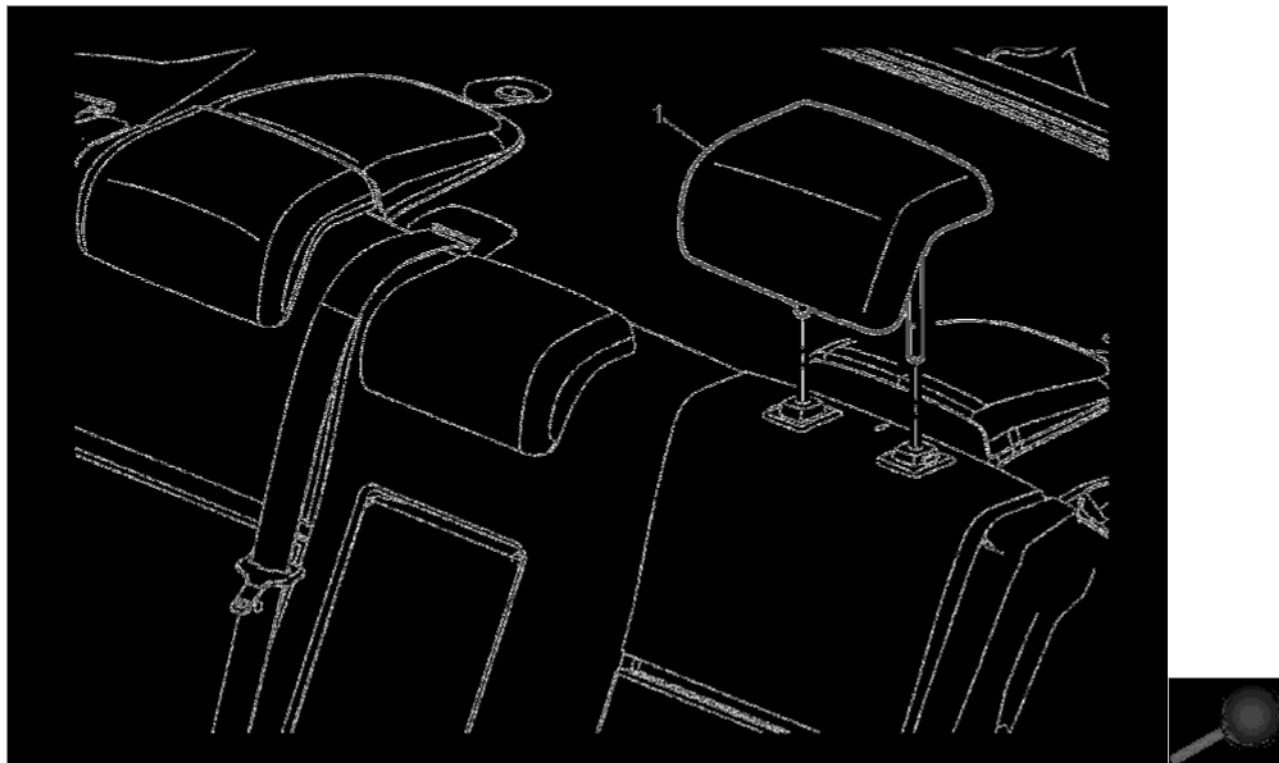

Rear Seat Head Restraint Replacement

Callout	Component Name
1	Rear Seat Head Restraint Procedure 1. Lower the seat back forward to gain space between the head restraint and the roof. 2. Depress the large button on the head restraint guide and raise the head restraint to the full up position. 3. Depress the large and small buttons found on the head restraint guides and pull upward on the head restraint to remove.


Rear Seat Head Restraint Guide Replacement

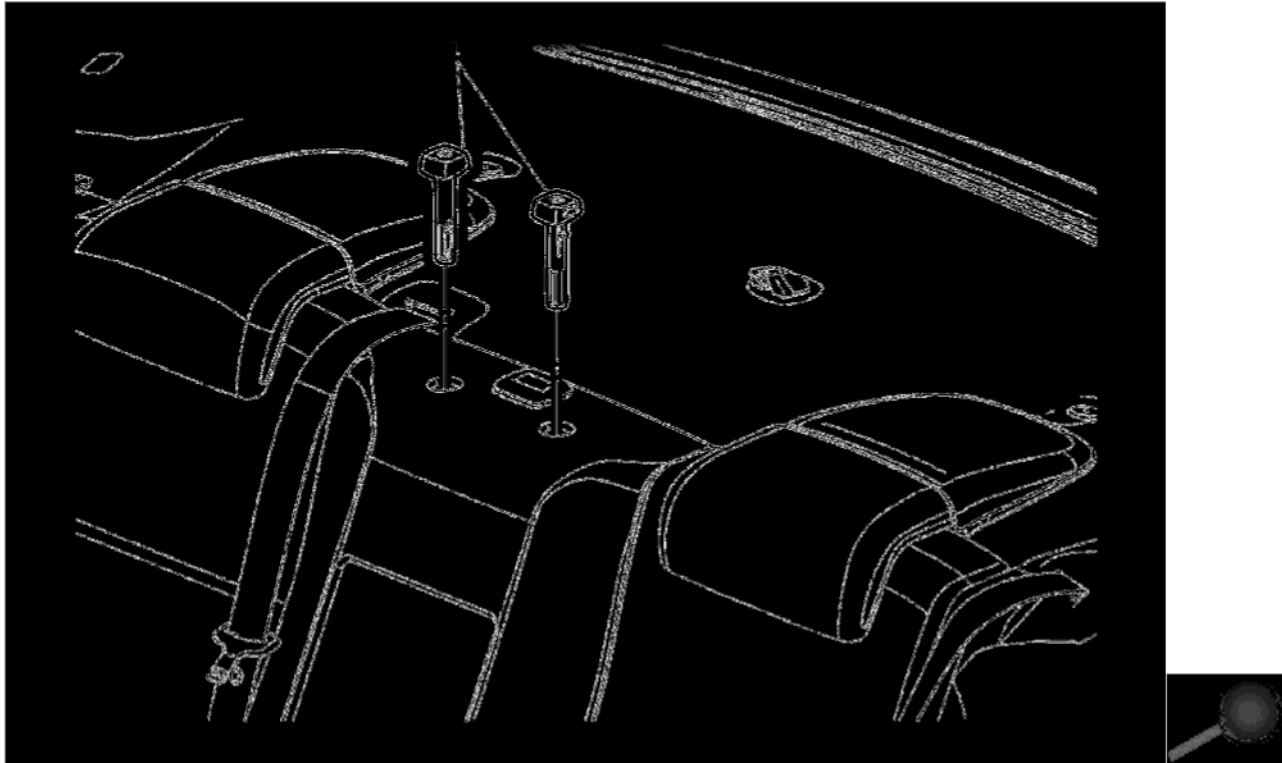

Rear Seat Head Restraint Guide Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat head restraint. Refer to Rear Seat Head Restraint Replacement .	
1	Rear Seat Head Restraint Guide Procedure 1. Lower the seat back forward to gain space between the head restraint guide and the roof. 2. Using a suitable flat-bladed tool, slide the tool into the guide until you find the slot on the inboard side of the guide. Push inward on the guide slot tab , while pulling upward to remove the guide from the seat back frame. Note: The guide is released from the inboard side by inserting a suitable flat-bladed tool into the slot and prying it inward until released.


Rear Seat Cup Holder Replacement

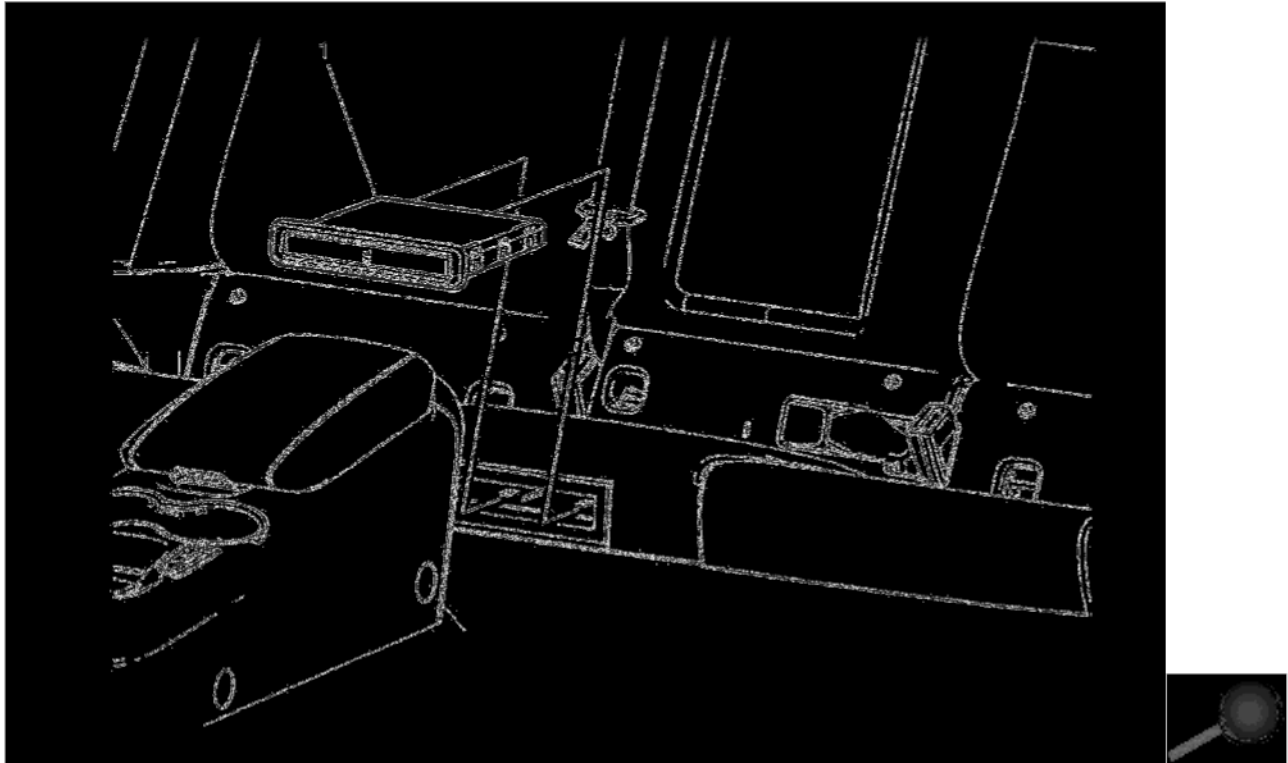

Rear Seat Cup Holder Replacement

Callout	Component Name
1	Rear Seat Cup Holder Procedure Remove the rear seat cup holder by gently pulling the whole cup assembly forward releasing the two lower tabs.

Rear Seat Back Bolster Replacement (Sportwagon)

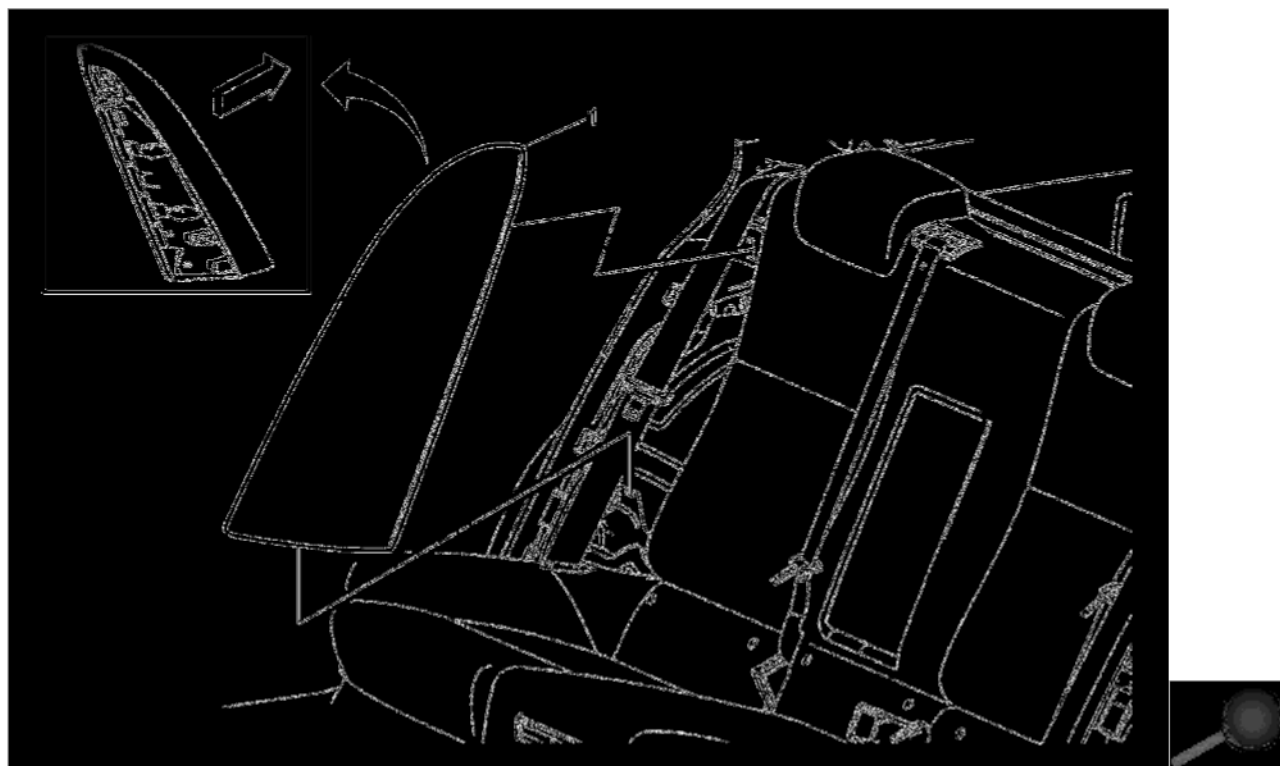


Rear Seat Back Bolster Replacement

Callout	Component Name
1	Rear Seat Back Cushion Bolster Warning: Refer to SIR Warning. Warning: Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury. Procedure 1. Disable the SIR system. Refer to SIR Disabling and Enabling Note: Fold rear seat back cushion down to gain better access to the back of bolster. 2. Unlock and slide the center tab retainer forward on the bolster. 3. With access from I/B side, use pliers to squeeze retention tabs together while pulling rearward on upper bolster to release from sheet metal. 4. Slide the Lock Slider Mechanism forward in vehicle to retract the retaining tab expansion feature. Note: Sliding the lock slider mechanism forward in vehicle releases the retention tabs. Sliding the lock slider mechanism rearward in the vehicle expands the retention tabs. 5. Pull the upper seat back cushion bolster forward. 6. Pull the seat back cushion bolster up. 7. Disconnect the electrical connector. 8. Remove rear seat back cushion bolster.

Callout	Component Name
	9. When installing bolster, slide lock slider mechanism rearward in vehicle to expand the retaining tabs.


Rear Seat Center Head Restraint Replacement

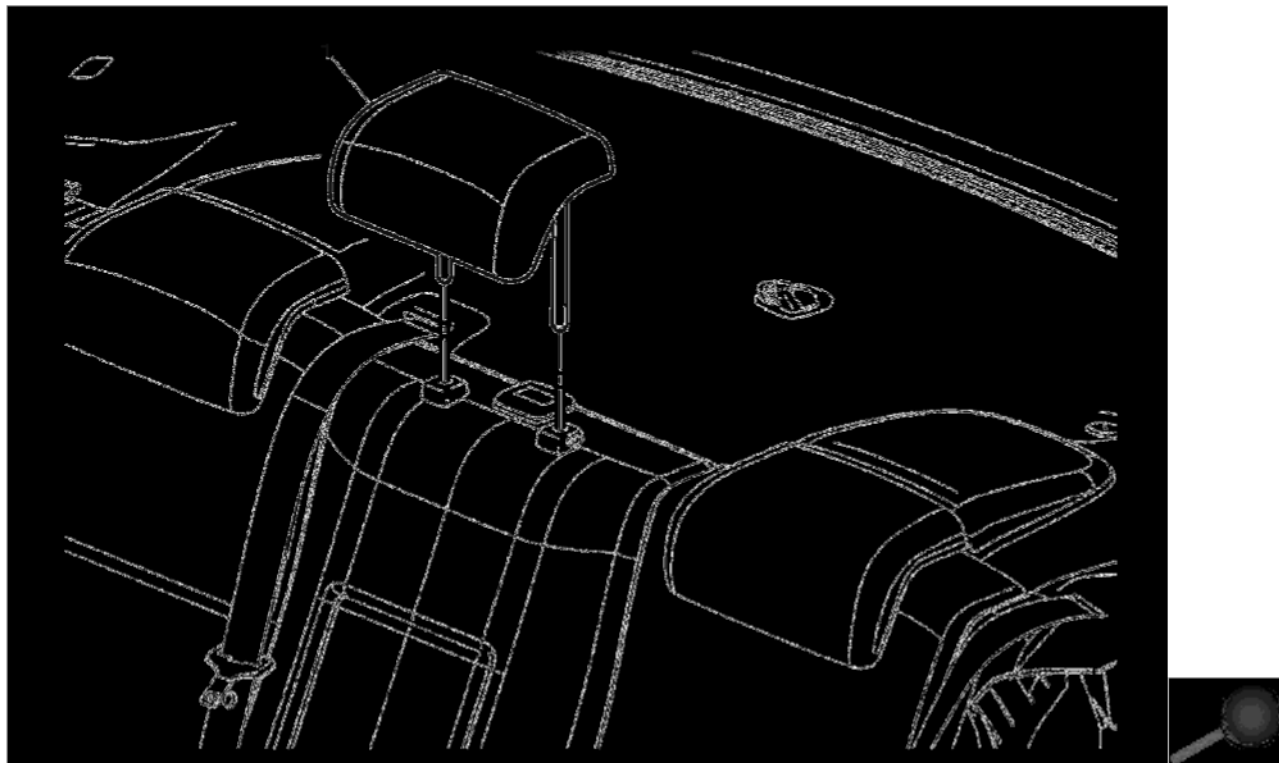

Rear Seat Center Head Restraint Replacement

Callout	Component Name
1	Rear Seat Center Head Restraint Procedure 1. Depress the large button on the head restraint guide and raise the head restraint to the full up position. 2. Depress the large and small buttons found on the head restraint guides and pull upward on the head restraint to remove.


Rear Seat Frame Replacement (40% Sportwagon)

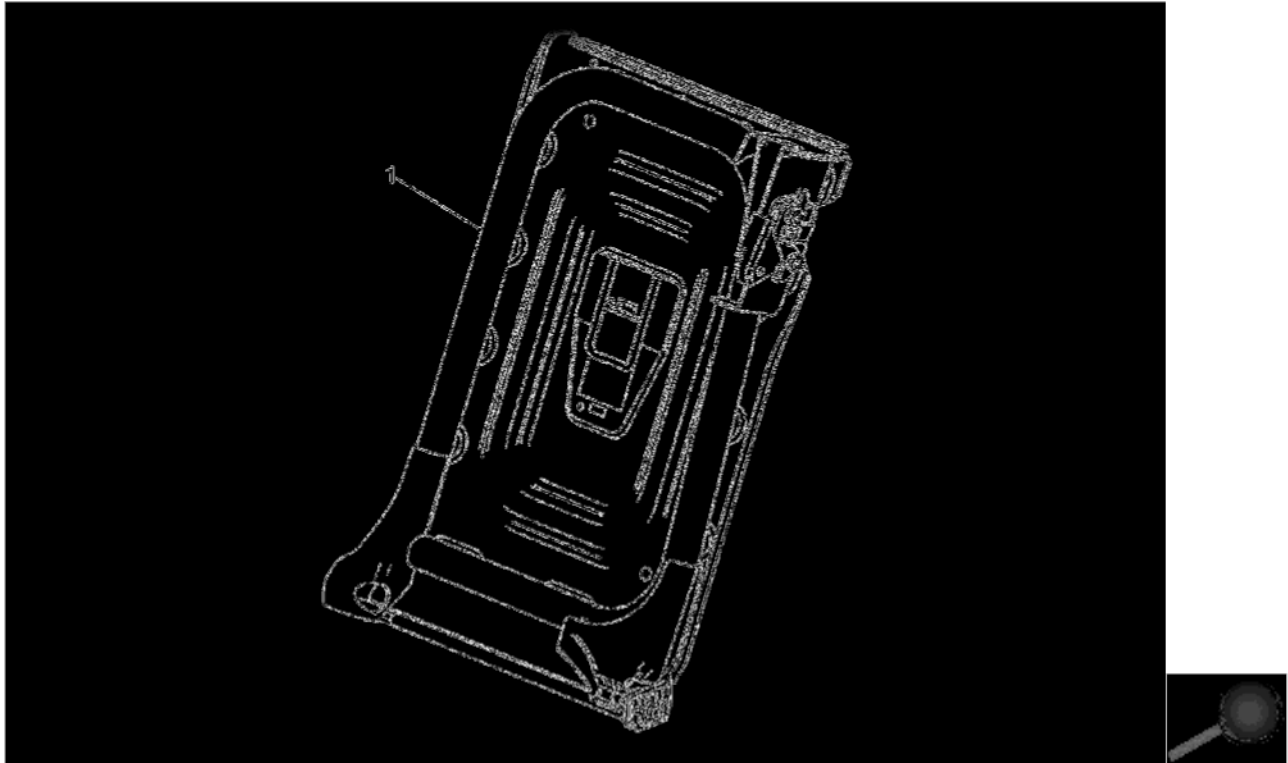

Rear Seat Frame Replacement

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation. 2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. 3. Remove the rear seat latch.	
1	Rear Seat Back Cushion Frame Procedure If replacing the rear seat back cushion frame, transfer components as necessary.

Rear Seat Frame Replacement (60% Sportwagon)

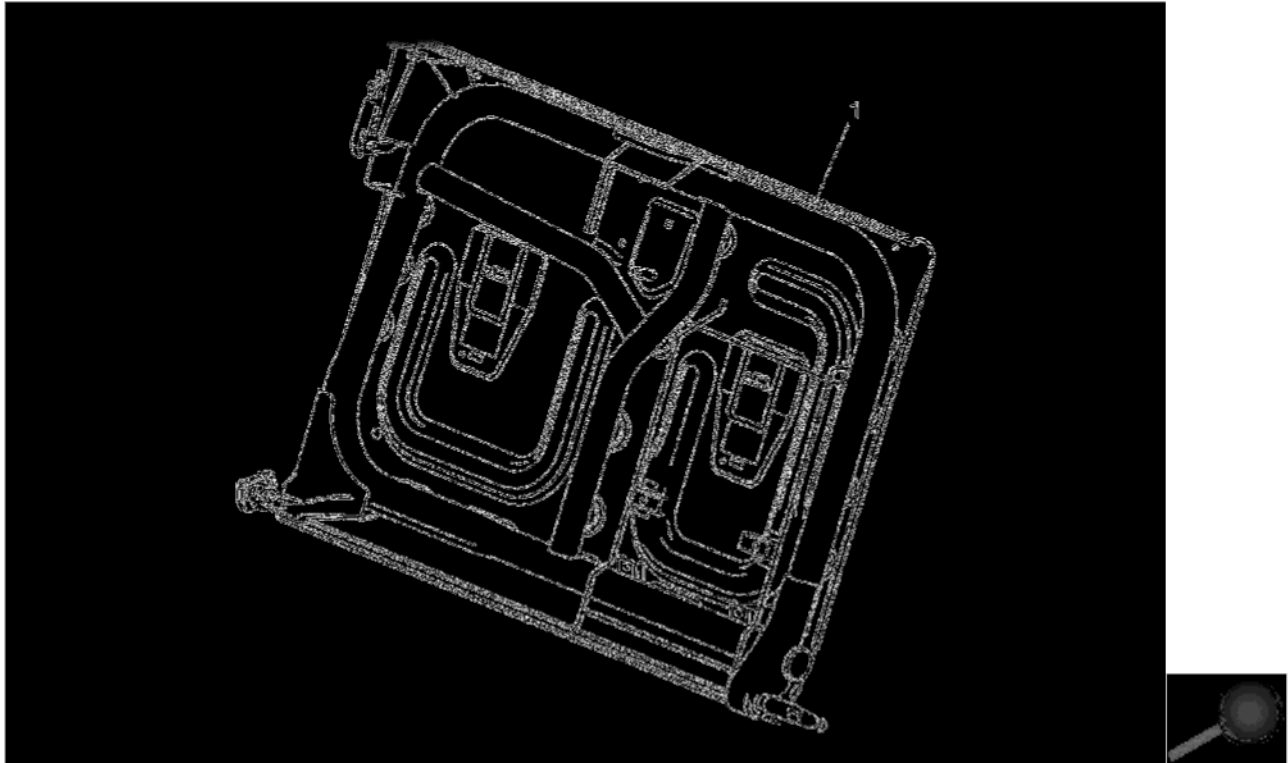


Rear Seat Frame Replacement

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation. 2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. 3. Remove the rear seat latch. 4. Remove the rear center seat belt retractor. Refer to Rear Center Seat Belt Retractor Replacement.	
1	Rear Seat Back Cushion Frame Procedure If replacing the rear seat back cushion frame, transfer components as necessary.


Rear Seat Cushion Cover and Pad Replacement

Removal Procedure


1. Remove the rear seat cushion. Refer to [Rear Seat Cushion Removal and Installation](#).
2. Remove the rear seat cup holder, if equipped. Refer to [Rear Seat Cup Holder Replacement](#).

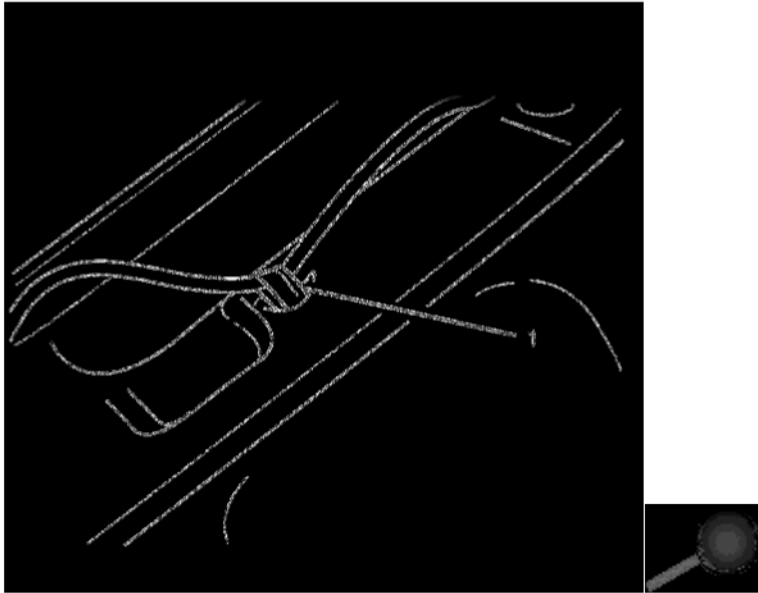


3. Detach the rear seat cushion cover from the base pad by disengaging the cushion cover retaining clip (1), carry this procedure until all the retaining clips are detach.

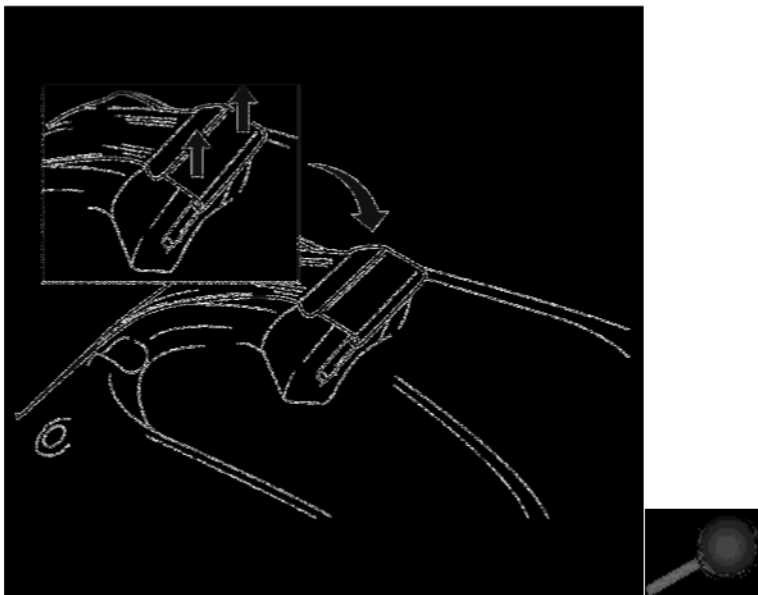

4. Detach the back of the rear seat cushion cover, by unhooking the J-strips from the base pad.

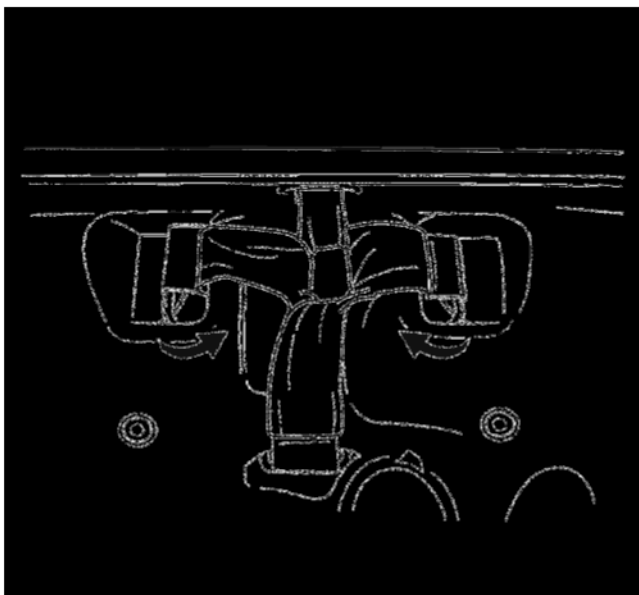


5. Detach the seat belt cross strap, by unhooking the J-strips from the base pad.

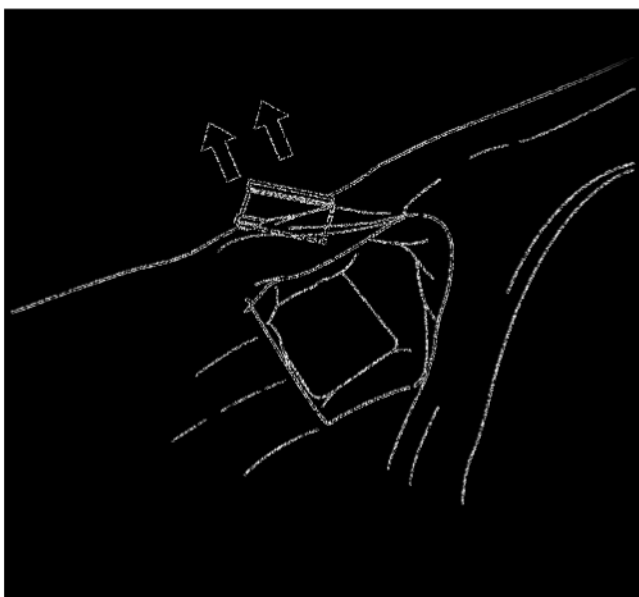


6. Detach the front of the rear seat cushion cover.

7. Turn the rear seat cushion over.

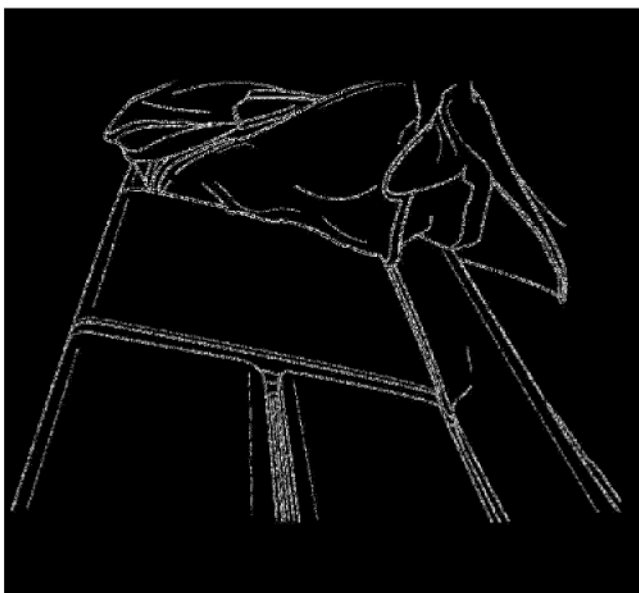


8. Remove the rear seat cushion cover.

[Installation Procedure](#)

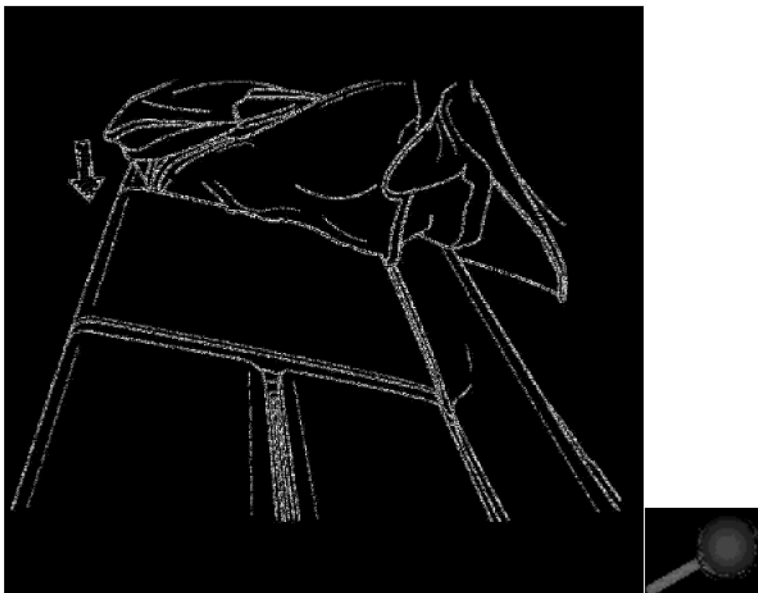


1. Install the rear seat cushion cover.
2. Turn the rear seat cushion over.


- Note:** When installing the front of the cover, ensure the corners are pulled tight.
3. Install the front of the rear seat cushion cover.

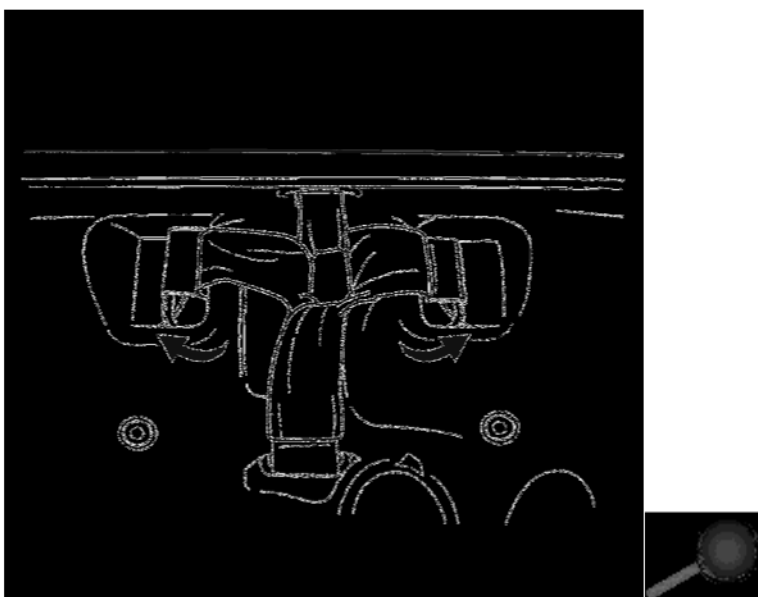

4. Install the seat belt cross strap, by hooking the J-strips onto the base pad.

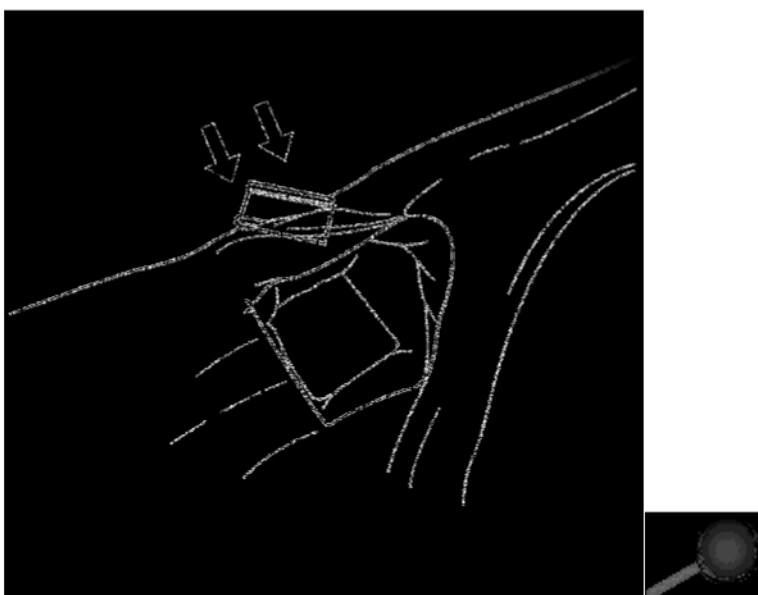


5. Install the back of the rear seat cushion cover.

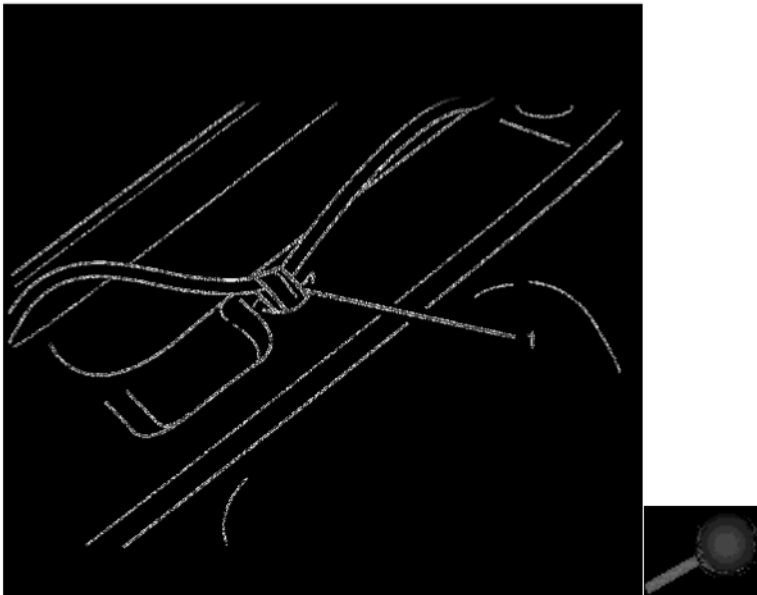

6. Attach the cushion cover to the base pad by attaching the cushion cover retaining clip (1), listen for an audible click to confirm fitting.
7. Firmly run your finger in the seat cushion channels, to ensure a correct fitting.
8. Remove the rear seat cup holder, if equipped. Refer to [Rear Seat Cup Holder Replacement](#).
9. Install the rear seat cushion. Refer to [Rear Seat Cushion Removal and Installation](#).


Rear Seat Cushion Removal and Installation (Sportwagon)

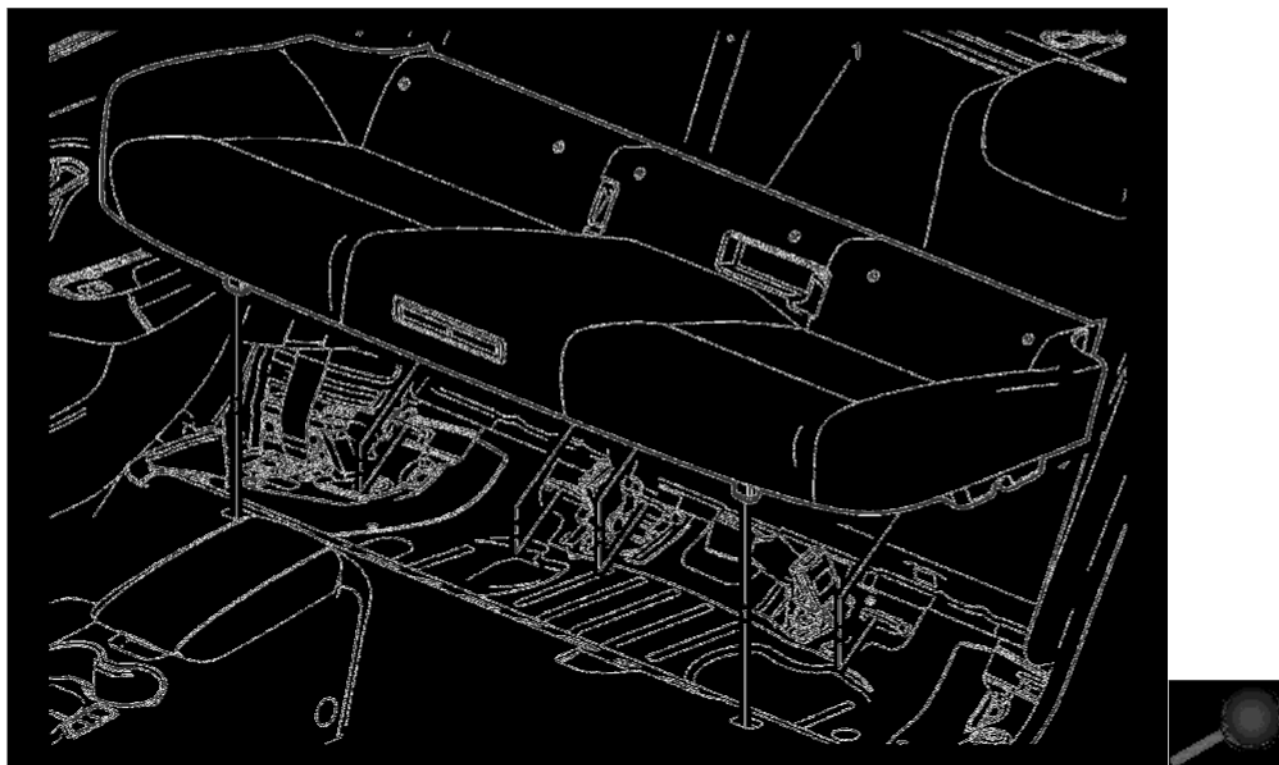

Rear Seat Cushion Removal and Installation

Callout	Component Name
1	Rear Seat Cushion Procedure 1. Pull up on the front of the rear seat to disengage the retainers. 2. Pull out the rear of the seat from the wire retainers. 3. Remove the rear seat center shoulder belt anchor fastener and route the belt through the seat bottom, if equipped. 4. Disconnect the electrical connector. 5. Remove the rear seat.


Rear Seat Cushion Removal and Installation (Sedan)

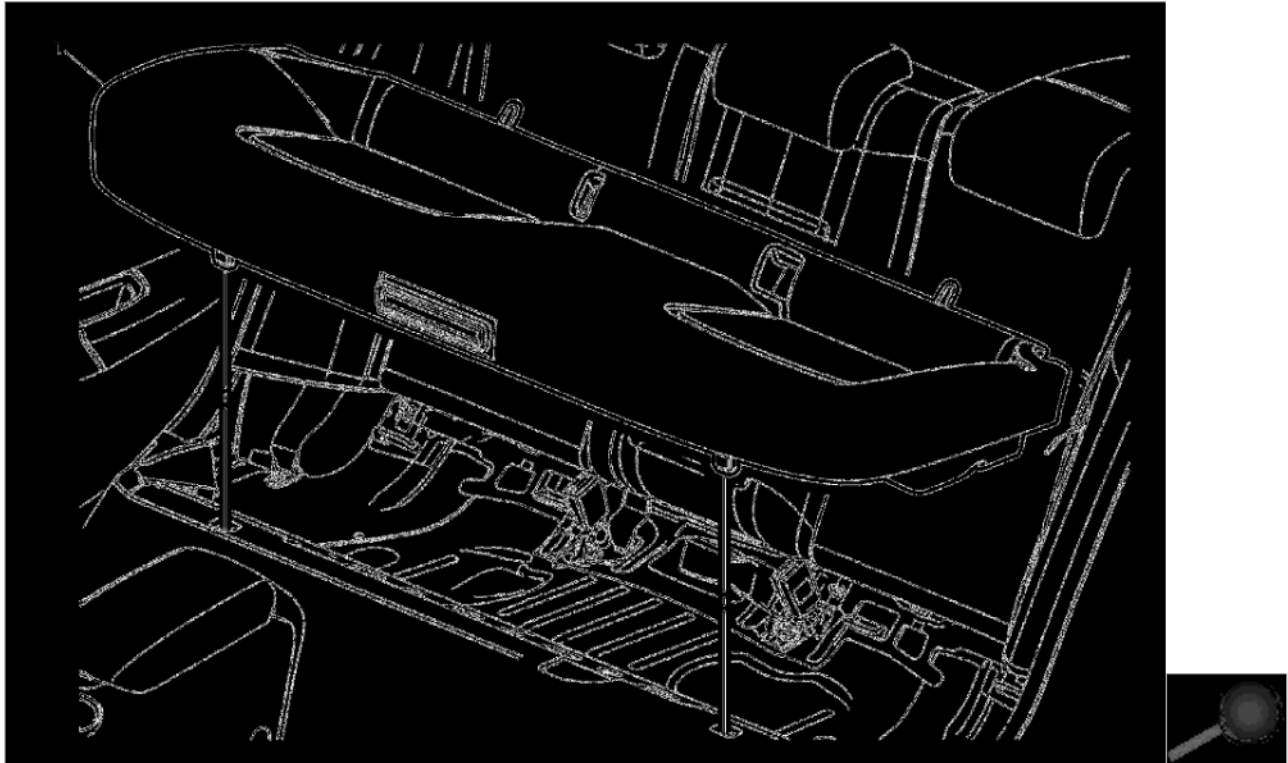

Rear Seat Cushion Removal and Installation

Callout	Component Name
1	Rear Seat Cushion Procedure 1. Pull up on the front of the rear seat to disengage the retainers. 2. Pull out the rear of the seat from the wire retainers. 3. Remove the rear seat center shoulder belt anchor fastener and route the belt through the seat bottom, if equipped. 4. Remove the rear seat.


Rear Seat Back Cushion Latch Striker Replacement (Sedan)

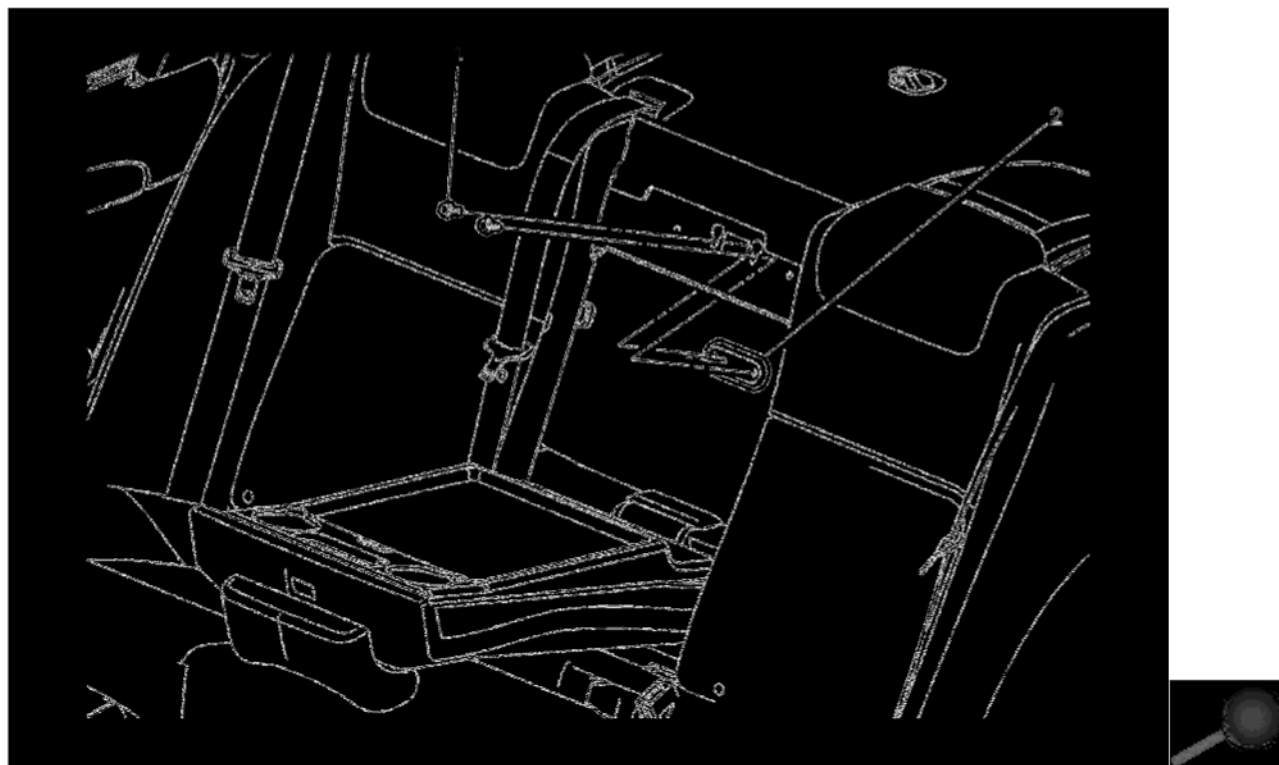

Rear Seat Back Cushion Latch Striker Replacement

Callout	Component Name
1	Rear Seat Back Cushion Latch Striker Fastener (Qty: 2) Caution: Refer to Fastener Caution . Procedure Fold the rear seat back center cushion forward. Tighten 40 N•m (30 lb ft)
2	Rear Seat Back Cushion Latch Striker


Rear Seat Back Center Cushion Latch Replacement (Sedan)

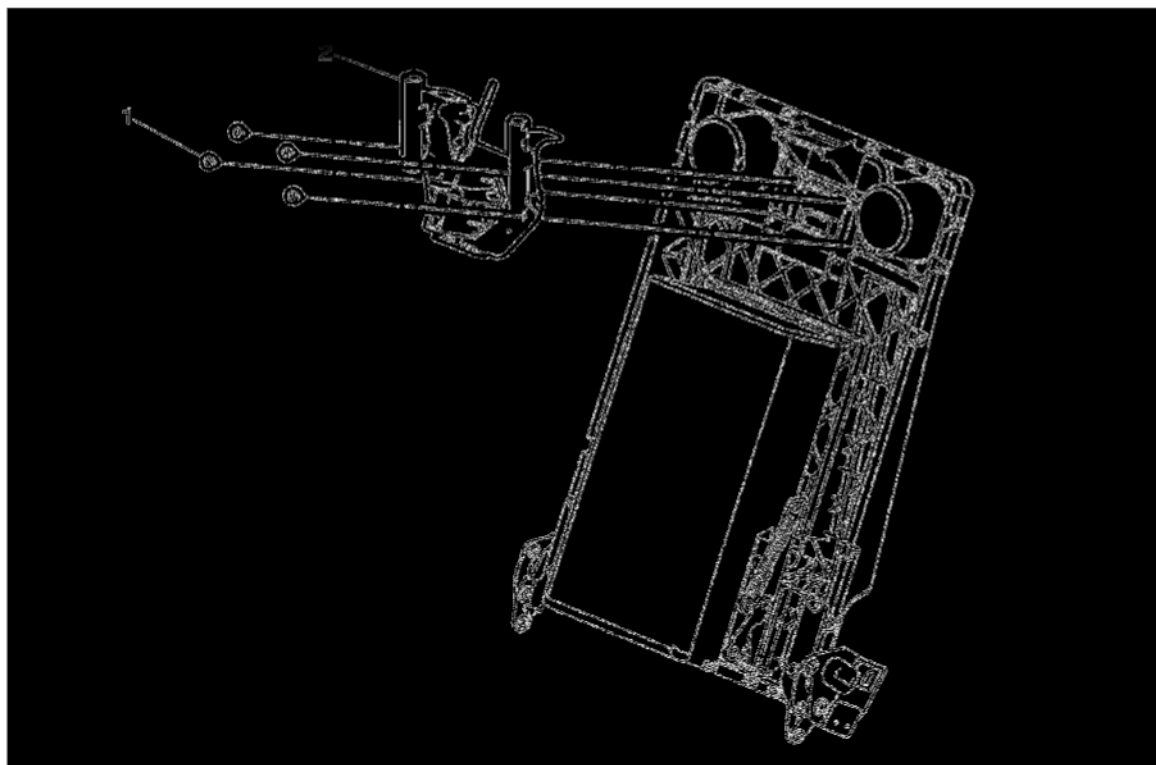

Rear Seat Back Center Cushion Latch Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement	
1	Rear Seat Back Center Cushion Latch Fastener (Qty: 2) Caution: Refer to Fastener Caution .
2	Rear Seat Back Center Cushion Latch


Rear Seat Back Latch Replacement (Sportwagon)

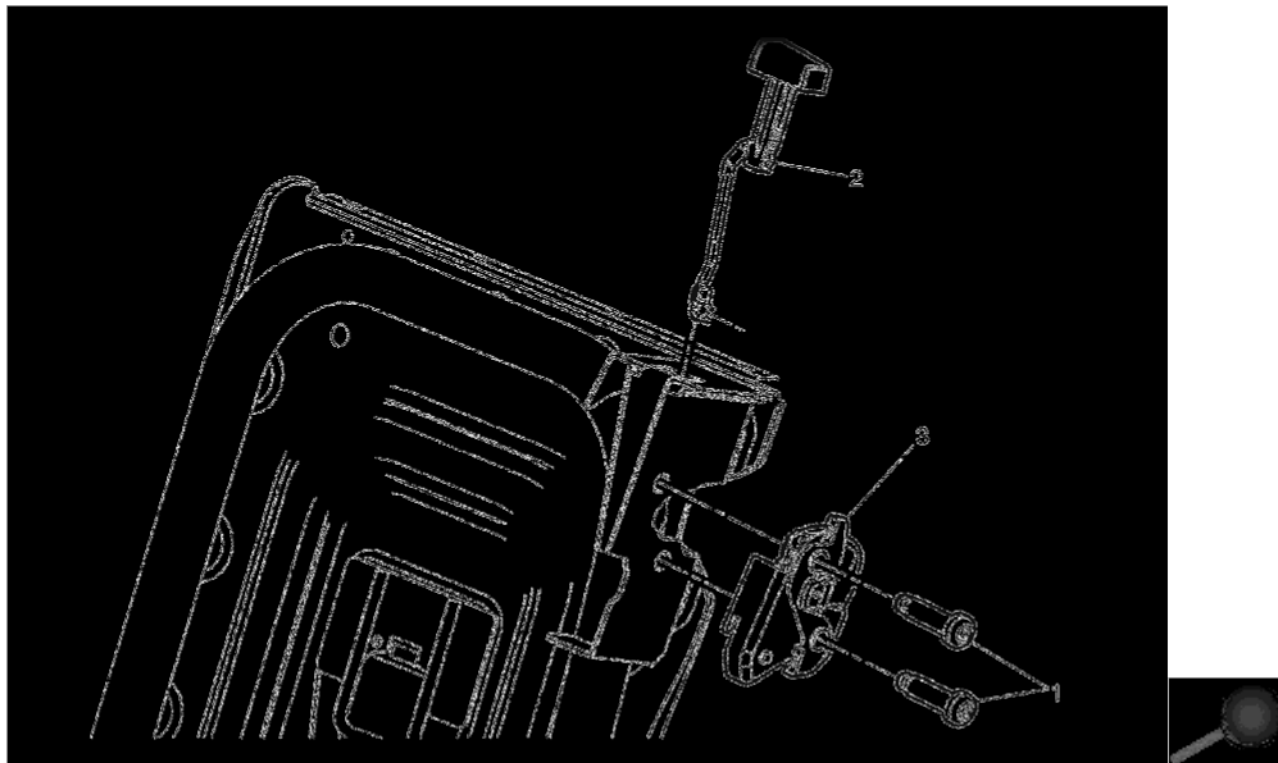

Rear Seat Back Latch Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement	
1	Rear Seat Back Latch Fastener (Qty: 2) Caution: Refer to Fastener Caution . Procedure Disengage the rear seat back latch release push button and actuator lock linkage from the latch assembly. Tighten 45 N•m (33 lb ft)
2	Rear Seat Back Latch Push Button Procedure Disengage the rear seat back latch release push button and actuator from the latch assembly.
3	Rear Seat Back Latch Assembly


Rear Seat Back Cushion Removal and Installation (Split Folding 40% Sportwagon)

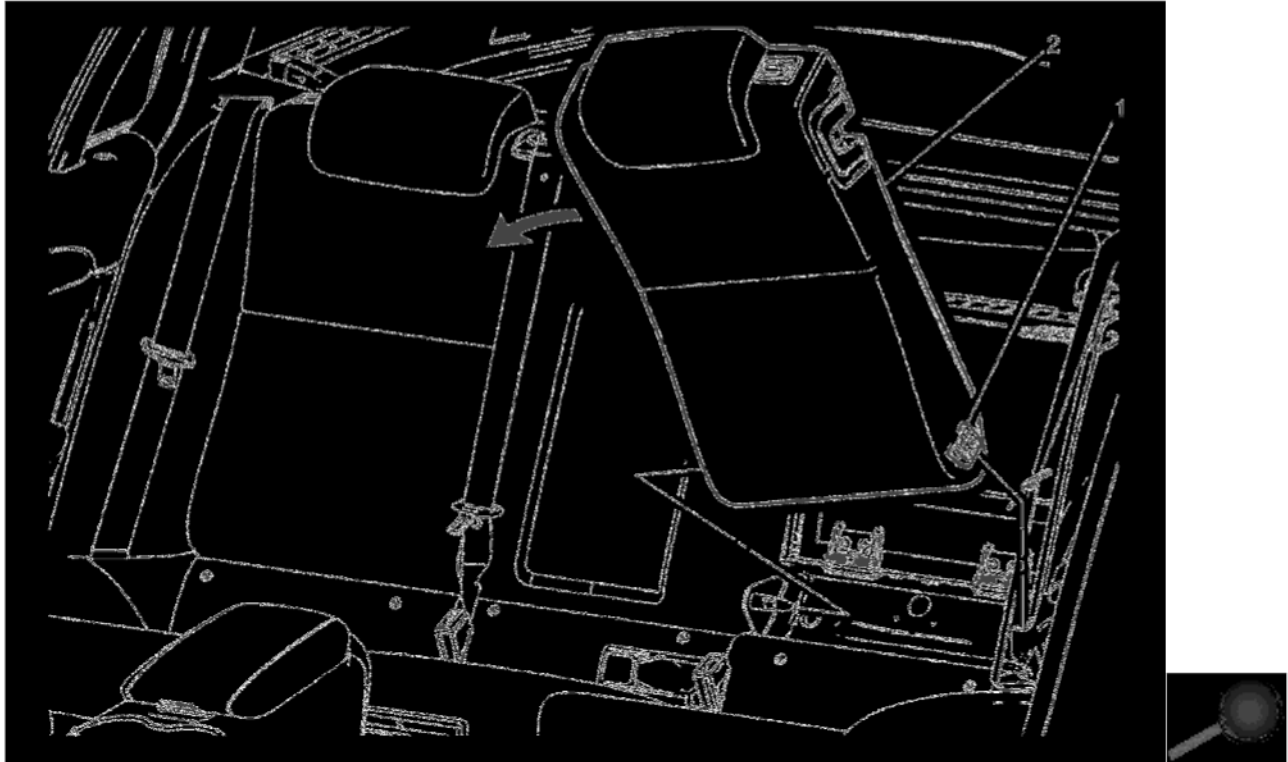

Rear Seat Back Cushion Removal and Installation

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat cushion to disconnect the electrical connectors, if equipped. Refer to Rear Seat Cushion Removal and Installation. 2. Remove the rear seat back bolster, if equipped. Refer to Rear Seat Back Bolster Replacement.	
1	Rear Seat Back Cushion Pivot Support Procedure 1. Push the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward. 2. Using a suitable tool push in on the rear seat back cushion pivot support pins, and release pivot latch from the rear seat bracket.
2	Rear Seat Back Cushion Procedure 1. Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the rear seat bracket. 2. Transfer components as necessary.

Rear Seat Back Cushion Removal and Installation (Split Folding 60% Sportwagon)

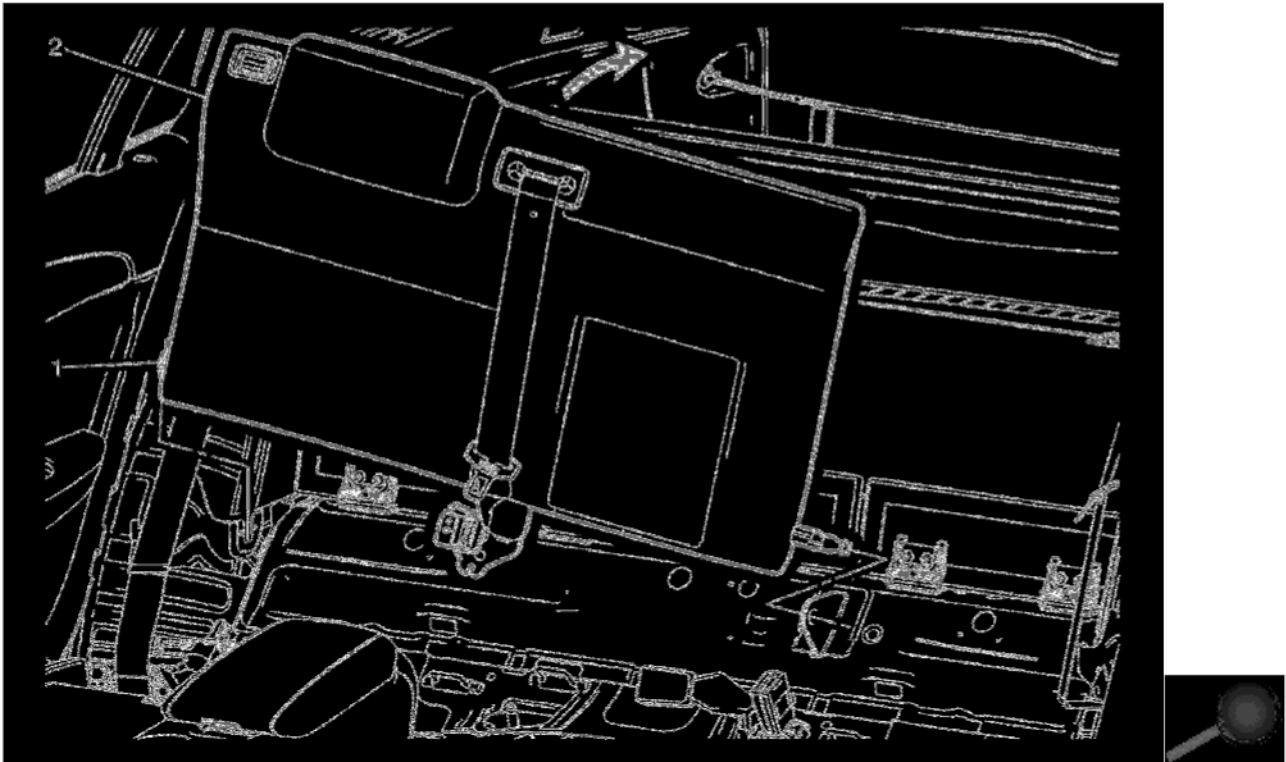


Rear Seat Back Cushion Removal and Installation

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat cushion to disconnect the electrical connectors, if equipped. Refer to Rear Seat Cushion Removal and Installation. 2. Remove the rear seat back bolster, if equipped.. Refer to Rear Seat Back Bolster Replacement. 3. Remove the 40% rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation. 4. Remove the rear seat center retractor side belt lower fastener. Refer to Rear Center Seat Belt Retractor Replacement.	
1	Rear Seat Back Cushion Pivot Support Procedure 1. Push the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward. 2. Using a suitable tool push in on the rear seat back cushion pivot support pins, and release pivot latch from the rear seat bracket.
2	Rear Seat Back Cushion Procedure

Callout	Component Name
	1. Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the rear seat bracket. 2. Transfer components as necessary.


Rear Seat Back Cushion Removal and Installation (Split Folding Side Cushion Sedan)

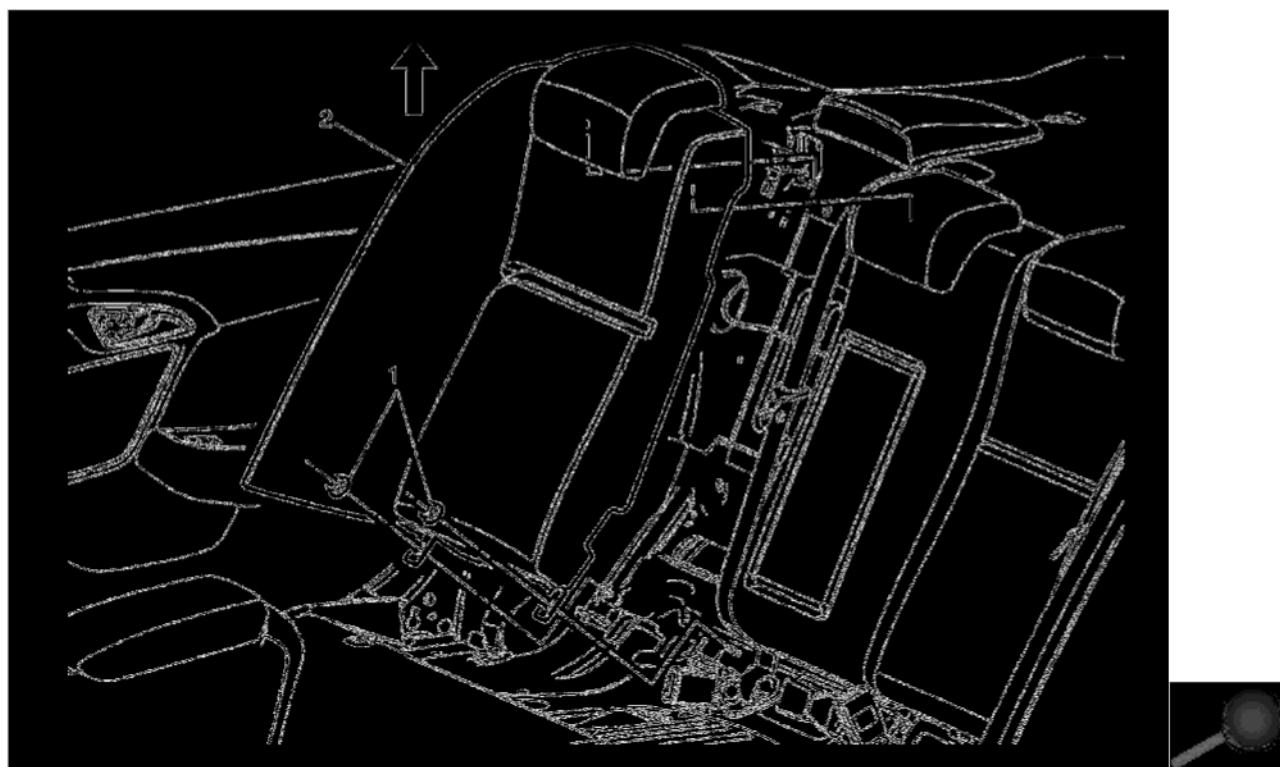

Rear Seat Back Cushion Removal and Installation

Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Removal and Installation .	
1	Rear Seat Back Cushion Nut (Qty: 2) Caution: Refer to Fastener Caution . Tighten 30 N•m (22 lb ft)
2	Rear Seat Back Cushion Assembly Procedure 1. Move the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way, if equipped. 2. Pull the seat back cushion upward to remove from the vehicle. 3. Note the routing prior to removal in order to ensure a proper reinstallation.


Rear Seat Back Cushion Removal and Installation (Split Folding Center Cushion Sedan)

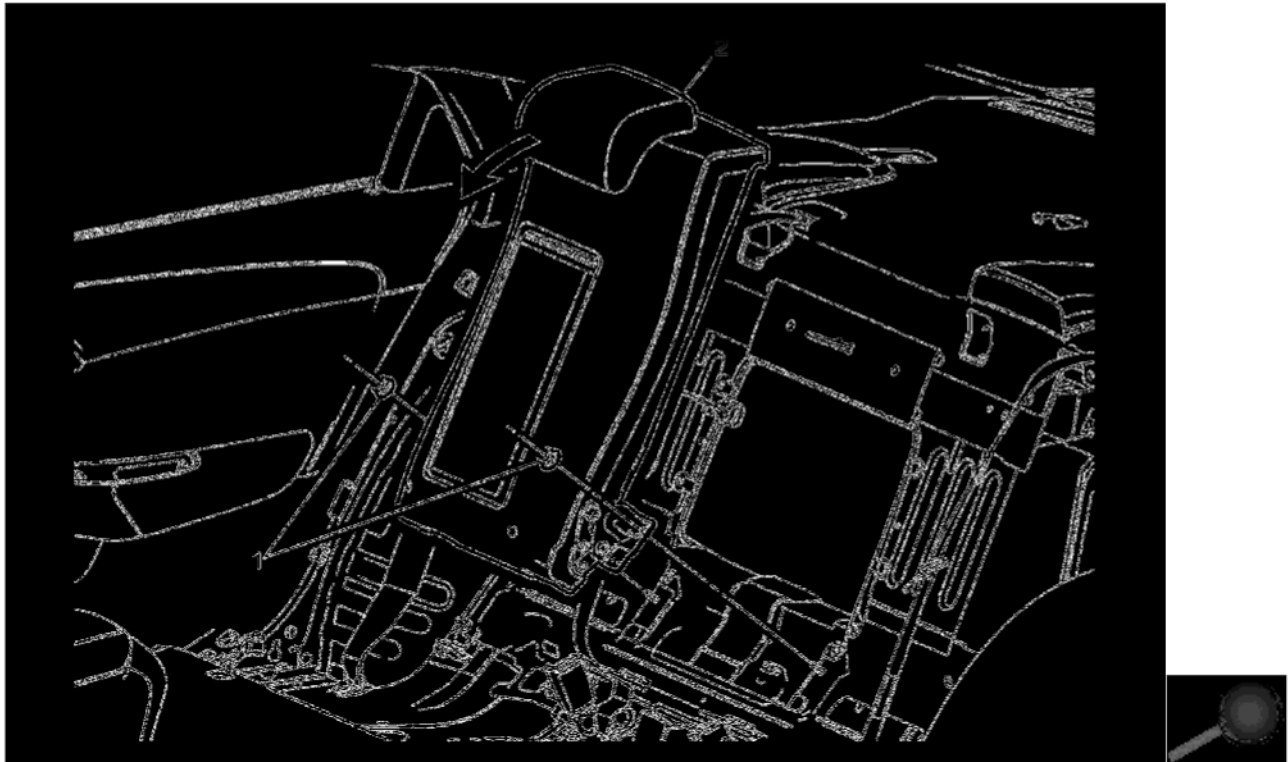

Rear Seat Back Cushion Removal and Installation

Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Removal and Installation .	
1	Rear Seat Back Cushion Nut (Qty: 2) Caution: Refer to Fastener Caution . Tighten 30 N•m (22 lb ft)
2	Rear Seat Back Cushion Assembly Procedure 1. Move the rear seat center shoulder belts from the shoulder belt bezel and position it out of the way, if equipped. 2. Push the rear seat back latch release button located on the top of the seat back cushion, and fold the rear seat back cushion forward. 3. Pull the seat back cushion upward and forward to remove from the vehicle. 4. Note the routing prior to removal in order to ensure a proper reinstallation.


Rear Seat Back Cushion Removal and Installation (Fixed Back)

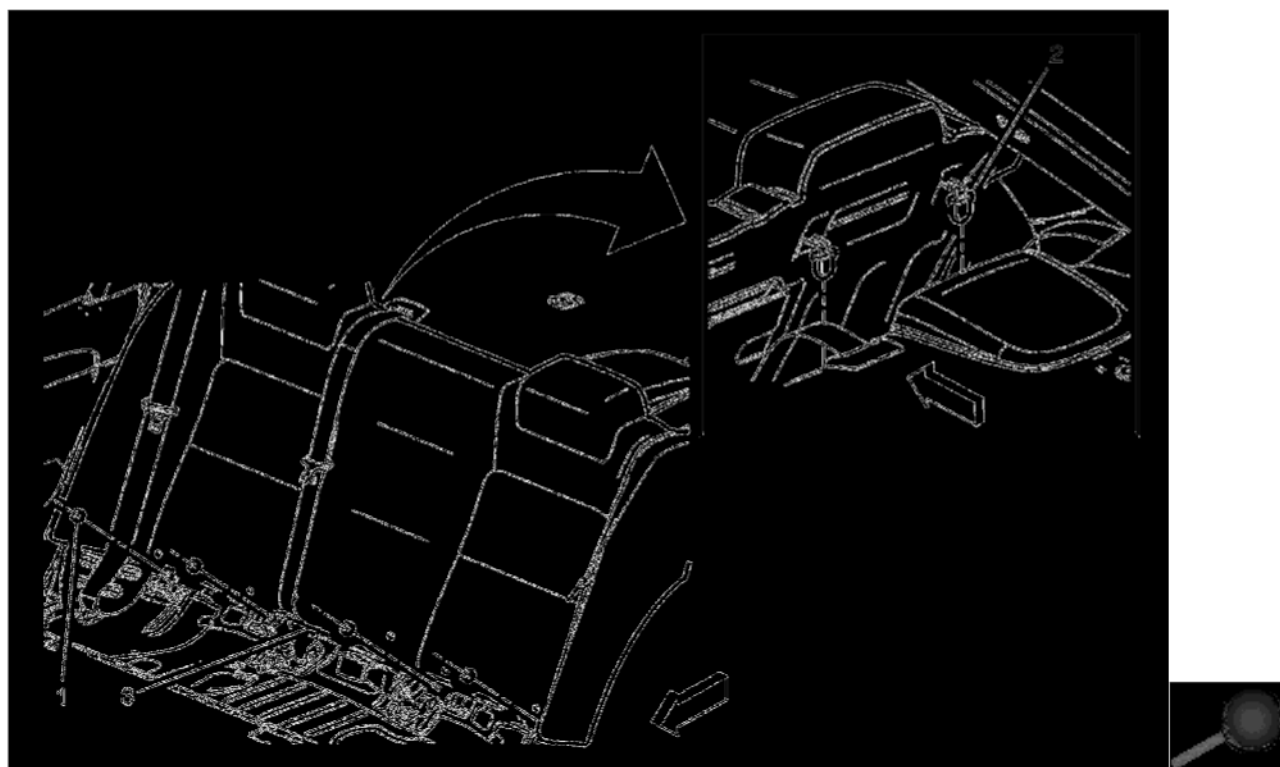

Rear Seat Back Cushion Removal and Installation

Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Removal and Installation .	
1	Rear Seat Back Cushion Nut (Qty: 4) Caution: Refer to Fastener Caution . Tighten 30 N•m (22 lb ft)
2	Rear Seat Back Cushion Retainer Procedure 1. Move the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way, if equipped. 2. Pull the seat back cushion upward to remove from the rear window shelf slots.
3	Rear Seat Back Cushion Assembly Procedure With the aid of a assistant remove the rear seat back cushion from the vehicle.


Rear Seat Belt Opening Bezel Replacement

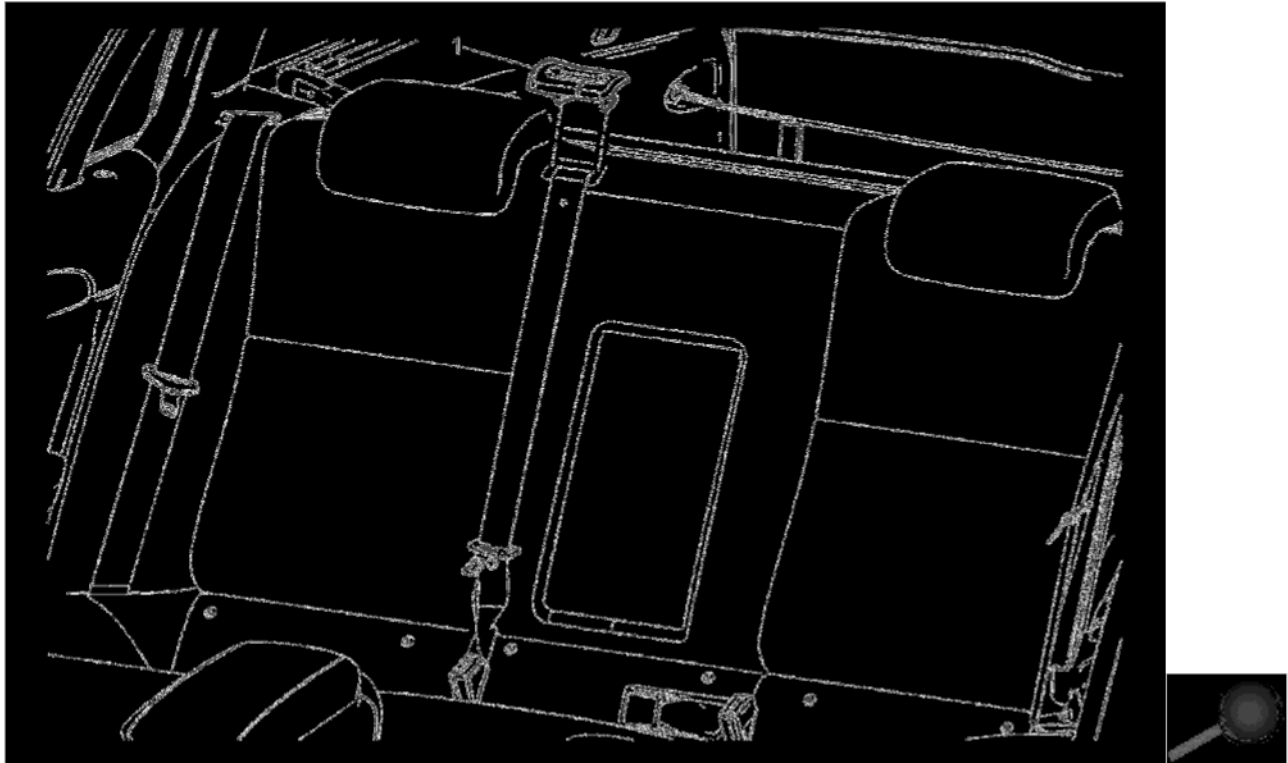

Rear Seat Belt Opening Bezel Replacement

Callout	Component Name
1	Rear Seat Shoulder Belt Opening Bezel Procedure Remove the rear seat back shoulder belt opening cover using a suitable flat-bladed tool.


Rear Seat Back Cushion Opening Panel Replacement

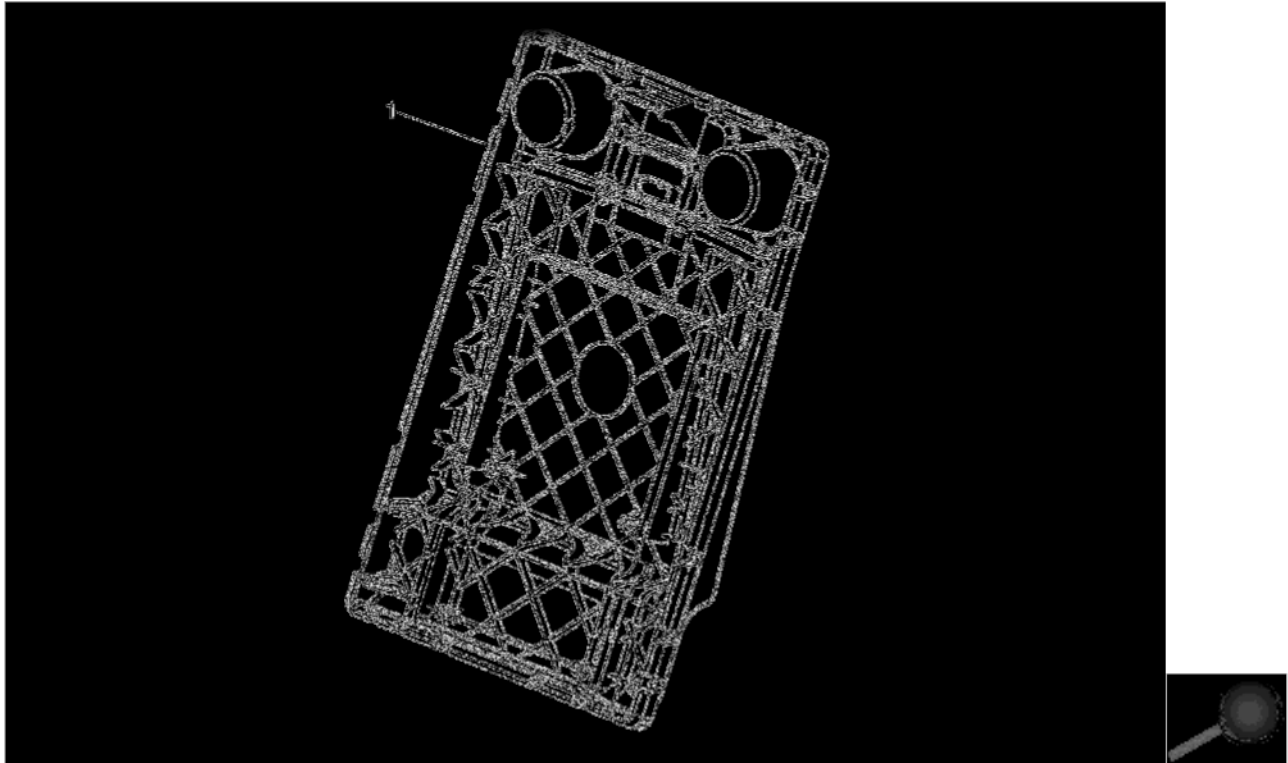

Rear Seat Back Cushion Opening Panel Replacement

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation. 2. Remove the rear seat armrest, if equipped. Refer to Rear Seat Armrest Replacement. 3. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. 4. Remove the rear seat back cushion hinge. Refer to Rear Seat Back Cushion Hinge Replacement. 5. Remove the rear seat back center cushion latch. Refer to Rear Seat Back Center Cushion Latch Replacement.	
1	Rear Seat Back Cushion Opening Panel Procedure If replacing the seat back cushion panel, transfer components as necessary.

Rear Seat Back Folding Actuator Switch Replacement

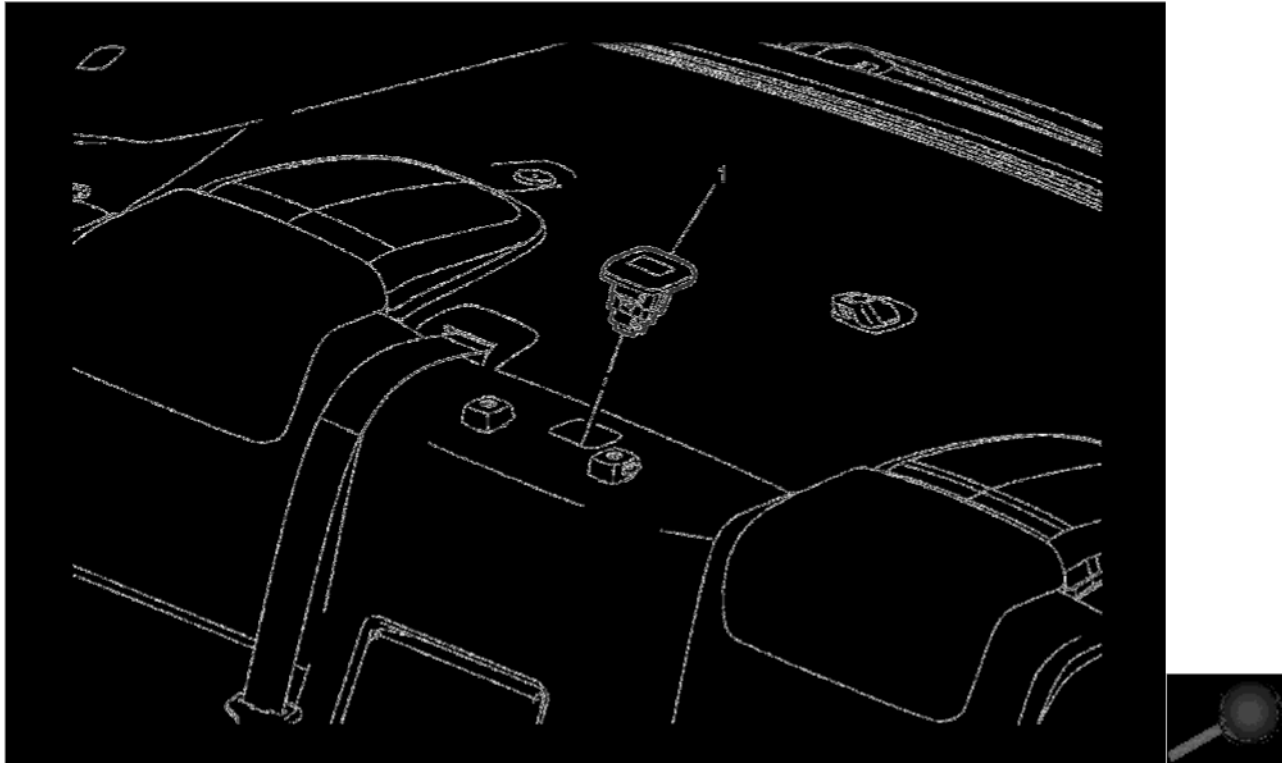


Rear Seat Actuator Replacement

Callout	Component Name
1	Rear Seat Actuator Procedure 1. Depress the large button on the head restraint guide and raise the head restraint to the full up position. 2. Disengage the J-channel retainers from the seat back cushion. 3. Remove the lock pin from the rear adjuster latch knob and remove the pin. 4. Use a flat bladed tool to pry the actuator upward to disengage it from the latch rod.


Rear Seat Back Cushion Cover and Pad Replacement (Split Folding Side Cushion Sedan)

Removal Procedure

1. Remove the rear seat cushion. Refer to [Rear Seat Cushion Removal and Installation](#).
2. Remove the rear seat back. Refer to [Rear Seat Back Cushion Removal and Installation](#).
3. Place seat back face down on a suitable work surface.

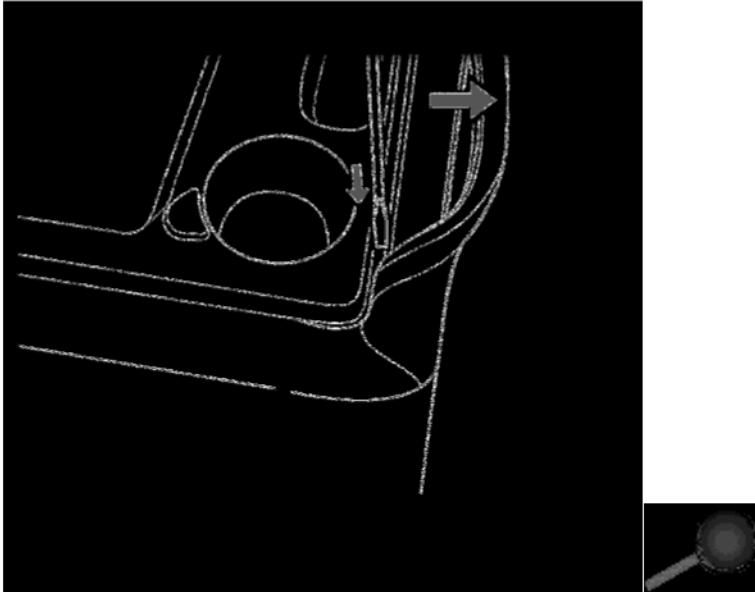

4. Detach the seat back cover from the seat back base as shown in illustration.
5. Turn the rear seat back over on the base.

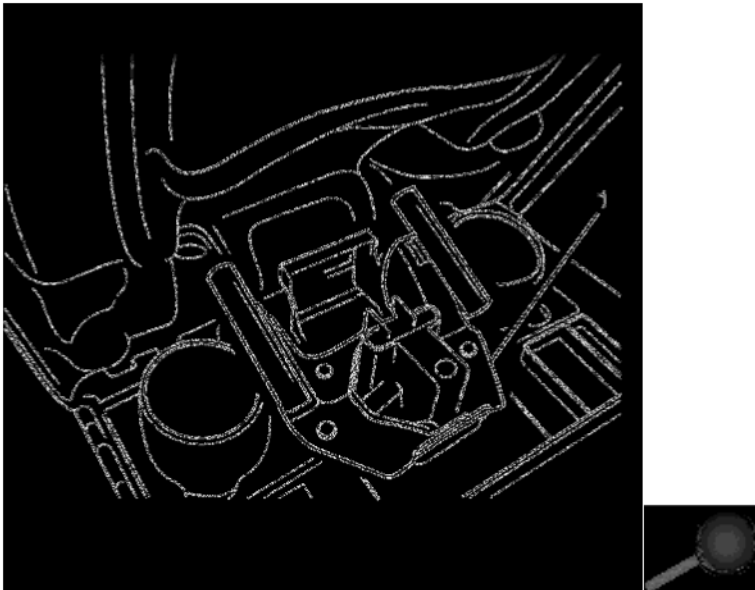

6. lift the seat cover and pad to expose the seat back latch assembly (1).
7. Remove the rear centre seat latch assembly. Refer to [Rear Seat Back Latch Replacement](#).
8. Remove the rear seat back cover.

Installation Procedure

Note: Do not install the release button until the seat cover is fully installed.

1. Install the rear centre seat back latch assembly. Refer to [Rear Seat Back Latch Replacement](#).

2. Turn the rear centre seat over.

Note: When installing the rear seat cover, pull the cover tight in all corners to ensure no lumps will occur.

3. Install the rear centre seat cover to the seat pad and frame, listen for audible clicks to confirm fitting.
4. Turn the rear centre seat over.
5. Press down firmly on the seat pad channels to ensure a smooth finish to the cover.
6. Install the rear seat back. Refer to [Rear Seat Back Cushion Removal and Installation](#).
7. Install the rear seat cushion. Refer to [Rear Seat Cushion Removal and Installation](#).


Rear Seat Back Cushion Cover and Pad Replacement (Rear Folding)

Removal Procedure

1. Remove the rear seat cushion. Refer to [Rear Seat Cushion Removal and Installation](#).
2. Remove the rear seat back cushion. Refer to [Rear Seat Back Cushion Removal and Installation](#).
3. If fitted, remove the rear seat head restraints. Refer to [Rear Seat Head Restraint Replacement](#).
4. Place the rear seat back cushion on suitable work surface.
5. Turn the rear seat back over on its front.




6. Detach the rear seat back cover to rear seat back pad and frame retaining J-strips (1).

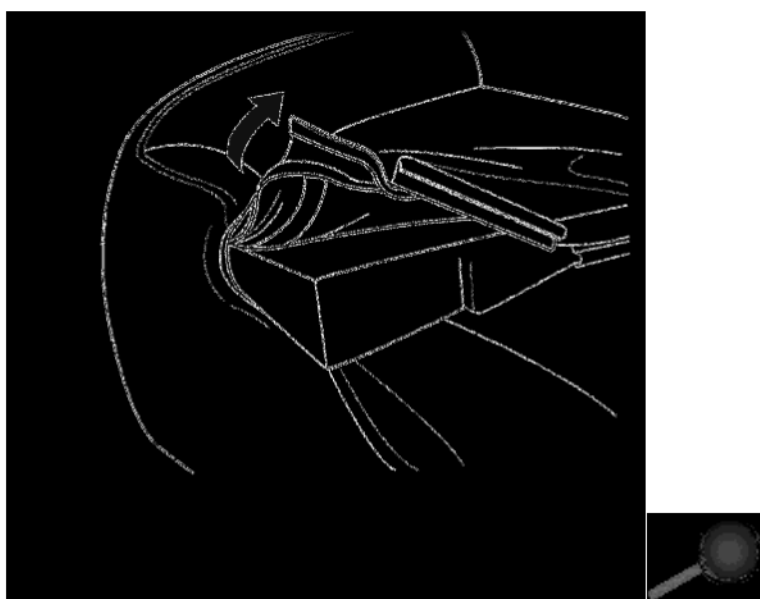

7. While holding the rear seat back pad, remove the rear seat back cover.

Installation Procedure

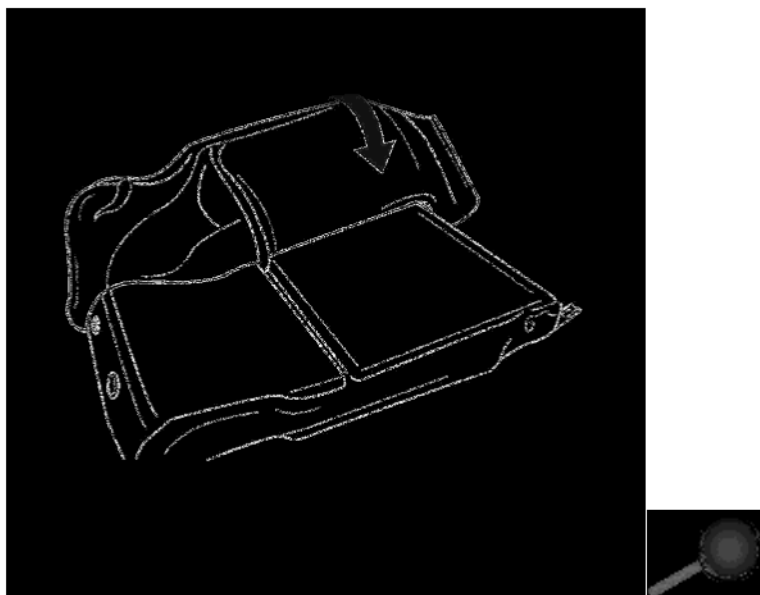

1. Align the aplix with the rear seat back cover.
2. Install the rear seat back cover.
3. Turn the rear seat back over on its front.




Note: When installing the rear seat cover, pull the cover tight in all corners to ensure no lumps will occur.

4. Attach the rear seat back cover to rear seat back pad and frame retaining J-strips (1).
5. If fitted, install the rear seat head restraints. Refer to [Rear Seat Head Restraint Replacement](#).
6. Install the rear seat back cushion. Refer to [Rear Seat Back Cushion Removal and Installation](#).
7. Install the rear seat cushion. Refer to [Rear Seat Cushion Removal and Installation](#).


Rear Seat Back Cushion Cover and Pad Replacement (Split Folding 40% Sportwagon)

Removal Procedure


1. Remove the rear seat cushion assembly. Refer to [Rear Seat Cushion Removal and Installation](#).
2. Remove the left rear seat back assembly. Refer to [Rear Seat Back Cushion Removal and Installation](#).
3. Place the left rear seat back assembly on a suitable surface.

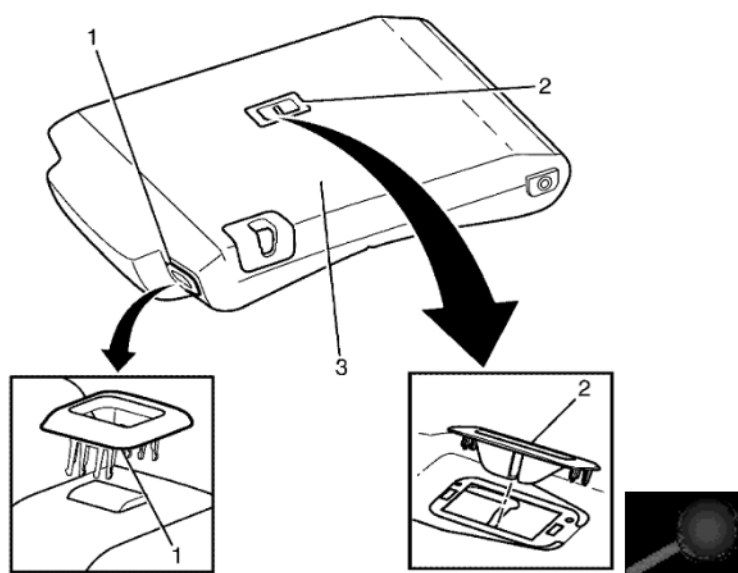

4. Remove the left rear seat back latch release button cover (1) from the left rear seat back assembly (3).
5. Remove the left rear seat back child restraint tether anchor cover (2) from the left rear seat back assembly (3).

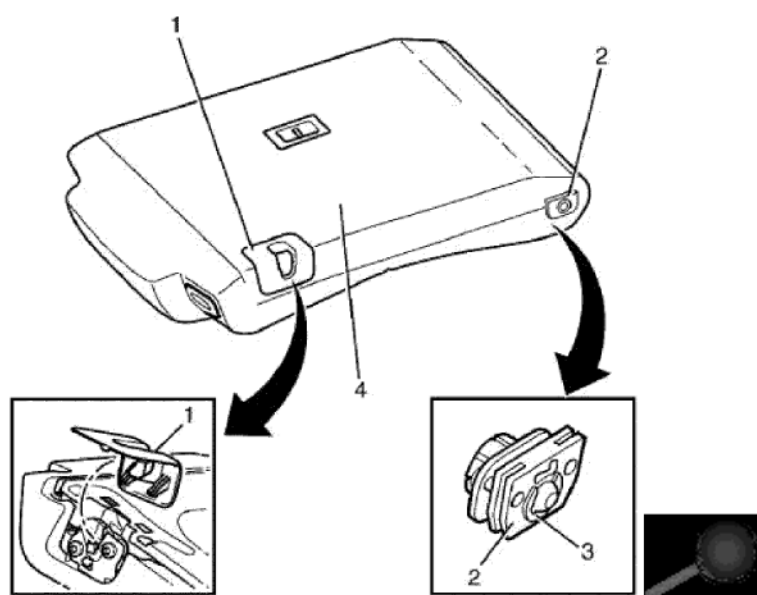


6. Remove the circlip (3) from the left rear seat back pivot retainer assembly (2).
7. Remove the left rear seat back pivot retainer assembly (2) from the left rear seat back assembly (4).
8. Remove the left rear seat back latch trim cover (1) from the left rear seat back assembly (4).

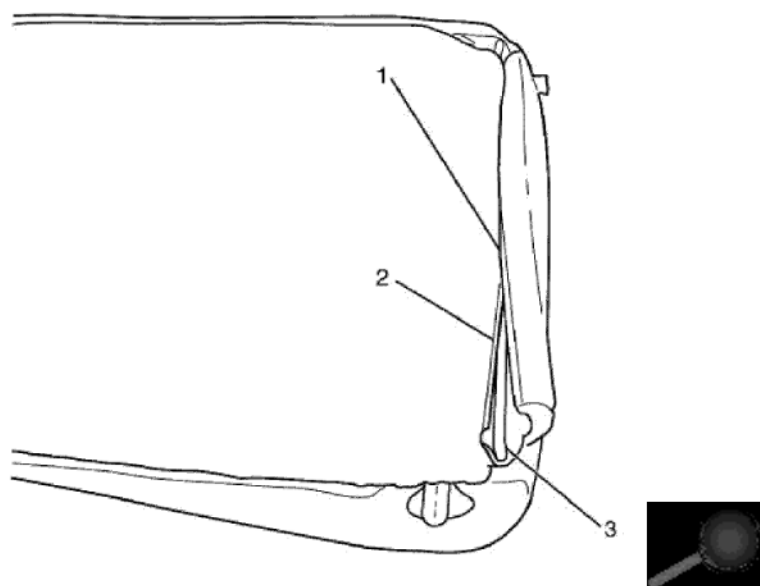


Note: Care must be taken not to damage the left rear seat back cover front retaining strip (1) and the left rear seat back cover rear retaining strip (2) when disengaging them from the left rear seat back cover retaining strip channel (3).

9. Using a suitable tool disengage the left rear seat back cover front retaining strip (1) from the left rear seat back retaining strip channel (3).
10. Using a suitable tool disengage the left rear seat back cover rear retaining strip (2) from the left rear seat back retaining strip channel (3).

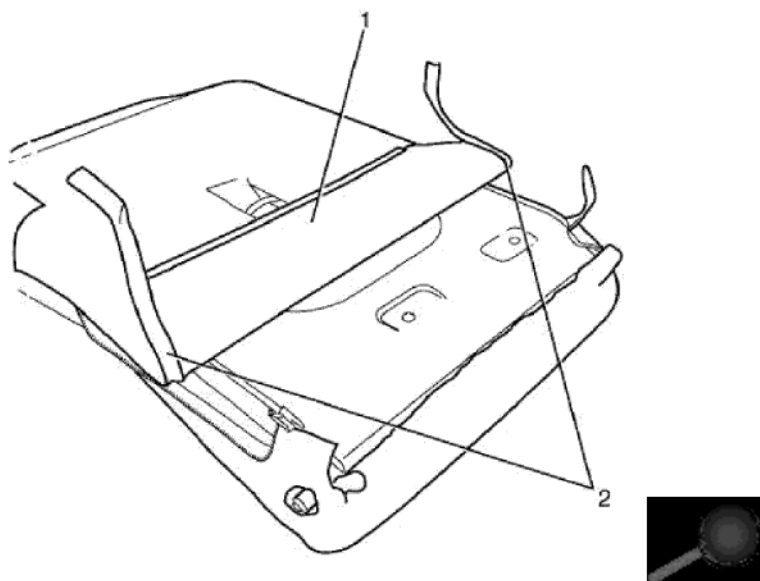


11. Unzip the left rear seat back cover zippers (2).
12. Fold back the left rear seat back cover (1).

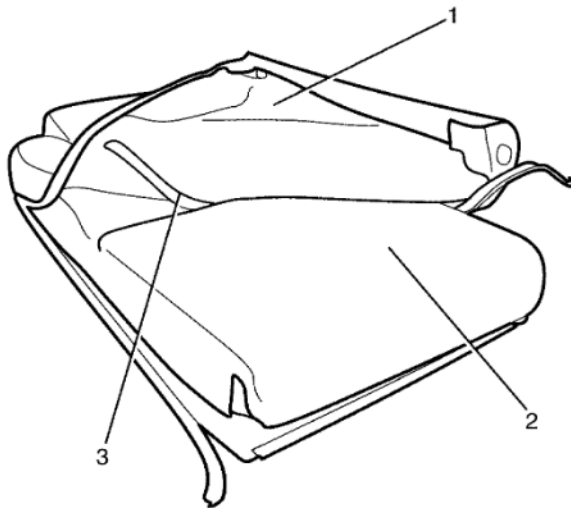

Note: Take care not to tear the left rear seat back cover (1) when removing it from the left rear seat back assembly (2).

13. Detach the velcro strips (3) from the left rear seat back assembly (2) and remove the left rear seat back cover (1) from the left rear seat back assembly (2).


Installation Procedure

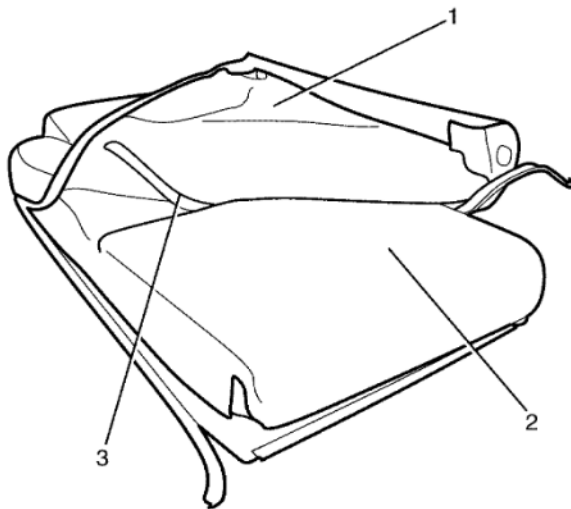

Note: Make sure that the velcro strips (3) are located correctly. Failure to comply may result in the incorrect installation of the left rear seat back cover (1).


Note: Make sure that the left rear seat back cover (1) fits tightly without creasing, over the left rear seat back assembly (2).

1. Install the left rear seat back cover (1) to the left rear seat back assembly (2).
2. Attach the velcro strips (3) to the left rear seat back assembly (2).

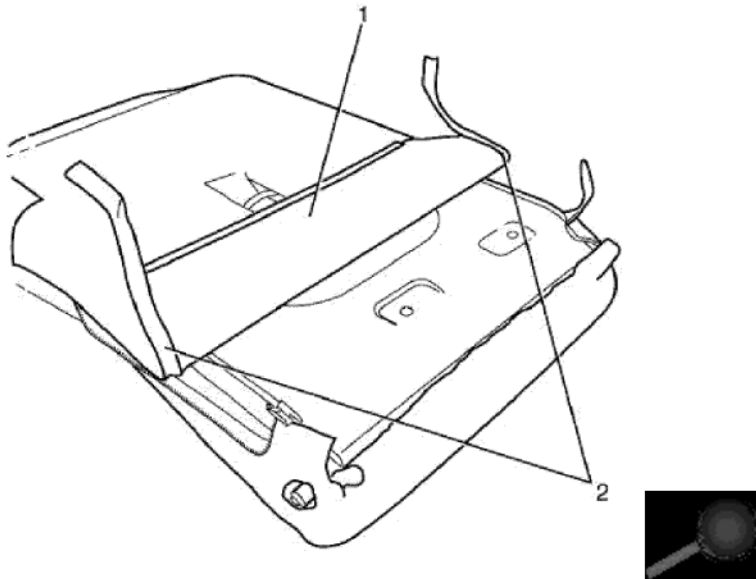


Note: Conceal the zipper ends behind the left rear seat back cover (1). Failure to comply may result in damage to the left rear seat back cover zippers (2).

3. Zip up the left rear seat back cover zippers (2).

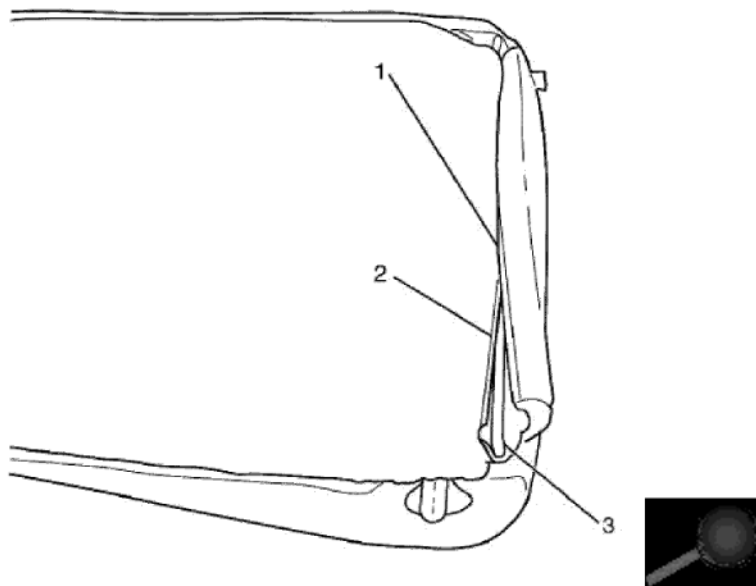


Note: Care must be taken not to damage the left rear seat back cover front retaining strip (1) and the left rear seat back cover rear retaining strip (2) when engaging them into the left rear seat back cover retaining strip channel (3).

4. Using a suitable tool engage the left rear seat back cover front retaining strip (1) into the left rear seat back retaining strip channel (3).
5. Using a suitable tool engage the left rear seat back cover rear retaining strip (2) into the left rear seat back retaining strip channel (3).

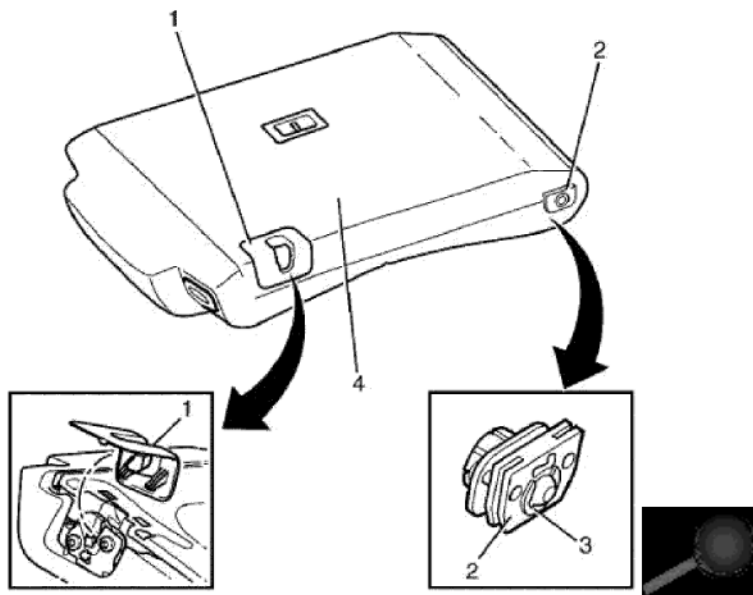

6. Install the left rear seat back latch trim cover (1) to the left rear seat back assembly (4)
7. Install the left rear seat back pivot retainer assembly (2) to the left rear seat back assembly (4).
8. Install the circlip (3) to the left rear seat back pivot retainer assembly (2).

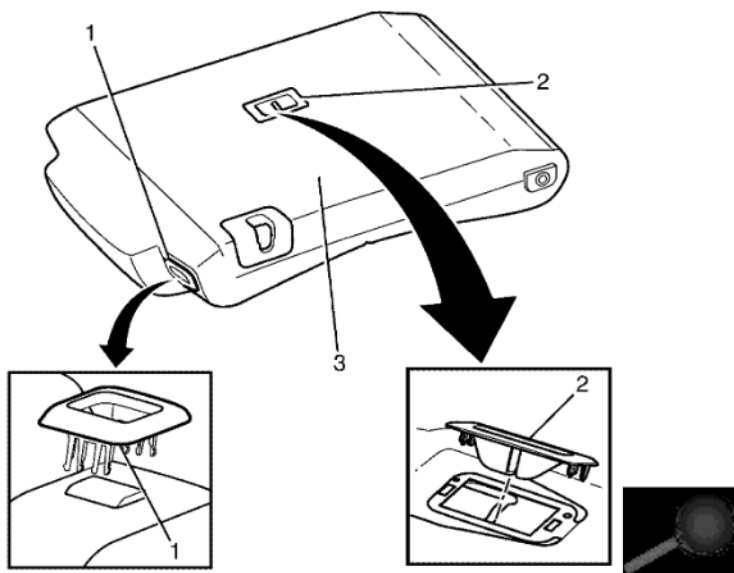


9. Install the left rear seat back child restraint tether anchor cover (2) to the left rear seat back assembly (3).
10. Install the left rear seat back latch release button cover (1) to the left rear seat back assembly (3).
11. Install the left rear seat back assembly. Refer to [Rear Seat Back Cushion Removal and Installation](#).
12. Install the rear seat cushion assembly. Refer to [Rear Seat Cushion Removal and Installation](#).


Rear Seat Back Cushion Cover and Pad Replacement (Split Folding 60% Sportwagon)

Removal Procedure


1. Remove the rear seat cushion assembly. Refer to [Rear Seat Cushion Removal and Installation](#).

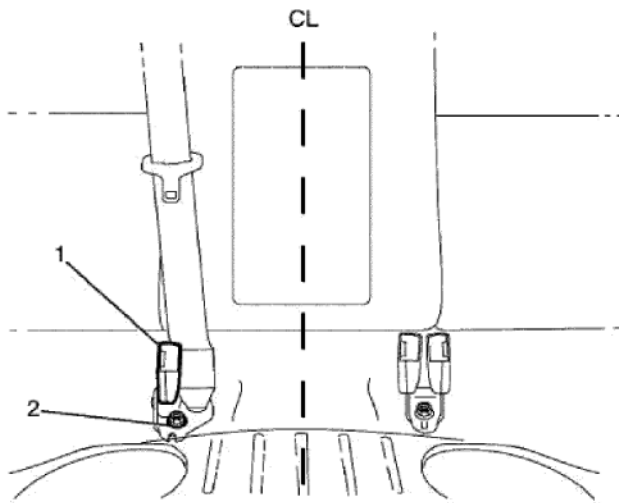


2. Remove the right rear seat belt buckle nut (2).
3. Remove the right rear seat belt buckle (1).
4. Remove the right rear seat back assembly. Refer to [Rear Seat Back Cushion Removal and Installation](#).
5. Place the right rear seat back assembly on a suitable surface.

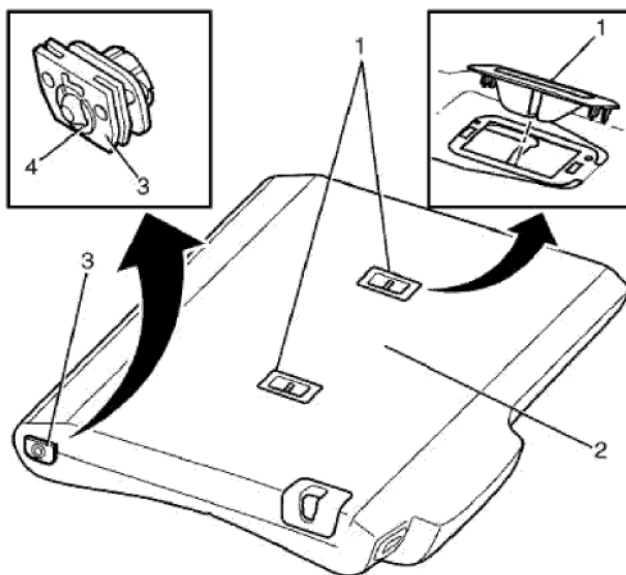


6. Remove the right rear seat back child restraint tether anchor covers (1) from the right rear seat back assembly (2).
7. Remove the circlip (4) from the pivot retainer assembly (3).
8. Remove the pivot retainer assembly (3) from the right rear seat back assembly (2).

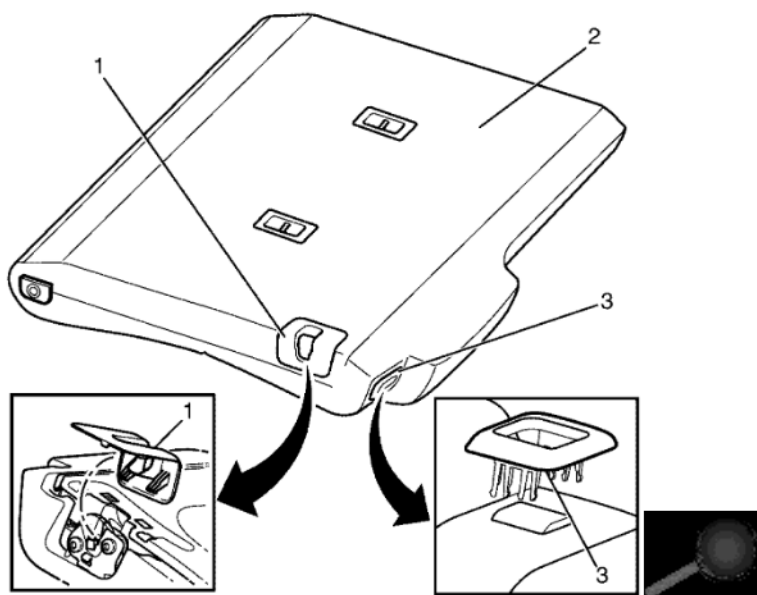

9. Remove the right rear seat back latch trim cover (1) from the right rear seat back assembly (2).
10. Remove the right rear seat back latch release button cover (3) from the right rear seat back assembly (2).

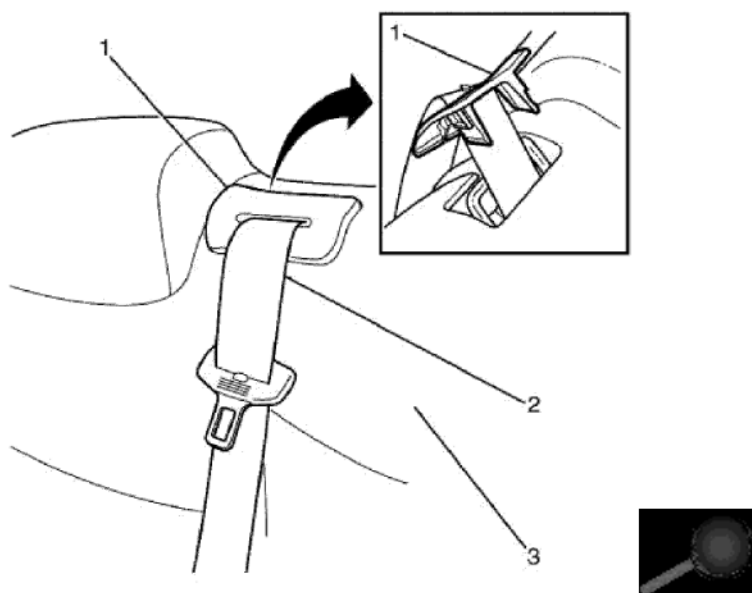


11. Remove the centre rear seatbelt guide trim (1) from the right rear seat back assembly (3).
12. Remove the centre rear seatbelt guide trim (1) from the centre rear seatbelt (2).

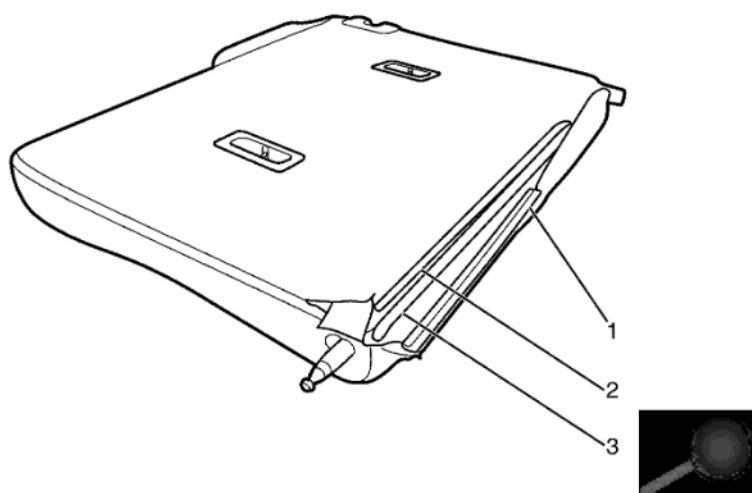


Note: Care must be taken not to damage the right rear seat back cover front retaining strip (1) and the right rear seat back cover rear retaining strip (2) when disengaging them from the right rear seat back cover retaining strip channel (3).

13. Using a suitable tool disengage the right rear seat back cover front retaining strip (1) from the right rear seat back retaining strip channel (3).
14. Using a suitable tool disengage the right rear seat back cover rear retaining strip (2) from the right rear seat back retaining strip channel (3).

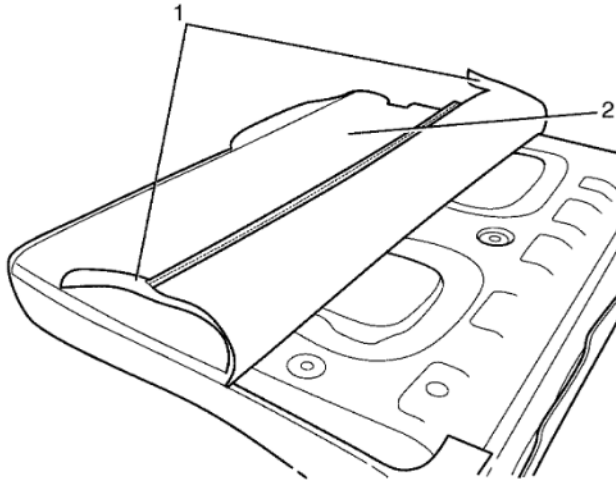


15. Unzip the right rear seat back cover zippers (1).
16. Fold back the right rear seat back cover (2).

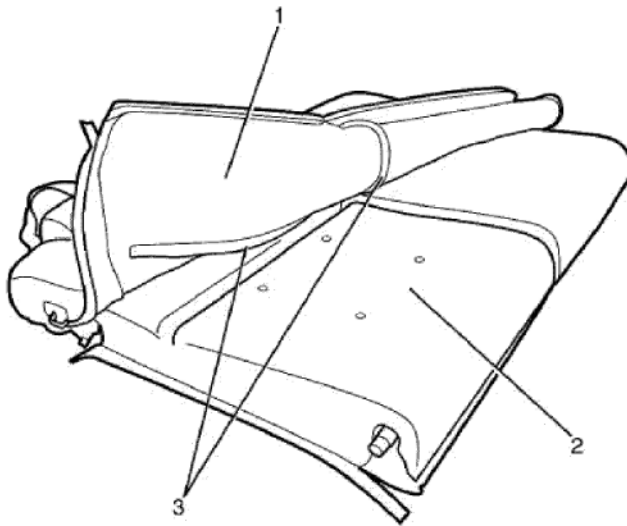

Note: Take care not to tear the right rear seat back cover (1) when removing it from the right rear seat back assembly (2).

17. Detach the velcro™ strips (3) from the right rear seat back assembly (2) and remove the right rear seat back cover (1) from the right rear seat back assembly (2).


Installation Procedure

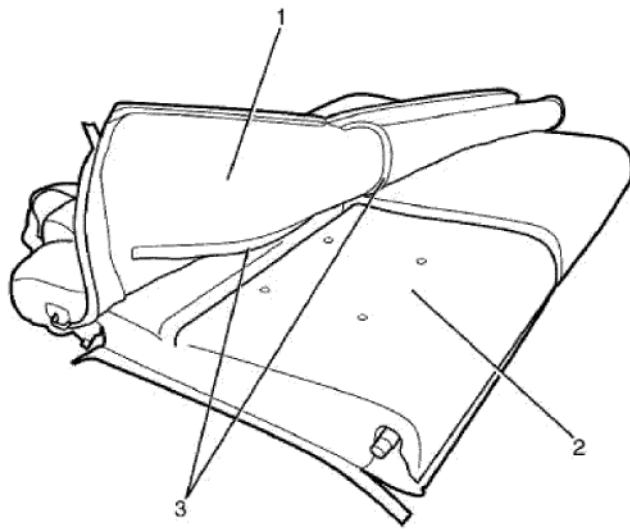

Note: Make sure that the velcro™ strips (3) are located correctly. Failure to comply may result in the incorrect installation of the right rear seat back cover (1).


Note: Make sure that the right rear seat back cover (1) fits tightly without creasing, over the right rear seat back assembly (2).

1. Install the right rear seat back cover (1) to the right rear seat back assembly (2). Attach the velcro™ strips (3) to the right rear seat back assembly (2).

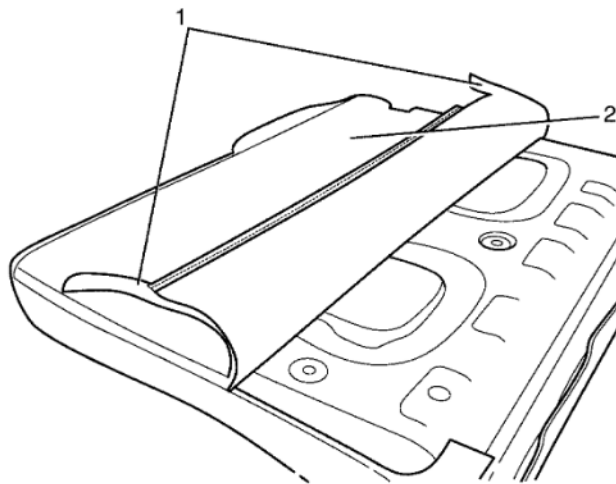


Note: Conceal the zipper ends behind the right rear seat back cover (2). Failure to comply may result in damage to the right rear seat back cover zippers.

2. Zip up the right rear seat back cover zippers (1).

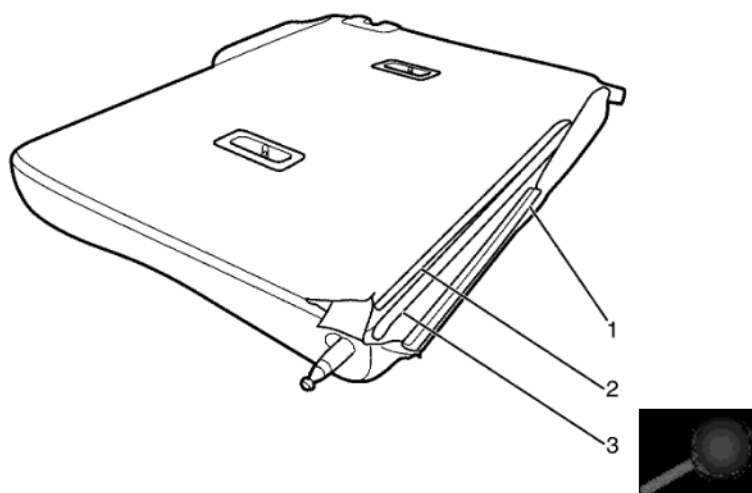


Note: Care must be taken not to damage the right rear seat back cover front retaining strip (1) and the right rear seat back cover rear retaining strip (2) when engaging them into the right rear seat back cover retaining strip channel (3).


3. Using a suitable tool engage the right rear seat back cover front retaining strip (1) into the right rear seat back retaining strip channel (3).
4. Using a suitable tool engage the right rear seat back cover rear retaining strip (2) into the right rear seat back retaining strip channel (3).

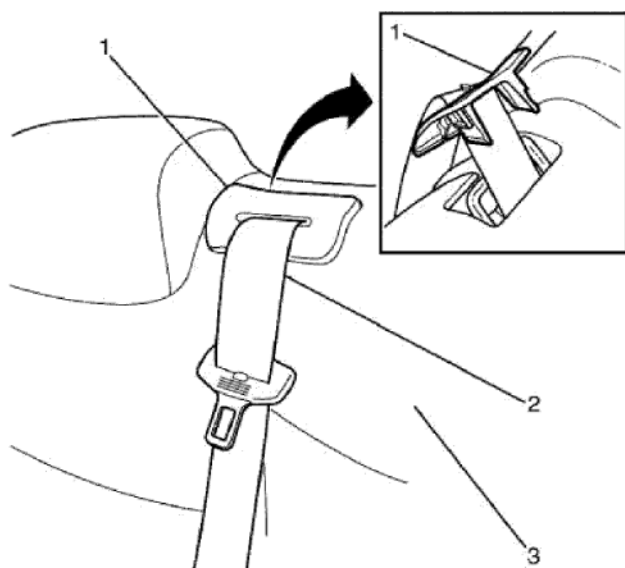


5. Install the centre rear seatbelt (2) to the centre rear seatbelt guide trim (1).
6. Install the centre rear seatbelt guide trim (1) to the rear seat back assembly (3).

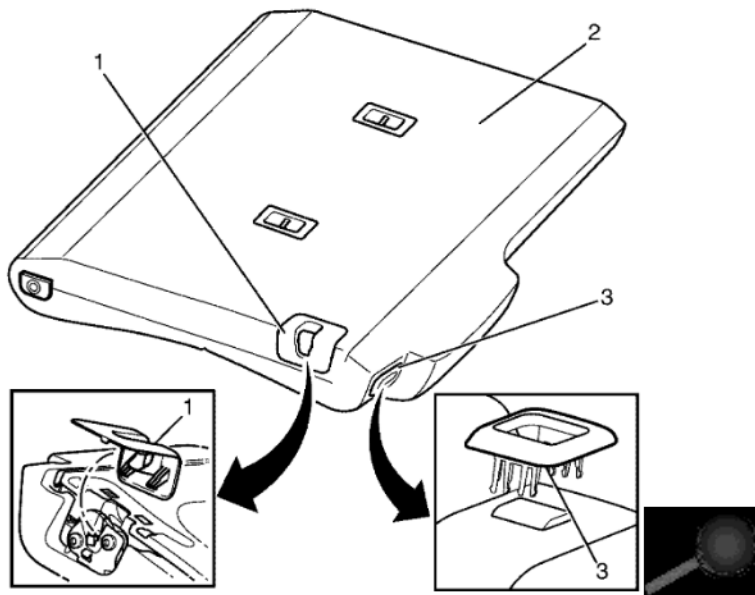

7. Attach the right rear seat back latch release button cover (3) to the right rear seat back assembly (2).
8. Attach the right rear seat back latch trim cover (1) to the right rear seat back assembly (2).

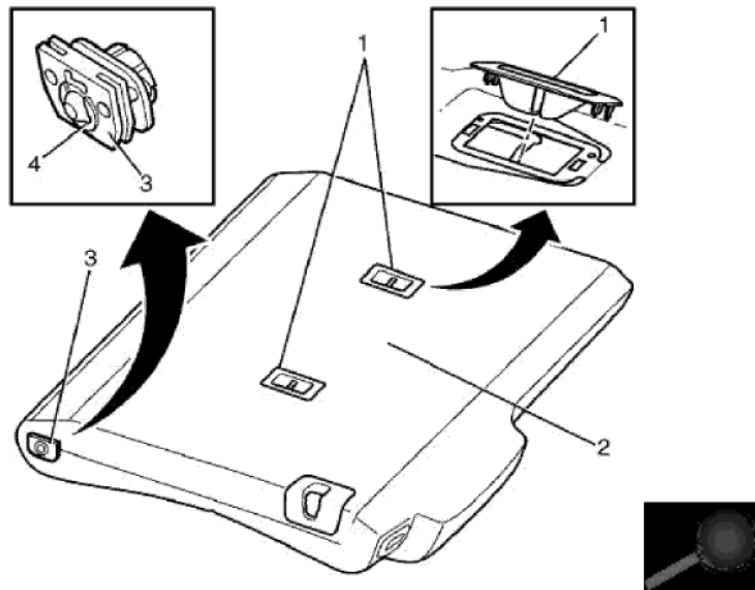

9. Attach the pivot retainer assembly (3) to the right rear seat back assembly (2).
10. Attach the circlip (4) to the pivot retainer assembly (3).
11. Attach the right rear seat back child restraint tether anchor covers (1) to the right rear seat back assembly (2).
12. Install the rear seat back cushion. Refer to [Rear Seat Back Cushion Removal and Installation](#).

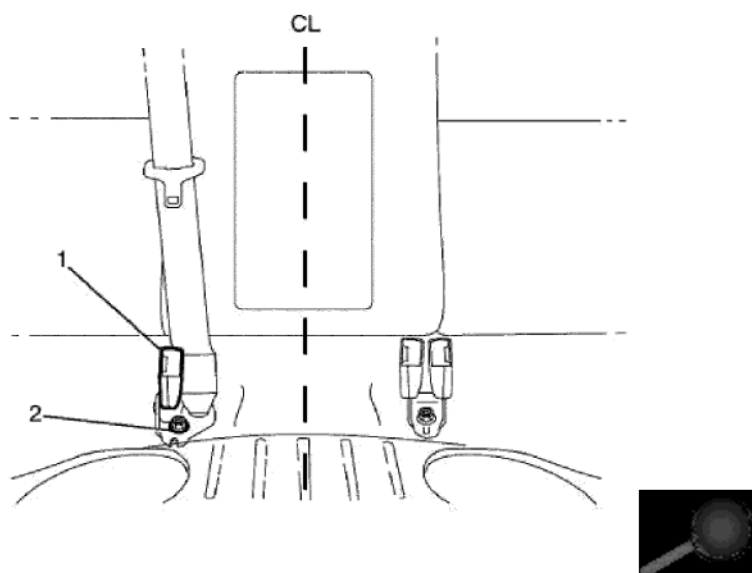

Note: Make sure the right rear seat belt buckle is parallel to vehicle centreline as shown.

13. Install the right rear seat belt buckle (1).

Caution: Refer to [Fastener Caution](#).

14. Install the right rear seat belt buckle nut (2).

Tighten


Tighten the nut to 43 N·m (31 lb ft).

15. Install the rear seat cushion. Refer to [Rear Seat Cushion Removal and Installation](#).


Rear Seat Back Cushion Cover and Pad Replacement (Split Folding Center Cushion)

Removal Procedure


1. Remove the rear seat cushion assembly. Refer to [Rear Seat Cushion Removal and Installation](#).

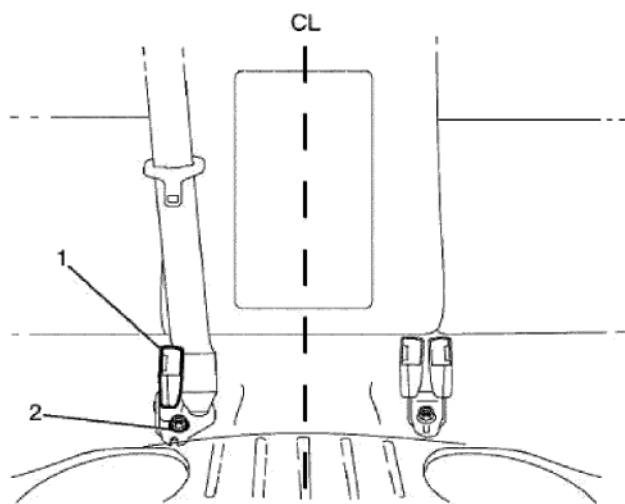


2. Remove the right rear seat belt buckle nut (2).
3. Remove the right rear seat belt buckle (1).
4. Remove the right rear seat back assembly. Refer to [Rear Seat Back Cushion Removal and Installation](#).
5. Place the right rear seat back assembly on a suitable surface.

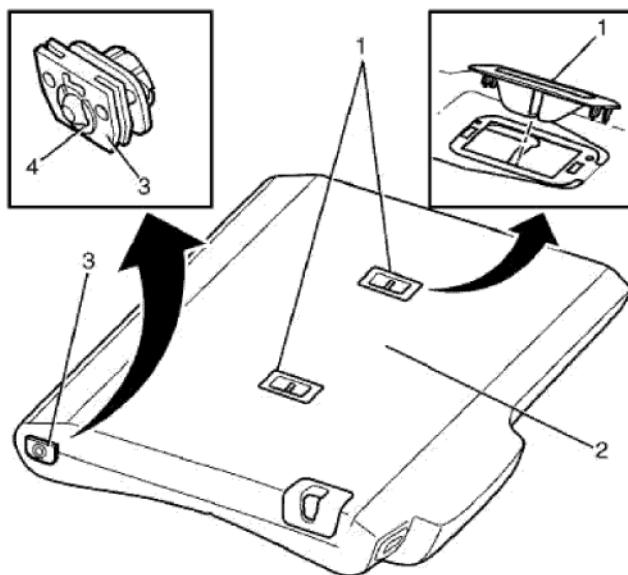

6. Remove the right rear seat back child restraint tether anchor covers (1) from the right rear seat back assembly (2).
7. Remove the circlip (4) from the pivot retainer assembly (3).
8. Remove the pivot retainer assembly (3) from the right rear seat back assembly (2).

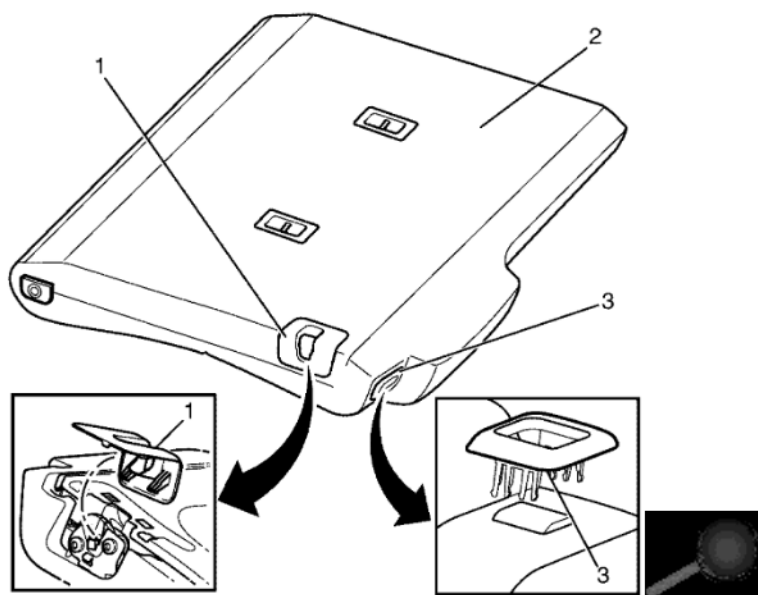


9. Remove the right rear seat back latch trim cover (1) from the right rear seat back assembly (2).
10. Remove the right rear seat back latch release button cover (3) from the right rear seat back assembly (2).

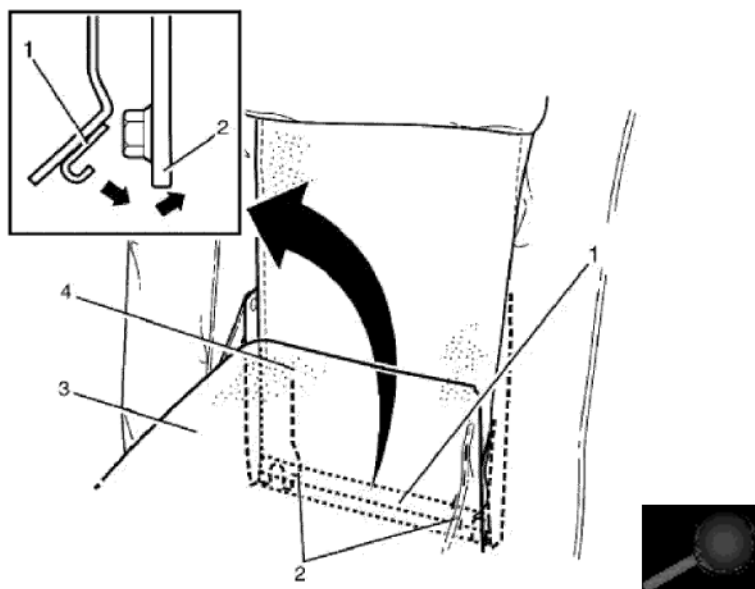


Note: Adjust the armrest (3) to a suitable position to access the right rear seat back cover retainer (1).

11. Carefully pull down on the right rear seat back cover retainer (1) and detach the trim flap (4) from the trim flap retainer (2).

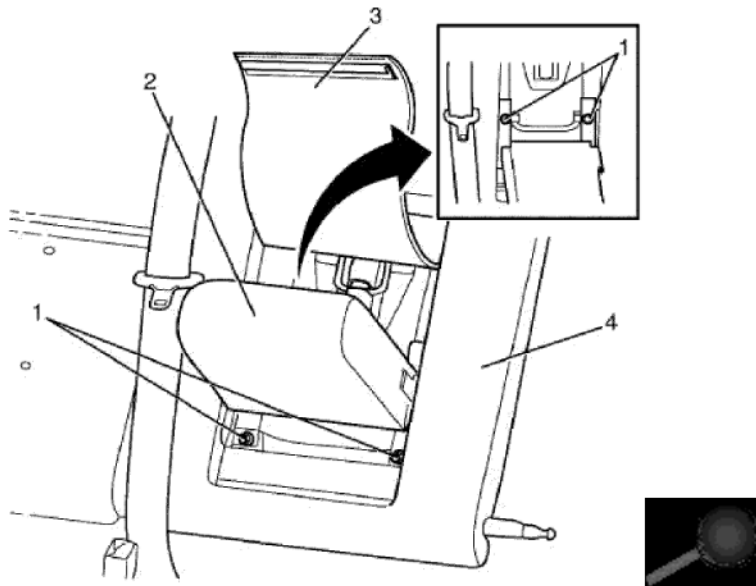


Note: Lift the right rear seat back cover trim flap (3) to expose the armrest to right rear seat back frame retaining bolts (1).

12. Remove the right rear seat back armrest to the right rear seat back frame retaining bolts (1).
13. Remove the right rear seat back armrest assembly (2) from the right rear seat back assembly (4).

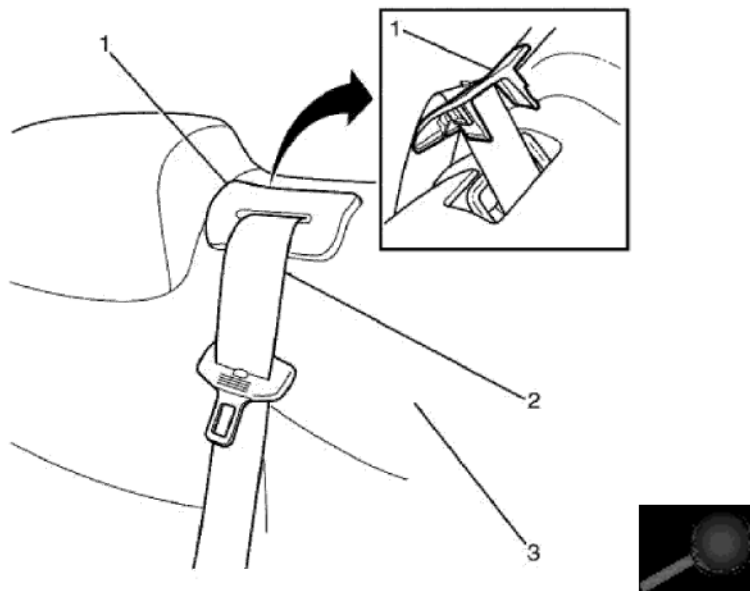


14. Remove the centre rear seatbelt guide trim (1) from the rear seat back assembly (3).
15. Remove the centre rear seatbelt guide trim (1) from the centre rear seatbelt (2).

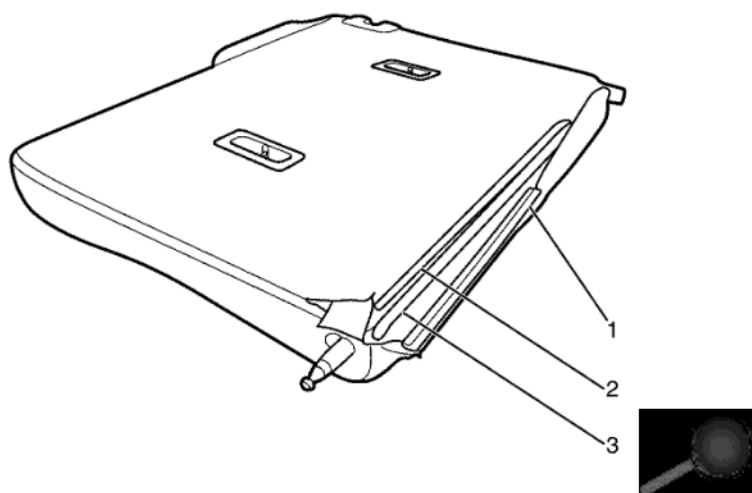


Note: Care must be taken not to damage the right rear seat back cover front retaining strip (1) and the right rear seat back cover rear retaining strip (2) when disengaging them from the right rear seat back cover retaining strip channel (3).

16. Using a suitable tool disengage the right rear seat back cover front retaining strip (1) from the right rear seat back retaining strip channel (3).
17. Using a suitable tool disengage the right rear seat back cover rear retaining strip (2) from the right rear seat back retaining strip channel (3).

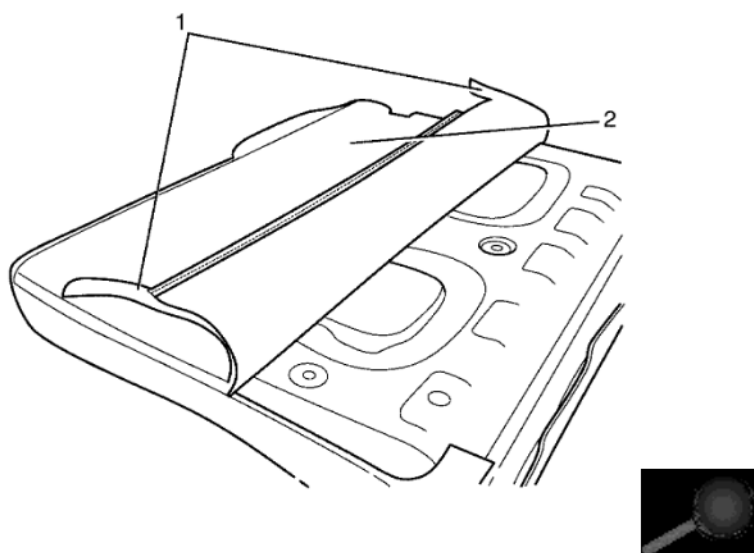


18. Unzip the right rear seat back cover zipper (1).
19. Fold back the right rear seat back cover (2).

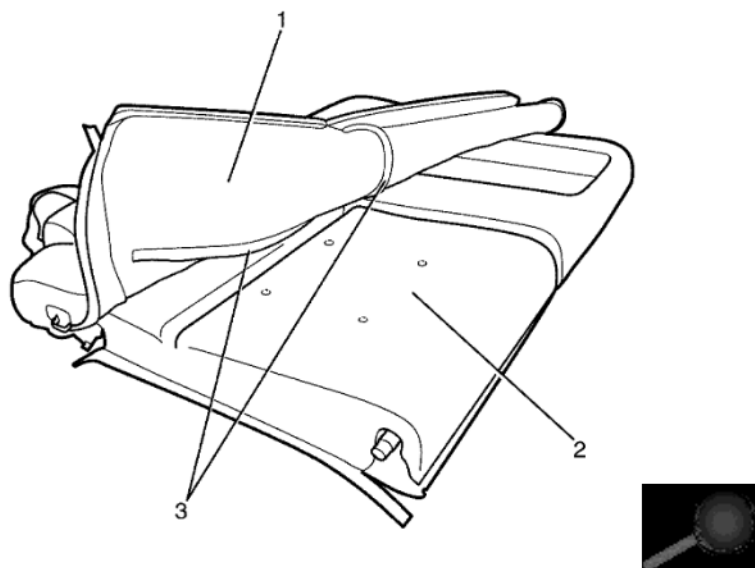

Note: Take care not to tear the right rear seat back cover (1) when removing it from the right rear seat back assembly (2).

20. Detach the velcro™ strips (3) from the right rear seat back assembly (2) and remove the right rear seat back cover (1) from the right rear seat back assembly (2).


Installation Procedure

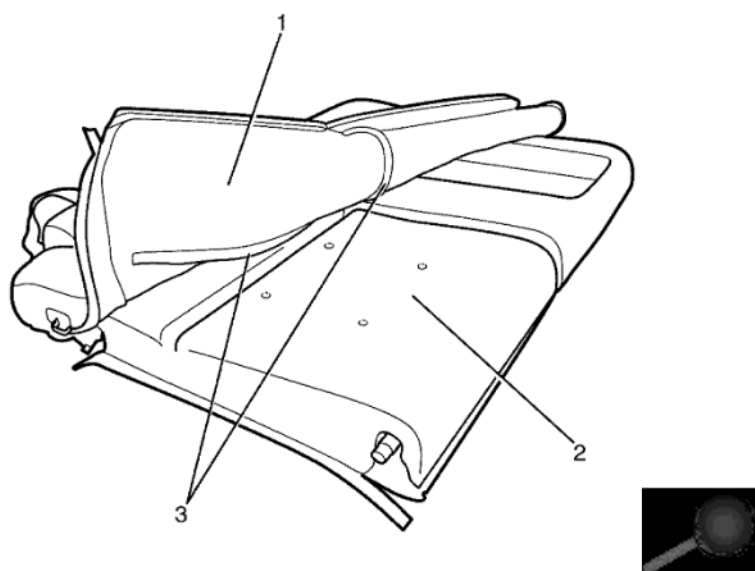


Note: Make sure that the velcro™ strips (3) are located correctly. Failure to comply may result in the incorrect installation of the right rear seat back cover (1).

Note: Make sure that the right rear seat back cover (1) fits tightly without creasing, over the right rear seat back assembly (2).


1. Install the right rear seat back cover (1) to the right rear seat back assembly (2). Attach the velcro™ strips (3) to the right rear seat back assembly (2).

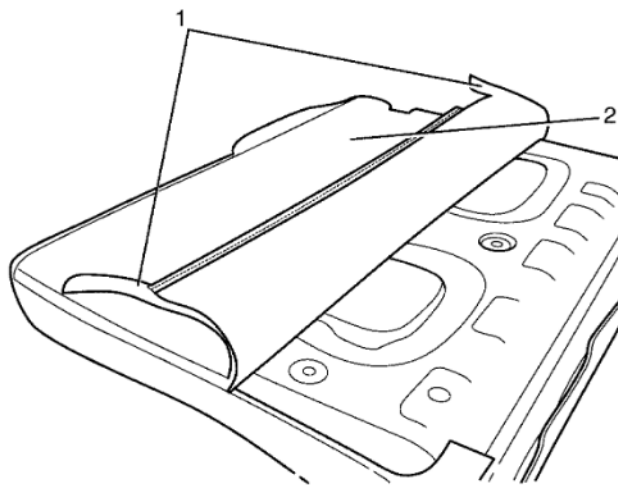


- Note:** Conceal the zipper ends behind the right rear seat back cover (2). Failure to comply may result in damage to the right rear seat back cover zippers.
2. Zip up the right rear seat back cover zipper (1).

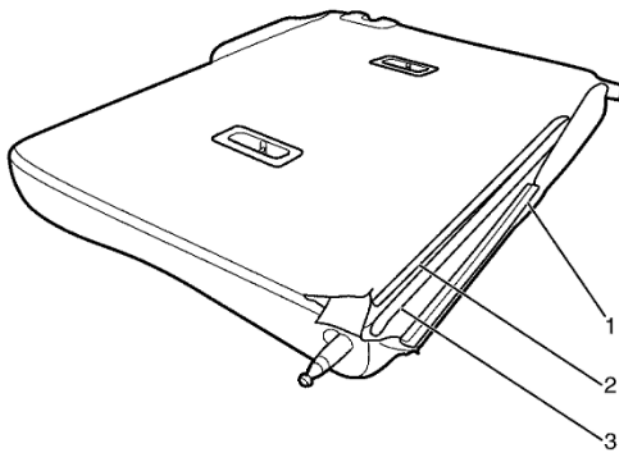

- Note:** Care must be taken not to damage the right rear seat back cover front retaining strip (1) and the right rear seat back cover rear retaining strip (2) when engaging them into the right rear seat back cover retaining strip channel (3).
3. Using a suitable tool engage the right rear seat back cover front retaining strip (1) into the right rear seat back retaining strip channel (3).
 4. Using a suitable tool engage the right rear seat back cover rear retaining strip (2) into the right rear seat back retaining strip channel (3).

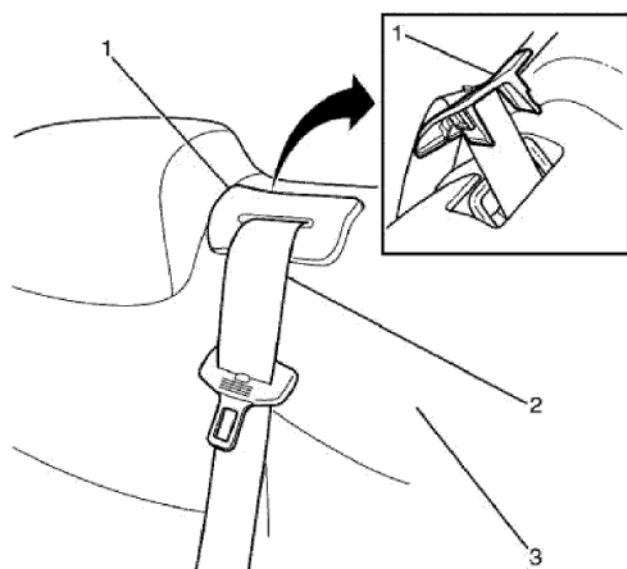

5. Install the centre rear seatbelt (2) to the centre rear seatbelt guide trim (1).
6. Install the centre rear seatbelt guide trim (1) to the rear seat back assembly (3).

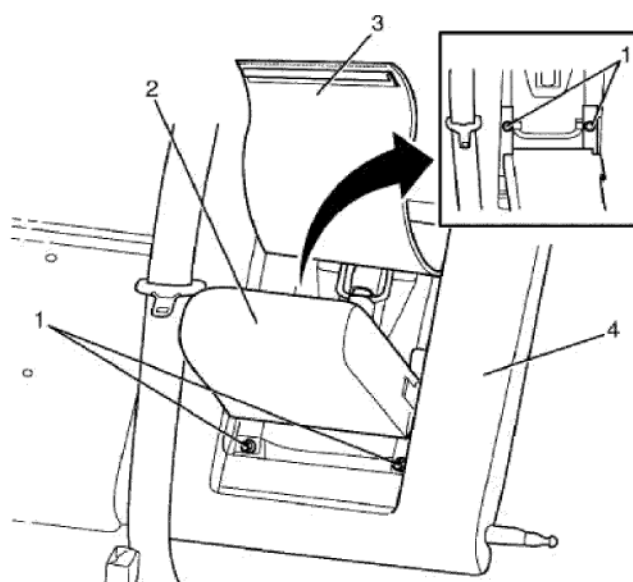


7. Install the right rear seat back armrest assembly (2) to the right rear seat back assembly (4).

Caution: Refer to [Fastener Caution](#).

8. Install the right rear seat back armrest to right rear seat back frame retaining bolts (1).


Tighten

Tighten the bolts to 4 N•m (35 lb in).

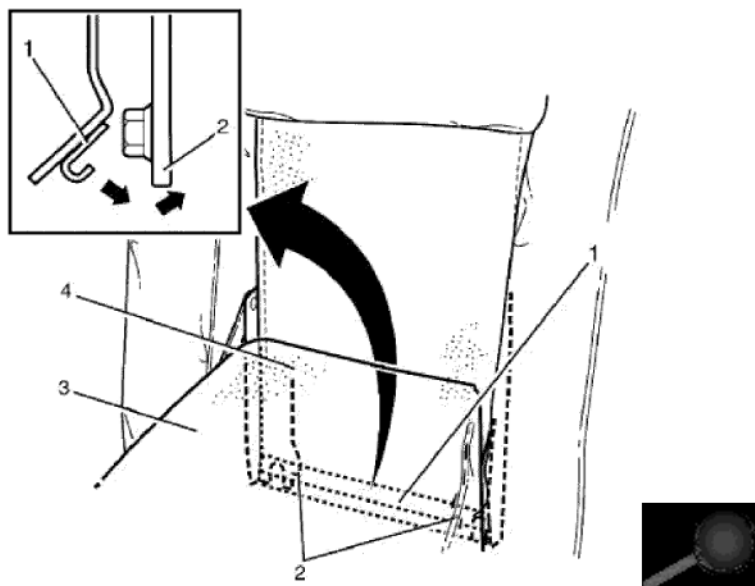


Note: Adjust the armrest (3) to a suitable position to access the right rear seat back cover retainer (1).


9. Carefully pull down on the right rear seat back cover retainer (1) and attach the trim flap (4) to the trim flap retainer (2).

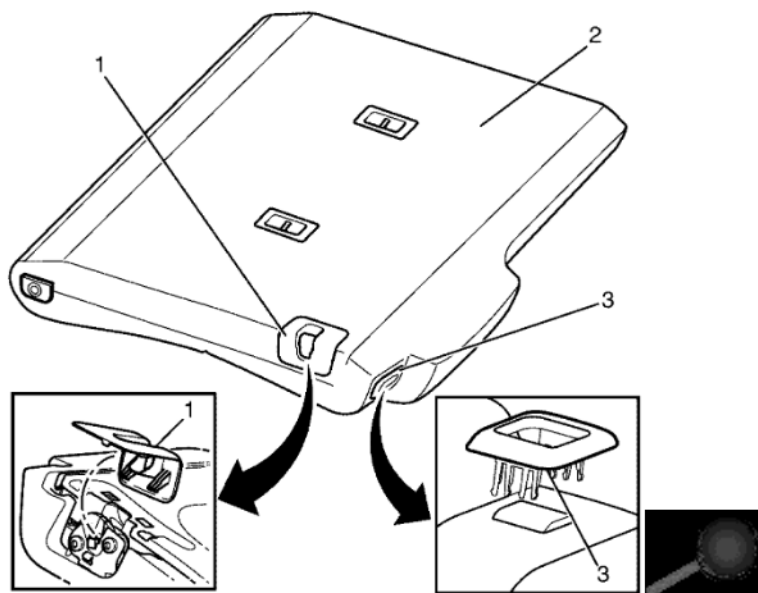

10. Attach the right rear seat back latch release button cover (3) to the right rear seat back assembly (2).
11. Attach the right rear seat back latch trim cover (1) to the right rear seat back assembly (2).

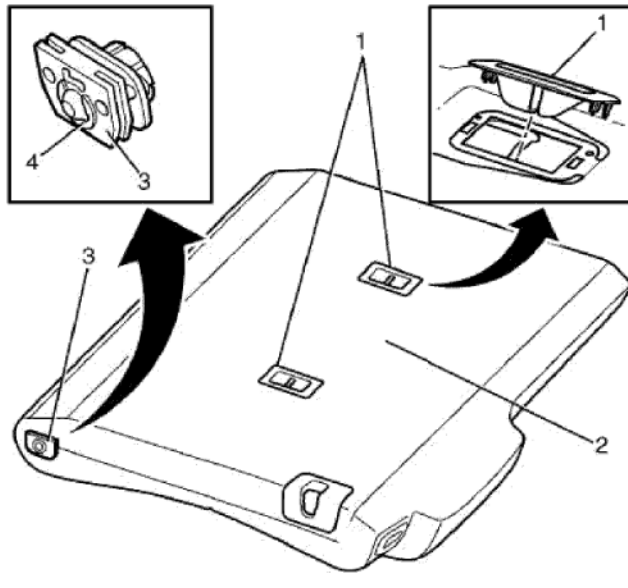


12. Attach the pivot retainer assembly (3) to the right rear seat back assembly (2).
13. Attach the circlip (4) to the pivot retainer assembly (3).
14. Attach the right rear seat back child restraint tether anchor covers (1) to the right rear seat back assembly (2).
15. Install the rear seat back cushion. Refer to [Rear Seat Back Cushion Removal and Installation](#).

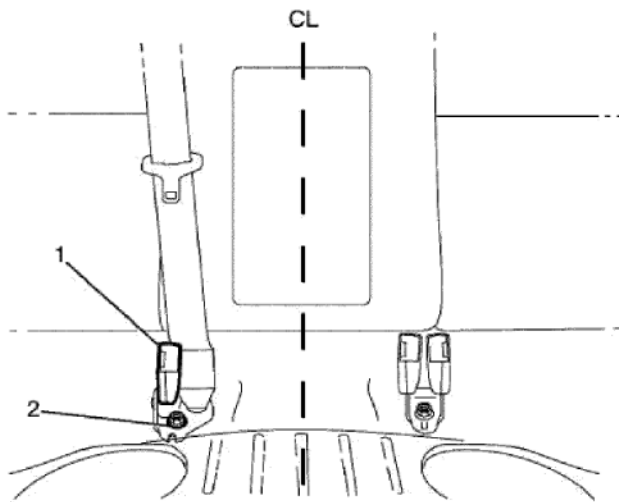

Note: Make sure the right rear seat belt buckle is parallel to vehicle centreline as shown.

16. Install the right rear seat belt buckle (1).
- Caution:** Refer to [Fastener Caution](#).
17. Install the right rear seat belt buckle nut (2).
Tighten
Tighten the nut to 43 N·m (31 lb ft).
18. Install the rear seat cushion. Refer to [Rear Seat Cushion Removal and Installation](#).


Rear Seat Back Latch Release Pushbutton Replacement (Sportwagon)

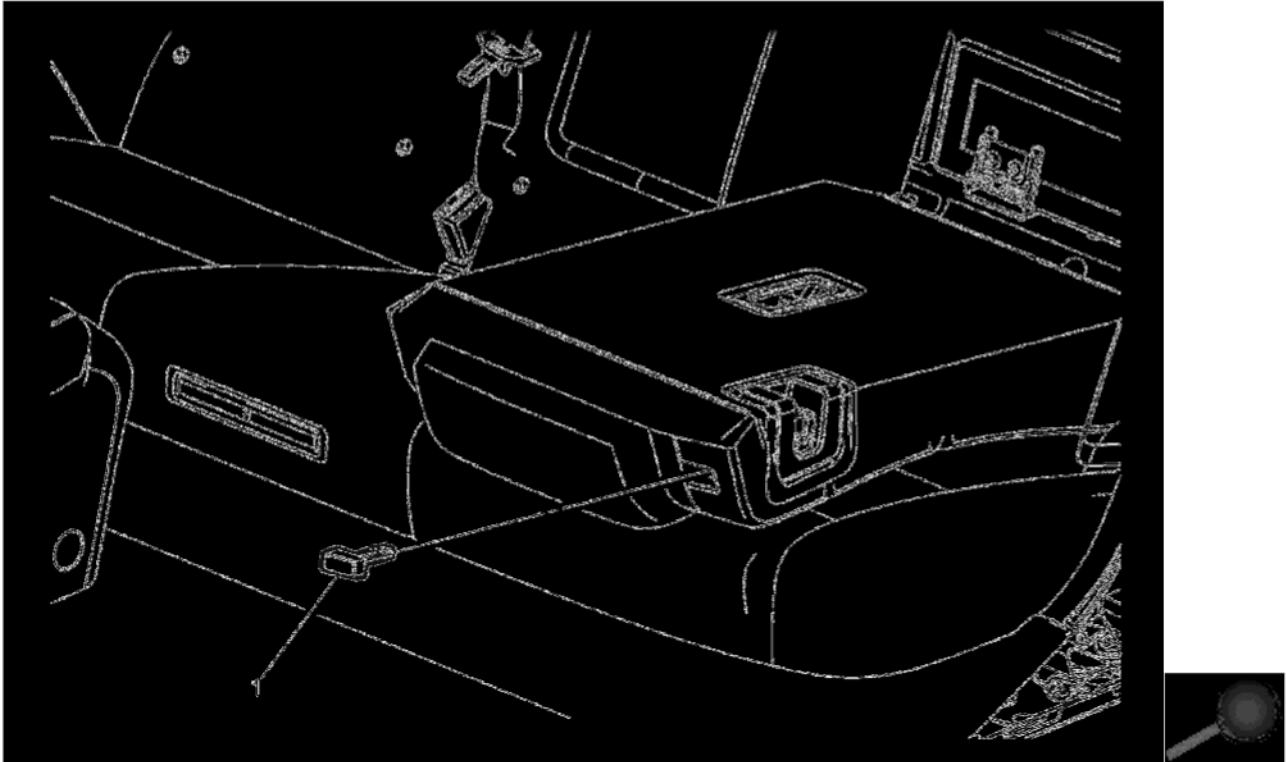

Rear Seat Back Latch Release Pushbutton Replacement

Callout	Component Name
Preliminary Procedure Remove the driver or passenger rear seat back cushion latch release knob bezel. Refer to Rear Seat Back Cushion Latch Release Knob Bezel Replacement .	
1	Rear Seat Back Latch Release Push Button Procedure Use a flat bladed tool to pry the button upward until the button disengages from the seat back actuator wire.


Rear Seat Back Latch Striker Escutcheon Replacement (Sportwagon)

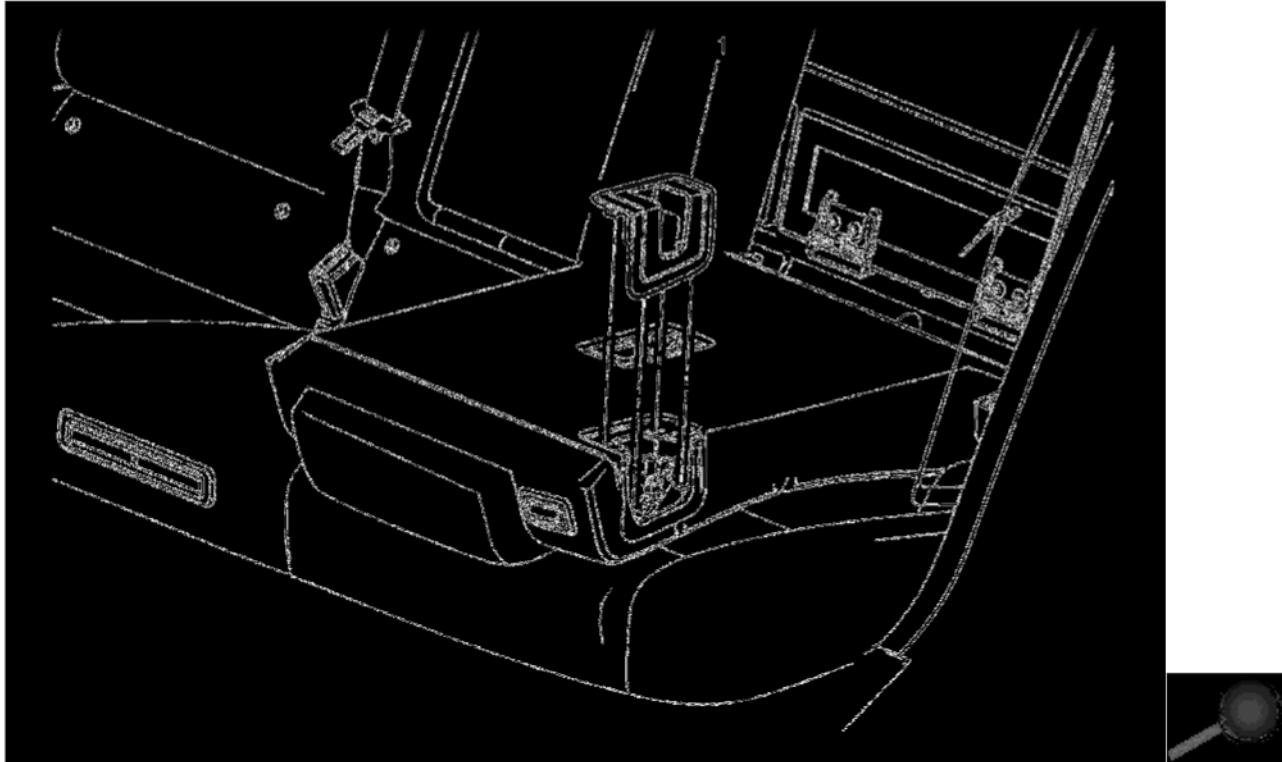

Rear Seat Back Latch Striker Escutcheon Replacement

Callout	Component Name
1	Rear Seat Back Latch Striker Escutcheon Caution: Do not twist the cover during removal. Twisting the cover may cause the component to break. Procedure 1. Fold the rear seat back cushion forward. 2. Remove the escutcheon by gently pulling the cover outward to disengage it fully from the seat back cushion panel.


Rear Seat Back Cushion Hinge Replacement (Sedan)

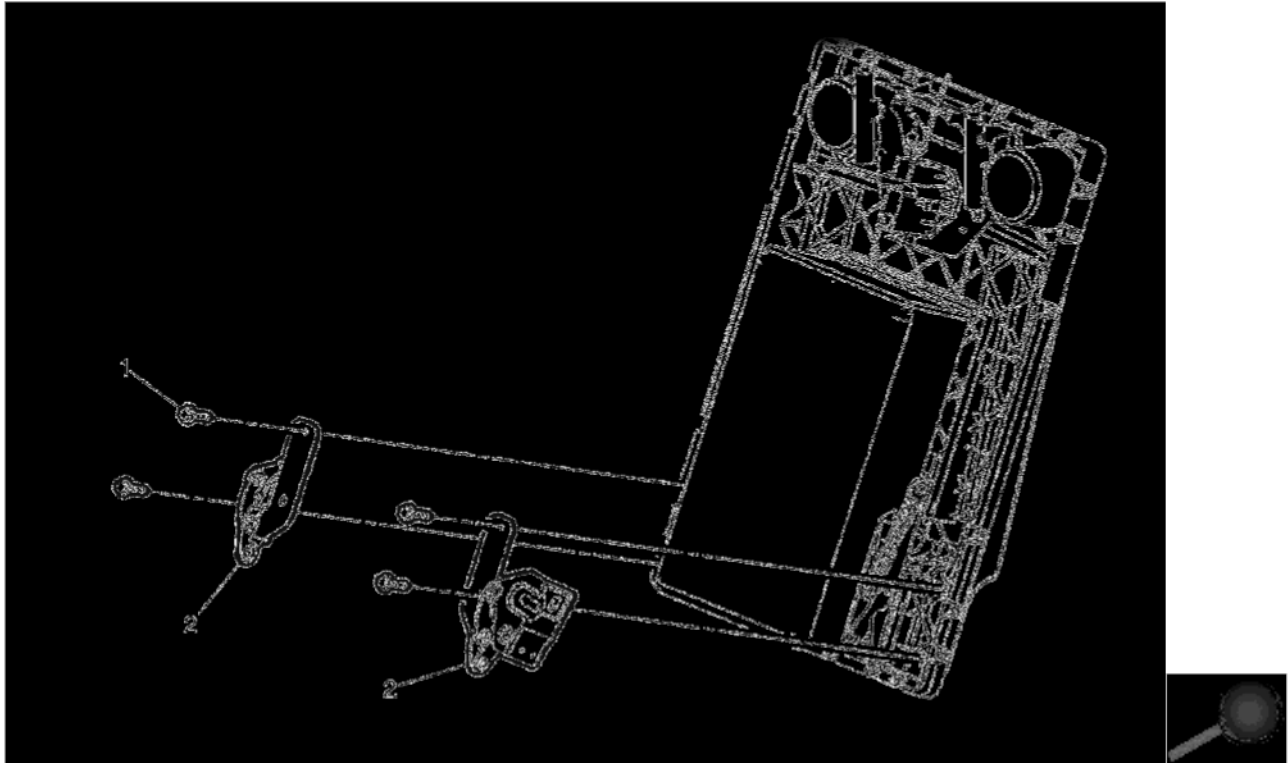

Rear Seat Back Cushion Hinge Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement	
1	Rear Seat Back Cushion Hinge Fastener (Qty: 4) Caution: Refer to Fastener Caution .
2	Rear Seat Back Cushion Hinge (Qty: 2)

Rear Seat Back Cushion Latch Release Knob Bezel Replacement

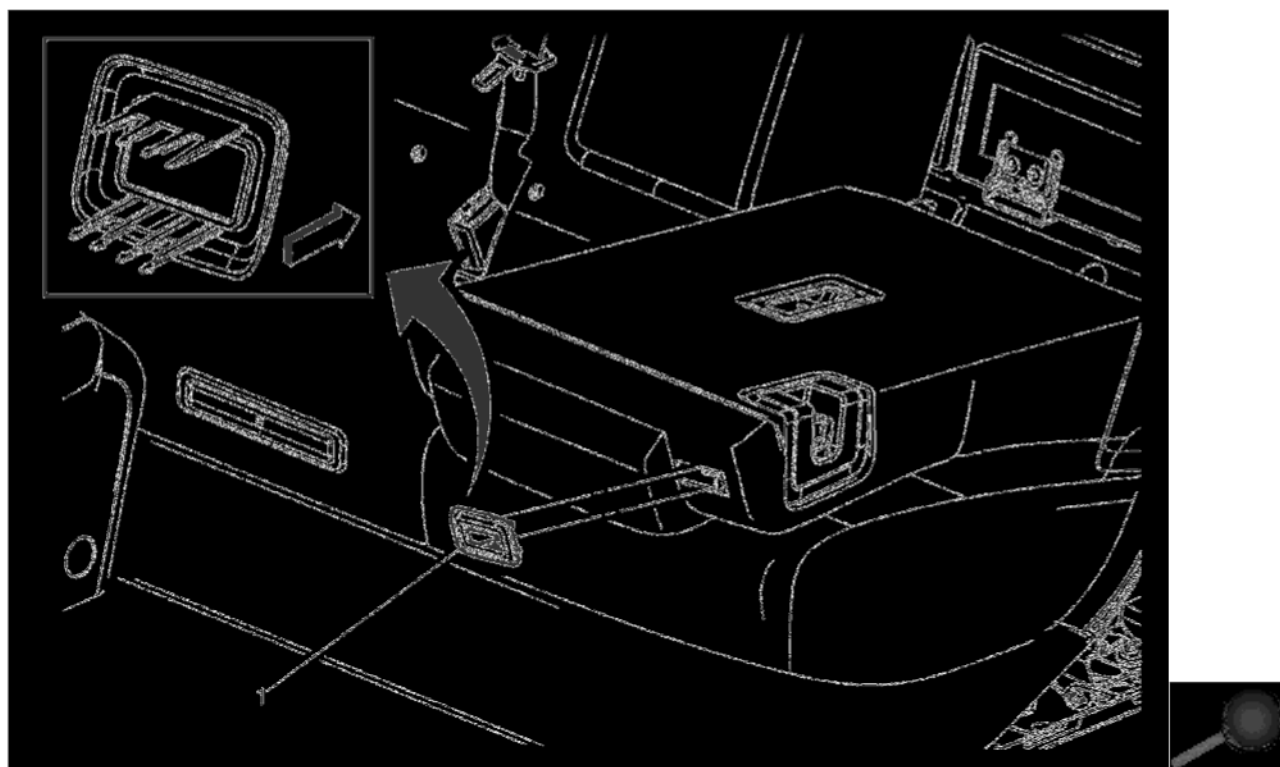

Rear Seat Back Cushion Latch Release Knob Bezel Replacement

Callout	Component Name
1	Rear Seat Back Cushion Latch Release Knob Bezel Procedure Remove the rear seat back shoulder belt opening cover using a suitable flat-bladed tool.