

2018 DTC INDEX**Equinox & Terrain****DTC INDEX****"B" TYPE DTC'S**

DTC	Diagnostic Procedure
B0000	Antilock Brake System - DTC B0000
B000A	Wiring Systems and Power Management - DTC B000A
B0012	Supplemental Restraints - DTC B0012 or B0013
B0013	Supplemental Restraints - DTC B0012 or B0013
B0014	Supplemental Restraints - DTC B0014, B0021, B0031, or B0038
B0015	Supplemental Restraints - DTC B0015, B001A, B001B, or B0022
B0016	Supplemental Restraints - DTC B0016, B0018, B0023, or B0025
B0018	Supplemental Restraints - DTC B0016, B0018, B0023, or B0025
B0019	Supplemental Restraints - DTC B0019 or B0020
B001A	Supplemental Restraints - DTC B0015, B001A, B001B, or B0022
B001B	Supplemental Restraints - DTC B0015, B001A, B001B, or B0022
B0020	Supplemental Restraints - DTC B0019 or B0020
B0021	Supplemental Restraints - DTC B0014, B0021, B0031, or B0038
B0022	Supplemental Restraints - DTC B0015, B001A, B001B, or B0022
B0023	Supplemental Restraints - DTC B0016, B0018, B0023, or B0025
B0025	Supplemental Restraints - DTC B0016, B0018, B0023, or B0025
B0031	Supplemental Restraints - DTC B0014, B0021, B0031, or B0038
B0038	Supplemental Restraints - DTC B0014, B0021, B0031, or B0038
B0052	Supplemental Restraints - DTC B0052
B0071	Supplemental Restraints - DTC B0071
B0072	Seat Belts - DTC B0072 or B0073
B0073	Seat Belts - DTC B0072 or B0073
B0081	Supplemental Restraints - DTC B0081 (Inflatable Restraint Sensing and Diagnostic Module) DTC B0081 (Passenger Presence Module)
B0082	Seat Belts - DTC B0082
B0083	Supplemental Restraints - DTC B0083 or B0084
B0084	Supplemental Restraints - DTC B0083 or B0084
B0085	Supplemental Restraints - DTC B0085 or B0088
B0086	Supplemental Restraints - DTC B0086 or B0087
B0087	Supplemental Restraints - DTC B0086 or B0087
B0088	Supplemental Restraints - DTC B0085 or B0088
B0163	HVAC - Automatic - DTC B0163 or B0183
B0183	HVAC - Automatic - DTC B0163 or B0183
B018A	HVAC - Automatic - DTC B018A, B048C, B048F, or B1395
B0193	HVAC - Automatic - DTC B0193
B0193	HVAC - Manual - DTC B0193
B0223	HVAC - Automatic - DTC B0223, B0233, B023A, B0408, or B0418
B0223	HVAC - Manual - DTC B0223, B0233, B023A, or B0408
B0233	HVAC - Automatic - DTC B0223, B0233, B023A, B0408, or B0418
B0233	HVAC - Manual - DTC B0223, B0233, B023A, or B0408
B023A	HVAC - Automatic - DTC B0223, B0233, B023A, B0408, or B0418
B023A	HVAC - Manual - DTC B0223, B0233, B023A, or B0408

DTC	Diagnostic Procedure
B0283	Fixed and Moveable Windows - <u>DTC B0283</u>
B0408	HVAC - Automatic - <u>DTC B0223, B0233, B023A, B0408, or B0418</u>
B0408	HVAC - Manual - <u>DTC B0223, B0233, B023A, or B0408</u>
B0418	HVAC - Automatic - <u>DTC B0223, B0233, B023A, B0408, or B0418</u>
B048C	HVAC - Automatic - <u>DTC B018A, B048C, B048F, or B1395</u>
B048D	HVAC - Automatic - <u>DTC B048D</u>
B048D	HVAC - Manual - <u>DTC B048D</u>
B048F	HVAC - Automatic - <u>DTC B018A, B048C, B048F, or B1395</u>
B0550	Displays and Gauges - <u>DTC B0550</u>
B0560	Active Noise Cancellation - <u>DTC B0560</u>
B0560	Cellular, Entertainment, and Navigation - <u>DTC B0560</u>
B059A	Seat Belts - <u>DTC B059A</u>
B067F	Supplemental Restraints - <u>DTC B067F or B0680</u>
B0680	Supplemental Restraints - <u>DTC B067F or B0680</u>
B071F	Displays and Gauges - <u>DTC B071F</u>
B0931	Displays and Gauges - <u>DTC B0931</u>
B094B	Driver Assistance Systems - <u>DTC B094B or B094C</u>
B094C	Driver Assistance Systems - <u>DTC B094B or B094C</u>
B094D	Driver Assistance Systems - <u>DTC B094D or B094E</u>
B094E	Driver Assistance Systems - <u>DTC B094D or B094E</u>
B0954	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B0955	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B0956	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B0957	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B0958	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B0959	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B0960	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B0961	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B0967	Parking Assistance Systems - <u>DTC B0967 or B0968</u>
B0968	Parking Assistance Systems - <u>DTC B0967 or B0968</u>
B096B	Parking Assistance Systems - <u>DTC B096B</u>
B096C	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B096D	Parking Assistance Systems - <u>DTC B0954-B0961, B096C, or B096D</u>
B097B	Wiring Systems and Power Management - <u>DTC B097B</u>
B097C	Wiring Systems and Power Management - <u>DTC B097C</u>
B0987	Driver Assistance Systems - <u>DTC B0987 (Chevrolet)</u> , <u>DTC B0987 (GMC)</u>
B0997	Cellular, Entertainment, and Navigation - <u>DTC B0997</u>
B1000	Data Communications - <u>DTC B1000</u>
B1001	Data Communications - <u>DTC B1001</u>
B1001	Supplemental Restraints - <u>DTC B1001</u>
B1011	Driver Assistance Systems - <u>DTC B1011</u>
B1015	Driver Assistance Systems - <u>DTC B1015</u>
B1015	Parking Assistance Systems - <u>DTC B1015</u>
B1019	Vehicle Access - <u>DTC B1019</u>
B1019	Supplemental Restraints - <u>DTC B1019</u>
B101D	Data Communications - <u>DTC B101D</u>
B101D	Driver Assistance Systems - <u>DTC B101D (Frontview Camera Module or Frontview Camera - Windshield)</u>
B101E	Data Communications - <u>DTC B101E</u>
B1024	Cellular, Entertainment, and Navigation - <u>DTC B1024</u>

DTC	Diagnostic Procedure
B1025	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1035, B1045 or B1055 (without UQA/UZ6)</u> <u>DTC B1025, B1045, B1065, B1075, B1085, B1095 Or B1105 (UQA with IO5/IO6)</u> <u>DTC B1025, B1035, B1045 Or B1055 (UZ6)</u> <u>DTC B1025, B1045, B1065, B1085, B1095, B1105 Or B1115 (UQA with IOS/IOT/IOU)</u>
B1035	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1035, B1045 or B1055 (without UQA/UZ6)</u> <u>DTC B1025, B1035, B1045 Or B1055 (UZ6)</u>
B1045	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1035, B1045 or B1055 (without UQA/UZ6)</u> <u>DTC B1025, B1045, B1065, B1075, B1085, B1095 Or B1105 (UQA with IO5/IO6)</u> <u>DTC B1025, B1035, B1045 Or B1055 (UZ6)</u> <u>DTC B1025, B1045, B1065, B1085, B1095, B1105 Or B1115 (UQA with IOS/IOT/IOU)</u>
B1055	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1035, B1045 or B1055 (without UQA/UZ6)</u> <u>DTC B1025, B1035, B1045 Or B1055 (UZ6)</u>
B1065	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1045, B1065, B1075, B1085, B1095 Or B1105 (UQA with IO5/IO6)</u> <u>DTC B1025, B1045, B1065, B1085, B1095, B1105 Or B1115 (UQA with IOS/IOT/IOU)</u>
B1075	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1045, B1065, B1075, B1085, B1095 Or B1105 (UQA with IO5/IO6)</u>
B1085	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1045, B1065, B1075, B1085, B1095 Or B1105 (UQA with IO5/IO6)</u> <u>DTC B1025, B1045, B1065, B1085, B1095, B1105 Or B1115 (UQA with IOS/IOT/IOU)</u>
B1095	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1045, B1065, B1075, B1085, B1095 Or B1105 (UQA with IO5/IO6)</u> <u>DTC B1025, B1045, B1065, B1085, B1095, B1105 Or B1115 (UQA with IOS/IOT/IOU)</u>
B1105	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1045, B1065, B1075, B1085, B1095 Or B1105 (UQA with IO5/IO6)</u> <u>DTC B1025, B1045, B1065, B1085, B1095, B1105 Or B1115 (UQA with IOS/IOT/IOU)</u>
B1115	Cellular, Entertainment, and Navigation - <u>DTC B1025, B1045, B1065, B1085, B1095, B1105 Or B1115 (UQA with IOS/IOT/IOU)</u>
B123E	Cellular, Entertainment, and Navigation - <u>DTC B123E</u>
B124B	Cellular, Entertainment, and Navigation - <u>DTC B124B (IO5/IO6)</u> <u>DTC B124B (IOB)</u> <u>DTC B124B (IOR)</u> <u>DTC B124B (IOS/IOT/IOU)</u>
B124C	Cellular, Entertainment, and Navigation - <u>DTC B124C (IO5/IO6)</u> <u>DTC B124C (IOS/IOT/IOU)</u>
B124F	Cellular, Entertainment, and Navigation - <u>DTC B124F</u>
B124F	Displays and Gauges - <u>DTC B124F</u>
B125A	Cellular, Entertainment, and Navigation - <u>DTC B125A</u>
B125C	Cellular, Entertainment, and Navigation - <u>DTC B125C</u>
B125E	Cellular, Entertainment, and Navigation - <u>DTC B125E</u>
B1265	Cellular, Entertainment, and Navigation - <u>DTC B1265</u>
B126E	Active Noise Cancellation - <u>DTC B126E, B126F, B127C, or B127D (IOR)</u>
B126F	Active Noise Cancellation - <u>DTC B126E, B126F, B127C, or B127D (IOR)</u>
B126F	Active Noise Cancellation - <u>DTC B1277, B127C, B127D, or B126F (without IOR)</u>
B1271	Cellular, Entertainment, and Navigation - <u>DTC B1271</u>
B1277	Active Noise Cancellation - <u>DTC B1277, B127C, B127D, or B126F (without IOR)</u>
B1277	Cellular, Entertainment, and Navigation - <u>DTC B1277 (IO5/IO6)</u> <u>DTC B1277 (IOS/IOT/IOU)</u> <u>DTC B1277 (IOR)</u>
B127B	Image Display Cameras - <u>DTC B127B (IOB/IOB/IOS/IOT/IOU)</u> <u>DTC B127B (IO5/IO6 without MAH/MBC)</u>
B127C	Cellular, Entertainment, and Navigation - <u>DTC B127C (IOS/IOT/IOU)</u>
B127C	Active Noise Cancellation - <u>DTC B126E, B126F, B127C, or B127D (IOR)</u>
B127C	Active Noise Cancellation - <u>DTC B1277, B127C, B127D, or B126F (without IOR)</u>

DTC	Diagnostic Procedure
B127D	Active Noise Cancellation - DTC B126E , B126F , B127C , or B127D (IOR) .
B127D	Active Noise Cancellation - DTC B1277 , B127C , B127D , or B126F (without IOR) .
B127E	Cellular, Entertainment, and Navigation - DTC B127E (IO5/IO6 without MAH/MBC) , DTC B127E (IOB) , DTC B127E (IOS/IOT/IOU/IOR) , DTC B127E (IO5/IO6 with MAH/MBC) .
B1287	Cellular, Entertainment, and Navigation - DTC B1287
B1325	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B1327	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B1328	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B1330	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B133B	Image Display Cameras - DTC B133B
B1370	Wiring Systems and Power Management - DTC B1370
B1370	Wiring Systems and Power Management - DTC B1370 , B1380 , or B1441
B1380	Wiring Systems and Power Management - DTC B1370 , B1380 , or B1441
B1390	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B1395	Lighting - DTC B1395
B1395	HVAC - Automatic - DTC B018A , B048C , B048F , or B1395
B1395	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B1400	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B1405	Parking Assistance Systems - DTC B1405
B1405	Power Seats - DTC B1405 , B1825 , B2355 , B2365 , or B2375
B1410	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B1415	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
B1424	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A

DTC	Diagnostic Procedure
B1425	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DF, P1E19, or P1E1A</u>
B1439	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DF, P1E19, or P1E1A</u>
B1441	Wiring Systems and Power Management - <u>DTC B1370, B1380, or B1441</u>
B1445	Wiring Systems and Power Management - <u>DTC B1445</u>
B1446	Cellular, Entertainment, and Navigation - <u>DTC B1446 or B1447 (IO5/IO6/IOB) DTC B1446 or B1447 (IOU/IOS/IOT/IOR)</u>
B1447	Cellular, Entertainment, and Navigation - <u>DTC B1446 or B1447 (IO5/IO6/IOB) DTC B1446 or B1447 (IOU/IOS/IOT/IOR)</u>
B1448	Wiring Systems and Power Management - <u>DTC B1448</u>
B144A	Wiring Systems and Power Management - <u>DTC B144A</u>
B144B	Wiring Systems and Power Management - <u>DTC B144B</u>
B144D	Wiring Systems and Power Management - <u>DTC B144D</u>
B1451	Wiring Systems and Power Management - <u>DTC B1451</u>
B1474	Vehicle Access - <u>DTC B1474 or B3849</u>
B147E	Wiring Systems and Power Management - <u>DTC B147E or B147F</u>
B147F	Wiring Systems and Power Management - <u>DTC B147E or B147F</u>
B1480	Lighting - <u>DTC B1480</u>
B1516	12 V Starting and Charging - <u>DTC B1516</u>
B1517	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DF, P1E19, or P1E1A</u>
B151A	12 V Starting and Charging - <u>DTC B151A</u>
B1527	12 V Starting and Charging - <u>DTC B1527</u>
B1534	Vehicle Access - <u>DTC B1534 or B1535</u>
B1535	Vehicle Access - <u>DTC B1534 or B1535</u>
B153A	Vehicle Access - <u>DTC B153A</u>
B153E	Vehicle Access - <u>DTC B153E</u>
B153F	Vehicle Access - <u>DTC B153F</u>
B154A	Mirrors - <u>DTC B154A or B154B</u>
B154B	Mirrors - <u>DTC B154A or B154B</u>
B172E	Driver Assistance Systems - <u>DTC B172E or B172F</u>
B172F	Driver Assistance Systems - <u>DTC B172E or B172F</u>
B1735	Power Seats - <u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1740	Power Seats - <u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1745	Power Seats - <u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1750	Power Seats - <u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1755	Power Seats - <u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1760	Power Seats - <u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1815	Power Seats - <u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1820	Power Seats - <u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>

DTC	Diagnostic Procedure
B1825	Power Seats - <u>DTC B1405, B1825, B2355, B2365, or B2375</u>
B191A	Seat Heating and Cooling - <u>DTC B191A or B191B</u>
B191B	Seat Heating and Cooling - <u>DTC B191A or B191B</u>
B2355	Power Seats - <u>DTC B1405, B1825, B2355, B2365, or B2375</u>
B2365	Power Seats - <u>DTC B1405, B1825, B2355, B2365, or B2375</u>
B2375	Power Seats - <u>DTC B1405, B1825, B2355, B2365, or B2375</u>
B243A	Seat Heating and Cooling - <u>DTC B243A or B243B</u>
B243B	Seat Heating and Cooling - <u>DTC B243A or B243B</u>
B2455	Cellular, Entertainment, and Navigation - <u>DTC B2455 (IO5/IO6/IOB) DTC B2455 (IOR/IOU/IOT/IOS)</u>
B2462	Cellular, Entertainment, and Navigation - <u>DTC B2462 (IO5/IO6 with UE1) DTC B2462 (IO5/IO6 without UE1) DTC B2462 (without IO5/IO6)</u>
B2470	Cellular, Entertainment, and Navigation - <u>DTC B2470</u>
B2476	Cellular, Entertainment, and Navigation - <u>DTC B2476 or B2482</u>
B2482	Cellular, Entertainment, and Navigation - <u>DTC B2476 or B2482</u>
B2494	Vehicle Access - <u>DTC B2494 (Without TB5) DTC B2494 (With TB5)</u>
B2495	Vehicle Access - <u>DTC B2495 or B24A0</u>
B24A0	Vehicle Access - <u>DTC B2495 or B24A0</u>
B2530	Lighting - <u>DTC B2530</u>
B2545	Lighting - <u>DTC B2545</u>
B255F	Lighting - <u>DTC B255F</u>
B256A	Lighting - <u>DTC B256A</u>
B2575	Lighting - <u>DTC B2575 or B2699 (T4A/T4L) DTC B2575 or B2699 (T4F)</u>
B257A	Lighting - <u>DTC B257A</u>
B2580	Lighting - <u>DTC B2580</u>
B25F8	Lighting - <u>DTC B25F8</u>
B260D	Lighting - <u>DTC B260D or B260E</u>
B260E	Lighting - <u>DTC B260D or B260E</u>
B2610	Lighting - <u>DTC B2610</u>
B2615	Lighting - <u>DTC B2615</u>
B2625	Lighting - <u>DTC B2625</u>
B2645	Lighting - <u>DTC B2645</u>
B2699	Lighting - <u>DTC B2575 or B2699 (T4A/T4L) DTC B2575 or B2699 (T4F)</u>
B269A	HVAC - Automatic - <u>DTC B269A, B269C, or B269D</u>
B269A	HVAC - Manual - <u>DTC B269A, B269C, or B269D</u>
B269C	HVAC - Automatic - <u>DTC B269A, B269C, or B269D</u>
B269C	HVAC - Manual - <u>DTC B269A, B269C, or B269D</u>
B269D	HVAC - Automatic - <u>DTC B269A, B269C, or B269D</u>
B269D	HVAC - Manual - <u>DTC B269A, B269C, or B269D</u>
B270A	Shift Lock Control - <u>DTC B270A (Without KL9) DTC B270A (With KL9)</u>
B273A	Antilock Brake System - <u>DTC B273A DTC B273A</u>
B2740	Lighting - <u>DTC B2740</u>
B2750	Horns and Pedestrian Alerts - <u>DTC B2750</u>
B2755	Power Seats - <u>DTC B2755 or B2765</u>
B2765	Power Seats - <u>DTC B2755 or B2765</u>
B2955	Immobilizer - <u>DTC B2955</u>
B297B	Vehicle Access - <u>DTC B297B or B297C</u>
B297C	Vehicle Access - <u>DTC B297B or B297C</u>
B2A00	Electronic Transmission Range Select - <u>DTC B2A00</u>
B3006	Bolted Exterior Body Panels and Closures - <u>DTC B3006</u>
B302A	Immobilizer - <u>DTC B302A</u>
B3031	Immobilizer - <u>DTC B3031</u>

DTC	Diagnostic Procedure
B3055	Immobilizer - <u>DTC B3055</u>
B305C	Immobilizer - <u>DTC B305C</u>
B305D	Remote Functions - <u>DTC B305D</u>
B305E	Wiring Systems and Power Management - <u>DTC B305E</u>
B3060	Immobilizer - <u>DTC B3060</u>
B3101	Remote Functions - <u>DTC B3101</u>
B3105	Remote Functions - <u>DTC B3105</u>
B3106	Remote Functions - <u>DTC B3106</u>
B3109	Remote Functions - <u>DTC B3109-B3113</u>
B310D	Remote Functions - <u>DTC B310D-B310F</u>
B310E	Remote Functions - <u>DTC B310D-B310F</u>
B310F	Remote Functions - <u>DTC B310D-B310F</u>
B3110	Remote Functions - <u>DTC B3109-B3113</u>
B3111	Remote Functions - <u>DTC B3109-B3113</u>
B3112	Remote Functions - <u>DTC B3109-B3113</u>
B3113	Remote Functions - <u>DTC B3109-B3113</u>
B3119	Remote Functions - <u>DTC B3119</u>
B3120	Remote Functions - <u>DTC B3120</u>
B3121	Remote Functions - <u>DTC B3121</u>
B3122	Remote Functions - <u>DTC B3122</u>
B3123	Remote Functions - <u>DTC B3123</u>
B3124	Remote Functions - <u>DTC B3124</u>
B3125	Vehicle Access - <u>DTC B3125, B3130, or B3135</u>
B3130	Vehicle Access - <u>DTC B3125, B3130, or B3135</u>
B3135	Vehicle Access - <u>DTC B3125, B3130, or B3135</u>
B3140	Vehicle Access - <u>DTC B3140, B3145, B3150, or B3155</u>
B3145	Vehicle Access - <u>DTC B3140, B3145, B3150, or B3155</u>
B3150	Vehicle Access - <u>DTC B3140, B3145, B3150, or B3155</u>
B3155	Vehicle Access - <u>DTC B3140, B3145, B3150, or B3155</u>
B316B	Fixed and Moveable Windows - <u>DTC B316B, B317A, B318A, or B319A</u>
B317A	Fixed and Moveable Windows - <u>DTC B316B, B317A, B318A, or B319A</u>
B318A	Fixed and Moveable Windows - <u>DTC B316B, B317A, B318A, or B319A</u>
B319A	Fixed and Moveable Windows - <u>DTC B316B, B317A, B318A, or B319A</u>
B3205	Fixed and Moveable Windows - <u>DTC B3205</u>
B323A	Vehicle Access - <u>DTC B323A-B323C</u>
B323B	Vehicle Access - <u>DTC B323A-B323C</u>
B323C	Vehicle Access - <u>DTC B323A-B323C</u>
B3245	Vehicle Access - <u>DTC B324A or B3245</u>
B324A	Vehicle Access - <u>DTC B324A or B3245</u>
B3410	Lighting - <u>DTC B3410 or B3420</u>
B3415	Lighting - <u>DTC B3415</u>
B3420	Lighting - <u>DTC B3410 or B3420</u>
B3435	Lighting - <u>DTC B3435 or B3440</u>
B3440	Lighting - <u>DTC B3435 or B3440</u>
B356A	Driver Assistance Systems - <u>DTC B356A (Chevrolet), DTC B356A (GMC)</u>
B3596	Lighting - <u>DTC B3596</u>
B3600	Lighting - <u>DTC B3600</u>
B3622	Secondary and Configurable Customer Controls - <u>DTC B3622</u>
B3650	Lighting - <u>DTC B3650</u>
B3664	Sunroof - <u>DTC B3664</u>
B3697	Sunroof - <u>DTC B3697</u>
B369B	Sunroof - <u>DTC B369B</u>

DTC	Diagnostic Procedure
B369D	Sunroof - <u>DTC B369D</u>
B370A	Wipers and Washers - <u>DTC B370A</u>
B370B	Wipers and Washers - <u>DTC B370B</u>
B3715	Wipers and Washers - <u>DTC B3715 or B3875</u>
B3794	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
B3806	Lighting - <u>DTC B3806</u>
B380A	Lighting - <u>DTC B380A or B380B</u>
B380B	Lighting - <u>DTC B380A or B380B</u>
B3811	Wipers and Washers - <u>DTC B3811</u>
B3849	Vehicle Access - <u>DTC B1474 or B3849</u>
B384A	Vehicle Access - <u>DTC B384A</u>
B3873	Wipers and Washers - <u>DTC B3873</u>
B3875	Wipers and Washers - <u>DTC B3715 or B3875</u>
B3881	Lighting - <u>DTC B3881 or B3882</u>
B3882	Lighting - <u>DTC B3881 or B3882</u>
B3883	Lighting - <u>DTC B3883</u>
B3884	Lighting - <u>DTC B3884</u>
B389A	Immobilizer - <u>DTC B389A</u>
B3902	Immobilizer - <u>DTC B3902</u>
B390F	Image Display Cameras - <u>DTC B390F</u>
B3920	Power Seats - <u>DTC B3920</u>
B3924	Immobilizer - <u>DTC B3924, B3925, B3926, B3927, B3928</u>
B3925	Immobilizer - <u>DTC B3924, B3925, B3926, B3927, B3928</u>
B3926	Immobilizer - <u>DTC B3924, B3925, B3926, B3927, B3928</u>
B3927	Immobilizer - <u>DTC B3924, B3925, B3926, B3927, B3928</u>
B3928	Immobilizer - <u>DTC B3924, B3925, B3926, B3927, B3928</u>
B3933	HVAC - Automatic - <u>DTC B3933</u>
B3933	HVAC - Manual - <u>DTC B3933</u>
B3935	Immobilizer - <u>DTC B3935</u>
B393B	HVAC - Automatic - <u>DTC B393B</u>
B393B	HVAC - Manual - <u>DTC B393B</u>
B3948	Lighting - <u>DTC B3948 or B3949</u>
B3949	Lighting - <u>DTC B3948 or B3949</u>
B3950	Lighting - <u>DTC B3950 or B3951</u>
B3951	Lighting - <u>DTC B3950 or B3951</u>
B395A	Image Display Cameras - <u>DTC B395A</u>
B395B	Image Display Cameras - <u>DTC B395B</u>
B395C	Image Display Cameras - <u>DTC B395C</u>
B396A	Vehicle Access - <u>DTC B396A</u>
B396C	Vehicle Access - <u>DTC B396C</u>
B396D	Vehicle Access - <u>DTC B396D</u>
B396E	Vehicle Access - <u>DTC B396E</u>
B3976	Immobilizer - <u>DTC B3976</u>
B3978	Immobilizer - <u>DTC B3978, B3979, B3980, B3981, B3982</u>
B3979	Immobilizer - <u>DTC B3978, B3979, B3980, B3981, B3982</u>
B3980	Immobilizer - <u>DTC B3978, B3979, B3980, B3981, B3982</u>
B3981	Immobilizer - <u>DTC B3978, B3979, B3980, B3981, B3982</u>
B3982	Immobilizer - <u>DTC B3978, B3979, B3980, B3981, B3982</u>
B3984	Immobilizer - <u>DTC B3984</u>
B399A	Image Display Cameras - <u>DTC B399A</u>
B399B	Image Display Cameras - <u>DTC B399B</u>

DTC	Diagnostic Procedure
B399C	Image Display Cameras - DTC B399C
B399D	Image Display Cameras - DTC B399D

"C" TYPE DTC'S

DTC	Diagnostic Procedure
C0035	Antilock Brake System - DTC C0035, C0040, C0045, or C0050
C0040	Antilock Brake System - DTC C0035, C0040, C0045, or C0050
C0045	Antilock Brake System - DTC C0035, C0040, C0045, or C0050
C0050	Antilock Brake System - DTC C0035, C0040, C0045, or C0050
C0060	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0065	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0070	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0075	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0080	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0085	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0090	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0095	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0110	Antilock Brake System DTC C0110
C0121	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0131	Antilock Brake System - DTC C0131
C0141	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0146	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0151	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0156	Antilock Brake System - DTC C0060, C0065, C0070, C0075, C0080, C0085, C0090, C0095, C0121, C0141, C0146, C0151 Or C0156
C0161	Antilock Brake System DTC C0161
C0176	Power Steering - DTC C0176
C0179	Antilock Brake System - DTC C0179
C0186	Antilock Brake System - With KSG/UGN - DTC C0186, C018B, C0196, C019B, C027E, or C0287 (With KSG/UGN)
C0186	Antilock Brake System - Without KSG/UGN - DTC C0186, C0196, or C0287 (Without KSG/UGN)
C018B	Antilock Brake System - DTC C0186, C018B, C0196, C019B, C027E, or C0287 (With KSG/UGN)
C0196	Antilock Brake System - Without KSG/UGN - DTC C0186, C0196, or C0287 (Without KSG/UGN)
C0196	Antilock Brake System - With KSG/UGN - DTC C0186, C018B, C0196, C019B, C027E, or C0287 (With KSG/UGN)
C019B	Antilock Brake System - DTC C0186, C018B, C0196, C019B, C027E, or C0287 (With KSG/UGN)
C025E	Hydraulic Brakes - DTC C025E
C025F	Antilock Brake System - DTC C025F, C0274, C0275, or C0280

DTC	Diagnostic Procedure
C0267	Hydraulic Brakes - DTC C0267
C026E	Antilock Brake System - DTC C026E
C0273	Hydraulic Brakes - DTC C0273
C0274	Antilock Brake System - DTC C025F, C0274, C0275, or C0280
C0275	Antilock Brake System - DTC C025F, C0274, C0275, or C0280
C0277	Lighting - DTC C0277 or C0890
C027E	Antilock Brake System - DTC C0186, C018B, C0196, C019B, C027E, or C0287 (With KSG/UGN)
C0280	Antilock Brake System - DTC C025F, C0274, C0275, or C0280
C0287	Antilock Brake System - Without KSG/UGN - DTC C0186, C0196, or C0287 (Without KSG/UGN)
C0287	Antilock Brake System - With KSG/UGN - DTC C0186, C018B, C0196, C019B, C027E, or C0287 (With KSG/UGN)
C028F	Park Brake - DTC C028F
C0293	Park Brake - DTC C0293
C0297	Lighting - DTC C0297
C0299	Hydraulic Brakes - DTC C0299
C0407	Rear Drive Axle - DTC C0407
C0460	Power Steering - DTC C0460
C0475	Power Steering - DTC C0475
C047A	Power Steering - DTC C047A
C0545	Power Steering - DTC C0545
C0550	Data Communications - DTC C0550
C0561	Antilock Brake System - DTC C0561
C0569	Antilock Brake System - DTC C0569
C0569	Power Steering - DTC C0569
C0569	Tire Pressure Monitoring - DTC C0569
C056D	Data Communications - DTC C056D
C056D	Power Steering - DTC C056D (Power Steering Control Module)
C056E	Park Brake - DTC C056E
C056E	Data Communications - DTC C056E
C056E	Power Steering - DTC C056E (Power Steering Control Module)
C0750	Tire Pressure Monitoring - DTC C0750, C0755, C0760, or C0765
C0755	Tire Pressure Monitoring - DTC C0750, C0755, C0760, or C0765
C0760	Tire Pressure Monitoring - DTC C0750, C0755, C0760, or C0765
C0765	Tire Pressure Monitoring - DTC C0750, C0755, C0760, or C0765
C0775	Tire Pressure Monitoring - DTC C0775
C0800	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
C0805	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
C0870	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
C0880	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
C0890	Lighting - DTC C0277 or C0890

DTC	Diagnostic Procedure
C0895	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
C0899	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
C0900	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
C1201	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
C1201	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
C1201	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
C122F	Rear Drive Axle - DTC C122F
C1244	Rear Drive Axle - DTC C1244, C1245, or C124B
C1245	Rear Drive Axle - DTC C1244, C1245, or C124B
C124B	Rear Drive Axle - DTC C1244, C1245, or C124B
C124F	Antilock Brake System - DTC C124F, C1250, or C1251
C1250	Antilock Brake System - DTC C124F, C1250, or C1251
C1251	Antilock Brake System - DTC C124F, C1250, or C1251
C1252	Antilock Brake System - DTC C1252, C1253, C1254
C1253	Antilock Brake System - DTC C1252, C1253, C1254
C1254	Antilock Brake System - DTC C1252, C1253, C1254
C1260	Rear Drive Axle - DTC C1260-C1267
C1261	Rear Drive Axle - DTC C1260-C1267
C1262	Rear Drive Axle - DTC C1260-C1267
C1263	Rear Drive Axle - DTC C1260-C1267
C1264	Rear Drive Axle - DTC C1260-C1267
C1265	Rear Drive Axle - DTC C1260-C1267
C1266	Rear Drive Axle - DTC C1260-C1267
C1267	Rear Drive Axle - DTC C1260-C1267
C1280	Park Brake - DTC C1280 or C1281
C1281	Park Brake - DTC C1280 or C1281

DTC	Diagnostic Procedure
C1282	Rear Drive Axle - <u>DTC C1282</u>
C1290	Rear Drive Axle - <u>DTC C1290, C1291, C1292, C1293, C1295</u>
C1291	Rear Drive Axle - <u>DTC C1290, C1291, C1292, C1293, C1295</u>
C1292	Rear Drive Axle - <u>DTC C1290, C1291, C1292, C1293, C1295</u>
C1293	Rear Drive Axle - <u>DTC C1290, C1291, C1292, C1293, C1295</u>
C1295	Rear Drive Axle - <u>DTC C1290, C1291, C1292, C1293, C1295</u>
C1296	Rear Drive Axle - <u>DTC C1296</u>
C1586	Park Brake - <u>DTC C1586</u>
C1587	Park Brake - <u>DTC C1587</u>
C1588	Park Brake - <u>DTC C1588</u>

"P" TYPE DTC'S

DTC	Diagnostic Procedure
P0010	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0010, P0011, P0013, P0014, P2088, P2089, P02090, Or P2091</u>
P0010	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0010, P0013, or P2088-P2091</u>
P0011	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0010, P0011, P0013, P0014, P2088, P2089, P02090, Or P2091</u>
P0011	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0011 or P0014</u>
P0013	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0010, P0011, P0013, P0014, P2088, P2089, P02090, Or P2091</u>
P0013	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0010, P0013, or P2088-P2091</u>
P0014	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0010, P0011, P0013, P0014, P2088, P2089, P02090, Or P2091</u>
P0014	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0011 or P0014</u>
P0016	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0016 or P0017</u>
P0016	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0016</u>
P0016	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0016 or P0017</u>
P0017	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0016 or P0017</u>
P0017	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0016 or P0017</u>
P0030	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C</u>
P0030	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C</u>
P0031	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C</u>
P0031	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C</u>
P0032	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C</u>
P0032	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C</u>
P0033	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0033-P0035</u>
P0033	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0033-P0035</u>
P0034	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0033-P0035</u>
P0034	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0033-P0035</u>
P0035	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0033-P0035</u>
P0035	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0033-P0035</u>
P0036	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C</u>
P0036	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C</u>

DTC	Diagnostic Procedure
P0037	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C</u>
P0037	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C</u>
P0038	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C</u>
P0038	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C</u>
P003A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P003A</u>
P0045	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0045, P0047, or P0048</u>
P0046	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0046, P2598, or P2599</u>
P0047	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0045, P0047, or P0048</u>
P0048	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0045, P0047, or P0048</u>
P0053	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C</u>
P0054	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C</u>
P0054	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C</u>
P0068	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0068 or P1101</u>
P0068	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0068 or P1101</u>
P0070	Displays and Gauges - <u>DTC P0070</u>
P0071	Displays and Gauges - <u>DTC P0071-P0074</u>
P0072	Displays and Gauges - <u>DTC P0071-P0074</u>
P0073	Displays and Gauges - <u>DTC P0071-P0074</u>
P0074	Displays and Gauges - <u>DTC P0071-P0074</u>
P007B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P007B</u>
P007C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P007C-P007E</u>
P007D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P007C-P007E</u>
P007E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P007C-P007E</u>
P0087	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0087, P0089, P228C, P228D, or P2293</u>
P0089	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P0089	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0089, P00C6, P228C, or P228D</u>
P0089	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0087, P0089, P228C, P228D, or P2293</u>
P0090	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0090	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0090	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0090, P0091, or P0092</u>
P0091	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0091	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0091	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0090, P0091, or P0092</u>
P0092	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0092	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0092	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0090, P0091, or P0092</u>
P0096	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0096 or P0111</u>
P0096	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0096 or P0111</u>

DTC	Diagnostic Procedure
P0096	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0096 or P0111</u>
P0097	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0097	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0097, P0098, or P0099</u>
P0097	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0097, P0098, or P0099</u>
P0098	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0098	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0097, P0098, or P0099</u>
P0098	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0097, P0098, or P0099</u>
P0099	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0099	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0097, P0098, or P0099</u>
P0099	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0097, P0098, or P0099</u>
P00C6	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P00C6	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0089, P00C6, P228C, or P228D</u>
P00C7	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P00C7</u>
P00C7	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00C7</u>
P00C7	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P00C7</u>
P00C8	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00C8	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00C9	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00C9	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00CA	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00CA	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00E9	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P00E9</u>
P00E9	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00E9</u>
P00E9	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P00E9</u>
P00EA	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P00EA-P00EC</u>
P00EA	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00EA-P00EC</u>
P00EA	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P00EA-P00EC</u>
P00EB	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P00EA-P00EC</u>
P00EB	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00EA-P00EC</u>
P00EB	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P00EA-P00EC</u>
P00EC	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P00EA-P00EC</u>
P00EC	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00EA-P00EC</u>
P00EC	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P00EA-P00EC</u>
P00F4	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P00F4-P00F6</u>
P00F4	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P00F4-P00F6</u>
P00F4	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F5	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P00F4-P00F6</u>
P00F5	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P00F4-P00F6</u>
P00F5	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F6	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P00F4-P00F6</u>
P00F6	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P00F4-P00F6</u>

DTC	Diagnostic Procedure
P00F6	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0097-P0099 or P00F4-P00F6
P00FF	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P00FE, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9
P0101	Engine Controls and Fuel - 1.5L (LYX) - DTC P0101
P0101	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0101
P0101	Engine Controls and Fuel - 2.0L (LTG) - DTC P0101
P0102	Engine Controls and Fuel - 1.5L (LYX) - DTC P0102 or P0103
P0102	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0102 or P0103
P0102	Engine Controls and Fuel - 2.0L (LTG) - DTC P0102 or P0103
P0103	Engine Controls and Fuel - 1.5L (LYX) - DTC P0102 or P0103
P0103	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0102 or P0103
P0103	Engine Controls and Fuel - 2.0L (LTG) - DTC P0102 or P0103
P0106	Engine Controls and Fuel - 1.5L (LYX) - DTC P0106
P0106	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0106
P0106	Engine Controls and Fuel - 2.0L (LTG) - DTC P0106
P0107	Engine Controls and Fuel - 1.5L (LYX) - DTC P0107 or P0108
P0107	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0107 or P0108
P0107	Engine Controls and Fuel - 2.0L (LTG) - DTC P0107 or P0108
P0108	Engine Controls and Fuel - 1.5L (LYX) - DTC P0107 or P0108
P0108	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0107 or P0108
P0108	Engine Controls and Fuel - 2.0L (LTG) - DTC P0107 or P0108
P0111	Engine Controls and Fuel - 1.5L (LYX) - DTC P0096 or P0111
P0111	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0096 or P0111
P0111	Engine Controls and Fuel - 2.0L (LTG) - DTC P0096 or P0111
P0112	Engine Controls and Fuel - 1.5L (LYX) - DTC P0112, P0113, or P0114
P0112	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0112, P0113, or P0114
P0112	Engine Controls and Fuel - 2.0L (LTG) - DTC P0112, P0113, or P0114
P0113	Engine Controls and Fuel - 1.5L (LYX) - DTC P0112, P0113, or P0114
P0113	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0112, P0113, or P0114
P0113	Engine Controls and Fuel - 2.0L (LTG) - DTC P0112, P0113, or P0114
P0114	Engine Controls and Fuel - 1.5L (LYX) - DTC P0112, P0113, or P0114
P0114	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0112, P0113, or P0114
P0114	Engine Controls and Fuel - 2.0L (LTG) - DTC P0112, P0113, or P0114
P0117	Engine Controls and Fuel - 1.5L (LYX) - DTC P0117, P0118, or P0119
P0117	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0117, P0118, or P0119
P0117	Engine Controls and Fuel - 2.0L (LTG) - DTC P0117, P0118, or P0119
P0118	Engine Controls and Fuel - 1.5L (LYX) - DTC P0117, P0118, or P0119
P0118	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0117, P0118, or P0119
P0118	Engine Controls and Fuel - 2.0L (LTG) - DTC P0117, P0118, or P0119
P0119	Engine Controls and Fuel - 1.5L (LYX) - DTC P0117, P0118, or P0119
P0119	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0117, P0118, or P0119
P0119	Engine Controls and Fuel - 2.0L (LTG) - DTC P0117, P0118, or P0119
P0121	Engine Controls and Fuel - 1.5L (LYX) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P0121	Engine Controls and Fuel - 2.0L (LTG) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P0122	Engine Controls and Fuel - 1.5L (LYX) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P0122	Engine Controls and Fuel - 2.0L (LTG) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135

DTC	Diagnostic Procedure
P0123	Engine Controls and Fuel - 1.5L (LYX) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P0123	Engine Controls and Fuel - 2.0L (LTG) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P0128	Engine Controls and Fuel - 1.5L (LYX) - DTC P0128
P0128	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0128
P0128	Engine Controls and Fuel - 2.0L (LTG) - DTC P0128
P0131	Engine Controls and Fuel - 1.5L (LYX) - DTC P0131, P0132, P0137, or P0138
P0131	Engine Controls and Fuel - 2.0L (LTG) - DTC P0131, P0132, P015A, P015B, P223C, or P223E
P0132	Engine Controls and Fuel - 1.5L (LYX) - DTC P0131, P0132, P0137, or P0138
P0132	Engine Controls and Fuel - 2.0L (LTG) - DTC P0131, P0132, P015A, P015B, P223C, or P223E
P0133	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P0135	Engine Controls and Fuel - 2.0L (LTG) - DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C
P0135	Engine Controls and Fuel - 1.5L (LYX) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P0137	Engine Controls and Fuel - 2.0L (LTG) - DTC P0137, P0138, P013A, P013B, P013E, P013F, P2270, or P2271
P0137	Engine Controls and Fuel - 1.5L (LYX) - DTC P0131, P0132, P0137, or P0138
P0138	Engine Controls and Fuel - 2.0L (LTG) - DTC P0137, P0138, P013A, P013B, P013E, P013F, P2270, or P2271
P0138	Engine Controls and Fuel - 1.5L (LYX) - DTC P0131, P0132, P0137, or P0138
P013A	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P013A	Engine Controls and Fuel - 2.0L (LTG) - DTC P0137, P0138, P013A, P013B, P013E, P013F, P2270, or P2271
P013B	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P013B	Engine Controls and Fuel - 2.0L (LTG) - DTC P0137, P0138, P013A, P013B, P013E, P013F, P2270, or P2271
P013E	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P013E	Engine Controls and Fuel - 2.0L (LTG) - DTC P0137, P0138, P013A, P013B, P013E, P013F, P2270, or P2271
P013F	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P013F	Engine Controls and Fuel - 2.0L (LTG) - DTC P0137, P0138, P013A, P013B, P013E, P013F, P2270, or P2271
P0141	Engine Controls and Fuel - 2.0L (LTG) - DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C
P0141	Engine Controls and Fuel - 1.5L (LYX) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P015A	Engine Controls and Fuel - 2.0L (LTG) - DTC P0131, P0132, P015A, P015B, P223C, or P223E
P015A	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P015B	Engine Controls and Fuel - 2.0L (LTG) - DTC P0131, P0132, P015A, P015B, P223C, or P223E
P015B	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P0171	Engine Controls and Fuel - 1.5L (LYX) - DTC P0171 or P0172
P0171	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0171 or P0172

DTC	Diagnostic Procedure
P0171	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0171 or P0172</u>
P0172	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0171 or P0172</u>
P0172	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0171 or P0172</u>
P0172	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0171 or P0172</u>
P0181	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0181-P0184</u>
P0182	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0181-P0184</u>
P0182	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0182, P0183, P0187, P0188, P111F, P126E, or P126F</u>
P0183	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0181-P0184</u>
P0183	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0182, P0183, P0187, P0188, P111F, P126E, or P126F</u>
P0184	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0181-P0184</u>
P0187	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0182, P0183, P0187, P0188, P111F, P126E, or P126F</u>
P0188	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0182, P0183, P0187, P0188, P111F, P126E, or P126F</u>
P018B	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P018B-P018D</u>
P018B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P018B-P018D</u>
P018B	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P018B-P018D</u>
P018C	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P018B-P018D</u>
P018C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P018B-P018D</u>
P018C	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P018B-P018D</u>
P018D	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P018B-P018D</u>
P018D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P018B-P018D</u>
P018D	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P018B-P018D</u>
P0191	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0191 or P0192</u>
P0191	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0191, P0192, or P0193</u>
P0191	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0191 or P0192</u>
P0192	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0191 or P0192</u>
P0192	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0191, P0192, or P0193</u>
P0192	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0191 or P0192</u>
P0193	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0191, P0192, or P0193</u>
P01CB	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01CB-P01CF or P01D0-P01D2</u>
P01CC	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01CB-P01CF or P01D0-P01D2</u>
P01CD	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01CB-P01CF or P01D0-P01D2</u>
P01CE	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01CB-P01CF or P01D0-P01D2</u>
P01CF	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01CB-P01CF or P01D0-P01D2</u>
P01D0	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01CB-P01CF or P01D0-P01D2</u>
P01D1	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01CB-P01CF or P01D0-P01D2</u>
P01D2	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01CB-P01CF or P01D0-P01D2</u>
P01F0	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P01F0</u>
P0201	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0201	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0201-P0204</u>

DTC	Diagnostic Procedure
P0201	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0202	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0202	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0201-P0204</u>
P0202	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0203	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0203	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0201-P0204</u>
P0203	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0204	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0204	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0201-P0204</u>
P0204	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P020A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P020A-P020D</u>
P020B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P020A-P020D</u>
P020C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P020A-P020D</u>
P020D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P020A-P020D</u>
P0216	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0216</u>
P0222	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135</u>
P0222	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135</u>
P0223	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135</u>
P0223	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135</u>
P0231	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0231, P0232, or P023F</u>
P0231	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0231, P0232, or P023F</u>
P0232	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0231, P0232, or P023F</u>
P0232	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0231, P0232, or P023F</u>
P0234	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0234 or P0299</u>
P0234	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0234, P0299, or P2263</u>
P0234	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0234 or P0299</u>
P0236	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0236</u>
P0236	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0236</u>
P0237	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0237 or P0238</u>
P0237	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0237 or P0238</u>
P0238	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0237 or P0238</u>
P0238	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0237 or P0238</u>
P023F	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0231, P0232, or P023F</u>
P023F	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0231, P0232, or P023F</u>
P0243	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0243, P0245, or P0246</u>
P0243	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0243, P0245, or P0246</u>

[illegible]

Diagnostic Procedure	
DTC	
P0269	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0263, P0266, P0269, or P0272
P026A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P026A
P0270	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0261, P0262, P0264, P0265, P0267, P0268, P0270, or P0271
P0270	Engine Controls and Fuel - 1.5L (LYX) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P0270	Engine Controls and Fuel - 2.0L (LTG) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P0271	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0261, P0262, P0264, P0265, P0267, P0268, P0270, or P0271
P0271	Engine Controls and Fuel - 1.5L (LYX) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P0271	Engine Controls and Fuel - 2.0L (LTG) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P0272	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0263, P0266, P0269, or P0272
P0299	Engine Controls and Fuel - 1.5L (LYX) - DTC P0234 or P0299
P0299	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0234, P0299, or P2263
P0299	Engine Controls and Fuel - 2.0L (LTG) - DTC P0234 or P0299
P02CC	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02CC-P02D3
P02CD	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02CC-P02D3
P02CE	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02CC-P02D3
P02CF	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02CC-P02D3
P02D0	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02CC-P02D3
P02D1	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02CC-P02D3
P02D2	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02CC-P02D3
P02D3	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02CC-P02D3
P02E0	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P02E1	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E1, P02E4, or P02E5
P02E2	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P02E3	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P02E4	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E1, P02E4, or P02E5
P02E5	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E1, P02E4, or P02E5
P02E8	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E8, P02E9, or P16A0-P16A2
P02E9	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E8, P02E9, or P16A0-P16A2
P02EB	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P0300	Engine Controls and Fuel - 1.5L (LYX) - DTC P0300-P0304
P0300	Engine Controls and Fuel - 2.0L (LTG) - DTC P0300-P0304
P0300	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0300
P0301	Engine Controls and Fuel - 1.5L (LYX) - DTC P0300-P0304
P0301	Engine Controls and Fuel - 2.0L (LTG) - DTC P0300-P0304
P0302	Engine Controls and Fuel - 1.5L (LYX) - DTC P0300-P0304
P0302	Engine Controls and Fuel - 2.0L (LTG) - DTC P0300-P0304

DTC	Diagnostic Procedure
P0303	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0300-P0304</u>
P0303	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0300-P0304</u>
P0304	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0300-P0304</u>
P0304	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0300-P0304</u>
P0315	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0315</u>
P0315	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0315</u>
P0315	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0315</u>
P0324	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0324	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0324, P0326, P0331, P06B6, or P06B7</u>
P0325	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0325	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>
P0326	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0326	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0324, P0326, P0331, P06B6, or P06B7</u>
P0327	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0327	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>
P0328	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0328	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>
P0329	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0330	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0330	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>
P0331	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0331	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0324, P0326, P0331, P06B6, or P06B7</u>
P0332	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0332	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>
P0333	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0333	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>
P0335	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0335 or P0336</u>
P0335	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0335 or P0336</u>
P0335	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0335 or P0336</u>
P0336	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0335 or P0336</u>
P0336	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0335 or P0336</u>
P0336	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0335 or P0336</u>
P0340	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0340	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0340 or P0341</u>
P0340	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0341	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0341	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0340 or P0341</u>
P0341	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0340, P0341, P0365, or P0366</u>
P034A	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P034A or P034B</u>
P034A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P034A or P034B</u>
P034A	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P034A or P034B</u>
P034B	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P034A or P034B</u>
P034B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P034A or P034B</u>
P034B	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P034A or P034B</u>

DTC	Diagnostic Procedure
P0351	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0351	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0352	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0352	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0353	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0353	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0354	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0354	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0365	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0365	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0366	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0366	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0340, P0341, P0365, or P0366</u>
P037A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P037A, P037B, or P0381</u>
P037B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P037A, P037B, or P0381</u>
P037E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P037E or P037F</u>
P037F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P037E or P037F</u>
P0381	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P037A, P037B, or P0381</u>
P0401	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0401 or P0402</u>
P0402	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0401 or P0402</u>
P0403	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0403, P0490, P1402, P1407, or P140F</u>
P0404	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0404-P0406</u>
P0405	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0404-P0406</u>
P0406	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0404-P0406</u>
P0407	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0407, P0408, P046E, or P046F</u>
P0408	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0407, P0408, P046E, or P046F</u>
P040B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P040C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P040D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P040E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P041B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P041C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P041D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P041E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P0420	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0420</u>
P0420	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0420</u>
P0421	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0421</u>

DTC	Diagnostic Procedure
P042E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P042E or P042F</u>
P042F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P042E or P042F</u>
P0442	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0442</u>
P0442	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0442</u>
P0443	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0443, P0458, or P0459</u>
P0443	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0443, P0458, or P0459</u>
P0446	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0446</u>
P0446	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0446</u>
P0449	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0449, P0498, or P0499</u>
P0449	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0449, P0498, or P0499</u>
P0451	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0451-P0454</u>
P0451	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0451-P0454</u>
P0452	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0451-P0454</u>
P0452	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0451-P0454</u>
P0453	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0451-P0454</u>
P0453	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0451-P0454</u>
P0454	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0451-P0454</u>
P0454	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0451-P0454</u>
P0455	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0455</u>
P0455	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0455</u>
P0458	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0443, P0458, or P0459</u>
P0458	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0443, P0458, or P0459</u>
P0459	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0443, P0458, or P0459</u>
P0459	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0443, P0458, or P0459</u>
P0461	Displays and Gauges - <u>DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Diesel Engine) DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Gasoline engine)</u>
P0462	Displays and Gauges - <u>DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Diesel Engine) DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Gasoline engine)</u>
P0463	Displays and Gauges - <u>DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Diesel Engine) DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Gasoline engine)</u>
P0464	Displays and Gauges - <u>DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Diesel Engine) DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Gasoline engine)</u>
P046E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0407, P0408, P046E, or P046F</u>
P046F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0407, P0408, P046E, or P046F</u>
P0480	Engine Heating and Cooling - <u>DTC P0480, P0691, or P0692</u>
P0490	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0403, P0490, P1402, P1407, or P140F</u>
P0496	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0496</u>
P0496	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0496</u>
P0498	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0449, P0498, or P0499</u>
P0498	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0449, P0498, or P0499</u>
P0499	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0449, P0498, or P0499</u>
P0499	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0449, P0498, or P0499</u>
P049D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P049D</u>
P0506	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0506 or P0507</u>
P0506	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0506 or P0507</u>
P0506	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0506 or P0507</u>

DTC	Diagnostic Procedure
P0507	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0506 or P0507</u>
P0507	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0506 or P0507</u>
P0507	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0506 or P0507</u>
P050D	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P050D</u>
P050F	Hydraulic Brakes - <u>DTC P050F</u>
P0513	Immobilizer - <u>DTC P0513</u>
P0521	Displays and Gauges - <u>DTC P0521, P0522, or P0523</u>
P0522	Displays and Gauges - <u>DTC P0521, P0522, or P0523</u>
P0523	Displays and Gauges - <u>DTC P0521, P0522, or P0523</u>
P0531	HVAC - Automatic - <u>DTC P0531, P0532, or P0533</u>
P0531	HVAC - Manual - <u>DTC P0531, P0532, or P0533</u>
P0532	HVAC - Automatic - <u>DTC P0531, P0532, or P0533</u>
P0532	HVAC - Manual - <u>DTC P0531, P0532, or P0533</u>
P0533	HVAC - Automatic - <u>DTC P0531, P0532, or P0533</u>
P0533	HVAC - Manual - <u>DTC P0531, P0532, or P0533</u>
P053A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P053A-P053C</u>
P053B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P053A-P053C</u>
P053C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P053A-P053C</u>
P0545	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0545, P0546, P2032, P2033, P242C, or P242D</u>
P0546	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0545, P0546, P2032, P2033, P242C, or P242D</u>
P054E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P054E or P054F</u>
P054F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P054E or P054F</u>
P0556	Hydraulic Brakes - <u>DTC P0556, P0557, or P0558</u>
P0557	Hydraulic Brakes - <u>DTC P0556, P0557, or P0558</u>
P0558	Hydraulic Brakes - <u>DTC P0556, P0557, or P0558</u>
P0560	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A</u>
P0561	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A</u>
P0562	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A</u>
P0563	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A</u>
P0564	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P0565	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P0567	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P0568	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P056C	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P0571	Cruise Control - <u>DTC P0571</u>
P0572	Cruise Control - <u>DTC P0572 or P0573</u>

DTC	Diagnostic Procedure
P0573	Cruise Control - <u>DTC P0572 or P0573</u>
P0575	Cruise Control - <u>DTC P0575</u>
P057B	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P057B-P057E</u>
P057B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P057B-P057E</u>
P057B	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P057B-P057E</u>
P057C	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P057B-P057E</u>
P057C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P057B-P057E</u>
P057C	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P057B-P057E</u>
P057D	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P057B-P057E</u>
P057D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P057B-P057E</u>
P057D	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P057B-P057E</u>
P057E	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P057B-P057E</u>
P057E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P057B-P057E</u>
P057E	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P057B-P057E</u>
P0580	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P0581	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P058A	12 V Starting and Charging - <u>DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3</u>
P058B	12 V Starting and Charging - <u>DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3</u>
P058C	12 V Starting and Charging - <u>DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3</u>
P058D	12 V Starting and Charging - <u>DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3</u>
P058E	12 V Starting and Charging - <u>DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3</u>
P058F	12 V Starting and Charging - <u>DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3</u>
P059F	Bumpers and Fascias - <u>DTC P059F or P151E</u>
P05CC	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P05CC or P05CE</u>
P05CE	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P05CC or P05CE</u>
P0601	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B</u>
P0601	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B</u>
P0601	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B</u>
P0601	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD</u>
P0601	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0601-P0604 or P062F</u>
P0601	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0601-P0604, P0606, P062F, P16F3, or P16FB</u>
P0602	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B</u>
P0602	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B</u>
P0602	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B</u>
P0602	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD</u>
P0602	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0601-P0604 or P062F</u>

DTC	Diagnostic Procedure
P0602	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0601-P0604, P0606, P062F, P16F3, or P16FB
P0603	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0601-P0604 or P062F
P0603	Engine Controls and Fuel - 1.5L (LYX) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P0603	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P0603	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B
P0603	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P0603	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0601-P0604 or P062F
P0603	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0601-P0604, P0606, P062F, P16F3, or P16FB
P0604	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0601-P0604 or P062F
P0604	Engine Controls and Fuel - 1.5L (LYX) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P0604	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P0604	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B
P0604	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P0604	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0601-P0604 or P062F
P0604	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0601-P0604, P0606, P062F, P16F3, or P16FB
P0605	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P0606	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P0606	Engine Controls and Fuel - 1.5L (LYX) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P0606	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P0606	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B
P0606	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0601-P0604, P0606, P062F, P16F3, or P16FB
P0607	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P060A	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P060B	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P060C	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P0610	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P0611	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DF, P1E19, or P1E1A

DTC	Diagnostic Procedure
P0615	12 V Starting and Charging - DTC P0615, P0616, or P0617 (KL9) DTC P0615, P0616, or P0617 (Without KL9)
P0616	12 V Starting and Charging - DTC P0615, P0616, or P0617 (KL9) DTC P0615, P0616, or P0617 (Without KL9)
P0617	12 V Starting and Charging - DTC P0615, P0616, or P0617 (KL9) DTC P0615, P0616, or P0617 (Without KL9)
P0621	12 V Starting and Charging - DTC P0621
P0622	12 V Starting and Charging - DTC P0622
P0627	Engine Controls and Fuel - 1.5L (LYX) - DTC P0627-P0629
P0627	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0627-P0629
P0627	Engine Controls and Fuel - 2.0L (LTG) - DTC P0627-P0629
P0628	Engine Controls and Fuel - 1.5L (LYX) - DTC P0627-P0629
P0628	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0627-P0629
P0628	Engine Controls and Fuel - 2.0L (LTG) - DTC P0627-P0629
P0629	Engine Controls and Fuel - 1.5L (LYX) - DTC P0627-P0629
P0629	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0627-P0629
P0629	Engine Controls and Fuel - 2.0L (LTG) - DTC P0627-P0629
P062B	Engine Controls and Fuel - 1.5L (LYX) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P062B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P062B	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B
P062D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P062D or P062E
P062E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P062D or P062E
P062F	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0601-P0604 or P062F
P062F	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0601-P0604, P0606, P062F, P16F3, or P16FB
P062F	Engine Controls and Fuel - 1.5L (LYX) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P062F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P062F	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B
P062F	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P0630	Engine Controls and Fuel - 1.5L (LYX) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P0630	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P0630	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B
P0633	Immobilizer - DTC P0633
P0634	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0634
P0641	Engine Controls and Fuel - 1.5L (LYX) - DTC P0641, P0651, P0697, P06A3, or P06D2
P0641	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0641, P0651, P0697, or P06A3
P0641	Engine Controls and Fuel - 2.0L (LTG) - DTC P0641, P0651, P0697, P06A3, or P06D2
P0645	HVAC - Automatic - DTC P0645, P0646, or P0647
P0645	HVAC - Manual - DTC P0645, P0646, or P0647
P0646	HVAC - Automatic - DTC P0645, P0646, or P0647

DTC	Diagnostic Procedure
P0646	HVAC - Manual - DTC P0645, P0646, or P0647
P0647	HVAC - Automatic - DTC P0645, P0646, or P0647
P0647	HVAC - Manual - DTC P0645, P0646, or P0647
P064D	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B
P0650	Engine Controls and Fuel - 1.5L (LYX) - DTC P0650, P263A, or P263B
P0650	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0650, P263A, or P263B
P0650	Engine Controls and Fuel - 2.0L (LTG) - DTC P0650, P263A, or P263B
P0651	Engine Controls and Fuel - 1.5L (LYX) - DTC P0641, P0651, P0697, P06A3, or P06D2
P0651	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0641, P0651, P0697, or P06A3
P0651	Engine Controls and Fuel - 2.0L (LTG) - DTC P0641, P0651, P0697, P06A3, or P06D2
P0654	Displays and Gauges - DTC P0654 (with LTG or LYX), DTC P0654 (with LVL, LH7, or LWW)
P0658	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0658 or P0659
P0658	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0658 or P0659
P0658	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830
P0659	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0658 or P0659
P0659	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0658 or P0659
P0667	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0667, P0668, or P0669
P0668	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0667, P0668, or P0669
P0669	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0667, P0668, or P0669
P066A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P066B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P066C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P066D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P066E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P066F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P0671	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P0672	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P0673	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P0674	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P067A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B
P067B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P066A-P066F, P0671-P0674, P067A, or P067B

DTC	Diagnostic Procedure
P0685	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0685	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0685	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0686	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0686	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0686	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0687	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0687	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0687	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0689	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0689	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0689	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0690	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0690	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0690	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0685-P0687, P0689, P0690, or P1682</u>
P0691	Engine Heating and Cooling - <u>DTC P0480, P0691, or P0692</u>
P0692	Engine Heating and Cooling - <u>DTC P0480, P0691, or P0692</u>
P0697	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P0697	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0641, P0651, P0697, or P06A3</u>
P0697	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P069E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00FE, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9</u>
P06A3	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P06A3	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0641, P0651, P0697, or P06A3</u>
P06A3	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P06AC	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P06AC, P06AD, or P06AE</u>
P06AD	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P06AC, P06AD, or P06AE</u>
P06AE	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P06AC, P06AD, or P06AE</u>
P06B6	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P06B6	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0324, P0326, P0331, P06B6, or P06B7</u>

DTC	Diagnostic Procedure
P06B7	Engine Controls and Fuel - 1.5L (LYX) - DTC P0324-P0333, P06B6, or P06B7
P06B7	Engine Controls and Fuel - 2.0L (LTG) - DTC P0324, P0326, P0331, P06B6, or P06B7
P06D2	Engine Controls and Fuel - 1.5L (LYX) - DTC P0641, P0651, P0697, P06A3, or P06D2
P06D2	Engine Controls and Fuel - 2.0L (LTG) - DTC P0641, P0651, P0697, P06A3, or P06D2
P06DA	Engine Mechanical - 1.5L (LYX) - DTC P06DA-P06DE
P06DA	Engine Mechanical - 1.6L (LH7) Diesel - DTC P06DA-P06DE
P06DA	Engine Mechanical - 2.0L (LTG) - DTC P06DA-P06DC
P06DB	Engine Mechanical - 1.5L (LYX) - DTC P06DA-P06DE
P06DB	Engine Mechanical - 1.6L (LH7) Diesel - DTC P06DA-P06DE
P06DB	Engine Mechanical - 2.0L (LTG) - DTC P06DA-P06DC
P06DC	Engine Mechanical - 1.5L (LYX) - DTC P06DA-P06DE
P06DC	Engine Mechanical - 1.6L (LH7) Diesel - DTC P06DA-P06DE
P06DC	Engine Mechanical - 2.0L (LTG) - DTC P06DA-P06DC
P06DD	Engine Mechanical - 1.5L (LYX) - DTC P06DA-P06DE
P06DD	Engine Mechanical - 1.6L (LH7) Diesel - DTC P06DA-P06DE
P06DD	Engine Mechanical - 2.0L (LTG) - DTC P06DD or P06DE
P06DE	Engine Mechanical - 1.5L (LYX) - DTC P06DA-P06DE
P06DE	Engine Mechanical - 1.6L (LH7) Diesel - DTC P06DA-P06DE
P06DE	Engine Mechanical - 2.0L (LTG) - DTC P06DD or P06DE
P06EC	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P00FF, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9
P06ED	Displays and Gauges - DTC P06ED (with LTG or LYX) DTC P06ED (with LVL, LH7, or LWW)
P06EE	Displays and Gauges - DTC P06EE (with LTG or LYX) DTC P06EE (with LVL, LH7, or LWW)
P0700	Engine Controls and Fuel - 1.5L (LYX) - DTC P0700
P0700	Engine Controls and Fuel - 2.0L (LTG) - DTC P0700
P0700	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P00FF, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9
P0703	Cruise Control - DTC P0703
P0707	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0707, P0708, P2802, P2803, or P2805
P0708	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0707, P0708, P2802, P2803, or P2805
P0711	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0711-P0713
P0711	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0711-P0713
P0712	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0711-P0713
P0712	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0711-P0713
P0713	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0711-P0713
P0713	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0711-P0713
P0716	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0716, P0717, P07BF, or P07C0
P0716	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0716, P0717, P07BF, or P07C0
P0717	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0716, P0717, P07BF, or P07C0

DTC	Diagnostic Procedure
P0717	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0716, P0717, P07BF, or P07C0</u>
P0721	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0721-P0723, P077C, or P077D</u>
P0722	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0721-P0723, P077C, or P077D</u>
P0722	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0722, P0723, P077C, or P077D</u>
P0723	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0721-P0723, P077C, or P077D</u>
P0723	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0722, P0723, P077C, or P077D</u>
P073D	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P073D	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1772, P1773, P1778, P1787, P1789, P17F3, P187F, or P188A (with M3H)</u>
P073E	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P073E	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1772, P1773, P1778, P1787, P1789, P17F3, P187F, or P188A (with M3H)</u>
P0741	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0741 or P0742</u>
P0741	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0741, P2817, or P2818</u>
P0742	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0741 or P0742</u>
P0746	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0746 or P0747</u>
P0747	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0746 or P0747</u>
P0751	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0751 or P0752</u>
P0752	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0751 or P0752</u>
P0776	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0776 or P0777</u>
P0776	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0776 or P0777</u>
P0777	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0776 or P0777</u>
P0777	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0776 or P0777</u>
P077C	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0721-P0723, P077C, or P077D</u>
P077C	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0722, P0723, P077C, or P077D</u>
P077D	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0721-P0723, P077C, or P077D</u>
P077D	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0722, P0723, P077C, or P077D</u>
P0796	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0796 or P0797</u>

DTC	Diagnostic Procedure
P0796	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0796 or P0797</u>
P0797	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0796 or P0797</u>
P0797	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0796 or P0797</u>
P07B3	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P07B4	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P07B5	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P07B7	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P07B9	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P07BA	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P07BB	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P07BD	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>

DTC	Diagnostic Procedure
P07BE	Electronic Transmission Range Select - DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB
P07BF	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0716, P0717, P07BF, or P07C0
P07BF	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0716, P0717, P07BF, or P07C0
P07C0	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0716, P0717, P07BF, or P07C0
P07C0	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0716, P0717, P07BF, or P07C0
P07E4	Electronic Transmission Range Select - DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187E, or P188A (with MHG)
P07E4	Electronic Transmission Range Select - DTC P073D, P073E, P07E4, P07E5, P16F4, P1772, P1773, P1778, P1787, P1789, P17F3, P187F, or P188A (with M3H)
P07E5	Electronic Transmission Range Select - DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187E, or P188A (with MHG)
P07E5	Electronic Transmission Range Select - DTC P073D, P073E, P07E4, P07E5, P16F4, P1772, P1773, P1778, P1787, P1789, P17F3, P187F, or P188A (with M3H)
P0800	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P00FF, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9
P0815	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0815, P0816, or P0826
P0815	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0815, P0816, or P0826
P0816	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0815, P0816, or P0826
P0816	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0815, P0816, or P0826
P0826	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0815, P0816, or P0826
P0826	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0815, P0816, or P0826
P0850	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0850-P0852
P0851	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0850-P0852
P0851	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0851
P0852	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P0850-P0852
P0856	Antilock Brake System - DTC P0856
P08CA	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P08CA or P08CB
P08CB	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P08CA or P08CB
P0960	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E

DTC	Diagnostic Procedure
P0961	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0961-P0963</u>
P0962	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0961-P0963</u>
P0962	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P0963	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0961-P0963</u>
P0963	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P0964	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P0965	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0965-P0967</u>
P0966	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0965-P0967</u>
P0966	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P0967	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0965-P0967</u>
P0967	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P0968	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P0969	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0969-P0971</u>
P0970	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0969-P0971</u>
P0970	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P0971	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0969-P0971</u>
P0971	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P0973	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0973 or P0974</u>
P0974	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P0973 or P0974</u>
P0AC4	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00FF, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9</u>
P1000	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P1000	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1000	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1001	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1001	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1001	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1002	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DF, P1E19, or P1E1A</u>
P1003	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P1003	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1003	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1004	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE</u>
P1005	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1005</u>
P1007	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1007 or P129D</u>
P1008	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1008	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1008	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1009	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P1009	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1009	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P100A	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P100A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P100A	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P100C	12 V Starting and Charging - <u>DTC P100C or P100D</u>
P100D	12 V Starting and Charging - <u>DTC P100C or P100D</u>
P100E	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P100E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P100E	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1015	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1015-P1019 or P101A
P1016	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1015-P1019 or P101A
P1017	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1015-P1019 or P101A
P1018	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1015-P1019 or P101A
P1019	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1015-P1019 or P101A
P101A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1015-P1019 or P101A
P1029	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1029-P102B
P102A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1029-P102B
P102B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1029-P102B
P103B	Engine Controls and Fuel - 2.0L (LTG) - DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C
P103B	Engine Controls and Fuel - 1.5L (LYX) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P103C	Engine Controls and Fuel - 2.0L (LTG) - DTC P0030-P0032, P0036-P0038, P0054, P0135, P0141, P103B, or P103C
P103C	Engine Controls and Fuel - 1.5L (LYX) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P103D	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P103D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P103D	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P103E	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B

DTC	Diagnostic Procedure
P103E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P103E	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P103F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P103F or P1040
P1040	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P103F or P1040
P1048	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1048, P1049, or P2047-P2049
P1049	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1048, P1049, or P2047-P2049
P1050	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1050
P1051	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1051 or P1052
P1052	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1051 or P1052
P105A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P105A
P1089	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1089
P10B6	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P10B6	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P10B6	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B

DTC	Diagnostic Procedure
P10B7	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10B7	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10B7	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10B8	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10B8	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 ,

DTC	Diagnostic Procedure
P10B9	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10B9	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10BF	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10BF	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10BF	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 ,

DTC	Diagnostic Procedure
P10C6	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10C7	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10C7	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10C7	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P10C8	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 ,

DTC	Diagnostic Procedure
P10D7	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P10D6-P10D8</u>
P10D8	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P10D6-P10D8</u>
P10F5	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P10F5	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P10F5	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1100	Displays and Gauges - <u>DTC P1100</u>
P1100	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1100	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1100	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1101	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0068 or P1101</u>
P1101	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0068 or P1101</u>

DTC	Diagnostic Procedure
P1103	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P1103	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P1103	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P111E	Engine Controls and Fuel - 1.5L (LYX) - DTC P111E
P111E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P111E
P111E	Engine Controls and Fuel - 2.0L (LTG) - DTC P111E
P111F	Engine Controls and Fuel - 1.5L (LYX) - DTC P0182 , P0183 , P0187 , P0188 , P111E , P126E , or P126F
P113B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P113B-P113D
P113C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P113B-P113D
P113D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P113B-P113D
P115E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P115E , P115F , P1160 , P116A-P116F , P1192-P1194 , P119A-P119C , P11C5 , P11C6 , P11CC , P11D3 , P11DB , P2202 , P2203 , or P2205-P2211
P115F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P115E , P115F , P1160 , P116A-P116F , P1192-P1194 , P119A-P119C , P11C5 , P11C6 , P11CC , P11D3 , P11DB , P2202 , P2203 , or P2205-P2211
P1160	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P115E , P115F , P1160 , P116A-P116F , P1192-P1194 , P119A-P119C , P11C5 , P11C6 , P11CC , P11D3 , P11DB , P2202 , P2203 , or P2205-P2211
P116A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P115E , P115F , P1160 , P116A-P116F , P1192-P1194 , P119A-P119C , P11C5 , P11C6 , P11CC , P11D3 , P11DB , P2202 , P2203 , or P2205-P2211
P116B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P115E , P115F , P1160 , P116A-P116F , P1192-P1194 , P119A-P119C , P11C5 , P11C6 , P11CC , P11D3 , P11DB , P2202 , P2203 , or P2205-P2211
P116C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P115E , P115F , P1160 , P116A-P116F , P1192-P1194 , P119A-P119C , P11C5 , P11C6 , P11CC , P11D3 , P11DB , P2202 , P2203 , or P2205-P2211
P116D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P115E , P115F , P1160 , P116A-P116F , P1192-P1194 , P119A-P119C , P11C5 , P11C6 , P11CC , P11D3 , P11DB , P2202 , P2203 , or P2205-P2211
P116E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P115E , P115F , P1160 , P116A-P116F , P1192-P1194 , P119A-P119C , P11C5 , P11C6 , P11CC , P11D3 , P11DB , P2202 , P2203 , or P2205-P2211

DTC	Diagnostic Procedure
P116F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P1176	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1176 or P1177</u>
P1177	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1176 or P1177</u>
P1178	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1178 or P1179</u>
P1179	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1178 or P1179</u>
P117A	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P117A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P117A	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P118B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P118B</u>
P118E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P118E, P118F, or P1196</u>
P118F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P118E, P118F, or P1196</u>
P1192	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P1193	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P1194	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P1196	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P118E, P118F, or P1196</u>
P119A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P119B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P119C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P119D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE</u>

[illegible]

DTC	Diagnostic Procedure
P11DC	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FF, P22A0, P22A1, P22A3-P22A9, or P22FE</u>
P11FC	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FF, P22A0, P22A1, P22A3-P22A9, or P22FE</u>
P11FD	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FF, P22A0, P22A1, P22A3-P22A9, or P22FE</u>
P11FE	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FF, P22A0, P22A1, P22A3-P22A9, or P22FE</u>
P11FF	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FF, P22A0, P22A1, P22A3-P22A9, or P22FE</u>
P11FF	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P11FF	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P11FF	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1200	Displays and Gauges - <u>DTC P1200</u>
P1200	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1200	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P1200	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P122B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P122C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P122D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P122D
P1248	Engine Controls and Fuel - 1.5L (LYX) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P1248	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1248-P124B
P1248	Engine Controls and Fuel - 2.0L (LTG) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P1249	Engine Controls and Fuel - 1.5L (LYX) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P1249	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1248-P124B
P1249	Engine Controls and Fuel - 2.0L (LTG) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P124A	Engine Controls and Fuel - 1.5L (LYX) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P124A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1248-P124B
P124A	Engine Controls and Fuel - 2.0L (LTG) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P124B	Engine Controls and Fuel - 1.5L (LYX) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P124B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1248-P124B
P124B	Engine Controls and Fuel - 2.0L (LTG) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P1255	Engine Controls and Fuel - 1.5L (LYX) - DTC P1255
P1255	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1255
P1255	Engine Controls and Fuel - 2.0L (LTG) - DTC P1255
P126E	Engine Controls and Fuel - 1.5L (LYX) - DTC P0182, P0183, P0187, P0188, P111E, P126E, or P126F
P126F	Engine Controls and Fuel - 1.5L (LYX) - DTC P0182, P0183, P0187, P0188, P111E, P126E, or P126F
P127C	Engine Controls and Fuel - 1.5L (LYX) - DTC P127C, P128A-P128D, P128F, P16E4, or P16E5
P127C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P127C or P127D
P127C	Engine Controls and Fuel - 2.0L (LTG) - DTC P127C, P128A-P128D, P128F, P16E4, or P16E5
P127D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P127C or P127D
P128A	Engine Controls and Fuel - 1.5L (LYX) - DTC P127C, P128A-P128D, P128F, P16E4, or P16E5

DTC	Diagnostic Procedure
P128A	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>
P128B	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>
P128B	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>
P128C	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128C	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128C	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>
P128C	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>
P128D	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128D	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P128D	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>
P128D	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>
P128E	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128E	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128F	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128F	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P128F	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>
P128F	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>

DTC	Diagnostic Procedure
P129B	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
P129C	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
P129D	Engine Controls and Fuel - 1.5L (LYX) - DTC P129D
P129D	Engine Controls and Fuel - 2.0L (LTG) - DTC P129D
P129D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1007 or P129D
P129E	Engine Controls and Fuel - 1.5L (LYX) - DTC P129E or P12A8
P129E	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P129E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P129E	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P129F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P129F
P12A6	Engine Controls and Fuel - 1.5L (LYX) - DTC P12A6
P12A6	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P12A6
P12A6	Engine Controls and Fuel - 2.0L (LTG) - DTC P12A6
P12A8	Engine Controls and Fuel - 1.5L (LYX) - DTC P129E or P12A8
P12A8	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P12A8	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B

DTC	Diagnostic Procedure
P12A8	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1307	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1307-P130A</u>
P1308	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1307-P130A</u>
P1309	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1307-P130A</u>
P130A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1307-P130A</u>
P130F	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P130F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P130F	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P135A	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P135A</u>
P135A	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P135A</u>
P135C	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P135C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P135C	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P135D	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P135D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P135D	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P135E	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 ,

DTC	Diagnostic Procedure
P135F	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P135F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P135F	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1400	Engine Controls and Fuel - 1.5L (LYX) - DTC P1400
P1400	Engine Controls and Fuel - 2.0L (LTG) - DTC P1400
P1402	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0403, P0490, P1402, P1407, or P140F
P1407	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0403, P0490, P1402, P1407, or P140F
P140B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P140B or P140C
P140C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P140B or P140C
P140F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0403, P0490, P1402, P1407, or P140F
P1424	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1424
P1425	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P1428	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1428 or P142A
P142A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1428 or P142A
P142B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F or P1435
P142B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F, P1435, or P1436
P142C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F or P1435
P142C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F, P1435, or P1436
P142D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F or P1435
P142D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F, P1435, or P1436
P142E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F or P1435
P142E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F, P1435, or P1436
P142F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F or P1435
P142F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F, P1435, or P1436
P1434	Displays and Gauges - DTC P1434
P1435	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F or P1435

DTC	Diagnostic Procedure
P1435	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F, P1435, or P1436
P1436	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1436
P1436	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P142B-P142F, P1435, or P1436
P1436	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1436	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1436	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P143A	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P143A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P143A	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B

DTC	Diagnostic Procedure
P143B	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P143B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P143B	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P143E	Displays and Gauges - DTC P143E
P144E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P144E or P144F
P144F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P144E or P144F
P1472	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1472	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1472	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1474	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1474-P1479, P147B, or P1488
P1475	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1474-P1479, P147B, or P1488
P1476	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1474-P1479, P147B, or P1488

DTC	Diagnostic Procedure
P1477	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1474-P1479, P147B, or P1488
P1478	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1474-P1479, P147B, or P1488
P1479	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1474-P1479, P147B, or P1488
P147B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1474-P1479, P147B, or P1488
P1488	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1474-P1479, P147B, or P1488
P14A0	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P14A0	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P14A0	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P14B6	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P14B6	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P14B6	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B

DTC	Diagnostic Procedure
P14BD	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P14BD	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P14BD	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P14CD	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P14CD	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P

DTC	Diagnostic Procedure
P14CE	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P14CE	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P14D4	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P14D4	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P14D4	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 ,

DTC	Diagnostic Procedure
P14D5	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P14D6	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P14D6	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P14D6	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P150C	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P150C</u>
P150C	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P150C</u>
P150C	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P150C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P150C	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1513	Antilock Brake System - <u>DTC P1513</u>

DTC	Diagnostic Procedure
P1516	Engine Controls and Fuel - 1.5L (LYX) - DTC P1516, P2101, P2119, or P2176
P1516	Engine Controls and Fuel - 2.0L (LTG) - DTC P1516, P2101, P2119, or P2176
P151A	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P151A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P151A	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P151D	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P151D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P151D	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P151E	Bumpers and Fascias - DTC P059F or P151E
P153C	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B

DTC	Diagnostic Procedure
P153C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P153C	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P153D	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P153D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P153D	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P155A	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P155B	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P155C	Cruise Control - <u>Cruise Control Malfunction - DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>
P155D	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P155D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P155D	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P155E	12 V Starting and Charging - DTC P155E, P155F, or P156E
P155F	12 V Starting and Charging - DTC P155E, P155F, or P156E
P156A	HVAC - Automatic - DTC P156A-P156C
P156B	HVAC - Automatic - DTC P156A-P156C
P156C	HVAC - Automatic - DTC P156A-P156C
P156D	12 V Starting and Charging - DTC P156D
P156D	Wiring Systems and Power Management - DTC P156D
P156E	12 V Starting and Charging - DTC P155E, P155F, or P156E
P157A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P157A
P158A	Cruise Control - DTC P158A
P1591	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1591	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1591	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P159F	Secondary and Configurable Customer Controls - DTC P159F, P15A0, or P15A1
P15A0	Secondary and Configurable Customer Controls - DTC P159F, P15A0, or P15A1
P15A1	Secondary and Configurable Customer Controls - DTC P159F, P15A0, or P15A1
P15A3	12 V Starting and Charging - DTC P15A3

DTC	Diagnostic Procedure
P15AE	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
P15AF	12 V Starting and Charging - DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A
P15E2	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P15E2	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P15E2	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P15F2	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P15F2	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P15F2	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P15F6	Driver Assistance Systems - DTC P15F6
P15F7	Driver Assistance Systems - DTC P15F7
P15F8	Antilock Brake System - DTC P15F8

DTC	Diagnostic Procedure
P15F9	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P15F9	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P15F9	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P15FA	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P15FA	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 ,

DTC	Diagnostic Procedure
P15FB	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P15FB	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P15FD	Antilock Brake System - DTC P15FD
P15FF	12 V Starting and Charging - DTC P15FF
P161E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P161E
P162B	Immobilizer - DTC P162B
P162C	Cruise Control - Cruise Control Malfunction - DTC B3794 , P0564 , P0565 , P0567 , P0568 , P056C , P0580 , P0581 , P155A-P155C , or P162C
P1631	Immobilizer - DTC P1631
P163A	Engine Controls and Fuel - 1.5L (LYX) - DTC P163A
P163A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P163A
P163A	Engine Controls and Fuel - 2.0L (LTG) - DTC P163A
P163B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P163B
P1649	Immobilizer - DTC P1649
P165C	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P165C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P165C	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P166F	12 V Starting and Charging - DTC P166F

DTC	Diagnostic Procedure
P167F	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P167F	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P167F	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P1682	Engine Controls and Fuel - 1.5L (LYX) - DTC P0685-P0687, P0689, P0690, or P1682
P1682	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0685-P0687, P0689, P0690, or P1682
P1682	Engine Controls and Fuel - 2.0L (LTG) - DTC P0685-P0687, P0689, P0690, or P1682
P16A0	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E8, P02E9, or P16A0-P16A2
P16A0	Engine Controls and Fuel - 1.5L (LYX) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P16A0	Engine Controls and Fuel - 2.0L (LTG) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P16A1	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E8, P02E9, or P16A0-P16A2
P16A1	Engine Controls and Fuel - 1.5L (LYX) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P16A1	Engine Controls and Fuel - 2.0L (LTG) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P16A2	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P02E8, P02E9, or P16A0-P16A2
P16A2	Engine Controls and Fuel - 1.5L (LYX) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P16A2	Engine Controls and Fuel - 2.0L (LTG) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P16A7	Engine Controls and Fuel - 1.5L (LYX) - DTC P16A7, P16AF, or P16B3
P16A7	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P16A7, P16AF, or P16B3
P16A7	Engine Controls and Fuel - 2.0L (LTG) - DTC P16A7, P16AF, or P16B3
P16AF	Engine Controls and Fuel - 1.5L (LYX) - DTC P16A7, P16AF, or P16B3
P16AF	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P16A7, P16AF, or P16B3
P16AF	Engine Controls and Fuel - 2.0L (LTG) - DTC P16A7, P16AF, or P16B3
P16B3	Engine Controls and Fuel - 1.5L (LYX) - DTC P16A7, P16AF, or P16B3
P16B3	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P16A7, P16AF, or P16B3
P16B3	Engine Controls and Fuel - 2.0L (LTG) - DTC P16A7, P16AF, or P16B3

DTC	Diagnostic Procedure
P16D4	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16D5	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16D6	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16D7	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P16D7-P16D9
P16D8	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P16D7-P16D9
P16D9	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P16D7-P16D9
P16DC	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16DD	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16DE	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16DF	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16E1	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16E2	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16E3	12 V Starting and Charging - DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3
P16E4	Engine Controls and Fuel - 1.5L (LYX) - DTC P127C, P128A-P128D, P128F, P16E4, or P16E5
P16E4	Engine Controls and Fuel - 2.0L (LTG) - DTC P127C, P128A-P128D, P128F, P16E4, or P16E5
P16E5	Engine Controls and Fuel - 1.5L (LYX) - DTC P127C, P128A-P128D, P128F, P16E4, or P16E5
P16E5	Engine Controls and Fuel - 2.0L (LTG) - DTC P127C, P128A-P128D, P128F, P16E4, or P16E5
P16E8	Wiring Systems and Power Management - DTC P16E8
P16E8	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P16E8	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P16E8	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B

DTC	Diagnostic Procedure
P16E9	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P16E9-P16F3 , P262B , or P30D6-P30DD
P16F0	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P16E9-P16F3 , P262B , or P30D6-P30DD
P16F3	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0601-P0604 , P0606 , P062F , P16F3 , or P16FB
P16F3	Engine Controls and Fuel - 1.5L (LYX) - DTC P0601-P0604 , P0606 , P062B , P062F , P0630 , P16F3 , or P262B
P16F3	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0601-P0604 , P0606 , P062B , P062F , P0630 , P16F3 , or P262B
P16F3	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604 , P0606 , P062B , P062F , P0630 , P064D , P16F3 , or P262B
P16F4	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187E , or P188A (with MHG)
P16F4	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1772 , P1773 , P1778 , P1787 , P1789 , P17F3 , P187E , or P188A (with M3H)
P16FB	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0601-P0604 , P0606 , P062F , P16F3 , or P16FB
P16FF	Engine Controls and Fuel - 1.5L (LYX) - DTC P16FF
P16FF	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P16FF	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P16FF	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P171A	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P171A-P171C
P171A	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P171A-P171C
P171B	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P171A-P171C
P171B	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P171A-P171C
P171C	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P171A-P171C
P171C	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P171A-P171C

DTC	Diagnostic Procedure
P171D	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P171D</u>
P171D	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P171D</u>
P173A	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P173B	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P173C	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P173D	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P173E	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P173F	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P174B	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P174C	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P174D	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P175E	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P175E</u>
P175F	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P175F</u>
P175F	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P175F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P175F	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1761	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P1761</u>
P1761	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P1761</u>
P1761	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P1761	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1761	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1762	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1762	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1762	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P1769	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P176B	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P176B-P176D, P178F, P17C4, or P17D3</u>
P176C	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P176B-P176D, P178F, P17C4, or P17D3</u>
P176D	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P176B-P176D, P178F, P17C4, or P17D3</u>
P1771	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P1772	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P1772	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1772, P1773, P1778, P1787, P1789, P17F3, P187F, or P188A (with M3H)</u>

DTC	Diagnostic Procedure
P1773	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P1773	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1772 , P1773 , P1778 , P1787 , P1789 , P17F3 , P187F , or P188A (with M3H) .
P1774	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P1775	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P1775
P1775	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P1775	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P1775	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P1778	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P1778	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1772 , P1773 , P1778 , P1787 , P1789 , P17F3 , P187F , or P188A (with M3H) .
P177A	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P1787	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P1789	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P1789	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1772 , P1773 , P1778 , P1787 , P1789 , P17F3 , P187F , or P188A (with M3H) .
P178A	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P178B	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .

DTC	Diagnostic Procedure
P178C	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P178D	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P178E	Electronic Transmission Range Select - DTC P073D , P073E , P07E4 , P07E5 , P16F4 , P1769 , P1772-P1774 , P1778 , P177A , P1787 , P1789 , P178A-P178E , P17CF , P17D5 , P17F3 , P187F , or P188A (with MHG) .
P178F	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P176B-P176D , P178E , P17C4 , or P17D3
P179B	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P179B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P179B	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P17AA	Electronic Transmission Range Select - DTC P173A-P173F , P174B-P174D , P1771 , P17AA-P17AE , P17B6-P17B9 , P17BA-P17BD , P17BF , or P17C8
P17AB	Electronic Transmission Range Select - DTC P173A-P173F , P174B-P174D , P1771 , P17AA-P17AE , P17B6-P17B9 , P17BA-P17BD , P17BF , or P17C8
P17AC	Electronic Transmission Range Select - DTC P173A-P173F , P174B-P174D , P1771 , P17AA-P17AE , P17B6-P17B9 , P17BA-P17BD , P17BF , or P17C8
P17AD	Electronic Transmission Range Select - DTC P173A-P173F , P174B-P174D , P1771 , P17AA-P17AE , P17B6-P17B9 , P17BA-P17BD , P17BF , or P17C8
P17AE	Electronic Transmission Range Select - DTC P173A-P173F , P174B-P174D , P1771 , P17AA-P17AE , P17B6-P17B9 , P17BA-P17BD , P17BF , or P17C8
P17B0	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
P17B1	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
P17B2	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
P17B3	Wiring Systems and Power Management - DTC P17B3 or P17B4

DTC	Diagnostic Procedure
P17B4	Wiring Systems and Power Management - <u>DTC P17B3 or P17B4</u>
P17B5	Wiring Systems and Power Management - <u>DTC P17B5</u>
P17B6	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17B7	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17B8	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17B9	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17BA	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17BB	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17BC	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17BD	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17BF	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17C4	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P176B-P176D, P178E, P17C4, or P17D3</u>
P17C8	Electronic Transmission Range Select - <u>DTC P173A-P173F, P174B-P174D, P1771, P17AA-P17AE, P17B6-P17B9, P17BA-P17BD, P17BF, or P17C8</u>
P17CF	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P17D3	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P176B-P176D, P178E, P17C4, or P17D3</u>
P17D5	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P17D7	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P17D8	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P17D9	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P17DA	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>

DTC	Diagnostic Procedure
P17DB	Electronic Transmission Range Select - DTC P07B3-P07B5 , P07B7 , P07B9 , P07BA , P07BB , P07BD , P07BE , P17D7-P17D9 , P17DA-P17DC , P17E3-P17E9 , P17EA-P17EF , P17F0 , P17F3 , P17F8 , P17F9 , P17FD , P17FE , P1803 , P1805-P1807 , P180C-P180F , P1812 , P1861 , P1869 , P186A-P186D , P189D , P18CC-P18CF , P18D0-P18D9 , P18DA-P18DD , P18E0 , P18E1 , P18E6 , P18E9 , P18EA , or P18EB
P17DC	Electronic Transmission Range Select - DTC P07B3-P07B5 , P07B7 , P07B9 , P07BA , P07BB , P07BD , P07BE , P17D7-P17D9 , P17DA-P17DC , P17E3-P17E9 , P17EA-P17EF , P17F0 , P17F3 , P17F8 , P17F9 , P17FD , P17FE , P1803 , P1805-P1807 , P180C-P180F , P1812 , P1861 , P1869 , P186A-P186D , P189D , P18CC-P18CF , P18D0-P18D9 , P18DA-P18DD , P18E0 , P18E1 , P18E6 , P18E9 , P18EA , or P18EB
P17DD	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
P17DE	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
P17DF	12 V Starting and Charging - DTC B1325 , B1327 , B1328 , B1330 , B1390 , B1395 , B1400 , B1410 , B1415 , B1424 , B1425 , B1439 , B1517 , C0800 , C0805 , C0870 , C0880 , C0895 , C0899 , C0900 , P0560-P0563 , P0611 , P1002 , P129B , P129C , P15AE , P15AF , P17B0-P17B2 , P17DD-P17DE , P1E19 , or P1E1A
P17E0	Electronic Transmission Range Select - DTC P17E0-P17E2
P17E1	Electronic Transmission Range Select - DTC P17E0-P17E2
P17E2	Electronic Transmission Range Select - DTC P17E0-P17E2
P17E3	Electronic Transmission Range Select - DTC P07B3-P07B5 , P07B7 , P07B9 , P07BA , P07BB , P07BD , P07BE , P17D7-P17D9 , P17DA-P17DC , P17E3-P17E9 , P17EA-P17EF , P17F0 , P17F3 , P17F8 , P17F9 , P17FD , P17FE , P1803 , P1805-P1807 , P180C-P180F , P1812 , P1861 , P1869 , P186A-P186D , P189D , P18CC-P18CF , P18D0-P18D9 , P18DA-P18DD , P18E0 , P18E1 , P18E6 , P18E9 , P18EA , or P18EB
P17E4	Electronic Transmission Range Select - DTC P07B3-P07B5 , P07B7 , P07B9 , P07BA , P07BB , P07BD , P07BE , P17D7-P17D9 , P17DA-P17DC , P17E3-P17E9 , P17EA-P17EF , P17F0 , P17F3 , P17F8 , P17F9 , P17FD , P17FE , P1803 , P1805-P1807 , P180C-P180F , P1812 , P1861 , P1869 , P186A-P186D , P189D , P18CC-P18CF , P18D0-P18D9 , P18DA-P18DD , P18E0 , P18E1 , P18E6 , P18E9 , P18EA , or P18EB
P17E5	Electronic Transmission Range Select - DTC P07B3-P07B5 , P07B7 , P07B9 , P07BA , P07BB , P07BD , P07BE , P17D7-P17D9 , P17DA-P17DC , P17E3-P17E9 , P17EA-P17EF , P17F0 , P17F3 , P17F8 , P17F9 , P17FD , P17FE , P1803 , P1805-P1807 , P180C-P180F , P1812 , P1861 , P1869 , P186A-P186D , P189D , P18CC-P18CF , P18D0-P18D9 , P18DA-P18DD , P18E0 , P18E1 , P18E6 , P18E9 , P18EA , or P18EB
P17E6	Electronic Transmission Range Select - DTC P07B3-P07B5 , P07B7 , P07B9 , P07BA , P07BB , P07BD , P07BE , P17D7-P17D9 , P17DA-P17DC , P17E3-P17E9 , P17EA-P17EF , P17F0 , P17F3 , P17F8 , P17F9 , P17FD , P17FE , P1803 , P1805-P1807 , P180C-P180F , P1812 , P1861 , P1869 , P186A-P186D , P189D , P18CC-P18CF , P18D0-P18D9 , P18DA-P18DD , P18E0 , P18E1 , P18E6 , P18E9 , P18EA , or P18EB
P17E7	Electronic Transmission Range Select - DTC P07B3-P07B5 , P07B7 , P07B9 , P07BA , P07BB , P07BD , P07BE , P17D7-P17D9 , P17DA-P17DC , P17E3-P17E9 , P17EA-P17EF , P17F0 , P17F3 , P17F8 , P17F9 , P17FD , P17FE , P1803 , P1805-P1807 , P180C-P180F , P1812 , P1861 , P1869 , P186A-P186D , P189D , P18CC-P18CF , P18D0-P18D9 , P18DA-P18DD , P18E0 , P18E1 , P18E6 , P18E9 , P18EA , or P18EB

[illegible]

DTC	Diagnostic Procedure
P17F3	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P17F3	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P17F5	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P17F5-P17F7, P17FA-P17FC, or P17FF</u>
P17F6	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P17F5-P17F7, P17FA-P17FC, or P17FF</u>
P17F7	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P17F5-P17F7, P17FA-P17FC, or P17FF</u>
P17F8	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P17F9	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P17FA	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P17F5-P17F7, P17FA-P17FC, or P17FF</u>
P17FB	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P17F5-P17F7, P17FA-P17FC, or P17FF</u>
P17FC	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P17F5-P17F7, P17FA-P17FC, or P17FF</u>
P17FD	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P17FE	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P17FF	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P17F5-P17F7, P17FA-P17FC, or P17FF</u>
P1803	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>

DTC	Diagnostic Procedure
P1805	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P1806	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P1807	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P180C	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P180D	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P180E	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P180F	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P1812	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P182E	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P182E or P1915</u>
P1861	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>

DTC	Diagnostic Procedure
P1869	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P186A	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P186B	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P186C	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P186D	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P187D	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P187D, P18E7, or P18E8</u>
P187E	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P187E, P18AA-P18AE, P27EC, or P27F0</u>
P187F	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P187F	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1772, P1773, P1778, P1787, P1789, P17F3, P187F, or P188A (with M3H)</u>
P188A	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1769, P1772-P1774, P1778, P177A, P1787, P1789, P178A-P178E, P17CF, P17D5, P17F3, P187F, or P188A (with MHG)</u>
P188A	Electronic Transmission Range Select - <u>DTC P073D, P073E, P07E4, P07E5, P16F4, P1772, P1773, P1778, P1787, P1789, P17F3, P187F, or P188A (with M3H)</u>
P188B	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P188B</u>
P189C	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P189C</u>
P189C	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P189C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P189C	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P189D	Electronic Transmission Range Select - DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB
P18A2	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P18A2 or P18A4
P18A4	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P18A2 or P18A4
P18A8	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P18A8
P18AA	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P187E, P18AA-P18AE, P27EC, or P27F0
P18AB	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P187E, P18AA-P18AE, P27EC, or P27F0
P18AC	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P187E, P18AA-P18AE, P27EC, or P27F0
P18AD	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P187E, P18AA-P18AE, P27EC, or P27F0
P18AE	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P187E, P18AA-P18AE, P27EC, or P27F0
P18CB	Parking Assistance Systems - DTC P18CB
P18CC	Electronic Transmission Range Select - DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB
P18CD	Electronic Transmission Range Select - DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB
P18CE	Electronic Transmission Range Select - DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB

[illegible]

[illegible]

DTC	Diagnostic Procedure
P18E9	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P18EA	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P18EB	Electronic Transmission Range Select - <u>DTC P07B3-P07B5, P07B7, P07B9, P07BA, P07BB, P07BD, P07BE, P17D7-P17D9, P17DA-P17DC, P17E3-P17E9, P17EA-P17EF, P17F0, P17F3, P17F8, P17F9, P17FD, P17FE, P1803, P1805-P1807, P180C-P180F, P1812, P1861, P1869, P186A-P186D, P189D, P18CC-P18CF, P18D0-P18D9, P18DA-P18DD, P18E0, P18E1, P18E6, P18E9, P18EA, or P18EB</u>
P1915	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P182E or P1915</u>
P1B12	Antilock Brake System - <u>DTC P1B12</u>
P1E00	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00FE, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9</u>
P1E19	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A</u>
P1E1A	12 V Starting and Charging - <u>DTC B1325, B1327, B1328, B1330, B1390, B1395, B1400, B1410, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560-P0563, P0611, P1002, P129B, P129C, P15AE, P15AF, P17B0-P17B2, P17DD-P17DE, P1E19, or P1E1A</u>
P2002	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2002</u>
P2006	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2006 or P200A</u>
P2008	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2008-P2010</u>
P2009	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2008-P2010</u>
P200A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2006 or P200A</u>
P200C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P200C</u>
P2010	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2008-P2010</u>
P2015	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2015-P2017</u>
P2016	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2015-P2017</u>
P2017	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2015-P2017</u>
P2032	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0545, P0546, P2032, P2033, P242C, or P242D</u>
P2033	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0545, P0546, P2032, P2033, P242C, or P242D</u>
P203C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P203C or P203D</u>
P203D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P203C or P203D</u>
P2047	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1048, P1049, or P2047-P2049</u>
P2048	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1048, P1049, or P2047-P2049</u>
P2049	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1048, P1049, or P2047-P2049</u>
P204B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P204B</u>
P204C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P204C or P204D</u>

DTC	Diagnostic Procedure
P204D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P204C or P204D</u>
P205B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P205B-P205D</u>
P205C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P205B-P205D</u>
P205D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P205B-P205D</u>
P205E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P205E</u>
P2066	Displays and Gauges - <u>DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Diesel Engine) DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Gasoline engine)</u>
P2067	Displays and Gauges - <u>DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Diesel Engine) DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Gasoline engine)</u>
P2068	Displays and Gauges - <u>DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Diesel Engine) DTC P0461-P0464, P2066, P2067, or P2068 (AWD with Gasoline engine)</u>
P206B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P206B-P206D</u>
P206C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P206B-P206D</u>
P206D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P206B-P206D</u>
P2081	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2081, P2085, P242E, P2472, or P2484</u>
P2085	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2081, P2085, P242E, P2472, or P2484</u>
P2088	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0010-P0014 or P2088-P2091</u>
P2088	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0010, P0013, or P2088-P2091</u>
P2089	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0010-P0014 or P2088-P2091</u>
P2089	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0010, P0013, or P2088-P2091</u>
P208A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P208A, P208C, or P208D</u>
P208C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P208A, P208C, or P208D</u>
P208D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P208A, P208C, or P208D</u>
P2090	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0010-P0014 or P2088-P2091</u>
P2090	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0010, P0013, or P2088-P2091</u>
P2091	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0010-P0014 or P2088-P2091</u>
P2091	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0010, P0013, or P2088-P2091</u>
P2096	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P2096 or P2097</u>
P2096	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P2096 or P2097</u>
P2097	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P2096 or P2097</u>
P2097	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P2096 or P2097</u>
P20B9	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>
P20BA	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>
P20BB	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>
P20BC	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>
P20BD	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>
P20BE	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>
P20BF	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>
P20C0	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>
P20C1	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P20B9-P20BF or P20C0-P20C5</u>

DTC	Diagnostic Procedure
P20C2	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20B9-P20BF or P20C0-P20C5
P20C3	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20B9-P20BF or P20C0-P20C5
P20C4	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20B9-P20BF or P20C0-P20C5
P20C5	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20B9-P20BF or P20C0-P20C5
P20E8	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20E8 or P20E9
P20E9	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20E8 or P20E9
P20EE	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20EE, P249D, or P249E
P20F8	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20F8
P2101	Engine Controls and Fuel - 1.5L (LYX) - DTC P1516, P2101, P2119, or P2176
P2101	Engine Controls and Fuel - 2.0L (LTG) - DTC P1516, P2101, P2119, or P2176
P2119	Engine Controls and Fuel - 1.5L (LYX) - DTC P1516, P2101, P2119, or P2176
P2119	Engine Controls and Fuel - 2.0L (LTG) - DTC P1516, P2101, P2119, or P2176
P2122	Engine Controls and Fuel - 1.5L (LYX) - DTC P2122, P2123, P2127, P2128, or P2138
P2122	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2122	Engine Controls and Fuel - 2.0L (LTG) - DTC P2122, P2123, P2127, P2128, or P2138
P2123	Engine Controls and Fuel - 1.5L (LYX) - DTC P2122, P2123, P2127, P2128, or P2138
P2123	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2123	Engine Controls and Fuel - 2.0L (LTG) - DTC P2122, P2123, P2127, P2128, or P2138
P2127	Engine Controls and Fuel - 1.5L (LYX) - DTC P2122, P2123, P2127, P2128, or P2138
P2127	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2127	Engine Controls and Fuel - 2.0L (LTG) - DTC P2122, P2123, P2127, P2128, or P2138
P2128	Engine Controls and Fuel - 1.5L (LYX) - DTC P2122, P2123, P2127, P2128, or P2138
P2128	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2128	Engine Controls and Fuel - 2.0L (LTG) - DTC P2122, P2123, P2127, P2128, or P2138
P2135	Engine Controls and Fuel - 1.5L (LYX) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P2135	Engine Controls and Fuel - 2.0L (LTG) - DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135
P2138	Engine Controls and Fuel - 1.5L (LYX) - DTC P2122, P2123, P2127, P2128, or P2138
P2138	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2138	Engine Controls and Fuel - 2.0L (LTG) - DTC P2122, P2123, P2127, P2128, or P2138
P2147	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2147, P2148, P2150, or P2151
P2147	Engine Controls and Fuel - 1.5L (LYX) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157

[illegible]

DTC	Diagnostic Procedure
P219A	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P219A</u>
P219A	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P219A</u>
P21CB	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P21CB</u>
P2202	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P2203	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P2205	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P2206	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P2207	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P2208	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P2209	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P220A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P220A or P220B</u>
P220B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P220A or P220B</u>
P2210	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P2211	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, or P2205-P2211</u>
P2227	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P2227-P2230</u>
P2227	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2227-P2230</u>
P2227	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P2227-P2230</u>
P2228	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P2227-P2230</u>
P2228	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2227-P2230</u>
P2228	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P2227-P2230</u>
P2229	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P2227-P2230</u>
P2229	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2227-P2230</u>
P2229	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P2227-P2230</u>
P2230	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P2227-P2230</u>
P2230	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2227-P2230</u>
P2230	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P2227-P2230</u>
P223C	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0131, P0132, P015A, P015B, P223C, or P223E</u>
P223E	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0131, P0132, P015A, P015B, P223C, or P223E</u>
P2261	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P2261</u>
P2261	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P2261</u>
P2263	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0234, P0299, or P2263</u>
P2264	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2264</u>
P2270	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0137, P0138, P013A, P013B, P013E, P013F, P2270, or P2271</u>

DTC	Diagnostic Procedure
P2270	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P2271	Engine Controls and Fuel - 2.0L (LTG) - DTC P0137, P0138, P013A, P013B, P013E, P013F, P2270, or P2271
P2271	Engine Controls and Fuel - 1.5L (LYX) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271
P227B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P227B
P227C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P227C-P227E
P227D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P227C-P227E
P227E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P227C-P227E
P228A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P228A or P228B
P228B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P228A or P228B
P228C	Engine Controls and Fuel - 1.5L (LYX) - DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20
P228C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0087, P0089, P228C, P228D, or P2293
P228C	Engine Controls and Fuel - 2.0L (LTG) - DTC P0089, P00C6, P228C, or P228D
P228D	Engine Controls and Fuel - 1.5L (LYX) - DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20
P228D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0087, P0089, P228C, P228D, or P2293
P228D	Engine Controls and Fuel - 2.0L (LTG) - DTC P0089, P00C6, P228C, or P228D
P2293	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0087, P0089, P228C, P228D, or P2293
P2294	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2294-P2296
P2295	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2294-P2296
P2296	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2294-P2296
P2297	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2297 or P2A00
P22A0	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A1	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A3	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A4	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A5	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A6	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A7	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A8	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A9	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE

DTC	Diagnostic Procedure
P22FE	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE</u>
P2300	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2300	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2301	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2301	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2303	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2303	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2304	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2304	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2306	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2306	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2307	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2307	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2309	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2309	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2310	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P2310	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P242C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0545, P0546, P2032, P2033, P242C, or P242D</u>
P242D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0545, P0546, P2032, P2033, P242C, or P242D</u>
P242E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2081, P2085, P242E, P2472, or P2484</u>
P244A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P244A</u>
P244C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P244C</u>
P2452	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2452 or P2454-P2456</u>
P2453	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2453</u>
P2454	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2452 or P2454-P2456</u>
P2455	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2452 or P2454-P2456</u>
P2456	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2452 or P2454-P2456</u>
P2457	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2457</u>
P2459	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2459</u>
P245A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P245A-P245D</u>
P245B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P245A-P245D</u>
P245C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P245A-P245D</u>
P245D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P245A-P245D</u>
P2463	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2463</u>

DTC	Diagnostic Procedure
P2472	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2081, P2085, P242E, P2472, or P2484
P2484	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2081, P2085, P242E, P2472, or P2484
P248A	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P248A-P248D
P248B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P248A-P248D
P248C	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P248A-P248D
P248D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P248A-P248D
P249D	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20EE, P249D, or P249E
P249E	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P20EE, P249D, or P249E
P24A5	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24A5
P24B0	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24B1	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24B2	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24B3	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24B4	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24B5	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24B6	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24C7	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24D0	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P24D1	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P24B0-P24B6, P24C7, P24D0, or P24D1
P250A	Displays and Gauges - DTC P250A (with LTG) DTC P250A (with LH7)
P2534	Wiring Systems and Power Management - DTC P2534 or P2535
P2535	Wiring Systems and Power Management - DTC P2534 or P2535
P2537	Wiring Systems and Power Management - DTC P2537
P2544	Engine Controls and Fuel - 1.5L (LYX) - DTC P2544
P2544	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2544
P2544	Engine Controls and Fuel - 2.0L (LTG) - DTC P2544
P2544	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P2544	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167F, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B

DTC	Diagnostic Procedure
P2544	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B
P2561	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P00FF, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9
P2564	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2564 or P2565
P2565	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2564 or P2565
P257D	Bolted Exterior Body Panels and Closures - DTC P257D-P257F
P257E	Bolted Exterior Body Panels and Closures - DTC P257D-P257F
P257F	Bolted Exterior Body Panels and Closures - DTC P257D-P257F
P2598	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0046, P2598, or P2599
P2599	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0046, P2598, or P2599
P25A2	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P00FF, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9
P25A9	Engine Mechanical - 1.6L (LH7) Diesel - DTC P25A9, P25AA, or P25AB
P25AA	Engine Mechanical - 1.6L (LH7) Diesel - DTC P25A9, P25AA, or P25AB
P25AB	Engine Mechanical - 1.6L (LH7) Diesel - DTC P25A9, P25AA, or P25AB
P25AC	Engine Mechanical - 1.6L (LH7) Diesel - DTC P25AC or P25AD
P25AD	Engine Mechanical - 1.6L (LH7) Diesel - DTC P25AC or P25AD
P25AF	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P00FF, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9
P25BD	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P25BD
P25C9	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P00FF, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9
P25CA	Engine Controls and Fuel - 1.5L (LYX) - DTC P25CA-P25CC
P25CB	Engine Controls and Fuel - 1.5L (LYX) - DTC P25CA-P25CC
P25CC	Engine Controls and Fuel - 1.5L (LYX) - DTC P25CA-P25CC
P2600	Engine Heating and Cooling - DTC P2600-P2603
P2601	Engine Heating and Cooling - DTC P2600-P2603
P2602	Engine Heating and Cooling - DTC P2600-P2603
P2603	Engine Heating and Cooling - DTC P2600-P2603
P2618	Engine Controls and Fuel - 1.5L (LYX) - DTC P2618
P2618	Engine Controls and Fuel - 2.0L (LTG) - DTC P2618 or P2619
P2619	Engine Controls and Fuel - 2.0L (LTG) - DTC P2618 or P2619
P2627	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2627 or P2628
P2628	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2627 or P2628
P262B	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F3, P262B, or P30D6-P30DD
P262B	Engine Controls and Fuel - 1.5L (LYX) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P262B	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B
P262B	Engine Controls and Fuel - 2.0L (LTG) - DTC P0601-P0604, P0606, P062B, P062F, P0630, P064D, P16F3, or P262B
P2635	Engine Controls and Fuel - 1.5L (LYX) - DTC P2635
P2635	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC P2635

DTC	Diagnostic Procedure
P2635	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P2635</u>
P263A	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0650, P263A, or P263B</u>
P263A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0650, P263A, or P263B</u>
P263A	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0650, P263A, or P263B</u>
P263B	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0650, P263A, or P263B</u>
P263B	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P0650, P263A, or P263B</u>
P263B	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P0650, P263A, or P263B</u>
P2670	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2670 or P2671</u>
P2670	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P2671	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2670 or P2671</u>
P2671	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P2687	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2687-P2689</u>
P2688	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2687-P2689</u>
P2689	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2687-P2689</u>
P268A	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P268A</u>
P268C	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P268C-P268F</u>
P268D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P268C-P268F</u>
P268E	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P268C-P268F</u>
P268F	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P268C-P268F</u>
P26C8	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P26C8</u>
P26C8	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC P26C8</u>
P26C8	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00FE, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9</u>
P26C9	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P00FE, P069E, P06EC, P0700, P0800, P0AC4, P1700, P1E00, P2561, P25A2, P25AF, P25C9, P26C8, or P26C9</u>
P26E4	12 V Starting and Charging - <u>DTC P26E4-P26E6</u>
P26E5	12 V Starting and Charging - <u>DTC P26E4-P26E6</u>
P26E6	12 V Starting and Charging - <u>DTC P26E4-P26E6</u>
P2714	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P2714 or P2715</u>
P2714	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P2714 or P2715</u>
P2715	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P2714 or P2715</u>
P2715	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P2714 or P2715</u>
P2718	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P2719	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P2719-P2721</u>
P2720	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P2719-P2721</u>
P2720	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P2721	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - <u>DTC P2719-P2721</u>

DTC	Diagnostic Procedure
P2721	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E
P2723	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P2723 or P2724
P2723	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P2723 or P2724
P2724	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P2723 or P2724
P2724	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P2723 or P2724
P2727	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830
P2728	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P2728-P2730
P2729	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P2728-P2730
P2729	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830
P2730	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P2728-P2730
P2730	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830
P2731	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P2731-P2733
P2732	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P2731-P2733
P2733	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P2731-P2733
P2736	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830
P2738	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830
P2739	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830
P2762	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P2762, P2763, or P2764
P2763	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P2762, P2763, or P2764
P2764	Automatic Transmission - 6T40 (MNH MNK) or 6T45 (MHG) - DTC P2762, P2763, or P2764
P27A7	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27A7-P27AE
P27A8	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27A7-P27AE
P27A9	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27A7-P27AE
P27AA	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27A7-P27AE
P27AB	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27A7-P27AE
P27AC	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27A7-P27AE
P27AD	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27A7-P27AE
P27AE	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27A7-P27AE
P27EB	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - DTC P27EB, P27ED, or P27EE

DTC	Diagnostic Procedure
P27EC	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P187E, P18AA-P18AE, P27EC, or P27F0</u>
P27ED	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P27EB, P27ED, or P27EE</u>
P27EE	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P27EB, P27ED, or P27EE</u>
P27EF	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P27EF, P27F1, or P27F2</u>
P27F0	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P187E, P18AA-P18AE, P27EC, or P27F0</u>
P27F1	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P27EF, P27F1, or P27F2</u>
P27F2	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P27EF, P27F1, or P27F2</u>
P2802	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0707, P0708, P2802, P2803, or P2805</u>
P2803	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0707, P0708, P2802, P2803, or P2805</u>
P2805	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0707, P0708, P2802, P2803, or P2805</u>
P2812	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P2814	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P2815	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P2817	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0741, P2817, or P2818</u>
P2818	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0741, P2817, or P2818</u>
P281B	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P281D	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P281E	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2718, P2720, P2721, P2812, P2814, P2815, P281B, P281D, or P281E</u>
P2820	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P2820 or P2821</u>
P2821	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P2820 or P2821</u>
P2826	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830</u>
P2827	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830</u>
P282F	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830</u>
P2830	Automatic Transmission - 9T45 (M3U) or 9T50 (M3D M3H) - <u>DTC P0658, P0659, P2727, P2729, P2730, P2736, P2738, P2739, P2826, P2827, P282F, or P2830</u>
P2A00	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2297 or P2A00</u>
P2ADA	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2ADA-P2ADD</u>

DTC	Diagnostic Procedure
P2ADB	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2ADA-P2ADD</u>
P2ADC	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2ADA-P2ADD</u>
P2ADD	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2ADA-P2ADD</u>
P2BAA	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC P2BAA</u>
P2C1E	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P2C1F	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P2C20	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P3051	12 V Starting and Charging - <u>DTC P3051, P3053, or P3055</u>
P3052	12 V Starting and Charging - <u>DTC P3052, P3054, or P3056</u>
P3053	12 V Starting and Charging - <u>DTC P3051, P3053, or P3055</u>
P3054	12 V Starting and Charging - <u>DTC P3052, P3054, or P3056</u>
P3055	12 V Starting and Charging - <u>DTC P3051, P3053, or P3055</u>
P3056	12 V Starting and Charging - <u>DTC P3052, P3054, or P3056</u>
P305B	Wiring Systems and Power Management - <u>DTC P305B or P305C</u>
P305C	Wiring Systems and Power Management - <u>DTC P305B or P305C</u>
P305D	12 V Starting and Charging - <u>DTC P305D or P305E</u>
P305E	12 V Starting and Charging - <u>DTC P305D or P305E</u>
P308D	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P308D	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P308D	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P30B4	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>

DTC	Diagnostic Procedure
P30B4	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P30B4	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P30B5	Engine Controls and Fuel - 1.5L (LYX) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P30B5	Engine Controls and Fuel - 1.6L (LH7) Diesel - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P167E, P16E8, P16FF, P175F, P1761, P1762, P1775, P179B, P189C, P2544, P308D, P30B4, P30B5, P30BC, P30BD, P30D5, P30DE, P3168, P3169, or P316B</u>
P30B5	Engine Controls and Fuel - 2.0L (LTG) - <u>DTC C1201, P1000, P1001, P1003, P1008, P1009, P100A, P100E, P103D, P103E, P10B6-P10B9, P10BF, P10C6-P10C8, P10F5, P1100, P1103, P117A, P11FF, P1200, P128C-P128F, P129E, P12A8, P130F, P135C-P135F, P1436, P143A, P143B, P1472, P14A0, P14B6, P14BD, P14CD, P14CE, P14D4-P14D6, P150C, P151A, P151D, P153C, P153D, P155D, P1591, P15E2, P15F2, P15F9, P15FA, P15FB, P165C, P1</u>

DTC	Diagnostic Procedure
P30BC	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P30BD	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P30BD	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P30BD	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P30D5	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167F , P16E8 , P1

DTC	Diagnostic Procedure
P30DE	Engine Controls and Fuel - 1.5L (LYX) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P30DE	Engine Controls and Fuel - 1.6L (LH7) Diesel - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B
P30DE	Engine Controls and Fuel - 2.0L (LTG) - DTC C1201 , P1000 , P1001 , P1003 , P1008 , P1009 , P100A , P100E , P103D , P103E , P10B6-P10B9 , P10BF , P10C6-P10C8 , P10F5 , P1100 , P1103 , P117A , P11FF , P1200 , P128C-P128F , P129E , P12A8 , P130F , P135C-P135F , P1436 , P143A , P143B , P1472 , P14A0 , P14B6 , P14BD , P14CD , P14CE , P14D4-P14D6 , P150C , P151A , P151D , P153C , P153D , P155D , P1591 , P15E2 , P15F2 , P15F9 , P15FA , P15FB , P165C , P167E , P16E8 , P16FF , P175F , P1761 , P1762 , P1775 , P179B , P189C , P2544 , P308D , P30B4 , P30B5 , P30BC , P30BD , P30D5 , P30DE , P3168 , P3169 , or P316B

"U" TYPE DTC'S

DTC	Diagnostic Procedure
U0020	Data Communications - DTC U0020
U0028	Data Communications - DTC U0028
U0029	Data Communications - DTC U0029
U0073	Data Communications - DTC U0073 or U2100
U0074	Data Communications - DTC U0074
U0076	Data Communications - DTC U0076
U0077	Data Communications - DTC U0077
U0078	Data Communications - DTC U0078
U007B	Data Communications - DTC U007B
U007C	Data Communications - DTC U007C
U007D	Data Communications - DTC U007D
U0100-U02FF	Data Communications - DTC U0100-U02FF
U010C	Data Communications - DTC U010C , U010E , U029D , U029E , or U02A3
U010E	Data Communications - DTC U010C , U010E , U029D , U029E , or U02A3
U01B0	Data Communications - DTC U01B0
U029D	Data Communications - DTC U010C , U010E , U029D , U029E , or U02A3
U029E	Data Communications - DTC U010C , U010E , U029D , U029E , or U02A3
U02A3	Data Communications - DTC U010C , U010E , U029D , U029E , or U02A3
U0300-U0336	Data Communications - DTC U0300-U0336
U0400-U05FF	Data Communications - DTC U0400-U05FF
U1026	Data Communications - DTC U1026
U1340-U135F	Data Communications - DTC U1340-U135F
U1500-U15FF	Data Communications - DTC U1500-U15FF

DTC	Diagnostic Procedure
U1653	Data Communications - <u>DTC U1653</u>
U1814	Data Communications - <u>DTC U1814</u>
U1833	Data Communications - <u>DTC U1833</u>
U183A	Data Communications - <u>DTC U183A</u>
U183E	Data Communications - <u>DTC U183E</u>
U184A	Data Communications - <u>DTC U184A</u>
U184C	Data Communications - <u>DTC U184C</u>
U18A2	Data Communications - <u>DTC U18A2</u>
U18A6	Data Communications - <u>DTC U18A6</u>
U18A7	Data Communications - <u>DTC U18A7</u>
U18AA	Data Communications - <u>DTC U18AA</u>
U18AF- U18B4	Data Communications - <u>DTC U18AF-U18B4</u>
U18B9- U18BF	Data Communications - <u>DTC U18B9-U18BF</u>
U18C6	Data Communications - <u>DTC U18C6</u>
U18CC	Data Communications - <u>DTC U18CC</u>
U18D1	Data Communications - <u>DTC U18D1</u>
U18D2	Data Communications - <u>DTC U18D2</u>
U18D3	Data Communications - <u>DTC U18D3</u>
U2098	Data Communications - <u>DTC U2098</u>
U2099	Data Communications - <u>DTC U2099</u>
U2100	Data Communications - <u>DTC U0073 or U2100</u>
U2101	Data Communications - <u>DTC U2101</u>
U2160- U2231	Data Communications - <u>DTC U2160-U2231</u>
U2409	Data Communications - <u>DTC U2409</u>
U240D	Data Communications - <u>DTC U240D</u>
U240E	Data Communications - <u>DTC U240E</u>
U240F	Data Communications - <u>DTC U240F</u>
U2410	Data Communications - <u>DTC U2410</u>
U2411	Data Communications - <u>DTC U2411</u>
U2500- U25FF	Data Communications - <u>DTC U2500-U25FF</u>
U2616	Data Communications - <u>DTC U2616</u>
U3000	Data Communications - <u>DTC U3000</u>
U3012	Data Communications - <u>DTC U3012</u>