

2002 Axiom Master Index

Accessory sockets	Engine controls	Power door locks
Alarm and relay controls	Engine coolant temperature gauge	Power mirrors
Anti-lock brake system (ABS)	Fog lights	Power mirror defoggers
Anti-theft system	Front park lights	Power seats
A/T shift indicator	Fuel gauge	Power sunroof
Automatic A/C	Gauges	Power windows
A/C controls	Ground distribution	Rear defogger
A/C sensors	Hazard lights	Rear wiper/washer
Air delivery controls	Headlights	Seat belt warning system
Blower controls	Heater	Seat heater
Compressor and condenser fan controls	Horns	Shift interlock system
Automatic transmission controls	Ignition system	Sound system
Back up lights	Indicators	Speedometer
Blower controls	Intelligent suspension system	Spot lights
Brake lights	Key-in ignition warning system	Starting system
Brake warning system	Keyless entry system	Supplemental restraint system (SRS)
Charging system	License lights	Tachometer
Cigarette lighter	Lighting switch details	Taillights
Console lights	Lights-on warning system	Torque on Demand (T.O.D.) System
Courtesy lights	Luggage room light	Trailer adapter
Cruise control	Map lights	Turn lights
Dash fuse box	MID system	Vanity lights
Dash lights	Multi-plexed indicator control unit	Vehicle speed sensor (VSS)
Dome light	Power distribution	Windshield wiper/washer

The schematics in this manual were developed from the most recent information available. Because of time limits some information is not included in the preliminary Electrical Troubleshooting Manual (ETM). The final ETM will contain the latest schematic information, component locations, photos and circuit descriptions.