


Cadillac Fleetwood (1993) – fuse box diagram

Cadillac Fleetwood (1993) – fuse box diagram

Year of production: 1993

Instrument panel fuse block

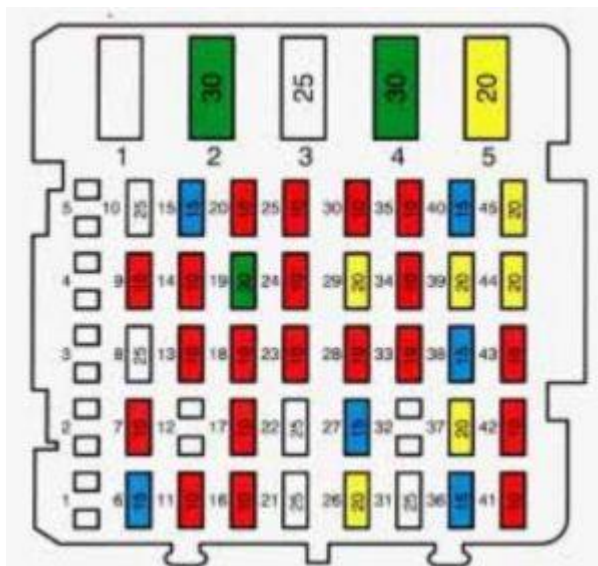

Fuse number	Fuse name	Ampere rating	Usage
1	—	—	—
2	—	—	—
3	—	—	—
4	—	—	—
5	—	—	—
6	T/SIG	15	PARK/NEUTRALAND BACKUP LAMP SWITCH, ELECTRIC TURN FLASHER
7	ABS	10	ELECTRONIC BRAKE CNTRL. MOD. (EBCM)
8	RAP WPR	25	RETAINED ACCESSORY PWR. (RAP)
9	RADIO	10	RADIO RECEIVER

10	WIPER	25	WINDSHIELD WIPER/WASHER
11	I/P INDC /TELLTAIL	10	DIAGNOSTIC ENERGY RESERVE, LOW COOLANT MOD. (DERM), LOW COOLANT MOD, INSTRUMENT PANEL CLUSTER INDICATORS
12	—	—	—
13	CHIME	10	CHIME MOD., SPEED SENSOR BUFFER MOD., TORQUE CONVERTER CLUTCH (TCC) DISIBLE RELAY, AUTO DAY/NIGHT MIRROR, REAR DEFOGGER RELAY
14	CCM	10	CENTRAL CNTRL. MOD. (CCM), THROTTLE POSITION (TP) SENSOR MOD., ELECTRONIC LEVEL CNTRL (ELC)
15	AIR BAG	10	DUAL POLE ARMING SENSOR
16	CRUISE	10	GENERATOR, CRUISE CNTRL
17	HTD ST	10	DRIVER'S MEMORY SEAT, DRIVER HEATED SEAT, PASSENGER HEATED SEAT

18	CCM IGN	10	CENTRAL CNTRL. MOD. (CCM), INSTRUMENT CLUSTER, REMOTE KEYLESS ENTRY/UNVERAL THEFT DETERRENT RECEIVER
19	RAP PWR	10	RETAINED ACCESSORY PWR. (RAP)
20	HVAC	10	HVAC SOLENOID MOD., INSTRUMENT CLUSTER, HVAC CNTRL. HEAD
21	RAP BATT	25	RETAINED ACCESSORY PWR. (RAP) WIPER RELAY
22	HVAC	25	HVAC PWR. MOD.
23	TRK REL	10	TRUNK LID RELEASE SW
24	STARTER	10	STARTER ENABLE REALY. DIAGNOSTIC ENERGY RESERV MOD. (DERM)
25	MIR DEFG	10	SIDE VIEW MIRROR DEFOGGERS
26	PWR ANT	20	TRUNK LAMP, HVAC PWR. M&D. PWR. ANTENNA


27	D/INT LPS	15	DELAYED INTERIOR LIGHTS (DIL)
28	FRT CIG	10	FRONT CIGAR LIGHTS
29	RR CIG	20	REAR CIGAR LIGHTERS
30	HVAC	10	HVAC CNTRL. ASSEMBLY
31	ABS	25	ELECTRONIC BRAKE AND TRACTION CNTRL. MOD
32	—	—	—
33	CLUSTER	10	CHIME MOD., INSTRUMENT CLUSTER, LOW ENGINE OIL MOD., HEADLIGHT SW., RADIO RECEIVER
34	CCM	10	CENTRAL CNTRL. MOD. (CCM)
35	PWR LK	10	PWR. DOOR LOCKS, PWR. MIRRORS, PWR. LUMBAR SEATS
36	TRK PDWN	15	TRUNK LID PULL-DOWN UNIT

37	STOP LPS	20	BRAKE TRANSMISSION SHIFT INTERLOCK IBTSIVSTOP LIGHT BRAKE SW.
38	PWR RECL	15	DRIVER-SCT RECLifE SW., PASSENGER SEAT RECLINE SW.
39	PWR LUMB	20	PWR. LUMBARSEAT MOTOR CNTRL MOD.
40	HTD ST	15	DRIVERR AND PASSENGER HEATEL, SEAT CNTRL. MOD. RELAY
41	CORNR LP	10	INSTRUMENT CLUSTER, RADIO CNTRL. HEAD, CORNERING LIGHTS
42	INT DIM	10	HEADLIGHT SWITCH, INTERIOR LIGHTS, DIMMING
43	RR T/LPS	10	REATTAIL LIGHTS, REAR SIDE MARKER LIGHTS, LICENSE LAMP
44	HZRD LP	20	HAZARD WARNING FLASHER
45	PWR LK	20	PWR. DOOR LOCK RELAY

C/B 1	—	—	—
C/B 2	RAP PWR	30	RETAINED ACCESSh PWR. (RAP) RELAY
C/B 3	PWR ST	25	DRIVERS PWR. SEAT SW., PASSENGER PWR. SEAT SW., MEMORY SEAT MOD.
C/B 4	RR DEFG	30	REAR DEFOGGER REALY
C/B 5	HDLP	30	HEADLIGHT RELAY, DAMIME RUNNING LIGHTS (DRL)

Underhood (U/H) Electrical Center

The U/H electrical center is located on the passenger side wheel housing in the engine compartment.

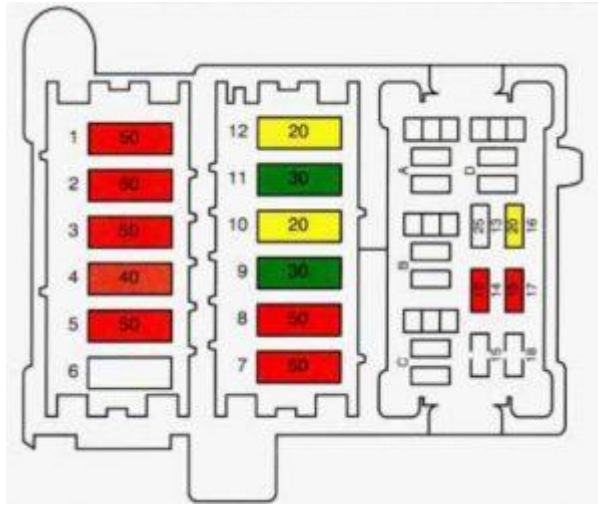

Cadillac Fleetwood – fuse box diagram – underhood electrical center

Fuse number	Fuse name	Ampere rating [A]	Usage
1	BODY 1	50	#45 PWR. DR. LOCK RELAY, #36 TRUNK PULL-DOWN, #37 STOP/HAZARD, #38 RECLINE SW., #39 PWR. LUMBAR, #40 HEATED SEAT, #3 PWR. SEAT CIRCUIT BREAKER, \$4 REAR DEFOG RELAY CIRCUIT BREAKER, #44 MIRROR DEFOG
2	BODY 2	50	#26 I/P-PWR. ANTENNA #27 I/P-DELAYED INTERIOR LIGHTS (DRL)- #28 WFRONT CIGAR, #29 I/P-REAR CIGAR, #30 I/P-HVAC CNTRL. HEAD, #21 IIP-RAP ACCESSORY RELAY, #22 I/P-HVAC PWR. MOD., #23 WTRUNK RELEASE, #9 I/P-RADIO, #10 I/P-RAP ACCESSORY, #31 I/P-TRACTION CNTRL. LIGHTS (DIL), #33 GP-


			TELTALE, #34 I/P-CCM 2, #35 I/P-PWR. DR. LOCK SW., #18 U/H-AIR PUMP, #2 CIRCUIT BREAKER I/P-RAP PWR. RELAY
3	IGN 1	50	#6 I/P-RETAINED ACCESSORY PWR. (RAP), #6 I/P-TURN FLASHER, #24 I/P-CRANK, #15 I/P-AIR BAG, #11 I/P-TELTALE, #14 I/P-CENTRAL CNTRL. MOD. (CCM), #13 I/P-CHIME, #7 I/P-TRACTION CNTRL., #13 U/H-INJECTORS, #14 U/H-ENGINE CNTRL. MOD. (ECM), IN-LINE CONCEALED I/P-REMOTE KEYLESS ENTRY RECEIVER, IGNITION COI
4	IGNS3	40	#16 I/P-CRUISE, #17 I/P-HEATED SEATS, #18 I/P-CCM IGNITION, #19 WRAP PWR. RELAY, #20 I/P-HVAC CNTRL. HEAD , #17 U/H-COOLING FAN RELAY
5	ABS	50	ANTILOCK BRAKE SYSTEM/TRACTION CNTRL. (ABSKC) HYDRAULIC MODULATOR
6	—	—	—
7	PRIMRY CLG FAN	50	PRIMARY COOLING FAN RELAY

8	SCNDRY CLG FAN	50	SECONDARY COOLING FAN RELAY
9	LEVEL CNTRL	30	#15 U/H-ELECTRONIC LEVEL CNTRL. (ELC)
10	FUEL PUMP	20	#16 U/H-FUEL PUMP
11	HEADLIGHTS/HORNS	30	#1 F/L-HORN RELAY , #2 F/L-HEADLIGHTS RELAY, #5 CIRCUIT BREAKER I/P-HEADLIGHTS
12	PARK LIGHTS	20	#4 F/L-PARK LIGHTS, #5 F/L-FORWARD LIGHTS, #41 I/P-CORNERING LIGHTS, #42 I/PI-DIMMER, #43 I/P-REAR TAIL LIGHTS
13	INJECTORS	10	FUEL INJECTORS, ENGINE CNTRL. MOD. (ECM)
14	EGR/PCM (IGN)	10	EXHAUST GAS RECIRCULATION (EGR) VALVE, AIR PUMP RELAY, PURGE CANISTER
15	LEVEL CNTR	20	ELECTRONIC LEVEL CNTRL. (ELC) HEIGHT SENSOR, ELC COMPRESSOR/RELAY ASSEMBLY

16	FUEL PUMP	10	ENGINE CNTRL. MOD. (ECM), FUEL PUMP RELAY, FUEL PUMP/OIL PRESSURE SW.
17	COOLING FANS	10	SECONDARY COOLING FAN RELAY, COOLING FANS CNTRL. RELAY
18	AIR PUMP	20	AIR PUMP RELAY
A	—	—	—
B	COOLING FANS CNTRL. RELAY	—	COOLING FAN CNTAL. RELAY
C	A/C DISABLE RELAY	—	AIR COND. DISABLE RELAY
D	FUEL PUMP RELAY	—	FUEL PUMP RELAY

Forward Light (FIL) Electrical Center

The foward lighting electrical center is located on the driver's side in front of the windshield washer fluid container.

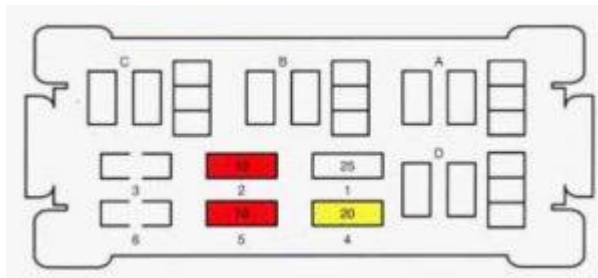

Cadillac Fleetwood – fuse box diagram –


forward lights electrical center

Fuse number	Fuse name	Ampere rating [A]	Usage
1	HORN	25	HORN RELAY (COIL), HORNS
2	HDLP	10	HEADLIGHT RELAY (COIL), DAYTIME RUNNING LIGHTS (DRL) RELAY
3	—	—	—
4	PARK LP	20	PARK LIGHT RELAY
5	FRT PARK LP	10	FRONT MARKER LIGHTS, FRONT SIDE MARKER LIGHTS
6	—	—	—

A	—	—	—
B	DRL RLY	—	DAYTIME RUNNING LIGHTS (DRL) RELAY
C	HORN RELAY	—	HORN RELAY
D	PARK LP RELAY	—	PARK LIGHTS RELAY

Instrument Panel Relay Center


This relay center is located left of the steering column compartment.

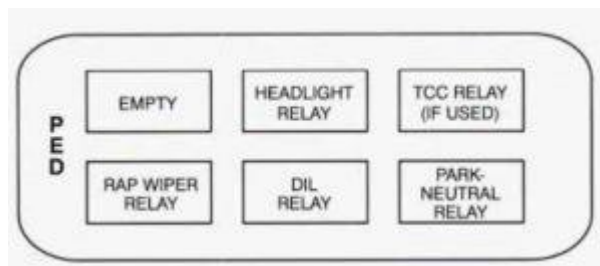

Cadillac Fleetwood – fuse box diagram – instrument panel relay center

Cooling Fan Relay Center (If Equipped)

This relay center is located on the passenger side bulk head in the engine compartment.

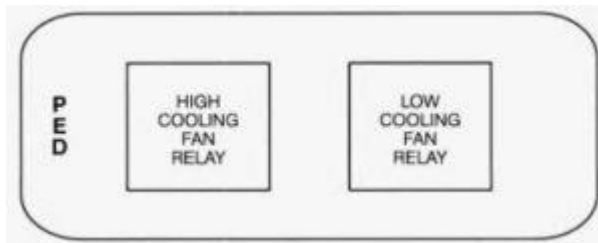

Cadillac Fleetwood – fuse box diagram – cooling fan relay center