

Seat Hardware, Trim, and Upholstery


cardiagn.com

Repair Instructions

cardiagn.com

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. REPAIR INSTRUCTIONS
- 4.

Front Seat Removal and Installation

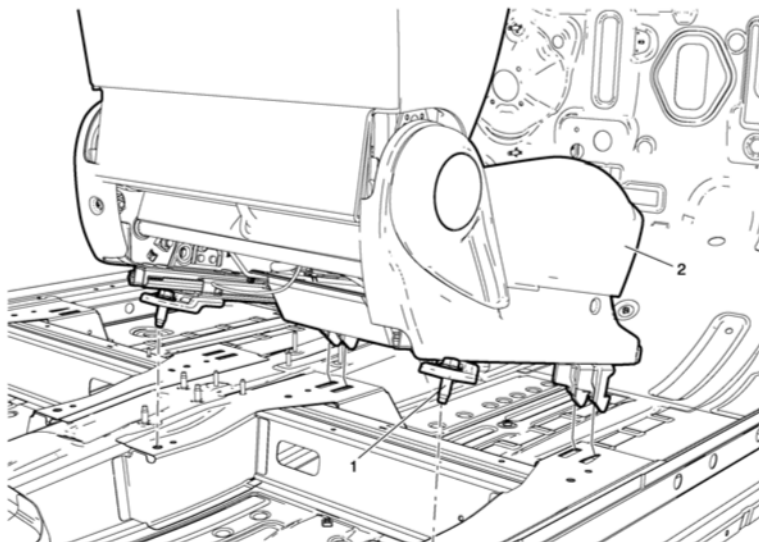



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Front Seat Mounting Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tip Adjust the seat forward or rearward to access the nuts. Tighten 45 N-m (33 lb-ft)
2	Seat Assembly Procedure Disconnect the electrical connectors.

Related Part Information

Part Name	Catalog Name	Part Code
Driver Seat	SEAT,DRVR (TEMP)	0350A
Driver Seat	SEAT,DRVR(TEMP)	0351A
Front Seat	SEAT,FRT	0050A
Front Seat	SEAT,FRT	0060A
Driver Seat	SEAT,DRVR	1795A
Driver Seat	SEAT,DRVR	1800A
Driver Seat	SEAT,DRVR(W/BELT)	1810A
Passenger Seat	SEAT,PASS	3195A
Passenger Seat	SEAT,PASS	3200A
Passenger Seat	SEAT,PASS (W/BELT)	3205A
Front Seat	SEAT,FRT	0010A
Front Seat	SEAT PKG,FRT	0014Y
Front Seat	SEAT,FRT	0015A
Front Seat	SEAT,FRT (W/O CVR)	0015B
Driver Seat	SEAT,DRVR	2009A
Driver Seat	SEAT KIT,DRVR	2009Z
Driver Seat	SEAT,DRVR	2010A
Driver Seat	SEAT,DRVR(W/BELT)	2015A
Passenger Seat	SEAT,PASS	5000A
Passenger Seat	SEAT KIT,PASS	5004Z
Passenger Seat	SEAT,PASS	5005A
Passenger Seat	SEAT,PASS(W/BELT)	5010A

cardiagn.com


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Driver or Passenger Seat Adjuster Handle Knob Replacement

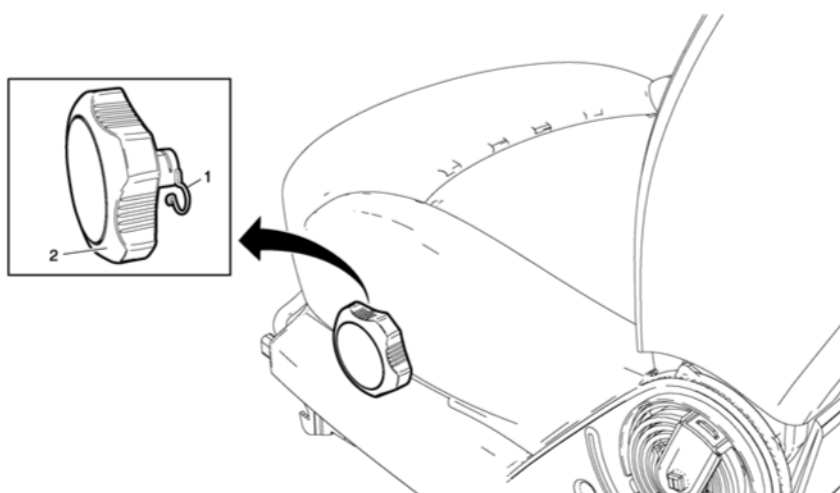



cardiagn.com

[Click here for full size](#)


Callout	Component Name
1	Front Seat Adjuster Handle Knob Clamp
	Tip
	Use a proper tool to release adjuster handle knob clamp.
2	Front Seat Adjuster Handle Knob

Related Part Information

Part Name	Catalog Name	Part Code
Front Seat Adjuster Handle Knob	KNOB,F/SEAT ADJR HDL	0072B
Driver Seat Adjuster Handle Knob	KNOB,D/SEAT ADJR HDL	2065B
Passenger Seat Adjuster Handle Knob	KNOB,P/SEAT ADJR HDL	6565B

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. REPAIR INSTRUCTIONS
- 4.

Front Seat Armrest Replacement

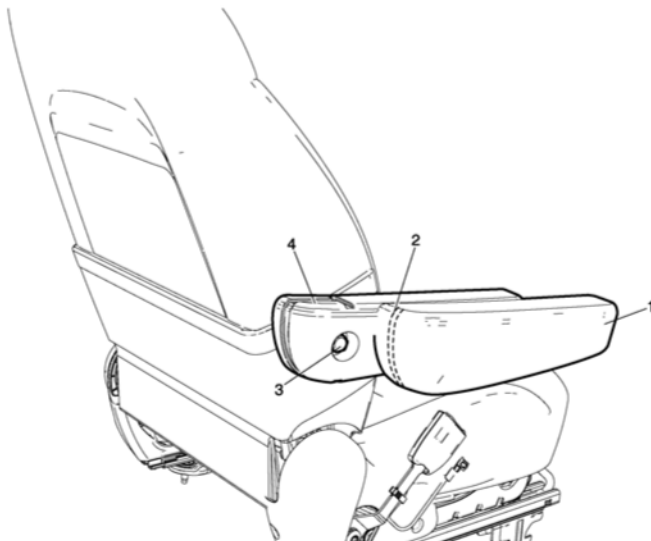



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Front Seat Armrest Cover
2	Front Seat Armrest Cover Zipper Procedure Open the zipper to access the front seat armrest mounting bolt.
3	Front Seat Armrest Mounting Bolt (Qty: 1) Caution: Refer to Fastener Caution . Tighten 45 N-m (33 lb-ft)
4	Front Seat Armrest Assembly


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Front Seat Head Restraint Replacement

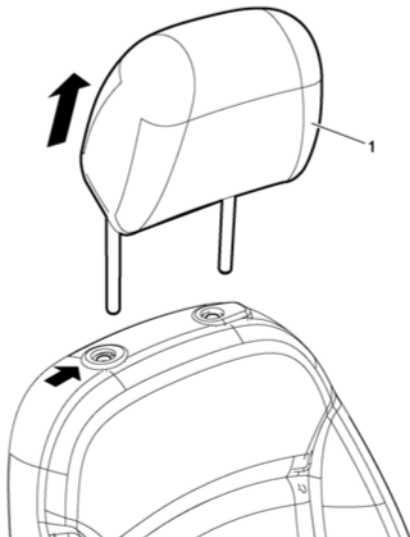



[Click here for full size](#)

Callout	Component Name
1	Front Seat Head Restraint Procedure 1. Raise the headrest to the full upward position. 2. Depress the flush button on the head restraint guide. 3. Remove the head restraint by pulling up on the restraint.

Related Part Information

Part Name	Catalog Name	Part Code
Front Seat Head Restraint	RESTRAINT,F/SEAT HD	1710A
Driver Seat Head Restraint	RESTRAINT,D/SEAT HD	6500A
Passenger Seat Head Restraint	RESTRAINT,P/SEAT HD	6600A
Front Seat Head Restraint	RESTRAINT KIT,F/SEAT HD	0299A

Part Name	Catalog Name	Part Code
Front Seat Head Restraint	RESTRAINT,F/SEAT HD	0299Y
Front Seat Head Restraint	RESTRAINT,F/SEAT HD	0300A
Driver Seat Head Restraint	RESTRAINT KIT,D/SEAT HD	2800A
Driver Seat Head Restraint	RESTRAINT,D/SEAT HD	2805A
Passenger Seat Head Restraint	RESTRAINT KIT,P/SEAT HD	5900A
Passenger Seat Head Restraint	RESTRAINT,P/SEAT HD	5905A

cardiagn.com


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Driver or Passenger Seat Head Restraint Guide Replacement

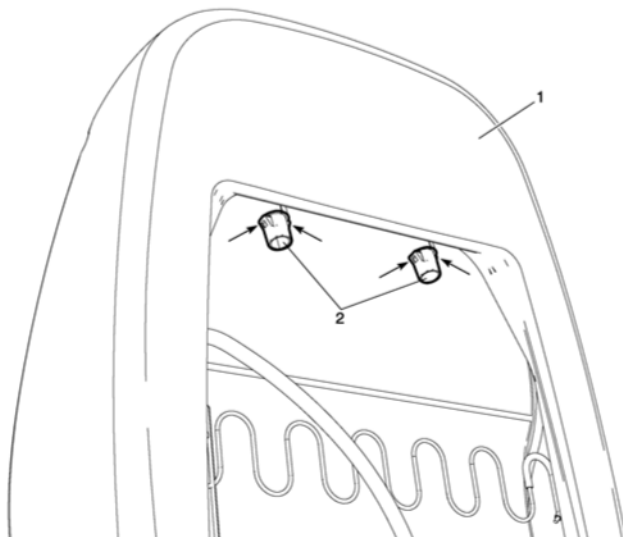



cardiagn.com

[Click here for full size](#)


Callout	Component Name
Preliminary Procedures	
1. Remove the hog rings at the rear part of the front seat back. Refer to Driver or Passenger Seat Back Cushion Cover Replacement .	
2. Remove the front seat back cushion cover and pad to access the head restraint guide.	
1	Front Seat Back Cushion Pad
2	Front Seat Head Restraint Guide

Related Part Information

Part Name	Catalog Name	Part Code
Front Seat Head Restraint Guide	GUIDE,F/SEAT H/RST 0160B	
Driver Seat Head Restraint Guide	GUIDE,D/SEAT H/RST 5800A	
Driver Seat Head Restraint Guide	GUIDE,D/SEAT H/RST 5800B	
Passenger Seat Head Restraint Guide	GUIDE,P/SEAT H/RST 9200A	
Passenger Seat Head Restraint Guide	GUIDE,P/SEAT H/RST 9200B	

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. REPAIR INSTRUCTIONS
- 4.

Front Seat Cushion Cover Replacement

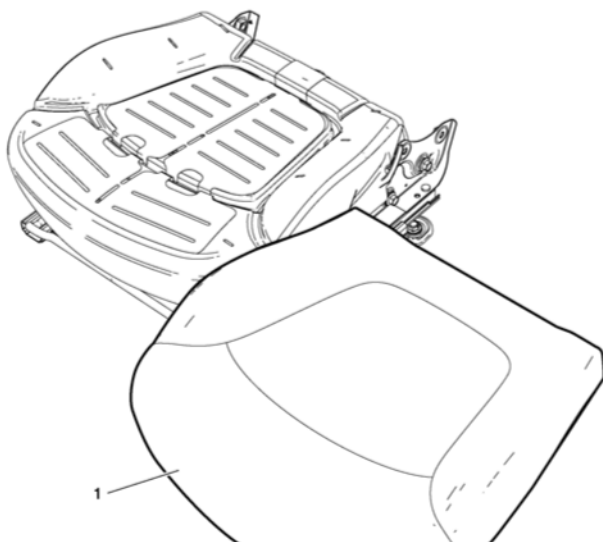




cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the front seat back cushion frame. Refer to Front Seat Back Frame Replacement .	
1	Front Seat Cushion Cover
	Procedure
	Remove the hog rings and retainers securing the seat cushion cover.

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. REPAIR INSTRUCTIONS
- 4.

Front Seat Cushion Outer Trim Panel Replacement

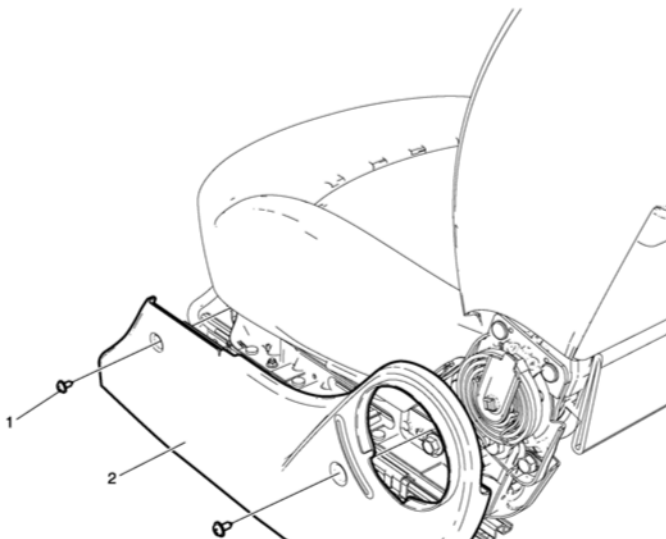



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
1. Remove the front seat recliner handle. Refer to Front Seat Back Recliner Handle Replacement .	
2. Remove the front seat adjuster handle knob. Refer to Driver or Passenger Seat Adjuster Handle Knob Replacement .	
1	Front Seat Outer Cover Screw (Qty: 2) Caution: Refer to Fastener Caution . Tighten 2.5N-m (22 in-lb)
2	Front Seat Outer Cover


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Front Seat Cushion Inner Trim Panel Replacement

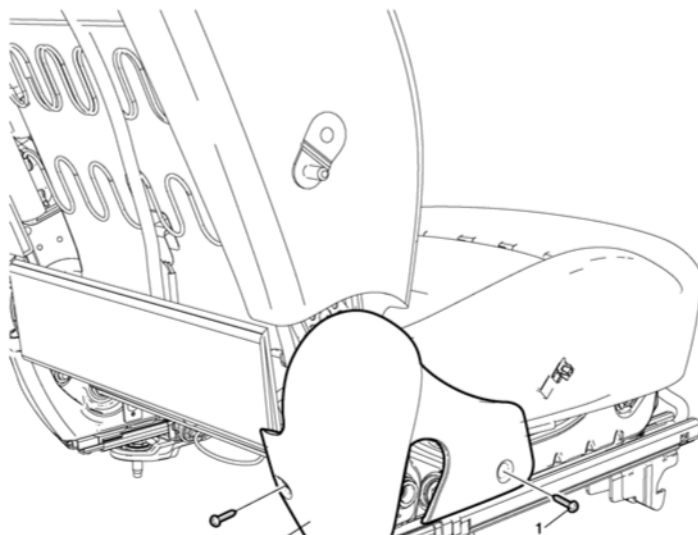




[Click here for full size](#)

Callout	Component Name
1	Front Seat Inner Cover Screw (Qty: 2) Caution: Refer to Fastener Caution . Tip Adjust the seat forward or rearward to access the nuts. Tighten 2.5N-m (22 lb-in)
2	Front Seat Inner Cover

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. REPAIR INSTRUCTIONS
- 4.

Driver or Passenger Seat Cushion Pad Replacement

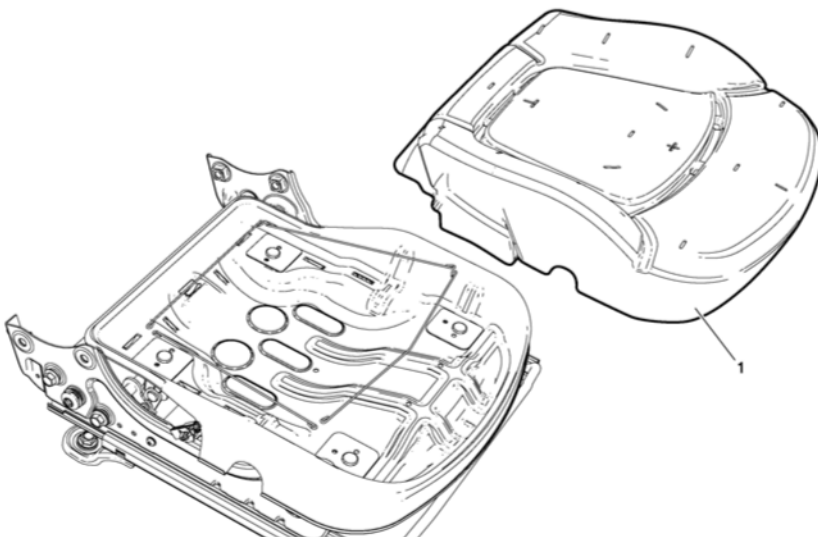



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the front seat cushion cover. Refer to Front Seat Cushion Cover Replacement .	
1	Front Seat Cushion Pad Procedure If necessary, remove the seat cushion heating mat. Refer to Front Seat Cushion Heater Replacement .


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Driver or Passenger Seat Back Cushion Cover Replacement

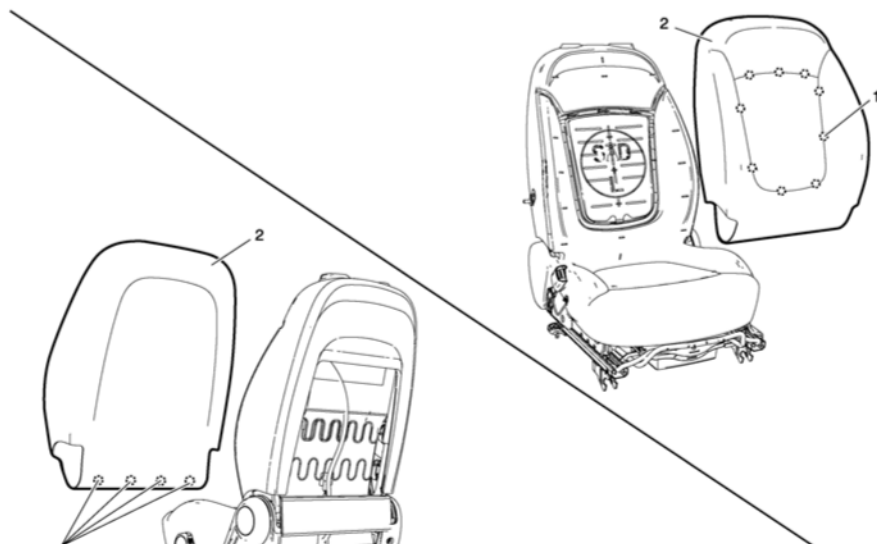



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the front seat armrest. Refer to Front Seat Armrest Replacement .	
	Front Seat Back Cushion Cover Hog Ring (Qty: 13)
1	Tip Begin at the rear part of the front seat back cushion cover, release the hog rings.
2	Front Seat Back Cushion Cover

1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Front Seat Back Pad Replacement





[Click here for full size](#)

Callout	Component Name
	Preliminary Procedures 1. Remove the front seat back cushion cover. Refer to Driver or Passenger Seat Back Cushion Cover Replacement. 2. Remove the front seat back cushion frame. Refer to Front Seat Back Frame Replacement. 3. Remove the inflatable restraint side impact module as needed. Refer to Front Seat Outboard Seat Back Airbag Replacement.
1	Front Seat Back Cushion Frame
2	Front Seat Back Cushion Pad Procedure 1. Remove the front seat back cushion frame, then remove the cushion pad. 2. If necessary, remove the front seat back cushion heating mat. Refer to Front Seat Back Heater Replacement.


Related Part Information

Part Name	Catalog Name	Part Code
Front Seat Back Pad PAD,F/SEAT BK (W/FRM)		0204A
Front Seat Back Pad PAD,F/SEAT BK (W/WIRE)		0204K
Front Seat Back Pad PAD KIT,F/SEAT BK		0204Y
Front Seat Back Pad PAD KIT,F/SEAT BK		0204Z
Front Seat Back Pad PAD,F/SEAT BK		0205A
Front Seat Back Pad PAD,F/SEAT BK		0205B

cardiagn.com

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. REPAIR INSTRUCTIONS
- 4.

Front Seat Back Frame Replacement

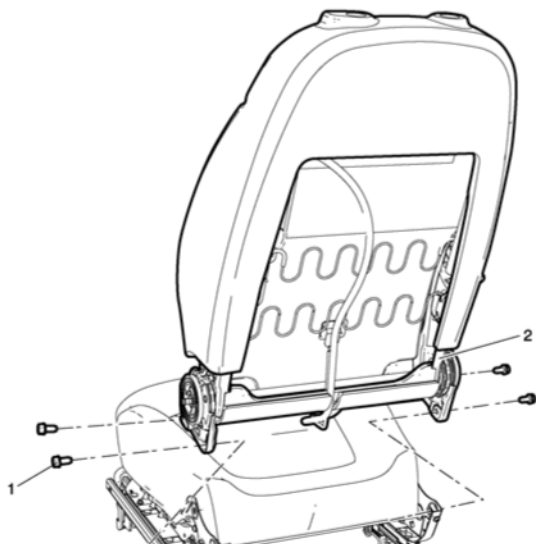



[Click here for full size](#)


Callout	Component Name
Preliminary Procedures 1. Remove the front seat. Refer to Front Seat Removal and Installation. 2. Remove the front seat inner trim panel. Refer to Front Seat Cushion Inner Trim Panel Replacement. 3. Remove the front seat outer trim panel. Refer to Front Seat Cushion Outer Trim Panel Replacement.	
1	Front Seat Back Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution. Tighten 45 N·m (33 lb·ft)

Callout	Component Name
2	Front Seat Back Cushion Frame Procedure 1. Disconnect electrical connectors as needed. 2. Remove the inflatable restraint side impact module. Refer to Front Seat Outboard Seat Back Airbag Replacement. 3. If replacing with a new front seat back frame, transfer components as necessary.

cardiagn.com

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. REPAIR INSTRUCTIONS
- 4.

Front Seat Back Recliner Handle Replacement

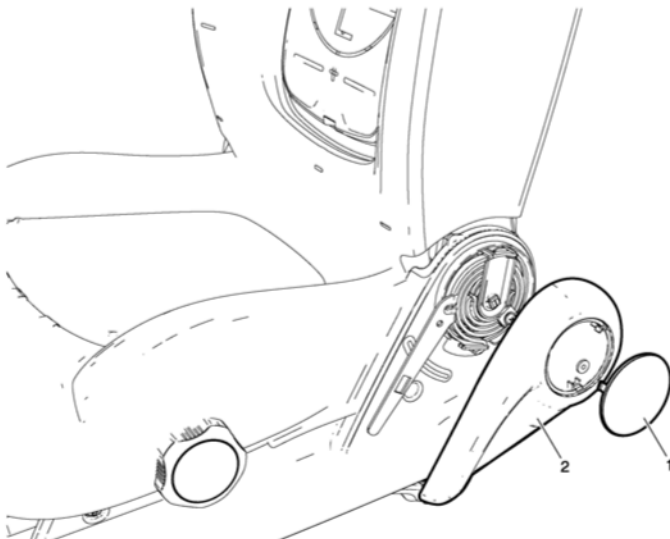



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Front Seat Recliner Handle Cover
	Procedure
	Pull the handle cover away from the seat to remove.
2	Front Seat Recliner Handle
	Procedure
	Pull the handle away from the seat to remove.

Related Part Information

Part Name	Catalog Name	Part Code
Driver Seat Recliner Handle	HANDLE,D/SEAT RECL	4600A
Driver Seat Recliner Handle	HANDLE,D/SEAT RECL	4600B
Front Seat Back Recliner Handle	HANDLE,F/SEAT BK RECL	4602A
Passenger Seat Recliner Handle	HANDLE,P/SEAT RECL	8200A

Part Name	Catalog Name	Part Code
Passenger Seat Recliner Handle	HANDLE,P/SEAT RECL	8200B

cardiagn.com


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Rear Seat Cushion Removal and Installation (Folding Seat)

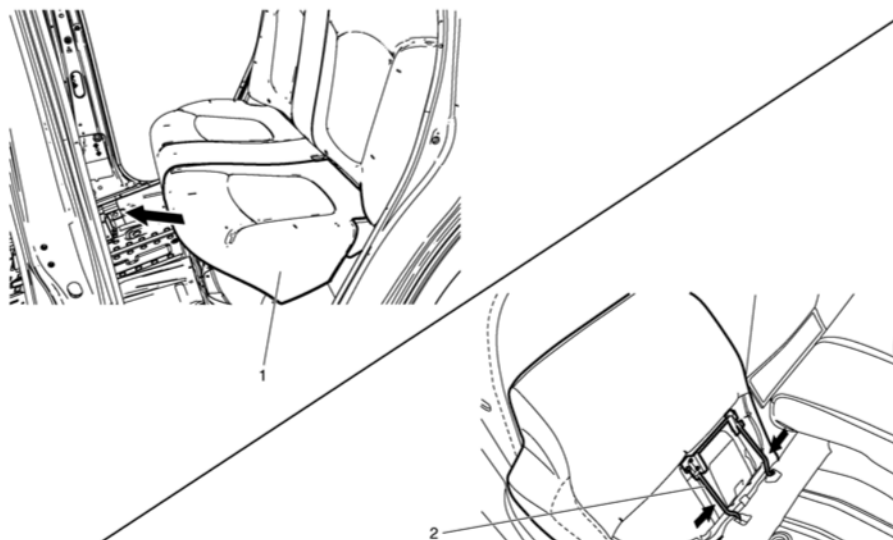



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Rear Seat Cushion
	Procedure
	Pull up on the front of the seat cushion to disengage the retainers.
2	Rear Seat Cushion Hinge Wire
	Procedure
	Reverse the rear seat cushion to disengage the rear seat cushion hinge wire.

Related Part Information


Part Name	Catalog Name	Part Code
Rear Seat Cushion	CUSHION,R/SEAT	1949X
Rear Seat Cushion	CUSHION,R/SEAT (LH PROC)	1949Y
Rear Seat Cushion	CUSHION,R/SEAT (RH PROC)	1949Z

Part Name	Catalog Name	Part Code
Rear Seat Cushion	CUSHION,R/SEAT	1950A
Rear Seat Cushion	CUSHION,R/SEAT	1950B
Rear Seat Cushion	CUSHION,R/SEAT	0099A
Rear Seat Cushion	CUSHION,R/SEAT	0100A
Rear Seat Cushion	CUSHION,R/SEAT	0100B
Rear Seat Cushion	CUSHION,R/SEAT	0101A
Rear Seat Cushion	CUSHION,R/SEAT	0102A

cardiagn.com

- 1. SEATS
- 2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
- 3. REPAIR INSTRUCTIONS
- 4.

Rear Seat Cushion Removal and Installation (Non Folding Seat)

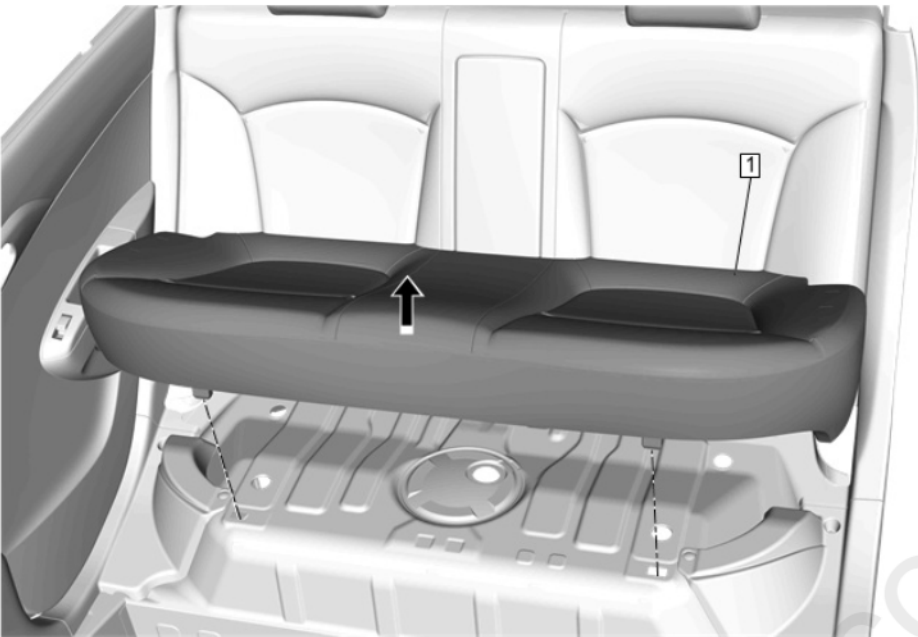

[Click here for full size](#)

Callout	Component Name
1	Rear Seat Cushion Replacement Procedure 1. Lift up on the front of the seat cushion to disengage the cushion retainers from the floor. [2>x] 2. Transfer components as necessary.

Related Part Information

Part Name	Catalog Name	Part Code
Rear Seat Cushion	CUSHION,R/SEAT	1949X
Rear Seat Cushion	CUSHION,R/SEAT (LH PROC)	1949Y
Rear Seat Cushion	CUSHION,R/SEAT (RH PROC)	1949Z
Rear Seat Cushion	CUSHION,R/SEAT	1950A
Rear Seat Cushion	CUSHION,R/SEAT	1950B
Rear Seat Cushion	CUSHION,R/SEAT	0099A
Rear Seat Cushion	CUSHION,R/SEAT	0100A
Rear Seat Cushion	CUSHION,R/SEAT	0100B
Rear Seat Cushion	CUSHION,R/SEAT	0101A
Rear Seat Cushion	CUSHION,R/SEAT	0102A


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Rear Seat Back Cushion Removal and Installation (Folding Seat)

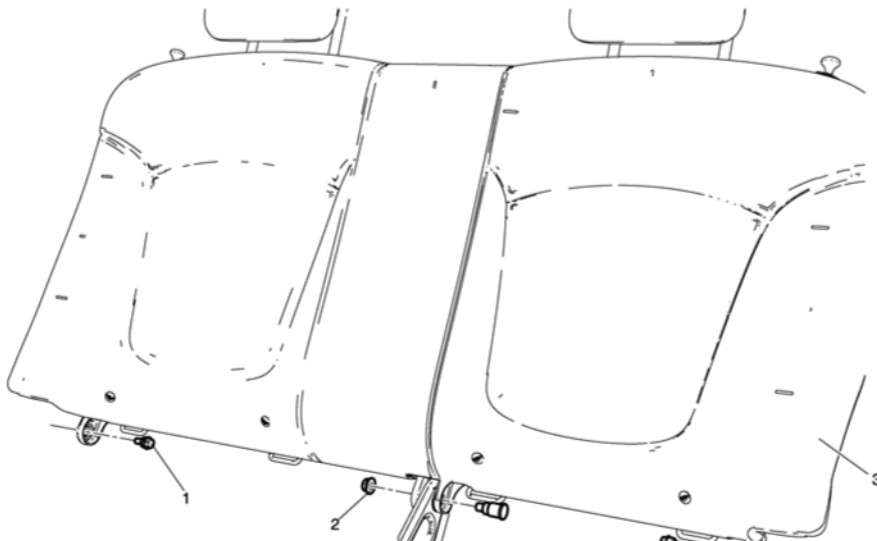



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the rear seat cushion. Refer to Rear Seat Cushion Removal and Installation .	
1	Rear Seat Back Cushion Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 24 N-m (18 lb-ft)
2	Rear Seat Back Cushion Nut (Qty: 1) Tighten 24 N-m (18 lb-ft)
3	Rear Seat Back Cushion

Related Part Information

Part Name	Catalog Name	Part Code
Rear Seat Back Cushion	CUSHION,R/SEAT BK	2899X
Rear Seat Back Cushion	CUSHION,R/SEAT BK	2899Y
Rear Seat Back Cushion	CUSHION,R/SEAT BK	2899Z
Rear Seat Back Cushion	CUSHION,R/SEAT BK	2900A
Rear Seat Back Cushion	CUSHION,R/SEAT BK (W/ SHLDR BELT)	0290A
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0299A
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0300A
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0300B
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0301A
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0302A

cardiagn.com

- 1. SEATS
- 2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
- 3. REPAIR INSTRUCTIONS
- 4.

Rear Seat Back Cushion Removal and Installation (Non Folding Seat)



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Rear Seat Cushion Removal and Installation	
1	Rear Seat Back Cushion Bolt [[4>x] Caution : Fastener Caution Tighten 22N-m (16 lb ft)
2	Rear Seat Back Cushion Procedure 1. Remove the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way. 2. Lift up the seat back cushion to remove from the vehicle. 3. Transfer components as necessary.

Related Part Information

Part Name	Catalog Name	Part Code
Rear Seat Back Cushion	CUSHION,R/SEAT BK	2899X
Rear Seat Back Cushion	CUSHION,R/SEAT BK	2899Y
Rear Seat Back Cushion	CUSHION,R/SEAT BK	2899Z
Rear Seat Back Cushion	CUSHION,R/SEAT BK	2900A
Rear Seat Back Cushion	CUSHION,R/SEAT BK (W/ SHLDR BELT)	0290A
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0299A
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0300A

Part Name	Catalog Name	Part Code
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0300B
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0301A
Rear Seat Back Cushion	CUSHION,R/SEAT BK	0302A

cardiagn.com


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Rear Seat Head Restraint Replacement

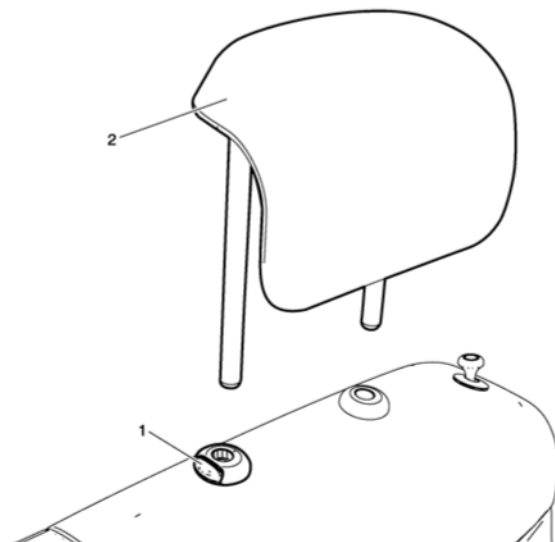



[Click here for full size](#)


Callout	Component Name
1	Rear Seat Head Restraint Flush Button
	Procedure
	Push the flush button and remove the head restraint.
2	Rear Seat Head Restraint

Related Part Information

Part Name	Catalog Name	Part Code
Rear Seat Head Restraint	RESTRAINT KIT,R/SEAT HD	0149A
Rear Seat Head Restraint	RESTRAINT PKG,R/SEAT HD	0149Y
Rear Seat Head Restraint	RESTRAINT,R/SEAT HD	0150A
Rear Seat Head Restraint	RESTRAINT,R/SEAT HD	0150B

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. REPAIR INSTRUCTIONS
- 4.

Rear Seat Head Restraint Guide Replacement

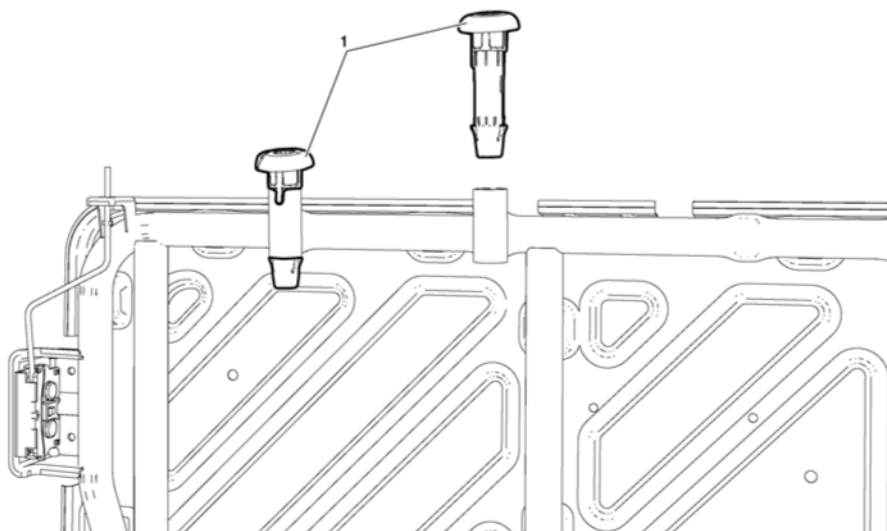

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove rear seat back cushion pad. Refer to Rear Seat Back Cushion Pad Replacement .	
1	Rear Seat Head Restraint Guide Procedure Unclip the rear seat head restraint guide.

Related Part Information

Part Name	Catalog Name	Part Code
Rear Seat Head Restraint Guide	GUIDE,R/SEAT H/RST	0156F
Rear Seat Head Restraint Guide	GUIDE,R/SEAT H/RST	0156G
Rear Seat Head Restraint Guide	GUIDE,R/SEAT H/RST	0189A
Rear Seat Head Restraint Guide	GUIDE,R/SEAT H/RST	0189B
Rear Seat Head Restraint Guide	GUIDE,R/SEAT H/RST (W/O REL)	0194A
Rear Seat Head Restraint Guide	GUIDE,R/SEAT H/RST (W/ REL)	0196A


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Rear Seat Cushion Hinge Pivot Replacement

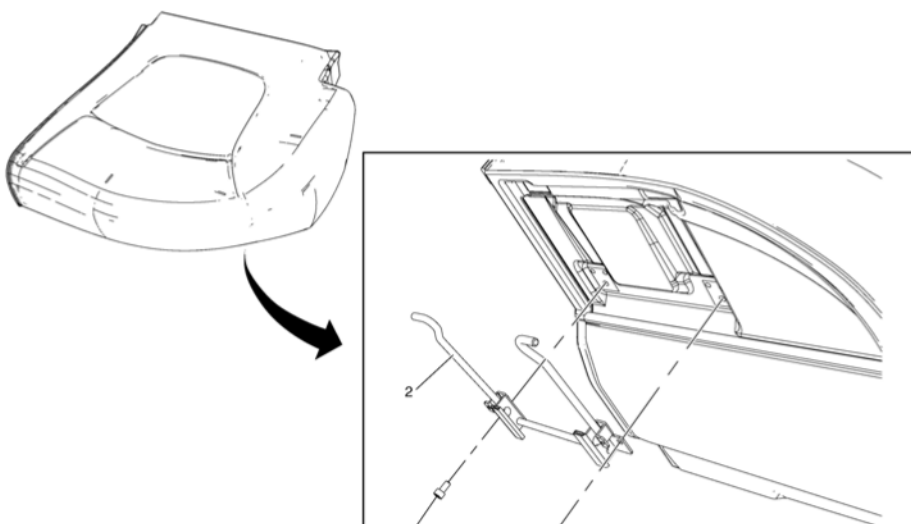



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the rear seat. Refer to Rear Seat Cushion Removal and Installation .	
1	Rear Seat Cushion Hinge Pivot Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 30.5 N-m (22.5 lb-ft)
2	Rear Seat Cushion Hinge Pivot


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Rear Seat Back Cushion Latch Replacement

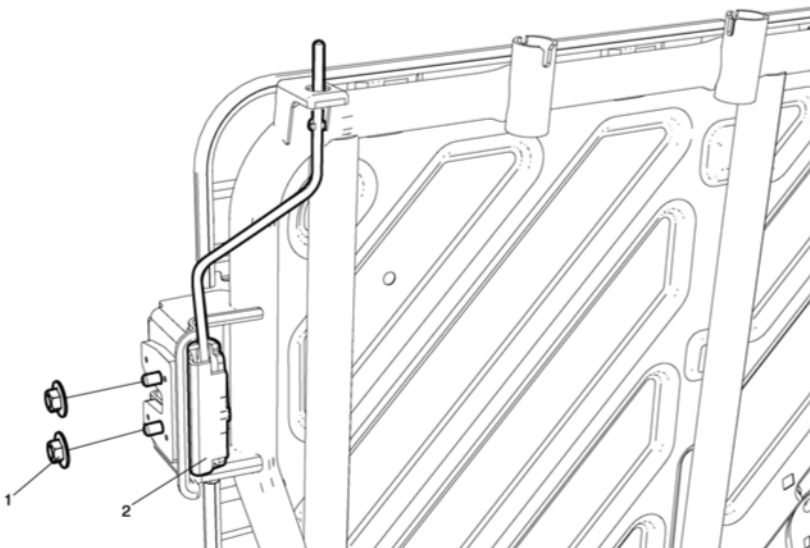




cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove rear seat back cushion pad. Refer to Rear Seat Back Cushion Pad Replacement .	
1	Rear Seat Back Cushion Latch Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 11 N-m (97 lb-in)
2	Rear Seat Back Cushion Latch

- 1. SEATS
- 2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
- 3. REPAIR INSTRUCTIONS
- 4.

Rear Seat Belt Opening Bezel Replacement (Notchback)

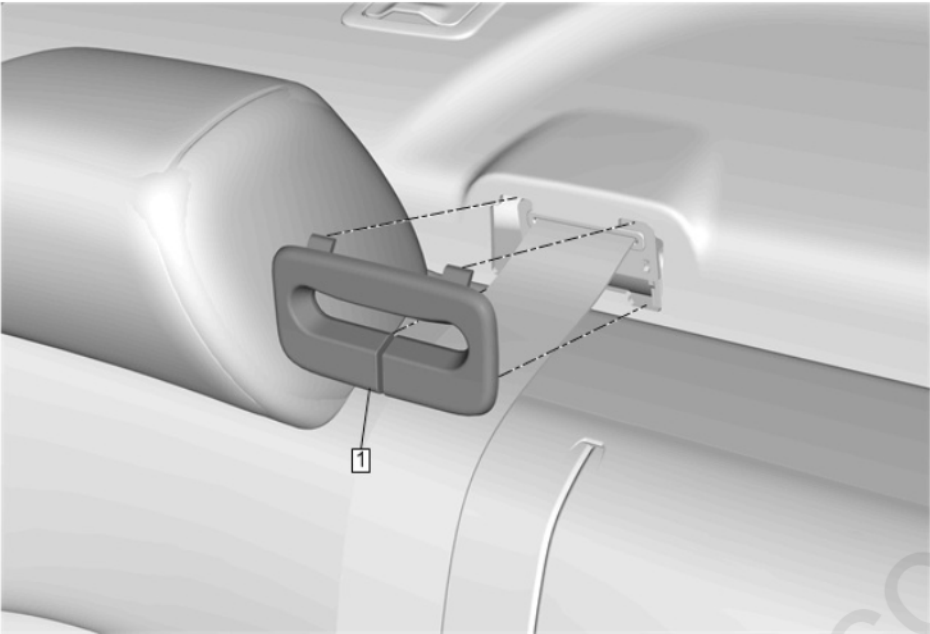

[Click here for full size](#)

Callout	Component Name
1	Rear Seat Belt Opening Bezel
	Procedure
	Using a flat-bladed tool, Remove the rear seat belt opening bezel from rear window panel trim.


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Rear Seat Back Cushion Pad Replacement

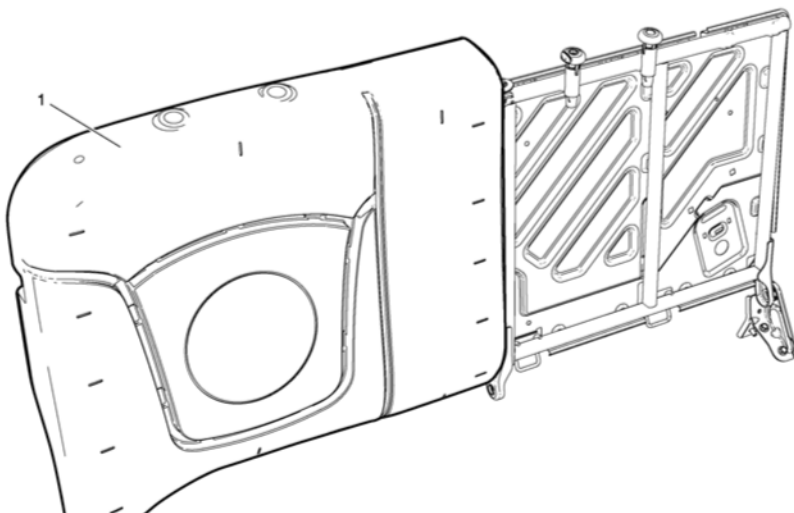



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the rear seat back cushion cover. Refer to Rear Seat Back Cover Replacement .	
1	Rear Seat Back Cushion Pad

Related Part Information

Part Name	Catalog Name	Part Code
Rear Seat Back Cushion Pad	PAD,R/SEAT BK CUSH	3863F
Rear Seat Back Pad	PAD,R/SEAT BK (W/FRM)	0310A
Rear Seat Back Pad	PAD,R/SEAT BK (W/WIRE)	0310K
Rear Seat Back Pad	PAD PKG,R/SEAT BK	0310Y
Rear Seat Back Pad	PAD,R/SEAT BK	0311A
Rear Seat Back Pad	PAD,R/SEAT BK	0311B


1. SEATS

 
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Rear Seat Back Cover Replacement

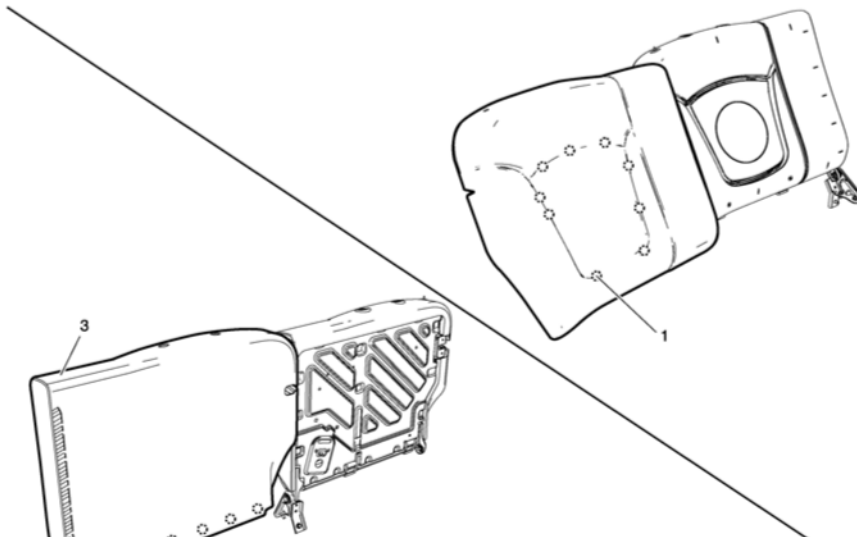



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the rear seat back cushion. Refer to Rear Seat Cushion Removal and Installation .	
1	Rear Seat Back Cushion Cover Hog Ring (Qty: 16) Tip Begin at the rear part of the rear seat, release the hog rings.
2	Rear Seat Back Cushion Cover Zipper Tip Open the zipper to remove the cushion cover.
3	Rear Seat Back Cushion Cover

Related Part Information

Part Name	Catalog Name	Part Code
-----------	--------------	-----------

Part Name	Catalog Name	Part Code
Rear Seat Back Cushion Cover	COVER,R/SEAT BK CUSH	3863A
Rear Seat Back Cushion Cover	COVER,R/SEAT BK CUSH	3863B
Rear Seat Back Cover	COVER,R/SEAT BK	0300A
Rear Seat Back Cover	COVER,R/SEAT BK	X0021
Rear Seat Back Cover	COVER PKG,R/SEAT BK	X0455

cardiagn.com


1. SEATS

2. SEAT HARDWARE, TRIM, AND UPHOLSTERY

3. REPAIR INSTRUCTIONS

4.

Rear Seat Back Cushion Latch Release Handle Replacement

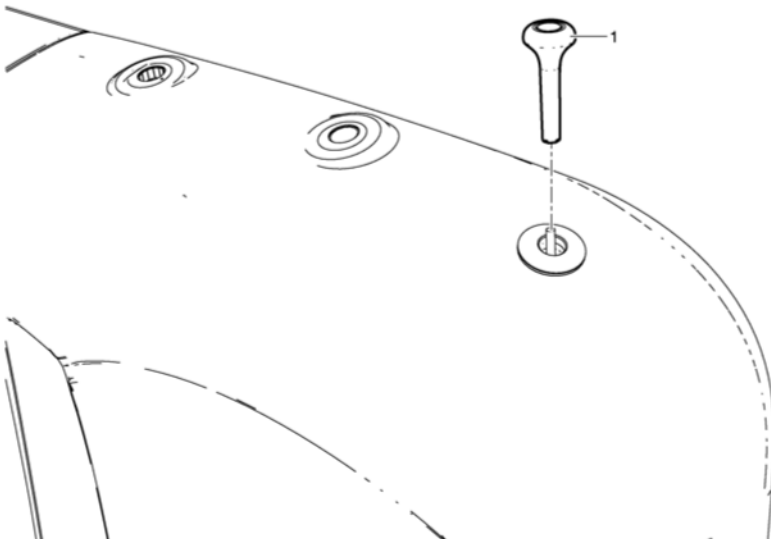



[Click here for full size](#)

Callout	Component Name
1	Rear Seat Back Cushion Latch Release Handle Procedure Turn the release handle clockwise for removal.

Related Part Information

Part Name	Catalog Name	Part Code
Rear Seat Back Latch Release Handle	HANDLE,R/SEAT BK LAT REL	0218A
Rear Seat Back Latch Release Handle	HANDLE,R/SEAT BK LAT REL	0218B
Rear Seat Back Latch Release Handle	HANDLE,R/SEAT BK LAT REL	X0008

Specifications

cardiagn.com

1. SEATS
2. SEAT HARDWARE, TRIM, AND UPHOLSTERY
3. SPECIFICATIONS
- 4.

Fastener Specifications

Reusable Threaded Fastener Tightening Specifications

Application	Specification
	Metric (English)
Note:	
All fasteners listed in this table can be reused after removal.	
Front Seat Armrest Mounting Bolt	45â€%N-mâ€%(33â€%lbâ€%ft)
Front Seat Back Cushion Frame Bolt	45â€%N-mâ€%(33â€%lbâ€%ft)
Front Seat Inner Cover Screw	2.5â€%N-mâ€%(22â€%lbâ€%in)
Front Seat Mounting Bolt	45â€%N-mâ€%(33â€%lbâ€%ft)
Front Seat Outer Cover Screw	2.5â€%N-mâ€%(22â€%lbâ€%in)
Rear Seat Back Cushion Bolt	24â€%N-mâ€%(18â€%lbâ€%ft)
Rear Seat Back Cushion Bolt	22â€%N-mâ€%(16â€%lbâ€%ft)
Rear Seat Back Cushion Latch Bolt	11â€%N-mâ€%(97â€%lbâ€%in)
Rear Seat Back Cushion Nut	24â€%N-mâ€%(18â€%lbâ€%ft)
Rear Seat Cushion Hinge Pivot Bolt	30.5â€%N-mâ€%(22.5â€%lbâ€%ft)