

- [Manuals](#)
- [I GEN](#)
- [II GEN](#)
- [III GEN](#)
- [IV GEN](#)
- [New](#)
- [Top](#)
- [Sitemap](#)
- [Contacts](#)
- [Search](#)



Kia Sportage
CAR MANUALS
TECHNICAL INFO


Kia Sportage: Balance Shaft & Oil Pump: Components and Components Location



[Third generation SL \(2010–2016\)](#) / [Kia Sportage SL Service & Repair Manual](#) / [Engine Mechanical System](#) / [Lubrication System](#) / Balance Shaft & Oil Pump: Components and Components Location



Components

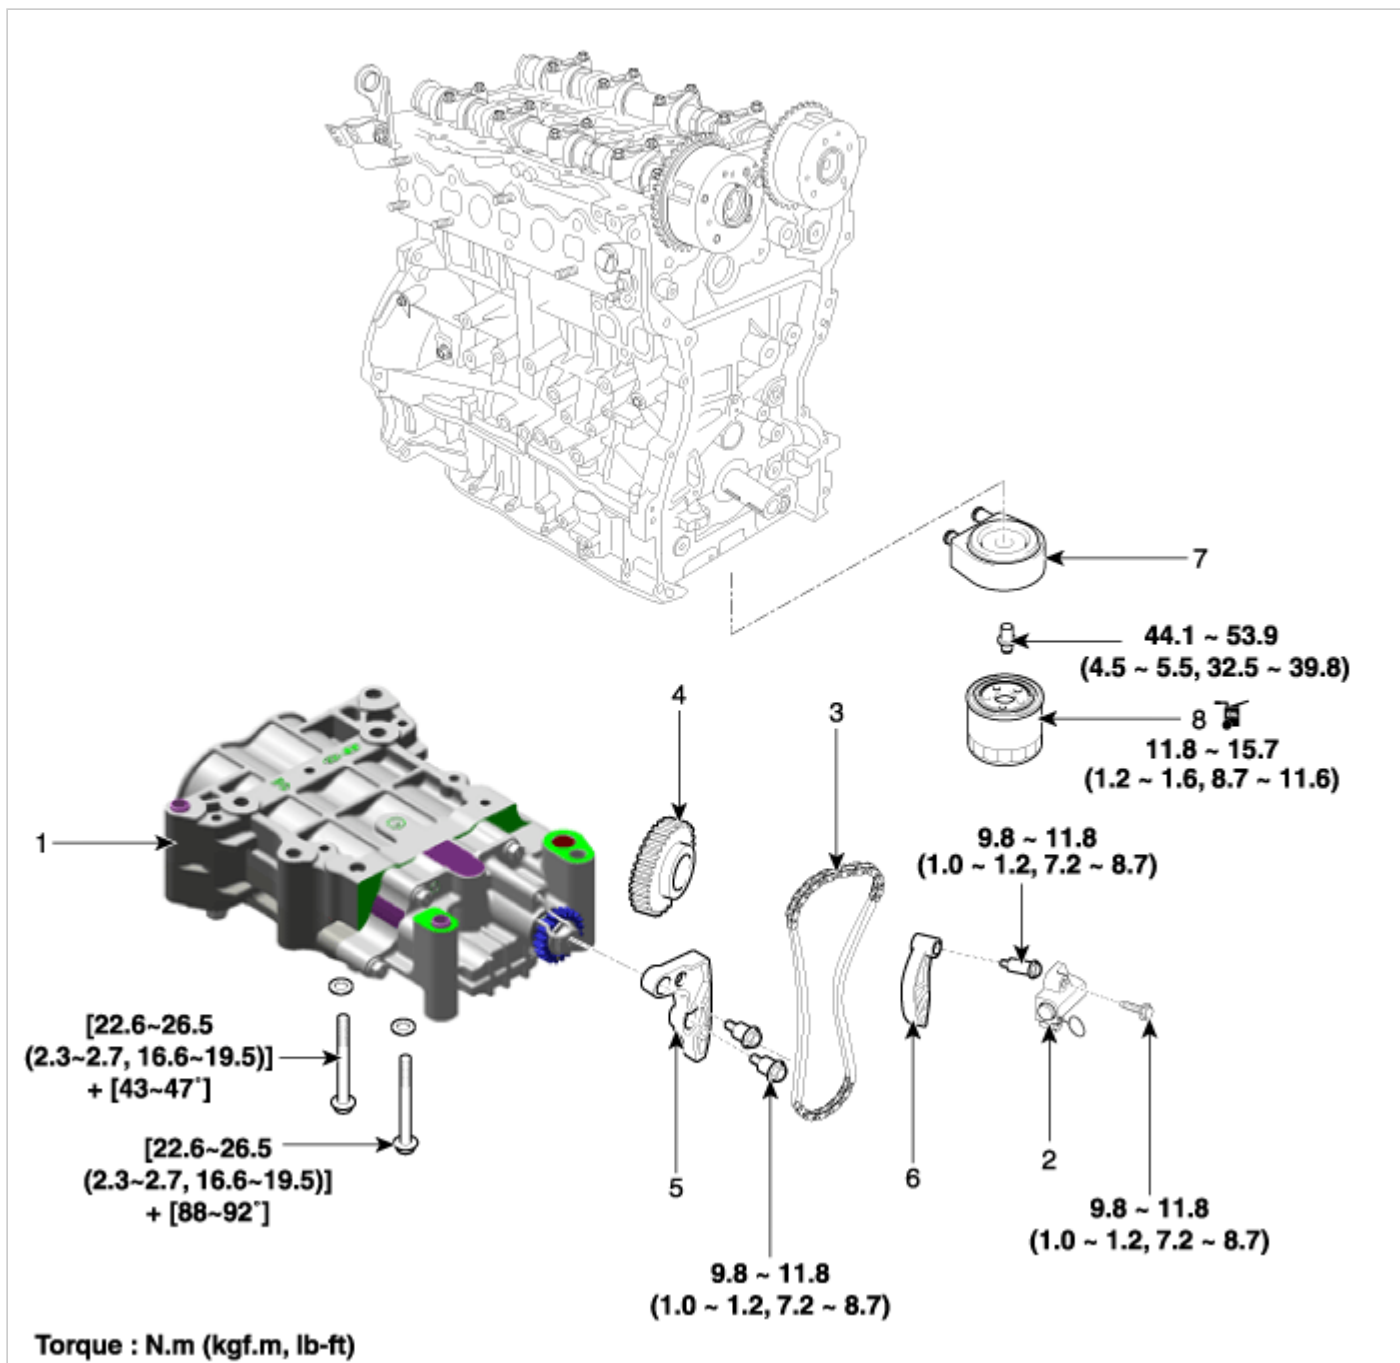

1. Balance shaft & oil pump assembly
2. Balance shaft chain tensioner
3. Balance shaft chain
4. Balance shaft chain sprocket

5. Balance shaft chain guide
6. Balance shaft chain tensioner arm
7. Oil cooler
8. Oil filter

« Engine Oil: Repair procedures

Oil And Filter Replacement • Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, ir ...

Balance Shaft & Oil Pump: Repair procedures »

Removal BSM (Balance Shaft Module) Chain System 1. Remove the timing chain. (Refer to Timing System in this group) 2. Install a stopper pin (A) after compressing the balance shaft chain tens ...


Other Information:

[Tire traction](#)

Tire traction can be reduced if you drive on worn tires, tires that are improperly inflated or on slippery road surfaces. Tires should be replaced when tread wear indicators appear. Slow down when ...

[Windshield Deicer Switch: Repair procedures](#)

Removal 1. Disconnect the negative (-) battery terminal. 2. Remove the center fascia panel. (Refer to BE - "Audio") 3. Remove the heater and A/C controller (A) after disconnecting the con ...

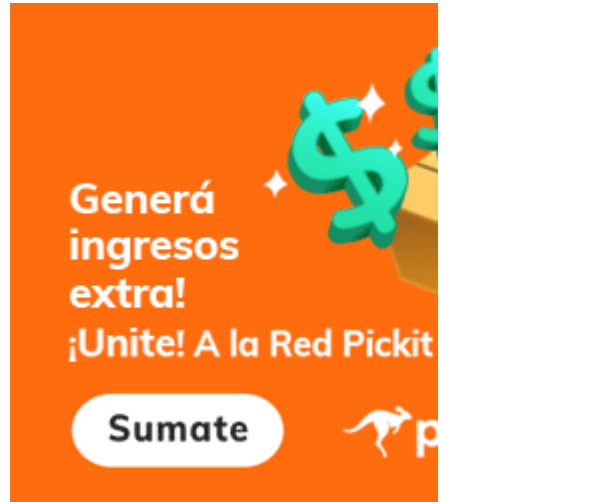

Categories

- [Home](#)
- [Kia Sportage QL \(2015-2019\) Owners Manual](#)
- [Kia Sportage QL \(2015-2019\) Service Manual](#)
- [Kia Sportage SL 2010-2016 Owners Manual](#)
- [Kia Sportage SL 2010-2016 Service Manual](#)



Copyright © www.kispmanual.com 2014-2020