


1.5l petrol engine , DADA,DPCA

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

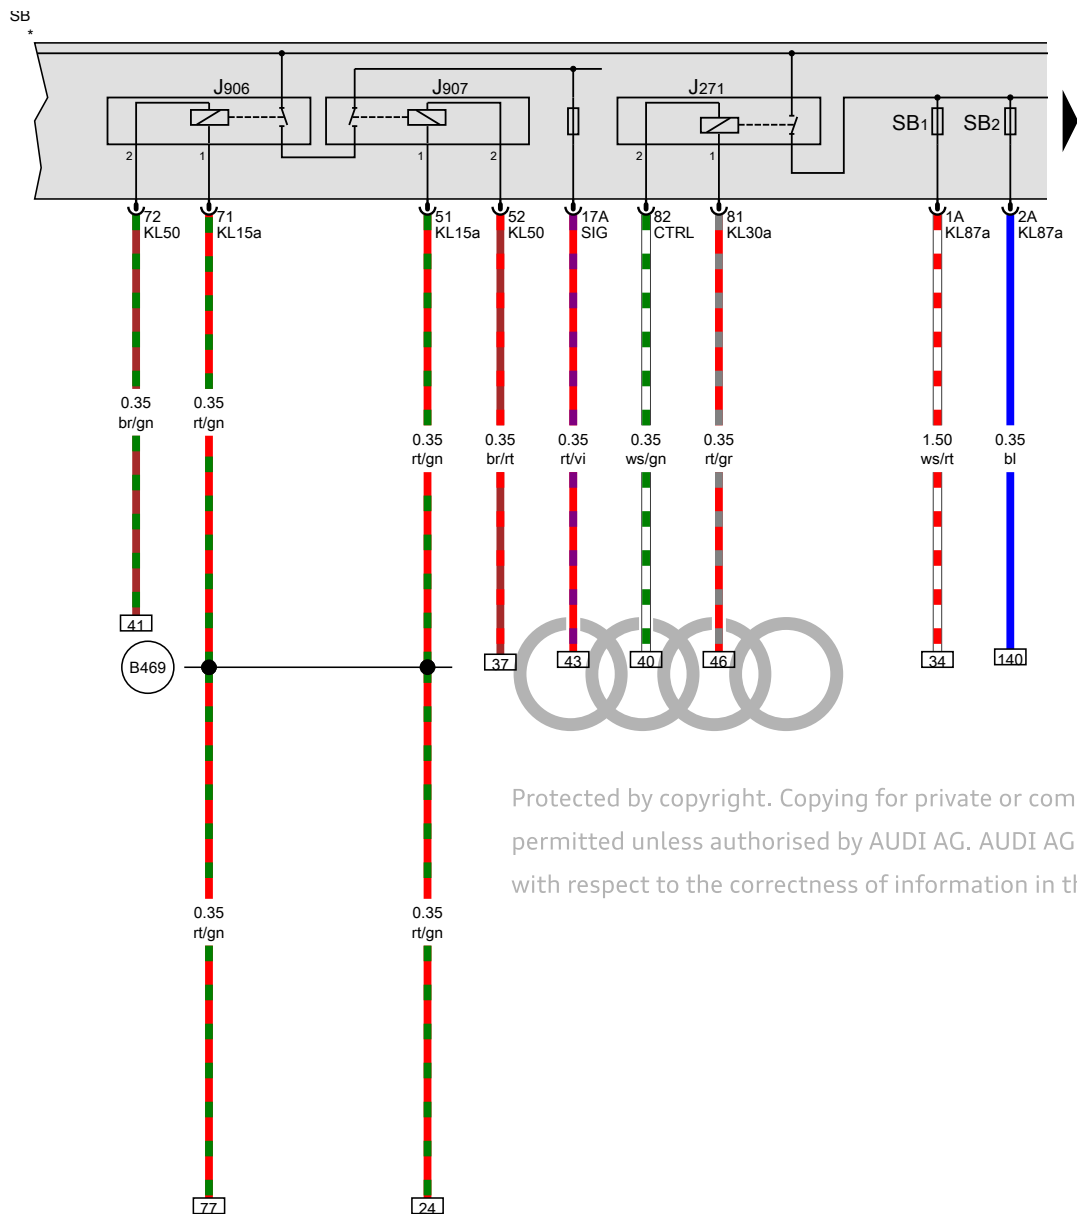

Main relay, Starter relay 1, Starter relay 2, Fuse holder B


- J271 Main relay
- J906 Starter relay 1
- J907 Starter relay 2
- SB Fuse holder B
- SB1 Fuse 1 on fuse holder B
- SB2 Fuse 2 on fuse holder B

B469 Connection 5, in main wiring harness

* see applicable current flow diagram for fuses in engine compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

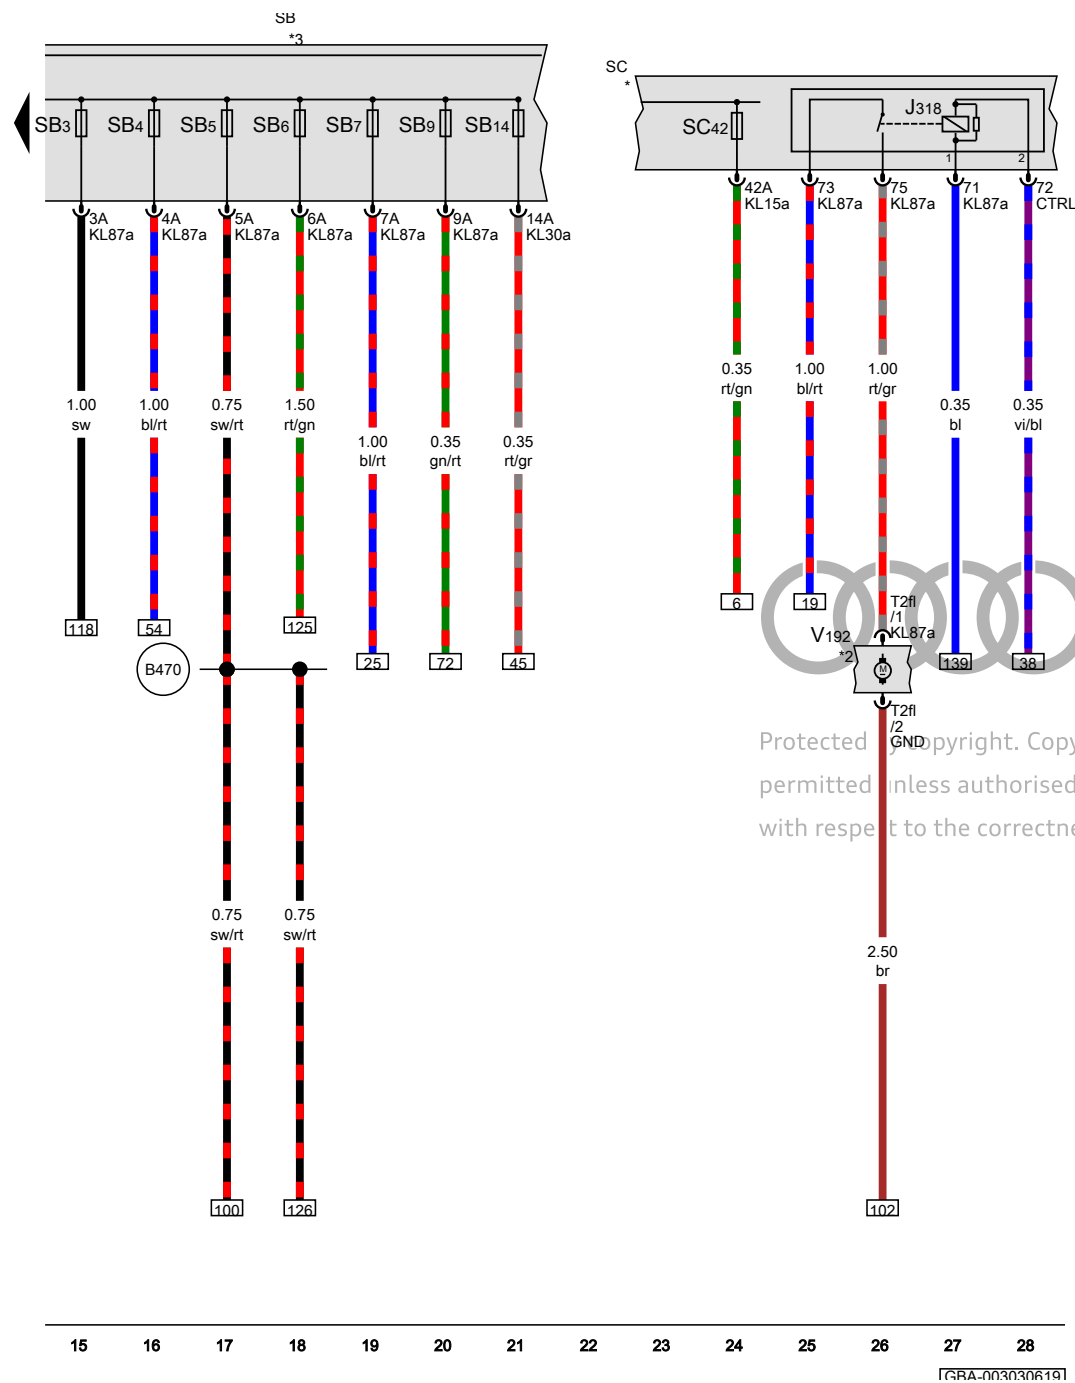

Vacuum pump relay, Fuse holder B, Fuse holder C, Vacuum pump for brakes

- J318 Vacuum pump relay
- SB Fuse holder B
- SB3 Fuse 3 on fuse holder B
- SB4 Fuse 4 on fuse holder B
- SB5 Fuse 5 on fuse holder B
- SB6 Fuse 6 on fuse holder B
- SB7 Fuse 7 on fuse holder B
- SB9 Fuse 9 on fuse holder B
- SB14 Fuse 14 on fuse holder B
- SC Fuse holder C
- SC42 Fuse 42 on fuse holder C
- T2fl 2-pin connector, black
- V192 Vacuum pump for brakes


B470 Connection 6, in main wiring harness

- * see applicable current flow diagram for fuses in interior
- *2 Pre-wired component
- *3 see applicable current flow diagram for fuses in engine compartment


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Engine/motor control unit

- J623 Engine/motor control unit
 T94a 94-pin connector, black
 317 Earth connection 7, in engine compartment wiring harness
 673 Earth point 3, on front of left longitudinal member
 D39 Connection 1, in engine prewiring harness

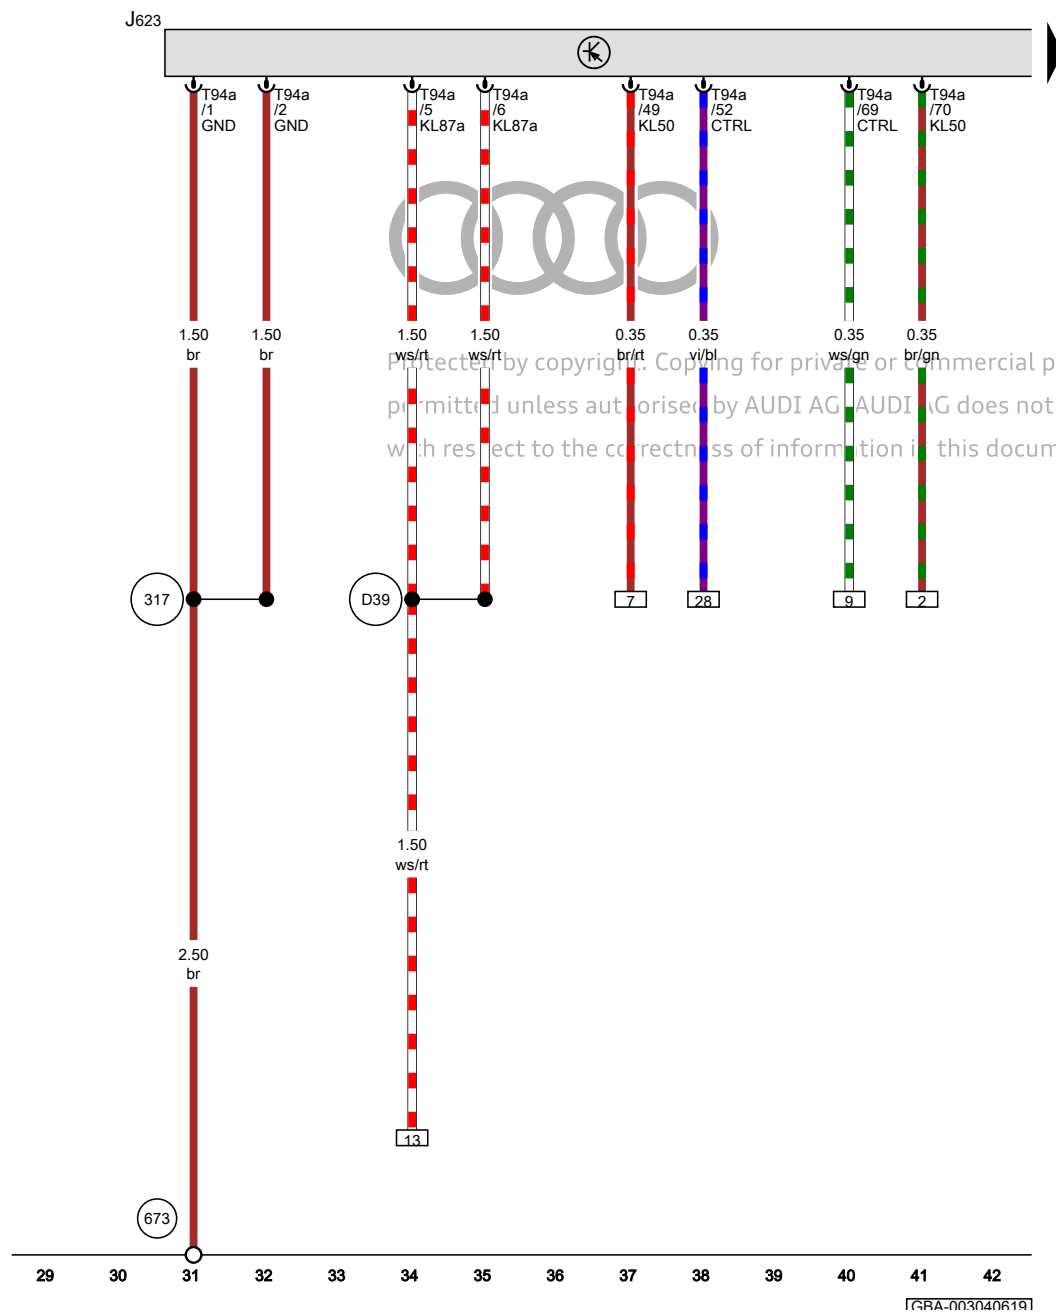

16BA-0030406101

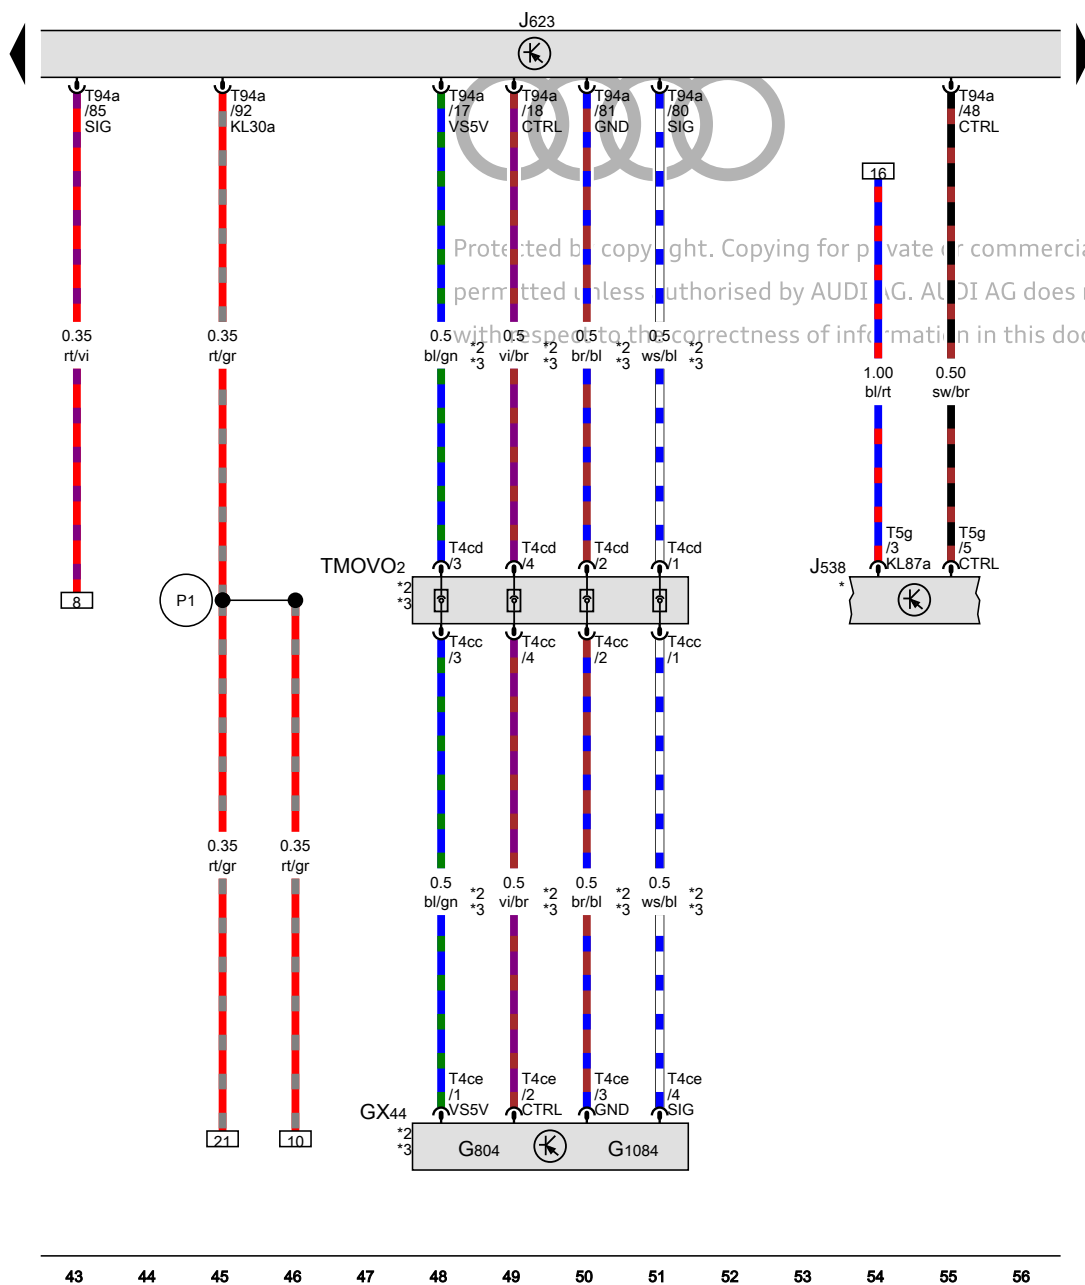

Pressure sensor for activated charcoal filter air flushing,
Fuel pump control unit, Engine/motor control unit


- GX44 Pressure sensor for activated charcoal filter air flushing
- G804 Pressure sensor for activated charcoal filter system
- G1084 Temperature sensor for activated charcoal filter air flushing
- J538 Fuel pump control unit
- J623 Engine/motor control unit
- T4cc 4-pin connector, black
- T4cd 4-pin connector, black
- T4ce 4-pin connector, black
- T5g 5-pin connector, black
- T94a 94-pin connector, black
- TMOVO2 Coupling point 2 for engine prewiring harness

P1 Positive connection (30), in battery fuse holder

- * see applicable current flow diagram for fuel system
- *2 For emission standard Euro 6 DG
- *3 For emission standard J18, Japan

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

7SBA-0030506191

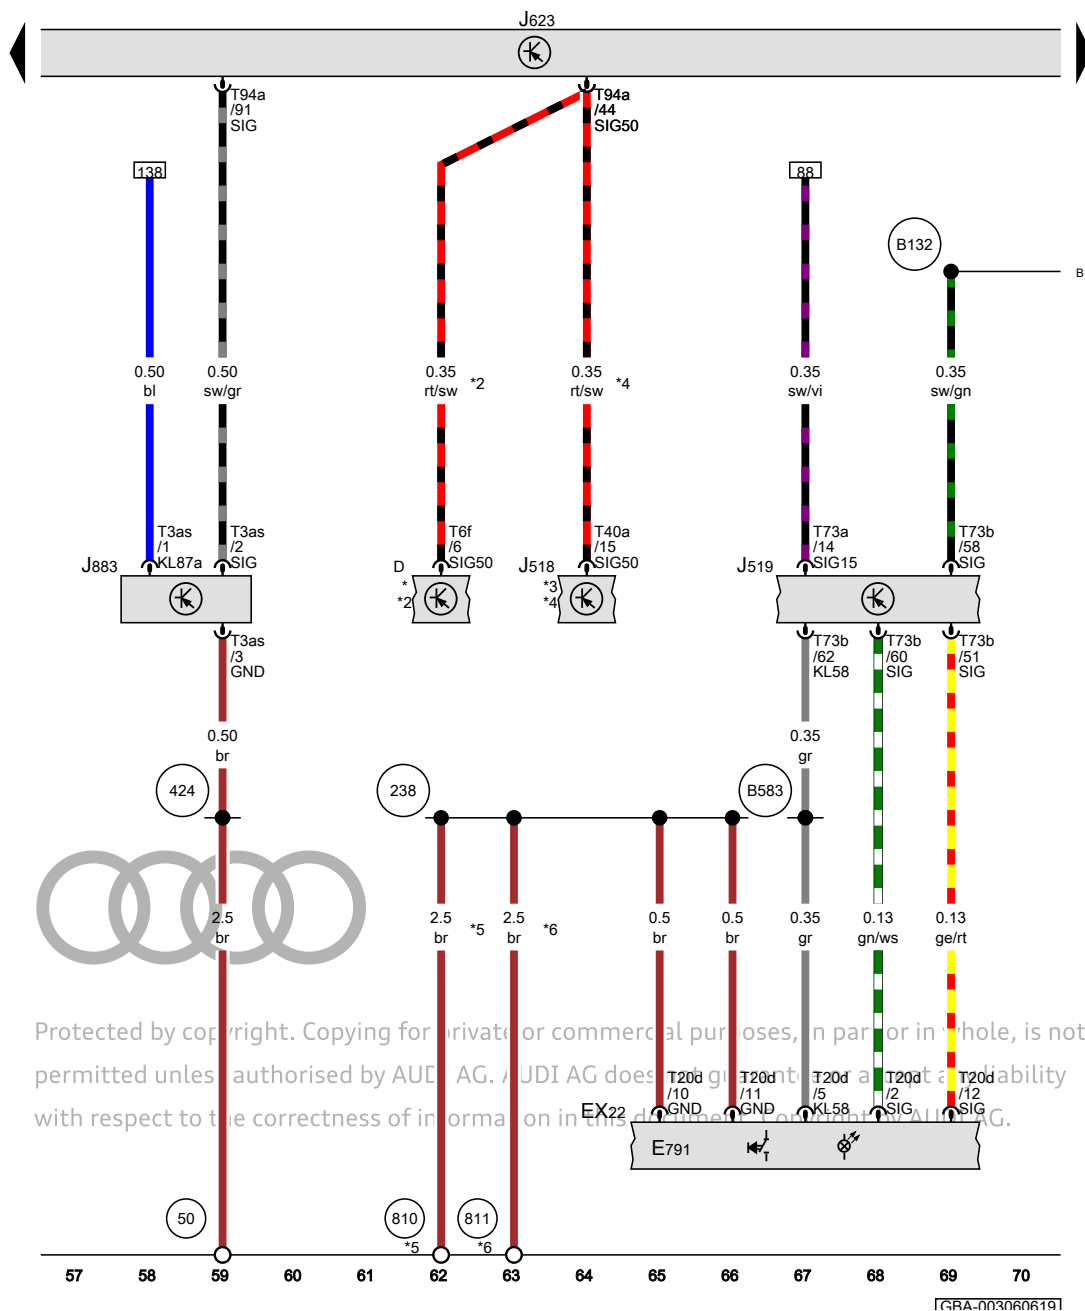


Ignition/starter switch, Centre switch module in dash panel, Operating unit 1 for driver and convenience functions, Entry and start authorisation control unit, Onboard supply control unit, Engine/motor control unit, Exhaust flap control unit

- D Ignition/starter switch
- EX22 Centre switch module in dash panel
- E791 Operating unit 1 for driver and convenience functions
- J518 Entry and start authorisation control unit
- J519 Onboard supply control unit
- J623 Engine/motor control unit
- J883 Exhaust flap control unit
- T3as 3-pin connector, black
- T6f 6-pin connector, black
- T20d 20-pin connector, black
- T40a 40-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black
- T94a 94-pin connector, black

- 50 Earth point, on left in luggage compartment
- 238 Earth connection 1, in interior wiring harness
- 424 Earth connection 2, in left rear end wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B132 Connection (number plate lights), in interior wiring harness
- B583 Positive connection (58), in interior wiring harness

- * see applicable current flow diagram for steering column electronics
- *2 For models with no start/stop system
- *3 see applicable current flow diagram for entry and start authorisation
- *4 For models with start/stop system
- *5 For left-hand drive models
- *6 For right-hand drive models


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

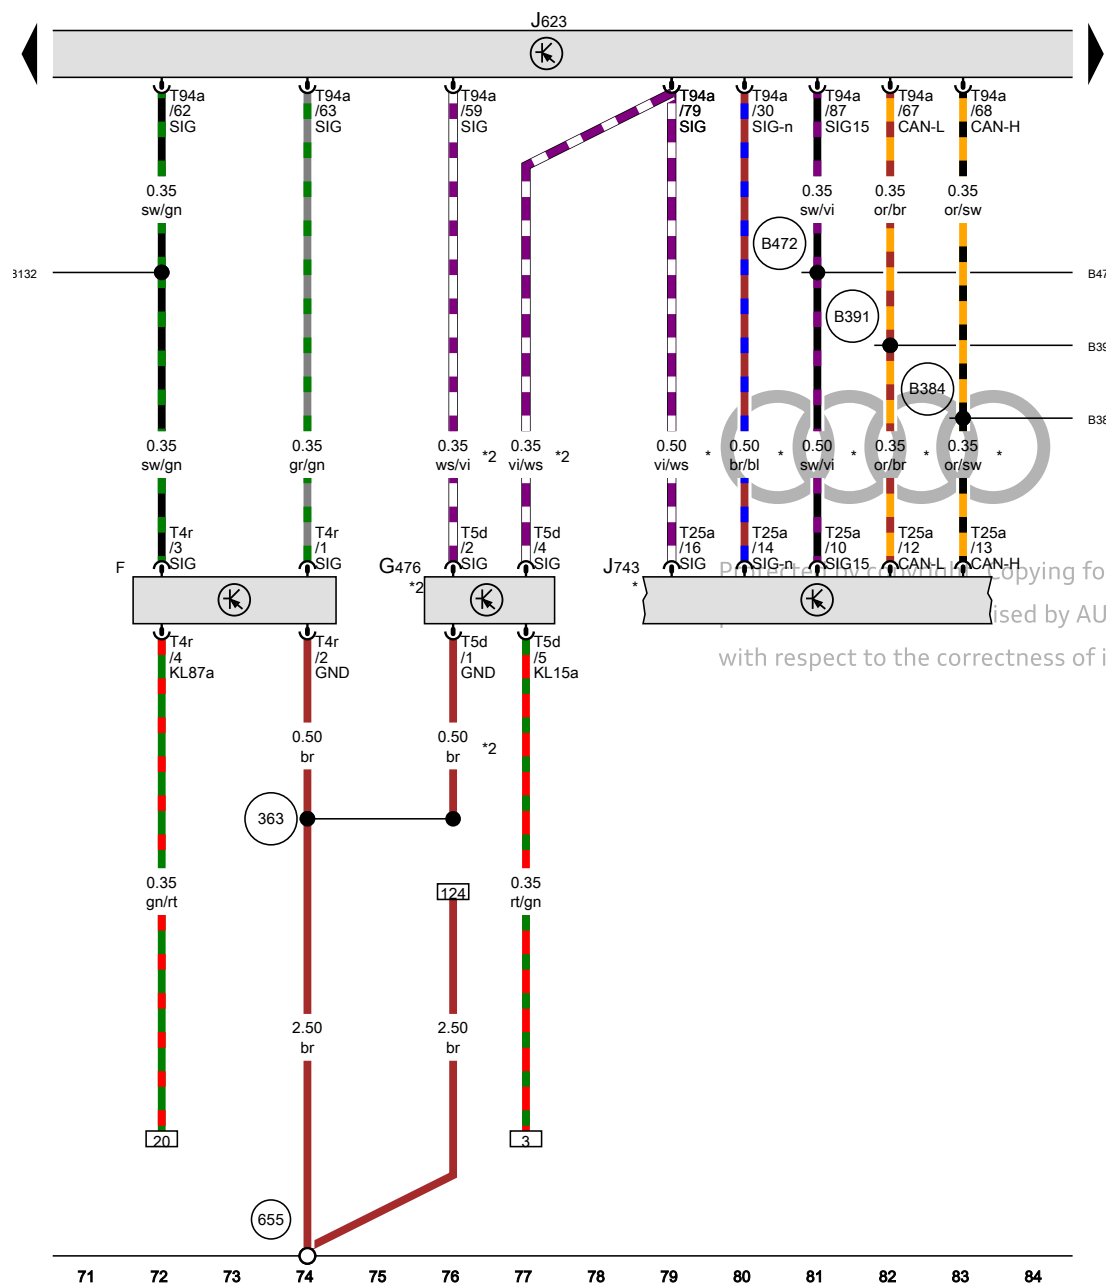

Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox

- F Brake light switch
- G476 Clutch position sender
- J623 Engine/motor control unit
- J743 Mechatronic unit for dual clutch gearbox
- T4r 4-pin connector, black
- T5d 5-pin connector, black
- T25a 25-pin connector, black
- T94a 94-pin connector, black
- 363 Earth connection 8, in engine compartment wiring harness
- 655 Earth point, on left headlight
- B132 Connection (number plate lights), in interior wiring harness
- B384 Connection 2 (powertrain CAN bus, high), in main wiring harness
- B391 Connection 2 (powertrain CAN bus, low), in main wiring harness
- B472 Connection 8, in main wiring harness
- * For models with dual clutch gearbox
- *2 For models with manual gearbox

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

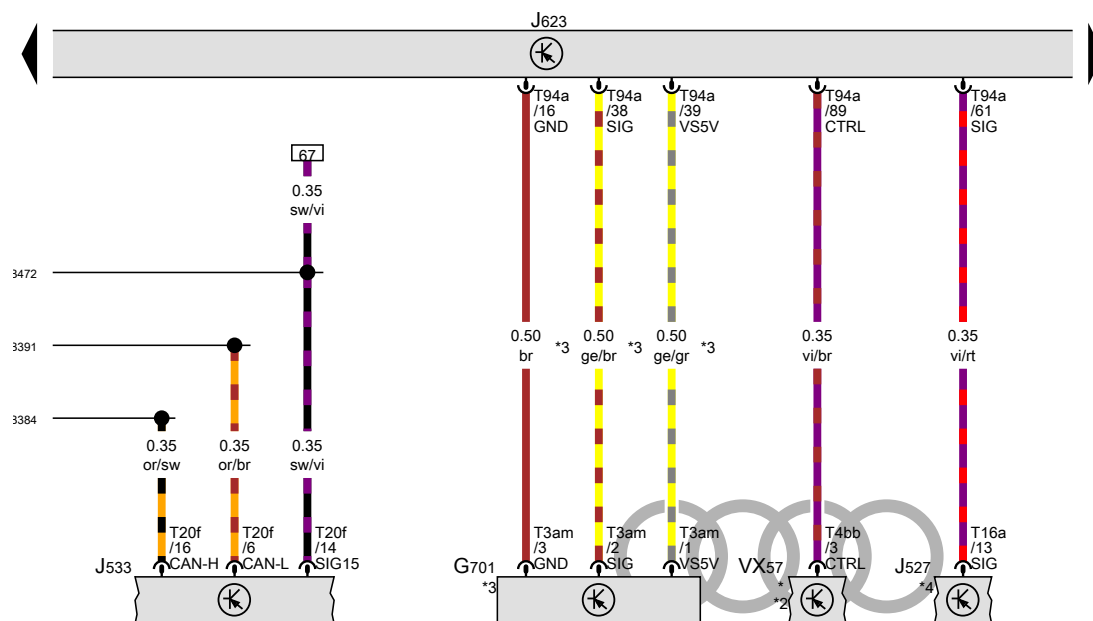

Gearbox neutral position sender, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Radiator fan


- G701 Gearbox neutral position sender
- J527 Steering column electronics control unit
- J533 Data bus diagnostic interface
- J623 Engine/motor control unit
- T3am 3-pin connector, black
- T4bb 4-pin connector, black
- T16a 16-pin connector, black
- T20f 20-pin connector, red
- T94a 94-pin connector, black
- VX57 Radiator fan

- B384 Connection 2 (powertrain CAN bus, high), in main wiring harness
- B391 Connection 2 (powertrain CAN bus, low), in main wiring harness
- B472 Connection 8, in main wiring harness

- * Pre-wired component
- *2 see applicable current flow diagram for radiator fan
- *3 For models with manual gearbox
- *4 see applicable current flow diagram for steering column electronics

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

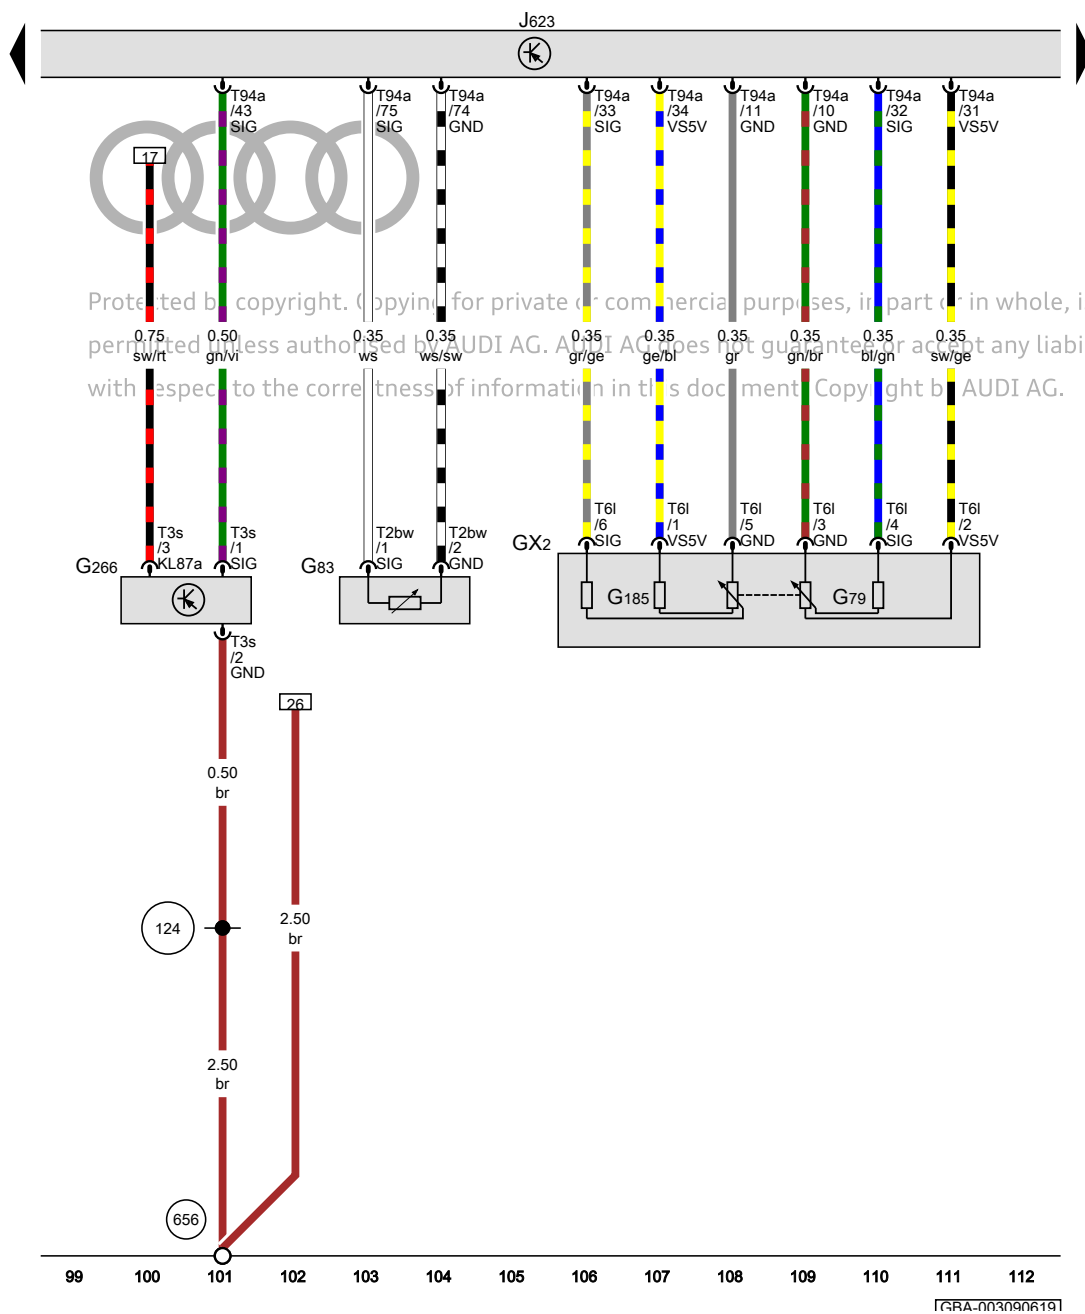

Accelerator pedal module, Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit

- GX2 Accelerator pedal module
- G79 Accelerator position sender
- G83 Radiator outlet coolant temperature sender
- G185 Accelerator position sender 2
- G266 Oil level and oil temperature sender
- J623 Engine/motor control unit
- T2bw 2-pin connector, black
- T3s 3-pin connector, black
- T6l 6-pin connector, black
- T94a 94-pin connector, black
- 124 Earth connection, in right side engine compartment wiring harness
- 656 Earth point, on right headlight

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

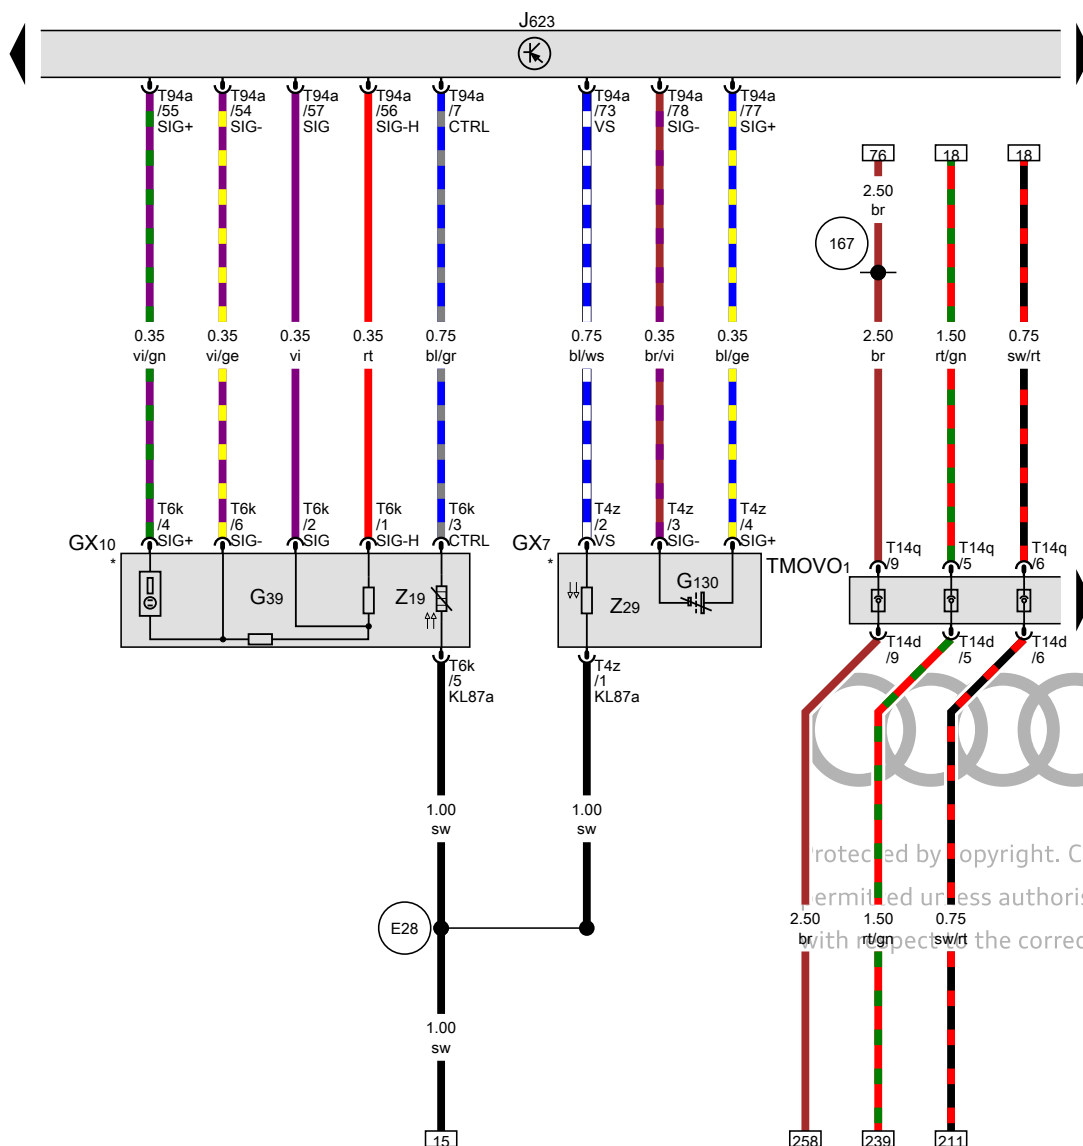

Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit


- GX7 Lambda probe 1 after catalytic converter
- GX10 Lambda probe 1 before catalytic converter
- G39 Lambda probe
- G130 Lambda probe after catalytic converter
- J623 Engine/motor control unit
- T4z 4-pin connector, black
- T6k 6-pin connector, black
- T14d 14-pin connector, grey
- T14q 14-pin connector, grey
- T94a 94-pin connector, black
- TMOVO1 Coupling point 1 for engine prewiring harness
- Z19 Lambda probe heater
- Z29 Lambda probe 1 heater after catalytic converter
- 167 Earth connection 4, in engine compartment wiring harness
- E28 Connection (Lambda probe heating), in Motronic wiring harness
- * Pre-wired component

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Engine/motor control unit


- J623 Engine/motor control unit
- T14d 14-pin connector, grey
- T14q 14-pin connector, grey
- T94a 94-pin connector, black
- TMOVO1 Coupling point 1 for engine prewiring harness
- B352 Positive connection 3 (87a) in main wiring harness

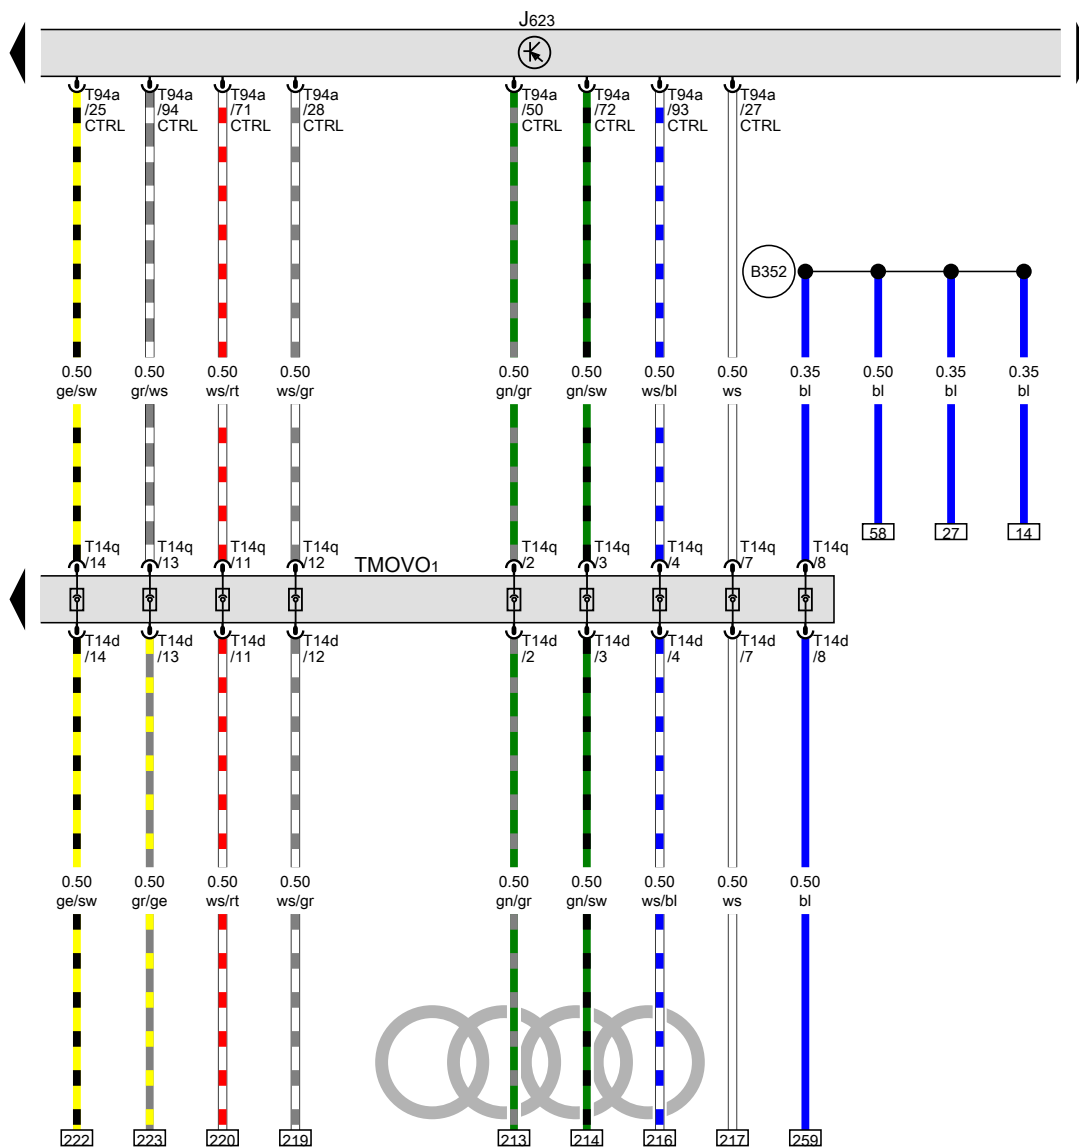

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright © AUDI AG.


76BA-0031106101

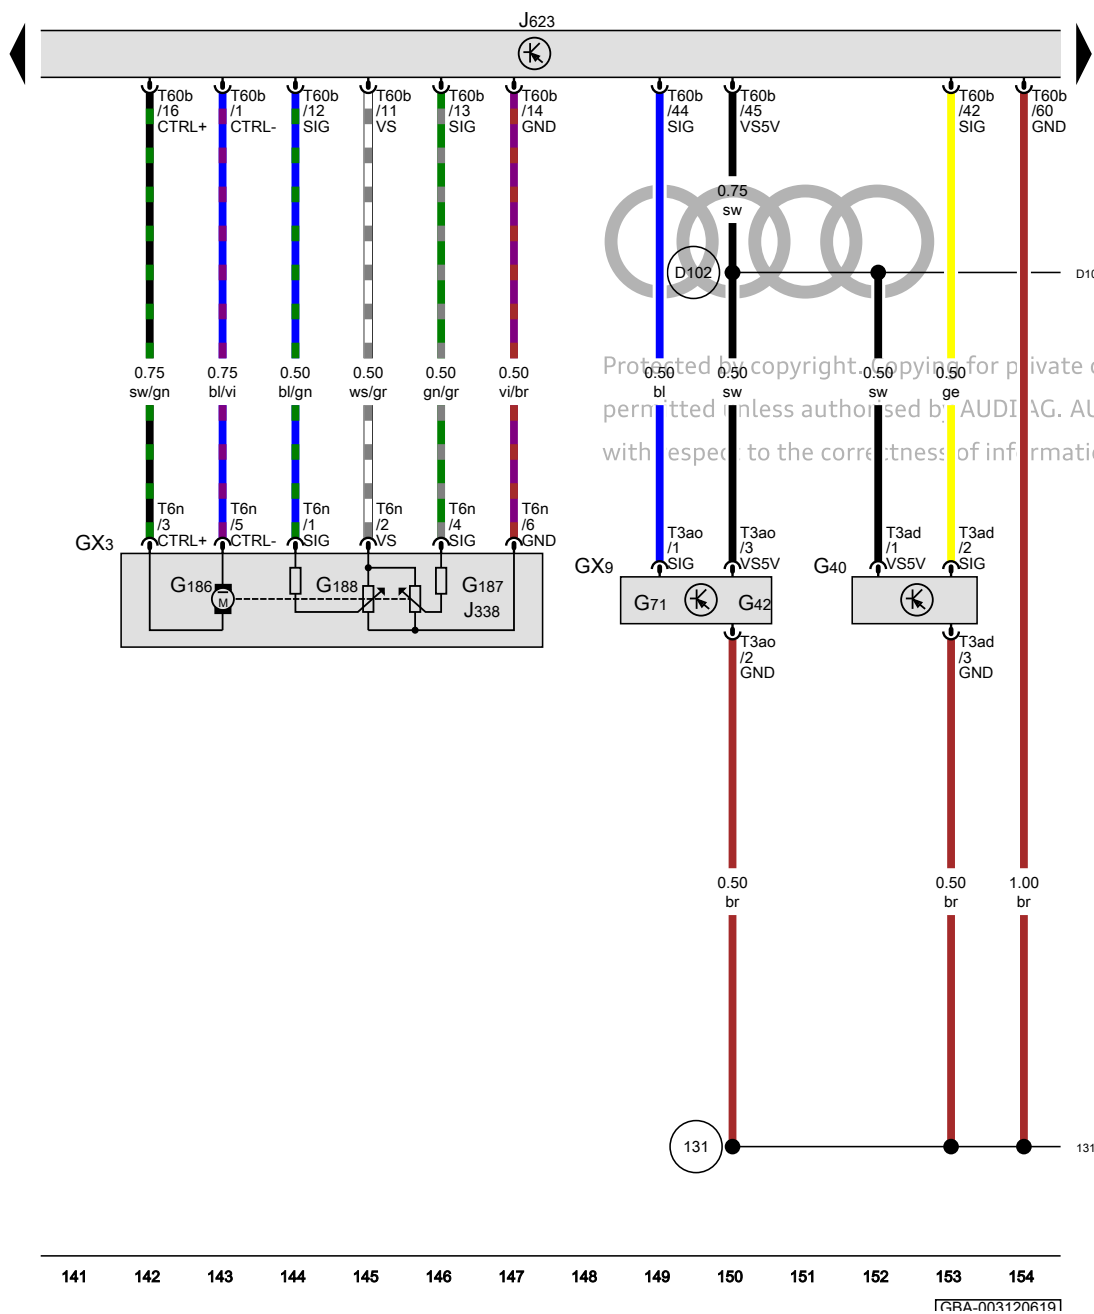

Throttle valve module, Intake manifold sender, Hall sender, Engine/motor control unit

- GX3 Throttle valve module
- GX9 Intake manifold sender
- G40 Hall sender
- G42 Intake air temperature sender
- G71 Intake manifold pressure sender
- G186 Throttle valve drive for electric throttle
- G187 Throttle valve drive angle sender 1 for electric throttle
- G188 Throttle valve drive angle sender 2 for electric throttle
- J338 Throttle valve module
- J623 Engine/motor control unit
- T3ad 3-pin connector, black
- T3ao 3-pin connector, black
- T6n 6-pin connector, black
- T60b 60-pin connector, black
- 131 Earth connection 2, in engine compartment wiring harness
- D102 Connection 2 in engine compartment wiring harness

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

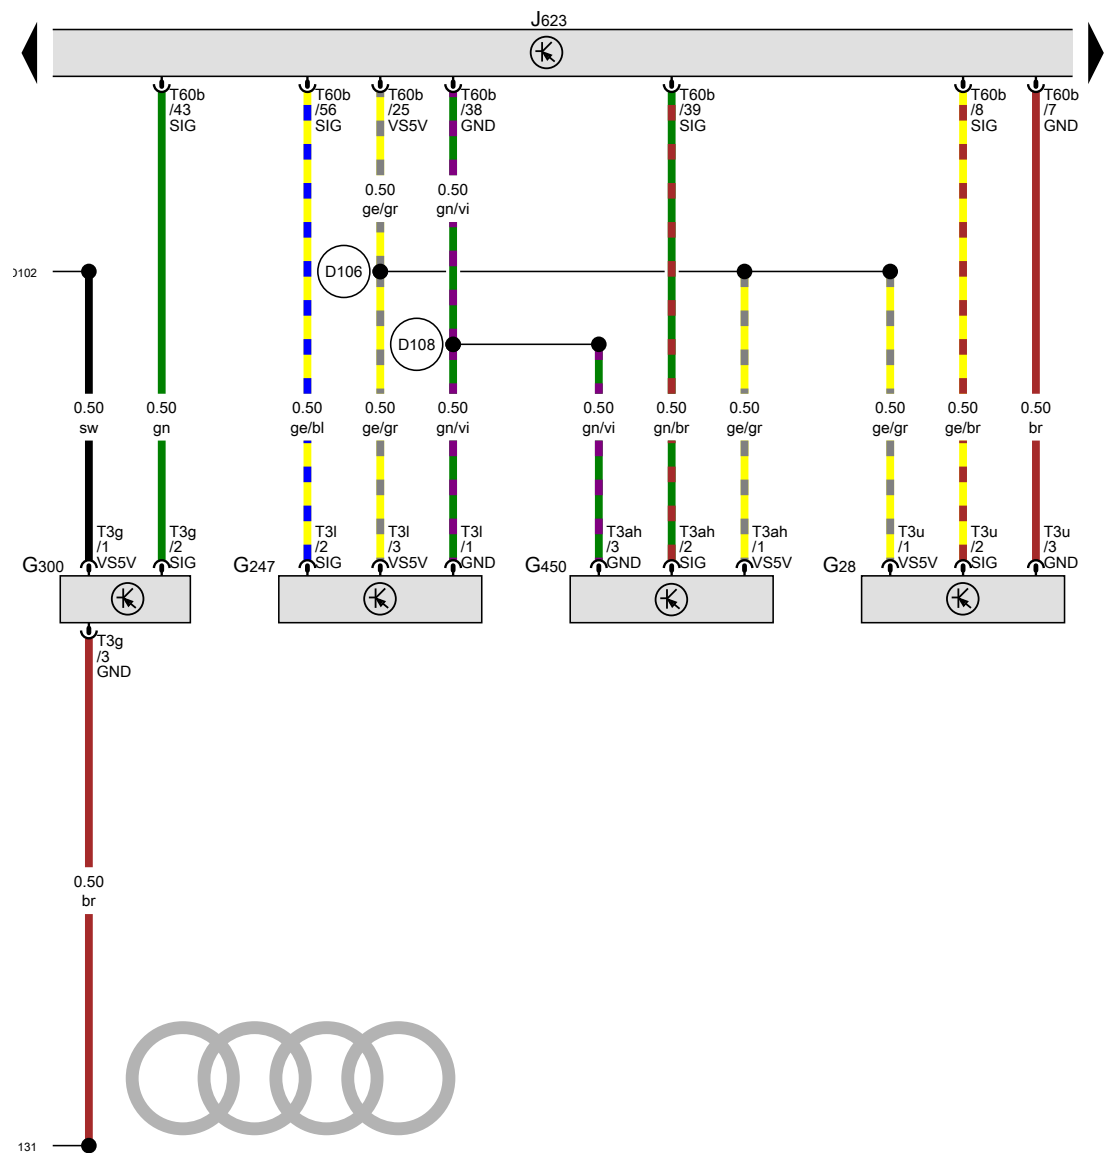

Engine speed sender, Fuel pressure sender, Hall sender 3, Exhaust gas pressure sensor 1, Engine/motor control unit


- G28 Engine speed sender
- G247 Fuel pressure sender
- G300 Hall sender 3
- G450 Exhaust gas pressure sensor 1
- J623 Engine/motor control unit
- T3ah 3-pin connector, black
- T3g 3-pin connector, black
- T3l 3-pin connector, black
- T3u 3-pin connector, black
- T60b 60-pin connector, black

- 131 Earth connection 2, in engine compartment wiring harness
- D102 Connection 2 in engine compartment wiring harness
- D106 Connection 4 in engine compartment wiring harness
- D108 Connection 6 in engine compartment wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[GSA-003130619]

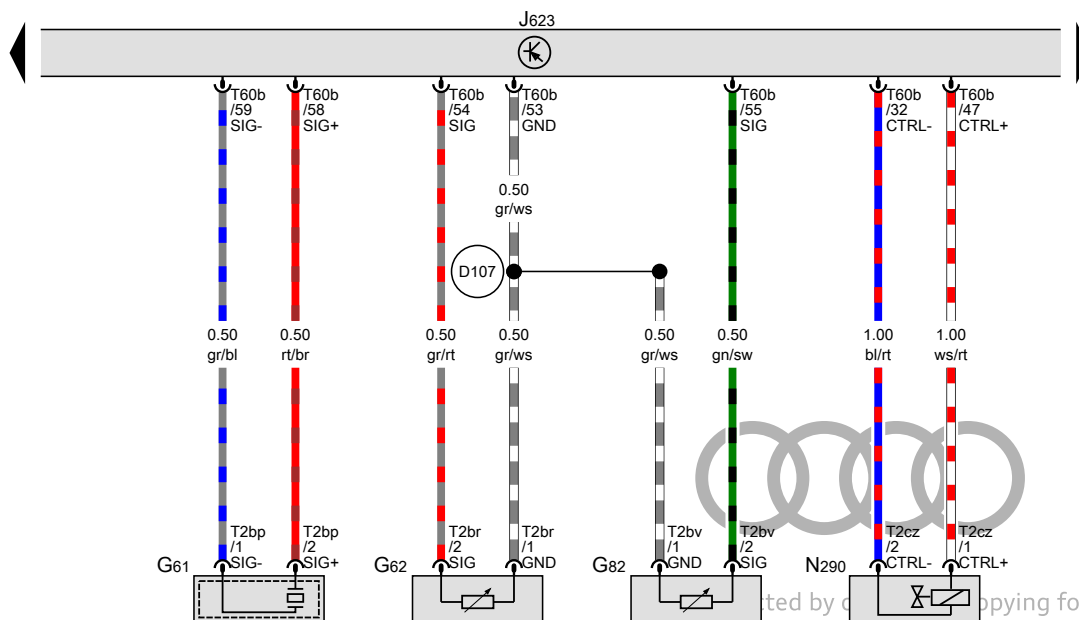


Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Fuel metering valve

- G61 Knock sensor 1
- G62 Coolant temperature sender
- G82 Engine outlet coolant temperature sender
- J623 Engine/motor control unit
- N290 Fuel metering valve
- T2bp 2-pin connector, black
- T2br 2-pin connector, black
- T2bv 2-pin connector, black
- T2cz 2-pin connector, black
- T60b 60-pin connector, black
- D107 Connection 5 in engine compartment wiring harness

Copyright by Audi AG. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

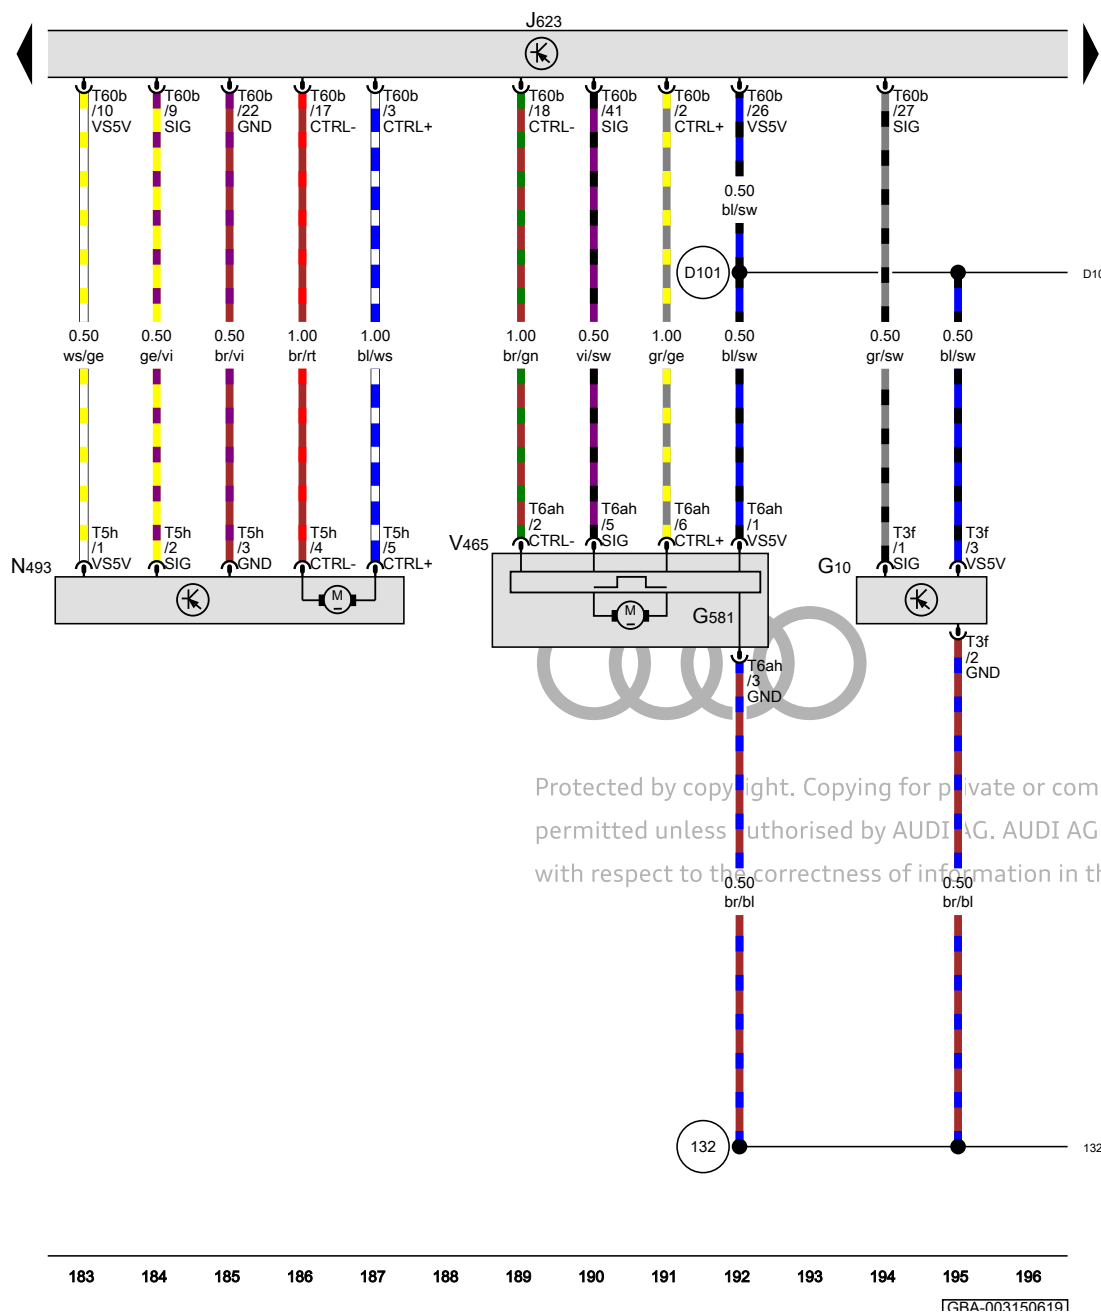

Oil pressure sender, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner

- G10 Oil pressure sender
- G581 Position sender for charge pressure positioner
- J623 Engine/motor control unit
- N493 Actuator for engine temperature regulation
- T3f 3-pin connector, black
- T5h 5-pin connector, brown
- T6ah 6-pin connector, grey
- T60b 60-pin connector, black
- V465 Charge pressure positioner
- 132 Earth connection 3, in engine compartment wiring harness
- D101 Connection 1 in engine compartment wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

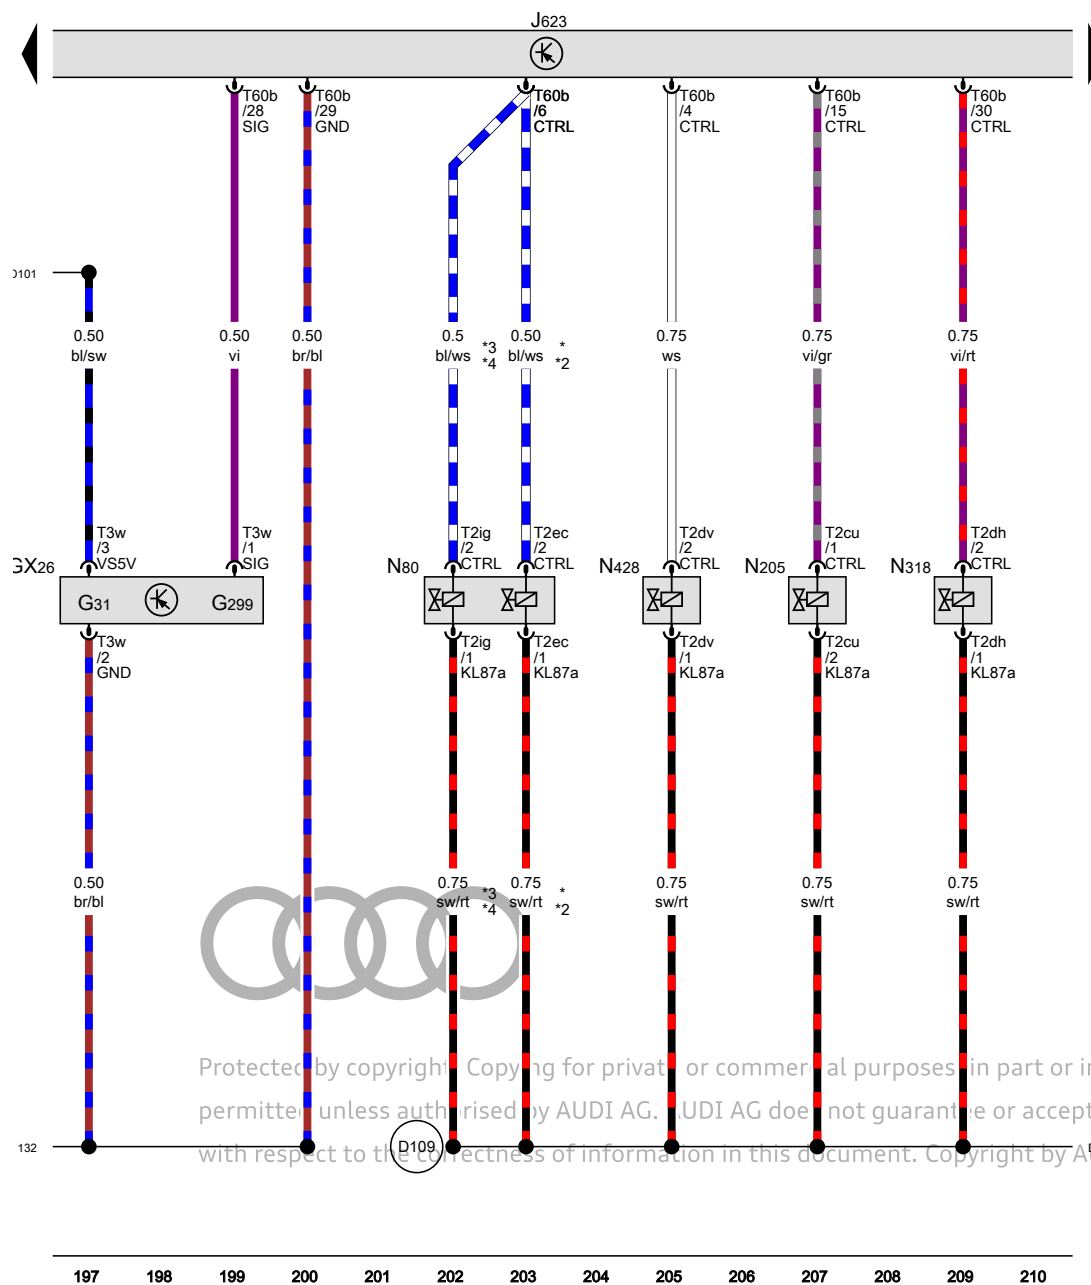

Charge pressure sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control

- GX26 Charge pressure sender
- G31 Charge pressure sender
- G299 Intake air temperature sender 2
- J623 Engine/motor control unit
- N80 Activated charcoal filter solenoid valve 1
- N205 Camshaft control valve 1
- N318 Exhaust camshaft control valve 1
- N428 Valve for oil pressure control
- T2cu 2-pin connector, black
- T2dh 2-pin connector, black
- T2dv 2-pin connector, black
- T2ec 2-pin connector, black
- T2ig 2-pin connector, black
- T3w 3-pin connector, black
- T60b 60-pin connector, black


 
132 Earth connection 3, in engine compartment wiring harness

D101 Connection 1 in engine compartment wiring harness

D109 Connection 7 in engine compartment wiring harness

- * Not for emission standard Euro 6 DG
- *2 Not for emission standard J18, Japan
- *3 For emission standard Euro 6 DG
- *4 For emission standard J18, Japan

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

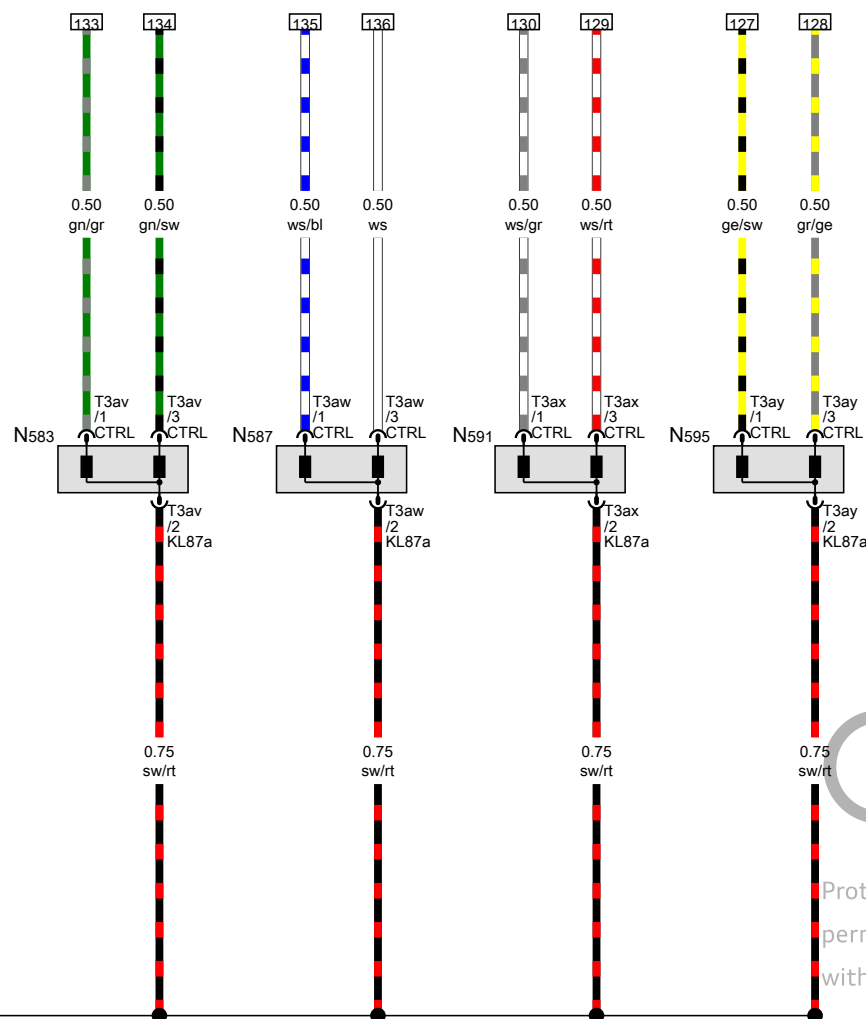

Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3

J623	Engine/motor control unit
N583	Inlet cam actuator for cylinder 2
N587	Exhaust cam actuator for cylinder 2
N591	Inlet cam actuator for cylinder 3
N595	Exhaust cam actuator for cylinder 3
T3av	3-pin connector, black
T3aw	3-pin connector, black
T3ax	3-pin connector, black
T3ay	3-pin connector, black
D109	Connection 7 in engine compartment wiring harness


2109

211	212	213	214	215	216	217	218	219	220	221	222	223	224
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

GBA-003170619

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Protected by copyright for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

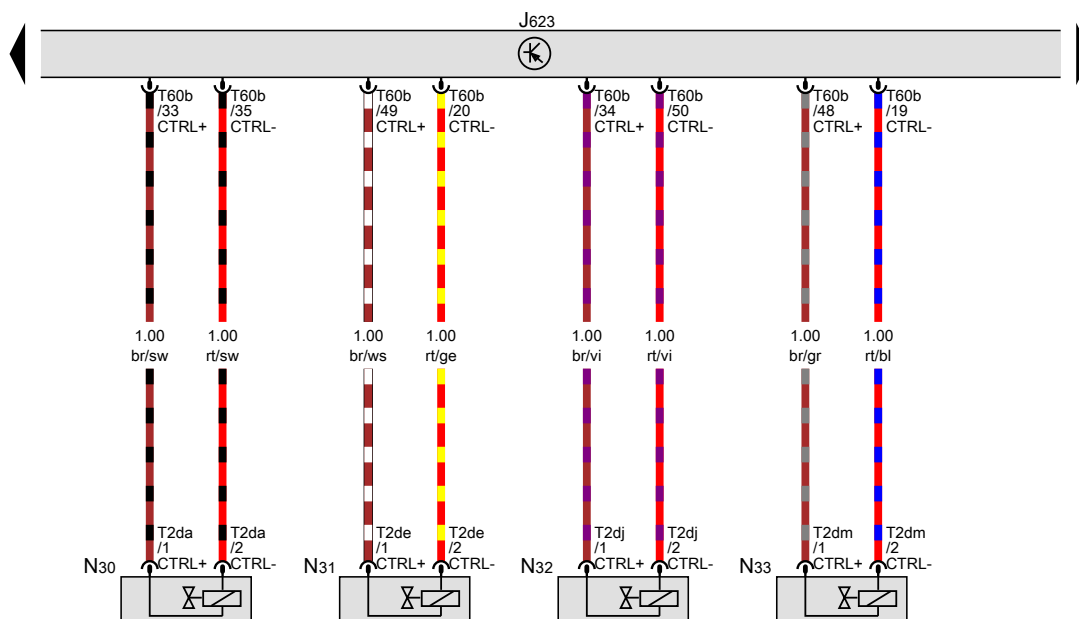


Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4

- J623 Engine/motor control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- T2da 2-pin connector, black
- T2de 2-pin connector, black
- T2dj 2-pin connector, black
- T2dm 2-pin connector, black
- T60b 60-pin connector, black



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = violet
- ge = yellow
- or = orange
- rs = pink

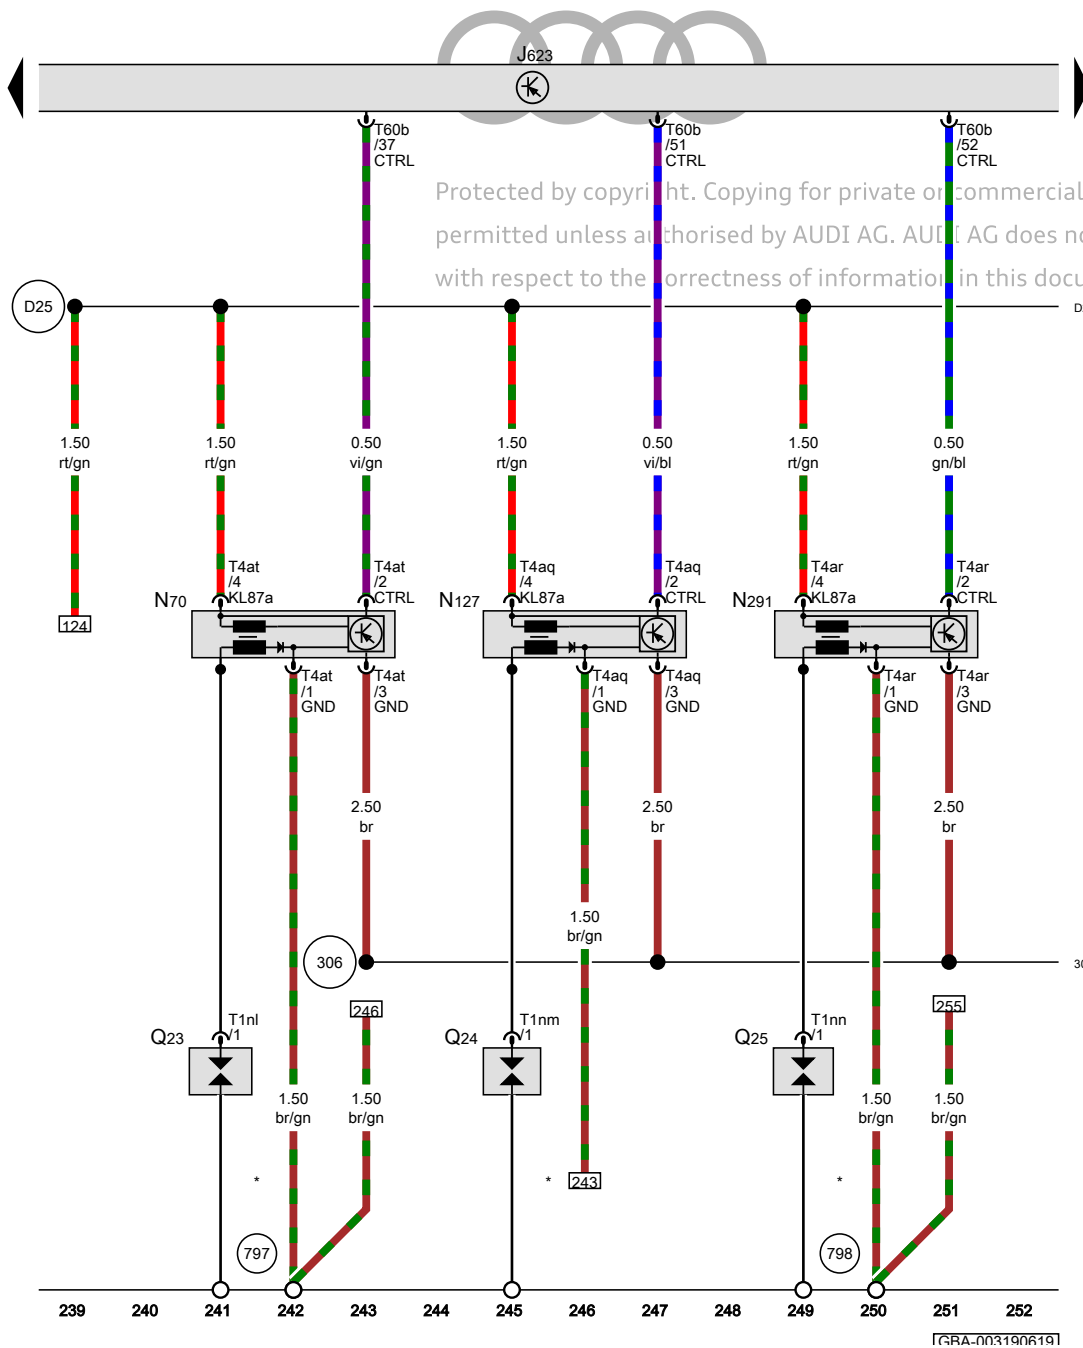

Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3

J623 Engine/motor control unit
N70 Ignition coil 1 with output stage
N127 Ignition coil 2 with output stage
N291 Ignition coil 3 with output stage
Q23 Spark plug 1
Q24 Spark plug 2
Q25 Spark plug 3
T1nl 1-pin connector, black
T1nm 1-pin connector, black
T1nn 1-pin connector, black
T4aq 4-pin connector, black
T4ar 4-pin connector, black
T4at 4-pin connector, black
T60b 60-pin connector, black

306 Earth connection (ignition coils), in engine prewiring harness
797 Earth point on cylinder block for ignition coil, cylinders 1 and 2
798 Earth point on cylinder block for ignition coil, cylinders 3 and 4
D25 Positive connection (15), in engine prewiring harness
* Earth supply via housing

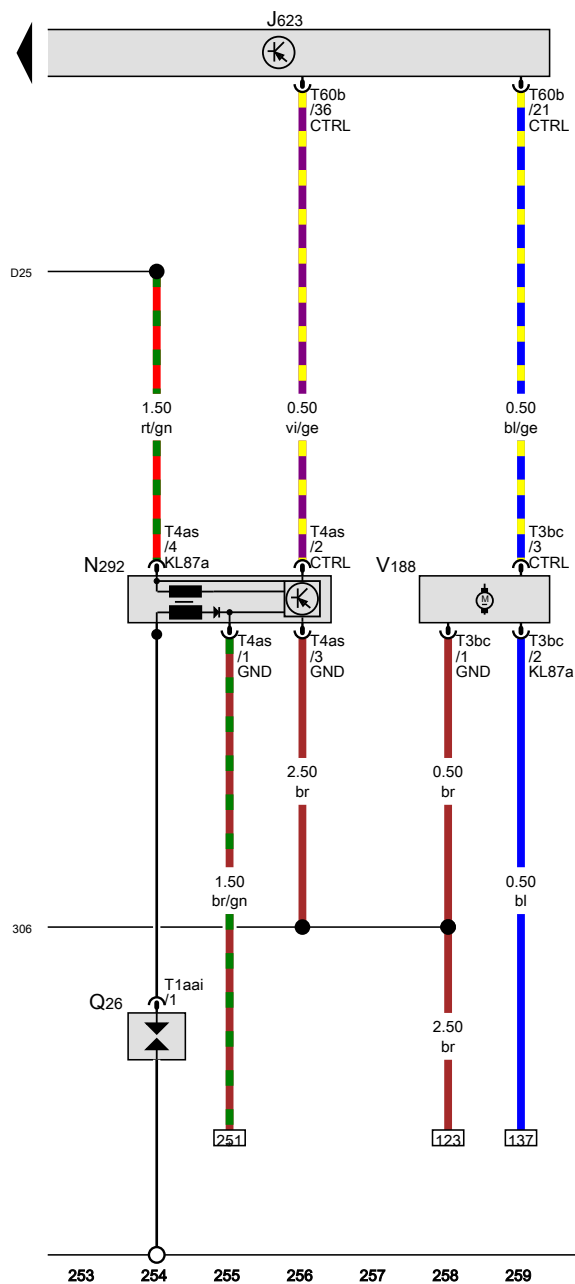

Engine/motor control unit, Ignition coil 4 with output stage, Spark plug 4, Charge air cooling pump

- J623 Engine/motor control unit
- N292 Ignition coil 4 with output stage
- Q26 Spark plug 4
- T1aai 1-pin connector, black
- T3bc 3-pin connector, black
- T4as 4-pin connector, black
- T60b 60-pin connector, black
- V188 Charge air cooling pump
- 306 Earth connection (ignition coils), in engine prewiring harness
- D25 Positive connection (15), in engine prewiring harness
- * Earth supply via housing

