



Case and Associated Parts

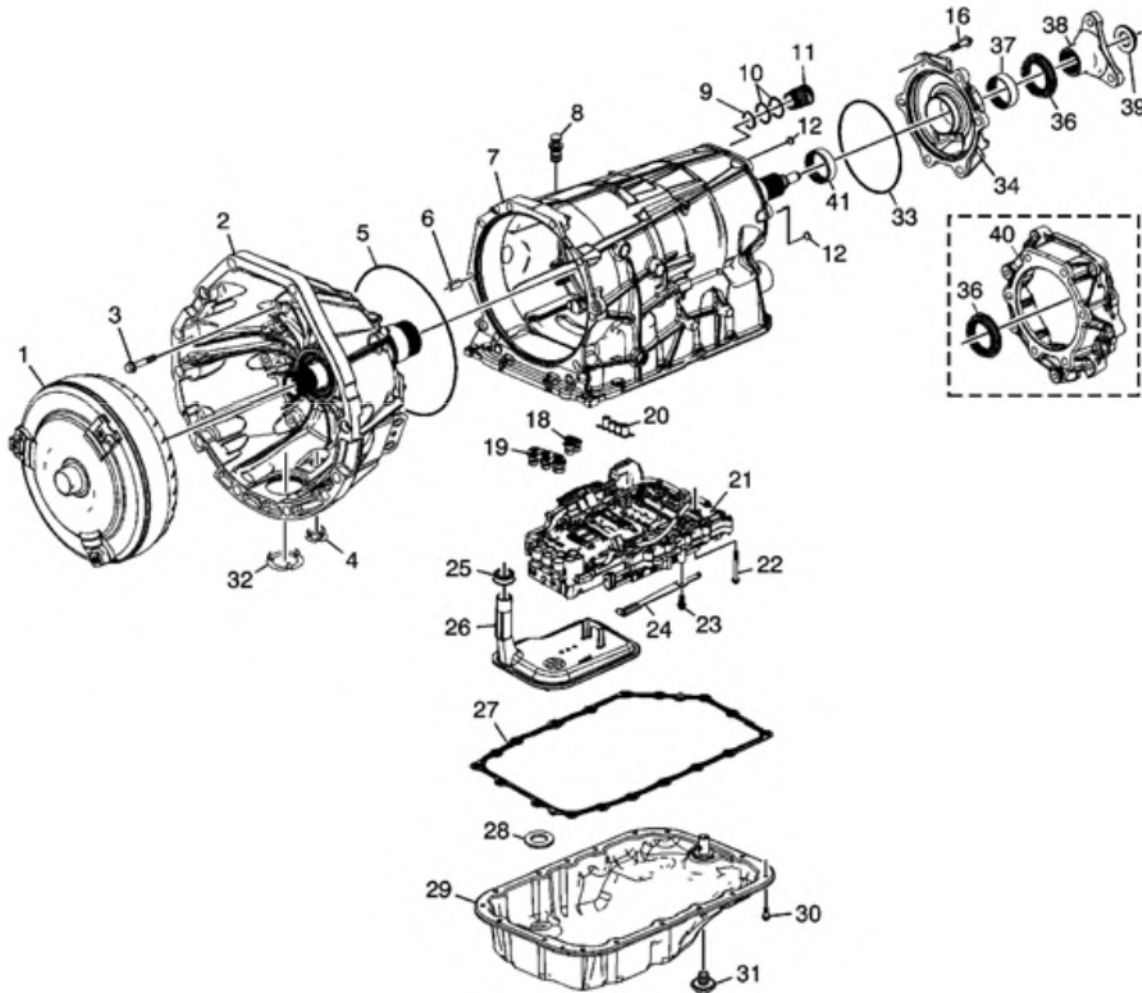

- (1) Torque Converter Assembly
- (2) Torque Converter (with Fluid Pump) Housing Assembly - Model Dependent
- (3) Bolt, M10 x 50 mm
- (4) Torque Converter Housing Access Hole Cover - Model Dependent
- (5) A/Trans Fluid Pump Seal
- (6) Torque Converter Housing Locator Pin
- (7) A/Trans Case Assembly
- (8) Trans Fluid Fill Tube Plug Assembly
- (9) A/Trans Connector Seal
- (10) A/Trans Connector (O-ring) Seal
- (11) A/Trans Electrical Connector Passage Sleeve

- (12) A/Trans Case Plug
- (16) Bolt, M10 x 40 mm - Model Dependent
- (18) A/Trans Fluid Pump Seal Assembly
- (19) A/Trans Fluid Pump Seal Assembly
- (20) Center Support Fluid Passage Seal Assembly
- (21) Control (with Body and Valve) Valve Assembly
- (22) Bolt, M5 x 73 mm
- (23) Bolt, M6 x 14.5 mm
- (24) Manual Shaft Detent Assembly
- (25) A/Trans Fluid Filter Seal Assembly
- (26) A/Trans Fluid Filter Assembly
- (27) A/Trans Fluid Pan Gasket
- (28) A/Trans Fluid Pan Magnet
- (29) A/Trans Fluid Pan Assembly
- (30) Bolt, M6 x 20 mm
- (31) Trans Oil Level Check Plug
- (32) Torque Converter Housing Access Hole Cover
- (33) A/Trans Case Extension Seal - 2WD Models Only
- (34) A/Trans Case Extension - 2WD Models Only
- (36) Output Shaft Seal Assembly
- (37) Output Shaft Bearing Assembly - 2WD Models Only
- (38) Prop Shaft Trans Flange - 2WD Models Only
- (39) Front Prop Shaft Flange Nut - 2WD Models Only
- (40) A/Trans Case Extension - AWD Models Only
- (41) Output Shaft Bearing Assembly - Case


Clutch Assemblies and Associated Parts

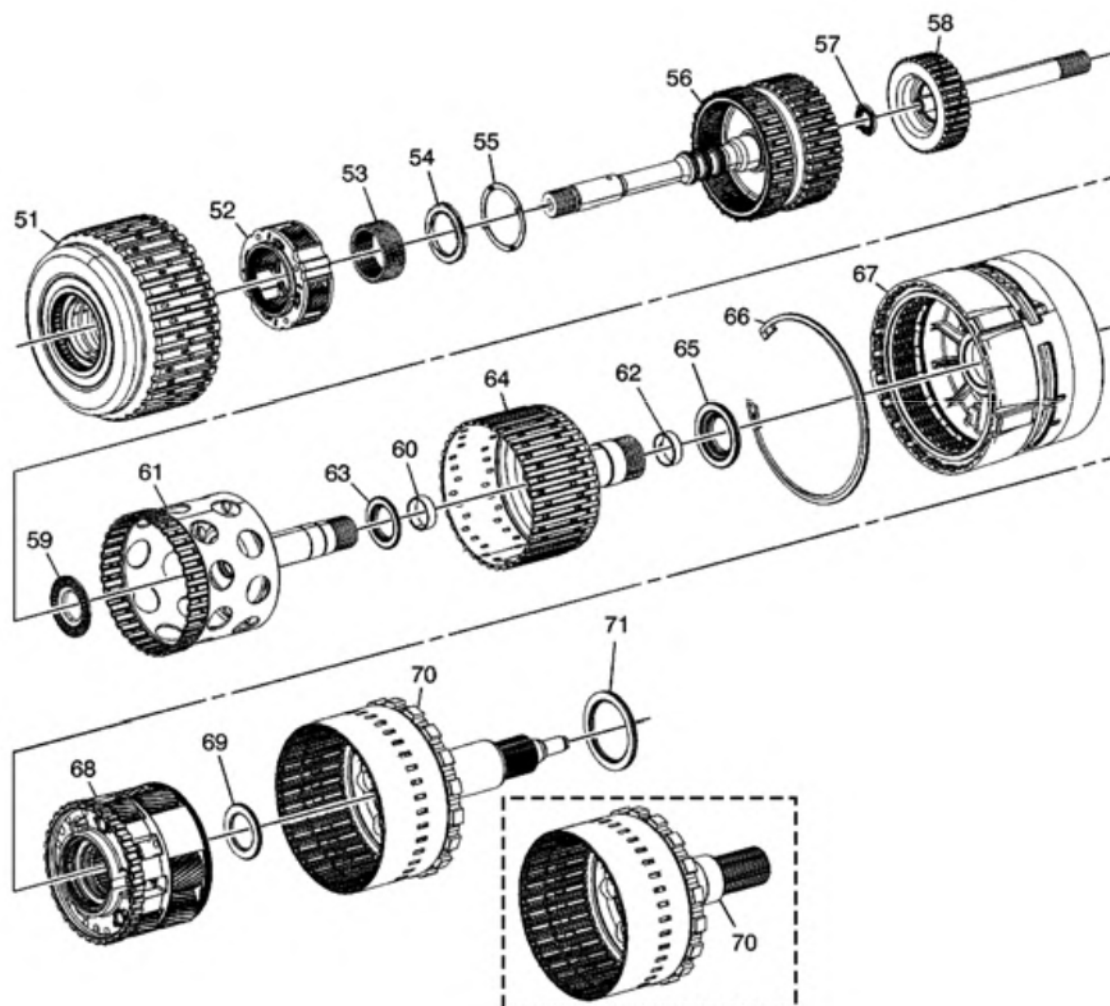

- (51) 1-2-3-4 and 3-5 Reverse Clutch Assembly
- (52) Input Carrier Assembly
- (53) Input Sun Gear
- (54) Input Sun Gear Thrust Bearing
- (55) Input Sun Gear Thrust Washer
- (56) 4-5-6 (w/ Turbine Shaft) Clutch Assembly
- (57) Turbine Shaft Thrust Bearing Assembly
- (58) 4-5-6 Clutch (w/ Output Carrier Shaft and Dampener) Hub Assembly
- (59) 4-5-6 Clutch Hub Thrust Bearing Assembly
- (60) Output Carrier Inner Sun Gear Shaft (Front) Bushing
- (61) 1-2-3-4 Clutch (w/ Output Carrier Inner Sun Gear Shaft) Hub Assembly

- (62) Output Carrier Inner Sun Gear Shaft Bushing
- (63) 1-2-3-4 Clutch Hub Thrust Bearing Assembly
- (64) 2-6 and 3-5 Reverse Clutch (w/ Output Carrier Outer Sun Gear Shaft) Hub Assembly
- (65) 2-6 and 3-5 Reverse Clutch Hub Thrust Bearing Assembly
- (66) Center Support Retaining Ring
- (67) Center (w/ 2-6 Low and Reverse Clutch) Support Assembly
- (68) Output Carrier Assembly
- (69) Output Carrier Thrust Bearing Assembly
- (70) Output Shaft Assembly - Model Dependent
- (71) Output Shaft Thrust Bearing Assembly


Torque Converter (w /Fluid Pump) Housing Assembly

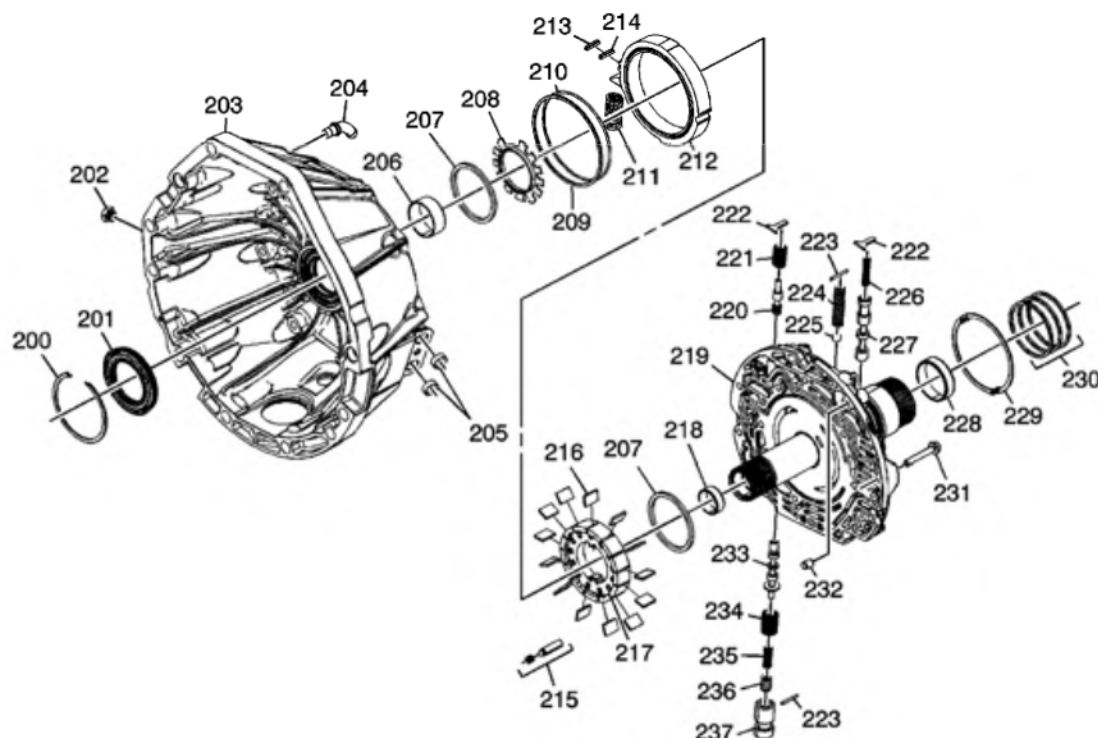

- (200) Torque Converter Fluid Seal Retaining Ring
- (201) Torque Converter Fluid Seal Assembly
- (202) Line Pressure Test Hole Plug
- (203) Torque Converter Housing - Model Dependent
- (204) A/Trans Vent Pipe
- (205) Trans Fluid Cooler Pipe Fitting Seal
- (206) Torque Converter Bushing
- (207) A/Trans Fluid Pump Vane Ring
- (208) A/Trans Fluid Pump Rotor Guide
- (209) A/Trans Fluid Pump Slide Fluid Seal Ring
- (210) A/Trans Fluid Pump Slide (O-ring) Seal
- (211) A/Trans Fluid Pump Slide Outer Spring
- (212) A/Trans Fluid Pump Slide
- (213) A/Trans Fluid Pump Slide Seal
- (214) A/Trans Fluid Pump Slide Seal Support
- (215) A/Trans Fluid Pump Slide Pivot Pin
- (216) A/Trans Fluid Pump Vane
- (217) A/Trans Fluid Pump Rotor

- (218) Turbine Shaft Front Bushing
- (219) A/Trans Fluid Pump Cover Assembly
- (220) Converter Feed Limit Valve
- (221) Converter Feed Limit Valve Spring
- (222) Valve Spring Retainer
- (223) Pressure Relief Ball Valve Spring Pin
- (224) Pressure Relief Ball Valve Spring
- (225) Pressure Relief Ball Valve
- (226) TCC Control Valve Spring
- (227) TCC Control Valve
- (228) Turbine Shaft Rear Bushing
- (229) 1-2-3-4 and 3-5 Reverse Clutch Housing Thrust Washer
- (230) 1-2-3-4 and 3-5 Reverse Clutch Fluid Seal Ring
- (231) Bolt, M6 x 40 mm
- (232) A/Trans Fluid Pump Locator Pin
- (233) Pressure Regulator Valve
- (234) Pressure Regulator Valve Outer Spring
- (235) Pressure Regulator Valve Inner Spring
- (236) Isolator Valve
- (237) Isolator Valve Sleeve


Control (with Body and Valve) Valve Assembly

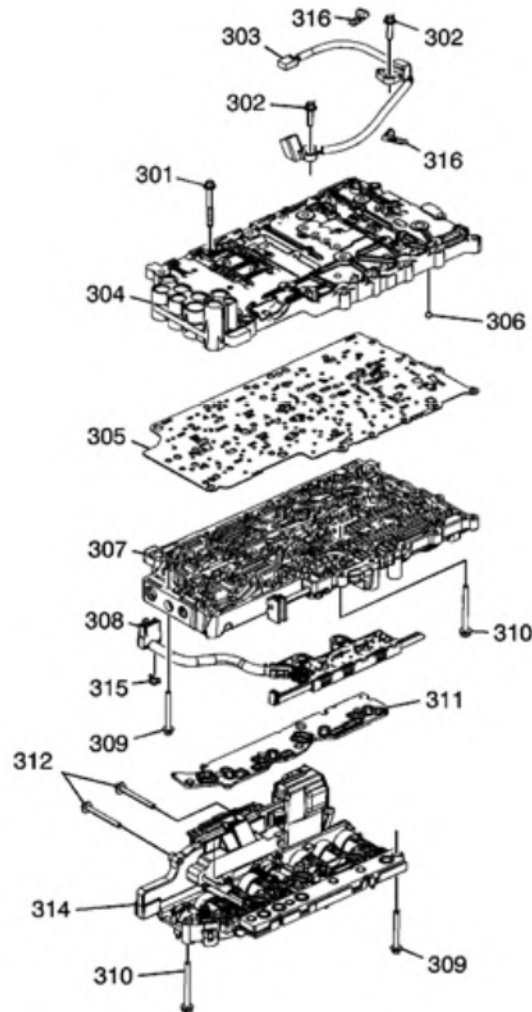

- (301) Bolt, M5 x 36 mm
- (302) Bolt, M6 x 20 mm
- (303) A/Trans Input and Output Speed Sensor Assembly
- (304) Control Valve Upper Body Assembly
- (305) Control Valve Body Spacer (w/ Gasket) Plate Assembly
- (306) Control Valve Body Ball Check Valve
- (307) Control Valve Lower Body Assembly
- (308) A/Trans Manual Shift Shaft Position Switch Assembly
- (309) Bolt, M5 x 45 mm
- (310) Bolt, M5 x 55 mm
- (311) Filter Plate Assembly


- (312) Bolt, M5 x 53 mm
- (314) Control Solenoid (w/ Body and TCM) Valve Assembly
- (315) A/Trans Manual Shaft Position Switch Wiring Harness Clip
- (316) A/Trans Input and Output Speed Sensor Wiring Harness Clip

Upper Control Valve Body Assembly

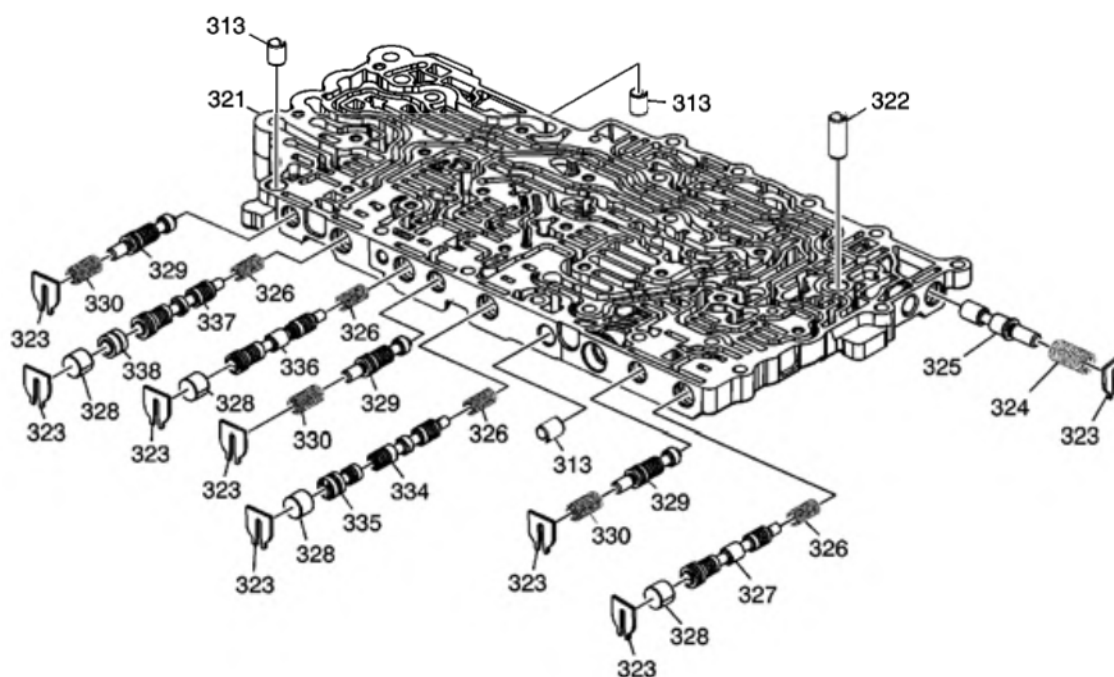


- (313) Control Valve Body Locator Pin
- (321) Control Valve Upper Body
- (322) Control Valve Body Locator Pin
- (323) Retainer
- (324) Actuator Feed Limit Valve Spring
- (325) Actuator Feed Limit Valve
- (326) Clutch Regulator Valve Spring
- (327) CBR1/4-5-6 Clutch Regulator Valve
- (328) Clutch Regulator Valve Bore Plug
- (329) Clutch Boost Valve
- (330) Clutch Boost Valve Spring
- (334) 2-6 Clutch Regulator Valve
- (335) 2-6 Clutch Regulator Valve Gain Valve
- (336) 3-5 Reverse Clutch Regulator Valve
- (337) 1-2-3-4 Clutch Regulator Valve
- (338) Shuttle Valve

Lower Control Valve Body Assembly

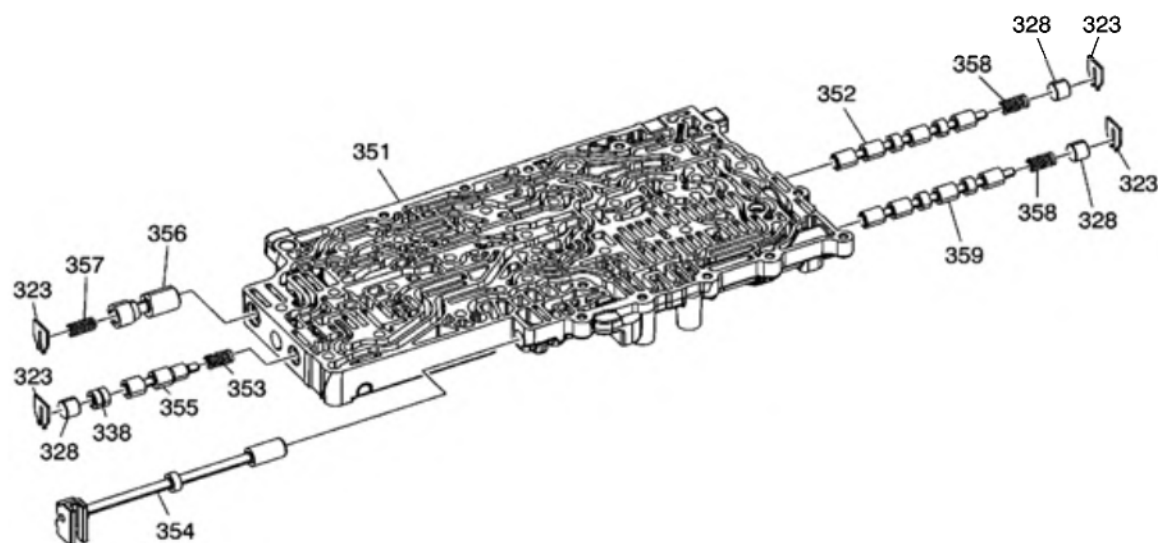

- (323) Retainer
- (328) Clutch Regulator Valve Bore Plug
- (338) Shuttle Valve
- (351) Control Valve Lower Body
- (352) Clutch Select Solenoid Valve 3
- (353) TCC Regulator Apply Valve Spring
- (354) Manual Valve
- (355) TCC Regulator Apply Valve
- (356) Clutch Piston Dam Feed Regulator Valve
- (357) Clutch Piston Dam Feed Regulator Valve Spring
- (358) Clutch Select Solenoid Valve Spring
- (359) Clutch Select Solenoid Valve 2


1-2-3-4 and 3-5 Reverse Clutch Assembly

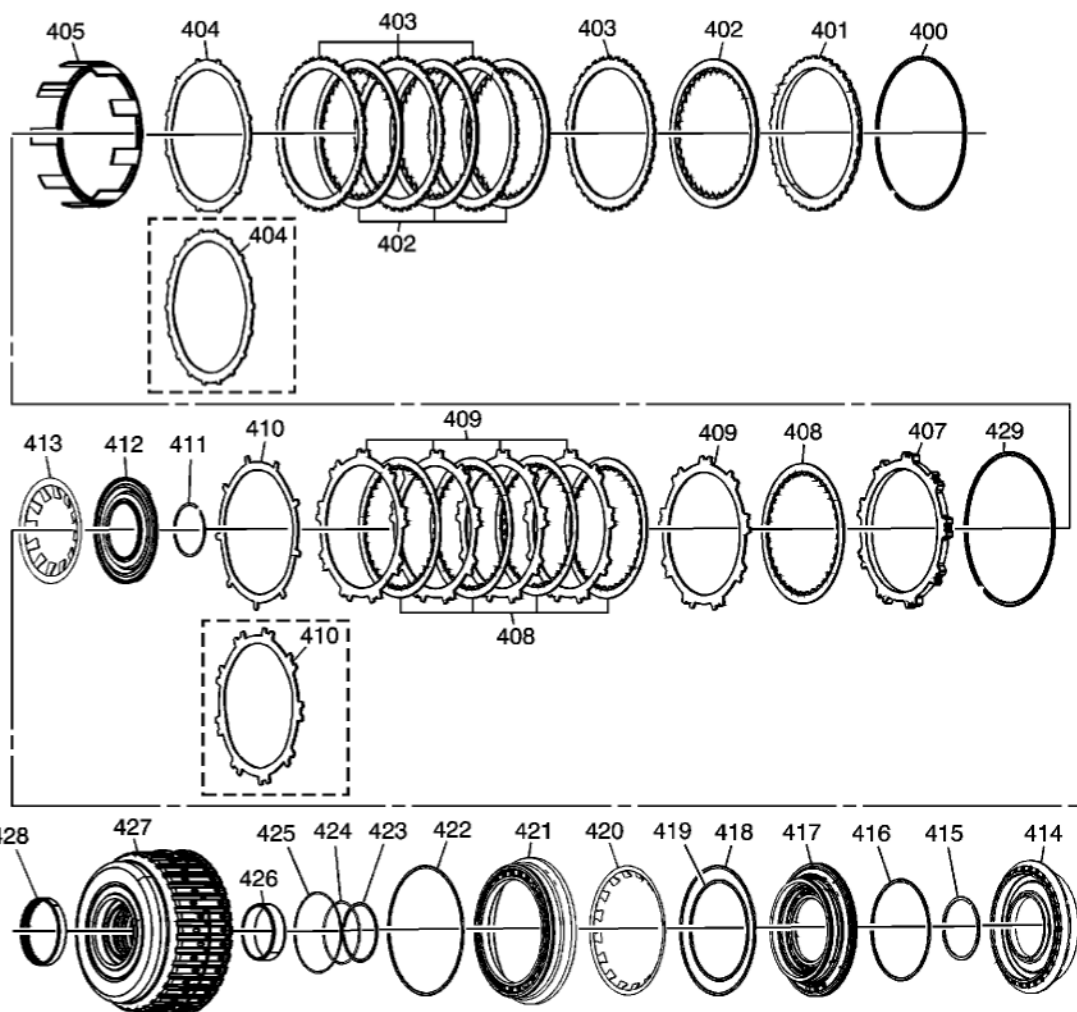

- (400) 3-5 Reverse Clutch Backing Plate Retaining Ring
- (401) 3-5 Reverse Clutch Backing Plate
- (402) 3-5 Reverse Clutch Plate Assembly
- (403) 3-5 Reverse Clutch Plate
- (404) 3-5 Reverse Clutch (Waved) Plate
- (405) 3-5 Reverse Clutch Apply Ring
- (407) 1-2-3-4 Clutch Backing Plate
- (408) 1-2-3-4 Clutch Plate Assembly
- (409) 1-2-3-4 Clutch Plate
- (410) 1-2-3-4 Clutch (Waved) Plate
- (411) 1-2-3-4 Clutch Piston Dam Retaining Ring


- (412) 1-2-3-4 Clutch Piston Dam Assembly
- (413) 1-2-3-4 Clutch Spring
- (414) 1-2-3-4 Clutch Piston
- (415) 1-2-3-4 Clutch Piston Housing Retaining Ring
- (416) 1-2-3-4 Clutch Piston Seal
- (417) 1-2-3-4 Clutch Piston Housing
- (418) 3-5 Reverse Clutch Piston Dam (O-ring) Seal
- (419) 3-5 Reverse Clutch Piston Inner Seal
- (420) 3-5 Reverse Clutch Spring
- (421) 3-5 Reverse Clutch Piston
- (422) 3-5 Reverse Clutch Piston Outer Seal
- (423) 1-2-3-4 Clutch Piston Inner Seal
- (424) 1-2-3-4 Clutch Piston Housing Seal
- (425) 1-2-3-4 Clutch Piston Housing Seal
- (426) 1-2-3-4 and 3-5 Reverse Clutch Housing Rear Bushing
- (427) 1-2-3-4 and 3-5 Reverse Clutch Housing Assembly
- (428) 1-2-3-4 and 3-5 Reverse Clutch Bearing Assembly
- (429) 1-2-3-4 Clutch Backing Plate Retaining Ring

4-5-6 (w / Turbine Shaft) Clutch Assembly

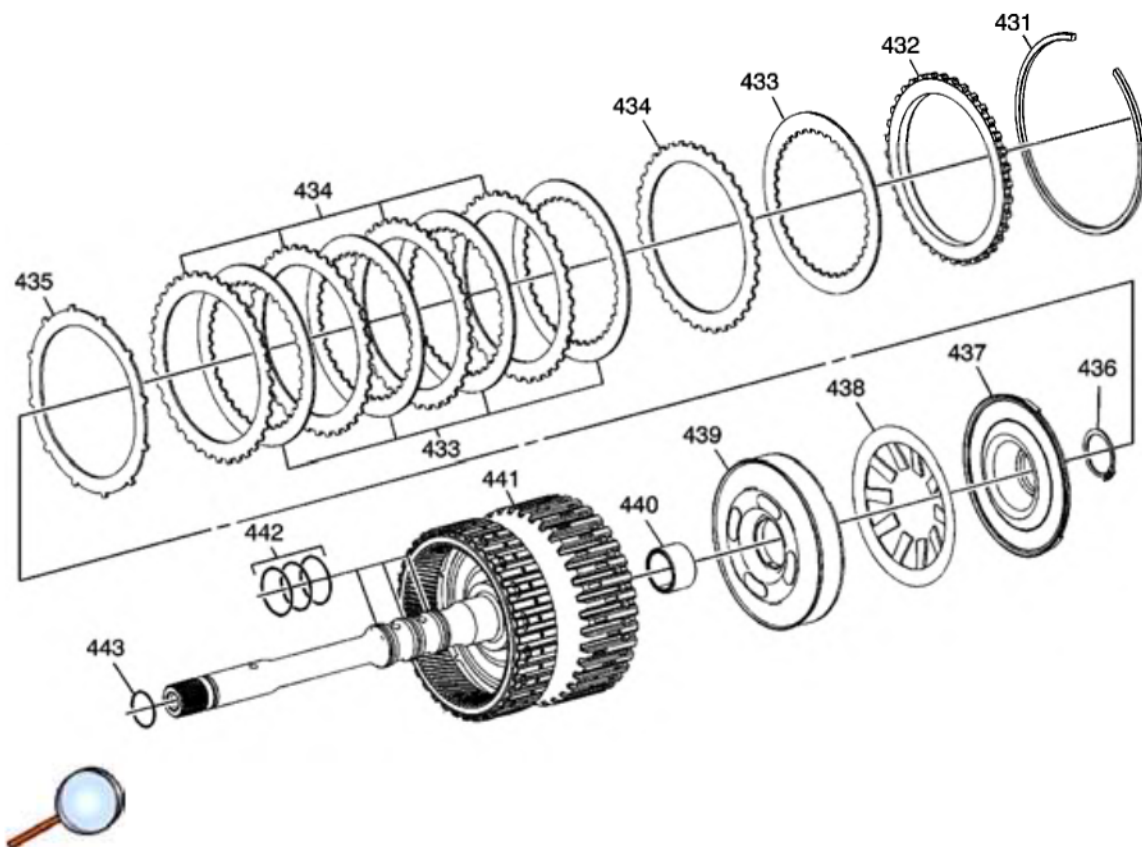


- (431) 4-5-6 Clutch Backing Plate Retaining Ring
- (432) 4-5-6 Clutch Backing Plate
- (433) 4-5-6 Clutch Plate Assembly
- (434) 4-5-6 Clutch Plate
- (435) 4-5-6 Clutch (Waved) Plate
- (436) 4-5-6 Clutch Piston Dam Retaining Ring
- (437) 4-5-6 Clutch Piston Dam Assembly
- (438) 4-5-6 Clutch Spring
- (439) 4-5-6 Clutch Piston Assembly
- (440) Output Carrier Shaft Housing Bushing
- (441) 4-5-6 (w/Turbine Shaft) Housing Assembly
- (442) Turbine Shaft Fluid Seal Ring
- (443) Turbine Shaft (O-ring) Seal

2-6 Clutch Assembly

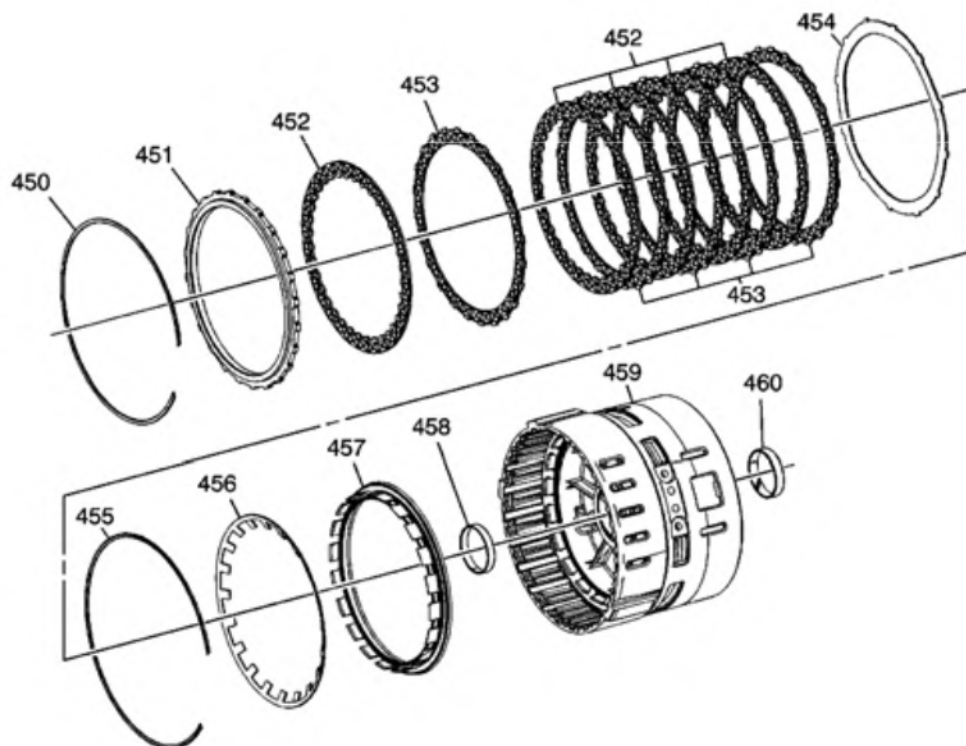


- (450) 2-6 Clutch Backing Plate Retaining Ring
- (451) 2-6 Clutch Backing Plate
- (452) 2-6 Clutch Plate Assembly
- (453) 2-6 Clutch Plate
- (454) 2-6 Clutch (Waved) Plate
- (455) 2-6 Clutch Spring Retaining Ring
- (456) 2-6 Clutch Spring
- (457) 2-6 Clutch Piston Assembly
- (458) Output Carrier Outer Sun Gear Shaft (Front) Bushing
- (459) Center Support Assembly
- (460) Output Carrier Outer Sun Gear Shaft Rear Bushing

Low and Reverse Clutch Assembly

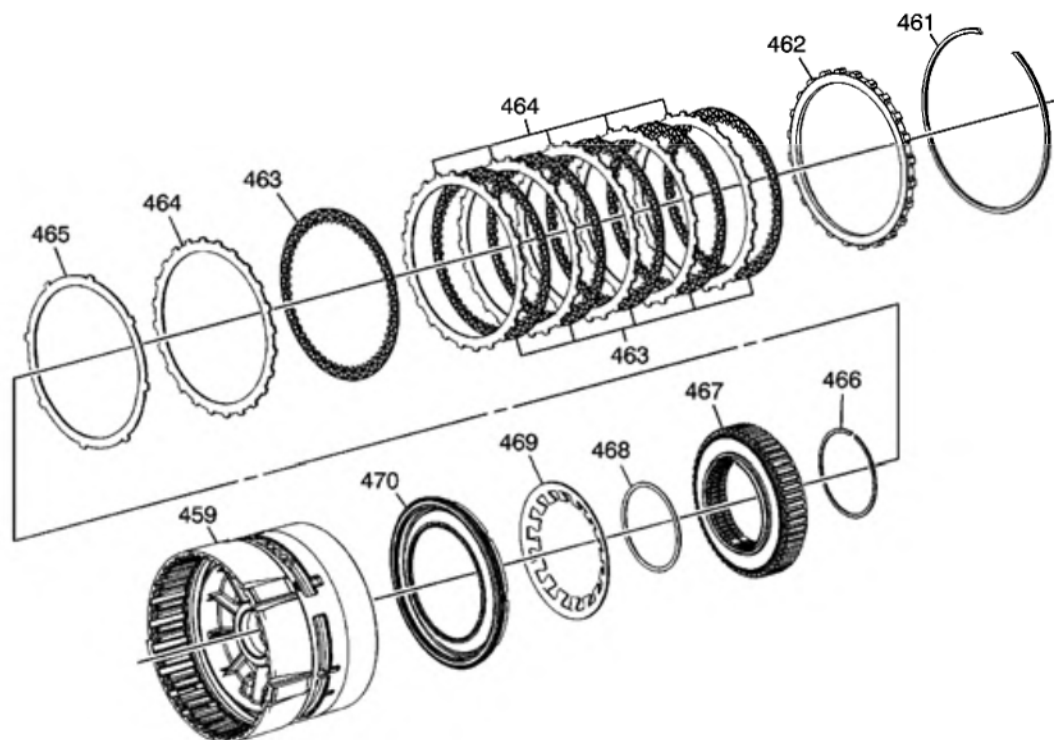

- (459) Center Support Assembly
- (461) Low and Reverse Clutch Backing Plate Retaining Ring
- (462) Low and Reverse Clutch Backing Plate
- (463) Low and Reverse Clutch Plate Assembly
- (464) Low and Reverse Clutch Plate
- (465) Low and Reverse Clutch (Waved) Plate
- (466) Low and Reverse Clutch Spring Retaining Ring
- (467) Low Clutch Sprag Assembly
- (468) Low Clutch Sprag Seal
- (469) Low and Reverse Clutch Spring
- (470) Low and Reverse Clutch Piston Assembly

4-5-6 Clutch Hub Assembly

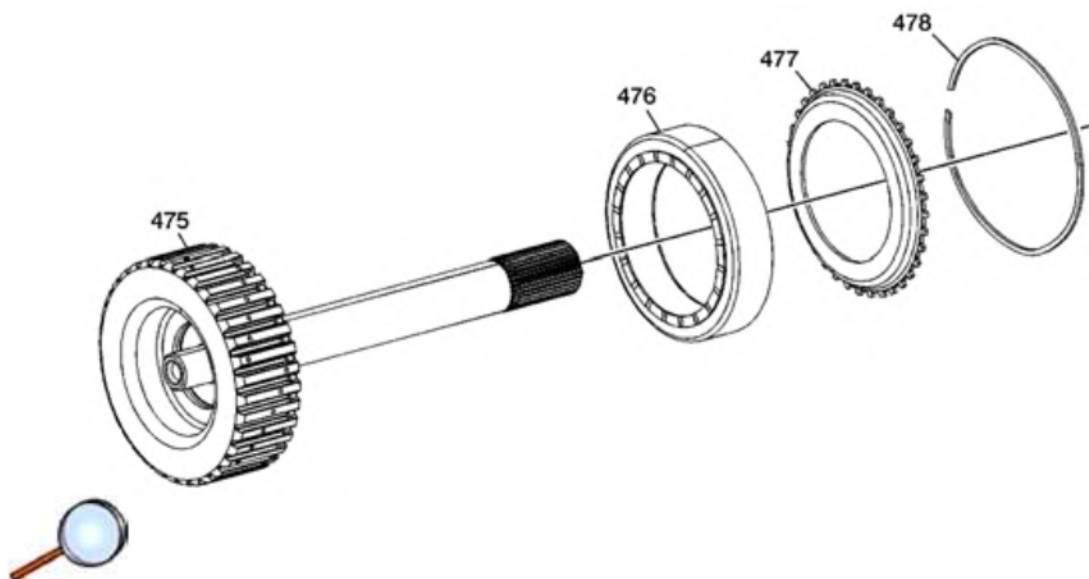


(475) 4-5-6 Clutch (w/ Output Carrier Shaft) Hub Assembly

(476) 4-5-6 Clutch Dampener

(477) 4-5-6 Clutch Dampener Apply Plate


(478) 4-5-6 Clutch Dampener Retaining Ring

Output Carrier Assembly

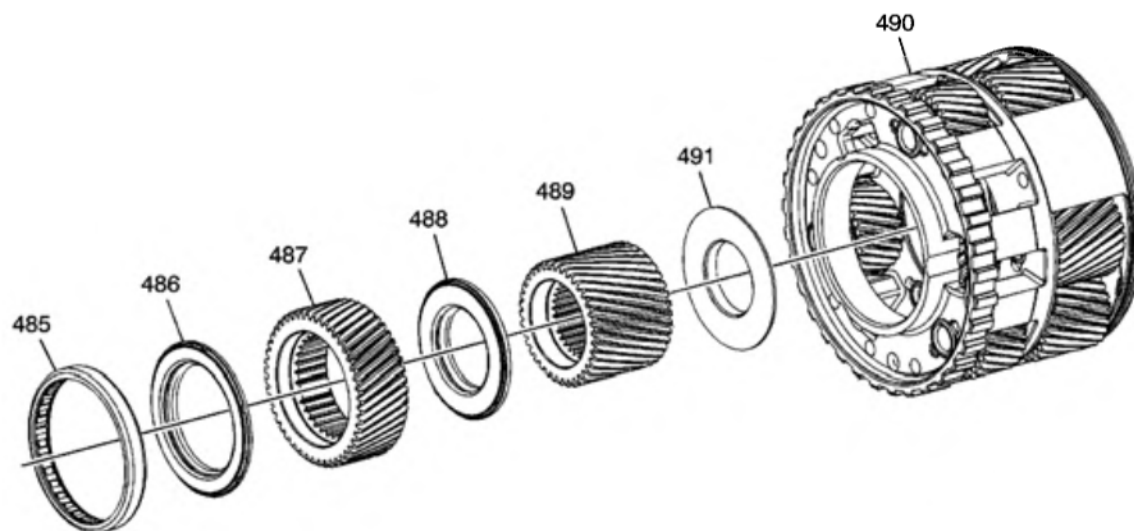


- (485) Center Support Roller Bearing Assembly
- (486) Output Carrier Front Sun Gear Thrust Bearing Assembly
- (487) Output Carrier Front Sun Gear
- (488) Output Carrier Front Sun Gear Rear Thrust Bearing Assembly
- (489) Output Carrier Rear Sun Gear
- (490) Output Carrier
- (491) Output Carrier Rear Sun Gear Thrust Bearing Assembly - Captured

Output Shaft Assembly

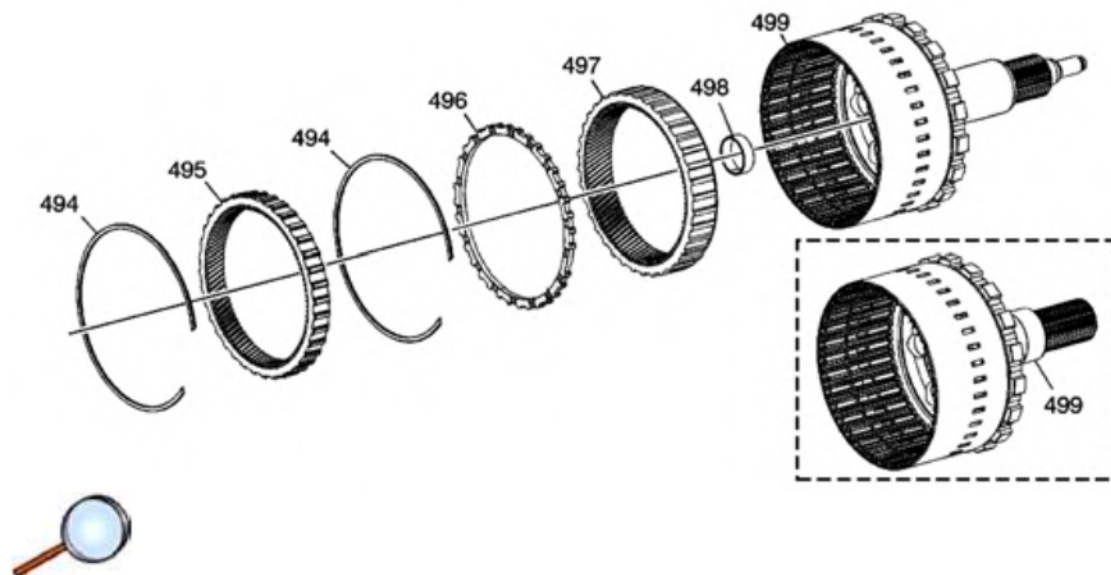

- (494) Output Carrier Internal Gear Retaining Ring
- (495) Output Carrier Internal Front Gear
- (496) Output Carrier Internal Gear Spacer
- (497) Output Carrier Internal Rear Gear
- (498) Output Carrier Bushing
- (499) Output Shaft Assembly - Model Dependent

Park System Components

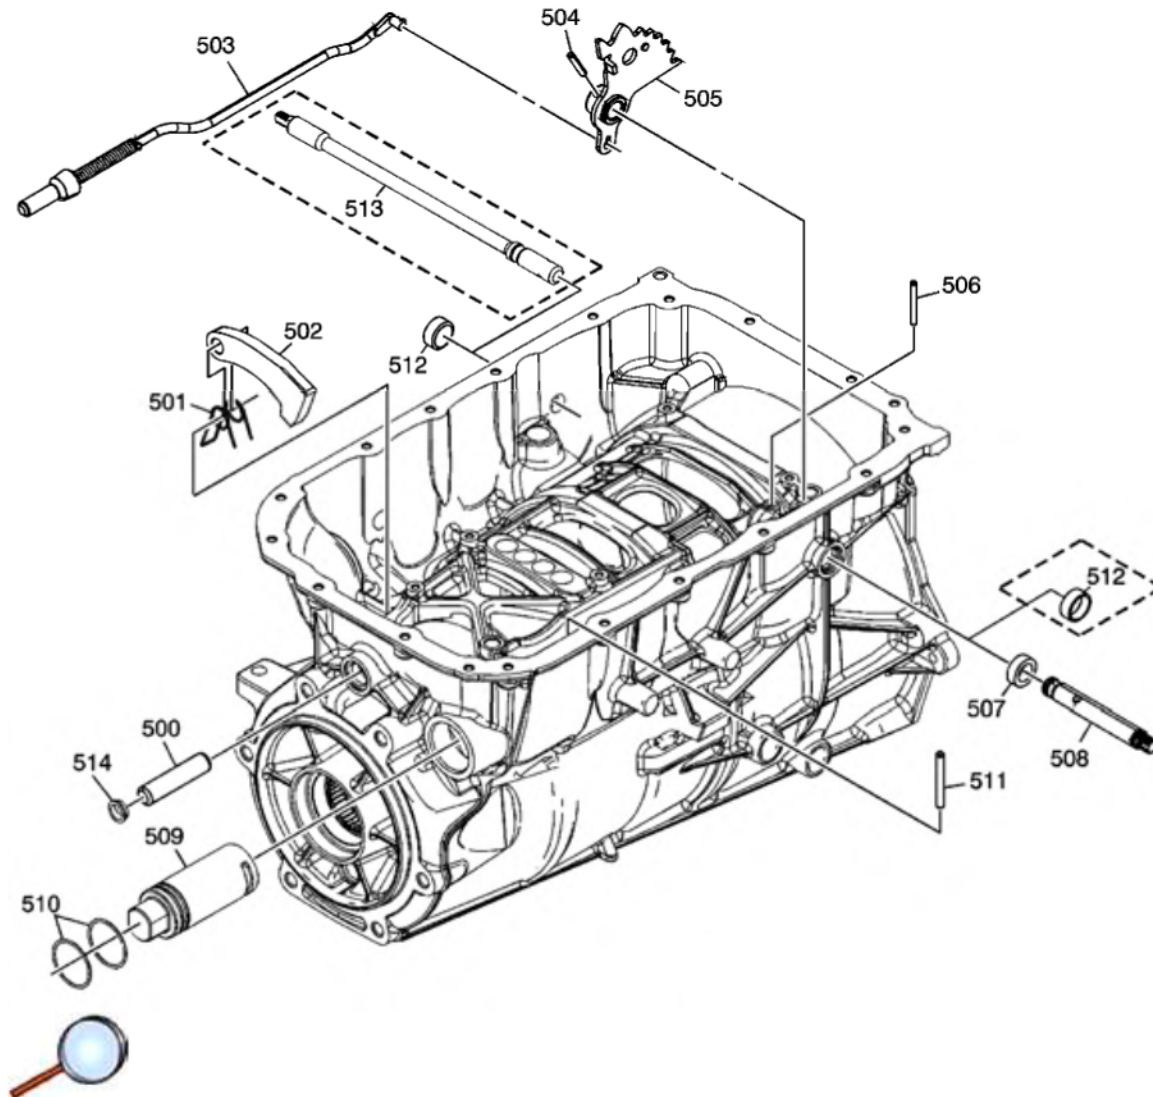

- (500) Park Pawl Shaft
- (501) Park Pawl Spring
- (502) Park Pawl
- (503) Park Pawl Actuator Assembly
- (504) Manual Shaft Detent Lever Hub Pin
- (505) Manual Shaft Detent Lever Assembly
- (506) Manual Shift Shaft Pin
- (507) Manual Shift Shaft Seal
- (508) Manual Shift Shaft - Some Models
- (509) Park Pawl Actuator Guide
- (510) Park Pawl Actuator Guide (O-ring) Seal

- (511) Park Pawl Actuator Guide Pin
- (512) Manual Shift Shaft Hole Plug - Location Model Dependent
- (513) Manual Shift Shaft - Some Models
- (514) Park Pawl Shaft Hole Plug