

List of components 1:6

1/1	Battery	3/126	Driver/Passenger Door Module (DDM)/(PDM)
		3/127	Passenger/Driver Door Module (PDM)/(DDM)
2/22	Relay, climate control system	3/131	Steering wheel switch right (SWSR)
2/32	Main relay, engine management system	3/135	RTI switch
2/35	Starter motor relay	3/155	Mode selector, automatic transmission
2/64	Auxiliary light (accessory) relay	3/156	Gear Selector Module (GSM)
2/90	Relay, windshield wiper, low/high speed		
2/91	Relay, intermittent wiping	3/157	Switch, passenger side airbag
2/182	Relay, high pressure headlight washer motor	3/171	Switch, retractable door mirrors
2/191	Relay, remote parking heater start, radio signal	3/173	Switch, trunk lid private lock
2/192	Relay, electric engine heater	3/174	Switch, reduced alarm
2/238	Relay, audio disconnection	3/225	Switch unit, Continuously Controlled Damping (CCD), S60R
		3/254	Steering Wheel Module (SWM)
3/1	Ignition switch		
3/4	Steering wheel switch left (SWSL)		
3/6	Hazard warning flasher switch	4/7	Combustion Preheater Module (CPM)
3/8	Switch, heated rear window/door mirrors		
3/9	Brake light contact	4/9	Supplemental Restraint System (SRS)
3/10	Reversing light contact	4/16	Brake Control Module (BCM)
3/25	Power sunroof switch	4/28	Transmission Control Module (TCM)
3/26	Switch unit, power driver's seat	4/28	Transmission Control Module (TCM), TF80-SC/AWD
		4/31	Fan control module
3/27	Switch unit, power passenger seat	4/33	Sunroof Module (SRM)
3/35	Trunk handle switch	4/46	Engine Control Module (ECM)
3/37	Horn contact	4/46	Engine Control Module (ECM), Diesel
3/47	Parking brake contact	4/50	Electronic Throttle Module (ETM)
3/59	Headlight adjustment control	4/52	Power Seat Module (PSM)
3/60	Auxiliary light switch	4/56	Central Electronic Module (CEM)
3/62	Hood alarm contact	4/58	Rear Electronic Module (REM)
3/71	Gear selector contact, AW 55-51/51 AWD	4/58A-G	Rear Electronic Module (REM)
3/74	Left-hand front door lock unit	4/68	Steering Wheel Angle Sensor Module (SAS)
3/75	Right-hand front door lock unit	4/70	Upper Electronic Module (UEM)
3/76	Left-hand rear door lock unit	4/71	Cooling fan control module
3/77	Right-hand rear door lock unit	4/71	Cooling fan control module, Diesel
3/78	Trunk lid lock unit	4/76	Remote control unit for garage door opener
3/80	Switch, left-hand central lock	4/78	Accessory Electronic Module (AEM)
3/82	Switch, right-hand central lock	4/82	Differential Electronic Module (DEM)
3/85	Rear left door power window switch	4/83	Fuel pump control module
3/86	Rear right door power window switch	4/84	Suspension Module (SUM)
3/91	Switch, left-hand heated seat	4/86	Parking Assistance Module (PAM)
3/92	Switch, right-hand heated seat	4/99	Electronic power steering control module
3/93	Switch, left-hand seat belt buckle	4/106	Control module, remote parking heater start
3/94	Switch, right-hand seat belt buckle	4/107	Control module, parking heater, Call start
3/95	Spin control switch	4/109	Glow plug control unit (GCU)
3/111	Light Switch Module (LSM)	4/110	Trailer Module (TRM)
3/112	Climate Control Module (CCM)	4/118	Headlamp control module (HCM)
3/113	Rear adjustable head restraint relay		
3/117	Switch unit, dome light		

List of components 2:6

5/1	Driver Information Module (DIM)	6/114	Vacuum pump
6/1	Windshield wiper motor	6/118	Regulator motor, swirl throttle
6/3	Right-hand headlight wiper motor	6/120	Throttle body motor
6/4	Left-hand headlight wiper motor	6/120	Throttle body motor, Diesel
6/15	Sunroof motor	6/127	Washer motor
6/16	Driver seat motor, backrest angle	6/143	Regulator motor, turbo
6/17	Driver seat motor, up/down front edge	7/4	Brake fluid level sensor
6/18	Driver seat motor, up/down rear edge	7/5	Washer fluid level sensor
6/19	Driver seat motor, forward/backward	7/6	Oil pressure sensor
6/20	Passenger seat motor, forward/backward	7/8	Pressure sensor, climate control system
6/25	Starter motor	7/10	Interior temperature sensor
6/26	Alternator Control Module (ACM)	7/11	Outside temperature sensor
6/28	Motor, passenger compartment fan	7/12	Solar sensor, twilight sensor and indicator alarm
6/29	Motor, cooling fan	7/15	Front heated oxygen sensor
6/29	Cooling fan motor, Diesel	7/15	Front heated oxygen sensor, Diesel
6/31	Feed pump, ejectors	7/16	Coolant temperature sensor
6/33	Fuel pump	7/17	Mass airflow sensor (MAF)
6/35	Fuel pump, auxiliary heater	7/23	Rear knock sensor
6/37	Lock motor, fuel filler cover	7/24	Front knock sensor
6/38	Left-hand headlight level adjustment motor	7/25	Impulse sensor, Gasoline
6/39	Right-hand headlight level adjustment motor	7/25	Impulse sensor, Diesel
6/44	Cooling fan, electrics box, engine compartment	7/31	Left-hand front ABS sensor
6/48	Damper Motor Module (DMM), recirculation	7/32	Right-hand front ABS sensor
6/58	Motor, front left power window	7/35	Oil level sensor
6/60	Motor, front right power window	7/41	Temperature sensor, evaporator
6/62	Left-hand power door mirror	7/51	Accelerator pedal sensor
6/63	Right-hand power door mirror	7/56	Left-hand rear ABS sensor
6/64	Passenger seat motor, backrest angle	7/57	Right-hand rear ABS sensor
6/65	Passenger seat motor, up/down front edge	7/61	Input speed sensor
6/66	Passenger seat motor, up/down rear edge	7/61	Input speed sensor, TF-80SC/AWD
6/67	Pump, fuel leakage control	7/62	Output speed sensor
6/69	Damper Motor Module (DMM)	7/62	Output speed sensor, TF-80SC/AWD
6/71	Valve, speed-dependent power steering	7/73	Coolant level sensor
6/73	Coolant pump, auxiliary heater	7/74	Fluid temperature sensor, automatic transmission
6/92	Motor, rear left power window	7/74	Fluid temperature sensor, automatic transmission, TF-80S/ AWD
6/93	Motor, rear right power window	7/81	Pressure sensor, intake manifold
6/95	Damper Motor Module (DMM), temperature, left	7/82	Rear heated oxygen sensor
6/96	Damper Motor Module (DMM), temperature, right	7/87	Acceleration sensor, Four-C, front left
6/102	Damper Motor Module (DMM), defroster	7/88	Acceleration sensor, Four-C, front right
6/103	Damper Motor Module (DMM), floor/ventilation	7/89	Acceleration sensor, Four-C, rear left
6/104	High pressure headlight washer motor	7/91	Steering angle sensor
6/105	Fuel distributor, gas	7/93	Occupant Weight Sensor (OWS)

List of components 3:6

7/100	Inclination Sensor Module (ISM)	8/22	Shock absorber, Four-C, rear left
7/105	Outside temperature sensor, engine control module	8/23	Shock absorber, Four-C, rear right
7/108	Left-hand rear side impact sensor	8/28	Turbo control valve
7/109	Right-hand rear side impact sensor	8/30	Driver's side airbag igniter
7/110	Left-hand seat temperature sensor	8/31	Passenger side airbag igniter
7/111	Right-hand seat temperature sensor	8/32	Igniter, passenger side airbag stage 2
7/115	Left-hand front side impact sensor	8/33	Front left seat belt tensioner igniter
7/116	Right-hand front side impact sensor	8/34	Front right seat belt tensioner igniter
7/118	Acceleration sensor, shock absorber, Four-C, front left	8/36	Shift lock solenoid
7/119	Acceleration sensor, shock absorber, Four-C, front right	8/37	Automatic transmission, TF-80SC/AWD
7/120	Rear left angle sensor, Four-C/Bi-Xenon	8/37	Automatic transmission, AW55-51/51 AWD
7/121	Rear right angle sensor, Four-C/Bi-Xenon	8/38	Shift solenoid 1, TF-80SC/AWD
7/122	Mass movement sensor, front	8/38	Shift solenoid 1, AW55-51/51 AWD
7/123	Clutch pedal sensor	8/39	Shift solenoid 2, TF-80SC/AWD
7/124	Brake pedal sensor	8/39	Shift solenoid 2, AW55-51/51 AWD
7/129	Brake pressure sensor 2	8/40	Lock-up solenoid, TF-80SC/AWD
7/130	Fuel level sensor, ejector side	8/40	Lock-up solenoid, AW55-51/51 AWD
7/131-		8/41	Pressure solenoid, AW 55-51/51 AWD
7/134	Parking assistance sensor, rear	8/46	Archive unit, DSTC
7/139	Brake pressure sensor 1	8/51	Front left side airbag igniter
7/143	Fuel level sensor, pump side	8/52	Front right side airbag igniter
7/149	Rain Sensor Module (RSM)	8/55	Rear left belt tensioner igniter
7/154	Fuel temperature sensor, Diesel	8/56	Rear right belt tensioner igniter
7/156	Pressure and temperature sensor, fuel	8/59	Rear left head restraint solenoid
7/156	Pressure and temperature sensor, Bi-Fuel	8/60	Rear right head restraint solenoid
7/159	Air Quality Sensor (AQS)	8/61	Driver's side airbag igniter, stage 2
7/162	Fuel rail pressure sensor, Diesel	8/62	Belt tensioner igniter, center rear seat
7/164	Body Sensor Cluster Stability Sensor (BSC)	8/64	Solenoid valve, engine mounting, Diesel
7/165	Pressure and temperature sensor, intake manifold	8/66	Left-hand inflatable curtain igniter
7/166	Oil level sensor, Diesel	8/67	Right-hand inflatable curtain igniter
7/172	Camshaft position sensor, intake side	8/71	Throttle solenoid, AW 55/51 AWD
7/173	Camshaft position sensor, exhaust side	8/71	Throttle solenoid, TF-80SC/AWD
7/173	Camshaft position sensor, exhaust side, Diesel	8/72	Shift solenoid 3, AW55-51SN/AW51 AWD
7/174	Differential pressure sensor, particle filter	8/73	Shift solenoid 4, AW55-51SN/AW51 AWD
7/178	Front impact sensor, right	8/74	Shift solenoid 5, AW55-51SN/AW51 AWD
7/179	Front impact sensor, left	8/75	Valve, fuel cut-off DFCO
7/190	Temperature sensor, exhaust gases up-stream of particle filter	8/81	Solenoid, variable valve timing exhaust
7/191	Temperature sensor, exhaust gases downstream of particle filter	8/84	Switch, vacuum pump
7/201	Pressure and temperature sensor, gas	8/85	Thermostatic switch and fuel filter heating
7/204-		8/88	Rear solenoid, fuel tank, Bi-Fue
7/207	Parking assistance sensor, front	8/89	Front left solenoid, fuel tank, Bi-Fuel
8/3	Electromagnetic clutch, climate control system	8/90	Front right solenoid, fuel tank, Bi-Fuel
8/6-11	Injectors	8/98	Fuel pressure control valve, Diesel
8/6-10	Injectors, Diesel	8/111	High-pressure solenoid valve, Diesel
8/18	EVAP valve	8/113	Bypass valve, EGR cooling
8/19	Solenoid, variable valve timing intake	8/120	EGR valve
8/20	Shock absorber, Four-C, front left	8/134	Solenoid, reverse interlock, manual
8/21	Shock absorber, Four-C, front right	8/142	Linear pressure solenoid SLB1
		8/143	Linear pressure solenoid SLC1
			TF-80SC/AWD
		8/144	Linear pressure solenoid SLC2
			TF-80SC/AWD
		8/145	Linear pressure solenoid SLC3
			TF-80SC/AWD

List of components 4:6

9/1	Front 12V outlet	10/53	Fog light, rear left
9/2	Heated rear window	10/54	Rear direction indicator
9/12	Seat Heating Module (SHM), left	10/55	Left-hand reversing light
9/13	Seat Heating Module (SHM), right	10/64	Right-hand high beam
9/16	Left-hand backrest heating element	10/65	Auxiliary light, front right
9/17	Right-hand backrest heating element	10/66	Right-hand low beam
9/18	Left-hand seat heating element	10/68	Left-hand high beam
9/19	Right-hand seat heating element	10/69	Auxiliary light, front left
9/25	Rear 12V outlet	10/70	Left-hand low beam
9/30	Auxiliary heater	10/71	Side running light, front left
9/32	PTC resistor, crankcase ventilation	10/73	Side running light, front right
9/33	Left-hand heated door mirror	10/114	Left-hand vanity mirror lighting
9/34	Right-hand heated door mirror	10/115	Right-hand vanity mirror lighting
10/1	Left-hand front lamp housing	10/125	Left-hand front courtesy lighting
10/2	Right-hand front lamp housing	10/126	Right-hand front courtesy lighting
10/3	License plate lighting	10/127	Lighting, cargo compartment, left-hand side
10/5	Front left fog light	10/128	Lighting, cargo compartment, right-hand side
10/6	Front right fog light	10/148	Left-hand rearview mirror lighting
10/11	Front left running/parking light	10/149	Right-hand rearview mirror lighting
10/12	Front right running/parking light	10/150	Rear reading light
10/13	Front left direction indicator	10/151	Lighting switch, left rear door
10/14	Front right direction indicator	10/152	Lighting switch, right rear door
10/15	Direction indicator, left door mirror	10/161	Cupholder lighting
10/16	Direction indicator, right door mirror	10/218	Indicator light, remote start
10/17	Lamp housing, rear right	11A/no.	Main fuses in engine compartment fuse box
10/18	Lamp housing, rear left	11B/no.	Fuses in engine compartment fuse box
10/19	Auxiliary brake light	11C/no.	Fuses in passenger compartment fuse box
10/29	Glove compartment lighting	11E/no.	Main fuses at battery
10/42	Rear right running/parking light	11L/no.	Fuse in cargo compartment fuse holder
10/43	Right brake light	15/31	Distribution box in engine compartment
10/44	Right-hand tail light lamp 1	16/1	Audio Module (AUM)
10/45	Right-hand tail light lamp 2	16/2	Amplifier
10/46	Fog light, rear right	16/3	Right-hand front door speaker
10/47	Right-hand rear direction indicator	16/4	Left-hand front door speaker
10/48	Right-hand reversing light	16/5	Right-hand rear door speaker
10/49	Rear left running/parking light	16/6	Left-hand rear door speaker
10/50	Left brake light	16/9	Window antenna
10/51	Left-hand tail light lamp 1		
10/52	Left-hand tail light lamp 2		

List of components 5:6

16/10	Horn 1	20/16	Capacitor
16/11	Horn 2	20/22-26	Glow plug
16/15	CD changer	26/4	Cable harness, tow hitch cable harness
16/16	Window antenna amplifier	27/3	Left Camera Module (LCM)
16/17	Left-hand speaker, rear shelf	27/4	Right Camera Module (RCM)
16/18	Right-hand speaker, rear shelf		
16/26	Center dashboard speaker	31/1	Ground connection, right MacPherson strut tower
16/35	Siren Control Module (SCM)	31/2	Ground connection, left MacPherson strut tower
16/36	TV receiver		
16/45	Road Traffic Information module (RTI)	31/4	Ground connection, engine
16/45	Road Traffic Information module (RTI), Turn-by-turn	31/5	Ground connection, right D-post
16/46	RTI display	31/6	Ground connection, driver's side A-post
16/46	RTI display, Turn-by-turn	31/10	Ground connection, right side A-post
16/47	GPS antenna RTI	31/44	Ground connection, left side member, lower engine compartment
16/49	Traffic Message Channel module (TMC)		
16/55	Left-hand front tweeter	31/46	Ground connection, rear left seat riser
16/56	Right-hand front tweeter	31/47	Ground connection, rear right seat riser
16/59	Antenna, remote control	31/48	Ground connection, rear right seat riser
16/60	Phone Module (PHM)	31/53	Ground connection, firewall
16/62	Hand unit, mobile phone	31/66	Ground connection, front seat riser, left-hand side
16/63	GPS antenna, cellular phone		
16/64	Antenna, mobile phone	31/67	Ground connection, front seat riser, right-hand side
16/65	Antenna ring/ignition switch illumination		
16/67	Amplifier antenna, bumper	31/70	Ground connection, left side member, lower engine compartment
16/68	Antenna, bumper		
16/71	Window antenna amplifier 1, right	31/72	Ground connection, cargo compartment
16/77	Microphone, mobile phone	31/73	Ground connection, rear right seat riser
16/78	Speaker, mobile phone	31/83	Ground connection, A-post left side
16/93	Control module, mobile phone handsfree	31/84	Ground connection, A-post right side
16/126	Holder, mobile phone handsfree	31/88	Ground connection, Engine ignition coil group 1
16/127	Microphone, mobile phone handsfree	31/89	Ground connection, Engine ignition coil group 2
16/145	Satellite radio receiver	31/91	Ground connection, engine
16/149	MP3 player	31/93	Ground connection, left MacPherson strut tower
16/153	Antenna, satellite receiver	31/94	Ground connection, right MacPherson strut tower
		31/95	Ground connection, left MacPherson strut tower
17/13	Data link connector		
17/17	Jump start connection	31/96	Ground connection, right MacPherson strut tower
17/19	12V outlet, cargo compartment		
17/37	4-pin outlet, tow hitch cable harness	31/98	Ground connection, upper windshield member
17/38	7-pin outlet, tow hitch cable harness		
17/39	13-pin outlet, tow hitch cable harness	31/102	Ground connection, front member
18/4	Contact reel	31/120	Ground connection, cargo compartment
20/3-8	Spark plug and ignition coil		

List of components 6:6

53/no.	Branching point	54/25	Connector
		54/32	Connector
54/1	Connector	54/34	Connector
54/1B	Connector	54/35	Connector
54/1C	Connector	54/36	Connector
54/3.1	Connector	54/40C	Connector
54/3.2	Connector	54/40D	Connector
54/4	Connector	54/43	Connector
54/7	Connector	54/53	Connector
54/8	Connector	54/54	Connector
54/9	Connector	54/55	Connector
54/10-11	Connector	54/56	Connector
54/12	Connector	54/57.1	Connector
54/13	Connector	54/74	Connector
54/14	Connector	54/100	Connector
54/16	Connector	54/106	Connector
54/20	Connector	54/107	Connector
54/21	Connector	54/132	Connector
54/22-23	Connector	54/1300	Connector
54/24	Connector	54/1400	Connector