

**Truck Service Manual Sub-Section to Section
and Sub-Section Conversion Table**

Old Sub-Section	Old Sub-Section	New Section	Section Name	Sub-Section Name
0A	General Information	0	General Information	General Information
0B	Maintenance and Lubrication	0	General Information	Maintenance and Lubrication
0C	Vibration Diagnosis	0	General Information	Vibration Diagnosis
1A	Heating and Ventilation	1	HVAC	Heating and Ventilation (Non A/C)
1B	Heating, Ventilation, and Air Conditioning	1	HVAC	HVAC systems with Air Conditioning
1D	A/C Compressors	1	HVAC	HVAC systems with Air Conditioning
2A	Frame and Bumpers	8	Body and Accessories	Frame and Underbody, and Bumpers
3A	Front Wheel Alignment	3	Suspension	Wheel Alignment
3B, 3B1A, 3B1B	Power Steering Gear and Pump	2	Steering	Power Steering System
3B3	Steering Linkage	2	Steering	Steering Linkage
3C	Front Suspension	3	Suspension	Front Suspension
3D	Rear Suspension	3	Suspension	Rear Suspension
3E	Tires and Wheels	3	Suspension	Tires and Wheels
3F	Steering Columns	2	Steering	Steering Wheel and Column
4A	Propeller Shaft	4	Driveline/Axle	Propeller Shaft
4B	Rear Axle and Differential	4	Driveline/Axle	Rear Drive Axle
4C	Front Drive Axles and Differential	4	Driveline/Axle	Front Wheel Drive Shafts and Front Drive Axle
5	Hydraulic Brakes	5	Brakes	Hydraulic Brakes
5A	Master Cylinder	5	Brakes	Hydraulic Brakes
5B	Front Disc Brakes	5	Brakes	Disc Brakes
5C	Drum Brakes	5	Brakes	Drum Brakes
5D	Hydraulic or Vacuum Booster	5	Brakes	Hydraulic Brakes
5E	Antilock Brakes	5	Brakes	Antilock Brakes
5F	Parking Brake	5	Brakes	Parking Brake
6, 6A	Engine Mechanical	6	Engine	Engine Mechanical
6B	Engine Cooling and Radiator	6	Engine	Engine Cooling
6C	Engine Fuel	6	Engine	Engine Controls
6D	Engine Electrical	6	Engine	Engine Electrical
—	Driveability and Emissions	6	—	Engine Controls
6F	Exhaust System	6	—	Exhaust System
6H	Vacuum Pump	6	Engine	Vacuum Pump
6J	Turbocharger	6	Engine	Turbocharger
7A	Automatic Transmission	7	Transmission/Transaxle	Automatic Transmission and Transmission/Transfer Case Unit Repair Manual

**Truck Service Manual Sub-Section to Section
and Sub-Section Conversion Table (cont'd)**

Old Sub-Section	Old Sub-Section	New Section	Section Name	Sub-Section Name
7B	Manual Transmission	7	Transmission/Transaxle	Manual Transmission and Transmission/Transfer Case Unit Repair Manual
7C	Clutch	7	Transmission/Transaxle	Clutch
7D	Transfer Case	4	Driveline/Axle	Transfer Case and Transmission/Transfer Case Unit Repair Manual
8B	Lighting Systems	8	Body and Accessories	Lighting Systems
8C	Instrument Panel and Gages	8	Body and Accessories	Instrument Panel, Gages and Console
8D	Chassis Electrical	8	—	Refer to the Index at the end of the manual
8E	Wipers and Washers	8	Body and Accessories	Wiper/Washer Systems
9A	Audio Systems	8	Body and Accessories	Entertainment
9B	Cruise Control	8	Body and Accessories	Cruise Control
9E	Engine Coolant Heater	6	Engine	Engine Cooling
9F	Luggage Carrier	8	Body and Accessories	Roof
9J	Supplemental Inflatable Restraint	9	Restraints	Supplemental Inflatable Restraints
9K	Remote Keyless Entry	8	Body and Accessories	Keyless Entry
10A1	Doors	8	Body and Accessories	Doors
10A2	Seats	8	Body and Accessories	Seats
		9	Restraints	Seat Belts
10A3	Stationary Windows	8	Body and Accessories	Stationary Glass
10A4	Interior Trim	8	Body and Accessories	Exterior/Interior Trim
10A5	Endgate	8	Body and Accessories	Body Rear End
10B	Cab and Body Maintenance	—	—	Refer to the Index at the end of the manual

BLANK