



SINGLE PART INSTALLATION POSITION

CONTENTS

ECU	2	SOLENOID VALVE	5
SENSOR	3	EARTH CABLE	6

ECU

Name	Symbol	Name	Symbol
Immobilizer-ECU <6G7, 4M4>	A	Mirror control unit	B

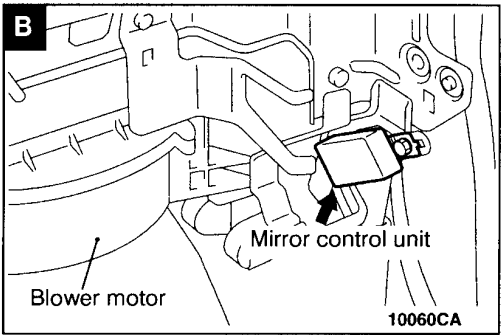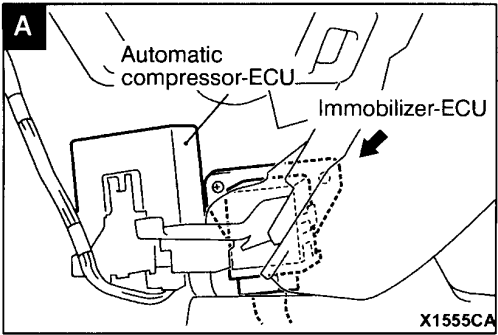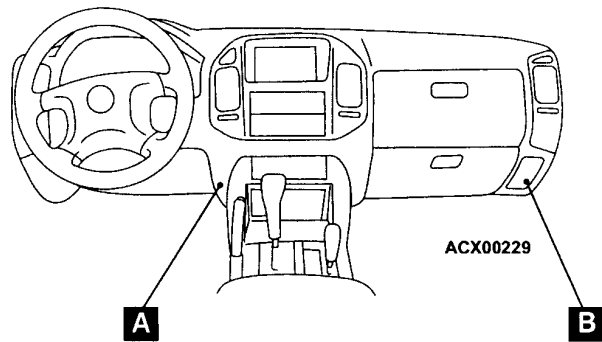


SENSOR


Name		Symbol	Name	Symbol
Boost air temperature sensor	4M4	C	Engine coolant temperature sensor <4D5>	D
	4D5	A	Fuel temperature sensor <4D5>	F
Boost pressure sensor <4D5>		B	Oxygen sensor (Rear) <A/T>	G
Control sleeve position sensor <4D5>		F	Pump speed sensor <4D5>	F
Crank angle sensor <4D5>		E	Timer piston position sensor <4D5>	F
EGR valve assembly <4M4>		C	Variable geometry control pressure sensor <4D5>	B
EGR valve position sensor <4D5>		A		

<4D5>


<4M4>

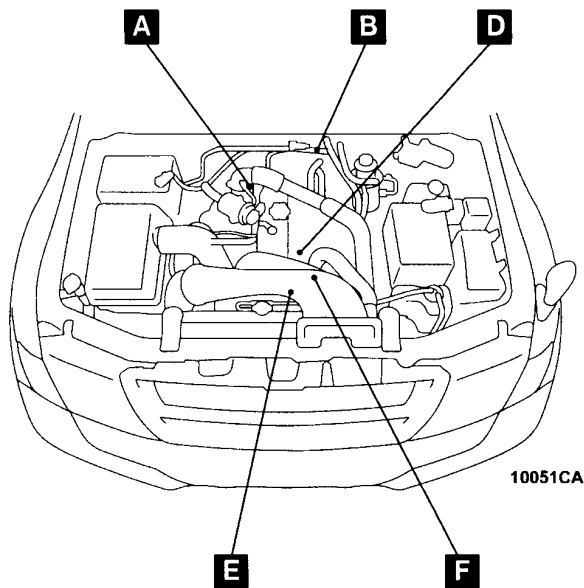








10051CA

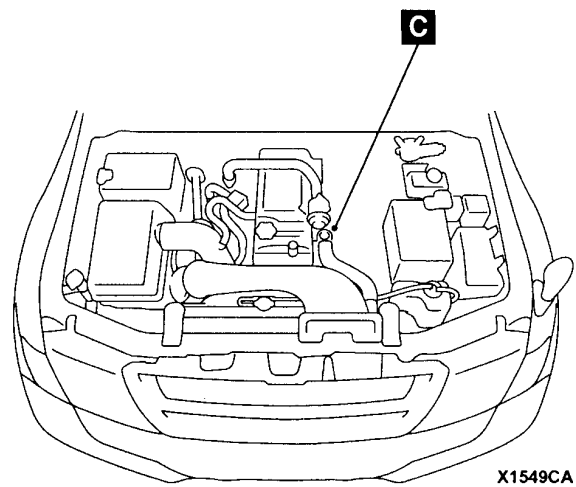

X1549CA

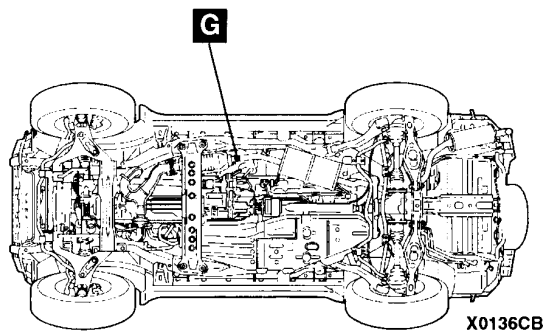




X0136CB

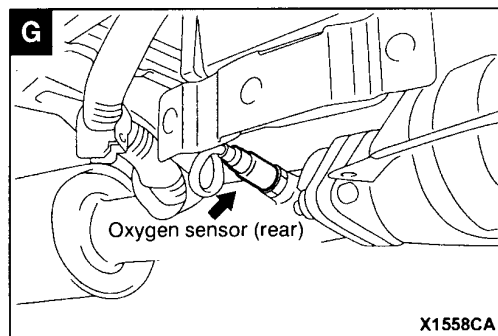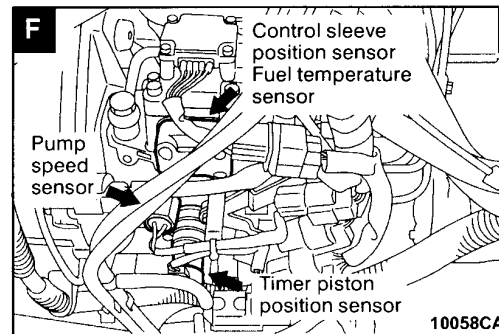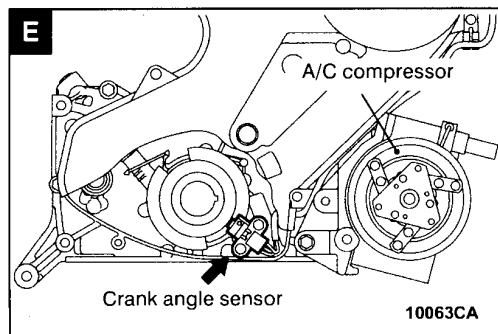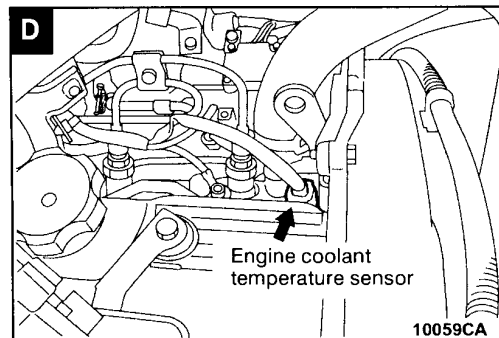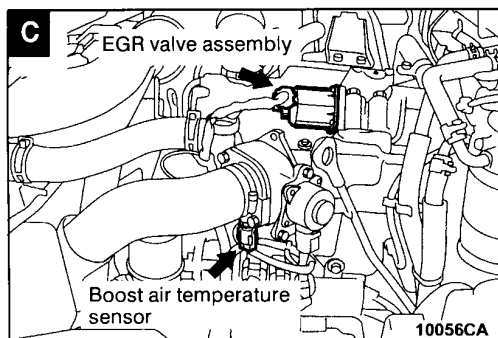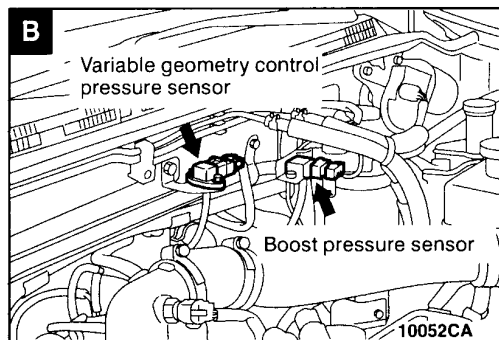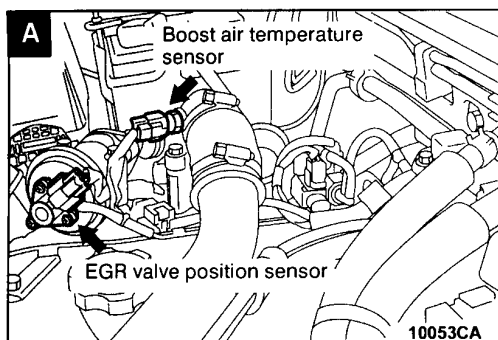

SOLENOID VALVE

Name	Symbol	Name	Symbol
Fuel cut solenoid valve <4D5>	B	Timing control valve <4D5>	B
GE actuator <4D5>	B	Variable geometry solenoid valve <4D5>	A
Throttle solenoid valve <4D5>	A		

<4D5>

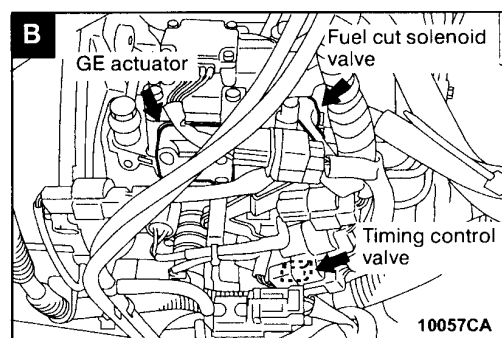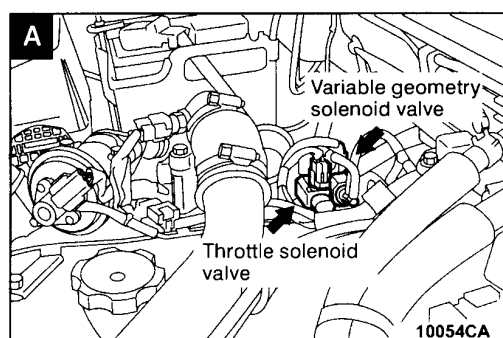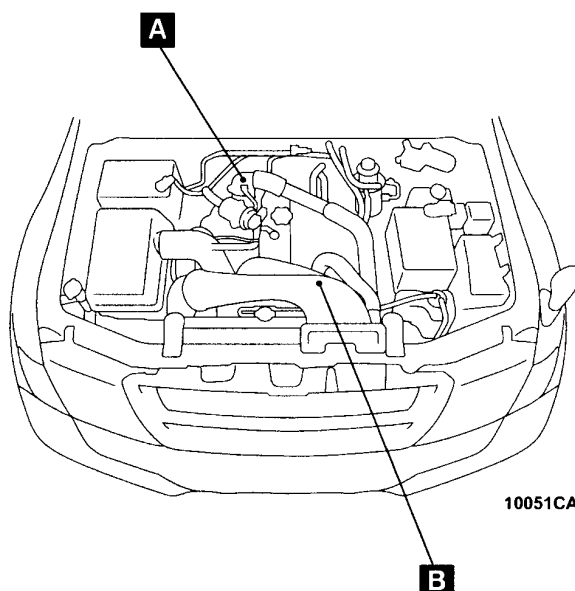

EARTH CABLE