

2010 DTC INDEX

Camaro

ORDERED DIAGNOSTIC TROUBLE CODES

CAMARO DIAGNOSTIC TROUBLE CODE (DTC) LIST

DTC	DTC Descriptor	Diagnostic Procedure
B0012	Driver Frontal Deployment Loop Stage 1	<u>DTC B0012 or B0013</u>
B0013	Driver Frontal Deployment Loop Stage 2	<u>DTC B0012 or B0013</u>
B0014	Driver Side Deployment Loop	<u>DTC B0014-B0045</u>
B0015	Driver Seat Belt Pretensioner Deployment Loop	<u>DTC B0014-B0045</u>
B0016	Left Roof Rail Deployment Loop 1	<u>DTC B0014-B0045</u>
B0019	Passenger Frontal Deployment Loop Stage 1	<u>DTC B0014-B0045</u>
B0020	Passenger Frontal Deployment Loop Stage 2	<u>DTC B0014-B0045</u>
B0021	Passenger Side Deployment Loop	<u>DTC B0014-B0045</u>
B0022	Passenger Seat Belt Pretensioner Deployment Loop	<u>DTC B0014-B0045</u>
B0023	Right Roof Rail Deployment Loop 1	<u>DTC B0014-B0045</u>
B0052	Deployment Commanded	<u>DTC B0052</u>
B0074	Passenger Occupant Classification Sensor	<u>DTC B0074</u>
B0079	Driver Seat Position Sensor Circuit	<u>DTC B0079 or B0080</u>
B0080	Passenger Seat Position Sensor Circuit	<u>DTC B0079 or B0080</u>
B0081	Passenger Presence Detection Module	<u>DTC B0081 (SDM) or DTC B0081 (Passenger Presence Detection Module)</u>
B0083	Front End Sensor 1	<u>DTC B0083-B0088</u>
B0084	Front End Sensor 2	<u>DTC B0083-B0088</u>
B0085	Left Front Side Impact Sensor	<u>DTC B0083-B0088</u>
B0086	Right Front Side Impact Sensor	<u>DTC B0083-B0088</u>
B0158	Ambient Air Temperature Sensor Circuit	<u>DTC B0158</u>
B0193	Front Blower Motor Speed Circuit	<u>DTC B0193</u>
B0223	Recirculate Position Command 1 Circuit	<u>DTC B0223, B0233, B023A, or B0408</u>
B0233	Air Flow Control Circuit	<u>DTC B0223, B0233, B023A, or B0408</u>
B023A	HVAC Actuators Supply Voltage	<u>DTC B0223, B0233, B023A, or B0408</u>
B0283	Electric Rear Defrost Circuit	<u>DTC B0283</u>
B0408	Main Temperature Control Circuit	<u>DTC B0223, B0233, B023A, or B0408</u>
B0550	Odometer Circuit	<u>DTC B0550</u>
B0685	Security System Indicator Circuit	<u>DTC B0685</u>
	Parking Aid Rear Sensor Left Corner	

B0958	Circuit	<u>DTC B0958, B0959, B0960, or B0961</u>
B0959	Parking Aid Rear Sensor Left Middle Circuit	<u>DTC B0958, B0959, B0960, or B0961</u>
B0960	Parking Aid Rear Sensor Right Middle Circuit	<u>DTC B0958, B0959, B0960, or B0961</u>
B0961	Parking Aid Rear Sensor Right Corner Circuit	<u>DTC B0958, B0959, B0960, or B0961</u>
B1000	Electronic Control Unit	<u>DTC B1000</u>
B1001	Option Configuration	<u>DTC B1001</u>
		<u>DTC B1001</u>
B1015	Vehicle Identification Number Information Malfunction	<u>DTC B1015</u>
B1019	System Configuration Error	<u>DTC B1019</u>
B101D	ECU Hardware	<u>DTC B101D</u>
B101E	ECU Software	<u>DTC B101E</u>
B1020	Auxiliary Electronic Control Unit Performance	<u>DTC B1020</u>
B1025	Left Front Audio Output Circuit	<u>DTC B1025, B1035, B1045, or B1055</u>
B1035	Right Front Audio Output Circuit	<u>DTC B1025, B1035, B1045, or B1055</u>
B1045	Left Rear Audio Output Circuit	<u>DTC B1025, B1035, B1045, or B1055</u>
B1055	Right Rear Audio Output Circuit	<u>DTC B1025, B1035, B1045, or B1055</u>
B125C	Satellite Antenna 1 Circuit	<u>DTC B125C</u>
B1271	Theft Protection Active	<u>DTC B1271</u>
B1278	Left Auxiliary Input Signal Circuit	<u>DTC B1278 or B1279</u>
B1279	Right Auxiliary Input Signal Circuit	<u>DTC B1278 or B1279</u>
B1287	Amplifier Control Signal Circuit	<u>DTC B1287</u>
B1325	Device Power Circuit	<u>DTC B1325</u>
B1370	Control Module Ignition On and Start Circuit	<u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1380	Control Module Ignition Accessory Circuit	<u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B138A	Control Module Voltage Reference Output Circuit	<u>DTC B138A</u>
B1405	Control Module Voltage Reference Output 2 Circuit	<u>DTC B1405</u>
B1420	Device Voltage Circuit	<u>DTC B1420</u>
B1441	Control Module Ignition Off, Run, and Start Circuit	<u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1445	Control Module Voltage Output Circuit	<u>DTC B1445</u>
B1446	Replace Backup Power Source	<u>DTC B1446 or B1447</u>
B1447	Backup Power Source	<u>DTC B1446 or B1447</u>
B144B	RUN/CRNK Relay Circuit	<u>DTC B144B</u>
B1516	Battery Current Sensor	<u>DTC B1516</u>

B1517	Battery Voltage	<u>DTC B1517</u>
B151A	Low Battery Capacity Detected	<u>DTC B151A</u>
B1527	High Parasitic Load Detected	<u>DTC B1527</u>
B1529	Control Module Voltage Reference Output 5 Circuit	<u>DTC B1529</u>
B1925	Left Seat Cushion Heater Sensor Circuit	<u>DTC B1925 or B2170</u>
B2170	Right Seat Cushion Heater Sensor Circuit	<u>DTC B1925 or B2170</u>
B2345	Front Seat Heater Disable Circuit	<u>DTC B2345</u>
B2425	Left Seat Cushion Heater Circuit	<u>DTC B2425 or B2430</u>
B242A	Seat Heaters Common Circuit	<u>DTC B242A</u>
B2430	Right Seat Cushion Heater Circuit	<u>DTC B2425 or B2430</u>
B2455	Cellular Phone Microphone Circuit	<u>DTC B2455</u>
B2462	Global Positioning System Antenna Malfunction	<u>DTC B2462 (Communication Interface Module)</u>
B2470	Cellular Phone Antenna Circuit	<u>DTC B2470</u>
B2476	Cellular Phone Select Service Switch	<u>DTC B2476 or B2482</u>
B2482	Cellular Phone Select Service Switch Range/Performance	<u>DTC B2476 or B2482</u>
B2485	Wireless Communication Antenna Circuit (Bluetooth)	<u>DTC B2485</u>
B2530	Front Fog Lamps Control Circuit	<u>DTC B2530</u>
B2545	Backup Lamps Control Circuit	<u>DTC B2545</u>
B2560	Cargo Lamp Control Circuit	<u>DTC B2560</u>
B2575	Headlamps Control Circuit	<u>DTC B2575 or B2699</u>
B257A	Headlamp Switch Input Signals Mismatch	<u>DTC B257A</u>
B257B	Lighting Control Switch Signal	<u>DTC B257B</u>
B2580	Headlamp High Beam Control Circuit	<u>DTC B2580</u>
B2585	Left Park Lamps Control Circuit	<u>DTC B2585 or B3867</u>
B258A	Low Beam Control Circuit	<u>DTC B258A</u>
B2600	Left Daytime Running Lamps Control Circuit	<u>DTC B2600 or B2605</u>
B2605	Right Daytime Running Lamps Control Circuit	<u>DTC B2600 or B2605</u>
B2610	Passenger Compartment Dimming 1 Circuit	<u>DTC B2610</u>
B2615	Passenger Compartment Dimming 2 Circuit	<u>DTC B2615</u>
B2645	Ambient Light Sensor Circuit	<u>DTC B2645</u>
B2652	Passenger Compartment Dimming 3 Circuit	<u>DTC B2652</u>
B2699	Right Headlamp Control Circuit	<u>DTC B2575 or B2699</u>

B270A	Park Lock Solenoid Control Circuit	<u>DTC B270A</u>
B2730	Interior Trunk Lid Unlatch Switch Circuit	<u>DTC B2730</u>
B2745	Traction Control Switch Circuit	<u>DTC B2745</u>
B2750	Horn Relay Secondary Circuit	<u>DTC B2750</u>
B2955	Security Sensor Data Circuit Malfunction	<u>DTC B2955</u>
B3006	Hood Ajar Circuit	<u>DTC B3006</u>
B302A	Telematic Requested Immobilization	<u>DTC B302A</u>
B3031	Security System Controller In Learn Mode	<u>DTC B3031</u>
B3055	No Transponder Modulation or No Transponder	<u>DTC B3055</u>
B3060	Unprogrammed Transponder Identification Code Received	<u>DTC B3060</u>
B3101	Keyless Entry Data Link Circuit	<u>DTC B3101</u>
B3105	Keyless Entry System Key Fobs	<u>DTC B3105</u>
B3106	Keyless Entry Data Link	<u>DTC B3106</u>
B3109	Keyless Entry Transmitter 1 Battery	<u>DTC B3109-B3113</u>
B3110	Keyless Entry Transmitter 2 Battery	<u>DTC B3109-B3113</u>
B3111	Keyless Entry Transmitter 3 Battery	<u>DTC B3109-B3113</u>
B3112	Keyless Entry Transmitter 4 Battery	<u>DTC B3109-B3113</u>
B3113	Keyless Entry Transmitter 5 Battery	<u>DTC B3109-B3113</u>
B310D	Keyless Entry Transmitter 6 Battery	<u>DTC B310D-B310F</u>
B310E	Keyless Entry Transmitter 7 Battery	<u>DTC B310D-B310F</u>
B310F	Keyless Entry Transmitter 8 Battery	<u>DTC B310D-B310F</u>
B3125	Driver Door Only Unlock Circuit	<u>DTC B3125, B3130, or B3135</u>
B3130	All Doors Unlock Circuit	<u>DTC B3125, B3130, or B3135</u>
B3135	All Doors Lock Circuit	<u>DTC B3125, B3130, or B3135</u>
B3140	Driver Unlock Switch Circuit	<u>DTC B3140 or B3150</u>
B3150	Driver Lock Switch Circuit	<u>DTC B3140 or B3150</u>
B316B	Driver Window Switch	<u>DTC B316B or B317A</u>
B317A	Passenger Window Switch	<u>DTC B316B or B317A</u>
B3205	Driver Window Motor Circuit	<u>DTC B3205 or B3210</u>
B3210	Passenger Window Motor Circuit	<u>DTC B3205 or B3210</u>
B3265	Trunk Lid Unlatch Output Circuit	<u>DTC B3265</u>
B3567	Info Display Select Switch Circuit	<u>DTC B3567</u>
B3596	Hazard Lamps Request Circuit	<u>DTC B3596</u>
B3622	Steering Wheel Controls Signal Circuit	<u>DTC B3622</u>
B3650	High Beam Request Signal Circuit	<u>DTC B3650</u>
B3664	Sunroof Position Select Switch High Signal Circuit	<u>DTC B3664</u>
B3697	Sunroof Actuator	<u>DTC B3697</u>

B3715	Windshield Wiper Relay Circuit	<u>DTC B3715 or B3875</u>
B3794	Cruise Control Function Request Circuit	<u>DTC B3794</u>
B3806	High Beam and Headlamp Flash Select Circuit	<u>DTC B3806</u>
B3810	Headlamp Washer Relay Circuit	<u>DTC B3810</u>
B3867	Right Park Lamps Control Circuit	<u>DTC B2585 or B3867</u>
B3873	Front Washer Relay Circuit	<u>DTC B3873</u>
B3875	Windshield Wiper High Speed Relay Circuit	<u>DTC B3715 or B3875</u>
B3881	Tail Lamp Circuit	<u>DTC B3881 or B3882</u>
B3882	Right Tail Lamp Circuit	<u>DTC B3881 or B3882</u>
B3883	License Plate Lamp Circuit	<u>DTC B3883</u>
B3884	Center High Mounted Brake Lamp Circuit	<u>DTC B3884</u>
B3902	Incorrect Immobilizer Identifier Received	<u>DTC B3902</u>
B3933	Air Conditioning Evaporator Temperature Sensor Circuit	<u>DTC B3933</u>
B3935	Transponder Authentication Error	<u>DTC B3935</u>
B3948	Left Front Turn Signal Circuit	<u>DTC B3948 or B3949</u>
B3949	Right Front Turn Signal Circuit	<u>DTC B3948 or B3949</u>
B3950	Left Rear Turn Signal Circuit	<u>DTC B3950 or B3951</u>
B3951	Right Rear Turn Signal Circuit	<u>DTC B3950 or B3951</u>
B3976	Unconfigured Transponder	<u>DTC B3976</u>
B3984	Device 1 Environment Identifier Not Programmable	<u>DTC B3984</u>
C0035	Left Front Wheel Speed Sensor Circuit	<u>DTC C0035-C0050</u>
C0040	Right Front Wheel Speed Sensor Circuit	<u>DTC C0035-C0050</u>
C0045	Left Rear Wheel Speed Sensor Circuit	<u>DTC C0035-C0050</u>
C0050	Right Rear Wheel Speed Sensor Circuit	<u>DTC C0035-C0050</u>
C0060	Left Front Dump Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0065	Left Front Isolation Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0070	Right Front Dump Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0075	Right Front Isolation Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0080	Left Rear Dump Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0085	Left Rear Isolation Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
		<u>DTC C0060-C0095, C0121, C0141, C0146,</u>

C0090	Right Rear Dump Solenoid Valve Circuit	<u>C0151, or C0156</u>
C0095	Right Rear Isolation Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0110	Pump Motor Circuit	<u>DTC C0110</u>
C0121	Valve Relay Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0131	Antilock Braking System Pressure Circuit	<u>DTC C0131</u>
C0141	Front Prime Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0146	Front Isolation Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0151	Rear Prime Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0156	Rear Isolation Solenoid Valve Circuit	<u>DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156</u>
C0161	Antilock Braking System Brake Sensor Circuit	<u>DTC C0161</u>
C0186	Lateral Acceleration Sensor Circuit	<u>DTC C0186, C0196, or C019B</u>
C0196	Yaw Rate Signal	<u>DTC C0186, C0196, or C019B</u>
C019B	Yaw Rate Signal	<u>DTC C0186, C0196, or C019B</u>
C0242	Engine Control Module Indicated Traction Control Malfunction	<u>DTC C0242 or P0856</u>
C0245	Wheel Speed Sensor Frequency	<u>DTC C0245</u>
C0267	Low Brake Fluid Indicated	<u>DTC C0267</u>
C0277	Brake Pedal Position Sensor Circuit	<u>DTC C0277 or C0890</u>
C0280	Stability System Active Too Long	<u>DTC C0280</u>
C0297	Brake Applied Output Circuit	<u>DTC C0297</u>
C0550	Electronic Control Unit	<u>DTC C0550</u>
C0569	System Configuration Malfunction	<u>DTC C0569</u>
C056D	Electronic Control Unit Hardware	<u>DTC C056D</u>
C056E	Electronic Control Unit Software	<u>DTC C056E</u>
C0710	Steering Position Signal	<u>DTC C0710</u>
C0750	Left Front Tire Pressure Sensor	<u>DTC C0750, C0755, C0760, or C0765</u>
C0755	Right Front Tire Pressure Sensor	<u>DTC C0750, C0755, C0760, or C0765</u>
C0760	Left Rear Tire Pressure Sensor	<u>DTC C0750, C0755, C0760, or C0765</u>
C0765	Right Rear Tire Pressure Sensor	<u>DTC C0750, C0755, C0760, or C0765</u>
C0775	Tire Pressure Monitoring System Sensors Malfunction	<u>DTC C0775</u>
C078A	Tire Pressure Indicator Module Internal Malfunction	<u>DTC C078A</u>
C0800	Device Power 1 Circuit Voltage	<u>DTC C0800</u>
	Control Module Voltage Reference	

C0890	Output 3 Circuit	<u>DTC C0277 or C0890</u>
P0008	Engine Position System Performance Bank 1	<u>DTC P0008 or P0009</u>
P0009	Engine Position System Performance Bank 2	<u>DTC P0008 or P0009</u>
P000A	Intake Camshaft Position System Slow Response Bank 1	<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u>
P000B	Exhaust Camshaft Position System Slow Response Bank 1	<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u>
P000C	Intake Camshaft Position System Slow Response Bank 2	<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u>
P000D	Exhaust Camshaft Position System Slow Response Bank 2	<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u>
P0010	Intake Camshaft Position Actuator Solenoid Valve Control Circuit Bank 1	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines
	Camshaft Position Actuator Solenoid Valve Control Circuit	<u>DTC P0010</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0011	Intake Camshaft Position System Performance Bank 1	<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines
	Camshaft Position System Performance	<u>DTC P0011</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0013	Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit Bank 1	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P0014	Exhaust Camshaft Position System Performance Bank 1	<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u>
P0016	Crankshaft Position - Intake Camshaft Position Not Plausible Bank 1	<u>DTC P0016, P0017, P0018, or P0019</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines
	Crankshaft Position - Camshaft Position Not Plausible	<u>DTC P0016</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0017	Crankshaft Position - Exhaust Camshaft Position Not Plausible Bank 1	<u>DTC P0016, P0017, P0018, or P0019</u>
P0018	Crankshaft Position - Intake Camshaft Position Not Plausible Bank 2	<u>DTC P0016, P0017, P0018, or P0019</u>
P0019	Crankshaft Position - Exhaust Camshaft Position Not Plausible Bank 2	<u>DTC P0016, P0017, P0018, or P0019</u>
P0020	Intake Camshaft Position Actuator Solenoid Valve Control Circuit Bank 2	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P0021	Intake Camshaft Position System Performance Bank 2	<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u>
P0023	Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit Bank 2	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>

P0024	Exhaust Camshaft Position System Performance Bank 2	<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u>
P0030	HO2S Heater Control Circuit Bank 1 Sensor 1	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0031	HO2S Heater Control Circuit Low Voltage Bank 1 Sensor 1	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u>
P0032	HO2S Heater Control Circuit High Voltage Bank 1 Sensor 1	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u>
P0036	HO2S Heater Control Circuit Bank 1 Sensor 2	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0037	HO2S Heater Control Circuit Low Voltage Bank 1 Sensor 2	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u>
P0038	HO2S Heater Control Circuit High Voltage Bank 1 Sensor 2	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u>
P0050	HO2S Heater Control Circuit Bank 2 Sensor 1	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0051	HO2S Heater Control Circuit Low Voltage Bank 2 Sensor 1	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u>
P0052	HO2S Heater Control Circuit High Voltage Bank 2 Sensor 1	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u>
P0053	HO2S Heater Resistance Bank 1 Sensor 1	<u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or</u>

		<u>P0161</u>
P0054	HO2S Heater Resistance Bank 1 Sensor 2	<u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u>
P0056	HO2S Heater Control Circuit Bank 2 Sensor 2	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0057	HO2S Heater Control Circuit Low Voltage Bank 2 Sensor 2	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u>
P0058	HO2S Heater Control Circuit High Voltage Bank 2 Sensor 2	<u>DTC P0030, P0031, P0032, P0036, P0037, P0038, P0050, P0051, P0052, P0056, P0057, or P0058</u>
P0059	HO2S Heater Resistance Bank 2 Sensor 1	<u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u>
P0060	HO2S Heater Resistance Bank 2 Sensor 2	<u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u>
P0068	Throttle Body Airflow Performance	<u>DTC P0068 or P0121</u>
P0087	Fuel Rail Low Pressure	<u>DTC P0087, P0088, or P0089</u>
P0088	Fuel Rail High Pressure	<u>DTC P0087, P0088, or P0089</u>
P0089	Fuel Pressure Regulator Performance	<u>DTC P0087, P0088, or P0089</u>
P0090	Fuel Pressure Regulator Control Circuit	<u>DTC P0090, P0091, or P0092</u>
P0091	Fuel Pressure Regulator Control Circuit Low Voltage	<u>DTC P0090, P0091, or P0092</u>
P0092	Fuel Pressure Regulator Control Circuit High Voltage	<u>DTC P0090, P0091, or P0092</u>
P0100	Mass Air Flow Sensor Circuit	<u>DTC P0100-P0103</u>
P0101	Mass Air Flow Sensor Circuit Performance	<u>DTC P0101</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0101 or P1101</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0102	Mass Air Flow Sensor Circuit Low Frequency	<u>DTC P0100-P0103</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0102 or P0103</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0100-P0103</u> for the 2.8L, 3.0L, 3.2L, or

P0103	Mass Air Flow Sensor Circuit High Frequency	3.6L engines or <u>DTC P0102 or P0103</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0106	Manifold Absolute Pressure Sensor Performance	<u>DTC P0106</u>
P0107	Manifold Absolute Pressure Sensor Circuit Low Voltage	<u>DTC P0107 or P0108</u>
P0108	Manifold Absolute Pressure Sensor Circuit High Voltage	<u>DTC P0107 or P0108</u>
P0111	Intake Air Temperature Sensor Performance	<u>DTC P0111-P0113</u>
P0112	Intake Air Temperature Sensor Circuit Low Voltage	<u>DTC P0111-P0113</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0112 or P0113</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0113	Intake Air Temperature Sensor Circuit High Voltage	<u>DTC P0111-P0113</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0112 or P0113</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0116	Engine Coolant Temperature Sensor Performance	<u>DTC P0116 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0116</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0117	Engine Coolant Temperature Sensor Circuit Low Voltage	<u>DTC P0117 or P0118 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0117 or P0118</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0118	Engine Coolant Temperature Sensor Circuit High Voltage	<u>DTC P0117 or P0118 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0117 or P0118</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0119	Engine Coolant Temperature Sensor Circuit Intermittent	<u>DTC P0119 (w/LLT)</u>
P0120	Throttle Position Sensor 1 Circuit	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u>
P0121	Throttle Position Sensor 1 Performance	<u>DTC P0121-P0123 or P0221-P0223</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0068 or P0121</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines

P0122	Throttle Position Sensor 1 Circuit Low Voltage	<u>DTC P0121-P0123 or P0221-P0223</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0123	Throttle Position Sensor 1 Circuit High Voltage	<u>DTC P0121-P0123 or P0221-P0223</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0128	Engine Coolant Temperature Below Thermostat Regulating Temperature	<u>DTC P0128 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0128</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0130	HO2S Circuit Closed Loop Performance Bank 1 Sensor 1	<u>DTC P0130 or P0150</u>
P0131	HO2S Circuit Low Voltage Bank 1 Sensor 1	<u>DTC P0131 or P0151</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0132	HO2S Circuit High Voltage Bank 1 Sensor 1	<u>DTC P0132 or P0152</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0133	HO2S Slow Response Bank 1 Sensor 1	<u>DTC P0133 or P0153 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0134	HO2S Circuit Insufficient Activity Bank 1 Sensor 1	<u>DTC P0134 or P0154</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0134, P0140, P0154, or P0160</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0135	HO2S Heater Performance Bank 1 Sensor 1	<u>DTC P0135, P0141, P0155, or P0161</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or</u>

		<u>P0161</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0137	HO2S Circuit Low Voltage Bank 1 Sensor 2	<u>DTC P0137, P0138, P0140, P0157, P0158, or P0160</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0138	HO2S Circuit High Voltage Bank 1 Sensor 2	<u>DTC P0137, P0138, P0140, P0157, P0158, or P0160</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P013A	HO2S Slow Response Rich to Lean Bank 1 Sensor 2	<u>DTC P013A, P013C, P013E, or P014A</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P013B	HO2S Slow Response Lean to Rich Bank 1 Sensor 2	<u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u>
P013C	HO2S Slow Response Rich to Lean Bank 2 Sensor 2	<u>DTC P013A, P013C, P013E, or P014A</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P013D	HO2S Slow Response Lean to Rich Bank 2 Sensor 2	<u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u>
P013E	HO2S Delayed Response Rich to Lean Bank 1 Sensor 2	<u>DTC P013A, P013C, P013E, or P014A</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P013F	HO2S Delayed Response Lean to Rich Bank 1 Sensor 2	<u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u>
P0140	HO2S Circuit Insufficient Activity Bank 1 Sensor 2	<u>DTC P0137, P0138, P0140, P0157, P0158, or P0160</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0134, P0140, P0154, or P0160</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
	HO2S Heater Performance Bank 1	<u>DTC P0135, P0141, P0155, or P0161</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or

P0141	Sensor 2	<u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P014A	HO2S Delayed Response Rich to Lean Bank 2 Sensor 2	<u>DTC P013A, P013C, P013E, or P014A</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P014B	HO2S Delayed Response Lean to Rich Bank 2 Sensor 2	<u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u>
P0150	HO2S Circuit Closed Loop Performance Bank 2 Sensor 1	<u>DTC P0130 or P0150</u>
P0151	HO2S Circuit Low Voltage Bank 2 Sensor 1	<u>DTC P0131 or P0151</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0152	HO2S Circuit High Voltage Bank 2 Sensor 1	<u>DTC P0132 or P0152</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0153	HO2S Slow Response Bank 2 Sensor 1	<u>DTC P0133 or P0153 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0154	HO2S Circuit Insufficient Activity Bank 2 Sensor 1	<u>DTC P0134 or P0154</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0134, P0140, P0154, or P0160</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0155	HO2S Heater Performance Bank 2 Sensor 1	<u>DTC P0135, P0141, P0155, or P0161</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0137, P0138, P0140, P0157, P0158, or P0160</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines

P0157	HO2S Circuit Low Voltage Bank 2 Sensor 2	<u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0158	HO2S Circuit High Voltage Bank 2 Sensor 2	<u>DTC P0137, P0138, P0140, P0157, P0158, or P0160</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0160	HO2S Circuit Insufficient Activity Bank 2 Sensor 2	<u>DTC P0137, P0138, P0140, P0157, P0158, or P0160</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0134, P0140, P0154, or P0160</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0161	HO2S Heater Performance Bank 2 Sensor 2	<u>DTC P0135, P0141, P0155, or P0161</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0030, P0036, P0050, P0053, P0054, P0056, P0059, P0060, P0135, P0141, P0155, or P0161</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0171	Fuel Trim System Lean Bank 1	<u>DTC P0171, P0172, P0174, or P0175</u>
P0172	Fuel Trim System Rich Bank 1	<u>DTC P0171, P0172, P0174, or P0175</u>
P0174	Fuel Trim System Lean Bank 2	<u>DTC P0171, P0172, P0174, or P0175</u>
P0175	Fuel Trim System Rich Bank 2	<u>DTC P0171, P0172, P0174, or P0175</u>
P018B	Fuel Pressure Sensor Performance	<u>DTC P018B-P018D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P018B-P018D</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P018C	Fuel Pressure Sensor Circuit Low Voltage	<u>DTC P018B-P018D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P018B-P018D</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P018D	Fuel Pressure Sensor Circuit High Voltage	<u>DTC P018B-P018D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P018B-P018D</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0191	Fuel Rail Pressure Sensor Performance	<u>DTC P0191</u>
P0192	Fuel Rail Pressure Sensor Circuit Low Voltage	<u>DTC P0192 or P0193</u>
P0193	Fuel Rail Pressure Sensor Circuit High Voltage	<u>DTC P0192 or P0193</u>

P0196	Engine Oil Temperature Sensor Performance	<u>DTC P0196, P0197, or P0198</u>
P0197	Engine Oil Temperature Sensor Circuit Low Voltage	<u>DTC P0196, P0197, or P0198</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0197 or P0198</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0198	Engine Oil Temperature Sensor Circuit High Voltage	<u>DTC P0196, P0197, or P0198</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0197 or P0198</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0201	Cylinder 1 Injector Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0202	Cylinder 2 Injector Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0203	Cylinder 3 Injector Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0204	Cylinder 4 Injector Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines

		6.2L, or 7.0L engines
P0205	Cylinder 5 Injector Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0206	Cylinder 6 Injector Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0207	Cylinder 7 Injector Control Circuit	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0208	Cylinder 8 Injector Control Circuit	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0218	Transmission Fluid Overtemperature	<u>DTC P0218</u>
P0219	Engine Overspeed Condition	<u>DTC P0219</u>
P0220	Throttle Position Sensor 2 Circuit	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u>
P0221	Throttle Position Sensor 2 Performance	<u>DTC P0121-P0123 or P0221-P0223</u>
P0222	Throttle Position Sensor 2 Circuit Low Voltage	<u>DTC P0121-P0123 or P0221-P0223</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0223	Throttle Position Sensor 2 Circuit High Voltage	<u>DTC P0121-P0123 or P0221-P0223</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0230	Fuel Pump Relay Control Circuit	<u>DTC P0230</u>
P0231	Fuel Pump Control Circuit Low Voltage	<u>DTC P0231, P0232, or P023F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0231, P0232, or P023F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines

P0232	Fuel Pump Control Circuit High Voltage	<u>DTC P0231, P0232, or P023F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0231, P0232, or P023F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P023F	Fuel Pump Control Circuit	<u>DTC P0231, P0232, or P023F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0231, P0232, or P023F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P025A	Fuel Pump Control Module Enable Circuit	<u>DTC P025A</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P025A</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0261	Cylinder 1 Injector Control Circuit Low Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0262	Cylinder 1 Injector Control Circuit High Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0264	Cylinder 2 Injector Control Circuit Low Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0265	Cylinder 2 Injector Control Circuit High Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0267	Cylinder 3 Injector Control Circuit Low Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0268	Cylinder 3 Injector Control Circuit High Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0270	Cylinder 4 Injector Control Circuit Low Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0271	Cylinder 4 Injector Control Circuit High Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152,</u>

		<u>P2155, P216A, or P216D</u>
P0273	Cylinder 5 Injector Control Circuit Low Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0274	Cylinder 5 Injector Control Circuit High Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0276	Cylinder 6 Injector Control Circuit Low Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P0277	Cylinder 6 Injector Control Circuit High Voltage	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P029D	Cylinder 1 Injector Leak Detected	<u>DTC P029D, P02A1, P02A5, P02A9, P02AD, or P02B1</u>
P02A1	Cylinder 2 Injector Leak Detected	<u>DTC P029D, P02A1, P02A5, P02A9, P02AD, or P02B1</u>
P02A5	Cylinder 3 Injector Leak Detected	<u>DTC P029D, P02A1, P02A5, P02A9, P02AD, or P02B1</u>
P02A9	Cylinder 4 Injector Leak Detected	<u>DTC P029D, P02A1, P02A5, P02A9, P02AD, or P02B1</u>
P02AD	Cylinder 5 Injector Leak Detected	<u>DTC P029D, P02A1, P02A5, P02A9, P02AD, or P02B1</u>
P02B1	Cylinder 6 Injector Leak Detected	<u>DTC P029D, P02A1, P02A5, P02A9, P02AD, or P02B1</u>
P0300	Engine Misfire Detected	<u>DTC P0300-P0306</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0300-P0308</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0301	Cylinder 1 Misfire Detected	<u>DTC P0300-P0306</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0300-P0308</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0302	Cylinder 2 Misfire Detected	<u>DTC P0300-P0306</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0300-P0308</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0300-P0306</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines

P0303	Cylinder 3 Misfire Detected	<u>DTC P0300-P0308</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0304	Cylinder 4 Misfire Detected	<u>DTC P0300-P0306</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0300-P0308</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0305	Cylinder 5 Misfire Detected	<u>DTC P0300-P0306</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0300-P0308</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0306	Cylinder 6 Misfire Detected	<u>DTC P0300-P0306</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0300-P0308</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0307	Cylinder 7 Misfire Detected	<u>DTC P0300-P0308</u>
P0308	Cylinder 8 Misfire Detected	<u>DTC P0300-P0308</u>
P0315	Crankshaft Position System Variation Not Learned	<u>DTC P0315</u>
P0324	Knock Sensor Module Performance	<u>DTC P0324</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0325	Knock Sensor Circuit Bank 1	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0326	Knock Sensor Performance Bank 1	<u>DTC P0326, P0327, P0328, P0331, P0332, or P0333</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines
	Knock Sensor Performance	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0327	Knock Sensor Circuit Low Voltage Bank 1	<u>DTC P0326, P0327, P0328, P0331, P0332, or P0333</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0328	Knock Sensor Circuit High Voltage Bank 1	<u>DTC P0326, P0327, P0328, P0331, P0332, or P0333</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines

		6.2L, or 7.0L engines
P0330	Knock Sensor Circuit Bank 2	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0331	Knock Sensor Performance Bank 2	<u>DTC P0326, P0327, P0328, P0331, P0332, or P0333</u>
P0332	Knock Sensor Circuit Low Voltage Bank 2	<u>DTC P0326, P0327, P0328, P0331, P0332, or P0333</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0333	Knock Sensor Circuit High Voltage Bank 2	<u>DTC P0326, P0327, P0328, P0331, P0332, or P0333</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0335	Crankshaft Position Sensor Circuit	<u>DTC P0335, P0336, or P0338</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0335</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0336	Crankshaft Position Sensor Performance	<u>DTC P0335, P0336, or P0338</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0336</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0338	Crankshaft Position Sensor Circuit High Duty Cycle	<u>DTC P0335, P0336, or P0338</u>
P0340	Camshaft Position Sensor Circuit	<u>DTC P0340</u>
P0341	Intake Camshaft Position Sensor Performance Bank 1	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines
	Camshaft Position Sensor Performance	<u>DTC P0341</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0342	Intake Camshaft Position Sensor Circuit Low Voltage Bank 1	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0343	Intake Camshaft Position Sensor Circuit High Voltage Bank 1	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0346	Intake Camshaft Position Sensor Performance Bank 2	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0347	Intake Camshaft Position Sensor Circuit	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or</u>

	Low Voltage Bank 2	<u>P0393</u>
P0348	Intake Camshaft Position Sensor Circuit High Voltage Bank 2	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0351	Ignition Coil 1 Control Circuit	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0351-P0358</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0352	Ignition Coil 2 Control Circuit	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0351-P0358</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0353	Ignition Coil 3 Control Circuit	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0351-P0358</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0354	Ignition Coil 4 Control Circuit	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0351-P0358</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0355	Ignition Coil 5 Control Circuit	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0351-P0358</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0356	Ignition Coil 6 Control Circuit	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0351-P0358</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0357	Ignition Coil 7 Control Circuit	<u>DTC P0351-P0358</u>

P0358	Ignition Coil 8 Control Circuit	<u>DTC P0351-P0358</u>
P0366	Exhaust Camshaft Position Sensor Performance Bank 1	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0367	Exhaust Camshaft Position Sensor Circuit Low Voltage Bank 1	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0368	Exhaust Camshaft Position Sensor Circuit High Voltage Bank 1	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0391	Exhaust Camshaft Position Sensor Performance Bank 2	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0392	Exhaust Camshaft Position Sensor Circuit Low Voltage Bank 2	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0393	Exhaust Camshaft Position Sensor Circuit High Voltage Bank 2	<u>DTC P0341, P0342, P0343, P0346, P0347, P0348, P0366, P0367, P0368, P0391, P0392, or P0393</u>
P0420	Catalyst System Low Efficiency Bank 1	<u>DTC P0420 or P0430</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0420 or P0430</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0430	Catalyst System Low Efficiency Bank 2	<u>DTC P0420 or P0430</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0420 or P0430</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0442	Evaporative Emission System Small Leak Detected	<u>DTC P0442</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0442</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0443	Evaporative Emission Purge Solenoid Valve Control Circuit	<u>DTC P0443, P0458, or P0459</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0443 or P0449</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0446	Evaporative Emissions Vent System Performance	<u>DTC P0446</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0446</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0449, P0498, or P0499</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines

P0449	Evaporative Emission Vent Solenoid Valve Control Circuit	<u>DTC P0443 or P0449</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines or
P0450	Fuel Tank Pressure Sensor Circuit	<u>DTC P0450 or P0451</u>
P0451	Fuel Tank Pressure Sensor Performance	<u>DTC P0450 or P0451</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0451-P0454</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0452	Fuel Tank Pressure Sensor Circuit Low Voltage	<u>DTC P0452 or P0453</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0451-P0454</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0453	Fuel Tank Pressure Sensor Circuit High Voltage	<u>DTC P0452 or P0453</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0451-P0454</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0454	Fuel Tank Pressure Sensor Circuit Intermittent	<u>DTC P0451-P0454</u>
P0455	Evaporative Emission System Large Leak Detected	<u>DTC P0455 or P0497</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0455</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0458	Evaporative Emission Purge Solenoid Valve Control Circuit Low Voltage	<u>DTC P0443, P0458, or P0459</u>
P0459	Evaporative Emission Purge Solenoid Valve Control Circuit High Voltage	<u>DTC P0443, P0458, or P0459</u>
P0461	Fuel Level Sensor Performance	<u>DTC P0461-P0463, P2066, P2067, or P2068</u>
P0462	Fuel Level Sensor Circuit Low Voltage	<u>DTC P0461-P0463, P2066, P2067, or P2068</u>
P0463	Fuel Level Sensor Circuit High Voltage	<u>DTC P0461-P0463, P2066, P2067, or P2068</u>
P0464	Fuel Level Sensor 1 Circuit Intermittent	<u>DTC P0464</u>
P0480	Cooling Fan Relay 1 Control Circuit	<u>DTC P0480, P0481, P0691, P0692, P0693, or P0694 (w/V6-LLT)</u> with V6-LLT engine or <u>DTC P0480 or P0481</u> without V6-LLT engine
P0481	Cooling Fan Relay 2 Control Circuit	<u>DTC P0480, P0481, P0691, P0692, P0693, or P0694 (w/V6-LLT)</u> with V6-LLT engine
	Cooling Fan Relays 2 and 3 Control Circuit	<u>DTC P0480 or P0481</u> without V6-LLT engine
P0496	Evaporative Emission System Flow During Non-Purge	<u>DTC P0496</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or

		<u>DTC P0496</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0497	Evaporative Emission System No Flow During Purge	<u>DTC P0455 or P0497</u>
P0498	Evaporative Emission Vent Solenoid Valve Control Circuit Low Voltage	<u>DTC P0449, P0498, or P0499</u>
P0499	Evaporative Emission Vent Solenoid Valve Control Circuit High Voltage	<u>DTC P0449, P0498, or P0499</u>
P0501	Vehicle Speed Sensor Performance	<u>DTC P0501 or P0502</u>
P0502	Vehicle Speed Sensor Circuit Low Voltage	<u>DTC P0501 or P0502</u> for the Aisin AY6 transmission or <u>DTC P0502 or P0503</u> for the Tremec 6-Speed transmission
P0503	Vehicle Speed Sensor Circuit Intermittent	<u>DTC P0502 or P0503</u>
P0506	Idle Speed Low	<u>DTC P0506, P0507, or P050A (Without LF1)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0506 or P0507</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0507	Idle Speed High	<u>DTC P0506, P0507, or P050A (Without LF1)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0506 or P0507</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P050A	Cold Start Idle Air Control System Performance	<u>DTC P0506, P0507, or P050A (Without LF1)</u>
P0513	Immobilizer Key Incorrect	<u>DTC P0513</u>
P0521	Engine Oil Pressure Sensor Performance	<u>DTC P0521, P0522, or P0523</u>
P0522	Engine Oil Pressure Sensor Circuit Low Voltage	<u>DTC P0521, P0522, or P0523</u>
P0523	Engine Oil Pressure Sensor Circuit High Voltage	<u>DTC P0521, P0522, or P0523</u>
P0532	Air Conditioning Refrigerant Pressure Sensor Circuit Low Voltage	<u>DTC P0532 or P0533</u>
P0533	Air Conditioning Refrigerant Pressure Sensor Circuit High Voltage	<u>DTC P0532 or P0533</u>
P0556	Brake Booster Pressure Sensor Performance	<u>DTC P0556, P0557, or P0558</u>
P0557	Brake Booster Pressure Sensor Circuit Low Voltage	<u>DTC P0556, P0557, or P0558</u>
P0558	Brake Booster Pressure Sensor Circuit High Voltage	<u>DTC P0556, P0557, or P0558</u>
		<u>DTC P0562</u>

P0562	System Voltage Low	<u>DTC P0562 or P0563</u>
P0563	System Voltage High	<u>DTC P0563</u>
		<u>DTC P0562 or P0563</u>
P0564	Cruise Control Multifunction Switch Circuit	<u>DTC P0564, P0567, or P0568</u>
P0567	Cruise Control Resume Switch Circuit	<u>DTC P0564, P0567, or P0568</u>
P0568	Cruise Control Set Switch Circuit	<u>DTC P0564, P0567, or P0568</u>
P0571	Cruise Control Brake Switch Circuit	<u>DTC P0571</u>
P0572	Brake Switch Circuit 1 Low Voltage	<u>DTC P0572 or P0573</u>
P0573	Brake Switch Circuit 1 High Voltage	<u>DTC P0572 or P0573</u>
P0575	Cruise Control Switch Signal Circuit	<u>DTC P0575</u>
P0601	Control Module Read Only Memory	<u>DTC P0601-P0604, P0606, P167D, or P2610 (ECM, LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0601-P0604, P0606, or P062F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601-P0604, P0606, or P062F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0601-P0604 or P062F</u>
P0602	Control Module Not Programmed	<u>DTC P0601-P0604, P0606, P167D, or P2610 (ECM, LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0601-P0604, P0606, or P062F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601-P0604, P0606, or P062F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0601-P0604 or P062F</u>
	Transmission Control Module Not Programmed	<u>DTC P0601-P0604 or P062F</u>
	Control Module Long Term Memory	<u>DTC P0601-P0604, P0606, P167D, or P2610 (ECM, LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u> for the

P0603	Reset	4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines <u>DTC P0601-P0604, P0606, or P062F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601-P0604, P0606, or P062F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
	Transmission Control Module Long Term Memory Reset	<u>DTC P0601-P0604 or P062F</u>
P0604	Control Module Random Access Memory Performance	<u>DTC P0601-P0604, P0606, P167D, or P2610 (ECM, LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0601-P0604, P0606, or P062F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601-P0604, P0606, or P062F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
	Transmission Control Module Random Access Memory	<u>DTC P0601-P0604 or P062F</u>
P0606	Control Module Internal Performance	<u>DTC P0601-P0604, P0606, P167D, or P2610 (ECM, LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
		<u>DTC P0601-P0604, P0606, or P062F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601-P0604, P0606, or P062F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0607	Control Module Performance	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u>
P060D	Control Module Accelerator Pedal Position System Circuitry Performance	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u>
P0615	Starter Relay Control Circuit	<u>DTC P0615, P0616, or P0617</u>
P0616	Starter Relay Control Circuit Low Voltage	<u>DTC P0615, P0616, or P0617</u>
P0617	Starter Relay Control Circuit High Voltage	<u>DTC P0615, P0616, or P0617</u>
P0621	Generator L-Terminal Circuit	<u>DTC P0621</u>
P0622	Generator F-Terminal Circuit	<u>DTC P0622</u>

P0625	Generator F-Terminal Circuit Low Voltage	<u>DTC P0625 or P0626</u>
P0626	Generator F-Terminal Circuit High Voltage	<u>DTC P0625 or P0626</u>
P0627	Fuel Pump Enable Circuit	<u>DTC P0627-P0629</u>
P0628	Fuel Pump Enable Circuit Low Voltage	<u>DTC P0627-P0629</u>
P0629	Fuel Pump Enable Circuit High Voltage	<u>DTC P0627-P0629</u>
P062B	Control Module Fuel Injector Control Performance	<u>DTC P062B</u>
P062F	Control Module Long Term Memory Performance	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u>
		<u>DTC P0601-P0604, P0606, or P062F</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601-P0604, P0606, or P062F</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
	Transmission Control Module Long Term Memory Performance	<u>DTC P0601-P0604 or P062F</u>
P0633	Immobilizer Key Not Programmed	<u>DTC P0633</u>
P0634	Transmission Control Module Overtemperature	<u>DTC P0634</u>
P0638	Throttle Actuator Control Command Performance	<u>DTC P0638, P2100, P2101, or P2119</u>
P0641	5-Volt Reference 1 Circuit	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0641 or P0651 (ECM)</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
	5-Volt Reference Circuit	<u>DTC P0641 or P06A6</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0641 or P06A6</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0642	5-Volt Reference 1 Circuit Low Voltage	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u>
P0643	5-Volt Reference 1 Circuit High Voltage	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u>
P0645	Air Conditioning Compressor Clutch Relay Control Circuit	<u>DTC P0645, P0646, or P0647</u>
P0646	Air Conditioning Compressor Clutch Relay Control Circuit Low Voltage	<u>DTC P0645, P0646, or P0647</u>
P0647	Air Conditioning Compressor Clutch Relay Control Circuit High Voltage	<u>DTC P0645, P0646, or P0647</u>
		<u>DTC P1255 or P064A</u> for the 2.8L, 3.0L, 3.2L,

P064A	Fuel Pump Control Module Performance	or 3.6L engines or <u>DTC P1255 or P064A</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0650	Malfunction Indicator Lamp Control Circuit	<u>DTC P0650</u> or the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0650</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0651	5-Volt Reference 2 Circuit	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0641 or P0651 (ECM)</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0652	5-Volt Reference 2 Circuit Low Voltage	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u>
P0653	5-Volt Reference 2 Circuit High Voltage	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u>
P0658	Solenoid High Control Circuit Group 1 Low Voltage	<u>DTC P0658 or P0659</u>
P0659	Solenoid High Control Circuit Group 1 High Voltage	<u>DTC P0658 or P0659</u>
P0667	Transmission Control Module Temperature Sensor Performance	<u>DTC P0667, P0668, or P0669</u>
P0668	Transmission Control Module Temperature Sensor Circuit Low Voltage	<u>DTC P0667, P0668, or P0669</u>
P0669	Transmission Control Module Temperature Sensor Circuit High Voltage	<u>DTC P0667, P0668, or P0669</u>
P0685	Engine Controls Ignition Relay Control Circuit	<u>DTC P0685, P0686, P0687, P0689, or P0690 (LE0/LLT/LY7)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0685 or P0690</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0686	Engine Controls Ignition Relay Control Circuit Low Voltage	<u>DTC P0685, P0686, P0687, P0689, or P0690 (LE0/LLT/LY7)</u>
P0687	Engine Controls Ignition Relay Control Circuit High Voltage	<u>DTC P0685, P0686, P0687, P0689, or P0690 (LE0/LLT/LY7)</u>
P0689	Engine Controls Ignition Relay Feedback Circuit Low Voltage	<u>DTC P0685, P0686, P0687, P0689, or P0690 (LE0/LLT/LY7)</u> f
P0690	Engine Controls Ignition Relay Feedback Circuit High Voltage	<u>DTC P0685, P0686, P0687, P0689, or P0690 (LE0/LLT/LY7)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or

		<u>DTC P0685 or P0690</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0691	Cooling Fan Relay 1 Control Circuit Low Voltage	<u>DTC P0480, P0481, P0691, P0692, P0693, or P0694 (w/V6-LLT)</u>
P0692	Cooling Fan Relay 1 Control Circuit High Voltage	<u>DTC P0480, P0481, P0691, P0692, P0693, or P0694 (w/V6-LLT)</u>
P0693	Cooling Fan Relay 2 Control Circuit Low Voltage	<u>DTC P0480, P0481, P0691, P0692, P0693, or P0694 (w/V6-LLT)</u>
P0694	Cooling Fan Relay 2 Control Circuit High Voltage	<u>DTC P0480, P0481, P0691, P0692, P0693, or P0694 (w/V6-LLT)</u>
P0697	5-Volt Reference 3 Circuit	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u>
P0698	5-Volt Reference 3 Circuit Low Voltage	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u>
P0699	5-Volt Reference 3 Circuit High Voltage	<u>DTC P0641-P0643, P0651-P0653, or P0697-P0699 (ECM)</u>
P069E	Fuel Pump Control Module Requested MIL Illumination	<u>DTC P069E</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P069E</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P06A6	5-Volt Reference Performance	<u>DTC P0641 or P06A6</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0641 or P06A6</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P06AC	Transmission Control Module Power Up Temperature Sensor Performance	<u>DTC P06AC, P06AD, or P06AE</u>
P06AD	Transmission Control Module Power Up Temperature Sensor Circuit Low Voltage	<u>DTC P06AC, P06AD, or P06AE</u>
P06AE	Transmission Control Module Power Up Temperature Sensor Circuit High Voltage	<u>DTC P06AC, P06AD, or P06AE</u>
P0700	Transmission Control Module Requested MIL Illumination	<u>DTC P0700</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0700</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P0703	Brake Switch Circuit 2	<u>DTC P0703</u>
P0711	Transmission Fluid Temperature Sensor Performance	<u>DTC P0711, P0712, or P0713</u>
P0712	Transmission Fluid Temperature Sensor Circuit Low Voltage	<u>DTC P0712 or P0713</u> for the Aisin AY6 transmission or <u>DTC P0712 or P0713</u> for the Tremec 6-Speed

		transmission <u>DTC P0711, P0712, or P0713</u>
P0713	Transmission Fluid Temperature Sensor Circuit High Voltage	<u>DTC P0712 or P0713</u> for the Aisin AY6 transmission or <u>DTC P0712 or P0713</u> for the Tremec 6-Speed transmission <u>DTC P0711, P0712, or P0713</u>
P0716	Input Speed Sensor Performance	<u>DTC P0716 or P0717</u>
P0717	Input Speed Sensor Circuit Low Voltage	<u>DTC P0716 or P0717</u>
P0722	Output Speed Sensor Circuit Low Voltage	<u>DTC P0722 or P0723</u>
P0723	Output Speed Sensor Circuit Intermittent	<u>DTC P0722 or P0723</u>
P0741	Torque Converter Clutch - Stuck Off	<u>DTC P0741 or P0742</u>
P0742	Torque Converter Clutch - Stuck On	<u>DTC P0741 or P0742</u>
P0751	Shift Solenoid 1 Valve Performance - Stuck Off	<u>DTC P0751 or P0752</u>
P0752	Shift Solenoid 1 Valve Performance - Stuck On	<u>DTC P0751 or P0752</u>
P0756	Shift Solenoid 2 Valve Performance - Stuck Off	<u>DTC P0756</u>
P0776	Clutch Pressure Control Solenoid 2 - Stuck Off	<u>DTC P0776 or P0777</u>
P0777	Clutch Pressure Control Solenoid 2 - Stuck On	<u>DTC P0776 or P0777</u>
P0796	Clutch Pressure Control Solenoid 3 - Stuck Off	<u>DTC P0796 or P0797</u>
P0797	Clutch Pressure Control Solenoid 3 - Stuck On	<u>DTC P0796 or P0797</u>
P0801	Reverse Lockout Solenoid Control Circuit	<u>DTC P0801</u>
P0806	Clutch Pedal Position Sensor Circuit Performance	<u>DTC P0806</u> for the Aisin AY6 transmission or <u>DTC P0806</u> for the Tremec 6-Speed transmission
P0807	Clutch Pedal Position Sensor Circuit Low Voltage	<u>DTC P0807 or P0808</u> for the Aisin AY6 transmission or <u>DTC P0807 or P0808</u> for the Tremec 6-Speed transmission
P0808	Clutch Pedal Position Sensor Circuit High Voltage	<u>DTC P0807 or P0808</u> for the Aisin AY6 transmission or <u>DTC P0807 or P0808</u> for the Tremec 6-Speed transmission

P080A	Clutch Pedal Position Not Learned	<u>DTC P080A</u> for the Aisin AY6 transmission or <u>DTC P080A</u> for the Tremec 6-Speed transmission
P080C	Skip Shift Solenoid Control Circuit Low Voltage	<u>DTC P080C or P080D</u>
P080D	Skip Shift Solenoid Control Circuit High Voltage	<u>DTC P080C or P080D</u>
P0815	Upshift Switch Circuit	<u>DTC P0815, P0816, P0826, or P1876</u>
P0816	Downshift Switch Circuit	<u>DTC P0815, P0816, P0826, or P1876</u>
P0826	Up and Down Shift Switch Circuit	<u>DTC P0815, P0816, P0826, or P1876</u>
P0842	Transmission Fluid Pressure Switch 1 Circuit Low Voltage	<u>DTC P0842 or P0843</u>
P0843	Transmission Fluid Pressure Switch 1 Circuit High Voltage	<u>DTC P0842 or P0843</u>
P0850	Park/Neutral Position Switch Circuit	<u>DTC P0850-P0852</u>
P0851	Park/Neutral Position Switch Circuit Low Voltage	<u>DTC P0850-P0852</u>
P0852	Park/Neutral Position Switch Circuit High Voltage	<u>DTC P0850-P0852</u>
P0856	Traction Control Torque Request Circuit	<u>DTC C0242 or P0856</u>
P0872	Transmission Fluid Pressure Switch 3 Circuit Low Voltage	<u>DTC P0872 or P0873</u>
P0873	Transmission Fluid Pressure Switch 3 Circuit High Voltage	<u>DTC P0872 or P0873</u>
P0877	Transmission Fluid Pressure Switch 4 Circuit Low Voltage	<u>DTC P0877 or P0878</u>
P0878	Transmission Fluid Pressure Switch 4 Circuit High Voltage	<u>DTC P0877 or P0878</u>
P0961	Line Pressure Control Solenoid System Performance	<u>DTC P0961-P0963</u>
P0962	Line Pressure Control Solenoid Control Circuit Low Voltage	<u>DTC P0961-P0963</u>
P0963	Line Pressure Control Solenoid Control Circuit High Voltage	<u>DTC P0961-P0963</u>
P0965	Clutch Pressure Control Solenoid 2 System Performance	<u>DTC P0965-P0967</u>
P0966	Clutch Pressure Control Solenoid 2 Control Circuit Low Voltage	<u>DTC P0965-P0967</u>
P0967	Clutch Pressure Control Solenoid 2 Control Circuit High Voltage	<u>DTC P0965-P0967</u>
P0969	Clutch Pressure Control Solenoid 3 System Performance	<u>DTC P0969-P0971</u>
P0970	Clutch Pressure Control Solenoid 3	<u>DTC P0969-P0971</u>

	Control Circuit Low Voltage	
P0971	Clutch Pressure Control Solenoid 3 Control Circuit High Voltage	<u>DTC P0969-P0971</u>
P0973	Shift Solenoid 1 Control Circuit Low Voltage	<u>DTC P0973 or P0974</u>
P0974	Shift Solenoid 1 Control Circuit High Voltage	<u>DTC P0973 or P0974</u>
P0976	Shift Solenoid 2 Control Circuit Low Voltage	<u>DTC P0976 or P0977</u>
P0977	Shift Solenoid 2 Control Circuit High Voltage	<u>DTC P0976 or P0977</u>
P0989	Transmission Fluid Pressure Switch 5 Circuit Low Voltage	<u>DTC P0989 or P0990</u>
P0990	Transmission Fluid Pressure Switch 5 Circuit High Voltage	<u>DTC P0989 or P0990</u>
P1101	Intake Air Flow System Performance	<u>DTC P0101 or P1101</u>
P1133	HO2S Insufficient Switching Bank 1 Sensor 1	<u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u>
P1153	HO2S Insufficient Switching Bank 2 Sensor 1	<u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P1133, or P1153</u>
P1255	Fuel Pump Control Module Driver Over-temperature	<u>DTC P1255 or P064A</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P1255 or P064A</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P1258	Engine Coolant Overtemperature - Protection Mode Active	<u>DTC P1258</u> or <u>DTC P1258</u>
P1380	Misfire Detected - Rough Road Data Not Available	<u>DTC P1380 (w/o LF1)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P1380 or P1381</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P1381	Misfire Detected and No Communication With Brake Control Module	<u>DTC P1380 or P1381</u>
P1400	Cold Start Emission Reduction Control System	<u>DTC P1400</u>
P1516	Throttle Actuator Control Module Throttle Actuator Position Performance	<u>DTC P1516, P2101, P2119, or P2176</u>
P1551	Throttle Valve Rest Position Not Reached During Learn	<u>DTC P1551</u>
P162B	Remote Vehicle Speed Limiting Signal Message Counter Incorrect	<u>DTC P162B</u>
P1631	Immobilizer Fuel Enable Signal Not Correct	<u>DTC P1631</u>

P1648	Immobilizer Security Code Incorrect	<u>DTC P1648</u>
P1649	Immobilizer Security Code Not Programmed	<u>DTC P1649</u>
P167D	Control Module Ignition Coil Internal Circuit	<u>DTC P0601-P0604, P0606, P167D, or P2610 (ECM, LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines
P1682	Ignition 1 Switch Circuit 2	<u>DTC P1682</u>
P1751	Shift Valve 1 Performance	<u>DTC P1751</u>
P1761	Up and Down Shift Switch Signal Circuit	<u>DTC P1761</u>
P182E	Internal Mode Switch - Invalid Range	<u>DTC P182E or P1915</u>
P1876	Up and Down Shift Enable Switch Circuit	<u>DTC P0815, P0816, P0826, or P1876</u>
P1915	Internal Mode Switch Does Not Indicate Park/Neutral During Start	<u>DTC P182E or P1915</u>
P2066	Fuel Level Sensor 2 Performance	<u>DTC P0461-P0463, P2066, P2067, or P2068</u>
P2067	Fuel Level Sensor 2 Circuit Low Voltage	<u>DTC P0461-P0463, P2066, P2067, or P2068</u>
P2068	Fuel Level Sensor 2 Circuit High Voltage	<u>DTC P0461-P0463, P2066, P2067, or P2068</u>
P2088	Intake Camshaft Position Actuator Solenoid Valve Control Circuit Low Voltage Bank 1	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P2089	Intake Camshaft Position Actuator Solenoid Valve Control Circuit High Voltage Bank 1	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P2090	Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit Low Voltage Bank 1	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P2091	Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit High Voltage Bank 1	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P2092	Intake Camshaft Position Actuator Solenoid Valve Control Circuit Low Voltage Bank 2	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P2093	Intake Camshaft Position Actuator Solenoid Valve Control Circuit High Voltage Bank 2	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P2094	Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit Low Voltage Bank 2	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P2095	Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit High Voltage Bank 2	<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>
P2096	Post Catalyst Fuel Trim System Low Limit Bank 1	<u>DTC P2096 or P2098</u>

P2097	Post Catalyst Fuel Trim System High Limit Bank 1	<u>DTC P2097 or P2099</u>
P2098	Post Catalyst Fuel Trim System Low Limit Bank 2	<u>DTC P2096 or P2098</u>
P2099	Post Catalyst Fuel Trim System High Limit Bank 2	<u>DTC P2097 or P2099</u>
P2100	Throttle Actuator Control Motor Control Circuit	<u>DTC P0638, P2100, P2101, or P2119</u>
P2101	Throttle Actuator Position Performance	<u>DTC P0638, P2100, P2101, or P2119</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P1516, P2101, P2119, or P2176</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2105	Throttle Actuator Control System - Forced Engine Shutdown	<u>DTC P2105</u>
P2119	Throttle Closed Position Performance	<u>DTC P0638, P2100, P2101, or P2119</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P1516, P2101, P2119, or P2176</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2120	Accelerator Pedal Position Sensor 1 Circuit	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2122	Accelerator Pedal Position Sensor 1 Circuit Low Voltage	<u>DTC P2122, P2123, P2127, P2128, or P2138</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2123	Accelerator Pedal Position Sensor 1 Circuit High Voltage	<u>DTC P2122, P2123, P2127, P2128, or P2138</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2125	Accelerator Pedal Position Sensor 2 Circuit	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2127	Accelerator Pedal Position Sensor 2 Circuit Low Voltage	<u>DTC P2122, P2123, P2127, P2128, or P2138</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2128	Accelerator Pedal Position Sensor 2 Circuit High Voltage	<u>DTC P2122, P2123, P2127, P2128, or P2138</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2120, P2122, P2123, P2125, P2127,</u>

		<u>P2128, or P2138</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2135	Throttle Position Sensor 1-2 Correlation	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u>
P2138	Accelerator Pedal Position Sensor 1-2 Correlation	<u>DTC P2122, P2123, P2127, P2128, or P2138</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2146	Cylinder 1 Injector High Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P2149	Cylinder 2 Injector High Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P2152	Cylinder 3 Injector High Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P2155	Cylinder 4 Injector High Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P216A	Cylinder 5 Injector High Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P216D	Cylinder 6 Injector High Control Circuit	<u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2146, P2149, P2152, P2155, P216A, or P216D</u>
P2176	Minimum Throttle Position Not Learned	<u>DTC P2176</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P1516, P2101, P2119, or P2176</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2177	Fuel Trim System Lean at Cruise or Acceleration Bank 1	<u>DTC P2177, P2179, P2187, or P2189 (LLT)</u>
P2178	Fuel Trim System Rich at Cruise or Acceleration Bank 1	<u>DTC P2178, P2180, P2188, or P2190 (LLT)</u>
P2179	Fuel Trim System Lean at Cruise or Acceleration Bank 2	<u>DTC P2177, P2179, P2187, or P2189 (LLT)</u>
	Fuel Trim System Rich at Cruise or	

P2180	Acceleration Bank 2	<u>DTC P2178, P2180, P2188, or P2190 (LLT)</u>
P2187	Fuel Trim System Lean at Idle Bank 1	<u>DTC P2177, P2179, P2187, or P2189 (LLT)</u>
P2188	Fuel Trim System Rich at Idle Bank 1	<u>DTC P2178, P2180, P2188, or P2190 (LLT)</u>
P2189	Fuel Trim System Lean at Idle Bank 2	<u>DTC P2177, P2179, P2187, or P2189 (LLT)</u>
P2190	Fuel Trim System Rich at Idle Bank 2	<u>DTC P2178, P2180, P2188, or P2190 (LLT)</u>
P219A	Fuel Trim Cylinder Balance Bank 1	<u>DTC P219A or P219B</u>
P219B	Fuel Trim Cylinder Balance Bank 2	<u>DTC P219A or P219B</u>
P2227	Barometric Pressure Sensor Performance	<u>DTC P2227, P2228, or P2229 (LLT)</u>
P2228	Barometric Pressure Sensor Circuit Low Voltage	<u>DTC P2227, P2228, or P2229 (LLT)</u>
P2229	Barometric Pressure Sensor Circuit High Voltage	<u>DTC P2227, P2228, or P2229 (LLT)</u>
P2232	HO2S Signal Circuit Shorted to Heater Circuit Bank 1 Sensor 2	<u>DTC P2232 or P2235</u>
P2235	HO2S Signal Circuit Shorted to Heater Circuit Bank 2 Sensor 2	<u>DTC P2232 or P2235</u>
P2270	HO2S Signal Stuck Lean Bank 1 Sensor 2	<u>DTC P2270 or P2272</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2270 or P2272</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2271	HO2S Signal Stuck Rich Bank 1 Sensor 2	<u>DTC P2271 or P2273</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2271 or P2273</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2272	HO2S Signal Stuck Lean Bank 2 Sensor 2	<u>DTC P2270 or P2272</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2270 or P2272</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2273	HO2S Signal Stuck Rich Bank 2 Sensor 2	<u>DTC P2271 or P2273</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2271 or P2273</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2300	Ignition Coil 1 Control Circuit Low Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2301	Ignition Coil 1 Control Circuit High Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2303	Ignition Coil 2 Control Circuit Low Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>

P2304	Ignition Coil 2 Control Circuit High Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2306	Ignition Coil 3 Control Circuit Low Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2307	Ignition Coil 3 Control Circuit High Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2309	Ignition Coil 4 Control Circuit Low Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2310	Ignition Coil 4 Control Circuit High Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2312	Ignition Coil 5 Control Circuit Low Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2313	Ignition Coil 5 Control Circuit High Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2315	Ignition Coil 6 Control Circuit Low Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2316	Ignition Coil 6 Control Circuit High Voltage	<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316 (w/LLT)</u>
P2534	Ignition 1 Switch Circuit Low Voltage	<u>DTC P2534</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2534</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines <u>DTC P2534</u>
P2544	Transmission Torque Request Circuit	<u>DTC P2544</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2544</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2548	Vehicle Dynamics System Torque Request Signal Message Counter Incorrect	<u>DTC P2548</u>
P258A	Vacuum Pump Relay Control Circuit	<u>DTC P258A-P258D</u>
P258B	Vacuum Pump Performance	<u>DTC P258A-P258D</u>
P258C	Vacuum Pump Relay Control Circuit Low Voltage	<u>DTC P258A-P258D</u>

P258D	Vacuum Pump Relay Control Circuit High Voltage	<u>DTC P258A-P258D</u>
P2610	Control Module Ignition Off Timer Performance	<u>DTC P0601-P0604, P0606, P167D, or P2610 (ECM, LLT)</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610 (ECM)</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2635	Fuel Pump Flow Performance	<u>DTC P2635</u> for the 2.8L, 3.0L, 3.2L, or 3.6L engines or <u>DTC P2635</u> for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engines
P2636	Fuel Transfer Pump Flow Insufficient	<u>DTC P2636</u>
P2714	Clutch Pressure Control Solenoid 4 - Stuck Off	<u>DTC P2714 or P2715</u>
P2715	Clutch Pressure Control Solenoid 4 - Stuck On	<u>DTC P2714 or P2715</u>
P2719	Clutch Pressure Control Solenoid 4 System Performance	<u>DTC P2719-P2721</u>
P2720	Clutch Pressure Control Solenoid 4 Control Circuit Low Voltage	<u>DTC P2719-P2721</u>
P2721	Clutch Pressure Control Solenoid 4 Control Circuit High Voltage	<u>DTC P2719-P2721</u>
P2723	Clutch Pressure Control Solenoid 5 - Stuck Off	<u>DTC P2723 or P2724</u>
P2724	Clutch Pressure Control Solenoid 5 - Stuck On	<u>DTC P2723 or P2724</u>
P2728	Clutch Pressure Control Solenoid 5 System Performance	<u>DTC P2728-P2730</u>
P2729	Clutch Pressure Control Solenoid 5 Control Circuit Low Voltage	<u>DTC P2728-P2730</u>
P2730	Clutch Pressure Control Solenoid 5 Control Circuit High Voltage	<u>DTC P2728-P2730</u>
P2762	Torque Converter Clutch Pressure Control Solenoid System Performance	<u>DTC P2762, P2763, or P2764</u>
P2763	Torque Converter Clutch Pressure Control Solenoid Control Circuit High Voltage	<u>DTC P2762, P2763, or P2764</u>
P2764	Torque Converter Clutch Pressure Control Solenoid Control Circuit Low Voltage	<u>DTC P2762, P2763, or P2764</u>
P3400	Cylinder Deactivation System Performance	<u>DTC P3400</u>

P3401	Cylinder 1 Deactivation Solenoid Control Circuit	<u>DTC P3401, P3425, P3441, or P3449</u>
P3425	Cylinder 4 Deactivation Solenoid Control Circuit	<u>DTC P3401, P3425, P3441, or P3449</u>
P3441	Cylinder 6 Deactivation Solenoid Control Circuit	<u>DTC P3401, P3425, P3441, or P3449</u>
P3449	Cylinder 7 Deactivation Solenoid Control Circuit	<u>DTC P3401, P3425, P3441, or P3449</u>
U0001	High Speed CAN Communication Bus	<u>DTC U0001</u>
U0002	High Speed CAN Bus	<u>DTC U0002</u>
U0020	Low Speed CAN Communication Bus Performance	<u>DTC U0020</u>
U0073	Control Module Communication Bus Off	<u>DTC U0073 or U2100</u>
U0074	Control Module Communication Bus B Off	<u>DTC U0074</u>
U0100 - U0299	Lost Communication With XXX Control Module	<u>DTC U0100-U02FF</u>
U0301	Software Incompatibility with Engine Control Module	<u>DTC U0300-U0336</u>
U0315	Software Incompatibility with Electronic Brake Control Module	<u>DTC U0300-U0336</u>
U0400 - U05FF	Invalid Data Received	<u>DTC U0400-U05FF</u>
U1500 - U15BF	Inter-Device Dedicated Bus	<u>DTC U1500-U15BF</u>
U1814	Powertrain Wake Up Communication Circuit	<u>DTC U1814</u>
U18B9	Primary High Speed CAN Bus Subnet Configuration List	<u>DTC U18B9-U18BF</u>
U18BF	Secondary High Speed CAN Bus Subnet Configuration List	<u>DTC U18B9-U18BF</u>
U2099	High Speed Communication Enable Circuit	<u>DTC U2099</u>
U2100	Controller Area Network Bus Communication	<u>DTC U0073 or U2100</u>
U2101	Controller Area Network Bus Maximum Configuration List	<u>DTC U2101</u>
U2103	Fewer Controllers On Bus Than Programmed	<u>DTC U2103</u>
U2105 - U2199	Lost Communication With XXX Control Module	<u>DTC U2105-U2199</u>

