

Fuel and Emissions ('95-'96 Models)

Special Tools	11-2	DTC Chart	11-52	Starter Switch Signal	11-127	Throttle Cable	11-150
Component Location Index	11-3	How to Read Flowcharts ...	11-58	Idle Speed Setting	11-128	Throttle Body	11-151
System Description		PGM-FI System		Fuel Supply System		Fuel Injection Air (FIA) Control	
Vacuum Connections	11-7	System Description	11-59	Fuel Lines	11-130	System	11-153
Electrical Connections	11-10	Troubleshooting Flowcharts		System Description	11-132	Intake Air Bypass (IAB) Control	
System Connectors		MIL Never Comes On	11-61	Fuel Pressure	11-132	System	11-154
Engine Compartment,		MIL Stays On	11-62	Fuel Injectors	11-134	Intake Air Bypass (IAB) Control	
Right Side	11-24	Drive By Wire System		Fuel Injector Resistor	11-136	Valve Testing	11-157
Engine Compartment,		System Description	11-107	Fuel Pressure Regulator	11-137	Emission Control System	
Left Side	11-26	Idle Control System		Fuel Filter	11-138	System Description	11-158
Behind the Bulkhead		Troubleshooting Flowcharts		Troubleshooting Flowcharts		Tailpipe Emission	11-158
Panels	11-28	Air Conditioning Signal	11-117	Fuel Pump Relay	11-139	Three Way Catalytic Converter (TWC)	
Front Compartment and		Alternator FR Signal	11-119	Fuel Pump Resistor	11-141	Description	11-159
Under Dash	11-34	A/T Gear Position		PGM-FI Main Relay	11-144	EGR System	11-161
Troubleshooting		Signal	11-121	Fuel Pump	11-142	Positive Crankcase (PCV)	
Troubleshooting		Neutral Switch Signal		PGM-FI Main Relay	11-143	System	11-166
Procedures	11-38	(M/T)	11-123	Fuel Tank	11-147	Evaporative Emission (EVAP) Controls	
Symptom Chart	11-42	Clutch Switch Signal		Intake Air System		Description	11-167
Probable Cause List	11-43	(M/T)	11-124	System Description	11-148	EVAP Two Way Valve	
ECM Control Module Terminal		Brake Switch Signal	11-126	Air Cleaner	11-149	Testing	11-173
Arrangement	11-46						