

Idle Control System

Troubleshooting Flowchart — A/T Shift Position Signal

This signals the PGM-FI ECU when the transmission is in Neutral or Park.



