

## - Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

| Symptom                                                                         | Item to be inspected                                   |                                  |                         |                         |                    |                    |                 |                    |                |                            |                   |                  | Key-off timer circuit<br>(in the integrated control unit) | Poor ground  | Open circuit in wires, loose or disconnected terminals |
|---------------------------------------------------------------------------------|--------------------------------------------------------|----------------------------------|-------------------------|-------------------------|--------------------|--------------------|-----------------|--------------------|----------------|----------------------------|-------------------|------------------|-----------------------------------------------------------|--------------|--------------------------------------------------------|
|                                                                                 | Blown No. 5 (10A) fuse<br>(in the under-dash fuse box) | in the under-hood fuse/relay box |                         |                         | Power window relay | Control unit input | Driver's switch | Passenger's switch | Driver's motor | Pulser (in driver's motor) | Passenger's motor | Window regulator |                                                           |              |                                                        |
|                                                                                 |                                                        | Blown No. 34 (15A) fuse          | Blown No. 47 (20A) fuse | Blown No. 50 (20A) fuse |                    |                    |                 |                    |                |                            |                   |                  |                                                           |              |                                                        |
|                                                                                 |                                                        |                                  |                         |                         |                    |                    |                 |                    |                |                            |                   |                  |                                                           |              |                                                        |
| Both windows do not operate.                                                    | 1                                                      |                                  |                         |                         | 2                  |                    |                 |                    |                |                            |                   |                  | 3                                                         | G201         | GRY/BLK                                                |
| Driver's window does not operate in any position.                               |                                                        |                                  |                         | 1                       |                    | 4                  | 2               |                    | 3              |                            |                   | 5                |                                                           | G401<br>G402 | WHT/YEL                                                |
| Driver's window does not operate in AUTO.                                       |                                                        |                                  |                         |                         |                    | 3                  | 1               |                    |                | 2                          |                   |                  |                                                           |              | RED/GRN or BLU                                         |
| Passenger's window does not operate.                                            |                                                        |                                  | 1                       |                         |                    |                    | 2               | 3                  |                |                            | 4                 | 5                |                                                           | G401<br>G402 | BLU/BLK, BLU/YEL, BLU/GRN, BLU/RED, or BLU/WHT         |
| Both windows do not operate within 10 minutes after the ignition switch is OFF. | 1                                                      | 2                                |                         |                         |                    | 3                  |                 |                    |                |                            |                   |                  | 4                                                         | G401<br>G402 | WHT/BLU or GRN/RED                                     |