


SPECIFICATIONS > FASTENER SPECIFICATIONS

Application	Specification	
	Metric	English
Accessory Switch Panel Bolt	2.5 N.m	22 lb in
Body Side Rear Window Garnish Molding Bolt	3 N.m	27 lb in
Center Pillar Upper Garnish Molding Bolt	3 N.m	27 lb in
Front Side Door Armrest Switch Mount Plate	2.5 N.m	22 lb in
Front Side Door Inside Handle Fastener	2.5 N.m	22 lb in
Front Side Door Trim Panel Applique Fastener	2.5 N.m	22 lb in
Front Side Door Trim Panel Fastener	2.5 N.m	22 lb in
Sunshade Fastener	2.5 N.m	22 lb in
Sunshade Support Fastener	2.5 N.m	22 lb in

REPAIR INSTRUCTIONS > FRONT SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT

Fig 1: Front Side Door Accessory Switch Mount Plate

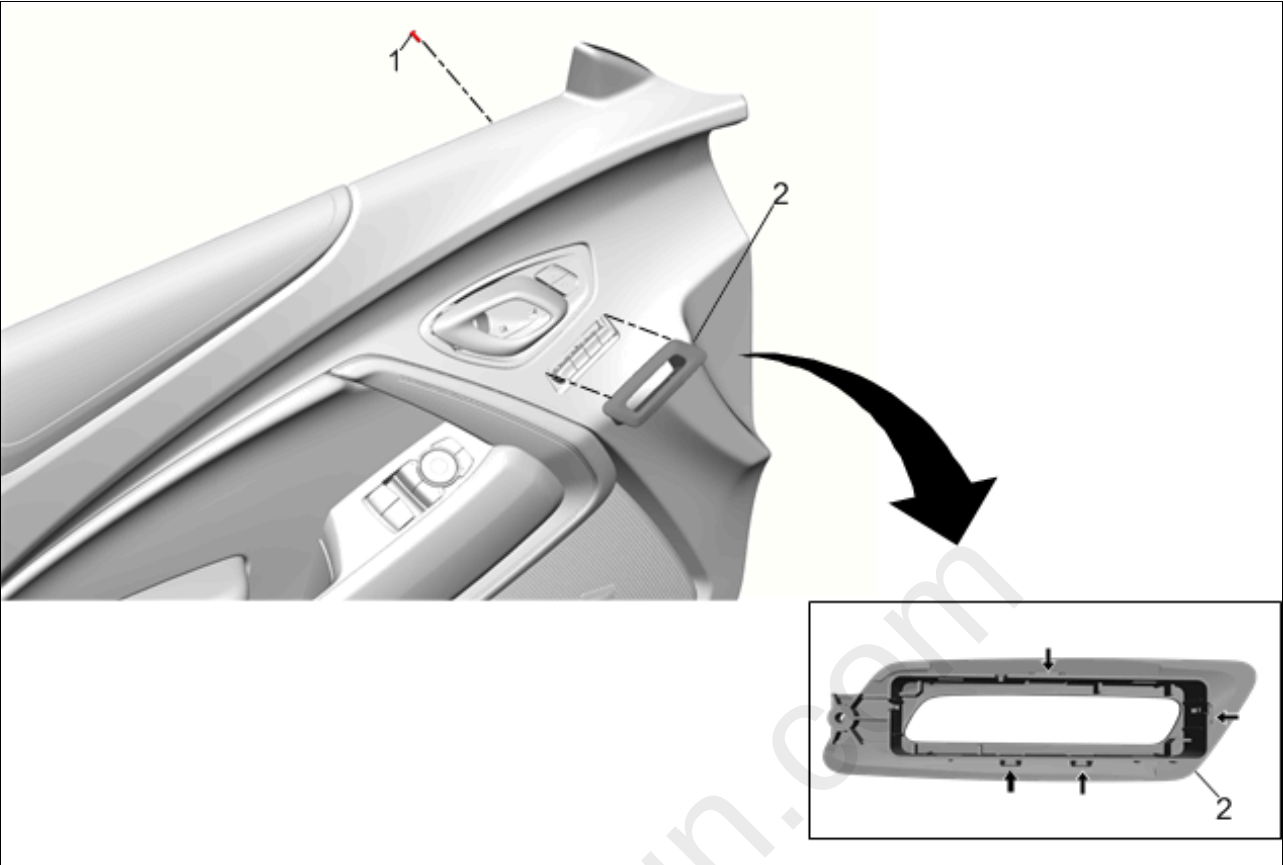


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Front Side Door Trim Replacement .	
1	Accessory Switch Panel Bolt CAUTION: <i>Refer to Fastener Caution .</i> Tighten 2.5 N.m (22 lb in)
2	Front Side Door Accessory Switch Mount Plate Procedure 1. Disconnect the electrical connector. 2. Release the bezel from the underside of the door trim by depressing the tabs along each side of bezel.

3. Transfer parts as necessary.

REPAIR INSTRUCTIONS > FRONT SIDE DOOR ARMREST SWITCH MOUNT PLATE REPLACEMENT

Fig 1: Front Side Door Armrest Switch Mount Plate

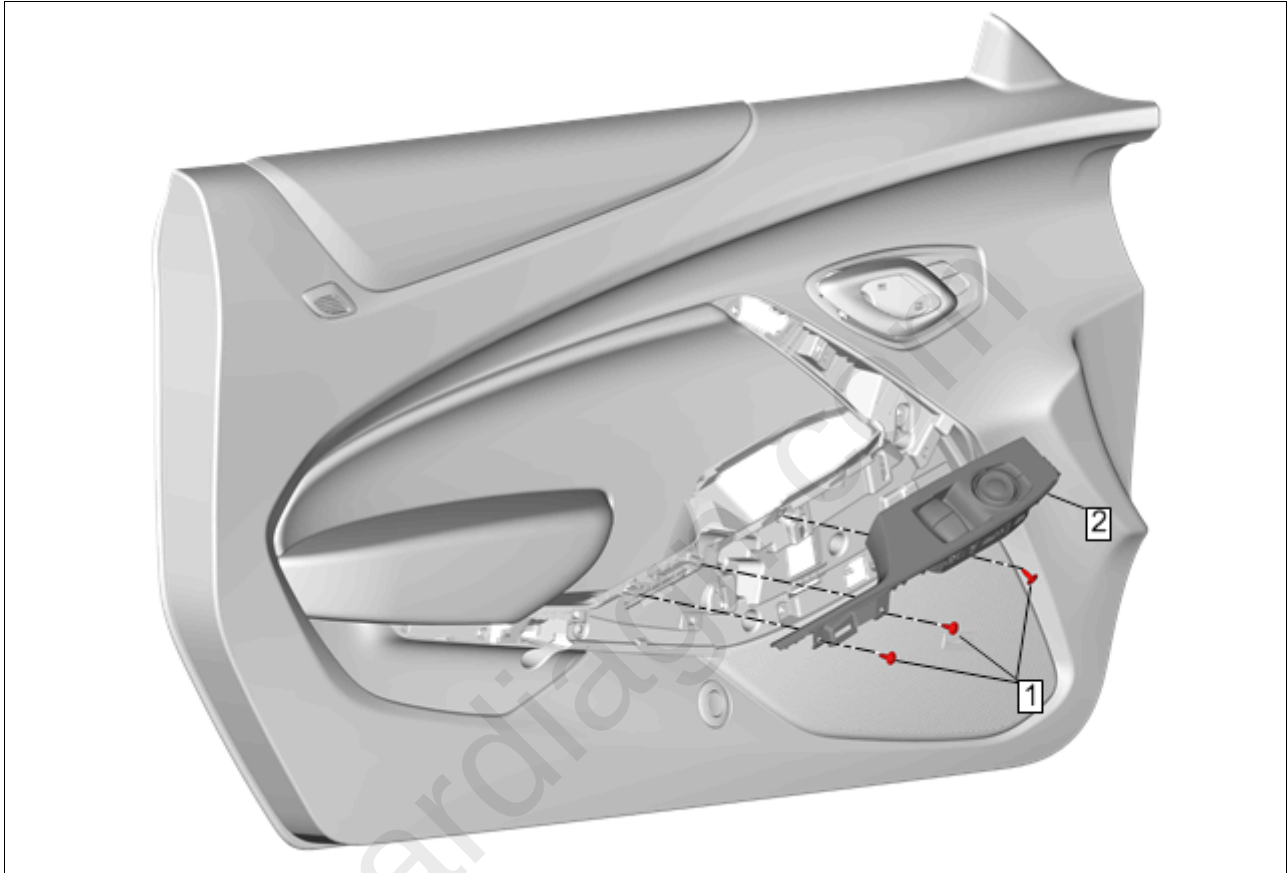

Courtesy of GENERAL MOTORS COMPANY


Callout	Component Name
Preliminary Procedure Front Side Door Trim Panel Applique Replacement	
1	Front Side Door Armrest Pull Cup Fastener (Qty: 3)
	CAUTION: <i>Refer to Fastener Caution .</i>
	Tighten

	2.5 N.m (22 lb in)
2	Front Side Door Armrest Switch Mount Plate Procedure 1. Using a flat-bladed plastic trim tool, start at the back of the armrest switch mount plate and gently insert trim tool to lift the front side door armrest switch mount plate from the door trim assembly. 2. Disconnect the electrical connectors. 3. Transfer components as necessary.

**REPAIR INSTRUCTIONS > FRONT SIDE DOOR PULL HANDLE COVER
REPLACEMENT > REMOVAL PROCEDURE**

cardiagn.com


Fig 1: Front Side Door Pull Handle Cover

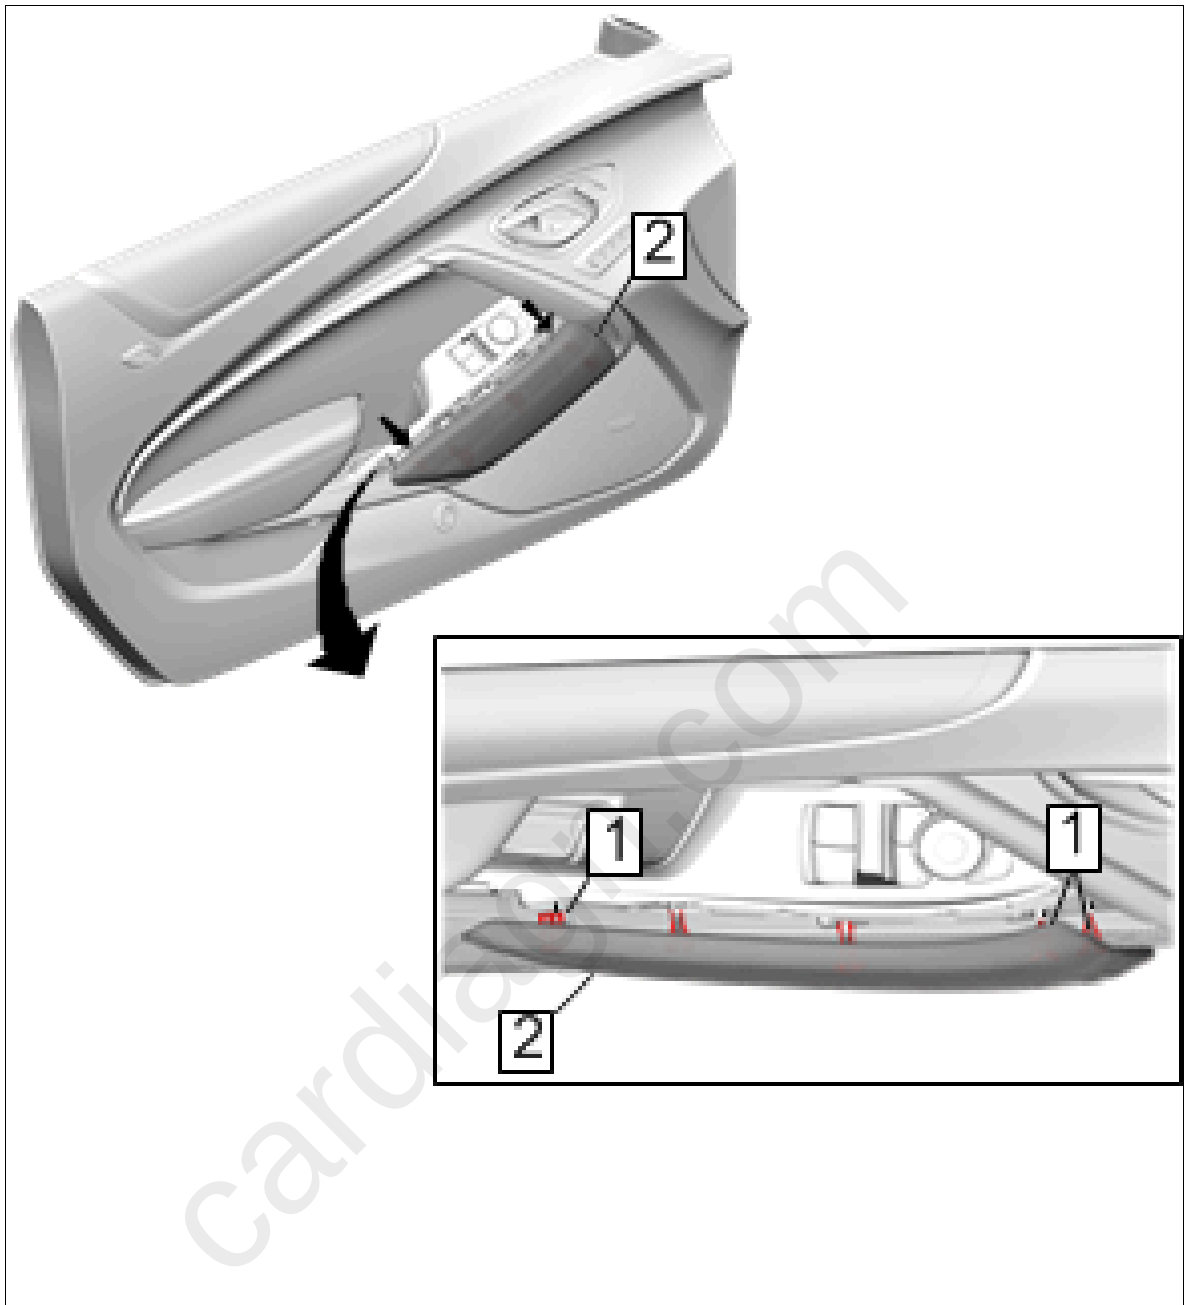

Courtesy of GENERAL MOTORS COMPANY

1. Pull outward on the front side door pull handle cover (2) to disengage the high retention clips (1) (Qty: 3)

Fig 2: Pull Handle Cover And Center Clips

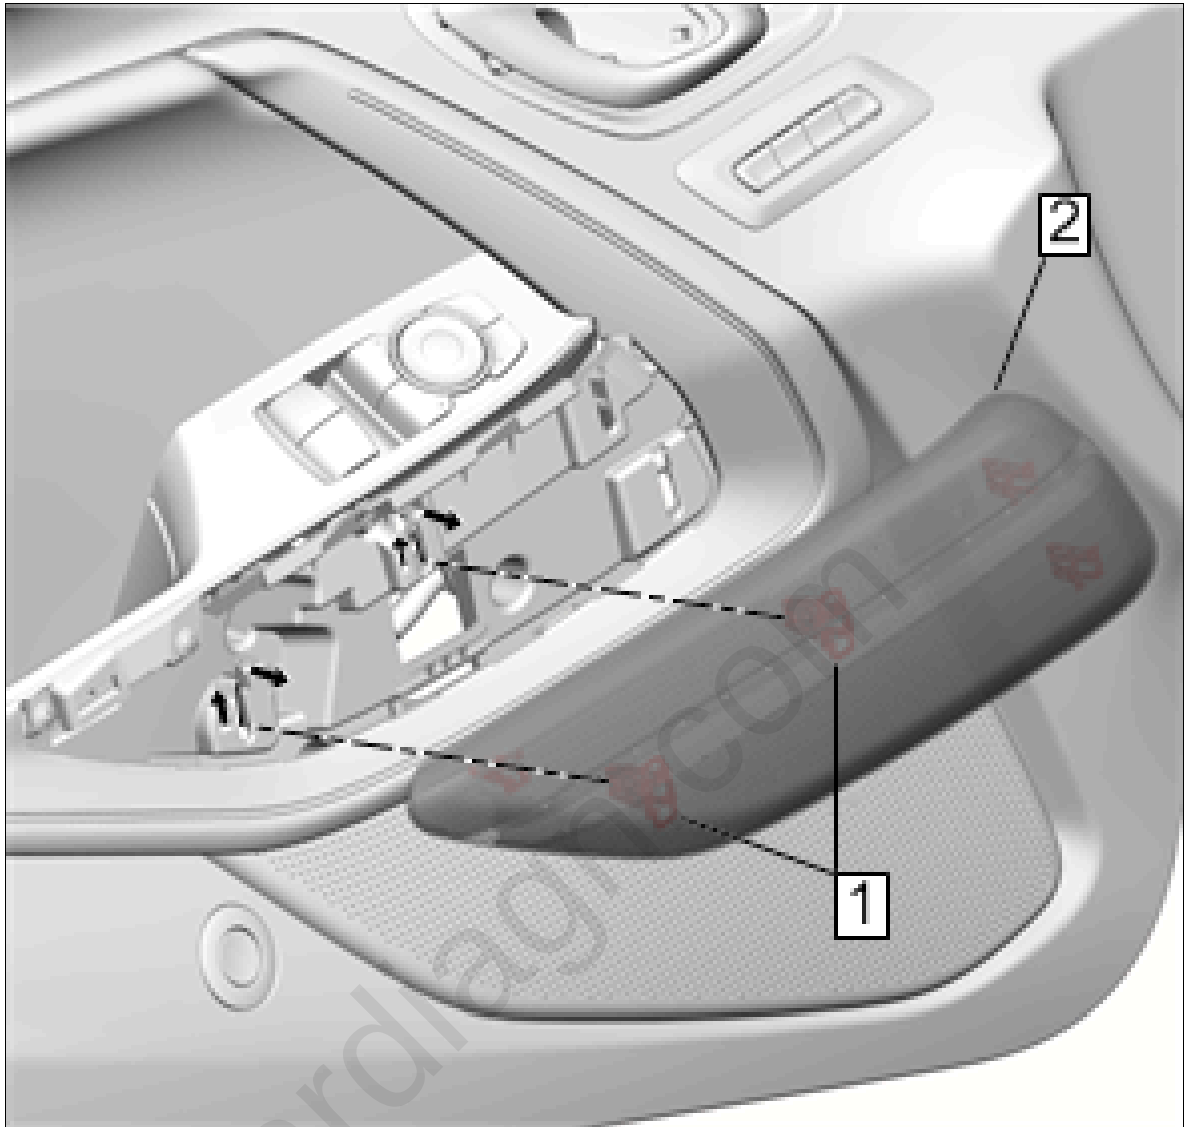


Courtesy of GENERAL MOTORS COMPANY

2. Move the pull handle cover upward and outward to disengage the center clips (1) from the door trim panel (Qty: 2)

**REPAIR INSTRUCTIONS > FRONT SIDE DOOR PULL HANDLE COVER
REPLACEMENT > INSTALLATION PROCEDURE**


Fig 1: Pull Handle Cover And Center Clips

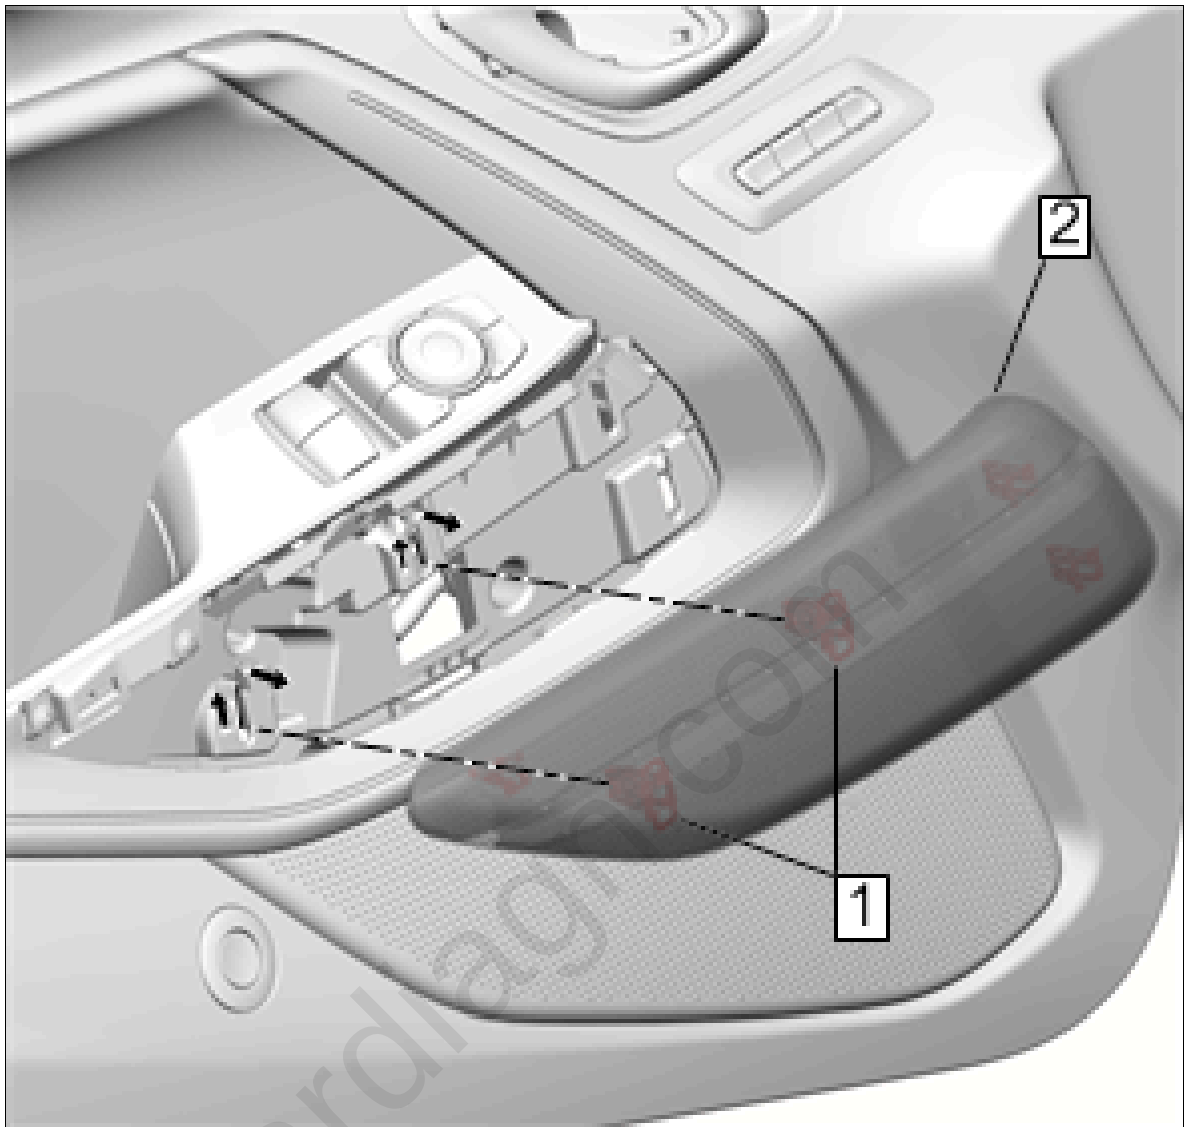

Courtesy of GENERAL MOTORS COMPANY

1. Move the pull handle cover downward and inward to engage the center clips (1) to the door trim panel (Qty: 2)

Fig 2: Front Side Door Pull Handle Cover

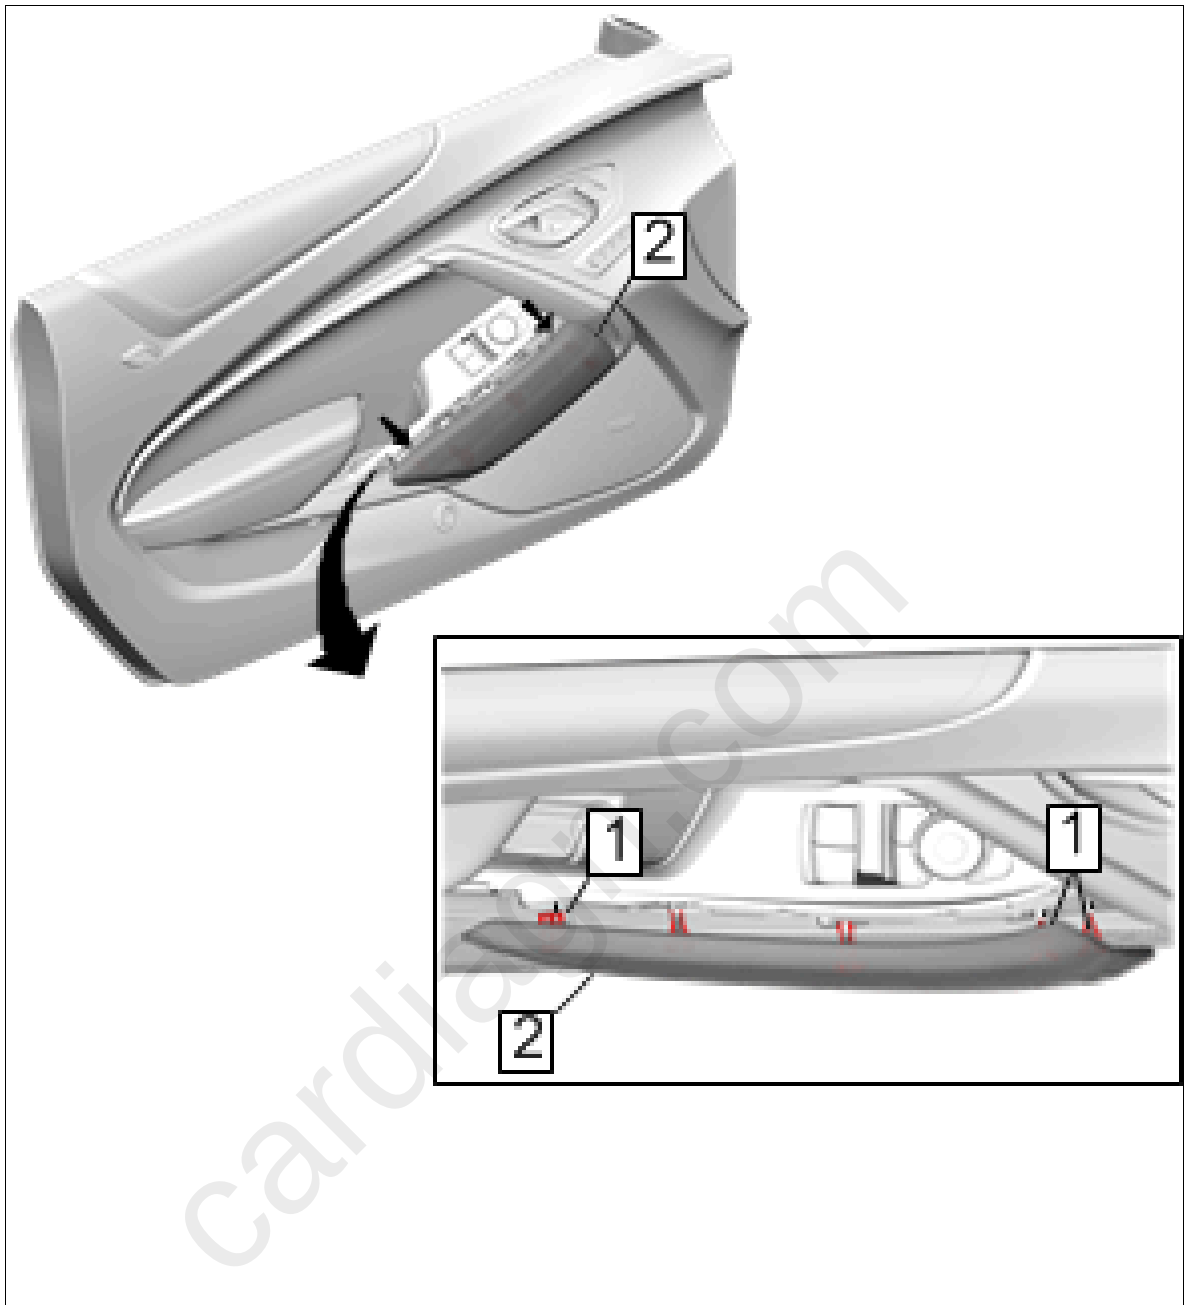


Courtesy of GENERAL MOTORS COMPANY

2. Push inward on the front side door pull handle cover (2) to engage the high retention clips. (1)
(Qty: 3)

REPAIR INSTRUCTIONS > FRONT SIDE DOOR TRIM REPLACEMENT > REMOVAL PROCEDURE

1. Remove Front Side Door Pull Handle Cover Replacement

Fig 1: Front Side Door Trim

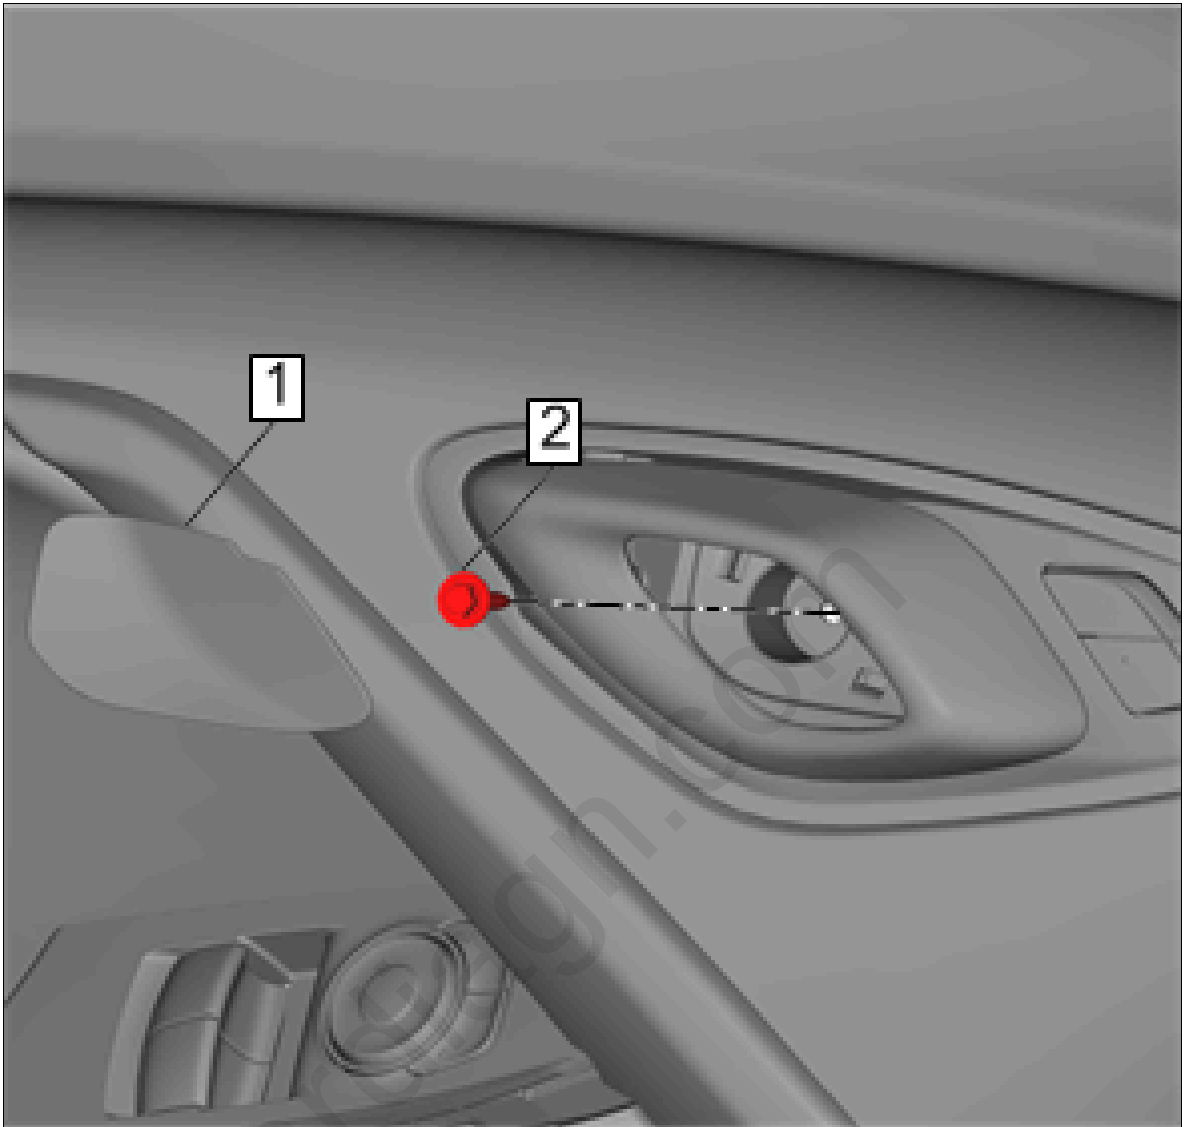


Courtesy of GENERAL MOTORS COMPANY

 NOTE:

Use a suitable tool. Place the tool between the notch located at the top of the door handle cap and the door handle. Turn the suitable tool clockwise releasing the door handle cap, exposing the handle fastener.

2. Remove Front Side Door Inside Handle Bolt Finish Cap (1)
3. Remove Front Side Door Trim Bolt (2)


Fig 2: Front Side Door Trim Bolt

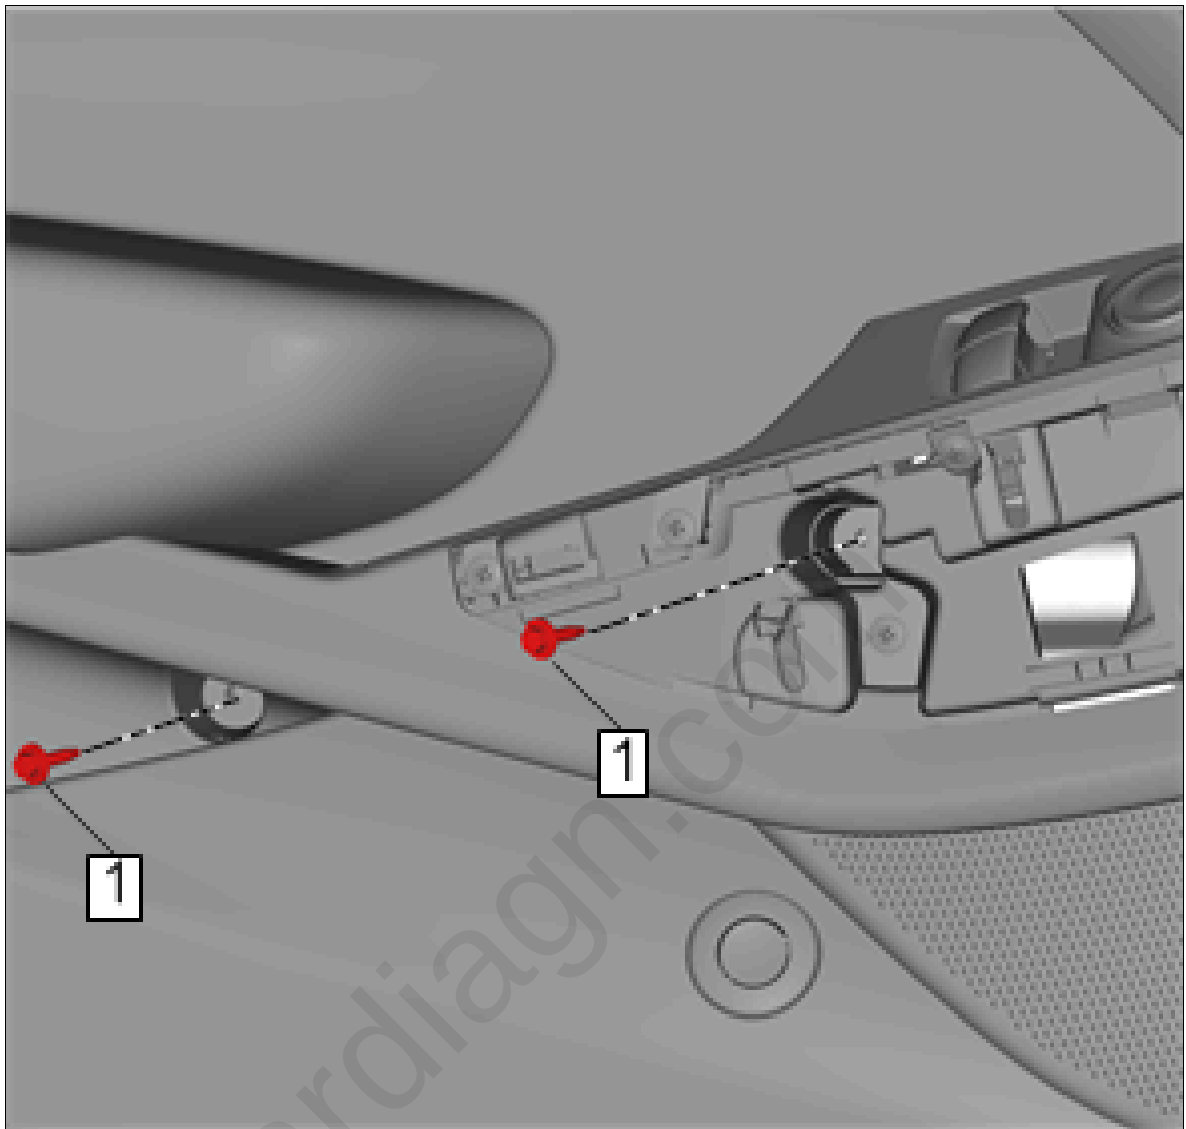

Courtesy of GENERAL MOTORS COMPANY

4. Remove Front Side Door Trim Bolt (1) (Qty: 2)

Fig 3: Front Side Door Belt Line Clips

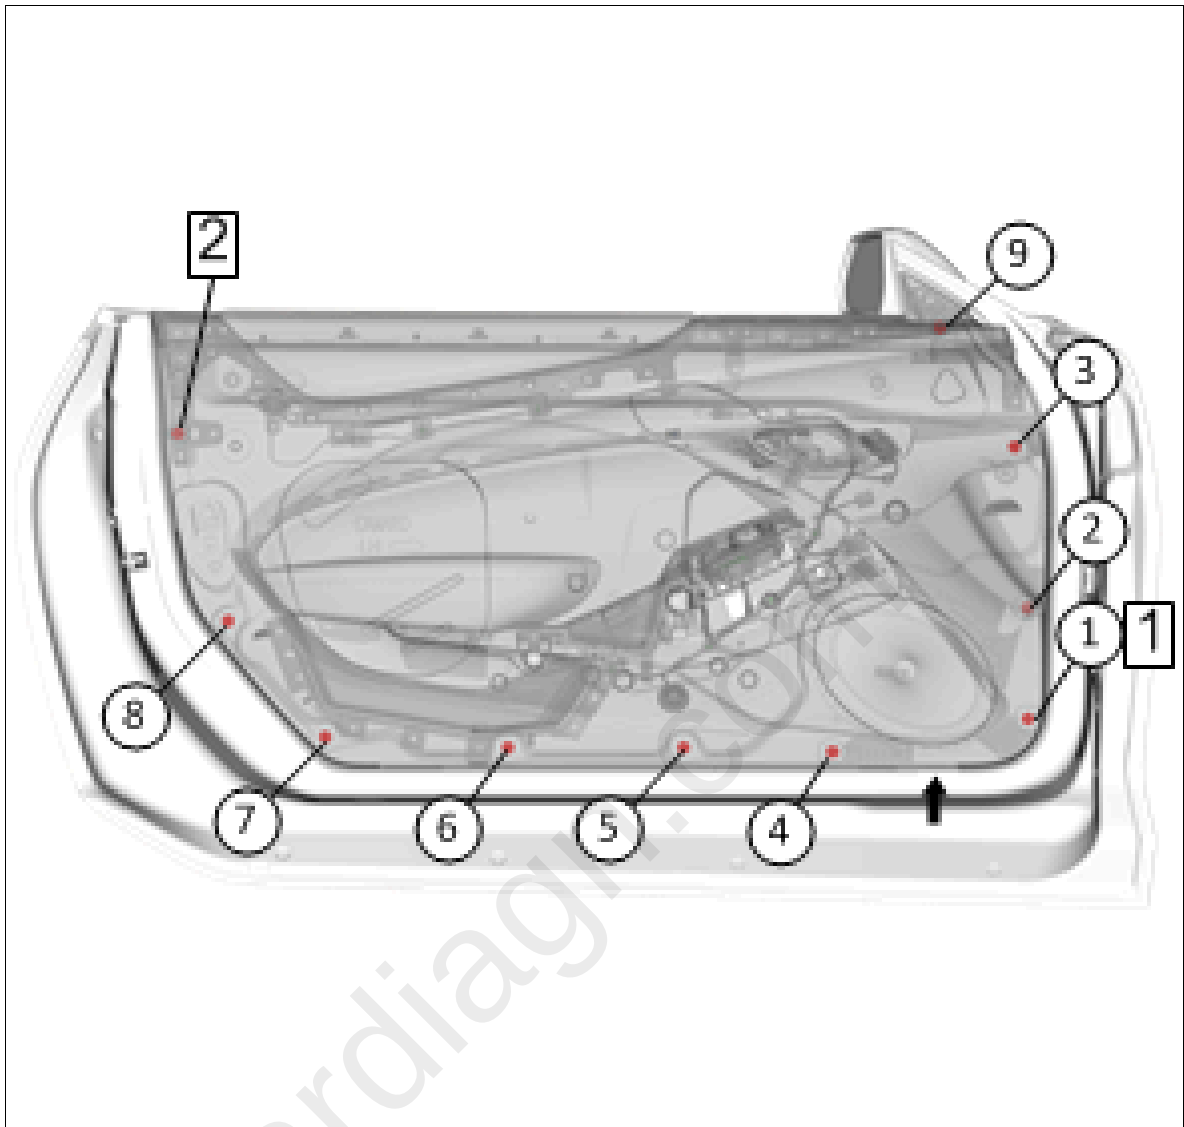


Courtesy of GENERAL MOTORS COMPANY

 NOTE:

1. Use service notch on door trim panel and start detachment of retainer in order shown.
2. Belt line clips are still engaged. Do Not remove safety high retention clip (2).

5. Remove Front Side Door Trim Retainer (1) (Qty: 6)

Fig 4: Front Side Door Trim Retainers

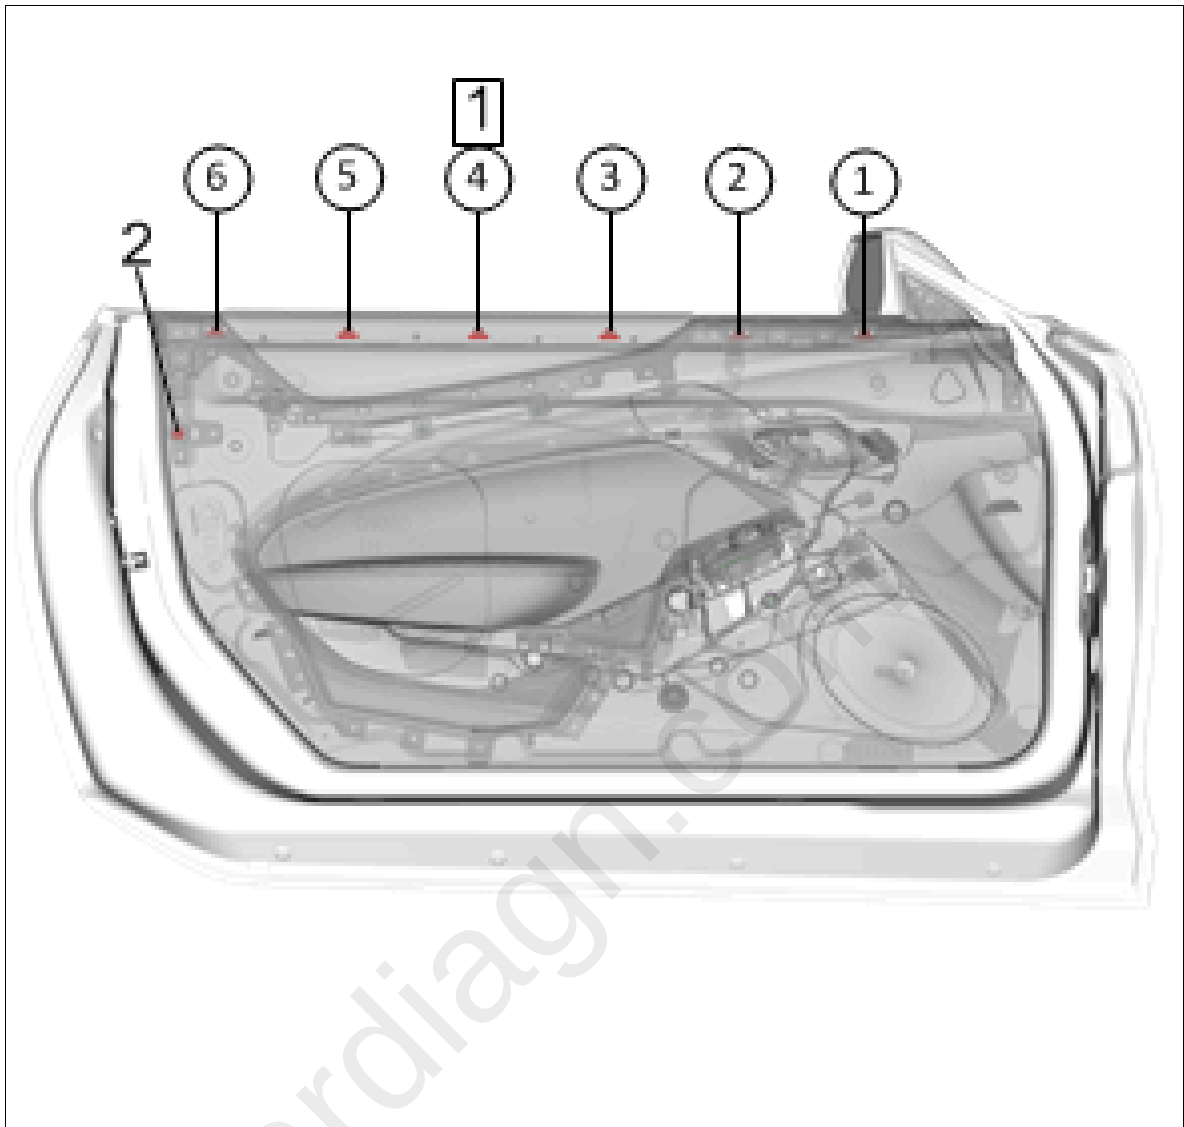


Courtesy of GENERAL MOTORS COMPANY

 NOTE:

1. Pull out door trim along top edge to detach belt line clips from door panel.
2. Do Not remove safety high retention clip. (2)

6. Remove Front Side Door Trim Retainer (1) (Qty: 6)

Fig 5: Safety High Retention Clip

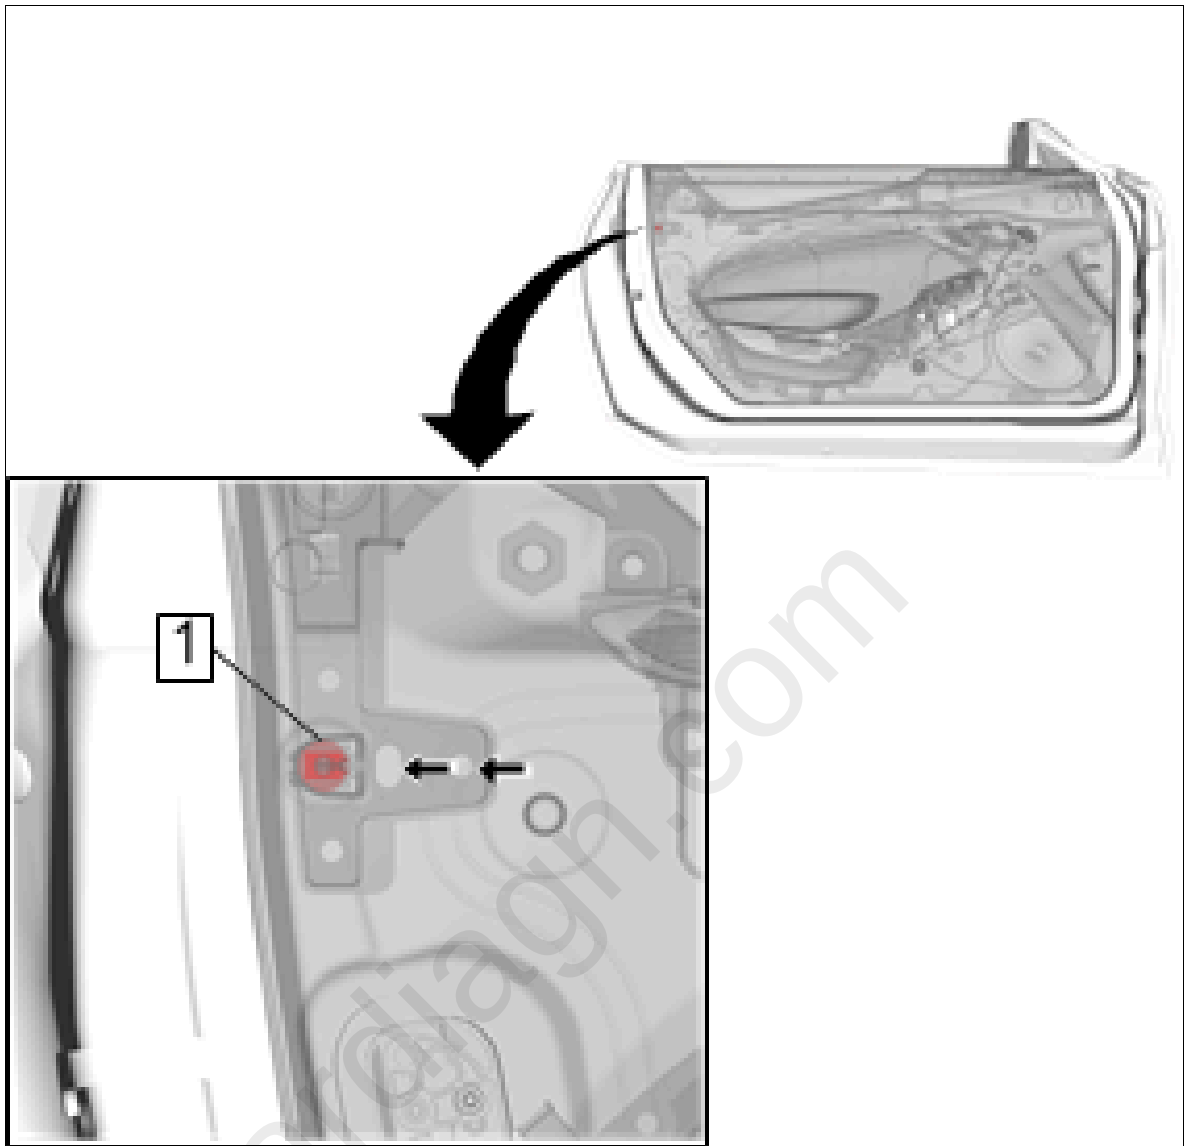

Courtesy of GENERAL MOTORS COMPANY

 NOTE:


- 1. Pull out door trim carefully to avoid damage.*
- 2. Manually remove safety high retention clip from sheet metal hole.*
- 3. Discard old door trim retainer clips and replace with new.*

7. Pivot the door trim from front end until both locator pins are out of the holes and then hit the front part of the door trim to remove the safety high retention clip (1) out of dog house.
8. Disconnect the door lock retainer cable from the door trim panel and inside handle.
9. Disconnect the electrical connectors.

REPAIR INSTRUCTIONS > FRONT SIDE DOOR TRIM REPLACEMENT > INSTALLATION PROCEDURE

1. Connect the electrical connectors.
2. Connect the door lock retainer cable to the door trim panel and inside handle.


Fig 1: Safety High Retention Clip

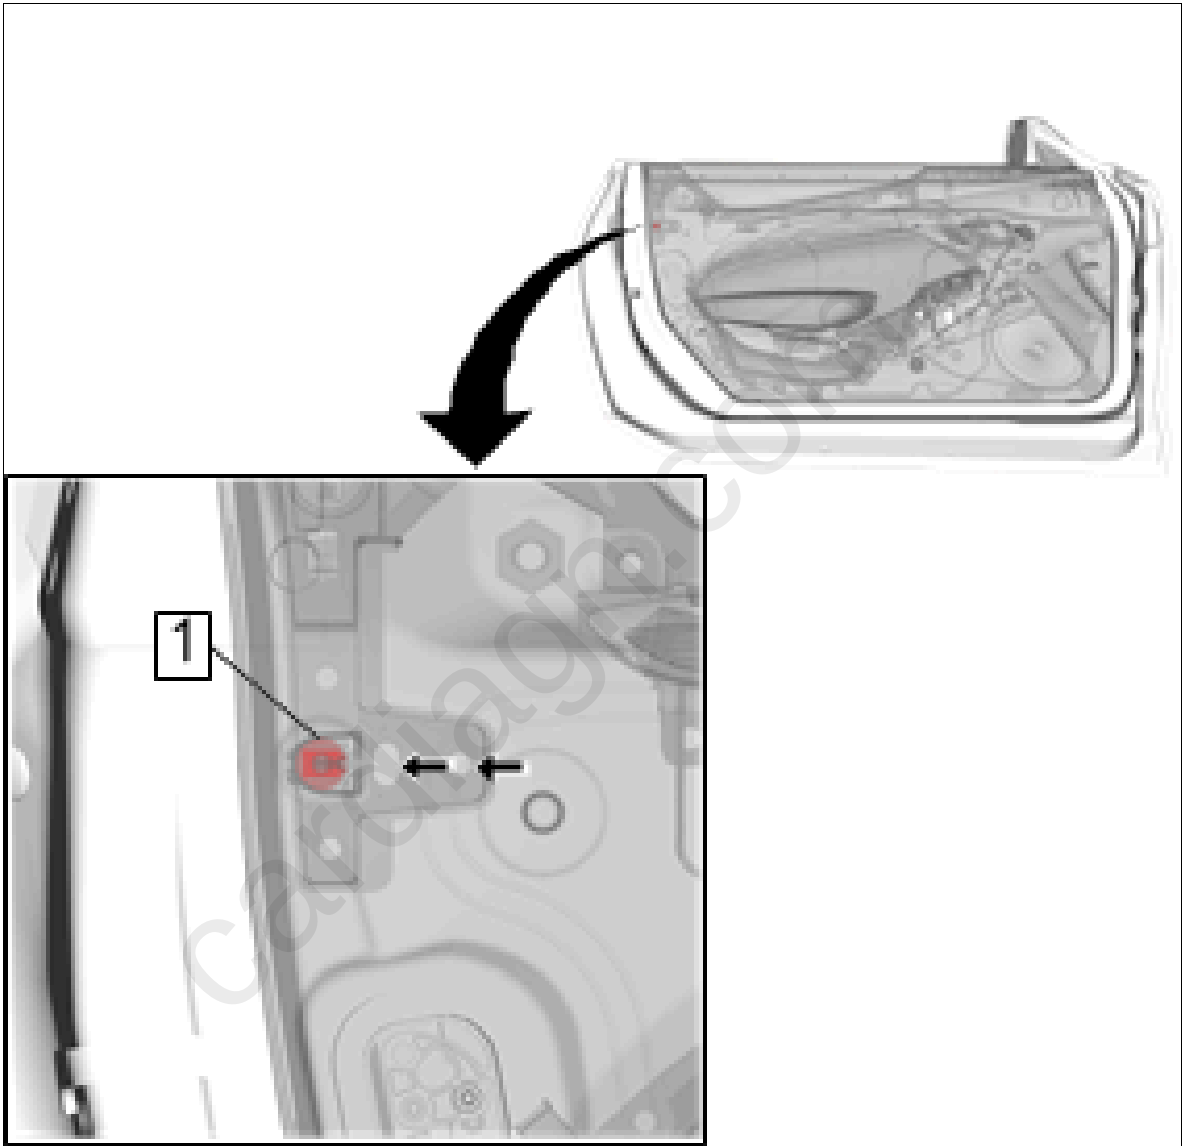

Courtesy of GENERAL MOTORS COMPANY

3. Install Safety High Retention Clip (1)


Fig 2: Front Side Door Trim Retainer

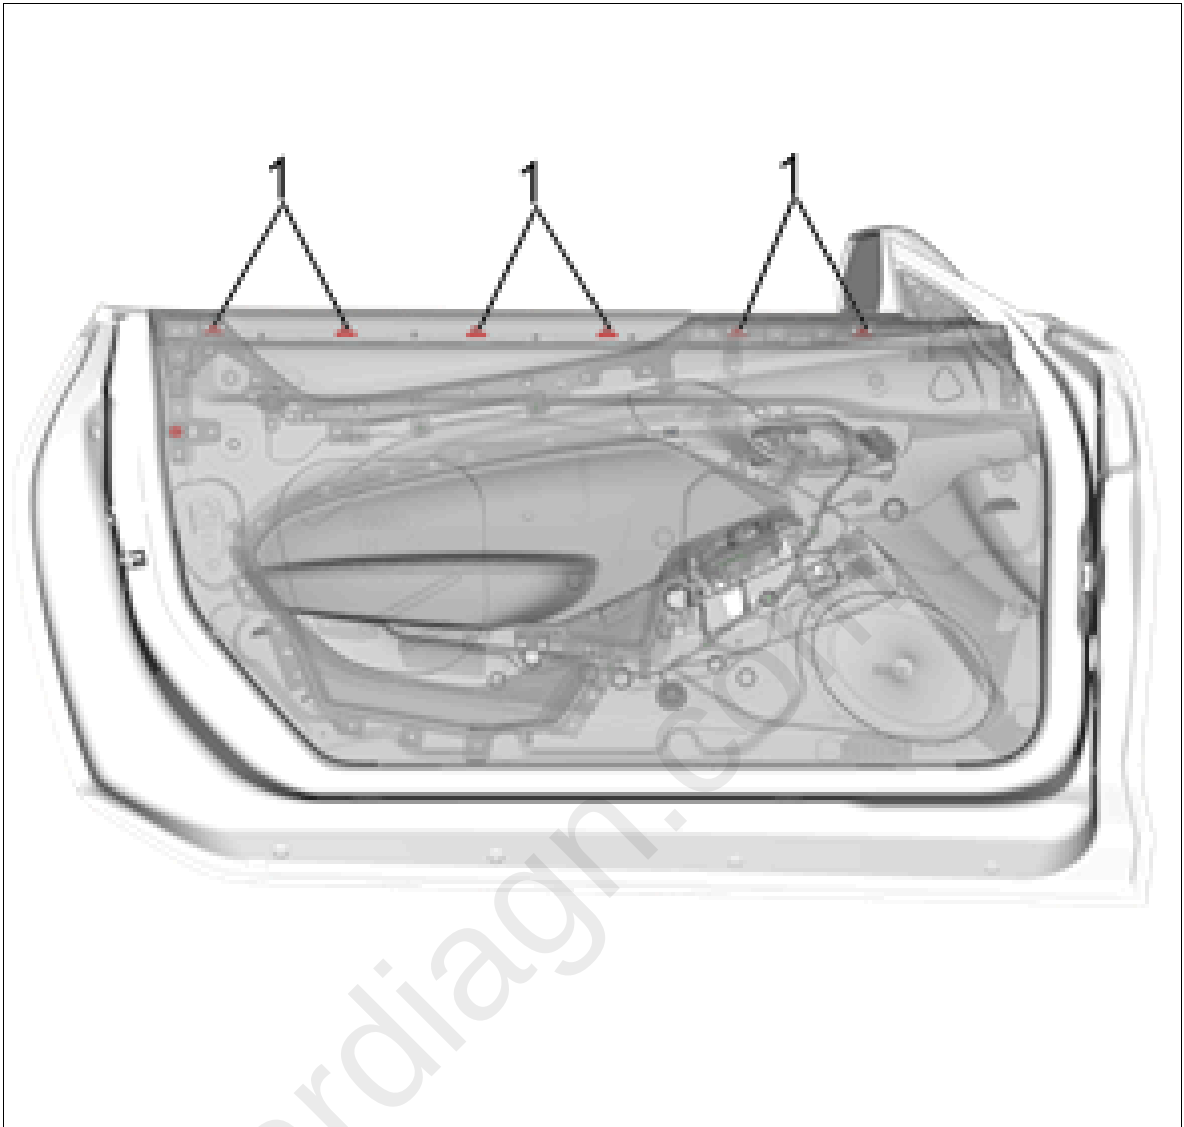

Courtesy of GENERAL MOTORS COMPANY

4. Install Front Side Door Trim Retainer (1) (Qty: 6)


Fig 3: Front Side Door Trim Retainer

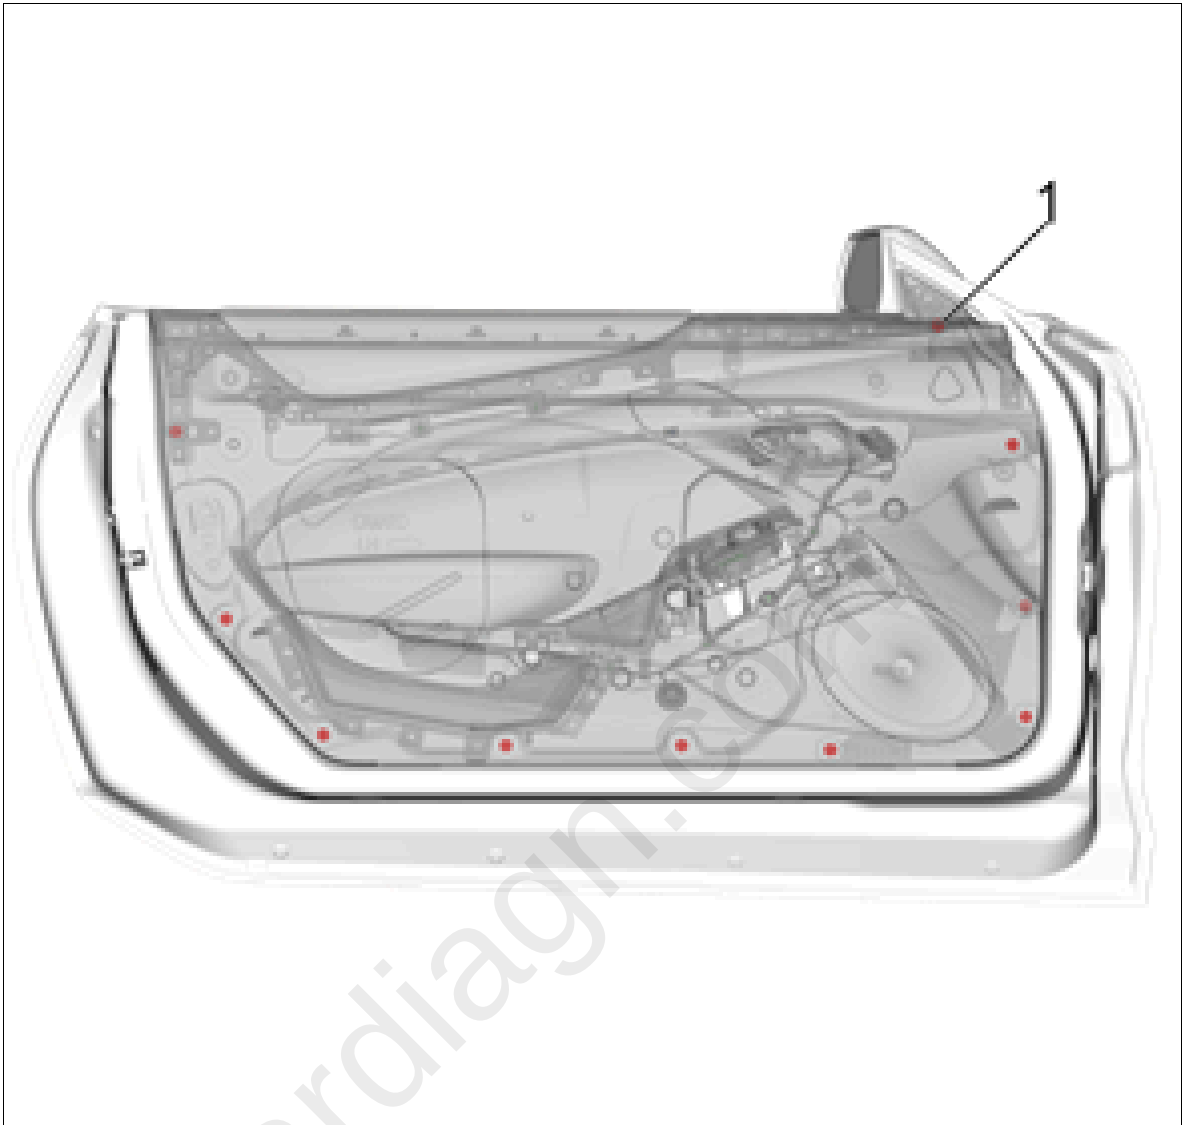

Courtesy of GENERAL MOTORS COMPANY

5. Install Front Side Door Trim Retainer (1) (Qty: 10)

Fig 4: Front Side Door Trim Bolts

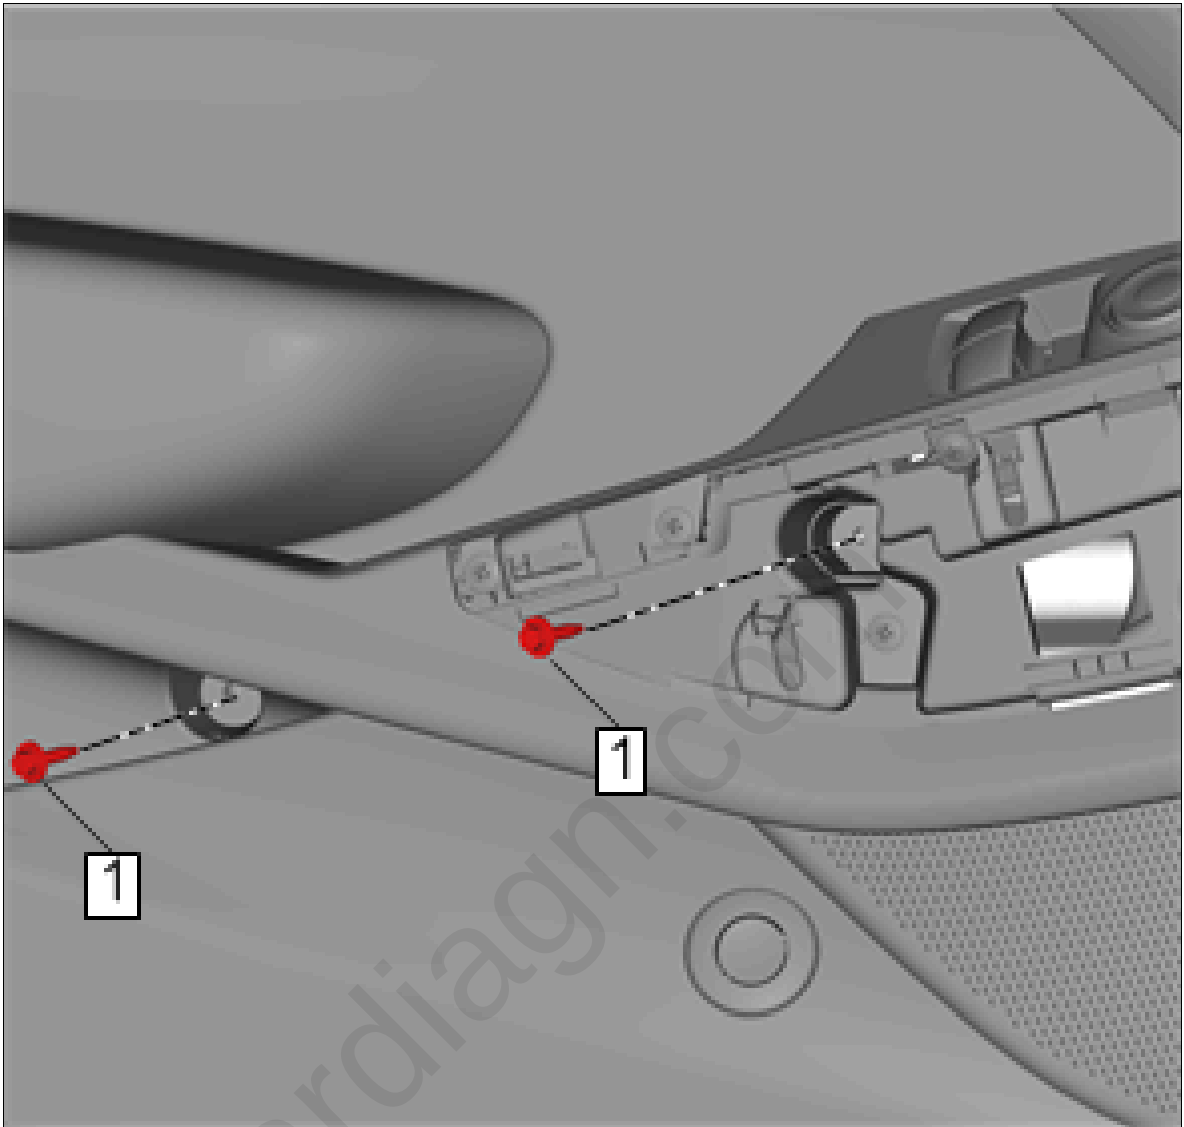

Courtesy of GENERAL MOTORS COMPANY




CAUTION:

Refer to Fastener Caution .

6. Install and tighten Front Side Door Trim Bolt (1) to 2.2 N.m (19 lb in) (Qty: 2)

Fig 5: Front Side Door Trim

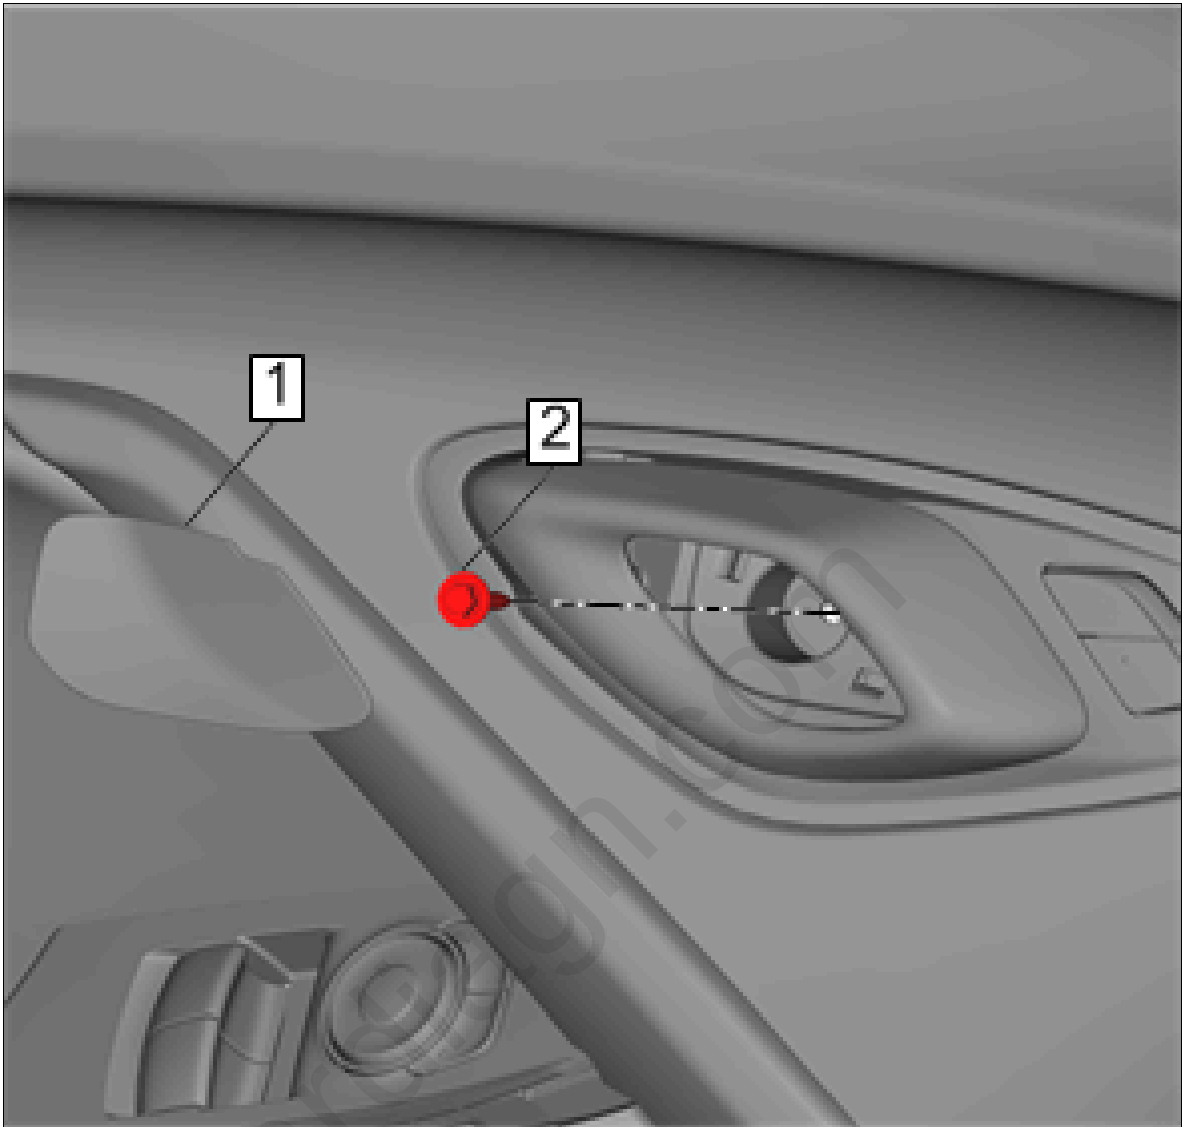


Courtesy of GENERAL MOTORS COMPANY

7. Install and tighten Front Side Door Trim Bolt (2) to 2.2 N.m (19 lb in)
8. Install Front Side Door Inside Handle Bolt Finish Cap (1)
9. Install Front Side Door Pull Handle Cover Replacement

REPAIR INSTRUCTIONS > FRONT SIDE DOOR TRIM PANEL APPLIQUE REPLACEMENT

Fig 1: Front Side Door Trim Panel Applique

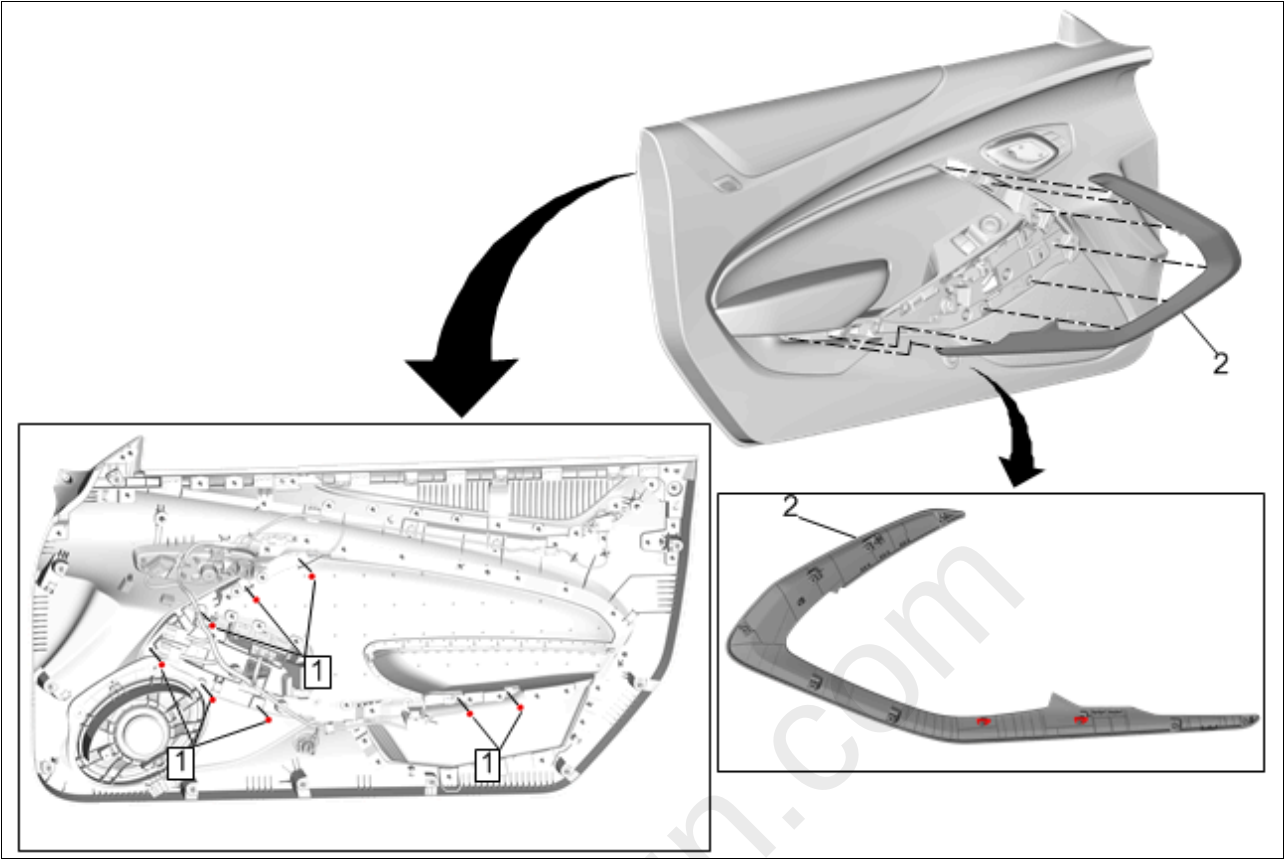


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Front Side Door Trim Replacement	
1	Front Side Door Trim Panel Applique Fastener (Qty: 8)
	CAUTION: Refer to Fastener Caution .
2	Tighten 2.5 N.m (22 lb in)
	Front Side Door Trim Panel Applique Procedure Disconnect all electrical connectors.

REPLACEMENT

Fig 1: Front Side Door Sill Garnish Molding

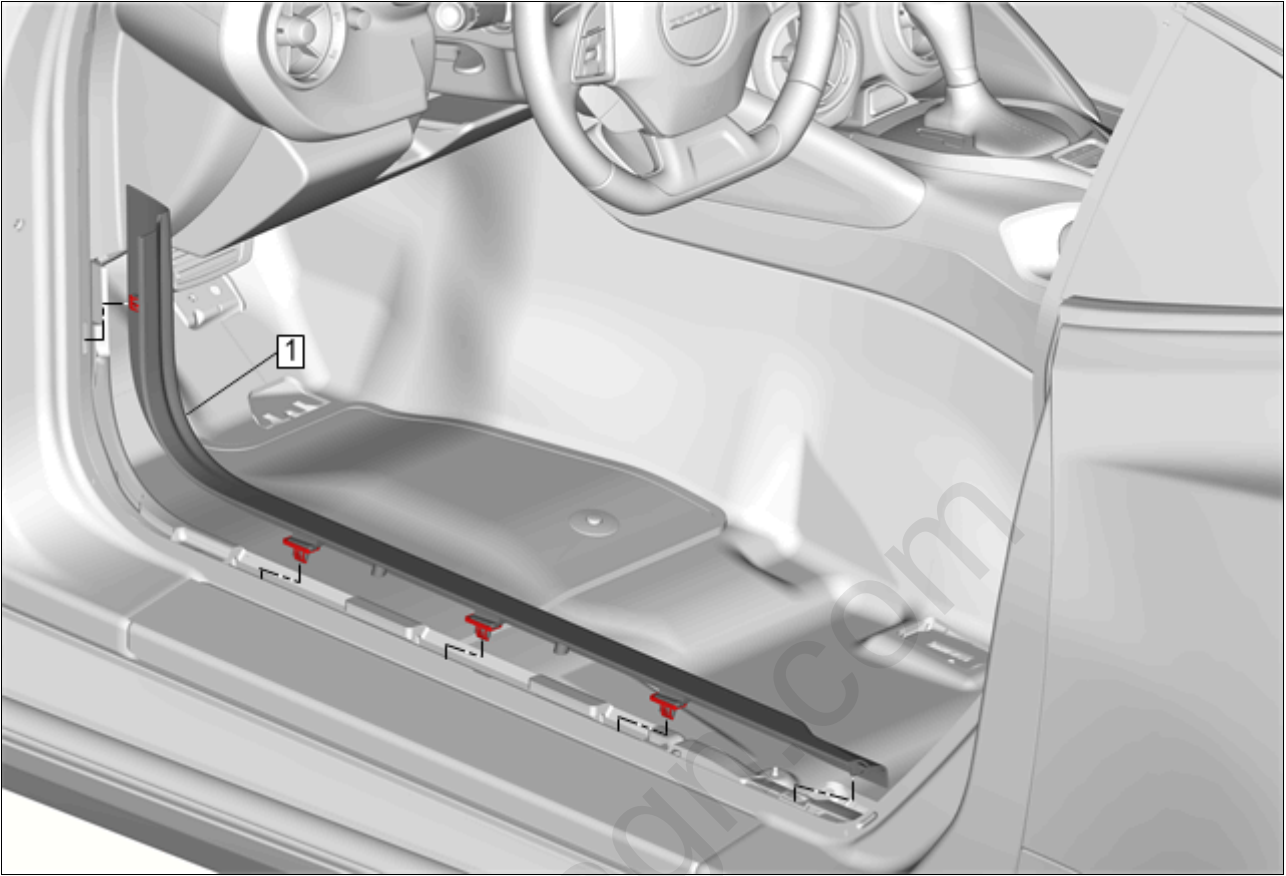


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Sill Garnish Molding Procedure 1. Starting at the rear of the garnish molding, pull upward at the B-Pillar joint to disengage garnish molding. 2. Work your way forward disengaging all of the garnish molding clips then pull rearward to disengage the clip on the forward vertical wall. 3. Reposition the front floor panel carpet as needed.

REPAIR INSTRUCTIONS > REAR COMPARTMENT SIDE TRIM PANEL ACCESS HOLE COVER REPLACEMENT

Fig 1: Rear Compartment Side Trim Panel Access Hole Cover

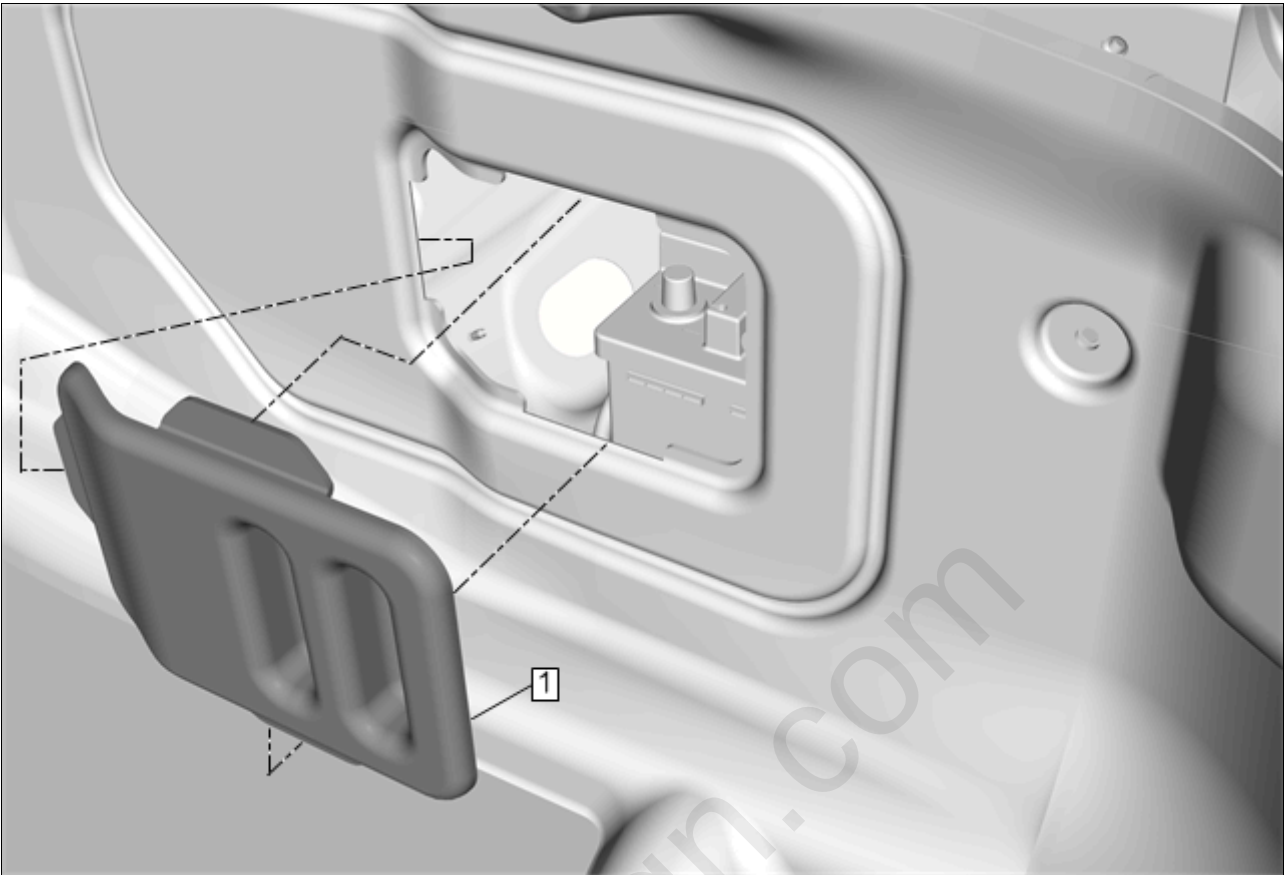


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Compartment Side Trim Panel Access Hole Cover Procedure Slide rearward slightly to disengage tabs on access hole cover from rear compartment side trim.

REPAIR INSTRUCTIONS > SUNSHADE REPLACEMENT (COUPE)

Fig 1: Sunshade (Coupe)

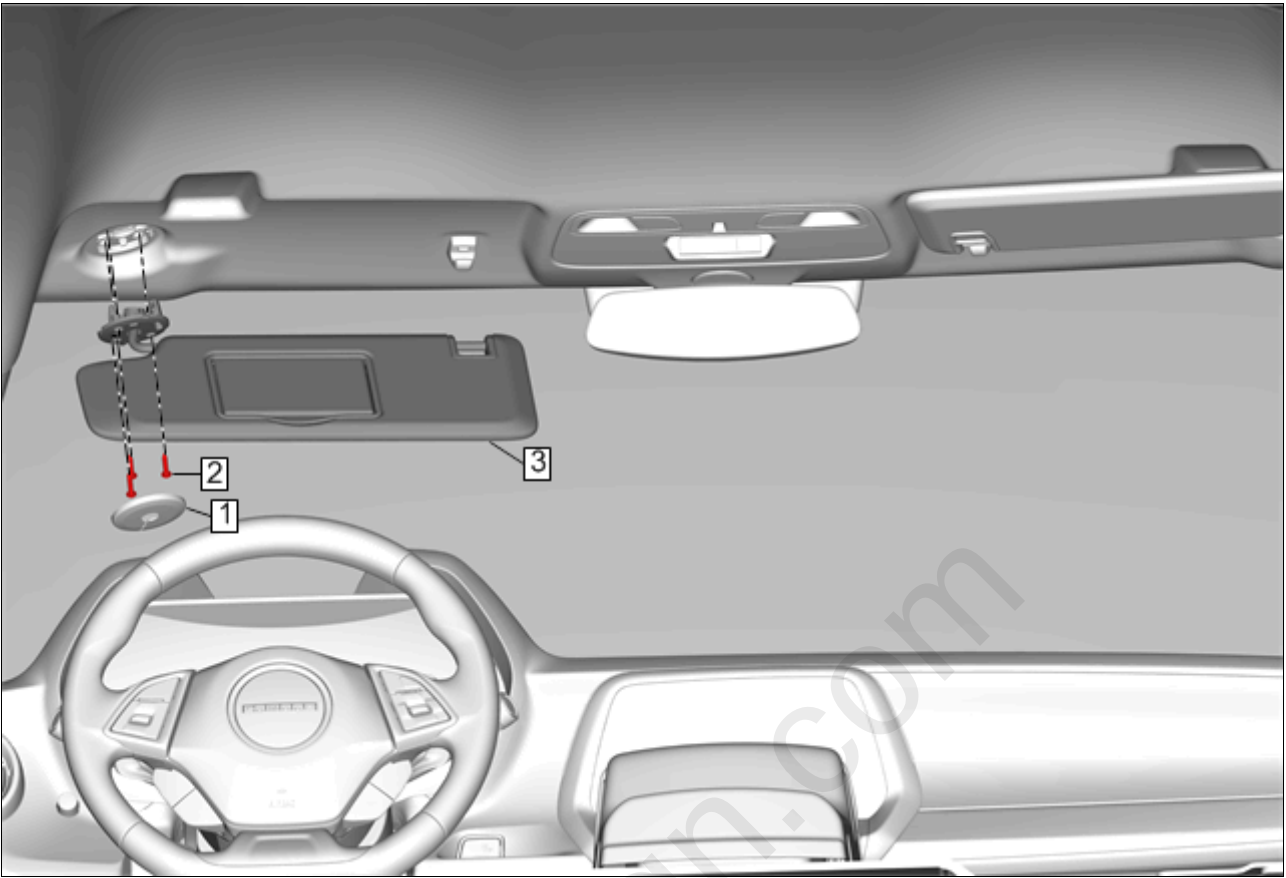


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Lower the front portion of the headliner to access the sunshade electrical connector and sunshade retainer. Refer to Headlining Trim Panel Replacement	
1	Sunshade Support Bolt Cover
2	Sunshade Fastener (Qty: 3) <i>CAUTION:</i> <i>Refer to Fastener Caution .</i> Tighten 2.5 N.m (22 lb in)
3	Sunshade Procedure 1. Squeeze the tabs at the base of the sunshade assembly to detach it from the

- roof panel and allow the headliner with the sunshade attached to be lowered.
2. Disconnect the electrical connector, if equipped.
3. Release the retainer attaching the sunshade to the headliner assembly.

REPAIR INSTRUCTIONS > SUNSHADE REPLACEMENT (CONVERTIBLE)

Fig 1: Sunshade (Convertible)

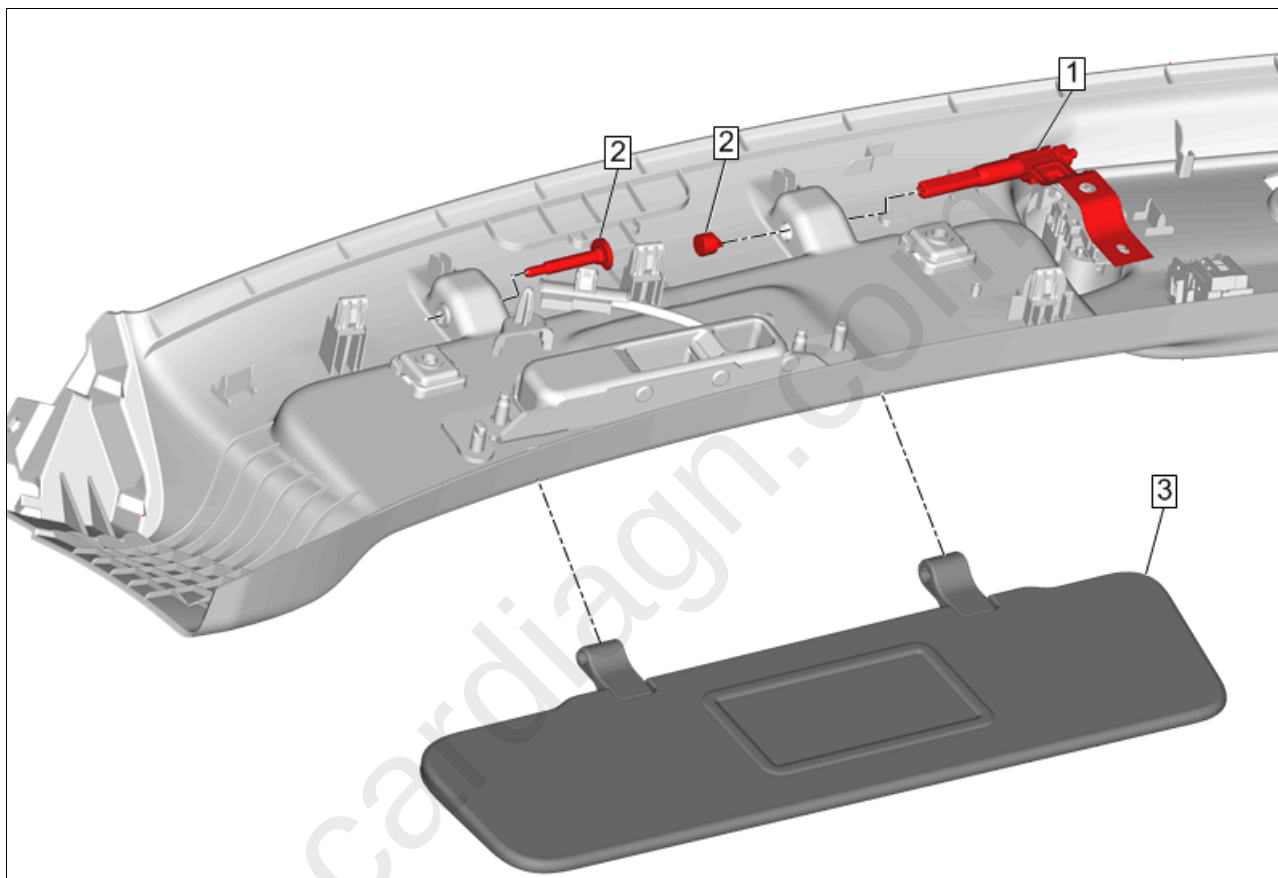


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
Windshield Upper Garnish Molding Replacement	
1	Sunshade Support
2	Sunshade Retainer (Qty: 2) Procedure Remove metal push nut on outer shim.
3	Sunshade

REPAIR INSTRUCTIONS > SUNSHADE SUPPORT REPLACEMENT

Fig 1: Sunshade Support

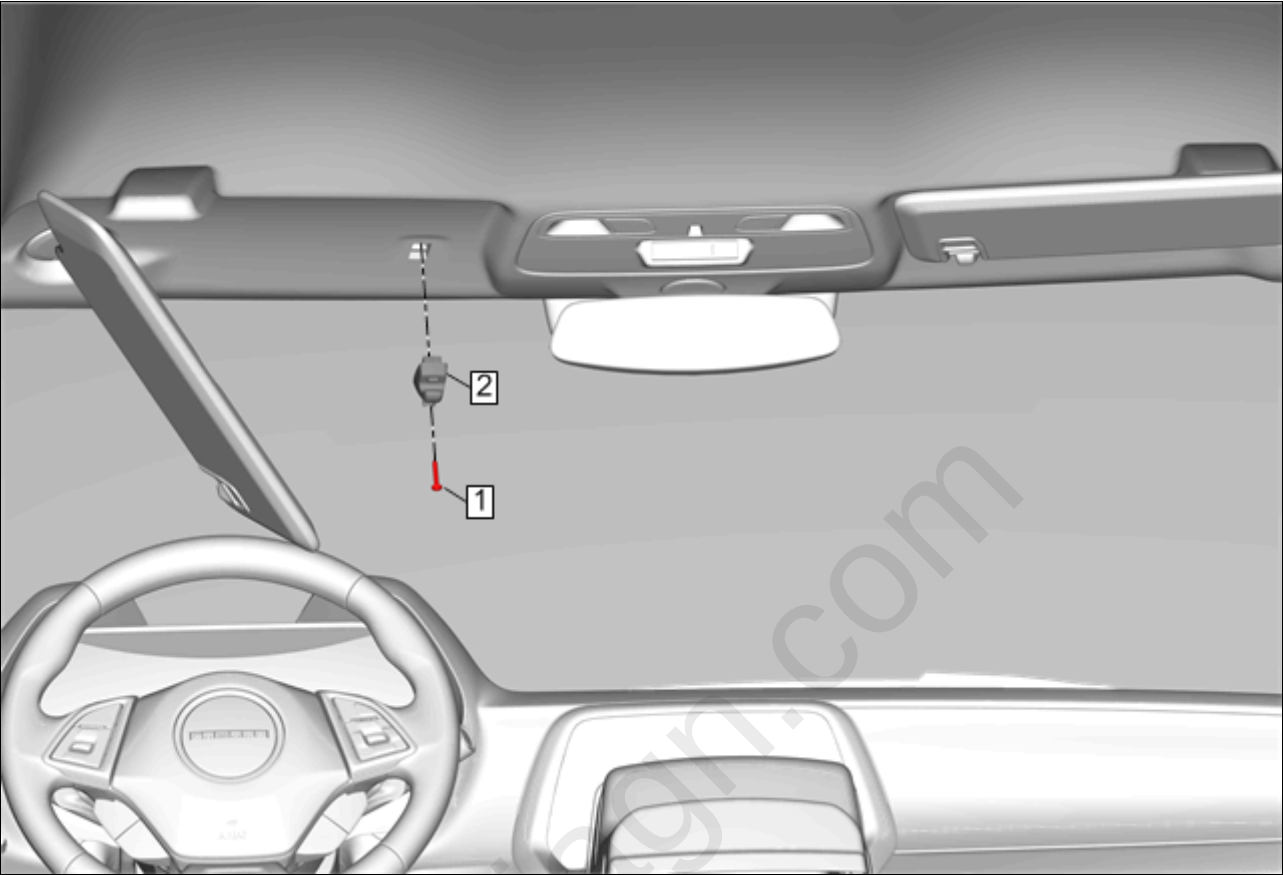


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Sunshade Support Fastener
	<i>CAUTION:</i> <i>Refer to Fastener Caution .</i> Procedure Open the sunshade support screw access cover with a appropriate tool. Tighten 2.5 N.m (22 lb in)
2	Sunshade Support Procedure 1. Unclip the sunshade from the support and reposition.

2. Using the appropriate tool, release the metal sunshade support retainer.

REPAIR INSTRUCTIONS > WINDSHIELD GARNISH MOLDING REPLACEMENT - LEFT SIDE (COUPE)

Fig 1: Windshield Garnish Molding - Left Side (Coupe)

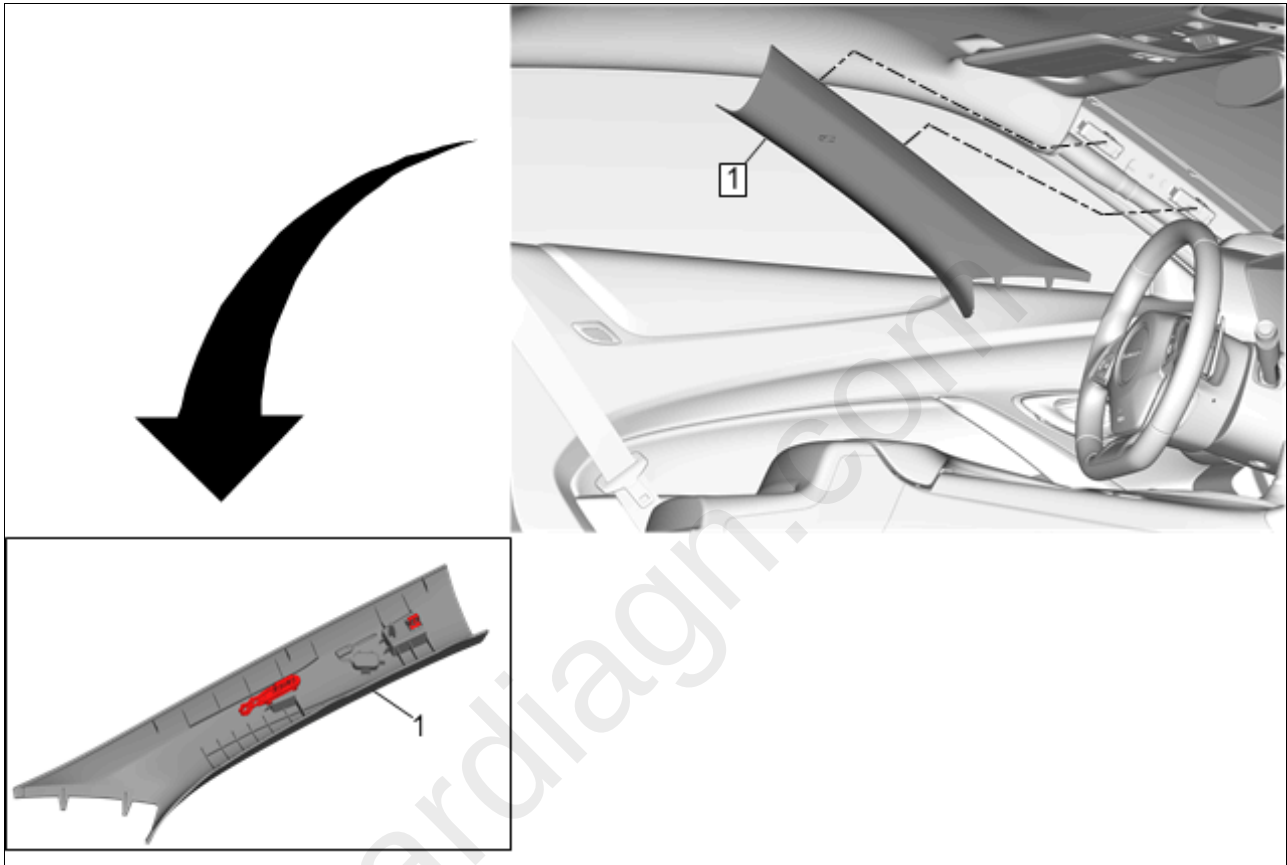

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
CAUTION: <i>If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced.</i>	
CAUTION: <i>Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be</i>	


replaced.

Preliminary Procedure SIR Disabling and Enabling

1	Windshield Garnish Molding Procedure 1. Pull the top of the A-Pillar Trim inward to disengage the upper clip. 2. Carefully remove the tether from the dog house. 3. Pull A-Pillar Trim upward to disengage from the instrument panel. 4. The tether clip at the center portion of the garnish molding MUST be replaced every time the windshield garnish molding is removed. 5. Disconnect electrical connector, if equipped.
---	---

REPAIR INSTRUCTIONS > WINDSHIELD GARNISH MOLDING REPLACEMENT - LEFT SIDE (CONVERTIBLE)


Fig 1: Windshield Garnish Molding - Left Side (Convertible)

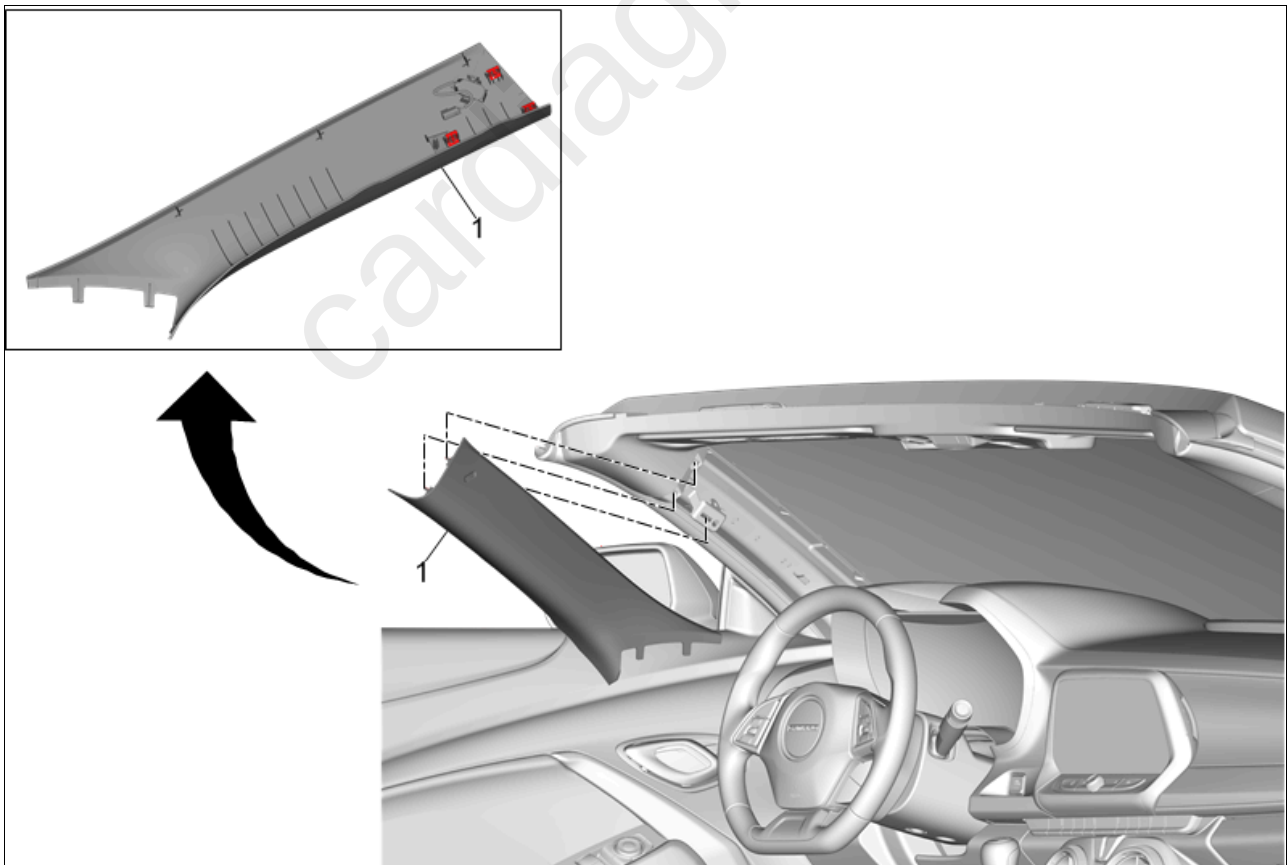

Callout	Component Name
Preliminary Procedure Place the folding top assembly in a full down position to allow access to the windshield side garnish molding.	
1	Windshield Garnish Molding Procedure 1. Starting at the top, gently pull on the garnish molding to disengage the clips. 2. Disconnect electrical connector. 3. Garnish clips must be seated in roof front header garnish molding lower prior to installing sealing clips. 4. Tabs to be fully seated in instrument panel trim pad.

REPAIR INSTRUCTIONS > WINDSHIELD GARNISH MOLDING REPLACEMENT - RIGHT SIDE (COUPE)


Fig 1: Windshield Garnish Molding - Right Side (Coupe)

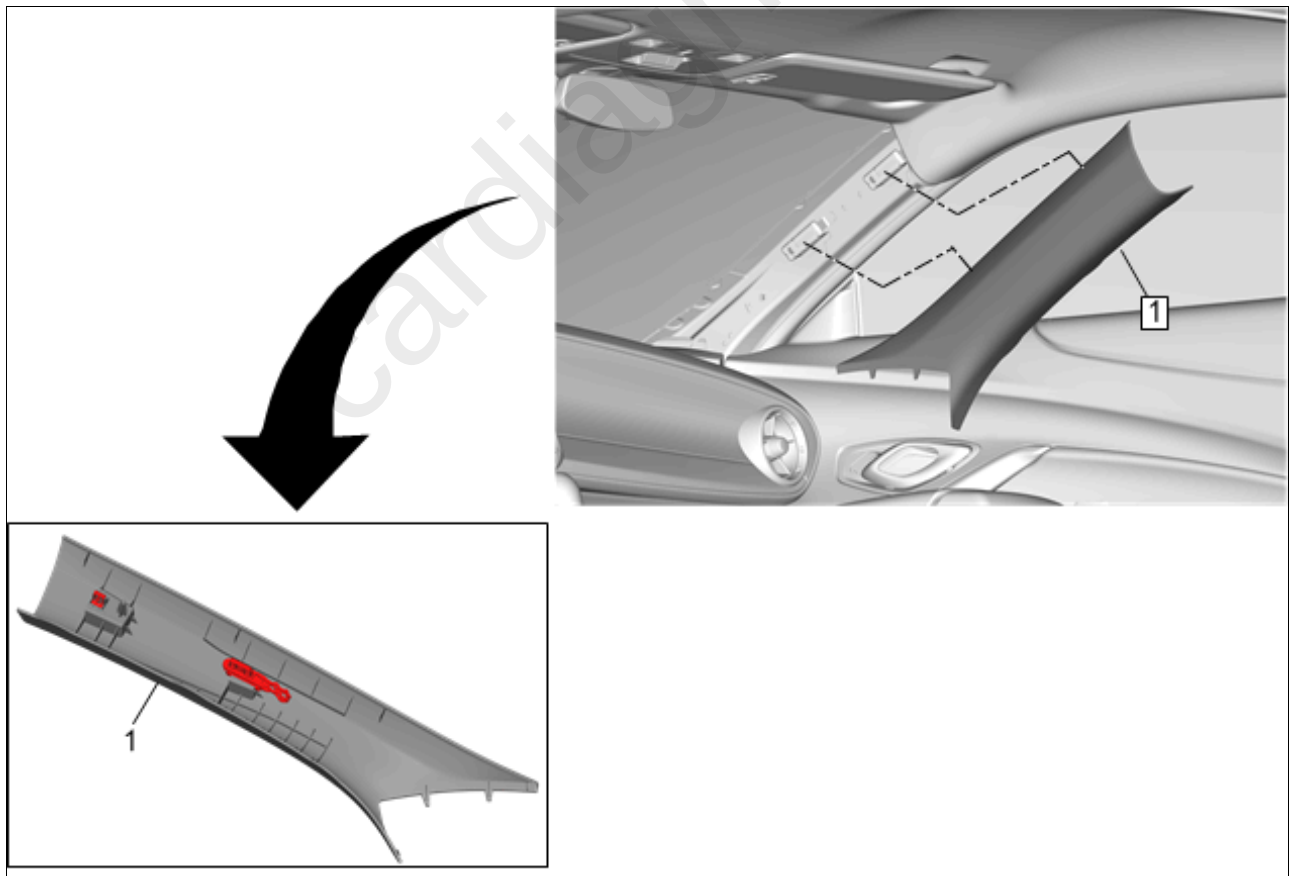

Callout	Component Name
CAUTION: <i>If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced.</i>	
CAUTION: <i>Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced.</i>	
Preliminary Procedure SIR Disabling and Enabling	
1	Windshield Garnish Molding Procedure 1. Pull the top of the A-Pillar Trim inward to disengage the upper clip. 2. Carefully remove the tether from the dog house. 3. Pull A-Pillar Trim upward to disengage from the instrument panel. 4. The tether clip at the center portion of the garnish molding MUST be replaced every time the windshield garnish molding is removed.

REPAIR INSTRUCTIONS > WINDSHIELD GARNISH MOLDING REPLACEMENT - RIGHT SIDE (CONVERTIBLE)


Fig 1: Windshield Garnish Molding - Right Side (Convertible)

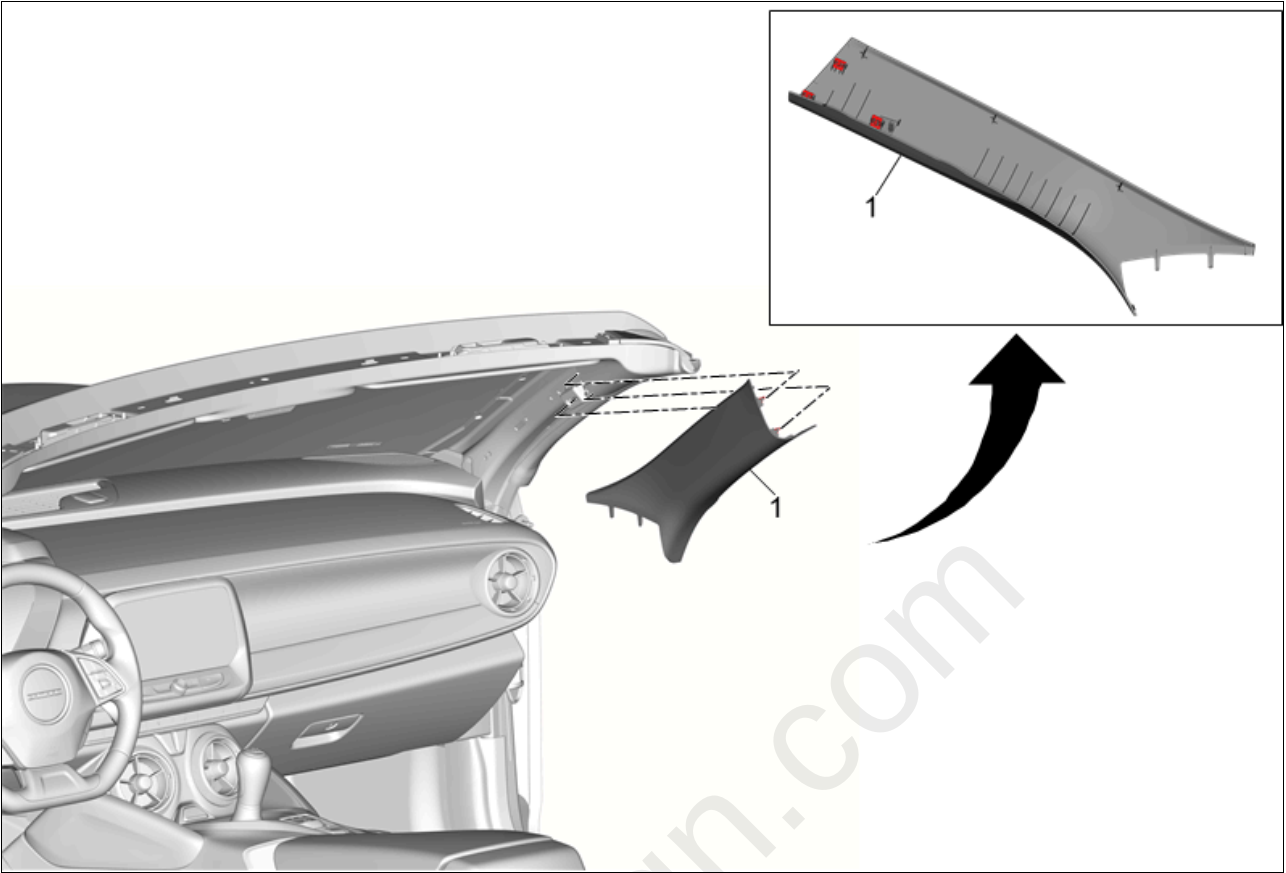

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Place the folding top assembly in a full down position to allow access to the windshield side garnish molding.	
1	Windshield Garnish Molding Procedure 1. Starting at the top, gently pull on the garnish molding to disengage the clips. 2. Disconnect electrical connector. 3. Garnish clips must be seated in roof front header garnish molding lower prior to installing sealing clips. 4. Tabs to be fully seated in instrument panel trim pad.

Fig 1: Windshield Upper Garnish Molding

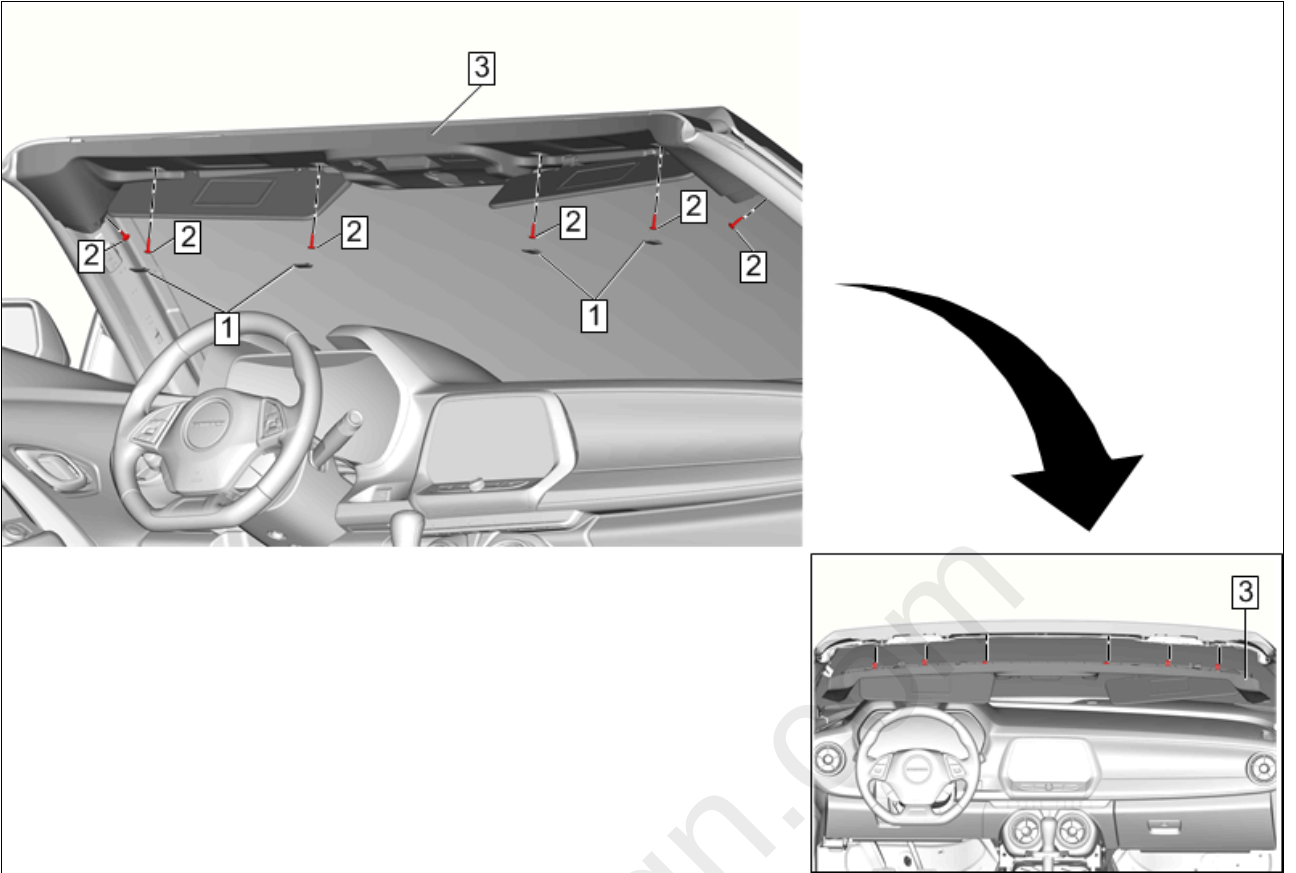


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Inside Rearview Mirror Replacement 2. Windshield Garnish Molding Replacement - Left Side (Coupe) Windshield Garnish Molding Replacement - Left Side (Convertible) , Windshield Garnish Molding Replacement - Right Side (Coupe) Windshield Garnish Molding Replacement - Right Side (Convertible)	
1	Folding Top Cover (Qty: 4) Procedure Tilt the sunshade down toward the windshield to access covers.
2	Roof Panel Bolt (Qty: 6) CAUTION: <i>Refer to Fastener Caution .</i>

	Tighten 2.5 N.m (22 lb in)
3	Windshield Upper Garnish Molding Procedure 1. Disconnect the electrical connectors and unclip the electrical harness from the windshield inner side frame. 2. Transfer parts as necessary.

REPAIR INSTRUCTIONS > CENTER PILLAR UPPER TRIM PANEL REPLACEMENT

Fig 1: Center Pillar Upper Trim Panel

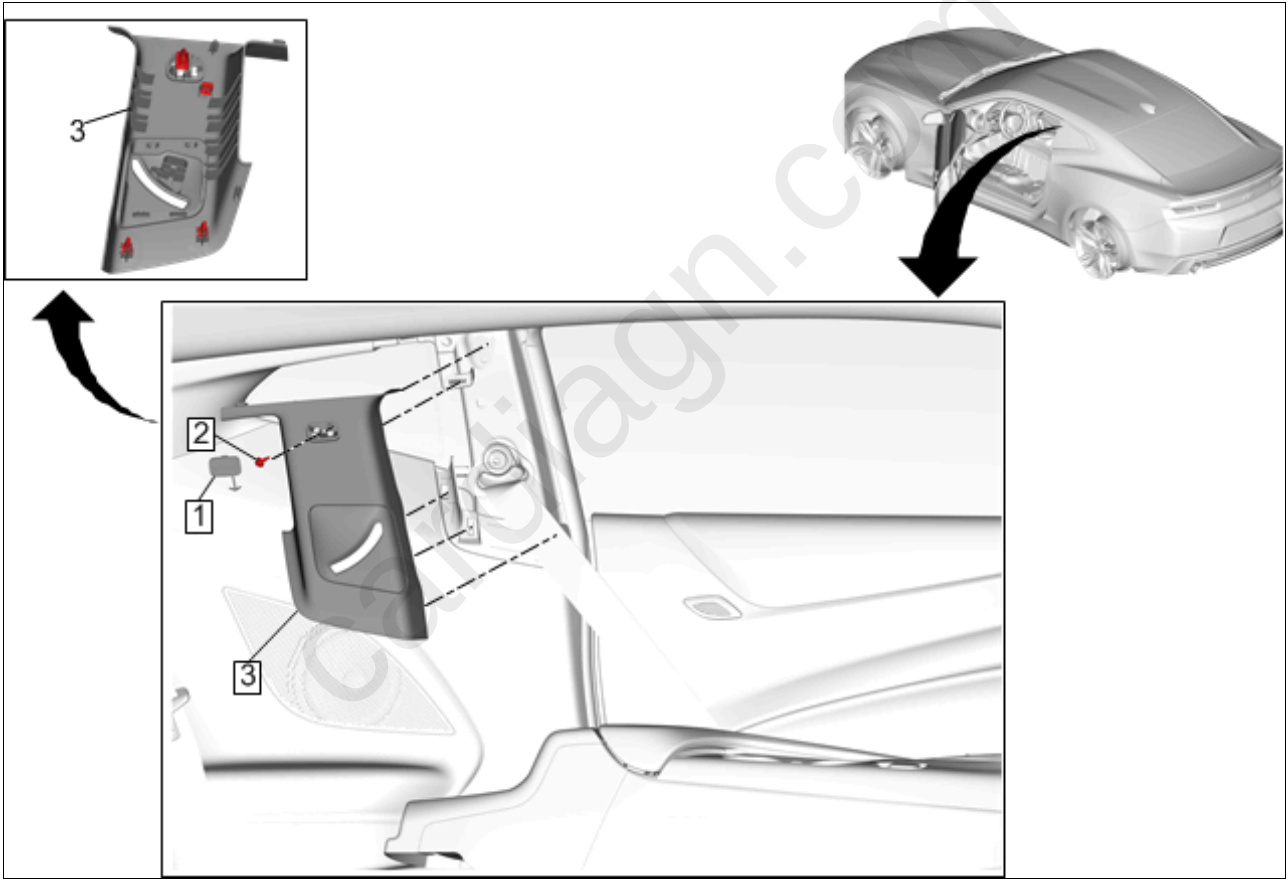

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. SIR Disabling and Enabling 2. Remove the driver or passenger seat belt anchor plate tensioner cover and fastener. Front	


Seat Belt Retractor Replacement (Coupe)Front Seat Belt Retractor Replacement (Convertible)

3. Move the seat to the full forward position.

1	Center Pillar Upper Trim Panel Bolt Cap
2	Center Pillar Upper Garnish Molding Bolt CAUTION: <i>Refer to Fastener Caution .</i> Tighten 3 N.m (27 lb in)
3	Center Pillar Upper Trim Panel Procedure Use a plastic trim tool to aid in disengaging retaining clips on center pillar upper trim panel from the center pillar inner panel.

REPAIR INSTRUCTIONS > QUARTER UPPER TRIM PANEL REPLACEMENT

Fig 1: Quarter Upper Trim Panel

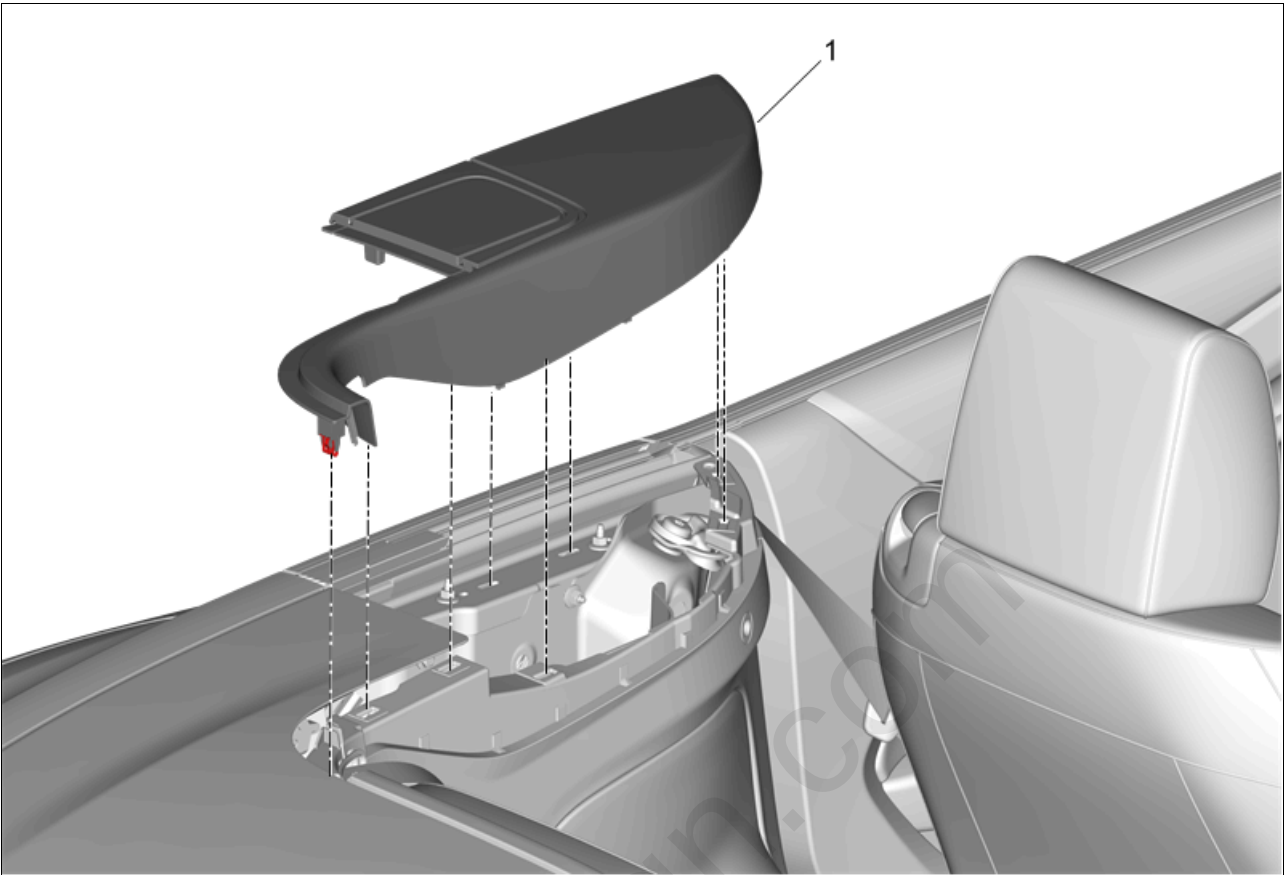


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Place the folding top assembly in a full down position with lid open to allow access to the quarter upper trim panel.	
1	Quarter Upper Trim Panel Procedure 1. Use a plastic trim tool to aid in disengaging retaining clips on quarter upper trim panel. 2. Feed the seat belt through the opening in the quarter upper trim panel.

REPAIR INSTRUCTIONS > QUARTER LOWER REAR TRIM PANEL REPLACEMENT (COUPE)

Fig 1: Quarter Lower Rear Trim Panel (Coupe)

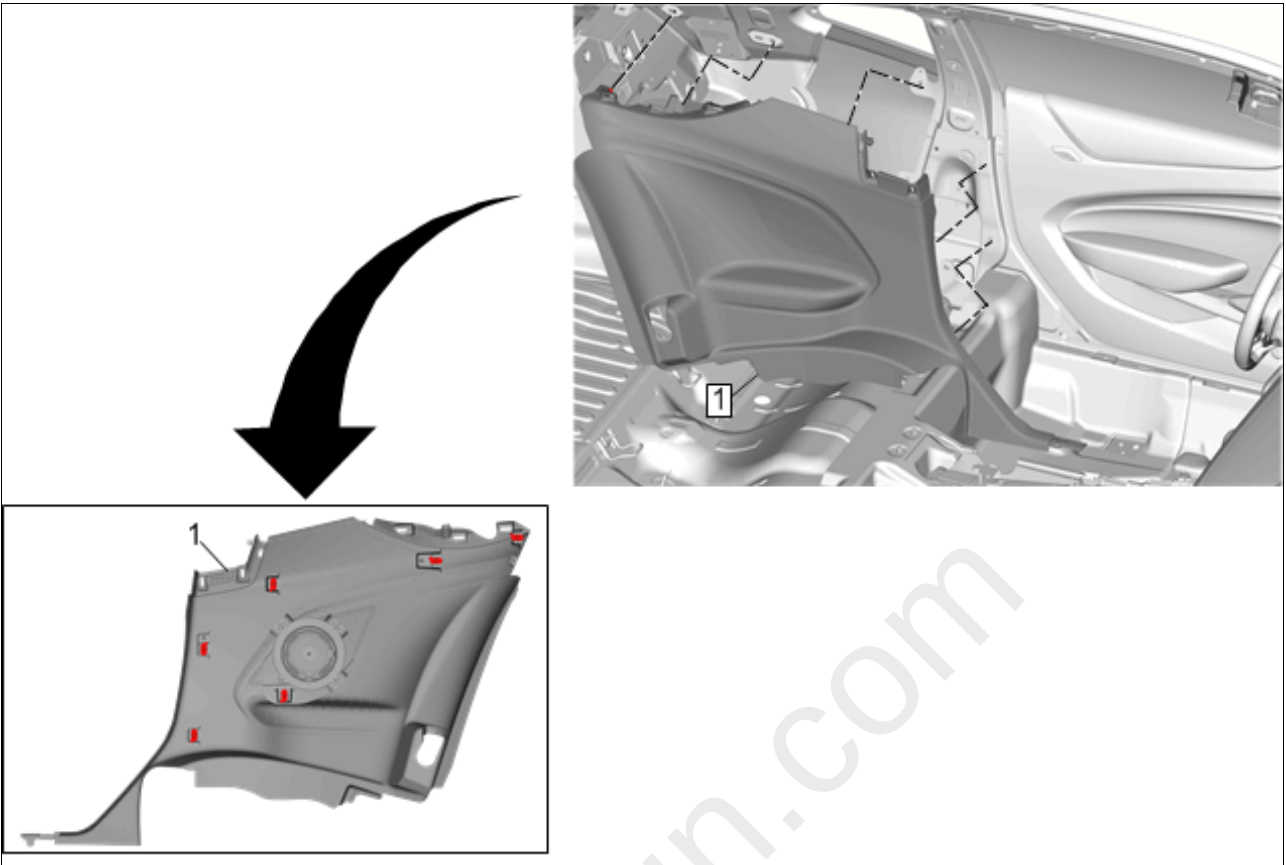


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Front Side Door Sill Garnish Molding Replacement 2. Body Side Rear Window Garnish Molding Replacement 3. Rear Seat Back Cushion Pad Replacement (Coupe) 4. Rear Seat Cushion Removal and Installation 5. Remove the rear seat belt retractor anchor bracket fastener. Rear Seat Belt Retractor Replacement (Coupe)	
1	Quarter Lower Rear Trim Panel Procedure 1. Use a flat-bladed plastic trim tool to aid in the removal. 2. Disconnect the electrical connector.

REPAIR INSTRUCTIONS > QUARTER LOWER REAR TRIM PANEL REPLACEMENT (CONVERTIBLE)

Fig 1: Quarter Lower Rear Trim Panel (Convertible)

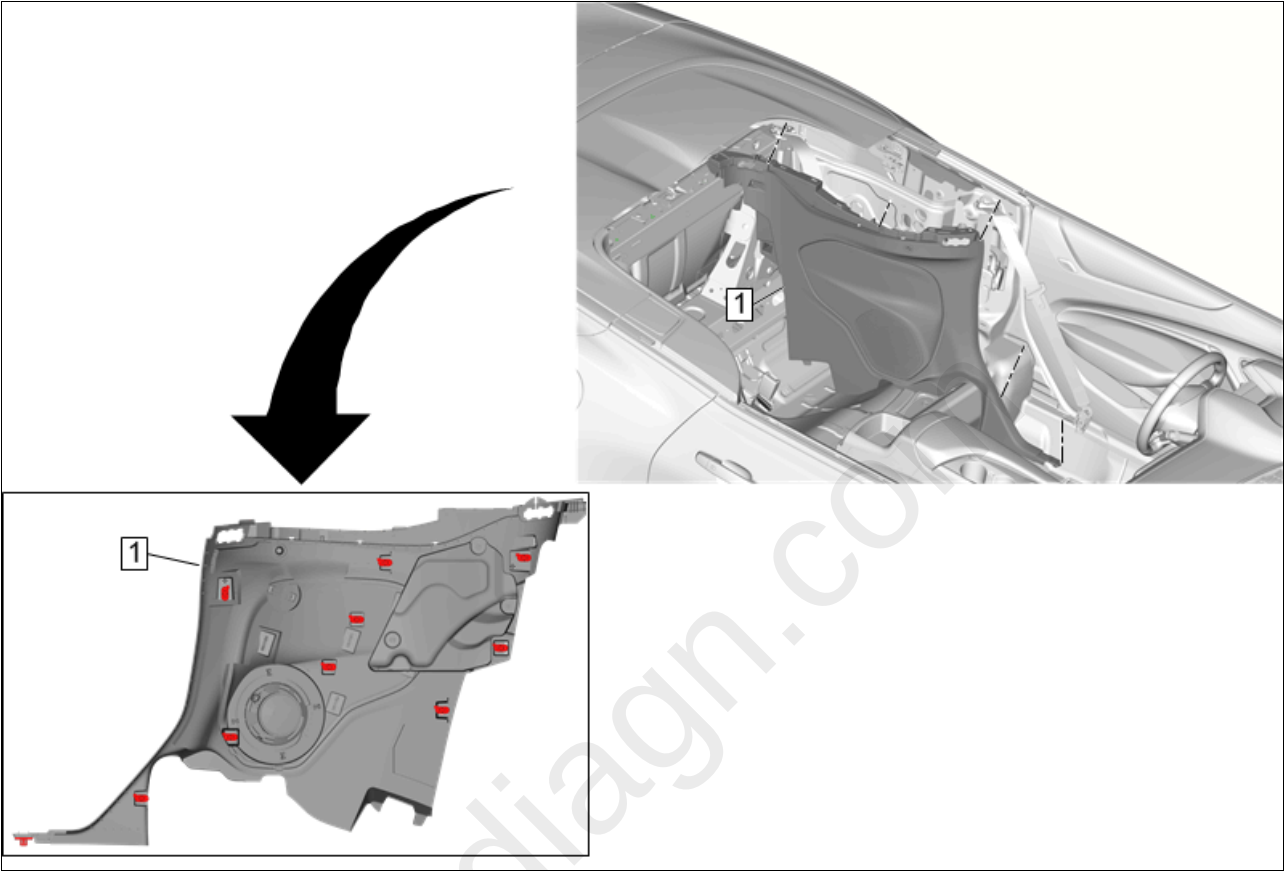

Courtesy of GENERAL MOTORS COMPANY


Callout	Component Name
Preliminary Procedures	
1. Front Side Door Sill Garnish Molding Replacement	
2. Quarter Upper Trim Panel Replacement	
3. Rear Seat Back Cushion Pad Replacement (Convertible)	
4. Remove the driver or passenger seat retractor side belt anchor fastener. Front Seat Belt Retractor Replacement (Convertible)	
1	Quarter Lower Rear Trim Panel Procedure 1. Grasp the panel and pull outward, disengaging the clips securing the panel to the

vehicle.

2. Feed the seat belts through bezel opening in the panel.
3. Disconnect the electrical connector.

REPAIR INSTRUCTIONS > QUARTER TRIM PANEL INSERT REPLACEMENT

Fig 1: Quarter Trim Panel Insert

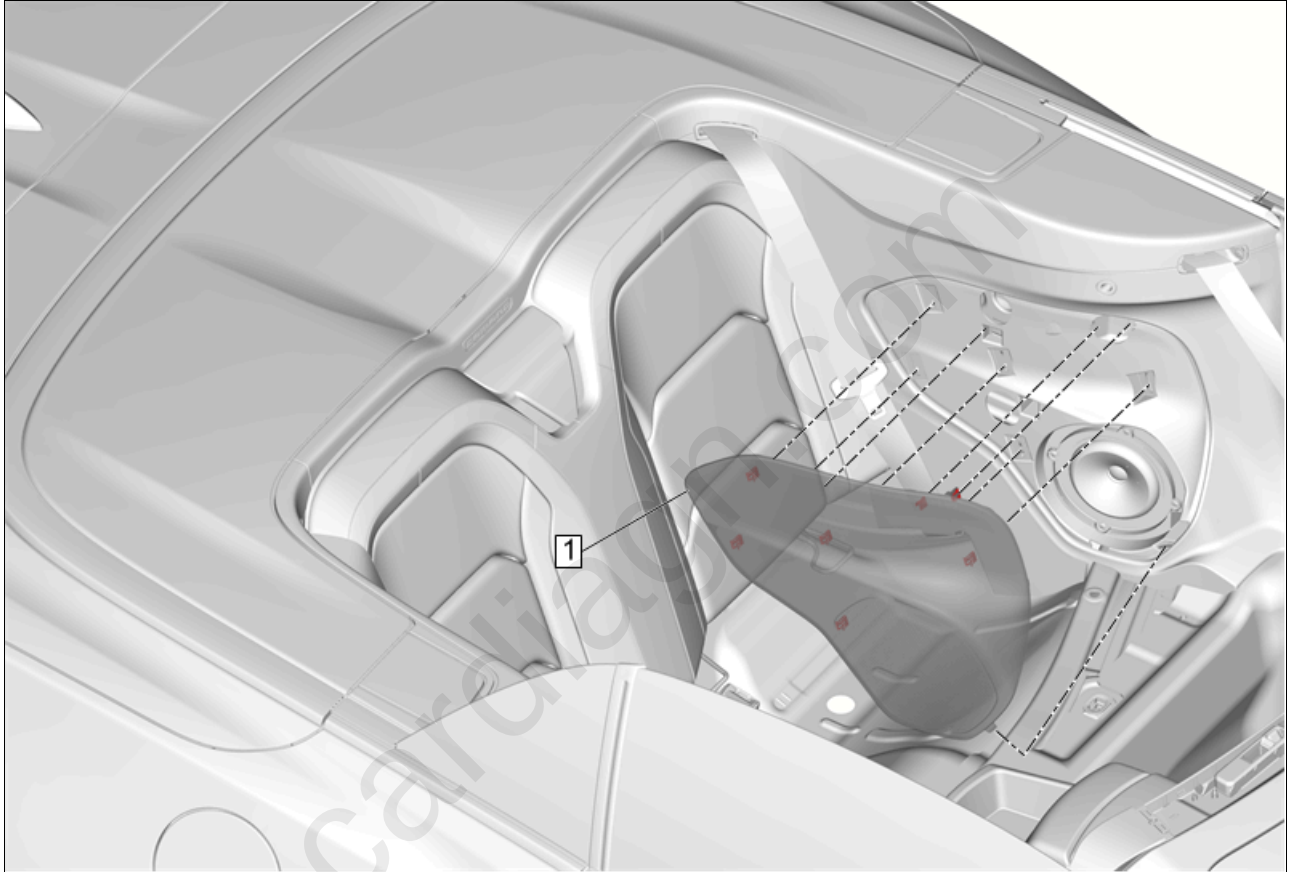


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Quarter Trim Panel Insert Procedure 1. Use a flat bladed plastic trim tool. 2. Start at forward edge and pull outward to disengage the clips that secure the quarter trim panel insert to the quarter trim panel.

REPAIR INSTRUCTIONS > QUARTER TRIM PANEL COVER REPLACEMENT

Fig 1: Quarter Trim Panel Cover

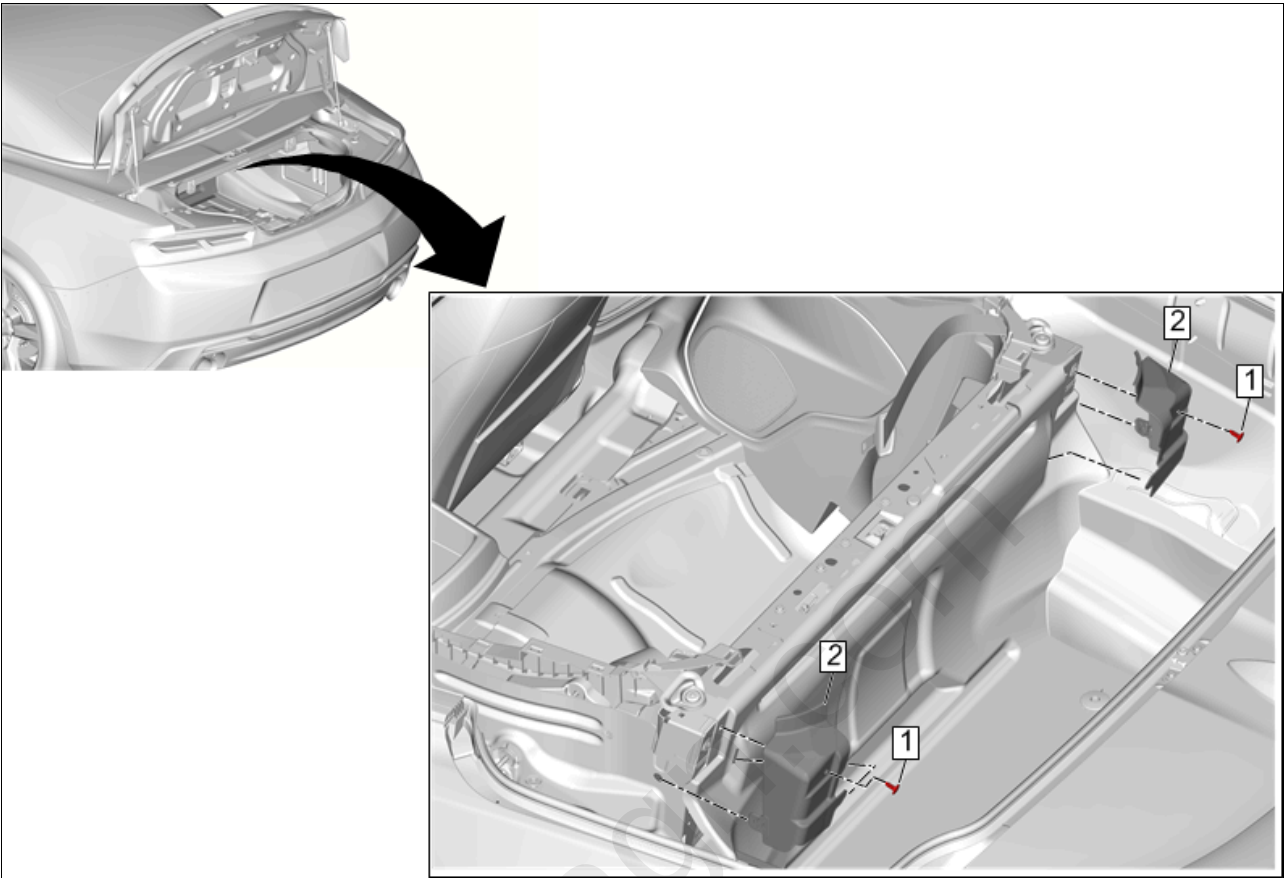


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Rear Compartment Closeout Upper Panel Replacement	
1	Rear Compartment Floor Panel Front Trim Retainer (Qty: 2) Procedure Use a plastic flat-bladed tool to remove the push-in retainers.
2	Quarter Trim Panel Cover (Qty: 2)

REPAIR INSTRUCTIONS > BODY SIDE FRONT TRIM PANEL REPLACEMENT - CENTER

Fig 1: Body Side Front Trim Panel - Center

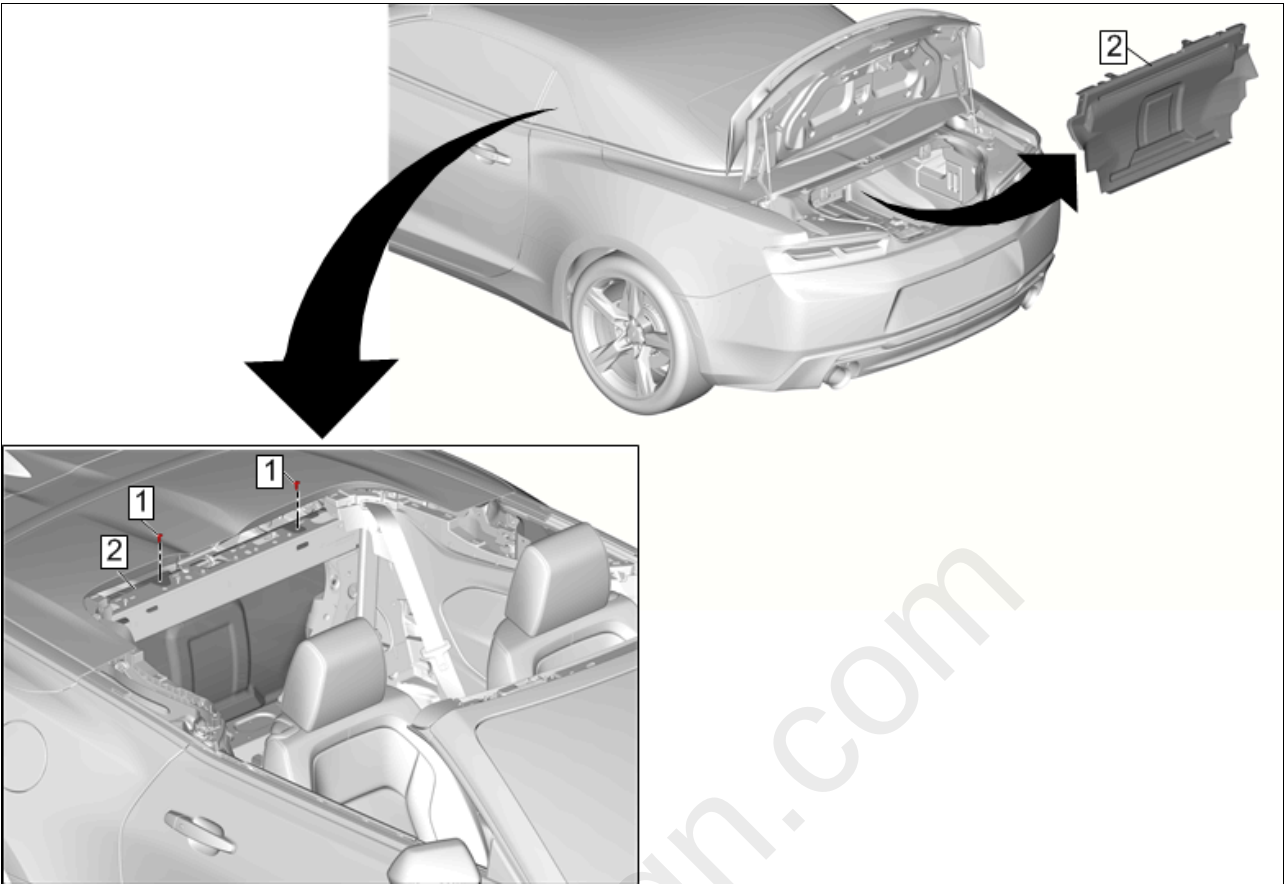


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Rear Compartment Closeout Upper Panel Replacement 2. Rear Compartment Floor Panel Trim Replacement 3. Quarter Trim Panel Cover Replacement	
1	Rear Compartment Floor Panel Front Trim Retainer (Qty: 2) Procedure Use a plastic flat-bladed tool to remove the push-in retainers.
2	Body Side Front Trim Panel - Center

**REPAIR INSTRUCTIONS > BODY SIDE REAR TRIM PANEL BRACKET
REPLACEMENT (LEFT SIDE, CONVERTIBLE)**

Fig 1: Body Side Rear Trim Panel Bracket (Left Side, Convertible)

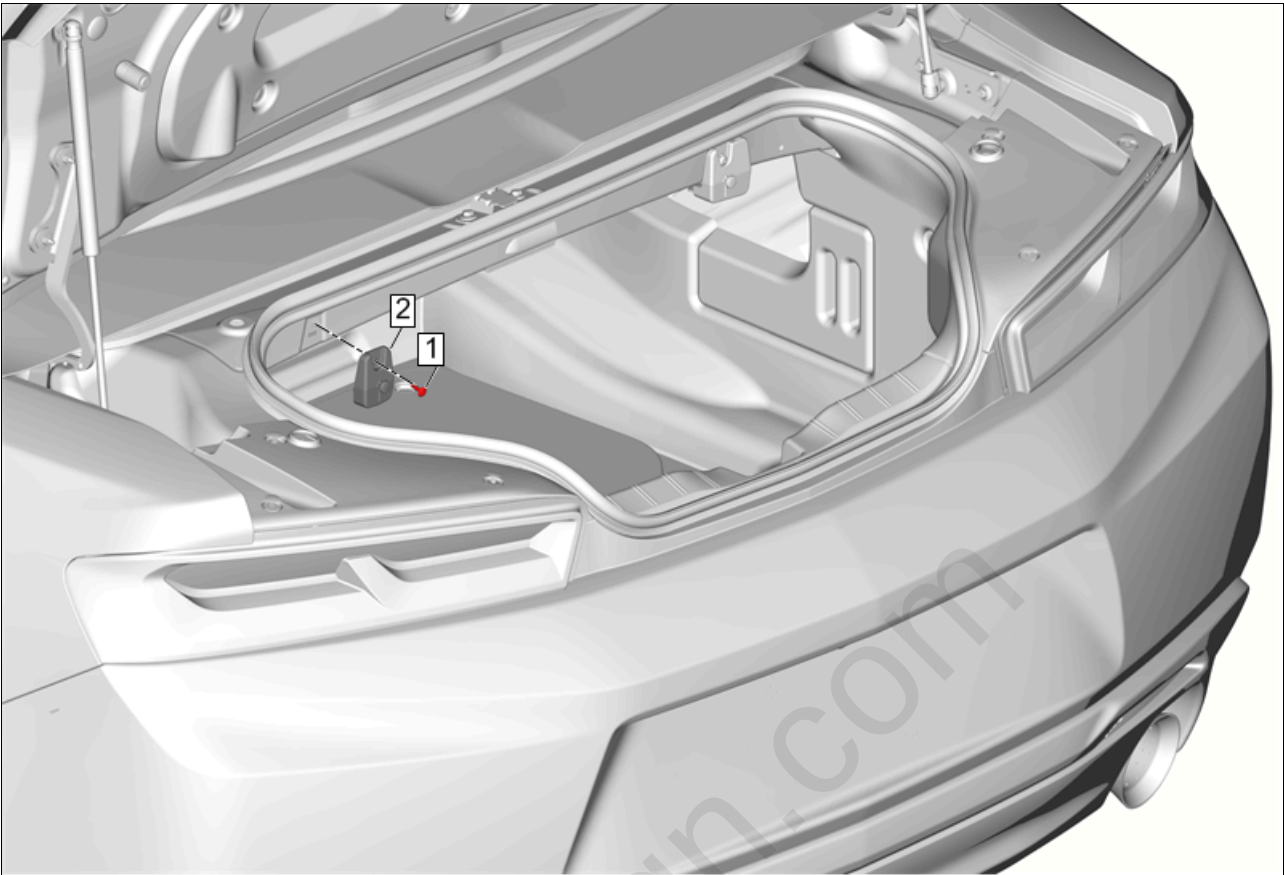


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Folding Top Stowage Compartment Lid Trim Panel Bolt
	CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Body Side Rear Trim Panel Bracket

REPAIR INSTRUCTIONS > BODY SIDE REAR TRIM PANEL BRACKET
REPLACEMENT (RIGHT SIDE, CONVERTIBLE)

Fig 1: Body Side Rear Trim Panel Bracket (Right Side, Convertible)

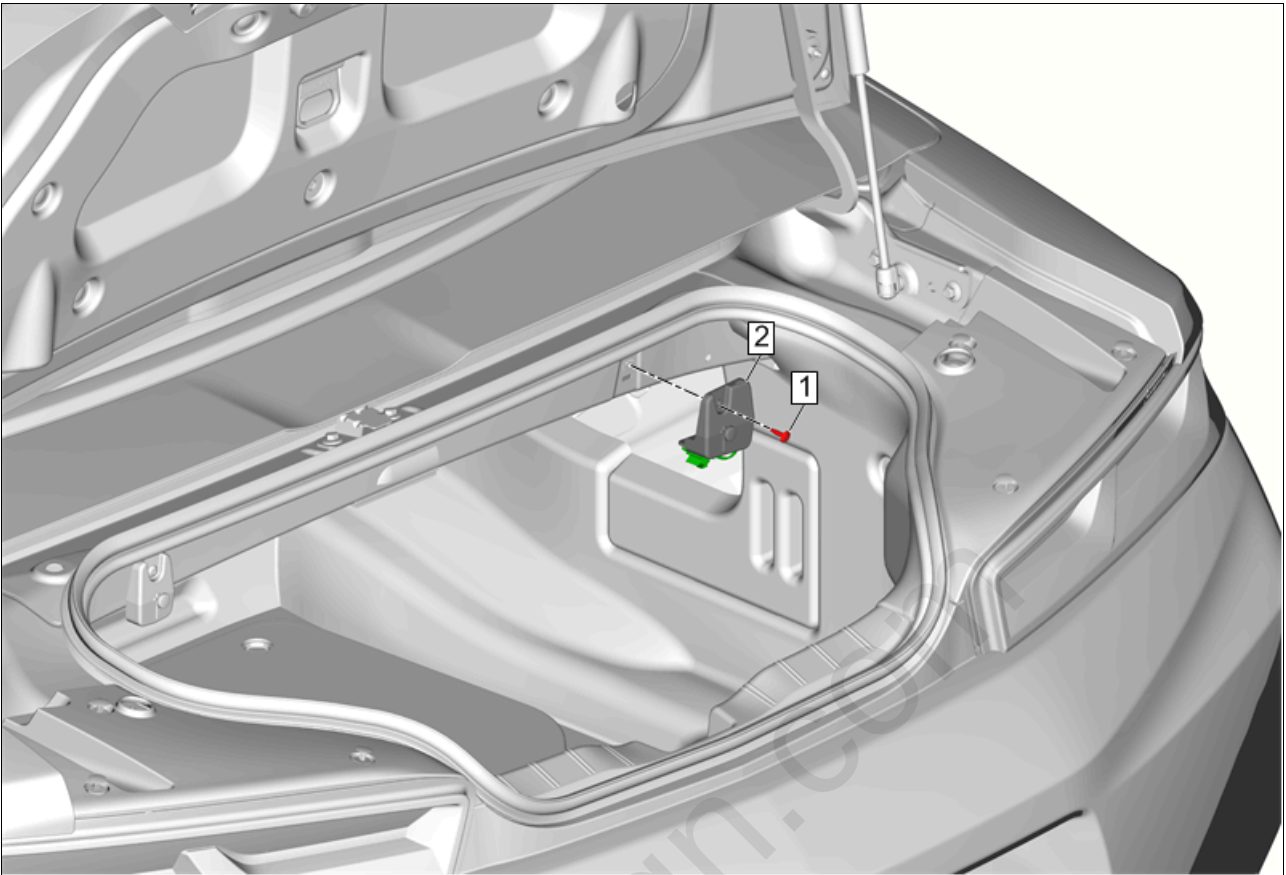


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Folding Top Stowage Compartment Lid Trim Panel Bolt <i>CAUTION:</i> <i>Refer to Fastener Caution .</i> Tighten 2.5 N.m (22 lb in)
2	Body Side Rear Trim Panel Bracket Procedure Disconnect the electrical connector.

REPAIR INSTRUCTIONS > REAR COMPARTMENT CLOSEOUT UPPER PANEL REPLACEMENT

Fig 1: Rear Compartment Closeout Upper Panel

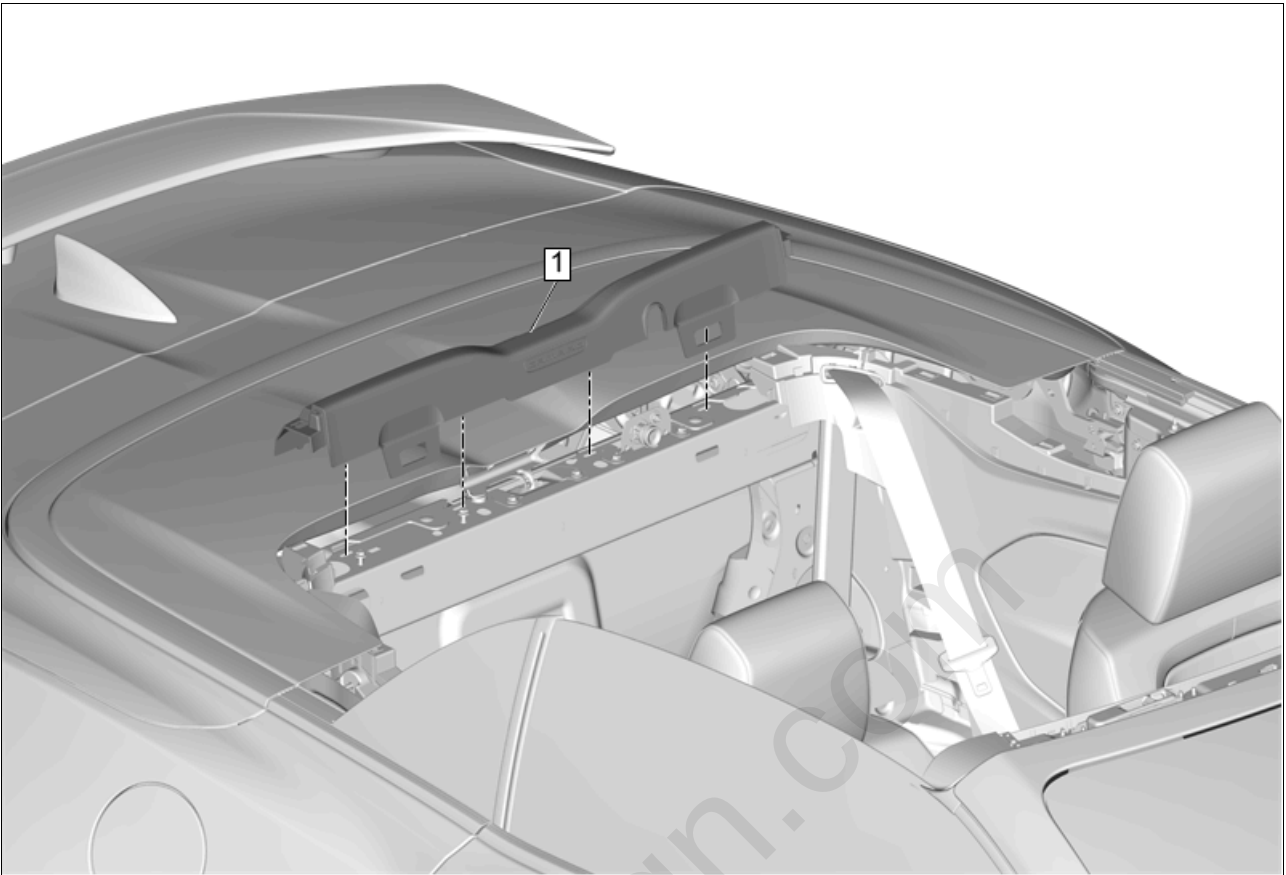


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Rear Seat Back Cushion Pad Replacement (Coupe) Rear Seat Back Cushion Pad Replacement (Convertible)	
2. Quarter Upper Trim Panel Replacement	
1	Rear Compartment Closeout Upper Panel Procedure Use a trim tool or equivalent to aid in the removal of the trim panel.

REPAIR INSTRUCTIONS > ROOF FRONT HEADER GARNISH MOLDING REPLACEMENT

Fig 1: Roof Front Header Garnish Molding

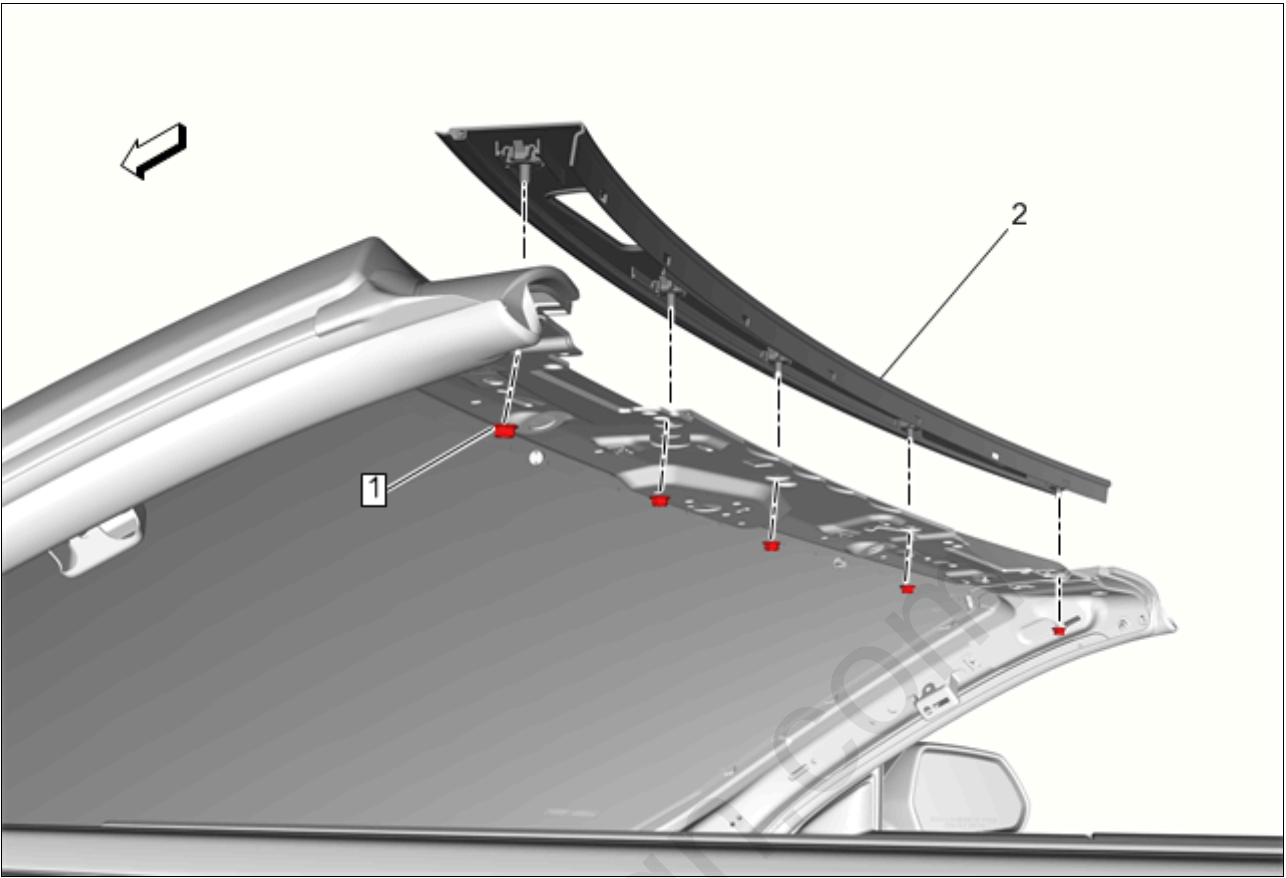


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Windshield Upper Garnish Molding Replacement	
1	Roof Front Header Garnish Molding Nut (Qty: 5) Tighten 8 N.m (71 lb in)
2	Roof Front Header Garnish Molding

REPAIR INSTRUCTIONS > REAR WINDOW PANEL TRIM REPLACEMENT

Fig 1: Rear Window Panel Trim

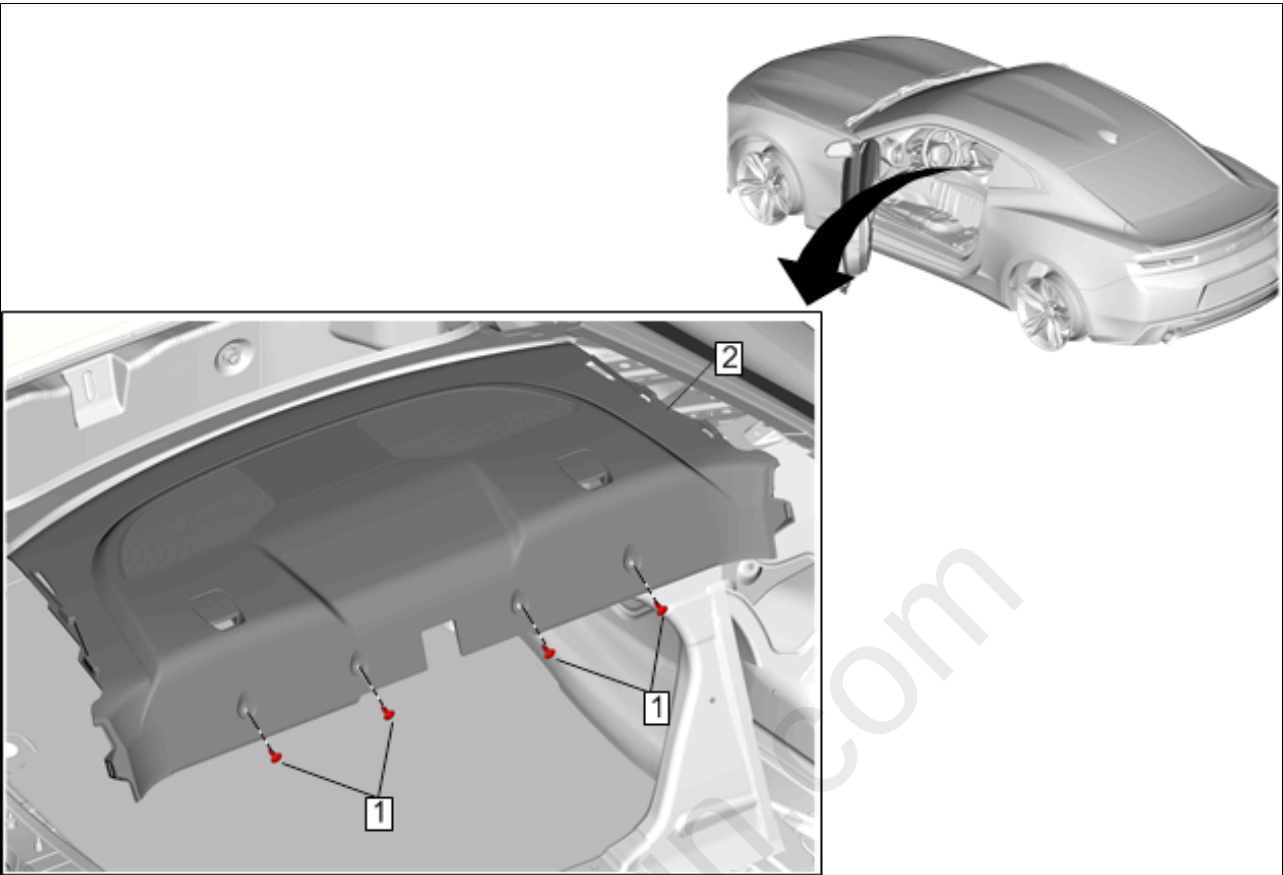

Courtesy of GENERAL MOTORS COMPANY


Callout	Component Name
Preliminary Procedures - Quarter Lower Rear Trim Panel Replacement (Coupe) Quarter Lower Rear Trim Panel Replacement (Convertible) - Fold down rear seat to access retainers.	
1	Rear Window Panel Trim Retainer (Qty: 4) Procedure Use a flat bladed plastic trim tool.
2	Rear Window Panel Trim Procedure - Lift up on the rear window panel to release the retainers under the forward portion of the panel. - With the aid of an assistant, guide the rear window panel forward in the vehicle and upwards to clear the speaker system.

-
3. When replacing the rear window panel trim assembly, transfer all necessary components.

4. Ensure the rear window trim panel feet are seated into the rear window sheet metal drain shoe.

REPAIR INSTRUCTIONS > REAR END TRIM FINISH PANEL REPLACEMENT

Fig 1: Rear End Trim Finish Panel

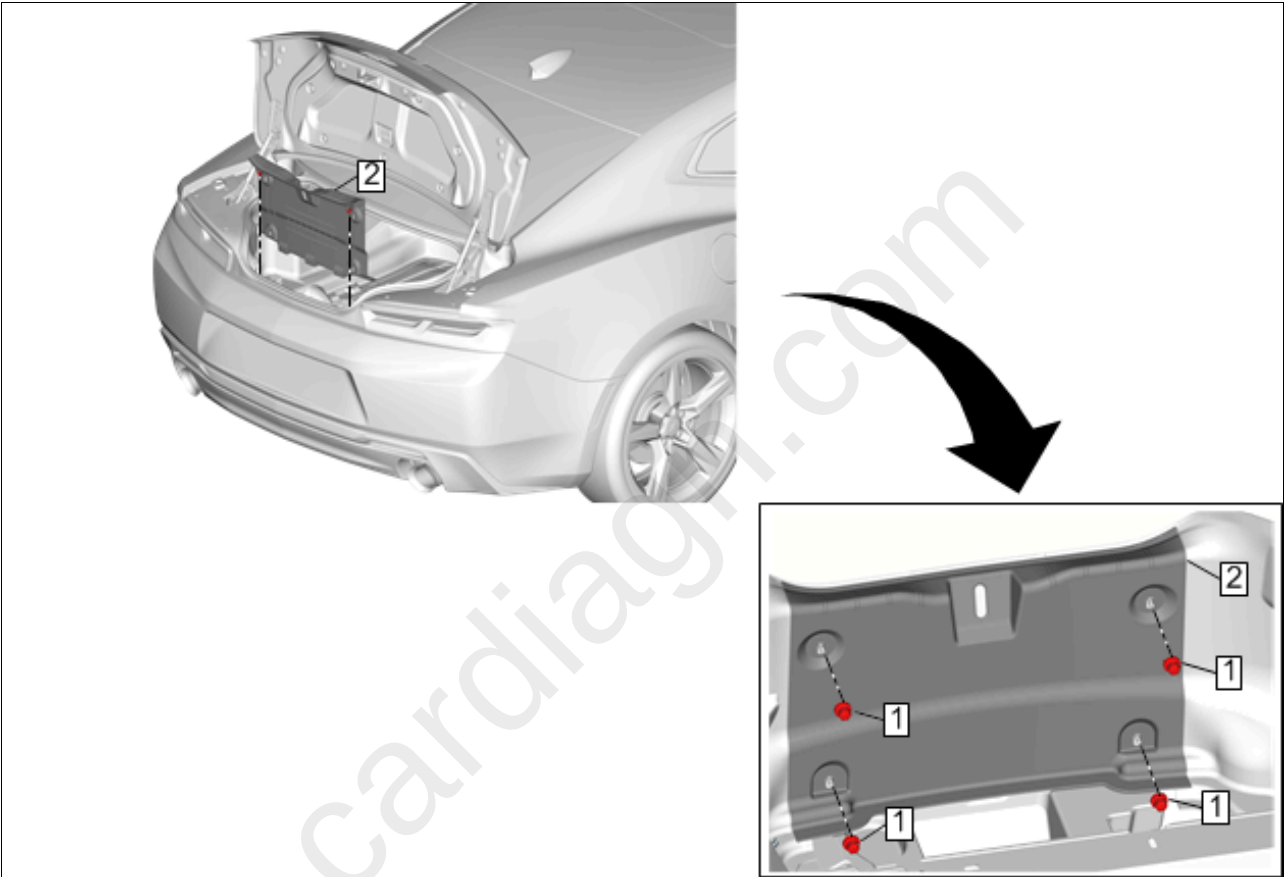


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Rear Compartment Floor Panel Trim Replacement	
1	Convenience Net Retainer (Qty: 4)
2	Rear End Trim Finish Panel Procedure Use a plastic flat-bladed tool to disengage the push-in retainers.

REPAIR INSTRUCTIONS > REAR COMPARTMENT FLOOR PANEL FRONT TRIM REPLACEMENT

Fig 1: Rear Compartment Floor Panel Front Trim

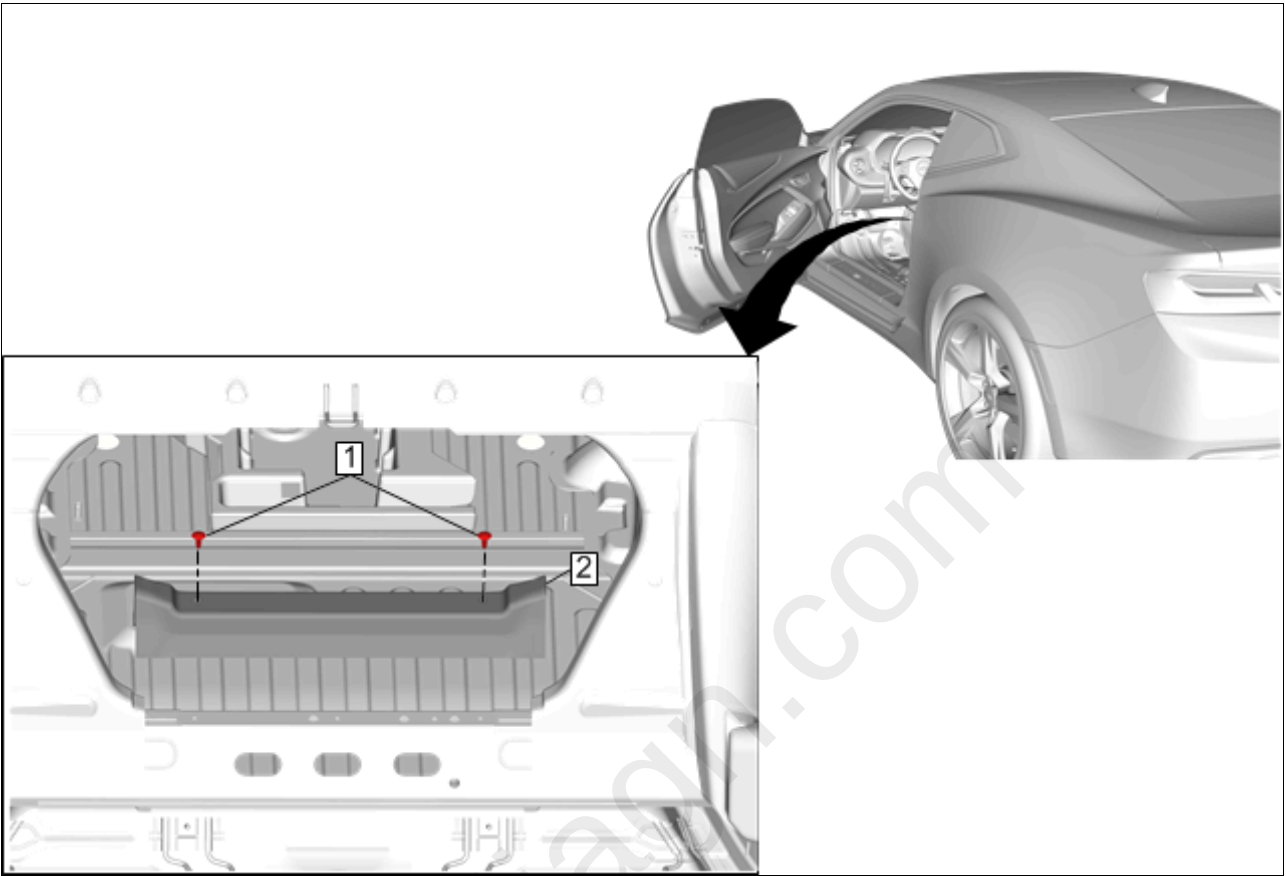


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Rear Compartment Floor Panel Trim Replacement	
2. Fold down rear seat to access retainers.	
1	Rear Compartment Floor Panel Front Trim Retainer (Qty: 2) Procedure Use a plastic flat-bladed tool to remove the push-in retainers.
2	Rear Compartment Floor Panel Front Trim

REPAIR INSTRUCTIONS > REAR COMPARTMENT FLOOR PANEL TRIM REPLACEMENT

Fig 1: Rear Compartment Floor Panel Trim

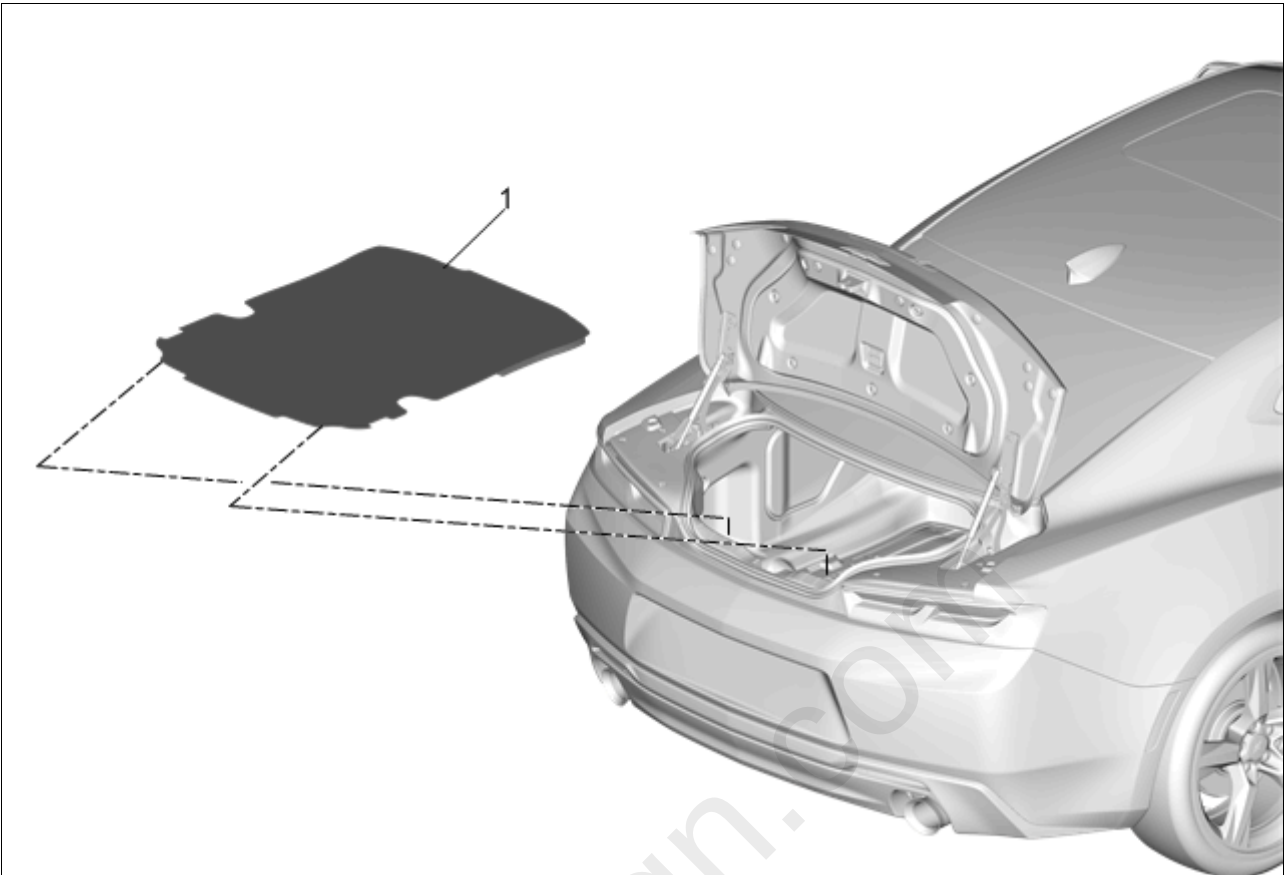


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Compartment Floor Panel Trim

**REPAIR INSTRUCTIONS > REAR COMPARTMENT FLOOR PANEL TRACK PARTITION
SLIDE REPLACEMENT**

Fig 1: Rear Compartment Floor Panel Track Partition Slide

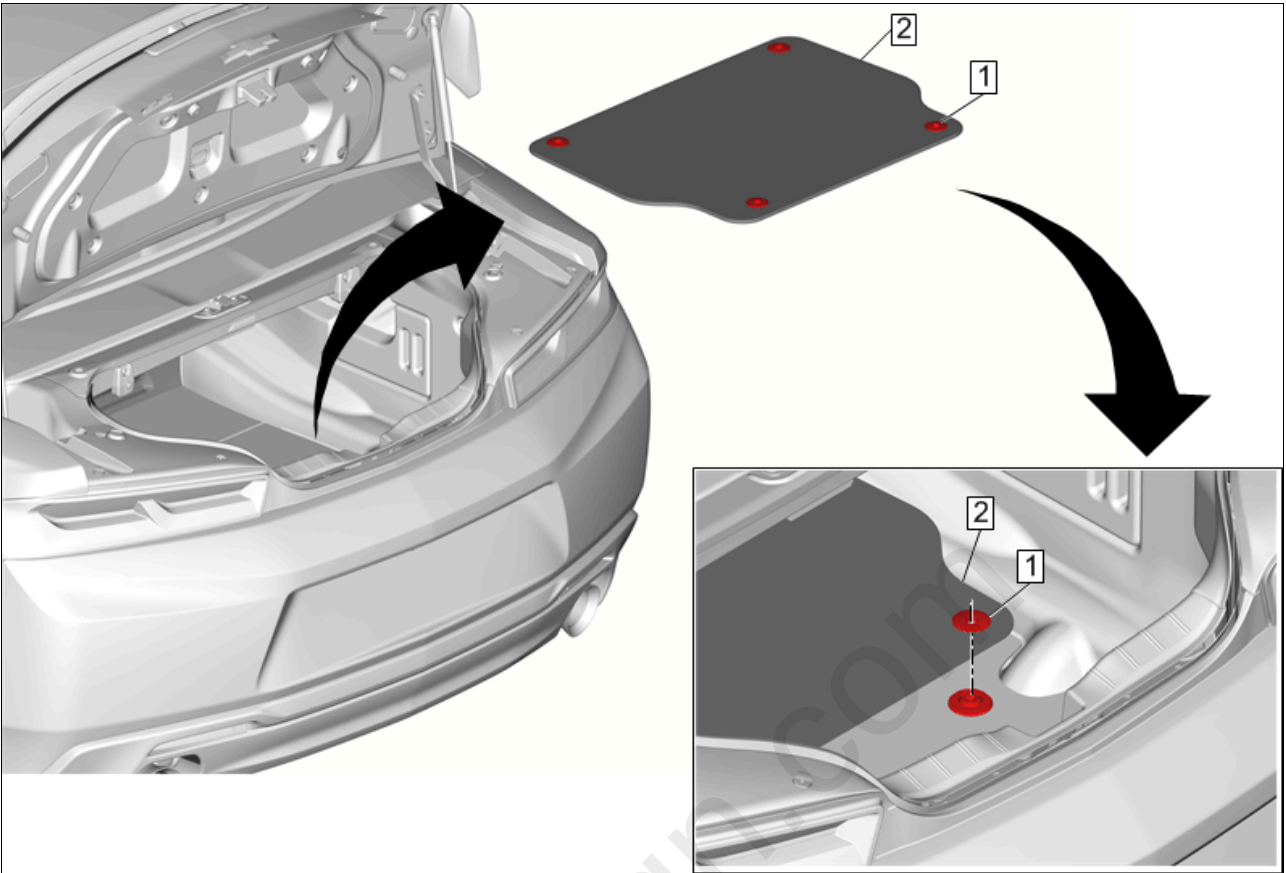


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Compartment Floor Panel Carpet Retainer (Qty: 4) Procedure Disengage the rear compartment floor panel carpet retainers from the rear compartment floor panel trim.
2	Rear Compartment Floor Panel Track Partition Slide

REPAIR INSTRUCTIONS > REAR COMPARTMENT LID INNER PANEL TRIM
REPLACEMENT


Fig 1: Rear Compartment Lid Inner Panel Trim

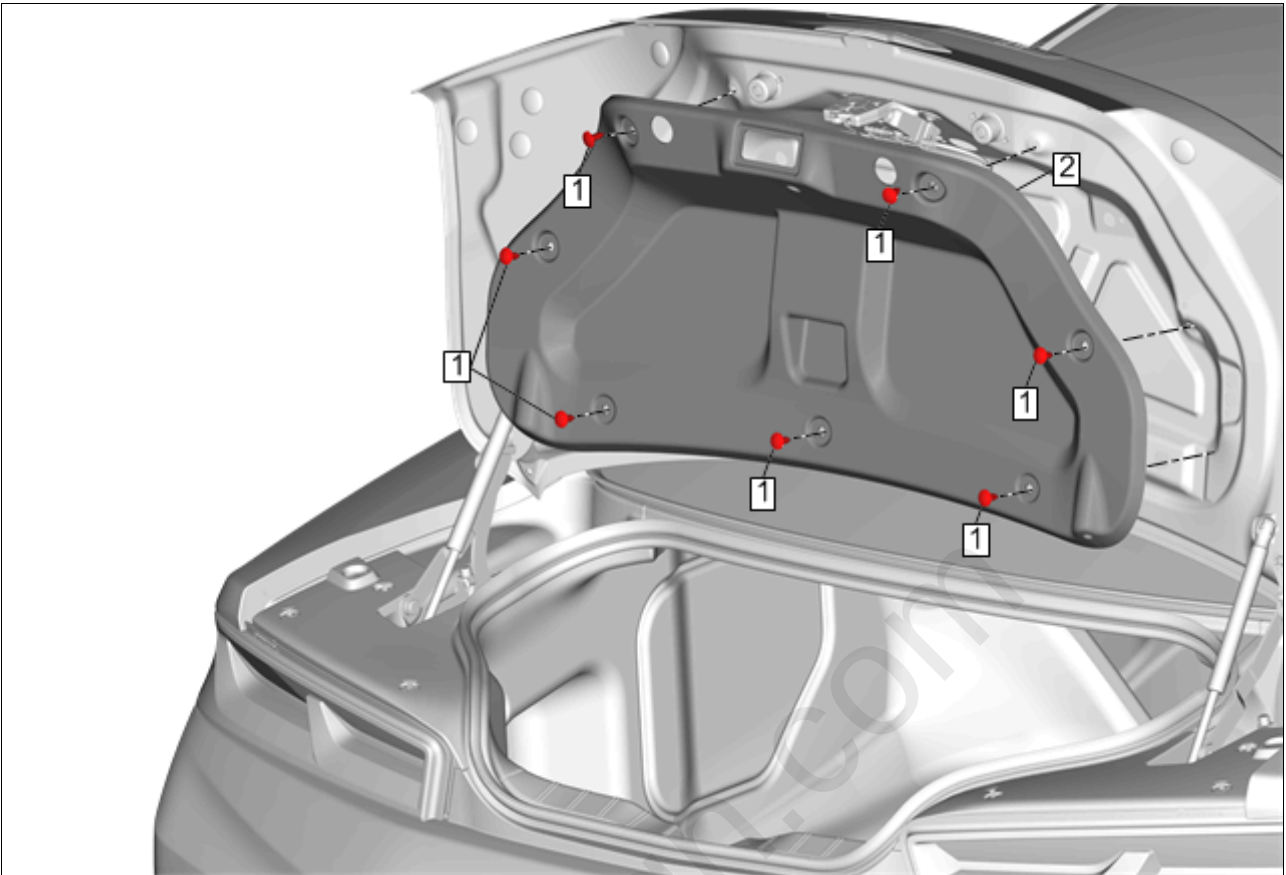

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Rear Compartment Lid Latch Cover Replacement	
1	Rear Compartment Lid Inner Panel Trim Retainer (Qty: 7)
2	Rear Compartment Lid Inner Panel Trim Procedure Use a plastic flat-bladed tool to remove the push-in retainers.  NOTE: Ensure the auxiliary rear compartment latch release handle is routed through the rear compartment lid inner panel trim.

Fig 1: Rear Compartment Lid Latch Cover

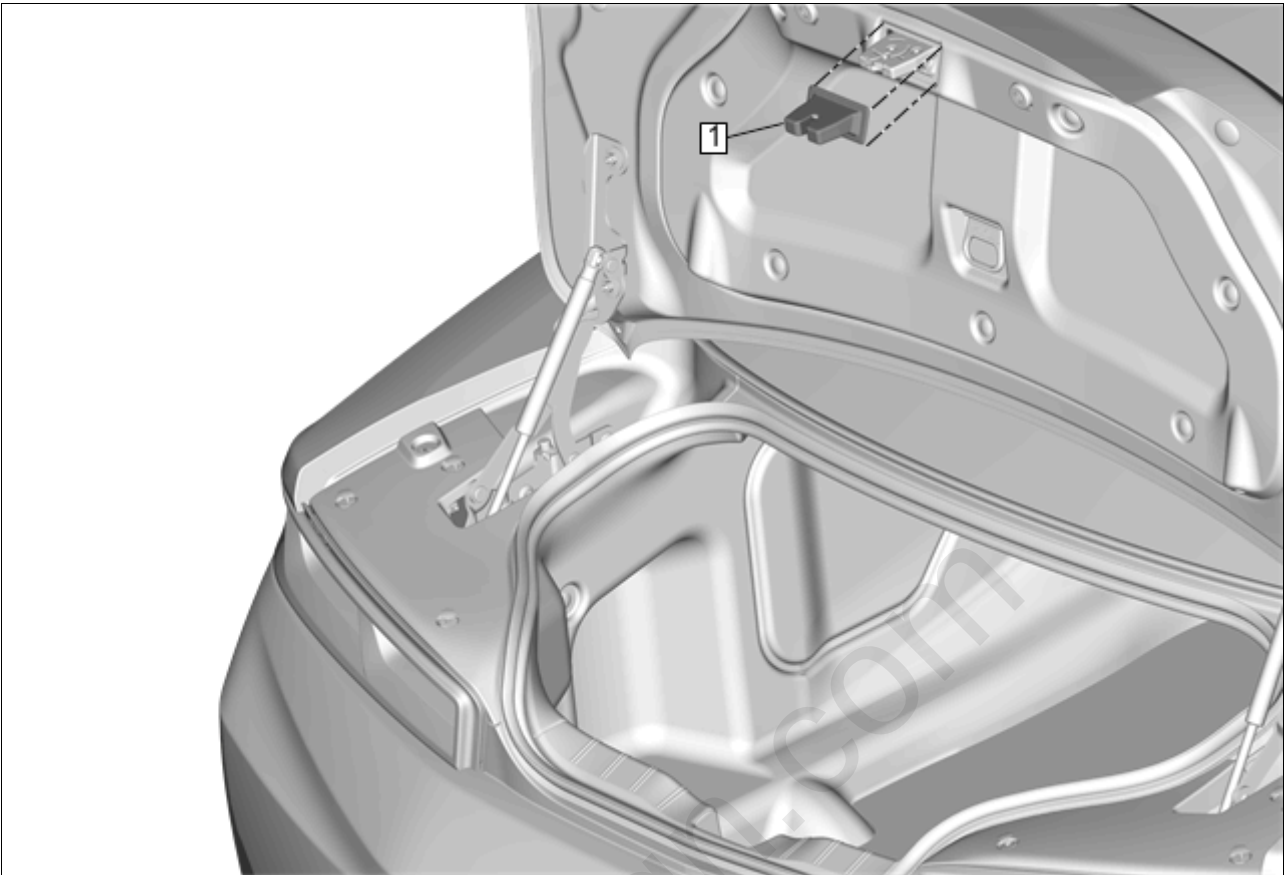


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Compartment Lid Latch Cover Procedure Use a small flat-bladed tool to pull and release the rear compartment latch cover.

REPAIR INSTRUCTIONS > REAR COMPARTMENT SIDE TRIM REPLACEMENT - LEFT SIDE (COUPE)

Fig 1: Rear Compartment Side Trim - Left Side (Coupe)

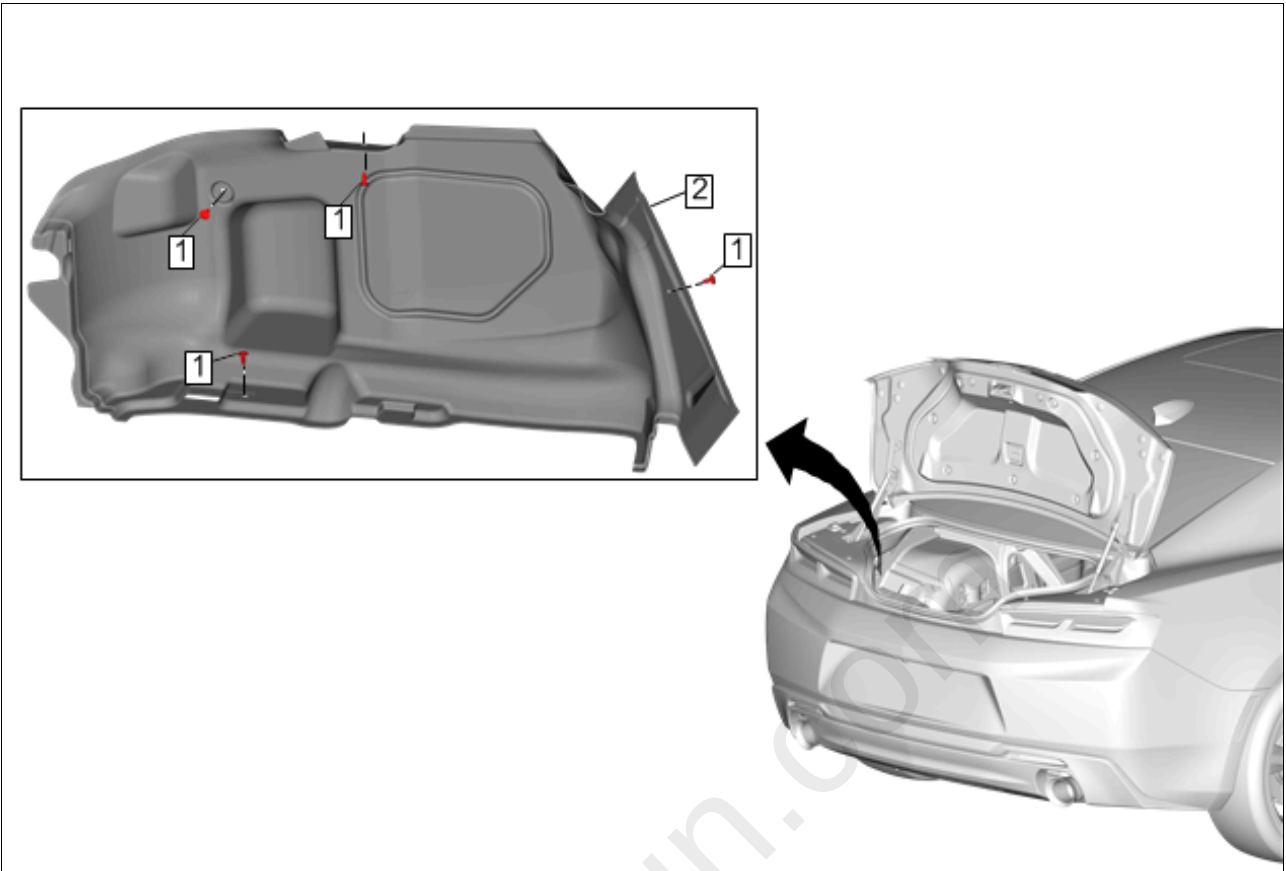


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Rear Compartment Floor Panel Trim Replacement	
2. Rear End Trim Finish Panel Replacement	
3. Rear Compartment Floor Panel Front Trim Replacement	
1	Rear Compartment Side Trim Retainer (Qty: 4) Procedure Use a flat bladed plastic trim tool.
2	Rear Compartment Side Trim

REPAIR INSTRUCTIONS > REAR COMPARTMENT SIDE TRIM REPLACEMENT - LEFT SIDE (CONVERTIBLE)

Fig 1: Rear Compartment Side Trim - Left Side (Convertible)

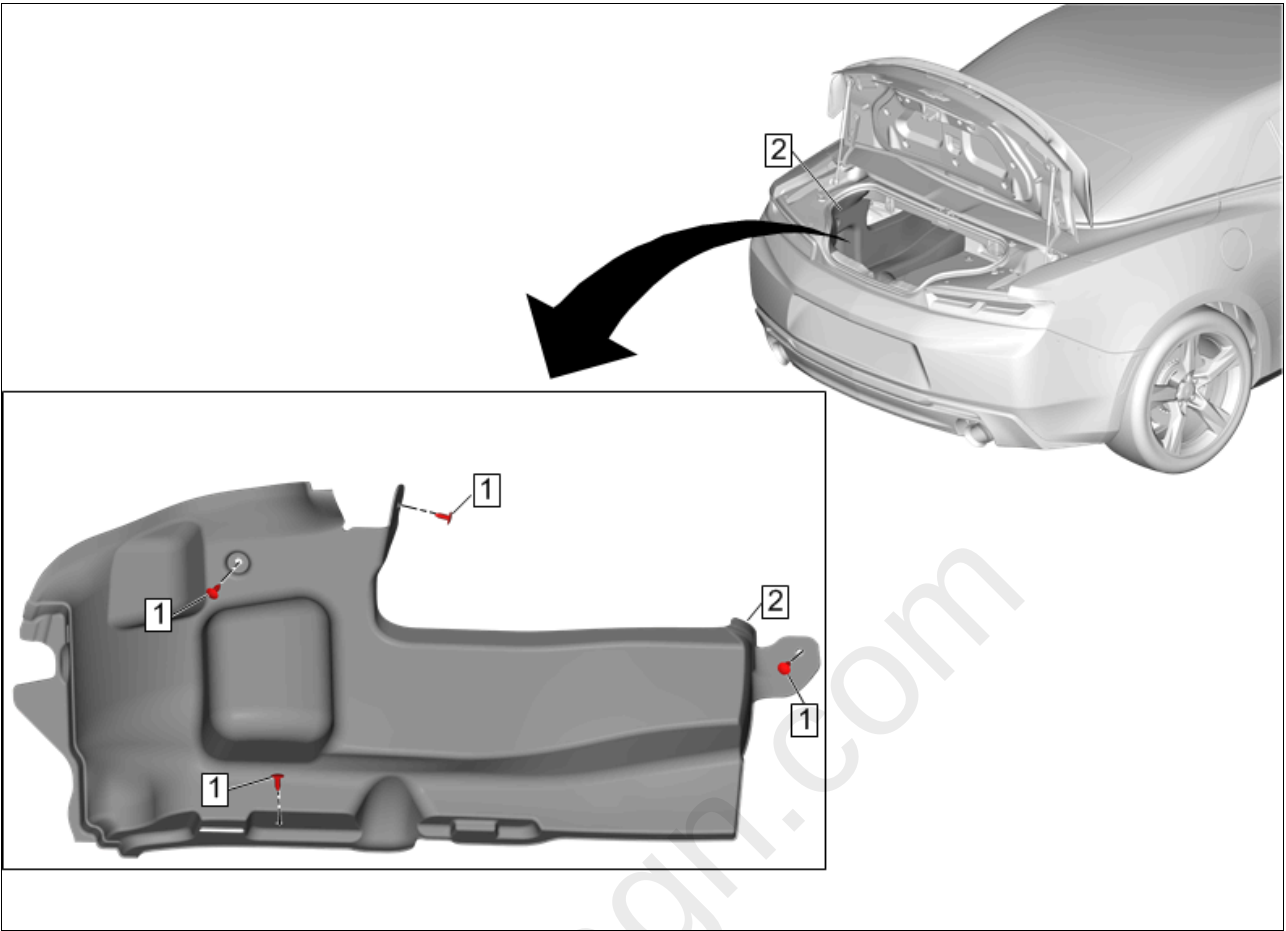


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Body Side Front Trim Panel Replacement - Center	
2. Rear End Trim Finish Panel Replacement	
1	Rear Compartment Side Trim Insulator Retainer (Qty: 4)
2	Rear Compartment Side Trim

REPAIR INSTRUCTIONS > REAR COMPARTMENT SIDE TRIM REPLACEMENT -
RIGHT SIDE (COUPE)

Fig 1: Rear Compartment Side Trim - Right Side (Coupe)

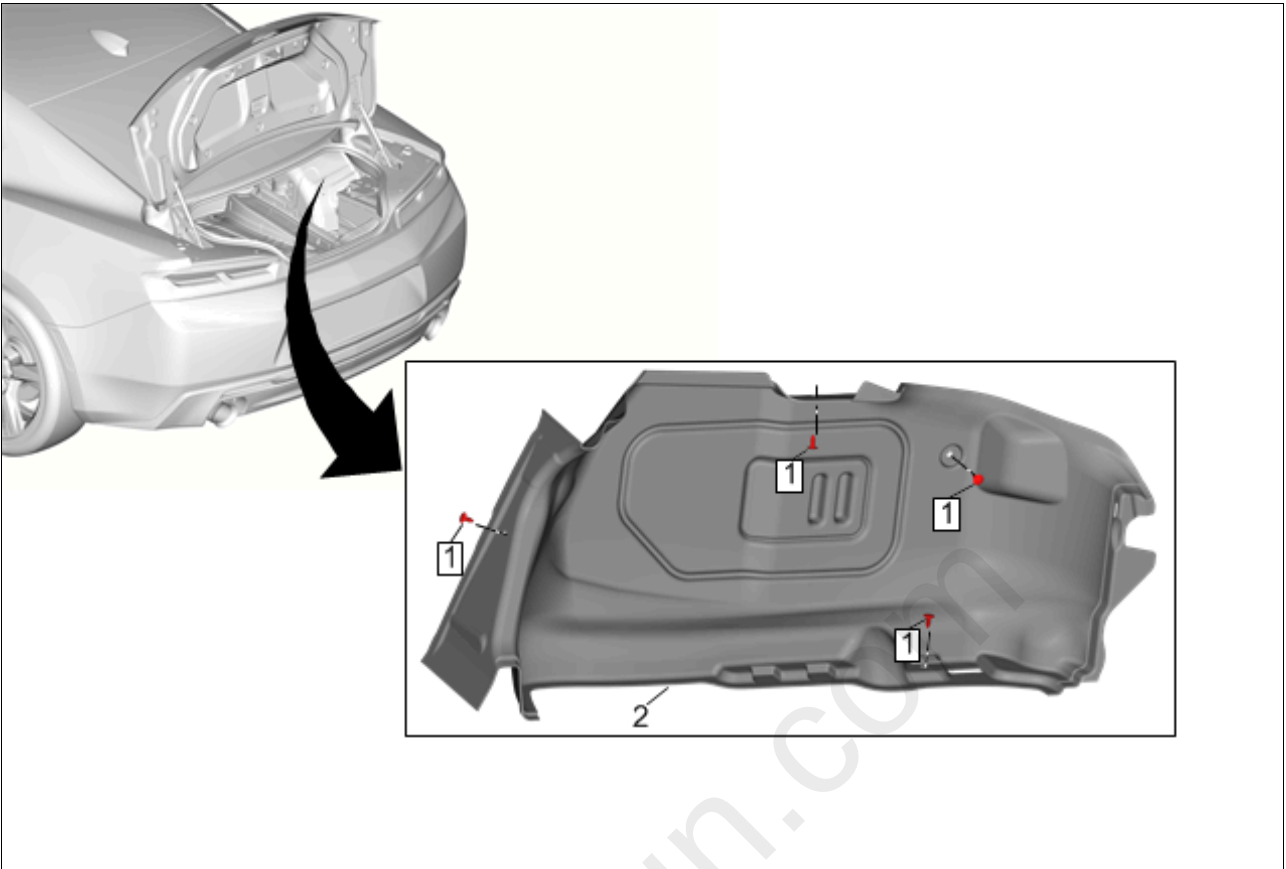


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Rear Compartment Floor Panel Trim Replacement 2. Rear End Trim Finish Panel Replacement 3. Rear Compartment Floor Panel Front Trim Replacement	
1	Rear Compartment Side Trim Retainer (Qty: 4) Procedure Use a flat bladed plastic trim tool.
2	Rear Compartment Side Trim

REPAIR INSTRUCTIONS > REAR COMPARTMENT SIDE TRIM REPLACEMENT - RIGHT SIDE (CONVERTIBLE)

Fig 1: Rear Compartment Side Trim - Right Side (Convertible)

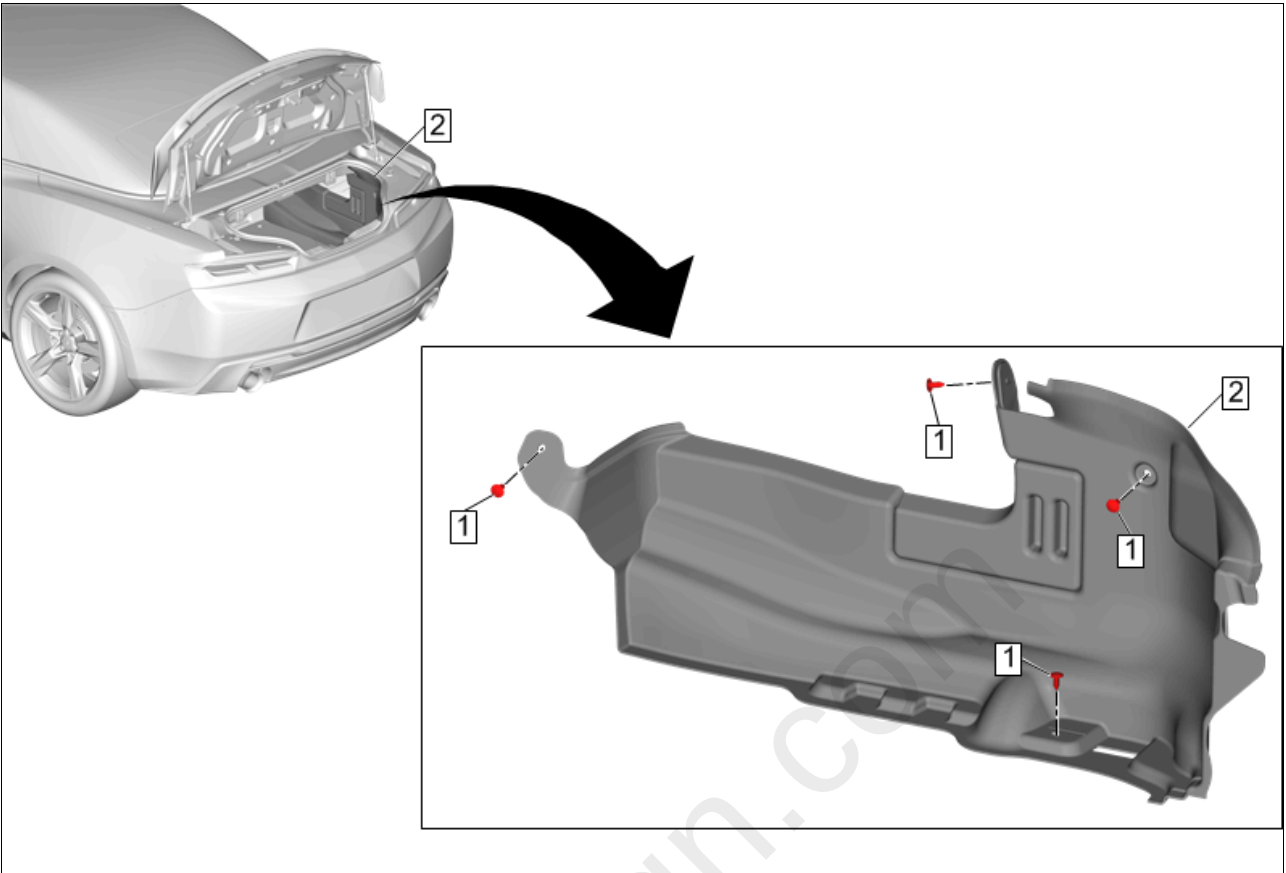


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Body Side Front Trim Panel Replacement - Center	
2. Rear End Trim Finish Panel Replacement	
1	Rear Compartment Side Trim Insulator Retainer (Qty: 4)
2	Rear Compartment Side Trim

REPAIR INSTRUCTIONS > BODY SIDE REAR WINDOW GARNISH MOLDING REPLACEMENT

Fig 1: Body Side Rear Window Garnish Molding

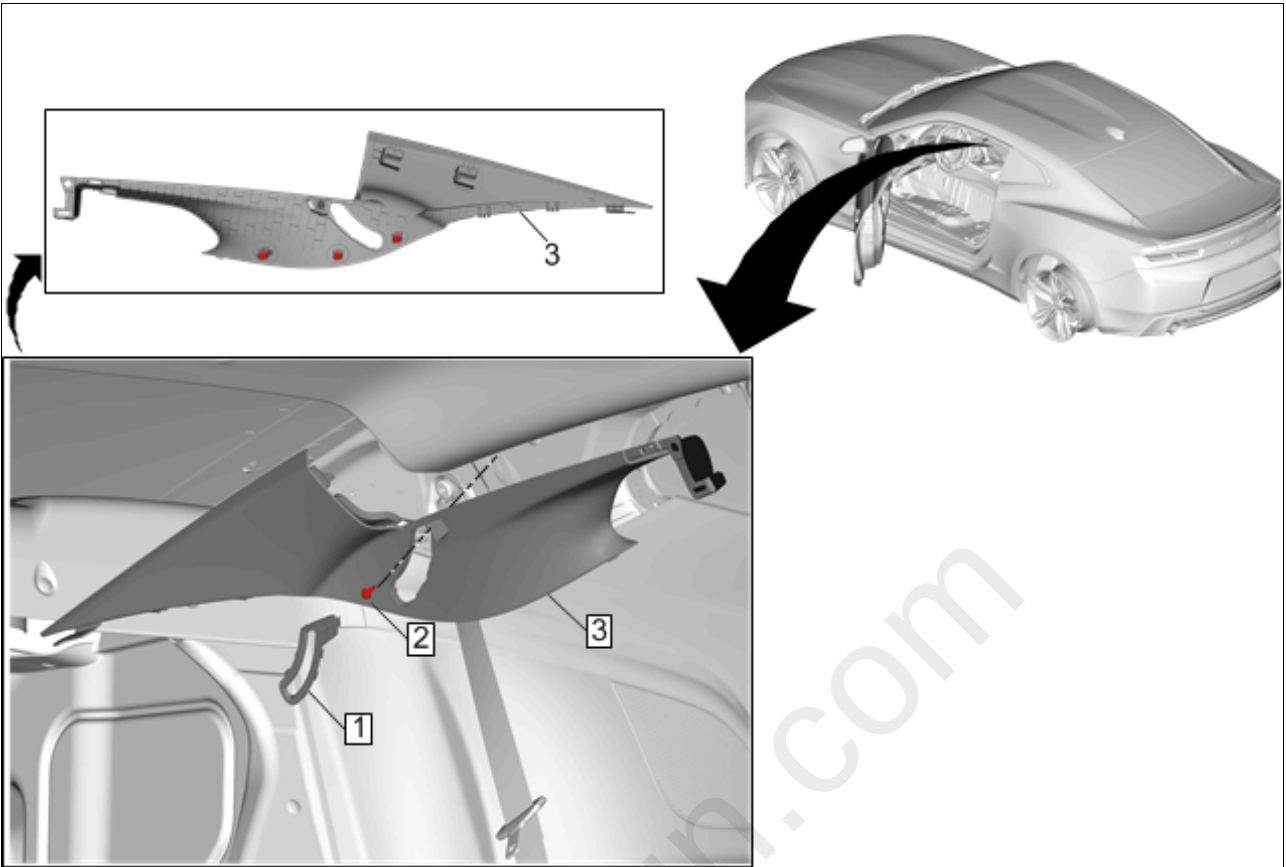


Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. SIR Disabling and Enabling 2. Center Pillar Upper Trim Panel Replacement 3. Remove the rear seat belt retractor anchor bracket fastener. Rear Seat Belt Retractor Replacement (Coupe)Rear Seat Belt Retractor Replacement (Convertible)	
1	Rear Seat Opening Bezel Procedure Use a plastic trim tool to aid in removal.
2	Body Side Rear Window Garnish Molding Bolt <i>CAUTION:</i> <i>Refer to Fastener Caution .</i>

	Tighten 3 N.m (27 lb in)
3	Body Side Rear Window Garnish Molding Procedure Use a plastic trim tool to aid in disengaging retaining clips on center pillar upper trim panel from the center pillar inner panel.  NOTE: <i>Ensure that webbing remains untwisted when routing webbing through panel.</i>

REPAIR INSTRUCTIONS > BODY PRESSURE RELIEF VALVE REPLACEMENT

Fig 1: Body Pressure Relief Valve

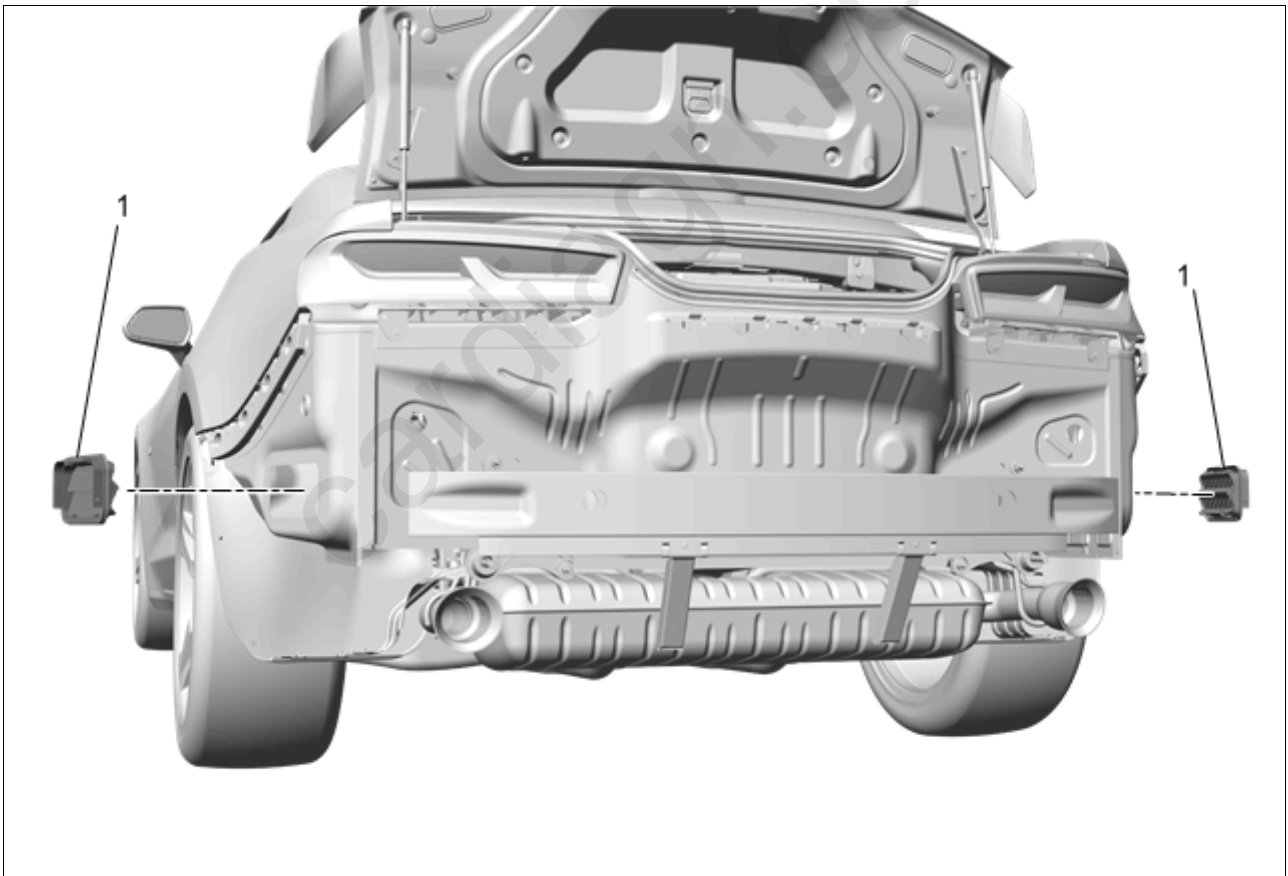

Courtesy of GENERAL MOTORS COMPANY

Call out	Component Name
Preliminary Procedure	

Rear Bumper Fascia Replacement

1

Body Pressure Relief Valve (Qty: 2)

Procedure

Release the tabs attaching the valves to the body side outer panel extension to remove the body pressure relief valve.

cardiagn.com