


Buick LaCrosse 2016 fuse box diagram

Engine Compartment Fuse Block

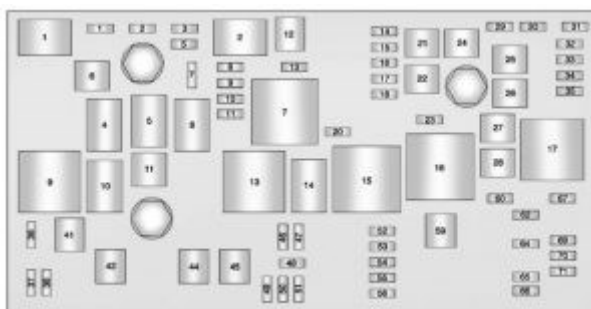

Buick LaCrosse – fuse box – engine compartment

Fuses	Usage
1	Transmission control module–battery
2	Engine control module battery
3	A/C clutch
5	Engine control module/Run/Crank
6	Wiper
7	Long range radar/ Front camera
8	Ignition coils–even (6–cylinder engine)/ Ignition coils–all (4–cylinder engine)
9	Ignition coils–odd (6–cylinder engine)
10	Engine control module–switched battery
11	6–cylinder Engine: post catalytic converter/O2 sensor/ Heater/Mass air flow sensor/FlexFuel sensor/Secondary air induction solenoid
12	Starter
13	Crank for transmission control module/Fuel pump power/Chassis control module (eAssist)
14	Cabin heater coolant pump (eAssist)/ secondary air injector/Secondary air injector with pressure sensor
15	Motor generator unit coolant pump (eAssist)
16	Run/Crank for eAssist power inverter module
17	—
18	Sunshade module/ Vehicle air purification system/ Ventilated seats
20	Heated steering wheel (non eAssist)
21	Rear power windows
22	Sunroof
23	Variable effort steering (if equipped) or eAssist power inverter module
24	Front power windows


25	Rear heated seats
26	Antilock brake system pump
27	Electric parking brake
28	Rear window defogger
29	Heated seat/Left power lumbar
30	Heated Seat/Right power pack cooling fan (eAssist)
31	AWD/Electronic suspension control
32	Body control module 6
33	Memory seat–front
34	Antilock brake system valves
35	Amplifier
36	Adaptive forward lighting (AFL) motors–battery
37	Right high-beam
38	Left high-beam
41	Brake vacuum pump
42	Cooling fan K2
43	—
44	Transmission auxiliary oil pump (eAssist)
45	Cooling fan K1
46	Cooling fan relay
47	6–cylinder engine: Pre-catalytic converter O2 sensor heater/Canister purge solenoid. 4–cylinder engine: Pre and post catalytic converter O2 sensor Heaters/Canister purge solenoid
48	Fog lamps
49	Fog lamps
50	Left HID headlamp
51	Horn
52	Cluster Run/Crank
53	Run/Crank for: rearview mirror/Rear vision camera/Air quality sensor/Aero shutter motor
54	Run/Crank for: HVAC/Headlamp switch
55	Outside rearview mirror/Universal remote system/Front window switches
56	Windshield washer
59	AIR pump
60	Heated mirror
62	Canister vent

64	Adaptive forward lighting (AFL) module–battery
65	—
66	AIR solenoid (eAssist)
67	Fuel pump power module/Chassis control module
69	Regulated voltage control sensor
70	Parking assist/Side blind zone
71	Passive entry/ Passive start

Relays	Usage
1	A/C Clutch
2	Starter
4	Wiper speed
5	Wiper control
6	Cabin heater coolant pump (eAssist)/ Secondary air injector/Secondary air injector with pressure senso
7	Engine control module
9	Cooling fan
10	Cooling fan
11	Transmission auxiliary oil pump (eAssist)
13	Cooling fan
14	Headlamp low-beam
15	Run/Crank
16	AIR pump
17	Rear window defogger

Instrument Panel Fuse Block

The instrument panel fuse block is in the instrument panel, on the driver side of the vehicle.

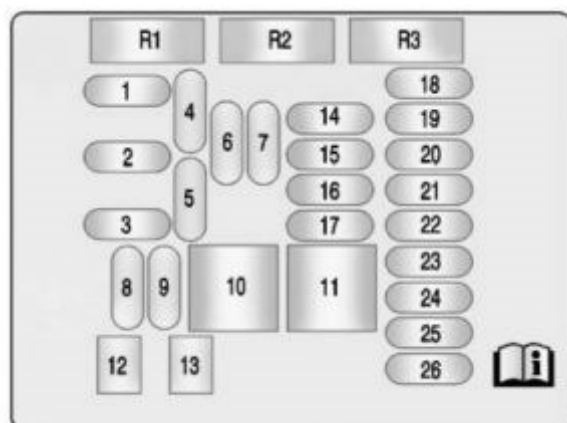

Buick LaCrosse – fuse box – instrument panel

Fuses	Usage
1	APO 3
2	Body control module 7
3	Steering wheel controls backlight
4	Radio/Human machine interface/ Rear auxiliary audio jack/Front auxiliary audio video jack/ Touchpad/Remote media player/Bluray remote media player
5	OnStar/Universal hands-free phone
6	Power outlet 1
7	Power outlet 2
8	Body control module 1
9	Body control module 4
10	Body control module 8
11	Front HVAC/Blower
12	Passenger seat
13	Driver seat
14	Diagnostic link connector
15	Airbag/Automatic occupant sensing
16	Trunk
17	HVAC Controller
18	Pre-fuse for fuses 4 and 5
19	Center stack displays/Head-up display/Right steering wheel control switch/Rear seat infotainment display (eAssist)/ HVAC/Center stack displays
20	Rear seat entertainment display/Rear seat audio
21	Instrument cluster
22	Discrete logic ignition switch
23	Body control module 3
24	Body control module 2
25	Rear HVAC/Blower
26	AC DC inverter

Relays	Usage
R1	Trunk relay
R2	—
R3	Power outlet relay