

Menu Screen Keys and Functions

<Current map screen>



Press **MENU** button or select **Menu** to display the menu screen.



Select  to return to the current map screen.

<Menu screen>



The table below shows the keys displayed on the navigation menu (NAV. MENU) screen, the functions accessible by selecting these keys, and the pages of this manual that describe the instructions you should follow when using these functions.

Menu screen key	Function	Reference page
Destination Entry 	Address	page 28
	Point of Interest	page 34
	Select from Map	page 37
	Emergency	page 40
	Memory Point	page 31
	Previous Destination	page 36
	Intersection	page 44
	Freeway Ent/Exit	page 38
	Phone Number	page 46
	Coordinates	page 42
Stored Locations 	Memory Points	page 89
	Avoid Area	page 97
	Dest. & Way Pt.	page 58
	Home	page 100
	Previous Dest.	page 102
	Preset Dests.	page 104
Language Selection 	Language Selection	page 14

Navigation Set Up 	User Settings	page 72
	Quick POI Selection	page 75
	Volume	page 77
	Navigation Information	page 78
	Calibration	page 80
	Set Clock	page 83
	Restore System Defaults	page 84
Route Options 	Search Condition	page 55
	Detour	page 56
	Route Pref.	page 57
	Dest. & Way Pt.	page 58
	Display Route	page 66
	Route Preview	page 67