

List of components 1:6

1/1	Battery	3/117	Switch unit, dome light
2/14	Relay, glow plug unit	3/126	Driver/Passenger Door Module (DDM)/(PDM)
2/22	Relay, climate control system	3/127	Passenger/Driver Door Module (PDM)/(DDM)
2/32	Main relay, engine management system	3/131	Steering wheel switch right (SWSR), S60
2/35	Starter motor relay	3/131	Steering wheel switch right (SWSR), S80
2/64	Auxiliary light (accessory) relay	3/135	Switch, RTI, S60
2/90	Relay, windshield wiper, low/high speed	3/135	Switch, RTI, S80
2/91	Relay, intermittent wiping	3/155	Mode selector, automatic transmission
2/182	Relay, high pressure headlight washer motor	3/156	Gear Selector Module (GSM)
2/191	Relay, remote parking heater start, radio signal	3/157	Switch, passenger side airbag
2/192	Relay, electric engine heater	3/171	Switch, retractable door mirrors
2/238	Relay, audio disconnection	3/173	Switch, trunk lid private lock
		3/174	Switch, reduced alarm
		3/225	Switch unit, Continuously Controlled Damping (CCD), S60R
3/1	Ignition switch	3/225	Switch unit, Continuously Controlled Damping (CCD), S80
3/4	Steering wheel switch left (SWSL), S60	3/254	Steering Wheel Module (SWM)
3/4	Steering wheel switch left (SWSL), S80		
3/6	Hazard warning flasher switch S60	4/7	Combustion Preheater Module (CPM)
3/6	Hazard warning flasher switch S80	4/9	Supplemental Restraint System (SRS)
3/8	Switch, heated rear window/door mirrors	4/16	Brake Control Module (BCM)
3/9	Brake light contact	4/28	Transmission Control Module (TCM)
3/10	Reversing light contact	4/28	Transmission Control Module (TCM), TF80-SC/AWD
3/25	Power sunroof switch	4/31	Fan control module
3/26	Switch unit, power driver's seat	4/33	Sunroof Module (SRM)
3/27	Switch unit, power passenger seat	4/46	Engine Control Module (ECM)
3/35	Trunk handle switch	4/46	Engine Control Module (ECM), I5D
3/37	Horn contact, S60	4/50	Electronic Throttle Module (ETM)
3/37	Horn contact, S80	4/52	Power Seat Module (PSM)
3/47	Parking brake contact	4/56	Central Electronic Module (CEM)
3/59	Headlight adjustment control	4/58	Rear Electronic Module (REM)
3/60	Auxiliary light switch	4/68	Steering Wheel Angle Sensor Module (SAS)
3/62	Hood alarm contact	4/70	Upper Electronic Module (UEM)
3/71	Gear selector contact, AW 55-51/51 AWD	4/71	Cooling fan control module
3/71	Gear selector contact, 4T65EV	4/71	Cooling fan control module, I5D
3/74	Lock unit, front left door	4/76	Remote control unit for garage door opener
3/75	Right-hand front door lock unit	4/78	Accessory Electronic Module (AEM)
3/76	Left-hand rear door lock unit	4/82	Differential Electronic Module (DEM)
3/77	Right-hand rear door lock unit	4/83	Fuel pump control module
3/78	Trunk lid lock unit	4/84	Suspension Module (SUM)
3/80	Switch, left-hand central lock	4/86	Parking Assistance Module (PAM)
3/82	Switch, right-hand central lock	4/99	Electronic power steering control module
3/85	Rear left door power window switch	4/106	Control module, remote parking heater start
3/86	Rear right door power window switch	4/107	Control module, parking heater, Call start
3/91	Switch, left-hand heated seat	4/109	Glow plug control module
3/92	Switch, right-hand heated seat	4/110	Trailer Module (TRM)
3/93	Switch, left-hand seat belt buckle		
3/94	Switch, right-hand seat belt buckle		
3/95	Spin control switch		
3/111	Light Switch Module (LSM)		
3/112	Climate Control Module (CCM)	5/1	Driver Information Module (DIM)
3/113	Rear adjustable head restraint relay		

List of components 2:6

6/1	Windshield wiper motor	7/8	Pressure sensor, climate control system
6/3	Right-hand headlight wiper motor	7/10	Interior temperature sensor
6/4	Left-hand headlight wiper motor	7/11	Outside temperature sensor
6/15	Sunroof motor	7/12	Solar sensor, twilight sensor and indicator alarm
6/16	Driver seat motor, backrest angle	7/15	Heated oxygen sensor, front
6/17	Driver seat motor, up/down front edge	7/15	Front heated oxygen sensor, 6-cyl.
6/18	Driver seat motor, up/down rear edge	7/15	Front heated oxygen sensor, I5D
6/19	Driver seat motor, forward/backward	7/16	Coolant temperature sensor
6/20	Passenger seat motor, forward/backward	7/17	Mass airflow sensor (MAF)
6/25	starter motor	7/23	Rear knock sensor
6/26	Alternator Control Module (ACM)	7/24	Front knock sensor
6/28	Motor, passenger compartment fan	7/25	Impulse sensor, gasoline
6/29	Motor, cooling fan	7/25	Impulse sensor, Diesel
6/29	Cooling fan motor, I5D	7/31	Left-hand front ABS sensor
6/31	Feed pump, ejectors	7/32	Right-hand front ABS sensor
6/33	Fuel pump	7/35	Oil level sensor
6/35	Fuel pump, auxiliary heater	7/41	Temperature sensor, evaporator
6/37	Lock motor, fuel filler cover	7/51	Accelerator pedal sensor
6/38	Left-hand headlight level adjustment motor	7/56	Left-hand rear ABS sensor
6/39	Right-hand headlight adjustment motor	7/57	Right-hand rear ABS sensor
6/44	Cooling fan, electrics box, engine compartment	7/61	Input speed sensor
6/48	Damper Motor Module (DMM), recirculation	7/61	Input speed sensor, TF-80SC/AWD
6/58	Motor, front left power window	7/62	Output speed sensor
6/60	Motor, front right power window	7/62	Output speed sensor, TF-80SC/AWD
6/62	Left-hand power door mirror	7/73	Coolant level sensor
6/63	Right power door mirror	7/74	Fluid temperature sensor, automatic transmission
6/64	Passenger seat motor, backrest angle	7/74	Fluid temperature sensor, automatic transmission, TF-80S/ AWD
6/65	Passenger seat motor, up/down front edge	7/81	Pressure sensor, intake manifold
6/66	Passenger seat motor, up/down rear edge	7/82	Heated oxygen sensor, rear
6/67	Pump, fuel leakage control	7/82	Rear heated oxygen sensor, 6-cyl.
6/69	Damper Motor Module (DMM)	7/87	Acceleration sensor, Four-C, front left
6/71	Valve, speed-dependent power steering	7/88	Acceleration sensor, Four-C, front right
6/73	Coolant pump, auxiliary heater	7/89	Acceleration sensor, Four-C, rear left
6/92	Motor, rear left power window	7/91	Steering angle sensor
6/93	Motor, rear right power window	7/93	Occupant Weight Sensor (OWS)
6/95	Damper Motor Module (DMM), temperature, left	7/100	Inclination Sensor Module (ISM)
6/96	Damper Motor Module (DMM), temperature, right	7/103	Heated oxygen sensor 3
6/102	Damper Motor Module (DMM), defroster	7/104	Heated oxygen sensor 4 (diagnostic sensor), S80
6/103	Damper Motor Module (DMM), floor/ventilation	7/105	Outside temperature sensor, engine control module
6/104	High pressure headlight washer motor	7/108	Left-hand rear side impact sensor
6/105	Fuel distributor, gas	7/109	Right-hand rear side impact sensor
6/114	Vacuum pump	7/110	Left-hand seat temperature sensor
6/118	Regulator motor, swirl throttle	7/111	Right-hand seat temperature sensor
6/120	Engine throttle body	7/115	Left-hand front side impact sensor
6/120	Throttle body motor, I5D	7/116	Right-hand front side impact sensor
6/127	Washer motor	7/118	Acceleration sensor, shock absorber, Four-C, front left
6/143	Regulator motor, turbo	7/119	Acceleration sensor, shock absorber, Four-C, front right
7/4	Brake fluid level sensor		
7/5	Washer fluid level sensor		
7/6	Oil pressure sensor		

List of components 3:6

7/120	Rear left angle sensor, Four-C/Bi-Xenon	8/28	Turbo control valve
7/121	Rear right angle sensor, Four-C/Bi-Xenon	8/30	Driver's side airbag igniter S60
7/122	Mass movement sensor, front	8/30	Driver's side airbag igniter S80
7/123	Clutch pedal sensor	8/31	Passenger side airbag igniter
7/124	Brake pedal sensor	8/32	Igniter, passenger side airbag stage 2
7/129	Brake pressure sensor 2	8/33	Front left belt tensioner igniter
7/130	Fuel level sensor, ejector side	8/34	Front right seat belt tensioner igniter
7/131	Parking assistance sensor, rear 1	8/36	Shift lock solenoid
7/132	Parking assistance sensor, rear 2	8/37	Automatic transmission,
7/133	Parking assistance sensor, rear 3		TF-80SC/AWD
7/134	Parking assistance sensor, rear 4	8/37	Automatic transmission,
7/139	Brake pressure sensor 1		AW55-51/51 AWD
7/143	Fuel level sensor, pump side	8/37	Automatic transmission, 4T65EV
7/149	Rain Sensor Module (RSM)	8/38	Shift solenoid 1, TF-80SC/AWD
7/154	Fuel temperature sensor, I5D	8/38	Shift solenoid 1, AW55-51/51 AWD
7/156	Pressure and temperature sensor, fuel	8/38	Shift solenoid 1, 4T65EV
7/156	Pressure and temperature sensor, Bi-Fuel	8/39	Shift solenoid 2, TF-80SC/AWD
7/159	Air Quality Sensor (AQS)	8/39	Shift solenoid 2, AW55-51/51 AWD
7/162	Pressure sensor, fuel line	8/39	Shift solenoid 2, 4T65EV
7/162	Pressure sensor, fuel rail, I5D	8/40	Lock-up solenoid, TF-80SC/AWD
7/164	Body Sensor Cluster Stability Sensor (BSC)	8/40	Lock-up solenoid, AW55-51/51 AWD
7/165	Pressure and temperature sensor, intake manifold	8/40	Lock-up solenoid, 4T65EV
7/166	Oil level sensor, I5D	8/41	Pressure solenoid, AW 55-51/51 AWD
7/172	Camshaft position sensor, intake side	8/41	Pressure solenoid, 4T65EV
7/173	Camshaft position sensor, exhaust side	8/46	Archive unit, DSTC
7/173	Camshaft position sensor, exhaust side, Diesel	8/51	Front left side airbag igniter
7/174	Differential pressure sensor, particle filter	8/52	Front right side airbag igniter
7/178	Front impact sensor, right	8/55	Rear left belt tensioner igniter
7/179	Front impact sensor, left	8/56	Rear right belt tensioner igniter
7/190	Temperature sensor, exhaust gases upstream of particle filter	8/59	Rear left head restraint solenoid
7/191	Temperature sensor, exhaust gases downstream of particle filter	8/60	Rear right head restraint solenoid
7/201	Pressure and temperature sensor, gas	8/61	Driver's side airbag igniter, stage 2, S60
7/204	Parking assistance sensor, front 5	8/61	Driver's side airbag igniter, stage 2, S80
7/205	Parking assistance sensor, front 6	8/62	Belt tensioner igniter, center rear seat
7/206	Parking assistance sensor, front 7	8/64	Solenoid valve, engine mounting, Diesel
7/207	Parking assistance sensor, front 8	8/66	Left-hand inflatable curtain igniter
8/3	Electromagnetic clutch, climate control system	8/67	Right-hand inflatable curtain igniter
8/6-11	Injectors	8/71	Throttle solenoid, AW 55/51 AWD
8/6-10	Injectors, Diesel	8/71	Throttle solenoid, TF-80SC/AWD
8/17	EGR valve, Diesel	8/72	Shift solenoid 3, AW55-51SN/AW51 AWD
8/18	EVAP valve	8/73	Shift solenoid 4, AW55-51SN/AW51 AWD
8/19	Solenoid, variable valve timing intake	8/74	Shift solenoid 5, AW55-51SN/AW51 AWD
8/20	Shock absorber, Four-C, front left	8/75	Valve, fuel cut-off DFEO
8/21	Shock absorber, Four-C, front right	8/78	Oil pressure sensor
8/22	Shock absorber, Four-C, rear left	8/81	Solenoid, variable valve timing exhaust
8/23	Shock absorber, Four-C, rear right	8/82	Solenoid, variable turbo geometry
		8/84	Switch, vacuum pump
		8/85	Thermostatic switch and fuel filter heating
		8/88	Rear solenoid, fuel tank, Bi-Fuel
		8/89	Front left solenoid, fuel tank, Bi-Fuel
		8/90	Front right solenoid, fuel tank, Bi-Fuel
		8/98	Control valve, fuel pressure, I5D

List of components 4:6

8/111	Solenoid valve, high-pressure diesel	10/44	Right tail light lamp 1, S60
8/113	Fuel pressure bypass valve	10/44	Right tail light lamp 1, S80
8/120	EGR valve	10/45	Right tail light lamp 2, S60
8/134	Solenoid, reverse interlock, manual	10/45	Right tail light lamp 2, S80
8/142	Linear pressure solenoid SLB1 TF-80SC/AWD	10/46	Rear right fog light, S60
8/143	Linear pressure solenoid SLC1 TF-80SC/AWD	10/46	Rear right fog light, S80
8/144	Linear pressure solenoid SLC2 TF-80SC/AWD	10/47	Rear right direction indicator, S60
8/145	Linear pressure solenoid SLC3 TF-80SC/AWD	10/47	Rear right direction indicator, S80
		10/48	Right-hand reversing light, S60
		10/48	Right-hand reversing light, S80
		10/49	Rear left running/parking light, S60
		10/50	Left brake light, S60
		10/50	Left brake light, S80
9/1	Front 12V outlet	10/51	Left tail light 1, S60
9/2	Heated rear window	10/51	Left tail light 1, S80
9/12	Seat Heating Module (SHM), left	10/52	Left tail light 2, S60
9/13	Seat Heating Module (SHM), right	10/52	Left tail light 2, S80
9/16	Left-hand backrest heating element	10/53	Rear left fog light, S60
9/17	Right-hand backrest heating element	10/53	Rear left fog light, S80
9/18	Left-hand seat heating element	10/54	Rear direction indicator, S60
9/19	Right-hand seat heating element	10/54	Rear left direction indicator, S80
9/25	Rear 12V outlet	10/55	Left reversing light, S60
9/30	Auxiliary heater	10/55	Left reversing light, S80
9/32	PTC resistor - air preheating	10/64	Right-hand high beam, S60
9/33	Left-hand heated door mirror	10/64	Right-hand high beam, S80
9/34	Right-hand heated door mirror	10/65	Auxiliary light, front right
		10/66	Right-hand low beam, S60
10/1	Front left lamp housing S60	10/66	Right-hand low beam, S80
10/1	Front left lamp housing S80	10/68	Left-hand high beam, S60
10/2	Front right lamp housing S60	10/68	Left-hand high beam, S80
10/2	Front right lamp housing S80	10/69	Auxiliary light, front left
10/3	License plate lighting	10/70	Left-hand low beam, S60
10/5	Front left fog light	10/70	Left-hand low beam, S80
10/6	Front right fog light	10/71	Side running light, front left
10/11	Front left running/parking light S60	10/72	Front ashtray lighting, S80
10/11	Front left running/parking light S80	10/73	Side running light, front right
10/12	Front right running/parking light S60	10/114	Left-hand vanity mirror lighting
10/12	Front right running/parking light S80	10/115	Right-hand vanity mirror lighting
10/13	Front left direction indicator, S60	10/122	Left-hand rear courtesy lighting
10/13	Front left direction indicator, S80	10/123	Right-hand rear courtesy lighting
10/14	Front right direction indicator, S60	10/125	Left-hand front courtesy lighting
10/14	Front right direction indicator, S80	10/126	Right-hand front courtesy lighting
10/15	Front left fender direction indicator	10/127	Lighting, cargo compartment, left-hand side
10/16	Front right fender direction indicator		Lighting, cargo compartment, right-hand side
10/17	Rear right lamp housing, S60	10/128	Left-hand rearview mirror lighting
10/17	Rear right lamp housing, S80	10/148	Right-hand rearview mirror lighting
10/18	Rear left lamp housing, S60	10/149	Rear reading light
10/18	Rear left lamp housing, S80	10/150	Rear reading light
10/19	Auxiliary brake light	10/150	Left-hand rear door switch lighting
10/29	Glove compartment lighting	10/151	Indicator light, remote start
10/42	Rear right running/parking light, S60	10/218	
10/114	Right brake light, S60		
10/43	Right brake light, S80		

List of components 5:6

11A/no.	Main fuses in engine compartment fuse box	17/38	7-pin outlet, tow hitch cable harness
11B/no.	Fuses in engine compartment fuse box	17/39	13-pin outlet, tow hitch cable harness
11C/no.	Fuses in passenger compartment fuse box		
11E/no.	Main fuses at battery	18/4	Contact reel
15/31	Distribution box in engine compartment		
16/1	Audio Module (AUM)	20/3-8	Spark plug and ignition coil
16/2	Amplifier	20/16	Capacitor
16/3	Right-hand front door speaker	20/22-26	Glow plug
16/4	Left-hand front door speaker	26/4	Cable harness, tow hitch cable harness
16/5	Right-hand rear door speaker	27/3	Left Camera Module (LCM)
16/6	Left-hand rear door speaker	27/4	Right-hand Camera Module (RCM)
16/9	Window antenna	31/1	Ground connection, right MacPherson strut tower
16/10	Horn 1	31/2	Ground connection, left MacPherson strut tower
16/11	Horn 2		
16/15	CD changer	31/4	Ground connection, engine
16/16	Window antenna amplifier	31/5	Ground connection, right D-post
16/17	Left-hand speaker, rear shelf	31/6	Ground connection, driver's side A-post
16/18	Right-hand speaker, rear shelf	31/10	Ground connection, A-post right side
16/26	Center dashboard speaker	31/44	Ground connection, left side member, lower engine compartment
16/35	Siren Control Module (SCM)		
16/36	TV receiver	31/46	Ground connection, rear left seat riser
16/45	Road Traffic Information module (RTI)	31/47	Ground connection, rear right seat riser
16/45	Road Traffic Information module (RTI), Turn-by-turn	31/48	Ground connection, rear right seat riser
16/46	RTI display	31/53	Ground connection, firewall
16/46	RTI display, Turn-by-turn	31/66	Ground connection, front seat riser, left-hand side
16/47	GPS antenna RTI		
16/49	Traffic Message Channel module (TMC)	31/67	Ground connection, front seat riser, right-hand side
16/55	Left-hand front tweeter		
16/56	Right-hand front tweeter	31/70	Ground connection, left side member, lower engine compartment
16/59	Antenna, remote control		
16/60	Phone Module (PHM)	31/72	Ground connection, cargo compartment
16/62	Hand unit, mobile phone	31/73	Ground connection, rear right seat riser
16/63	GPS antenna, cellular phone	31/83	Ground connection, left-hand side A-post
16/64	Antenna, mobile telephone	31/84	Ground connection, A-post right side
16/65	Antenna ring/ignition switch illumination	31/88	Ground connection, Engine ignition coil group 1
16/67	Amplifier antenna, bumper	31/89	Ground connection, Engine ignition coil group 2
16/68	Antenna, bumper	31/91	Ground connection, engine
16/71	Window antenna amplifier 1, right	31/93	Ground connection, left MacPherson strut tower
16/77	Microphone, mobile telephone		
16/78	Speaker, mobile telephone	31/94	Ground connection, right MacPherson strut tower
16/93	Control module, cellular telephone handsfree		
16/126	Holder, cellular telephone handsfree	31/95	Ground connection, left MacPherson strut tower
16/127	Microphone, cellular telephone handsfree		
16/145	Satellite radio receiver	31/96	Ground connection, right MacPherson strut tower
16/149	MP3 player	31/98	Ground connection, upper windshield member
17/13	Data link connector		
17/17	Jump start connection	31/102	Ground connection, front member
17/19	12V outlet, cargo compartment	31/120	Ground connection, cargo compartment
17/37	4-pin outlet, towbar cable harness		

List of components 6:6

54/1	Connector	54/32	Connector
		54/34	Connector
54/1B	Connector	54/35	Connector
		54/36	Connector
54/1C	Connector	54/40C	Connector
54/3.1	Connector	54/40D	Connector
54/3.2	Connector	54/43	Connector
54/4	Connector	54/53	Connector
54/7	Connector	54/54	Connector
54/8	Connector	54/55	Connector
54/9	Connector	54/56	Connector
54/10-11	Connector	54/57.1	Connector
54/12	Connector	54/74	Connector
54/13	Connector	54/74B	Connector
54/14	Connector	54/100	Connector
54/16	Connector	54/106	Connector
54/20	Connector	54/107	Connector
54/21	Connector	54/132	Connector
54/22-23	Connector	54/1300	Connector
54/24	Connector	54/1400	Connector
54/25	Connector		