



Mirrors

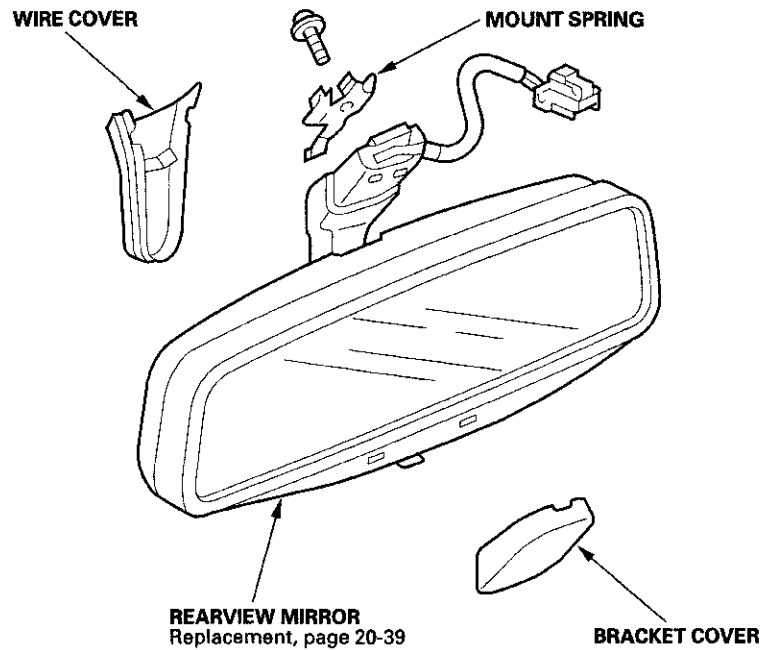

Component Location Index

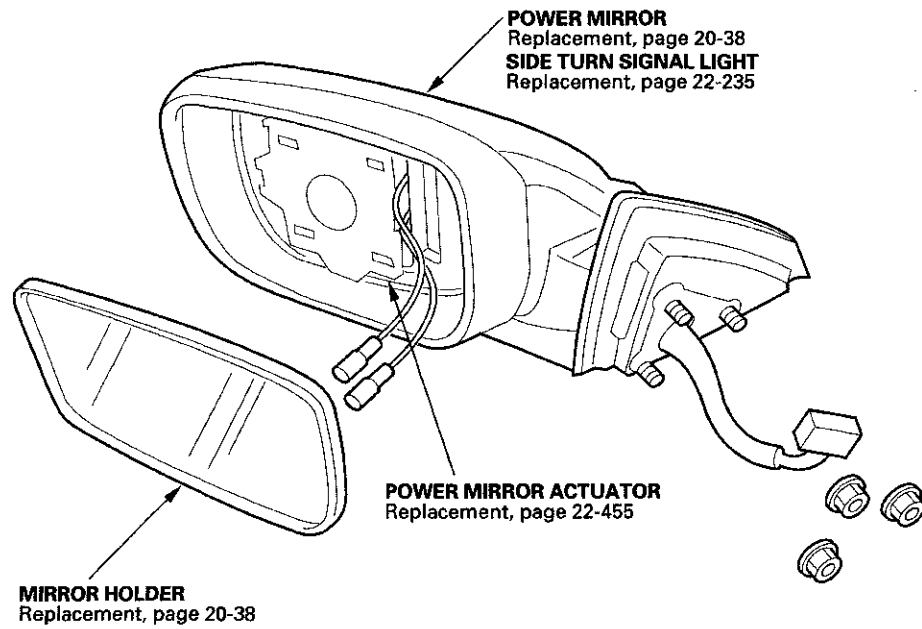

Mirrors

Power Mirror Replacement


NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the door and related parts.


1. Lower the door glass fully.
2. Remove these items:
 - Front door panel (see page 20-9)
 - Front door sash inner trim (see page 20-18)
3. While holding the mirror (A), remove the nuts.

Fastener Locations

● : Nut, 3

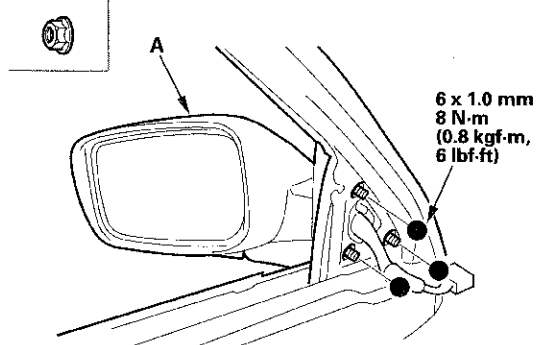

4. Remove the mirror (A). Take care not to scratch the door.

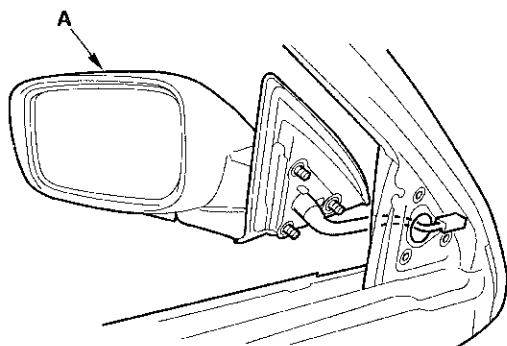

5. Install the mirror in the reverse order of removal, and note these items:
 - When reinstalling the door panel, make sure the plastic cover is installed properly and sealed around its outside perimeter to seal out water.
 - Make sure the power mirror connector is plugged in properly.

Mirror Holder Replacement

Special Tools Required


KTC trim tool set SOJATP2014 *

* Available through the Acura Tool and Equipment Program; 888-424-6857

NOTE:

- Put on gloves to protect your hands.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.


1. Adjust the mirror fully to the inward position.
2. Insert a trim tool between the mirror holder (A) and the mirror housing (B), and then quickly twist the tool to detach the bottom clips (C). Pad the edge of the mirror housing with a shop towel (D). Take care not to scratch the mirror housing.

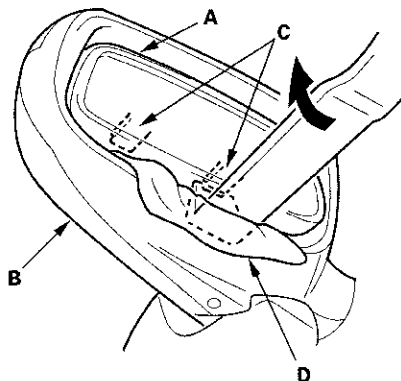



Rearview Mirror Replacement

3. Carefully pull out the bottom edge of the mirror holder (A), then release the side clips (B). Separate the mirror holder from the actuator (C) by releasing the hooks (D). Disconnect the mirror defogger connectors (E) from the heater pad terminals.

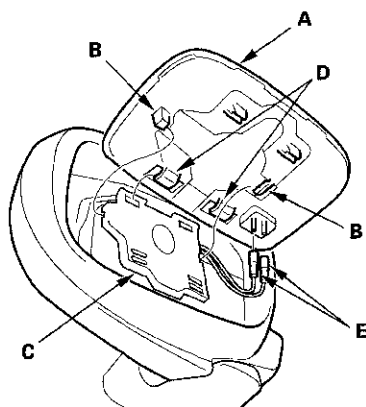

4. Reconnect the mirror defogger connector.
5. Reattach the hooks of the mirror holder to the actuator, then position the mirror holder on the actuator. Carefully push on the clip portions of the mirror holder until the mirror holder locks into place.
6. Check the operation of the actuator.

Special Tools Required


KTC trim tool set SOJATP2014 *

* Available through the Acura Tool and Equipment Program; 888-424-6857


NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.

1. Using a trim tool, carefully remove the front cover (A) by releasing the hooks (B), and then disconnect the connector (C).

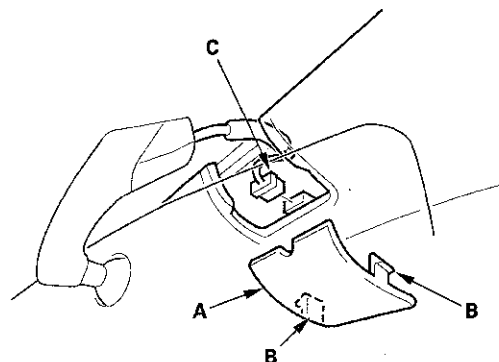

2. Carefully remove the bracket cover (A) by releasing the hooks (B). Take care not to scratch the cover and mirror bracket (C).

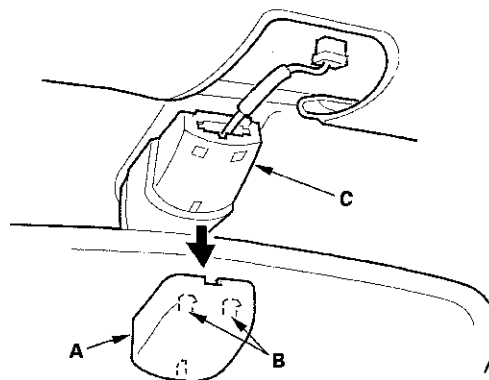


(cont'd)


Mirrors

Rearview Mirror Replacement (cont'd)


3. Slide the rearview mirror (A) forward to release the spring (B) by gently tapping the mirror bracket with a flat-tip screwdriver and a plastic hammer. Remove the mirror from the lug (C).

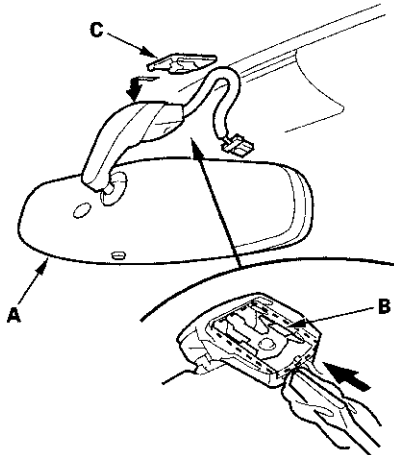


4. Remove the cover (A) from the mirror bracket (B) by releasing the hooks (C) in the sequence shown.

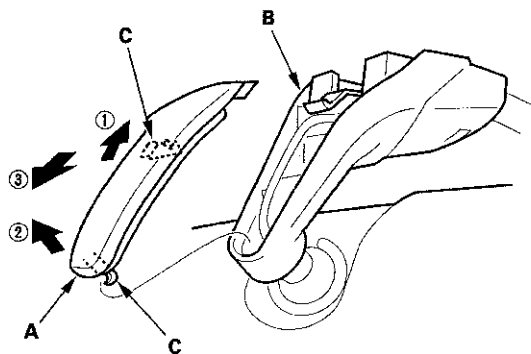

5. Install the rearview mirror (A) by sliding it over the lug (B) until the spring contacts the lug. Gently tap the mirror bracket with a flat-tip screwdriver and a plastic hammer. Be careful not to damage the wires.

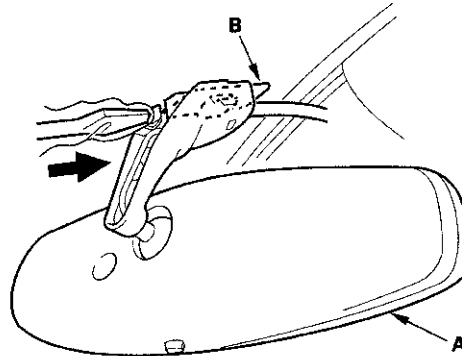

6. Install the cover (A) in the sequence shown. Take care not to damage the hooks (B).

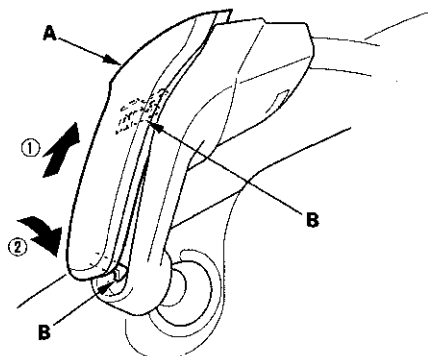

7. Install the bracket cover, and connect the connector, then install the headliner cap. Make sure the connector is plugged in properly.