


Driver door , (L0L)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Driver door control unit, Data bus diagnostic interface, Fuse holder C

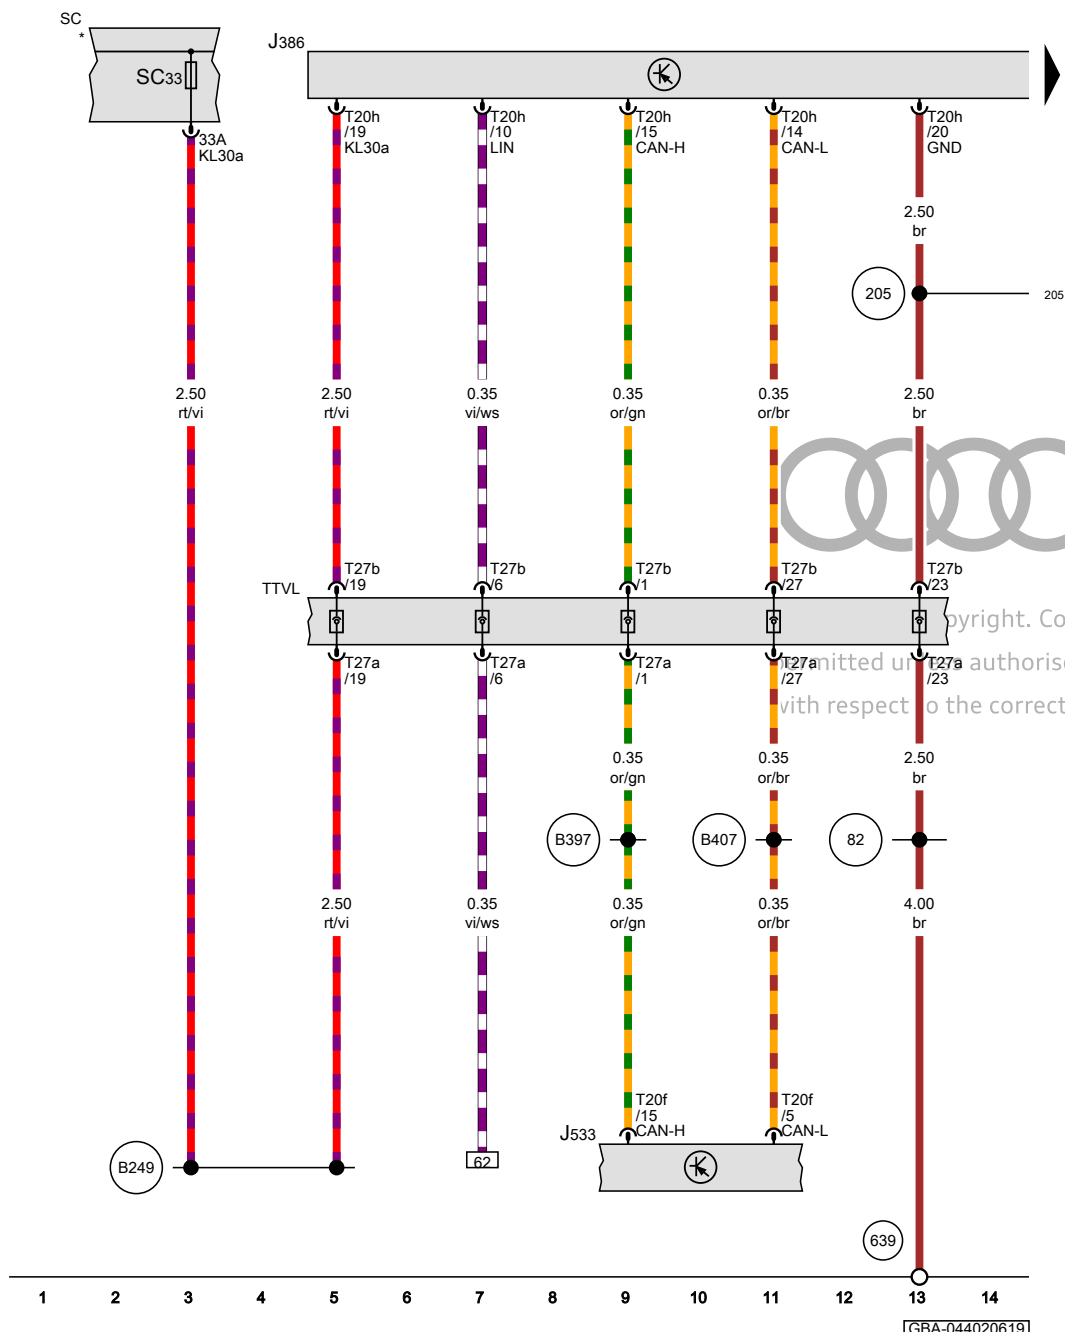

- J386 Driver door control unit
- J533 Data bus diagnostic interface
- SC Fuse holder C
- SC33 Fuse 33 on fuse holder C
- T20f 20-pin connector, red
- T20h 20-pin connector, white
- T27a 27-pin connector, black
- T27b 27-pin connector, black
- TTVL Coupling point for front left door

- 82 Earth connection 1, in front left wiring harness
- 205 Earth connection, in driver door wiring harness
- 639 Earth point, left A-pillar
- B249 Connection 2 (30, window regulator), in interior wiring harness
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness
- * see applicable current flow diagram for fuses in interior

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

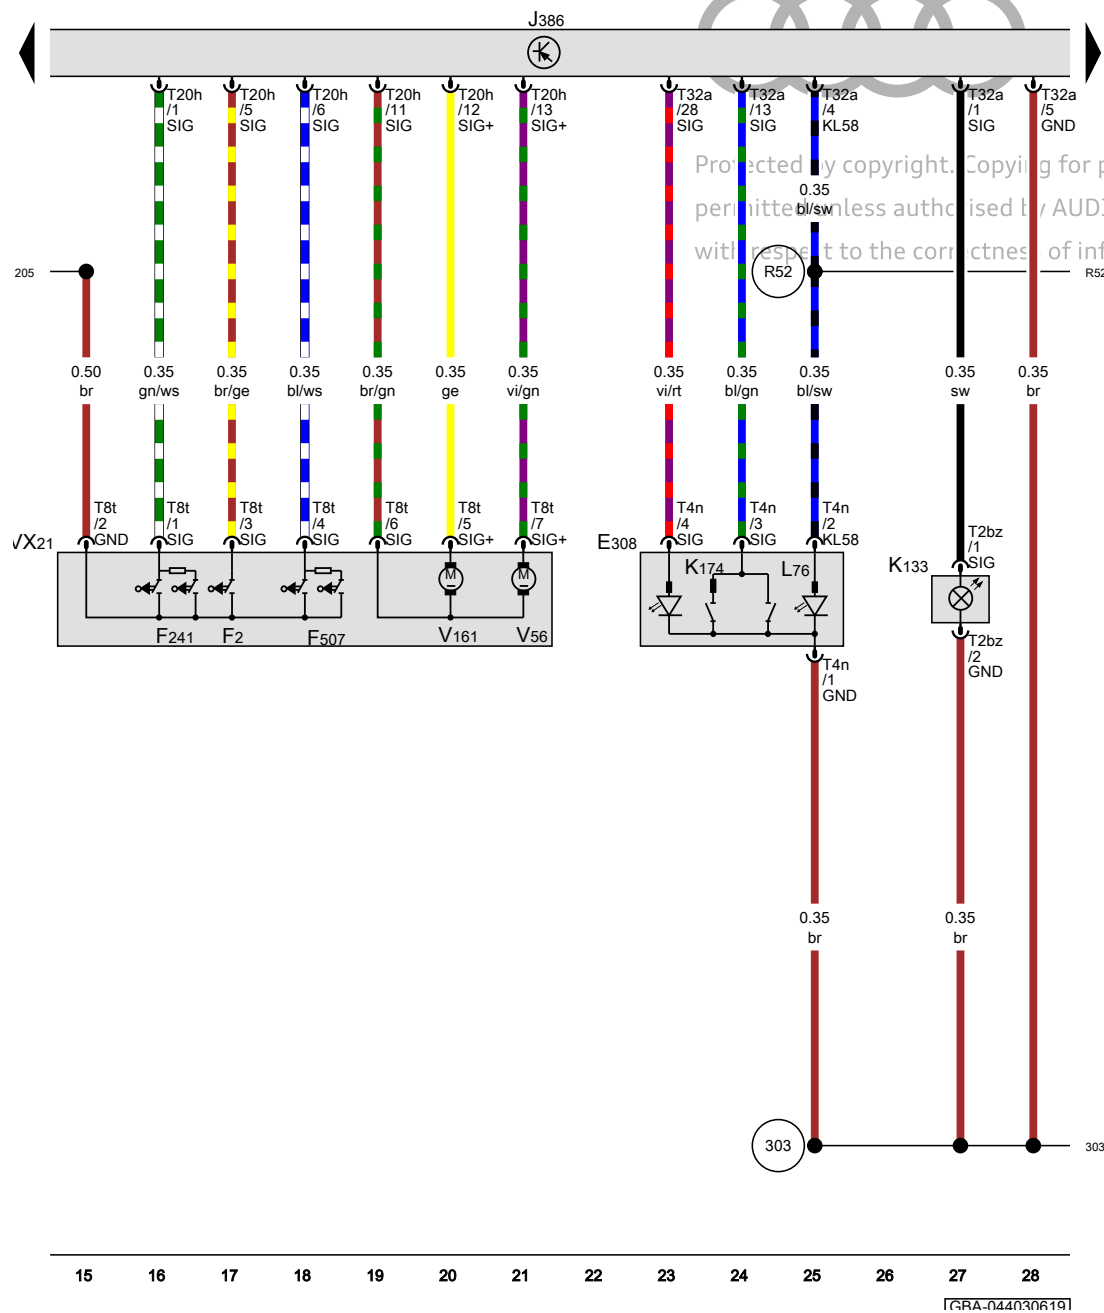


Driver side interior locking button for central locking system, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door lock unit

- E308 Driver side interior locking button for central locking system
- F2 Driver door contact switch
- F241 Driver side contact switch in lock cylinder
- F507 Driver side central locking actuator
- J386 Driver door control unit
- K133 Central locking SAFELOCK function warning lamp
- K174 Driver side interior locking warning lamp
- L76 Button illumination bulb
- T2bz 2-pin connector, black
- T4n 4-pin connector, blue
- T8t 8-pin connector, black
- T20h 20-pin connector, white
- T32a 32-pin connector, blue
- VX21 Driver door lock unit
- V56 Driver door central locking motor
- V161 Driver door central locking SAFELOCK function motor

- 205 Earth connection, in driver door wiring harness
- 303 Earth connection 3, in drive side door wiring harness
- R52 Connection (58s), in driver side door wiring harness


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

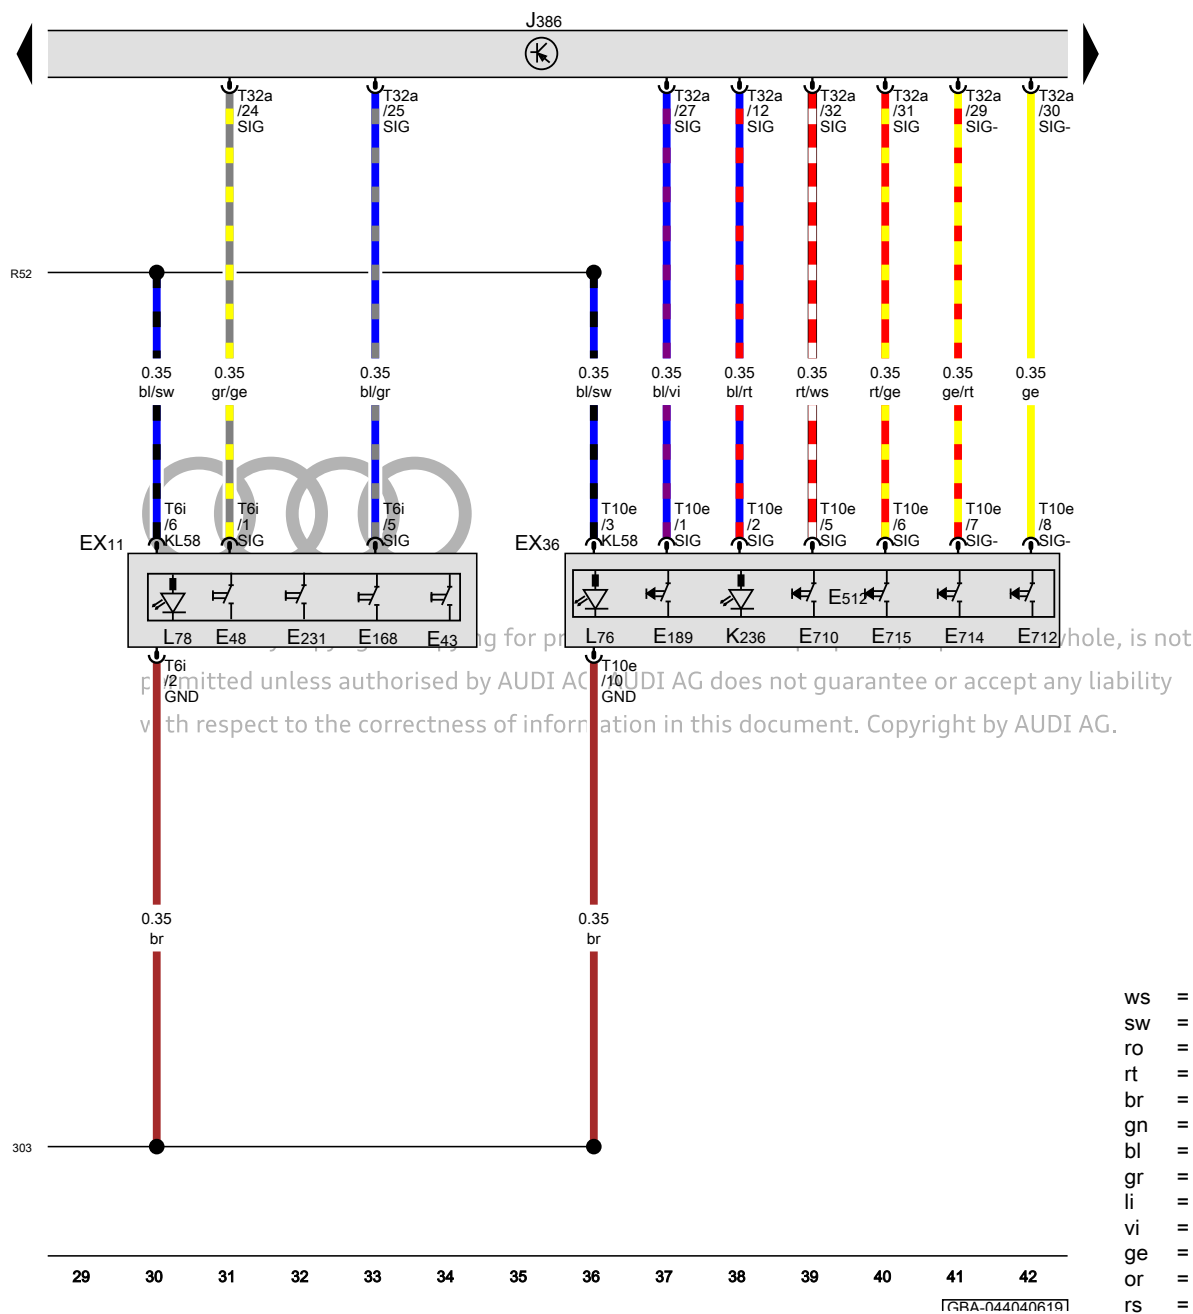

Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit

- EX11 Exterior mirror adjuster
- EX36 Operating unit for window regulator in driver door
- E43 Mirror adjustment switch
- E48 Mirror adjustment changeover switch
- E168 Adjustment switch for mirror with fold-in feature
- E189 Central switch for window regulators in driver door
- E231 Exterior mirror heater button
- E512 Operating unit for window regulator in driver door
- E710 Front driver side window regulator button
- E712 Rear driver side window regulator button, in driver door
- E714 Rear passenger side window regulator button, in driver door
- E715 Front passenger side window regulator button, in driver door
- J386 Driver door control unit
- K236 Warning light for activated childproof lock
- L76 Button illumination bulb
- L78 Mirror adjustment switch illumination bulb
- T6i 6-pin connector, brown
- T10e 10-pin connector, black
- T32a 32-pin connector, blue

- 303 Earth connection 3, in drive side door wiring harness
- R52 Connection (58s), in driver side door wiring harness

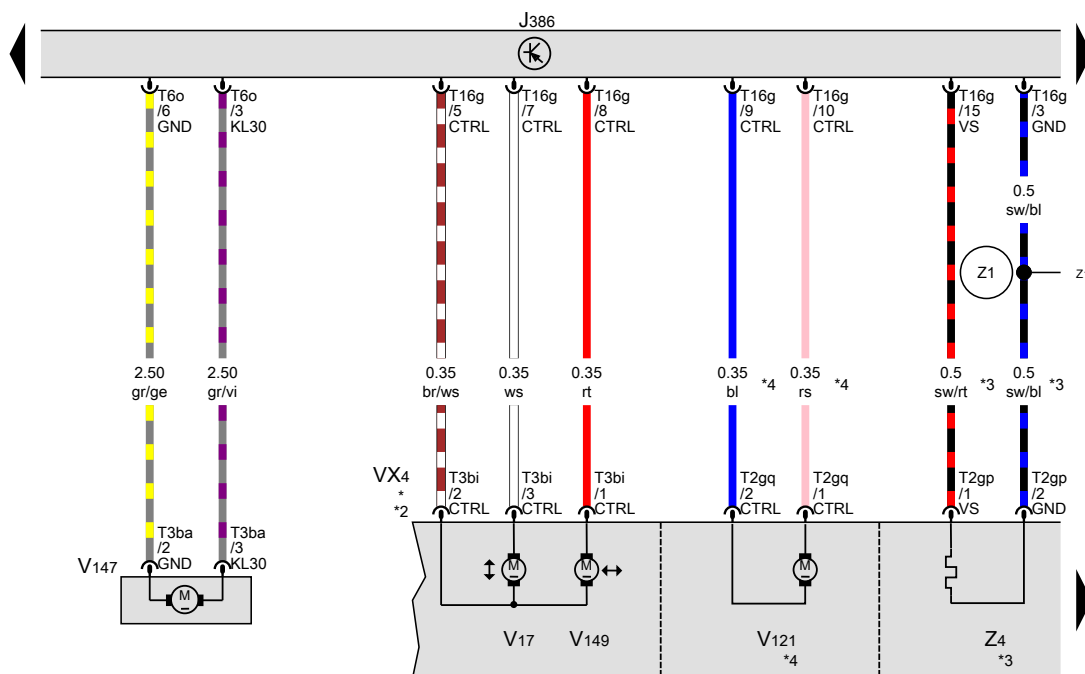

Driver door control unit, Driver side exterior mirror, Driver side window regulator motor

- J386 Driver door control unit
- T2gp 2-pin connector, black
- T2gq 2-pin connector, black
- T3ba 3-pin connector, blue
- T3bi 3-pin connector, black
- T6o 6-pin connector, black
- T16g 16-pin connector, black
- VX4 Driver side exterior mirror
- V17 Driver side mirror adjustment motor 2
- V121 Driver side fold-in mirror motor
- V149 Driver side window regulator motor
- Z4 Heated exterior mirror on driver side


Z1 Connection 1, in mirror adjustment/heating wiring harness

- * Pre-wired component
- *2 see applicable current flow diagram for lane change assist
- *3 For models with heated exterior mirrors
- *4 For models with electric folding exterior mirrors



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

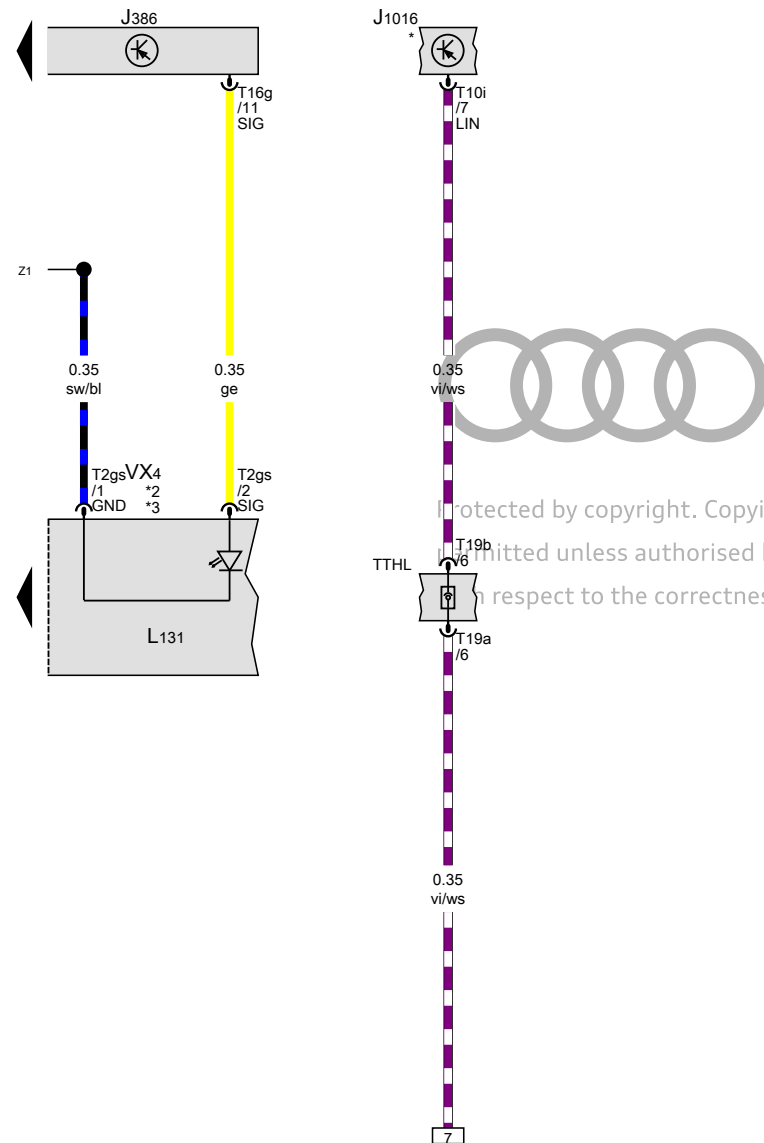

Driver door control unit, Control unit with rear driver side window regulator motor, Driver side exterior mirror

- J386 Driver door control unit
- J1016 Control unit with rear driver side window regulator motor
- L131 Driver side turn signal repeater bulb
- T2gs 2-pin connector, black
- T10i 10-pin connector, black
- T16g 16-pin connector, black
- T19a 19-pin connector, black
- T19b 19-pin connector, black
- TTHL Coupling point for rear left door
- VX4 Driver side exterior mirror

Z1 Connection 1, in mirror adjustment/heating wiring harness

- * see applicable current flow diagram
- *2 Pre-wired component
- *3 see applicable current flow diagram for lane change assist

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability in respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink