

List of components

1/1	Battery	11F	Fuses in cargo compartment auxiliary fuse box
2/14	Relay, glow plug unit	16/3-4	Speaker, front right door & front left door
2/22	Relay, climate control system	16/5-6	Door speaker, rear right door & rear left door
2/32	Main relay, engine management system	16/26	Speaker instrument board center
2/35	Starter motor relay	16/55-56	Tweeter, front left door & front right door
2/90	Relay, windshield wiper, low/high speed	16/57-58	Speaker, LH & RH D-pillar
2/91	Relay, intermittent wiping	16/65	Antenna ring/ignition switch illumination
2/182	Relay, headlight washer motor	16/77	Microphone, mobile telephone
2/237	Disconnect relay, rear speaker	16/81A	TV display, LH head restraint
3/1	Ignition switch	16/81B	TV display, RH head restraint
4/9	Control module, Supplementary Restraint System (SRS)	16/82	DVD player, rear
4/56	Central Electronic Module (CEM)	16/105	Audio Module (AUD)
4/58	Rear Electronic Module (REM)	16/122	Rear Audio Separation module (RAS)
6/25	Starter motor	16/123	External equipment socket AUX
6/26	Alternator	16/124	Rear Seat Entertainment module (RSE)
9/1	Front 12V socket	16/125	IR transmitter
9/24	Coolbox rear seat	31/10	Ground connection
9/25	Rear 12V socket	31/118	Ground connection
10/72	Front ashtray lighting	54/33	Connector
11E	Main fuses at battery	54/36	Connector
		54/98	Connector
		54/274	Connector
		54/275	Connector
		54/303	Connector