

2007 ACURA**TL****BUZZERS, RELAYS & TIMERS****BUZZERS, RELAYS & TIMERS LOCATION**

Component	Location
ACC Cut Relay (A/T)	Under left side of dash. See Fig. 144 .
Accessory Power Socket Relay	On under-dash fuse/relay box. See Fig. 115 .
A/C Compressor Clutch Relay	In under-hood fuse/relay box. See Fig. 116 .
A/C Condenser Fan Relay	In under-hood fuse/relay box. See Fig. 116 .
A/F Sensor Relay	On under-dash fuse/relay box. See Fig. 115 .
Blower Motor Relay	In under-hood fuse/relay box. See Fig. 116 .
DRL Relay	Right side of engine compartment. See Fig. 28 .
Fan Control Relay	Right side of engine compartment. See Fig. 28 .
Ignition Coil Relay	On under-dash fuse/relay box. See Fig. 115 .
IG2 Cut Relay	Under left side of dash. See Fig. 144 .
Keyless Buzzer Connector	Behind left front fender. See Fig. 131 .
PGM-FI Main Relay 1	On under-dash fuse/relay box. See Fig. 115 .
PGM-FI Main Relay 2	On under-dash fuse/relay box. See Fig. 115 .
Power Window Relay	On under-dash fuse/relay box. See Fig. 115 .
Radiator Fan Relay	In under-hood fuse/relay box. See Fig. 116 .
Rear Window Defogger Relay	In under-hood fuse/relay box. See Fig. 116 .
Seat Heater Relay	Behind glove box. See Fig. 59 .
Starter Cut Relay	On under-dash fuse/relay box. See Fig. 115 .
Starter Cut Relay 1	Under left side of dash. See Fig. 144 .
Starter Cut Relay 2 (A/T)	Under left side of dash. See Fig. 144 .
Throttle Actuator Control Module Relay	Behind glove box. See Fig. 59 .
Turn Signal/Hazard Relay	On under-dash fuse/relay box. See Fig. 115 .

CIRCUIT PROTECTION DEVICES**CIRCUIT PROTECTION DEVICES LOCATION**

Component	Location
Auxiliary Under-Dash Fuse Holder	Under left side of dash. See Fig. 143 .
Back-Up Sensor In-Line Fuse	Left side of trunk lid. See Fig. 112 .
Under-Dash Fuse/Relay Box	Behind left end of dash. See Fig. 41 .
Under-Hood Fuse/Relay Box	Left rear of engine compartment. See Fig. 27 .
Under-Hood Multi-Relay Box	Right side of engine compartment. See Fig. 6 .

CONTROL UNITS**CONTROL UNITS LOCATION**

Component	Location
------------------	-----------------

Active Noise Control Unit	Under middle of dash. See Fig. 156 .
AcuraLink Control Unit (XM Receiver)	Right side of trunk. See Fig. 151 .
Automatic Lighting Control Unit	Under left side of dash. See Fig. 155 .
Back-Up Sensor Control Unit	Left side of rear shelf. See Fig. 111 .
Climate Control Unit	Behind glove box. See Fig. 158 .
ECM/PCM	Behind center of dash. See Fig. 62 .
ELD Unit	On under-hood fuse/relay box. See Fig. 116 .
Electrical Compass Unit	Right side of rear shelf. See Fig. 164 .
Fuel Pump Control Module	Left side of trunk. See Fig. 167 .
Hands Free Control Unit	Front of roof. See Fig. 84 .
Immobilizer Control Unit Receiver	On right side of steering column. See Fig. 38 .
Keyless Receiver Unit	Under left side of dash. See Fig. 153 .
MICU	On under-dash fuse/relay box. See Fig. 115 .
Moonroof Control Unit	Rear of roof. See Fig. 85 .
Navigation Unit	In trunk, below left side of package tray. See Fig. 110 .
ODS Unit	On left side of front passenger's seat. See Fig. 71 .
Power Mirror Control Unit	Under left side of dash. See Fig. 40 .
Power Seat Control Unit	Under driver's seat. See Fig. 70 .
SRS Unit	Under lower middle of dash. See Fig. 51 .
Throttle Actuator Control Module	Behind glove box. See Fig. 61 .
TPMS Control Unit	Behind left rear seat back. See Fig. 133 .
VSA Modulator Unit	On right side of engine compartment. See Fig. 3 .
XM Antenna Connector	Rear of roof. See Fig. 114 .

MOTORS

MOTORS LOCATION

Component	Location
A/C Condenser Fan Motor Connector	Behind right side of radiator. See Fig. 6 .
Blower Motor	Under right side of dash. See Fig. 66 .
Driver's Air Mix Control Motor	Below left side of dash. See Fig. 46 .
Driver's Door Lock Actuator	Rear of left front door. See Fig. 81 .
Driver's Mode Control Motor	Below left side of dash. See Fig. 46 .
Driver's Power Seat Slide Motor	Under driver's seat. See Fig. 121 .
Driver's Power Window Motor	Center of driver's door. See Fig. 125 .
Front Passenger's Air Mix Control Motor	Under right side of dash. See Fig. 65 .
Front Passenger's Door Lock Actuator	Rear of right front door. See Fig. 81 .
Front Passenger's Mode Control Motor	Behind glove box. See Fig. 61 .
Front Passenger's Power Seat Recline Motor Connector	Under front passenger's seat. See Fig. 122 .
Fuel Tank Unit	Middle front of trunk. See Fig. 92 .
Left Power Mirror Connector	Front of driver's door. See Fig. 130 .
Left Rear Door Lock Actuator	Rear of left rear door. See Fig. 83 .

Left Rear Power Window Motor	Center of left rear door. See Fig. 126 .
Lumbar Support Motor (Driver's Seat)	Under driver's seat. See Fig. 120 .
Radiator Fan Motor Connector	Under front of engine compartment. See Fig. 103 .
Recirculation Control Motor	Behind glove box. See Fig. 61 .
Right Power Mirror Connector	Front of front passenger's door. See Fig. 130 .
Right Rear Door Lock Actuator	Rear of right rear door. See Fig. 83 .
Starter (A/T)	Left side of engine. See Fig. 21 .
Starter (M/T)	In transmission housing. See Fig. 138 .
Windshield Washer Motor	In bottom of washer reservoir. See Fig. 95 .
Windshield Wiper Motor	In left rear of engine compartment. See Fig. 33 .

SENDING UNITS & SENSORS

SENDING UNITS & SENSORS LOCATION

Component	Location
APP Sensor	Right side of engine compartment. See Fig. 1 .
ATF Transmission Sensor Connector (A/T)	On transmission housing. See Fig. 105 .
Back-Up Sensor Connector (Left Corner)	Behind left side of rear bumper. See Fig. 113 .
Back-Up Sensor Connector (Left Middle)	Behind left middle of rear bumper. See Fig. 113 .
Back-Up Sensor Connector (Right Corner)	Behind right side of rear bumper. See Fig. 113 .
Back-Up Sensor Connector (Right Middle)	Behind right middle of rear bumper. See Fig. 113 .
CKP Sensors	Behind crankshaft pulley. See Fig. 169 .
CMP Sensor	Right side of engine. See Fig. 8 .
Driver's Power Seat Front Up-Down Motor/Position Sensor Connector	Right side of driver's seat. See Fig. 118 .
Driver's Power Seat Rear Up-Down Motor/Position Sensor Connector	Left side of driver's seat. See Fig. 68 .
Driver's Power Seat Recline Motor/Position Sensor Connector	Under driver's seat. See Fig. 119 .
Driver's Power Seat Slide Position Sensor	Under driver's seat. See Fig. 121 .
Driver's Seat Position Sensor	Under front of driver's seat. See Fig. 127 .
ECT Sensor 1	Left side of engine. See Fig. 16 .
ECT Sensor 2	Under front of engine compartment. See Fig. 103 .
EGR Valve Position Sensor	Left side of engine. See Fig. 16 .
Evaporator Temperature Sensor Connector	Under right side of dash. See Fig. 64 .
Front A/F Sensor Connector	Left front of engine. See Fig. 15 .
Front Impact Sensor (Left)	Behind left side of front bumper. See Fig. 99 .
Front Impact Sensor (Right)	Behind right side of front bumper. See Fig. 96 .
Front Secondary HO2S Connector	Left front of engine. See Fig. 15 .
Fuel Tank Pressure (FTP) Sensor	Under left rear of vehicle. See Fig. 107 .
IAT Sensor	Left side of engine. See Fig. 16 .
In-Car Temperature Sensor	On dash, right of steering column. See Fig. 34 .
Inner Side Front Passenger's Weight Sensor Connector	Under front passenger's seat. See Fig. 160 .
Input Shaft (Mainshaft) Speed Sensor (A/T)	In transmission housing. See Fig. 139 .

Input Shaft (Mainshaft) Speed Sensor (M/T)	In transmission housing. See Fig. 104.
Knock Sensor	On top middle of engine, below intake manifold. See Fig. 13.
Left Front Wheel Speed Sensor Connector	Left side of engine compartment. See Fig. 30.
Left Rear Wheel Speed Sensor Connector	Under left rear of vehicle. See Fig. 106.
Left Side Impact Sensor (1st)	On driver's door sill. See Fig. 74.
Left Side Impact Sensor (2nd)	Left c-pillar. See Fig. 166.
Mainshaft Speed Sensor (A/T)	On transmission. See Fig. 25.
MAP Sensor	Left side of engine. See Fig. 18.
Outer Side Front Passenger's Weight Sensor Connector	Under front passenger's seat. See Fig. 160.
Output Shaft (Countershaft) Speed Sensor (A/T)	In transmission housing. See Fig. 139.
Output Shaft (Countershaft) Speed Sensor (M/T)	In transmission housing. See Fig. 104.
Outside Air Temperature Sensor	Behind middle of front bumper. See Fig. 147.
Rear A/F Sensor (B1, S1) Connector	Left rear of engine. See Fig. 137.
Rear Secondary HO2S (B1, S2) Connector	Left rear of engine. See Fig. 137.
Right Front Wheel Speed Sensor Connector	On right side of engine compartment. See Fig. 2.
Right Rear Wheel Speed Sensor Connector	Under right rear of vehicle. See Fig. 106.
Steering Angle Sensor	On side of steering column. See Fig. 36.
Sunlight Sensor	Right side of dash. See Fig. 57.
TP Sensor/Throttle Actuator	On throttle body. See Fig. 18.
Yaw Rate-Lateral Acceleration Sensor	Under center console. See Fig. 53.

SOLENOIDS & SOLENOID VALVES

SOLENOIDS & SOLENOID VALVES LOCATION

Component	Location
A/T Clutch Pressure Control Solenoid Valve A	On transmission housing. See Fig. 24.
A/T Clutch Pressure Control Solenoid Valve B	On transmission housing. See Fig. 24.
A/T Clutch Pressure Control Solenoid Valve C	On transmission housing. See Fig. 25.
Driver's Seat Belt Tension Reducer Solenoid Connector	On base of left "B" pillar. See Fig. 77.
EGR Valve	Left side of engine. See Fig. 16.
Engine Mount Control Solenoid Valve	Left rear of engine. See Fig. 10.
EVAP Canister Purge Valve	At left side of engine compartment, near strut tower. See Fig. 18.
EVAP Canister Vent Shut Valve	Under left rear of vehicle. See Fig. 107.
Front Passenger's Seat Belt Tension Reducer Solenoid Connector	On base of right "B" pillar. See Fig. 77.
IMT Actuator	Right side of engine. See Fig. 8.
Injector No. 1	Middle of engine. See Fig. 11.
Injector No. 2	Middle of engine. See Fig. 11.
Injector No. 3	Middle of engine. See Fig. 11.
Injector No. 4	Middle of engine. See Fig. 12.
Injector No. 5	Middle of engine. See Fig. 12.

Injector No. 6	Middle of engine. See Fig. 12 .
Reverse Lockout Solenoid	On transmission. See Fig. 23 .
Rocker Arm Oil Control Solenoid (VTEC Solenoid Valve) Connector	Right side of engine. See Fig. 101 .
Shift Lock Solenoid	Under center console. See Fig. 55 .
Starter Solenoid (A/T)	On starter. See Fig. 21 .
Starter Solenoid (M/T)	On transmission housing. See Fig. 138 .
Trunk Lid Latch Switch/Opener Solenoid	Middle of trunk lid. See Fig. 94 .

SWITCHES

SWITCHES LOCATION

Component	Location
A/C Pressure Switch	Behind right side of front bumper. See Fig. 97 .
Back-Up Light Switch	On transmission. See Fig. 22 .
Brake Fluid Level Switch	Integral to brake fluid reservoir cap. See Fig. 32 .
Brake Pedal Position Switch	Near brake pedal. See Fig. 45 .
Clutch Interlock Switch	Near clutch pedal. See Fig. 43 .
Clutch Pedal Position Switch	Near clutch pedal. See Fig. 43 .
Driver's Door Switch	At left "B" pillar. See Fig. 123 .
Driver's Seat Belt Buckle Switch Connector	Under driver's seat. See Fig. 69 .
Front Passenger's Door Switch	At right "B" pillar. See Fig. 123 .
Front Passenger's Seat Belt Buckle Switch Connector	Under front passenger's seat. See Fig. 72 .
Left Rear Door Switch	At left "C" pillar. See Fig. 124 .
Oil Pressure Switch	Right side of engine. See Fig. 100 .
Parking Brake Switch	Under center console. See Fig. 54 .
Park Pin Switch	Under center console. See Fig. 157 .
PSP Switch	Right side of engine. See Fig. 101 .
Right Rear Door Switch	At right "C" pillar. See Fig. 124 .
Rocker Arm Oil Pressure Switch (VTEC Oil Pressure Switch)	Right side of engine. See Fig. 100 .
Security Hood Switch Connector	Behind middle of front bumper. See Fig. 98 .
Transmission Gear Selection Switch	Under center console. See Fig. 157 .
Transmission Range Switch	On transaxle. See Fig. 105 .
2nd Clutch Transmission Fluid Pressure Switch	On transmission. See Fig. 148 .
3rd Clutch Transmission Fluid Pressure Switch	On transmission. See Fig. 105 .
4th Clutch Transmission Fluid Pressure Switch	On transmission. See Fig. 25 .

MISCELLANEOUS

MISCELLANEOUS LOCATION

Component	Location
A/C Diode A	In under-hood fuse/relay box. See Fig. 154 .

A/C Diode B	Under left side of dash. See Fig. 44 .
Active Noise Control Front Microphone (Type S)	Front of roof. See Fig. 84 .
Active Noise Control Rear Microphone (Type S)	Rear of roof. See Fig. 162 .
AcuraLink Reprogramming Connector (C832)	On right rear shelf. See Fig. 149 .
Alternator	Right front of engine. See Fig. 170 .
AM/FM Antenna Amplifier-Rear Window Defogger Coil	Left "C" pillar. See Fig. 88 .
AM/FM Antenna Lead Connector	Under middle of dash. See Fig. 145 .
AM/FM Antenna Lead Jack	Left "C" pillar. See Fig. 88 .
AM Signal Window Antenna	Left "C" pillar. See Fig. 89 .
Back-Up Sensor Beeper	Left side of rear shelf. See Fig. 111 .
Blower Power Transistor	Behind right side of dash, left of blower motor. See Fig. 64 .
Cable Rear Connector A	On steering column. See Fig. 38 .
Cable Reel Connector B	On steering column. See Fig. 37 .
Cable Reel Connector C	On steering wheel. See Fig. 35 .
Coil Assembly	Right "C" pillar. See Fig. 86 .
DLC	Under left side of dash. See Fig. 142 .
Driver's Airbag First & Second Inflators Connector	Under steering wheel. See Fig. 129 .
Driver's Seat Back Heater Connector	In driver's seat. See Fig. 120 .
Driver's Seat Belt Tension Reducer Solenoid Connector	Base of left "B" pillar. See Fig. 77 .
Driver's Seat Cushion Heater Connector	Under driver's seat. See Fig. 159 .
Driver's Seat Heater Connector	Under driver's seat. See Fig. 159 .
Driver's Side Airbag Inflator Connector	Under driver's seat. See Fig. 69 .
FM Signal Window Antenna	Left "C" pillar. See Fig. 89 .
Front Passenger's Airbag First & Second Inflators Connector	Behind glove box. See Fig. 58 .
Front Passenger's Seat Belt Tension Reducer Solenoid Connector	Base of right "B" pillar. See Fig. 77 .
Front Passenger's Side Airbag Inflator Connector	Under front passenger seat. See Fig. 72 .
GPS Antenna	On top left rear of package tray shelf. See Fig. 108 .
High Horn	Behind left side of front bumper. See Fig. 128 .
Ignition Coil No. 1	Rear of engine. See Fig. 9 .
Ignition Coil No. 2	Rear of engine. See Fig. 9 .
Ignition Coil No. 3	Rear of engine. See Fig. 9 .
Ignition Coil No. 4	Middle of engine. See Fig. 14 .
Ignition Coil No. 5	Middle of engine. See Fig. 14 .
Ignition Coil No. 6	Middle of engine. See Fig. 14 .
Junction Connector (C104)	Middle of engine. See Fig. 136 .
Junction Connector (C105)	Left side of engine. See Fig. 19 .
Junction Connector (C106)	Middle of engine. See Fig. 136 .
Junction Connector (C506)	Left side of dash. See Fig. 40 .

Junction Connector (C507)	Left side of dash. See Fig. 174 .
Junction Connector (C508)	Left side of dash. See Fig. 174 .
Junction Connector (C509)	Under left side of dash. See Fig. 47 .
Junction Connector (C510)	Under middle of dash. See Fig. 48 .
Junction Connector (C511)	Under middle of dash. See Fig. 49 .
Junction Connector (C512)	Under middle of dash. See Fig. 49 .
Junction Connector (C513)	Behind glove box. See Fig. 60 .
Junction Connector (C603)	Right c-pillar. See Fig. 163 .
Junction Connector (C635)	In left front door. See Fig. 80 .
Junction Connector (C652)	Front of Roof. See Fig. 161 .
Left Front TPMS Initiator	Behind left front fender. See Fig. 134 .
Left Rear TPMS Initiator	Behind left rear fender. See Fig. 135 .
Left Side Curtain Airbag Inflator Connector	Left "C" pillar. See Fig. 165 .
Low Horn	Behind right side of front bumper. See Fig. 128 .
MES Connector	On under-dash fuse/relay box. See Fig. 41 .
Navigation Service Check Connector	Right side of trunk. See Fig. 109 .
Rearview Camera Connector	Right side of trunk lid. See Fig. 168 .
Stereo Amplifier	Behind right kick panel. See Fig. 67 .
S1 (Thermal Joint)	Right side of engine. See Fig. 171 .
S2 (Thermal Joint)	Left side of engine. See Fig. 172 .
S3 (Thermal Joint) (A/T)	Left side of engine. See Fig. 172 .
S3 (Thermal Joint) (M/T)	Left side of engine. See Fig. 173 .
Trunk Lid Opener Diode	Middle of trunk lid. See Fig. 94 .
XM Receiver	Right side of trunk. See Fig. 93 .

CONNECTORS

CONNECTORS LOCATION

Component	Location
C101 (Black, 33 Pin)	Left side of engine compartment. See Fig. 31 .
C102 (Gray, 33 Pin)	Left side of engine compartment. See Fig. 31 .
C103 (Black, 23 Pin)	Left side of engine compartment. See Fig. 31 .
C107 (Black, 5 Pin)	On transmission housing. See Fig. 24 .
C151 (A/T) (Gray, 8 Pin)	Near transmission. See Fig. 25 .
C153 (Black, 1 Pin)	Left front of engine compartment. See Fig. 141 .
C154 (Black, 1 Pin)	Middle of engine. See Fig. 13 .
C155 (Black, 6 Pin)	Right side of engine. See Fig. 101 .
C171 (White, 21 Pin)	Under middle of dash. See Fig. 63 .
C251 (White, 13 Pin)	Under right side of dash. See Fig. 65 .
C302 (Brown, 22 Pin)	Behind lower left side of dash. See Fig. 42 .
C303 (Gray, 14 Pin)	Behind lower left side of dash. See Fig. 42 .
C304 (Yellow, 4 Pin)	Behind lower left side of dash. See Fig. 42 .
C306 (White, 6 Pin)	Under left side of dash. See Fig. 152 .
C307 (White, 6 Pin)	Behind glove box. See Fig. 132 .

C311 (Gray, 1 Pin)	Right side of engine compartment. See Fig. 102 .
C501 (White, 20 Pin)	Behind left end of dash. See Fig. 39 .
C502 (Gray, 8 Pin)	Behind left end of dash. See Fig. 39 .
C503 (White, 12 Pin)	Behind right kick panel. See Fig. 117 .
C504 (Brown, 21 Pin)	Behind right kick panel. See Fig. 117 .
C514 (Gray, 2 Pin)	Under center console. See Fig. 56 .
C515 (Gray, 2 Pin)	Behind glove box. See Fig. 146 .
C521 (White, 13 Pin)	Under left side of dash. See Fig. 39 .
C601 (White, 13 Pin)	Behind right kick panel. See Fig. 117 .
C631 (White, 20 Pin)	Front of passenger door. See Fig. 79 .
C632 (White/Blue, 14 Pin)	Front of driver/s door. See Fig. 79 .
C633 (Gray, 4 Pin)	In driver's door. See Fig. 82 .
C651 (White, 28 Pin)	Behind left kick panel. See Fig. 152 .
C701 (except Type S) (White, 8 Pin)	Left "C" pillar. See Fig. 87 .
C701 (Type S) (White, 14 Pin)	Left C-pillar. See Fig. 87 .
C731 (White, 20 Pin)	Behind glove box. See Fig. 132 .
C732 (White, 12 Pin)	Behind glove box. See Fig. 132 .
C733 (White, 20 Pin)	Front of front passenger door. See Fig. 79 .
C734 (White/Blue, 14 Pin)	Front of front passenger's door. See Fig. 79 .
C751 (Gray, 8 Pin)	Left "B" pillar. See Fig. 78 .
C781 (Blue, 8 Pin)	Right "B" pillar. See Fig. 78 .
C801 (Gray, 4 Pin)	Under front passenger's seat. See Fig. 160 .
C831 (White, 6 Pin)	Right side of trunk. See Fig. 150 .
C851 (Gray, 14 Pin)	Under middle of dash. See Fig. 50 .
C903 (Gray, 2 Pin)	Under driver's seat. See Fig. 159 .
C904 (Gray, 2 Pin)	Under driver's seat. See Fig. 120 .
C951 (Gray, 10 Pin)	Under front passenger's seat. See Fig. 73 .

GROUND S

 
GROUND S LOCATION

Component	Location
G1	Left side of engine compartment. See Fig. 26 .
G2	Right side of engine compartment. See Fig. 4 .
G3 (A/T)	Left Side of Engine Compartment (A/T). See Fig. 140 .
G3 (M/T)	Left side of engine compartment. See Fig. 29 .
G101 (A/T)	Left side of engine. See Fig. 17 .
G101 (M/T)	Left side of engine. See Fig. 20 .
G102	On right front of engine. See Fig. 7 .
G201	Behind right side of front bumper. See Fig. 96 .
G203	Right side of engine compartment. See Fig. 5 .
G301	Behind left side of front bumper. See Fig. 99 .
G302	Behind left side of front bumper. See Fig. 99 .

G501	Under left side of dash. See Fig. 174.
G502	Under left side of dash. See Fig. 174.
G503	Under middle of dash. See Fig. 52.
G504	Under middle of dash. See Fig. 50.
G505	Under center console. See Fig. 53.
G506	Behind glove box. See Fig. 60.
G601	At left rear of trunk. See Fig. 75.
G602	At left rear of trunk. See Fig. 76.
G603	Middle front of trunk. See Fig. 91.
G604	Right side of trunk. See Fig. 109.
G701	Left side of trunk. See Fig. 90.
G801	Right "C" pillar. See Fig. 86.


COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

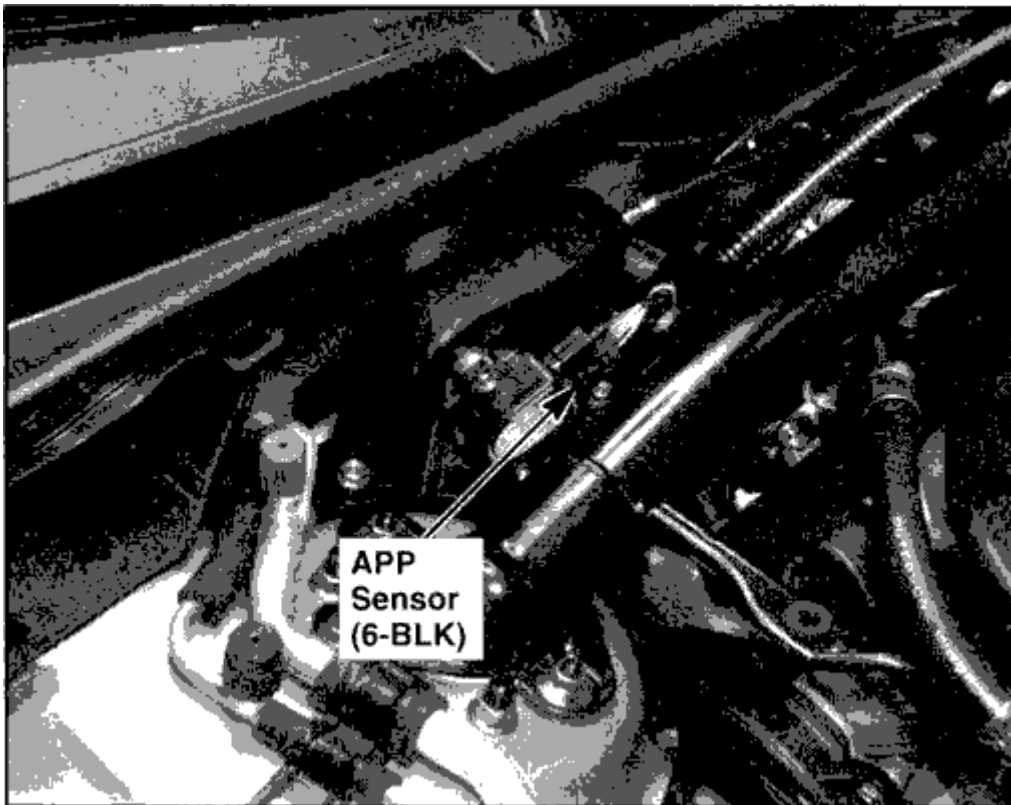


G00288466

 Fig. 1: Right Side Of Engine Compartment
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

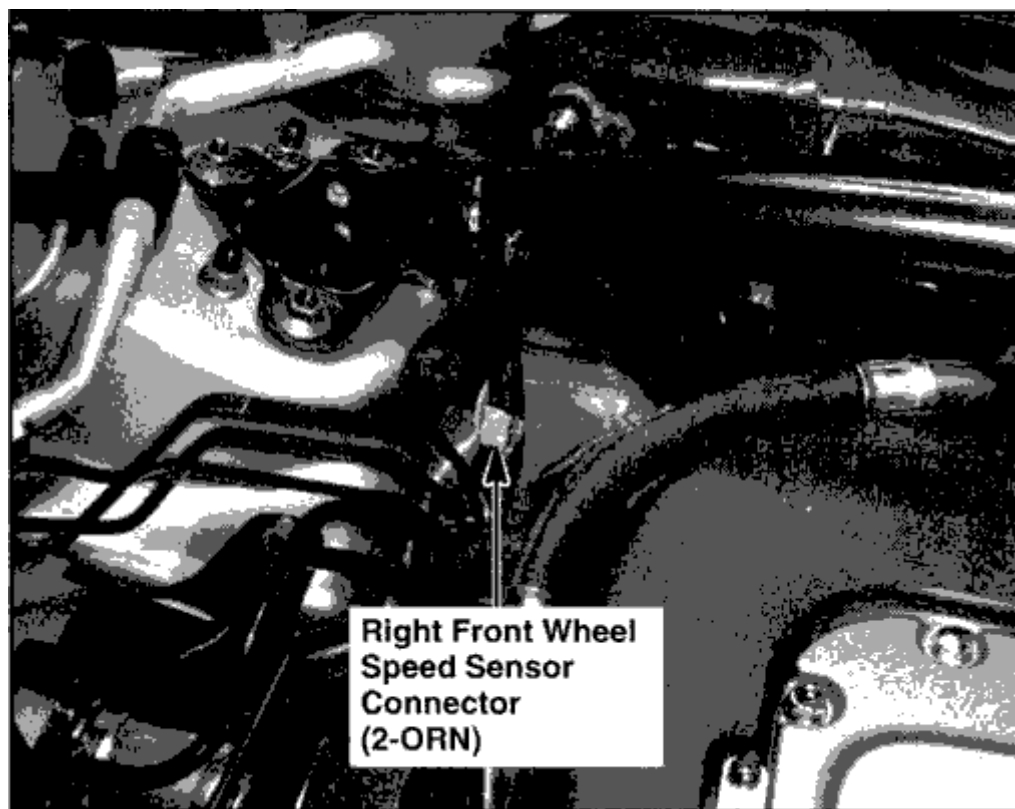

G00288467

 
Fig. 2: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

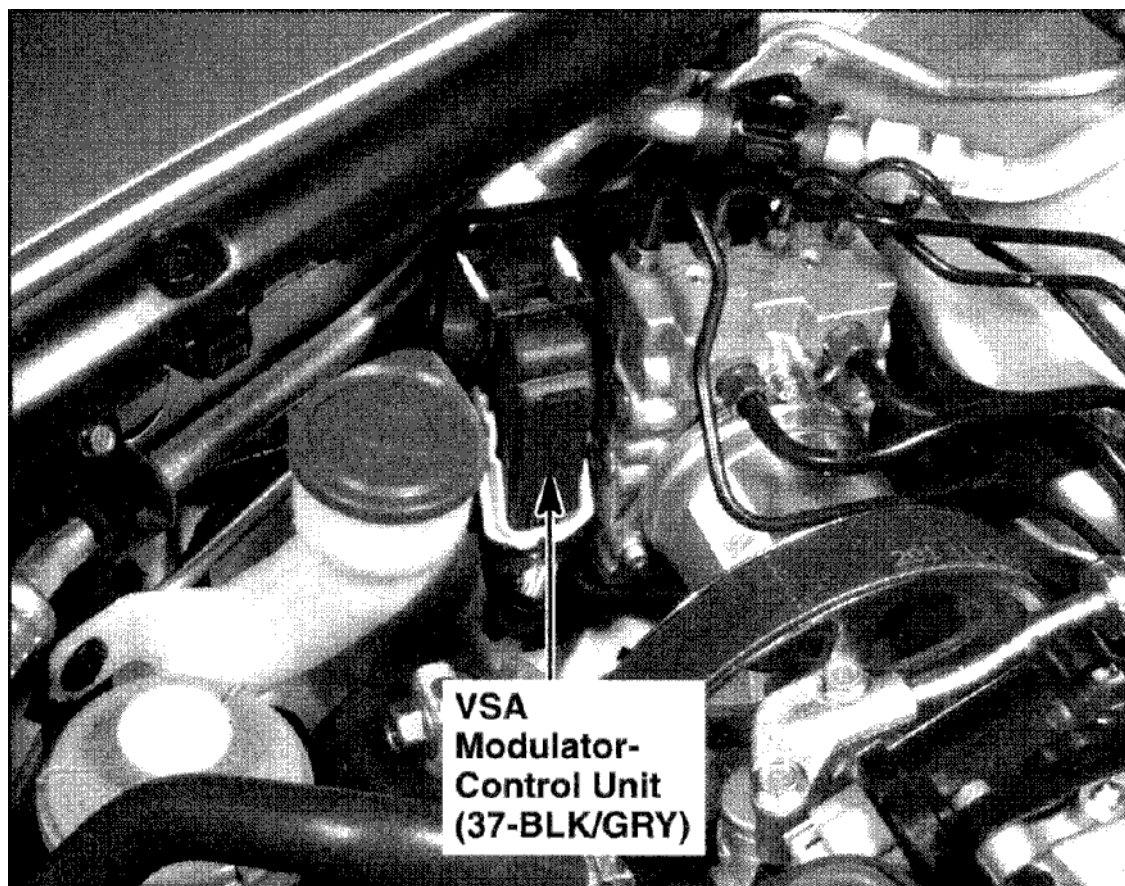

G00447646


Fig. 3: Right Side Of Engine Compartment

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

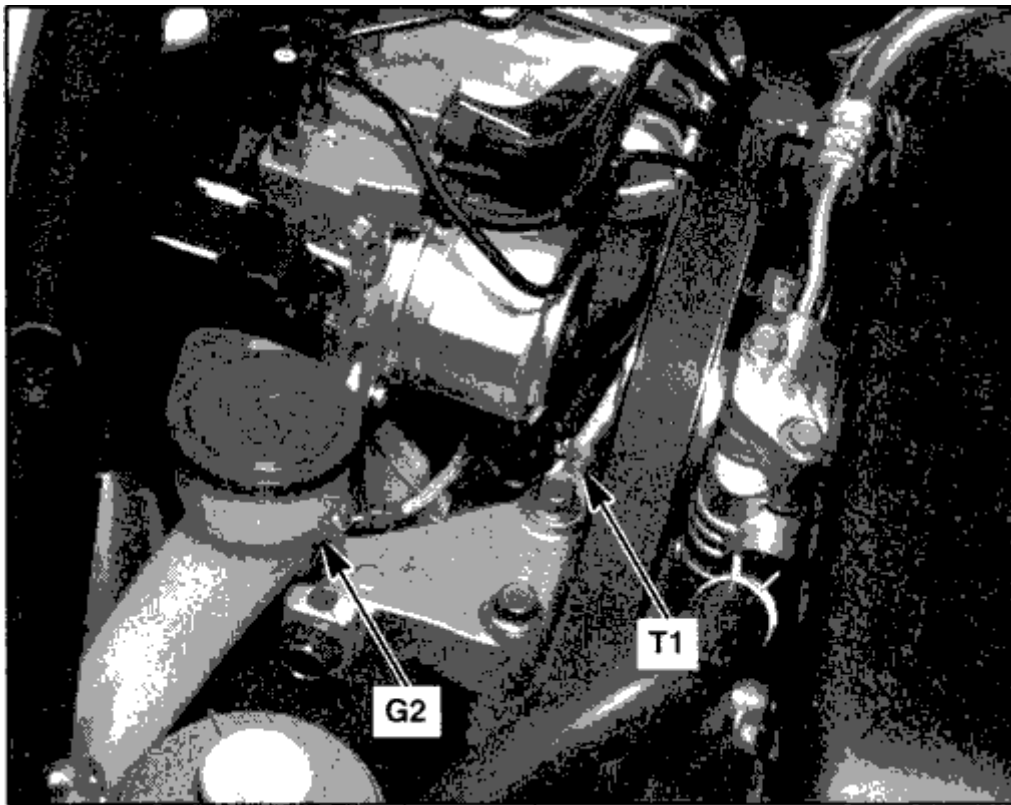

G00288469

 
Fig. 4: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

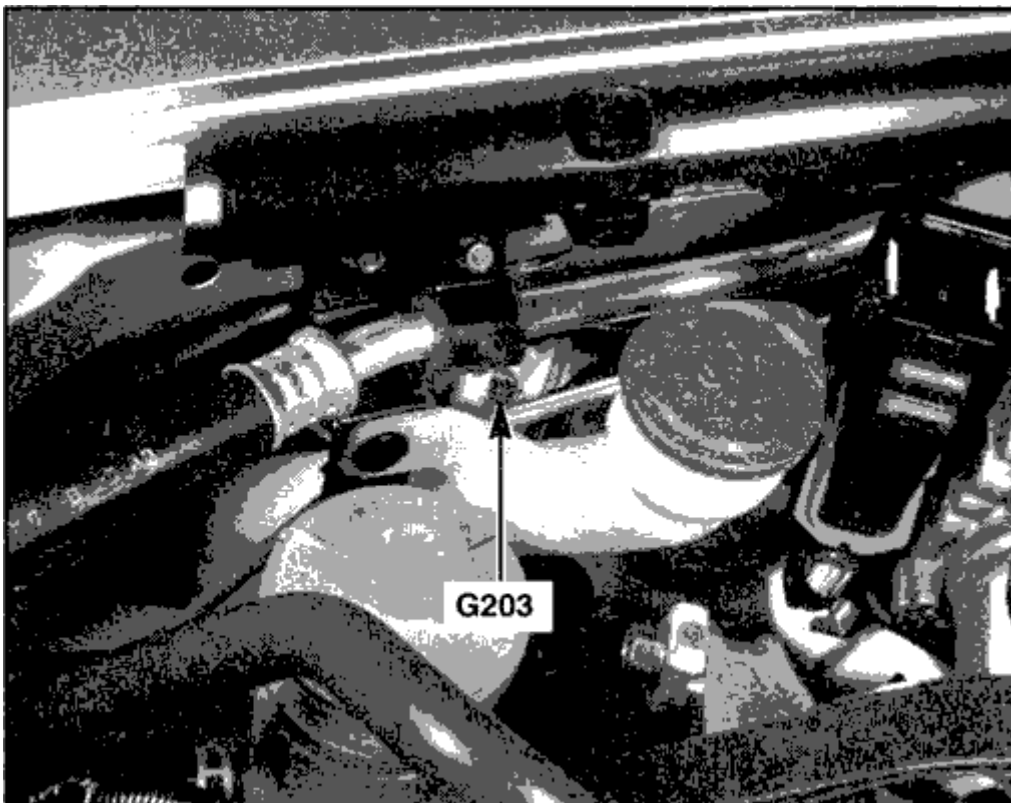

G00288470

Fig. 5: Right Side Of Engine Compartment

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

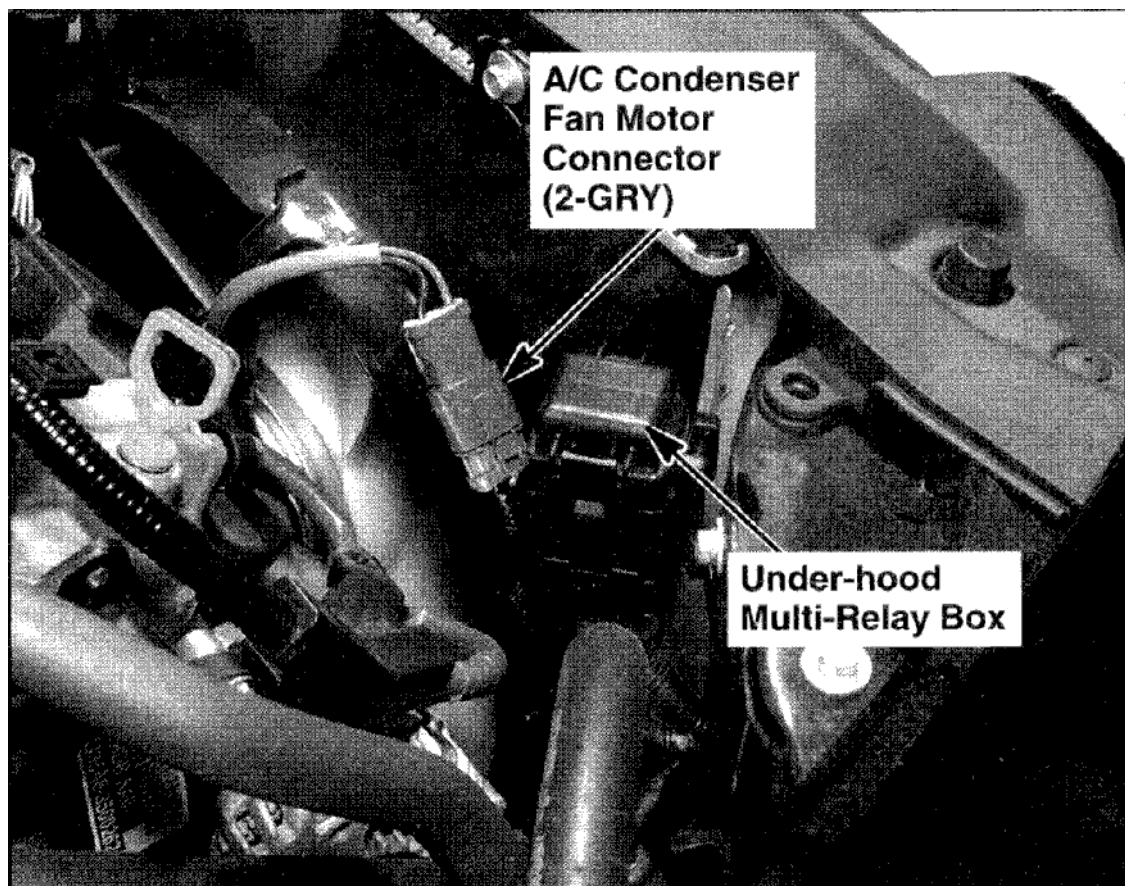

G00447590

Fig. 6: Right Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.


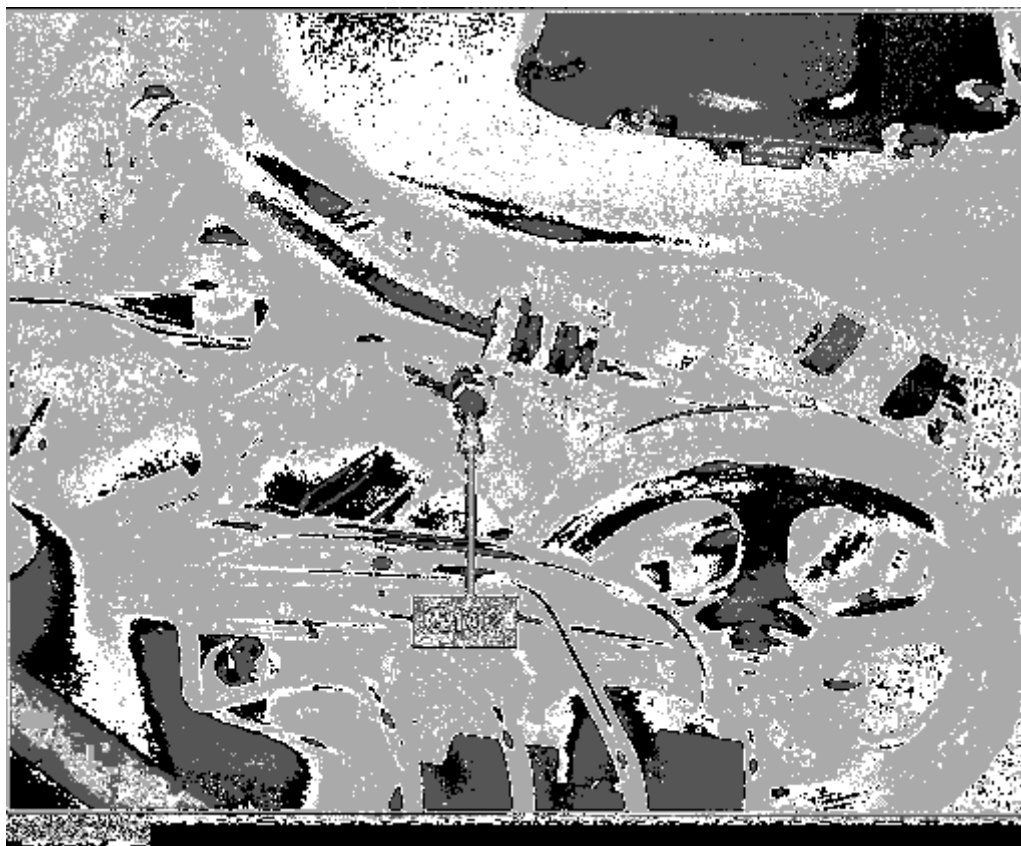 


Fig. 7: Right Side Of Engine

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

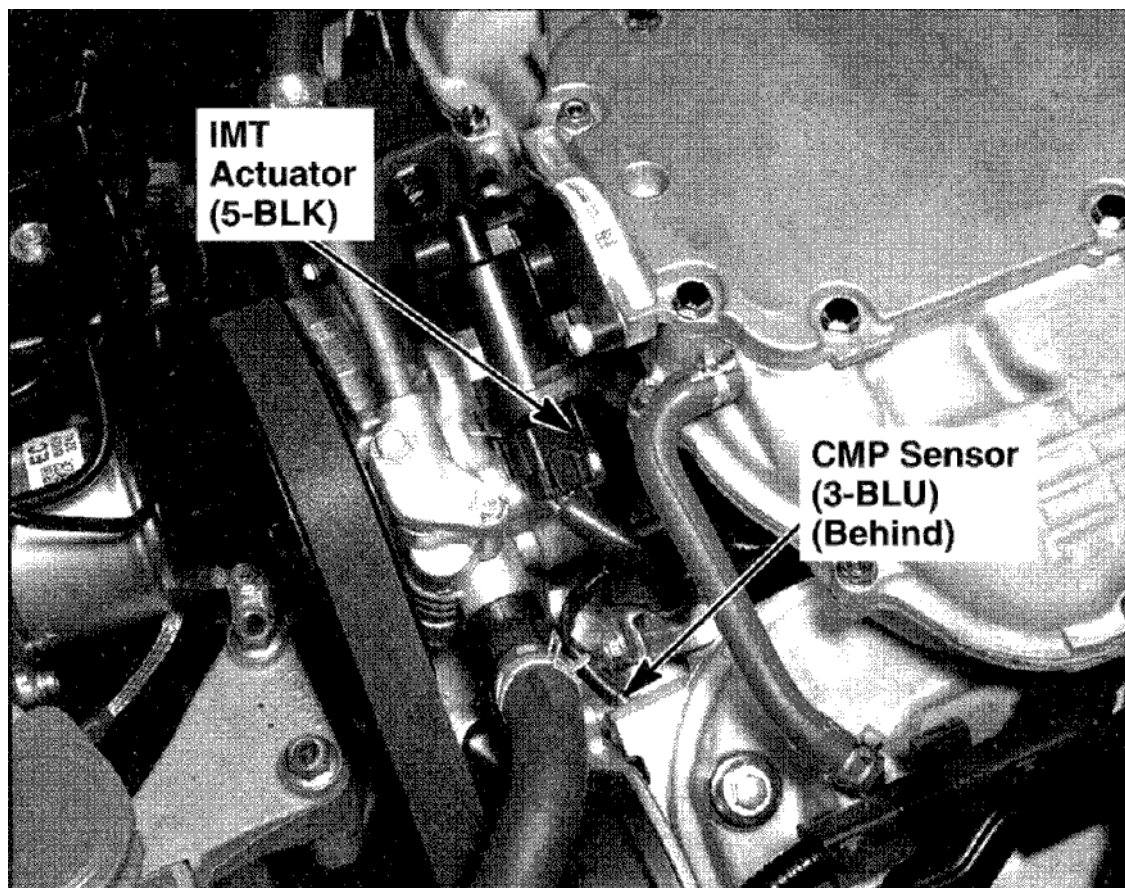

G00447594

Fig. 8: Right Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.


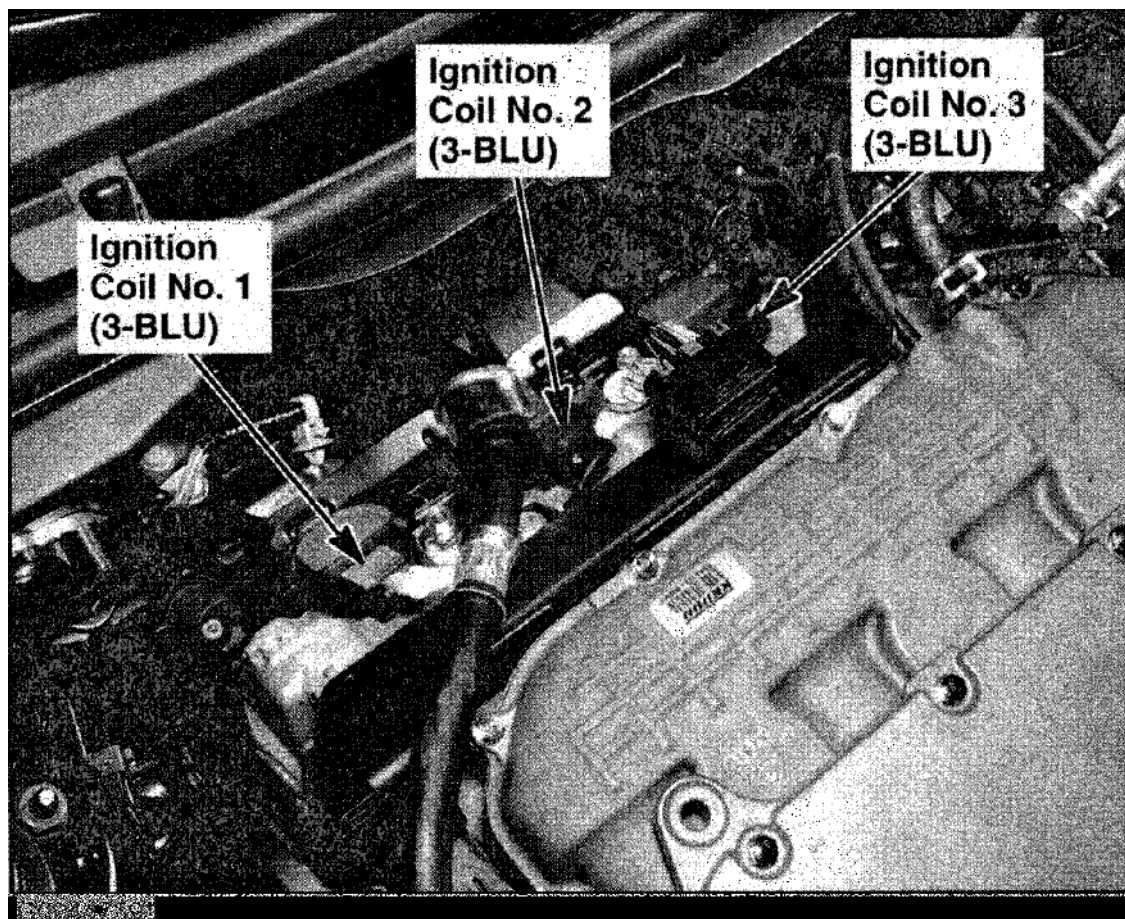 


Fig. 9: Rear Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

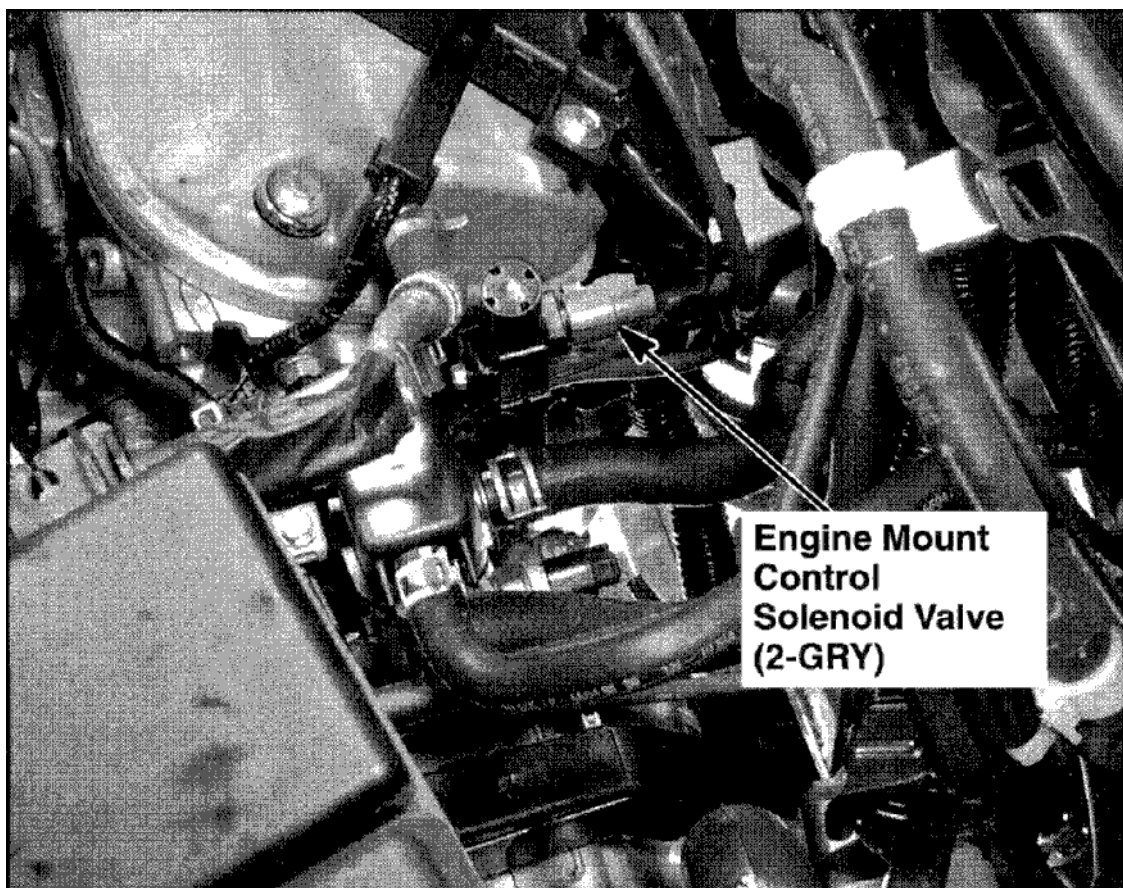

G00447592

Fig. 10: Left Rear Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

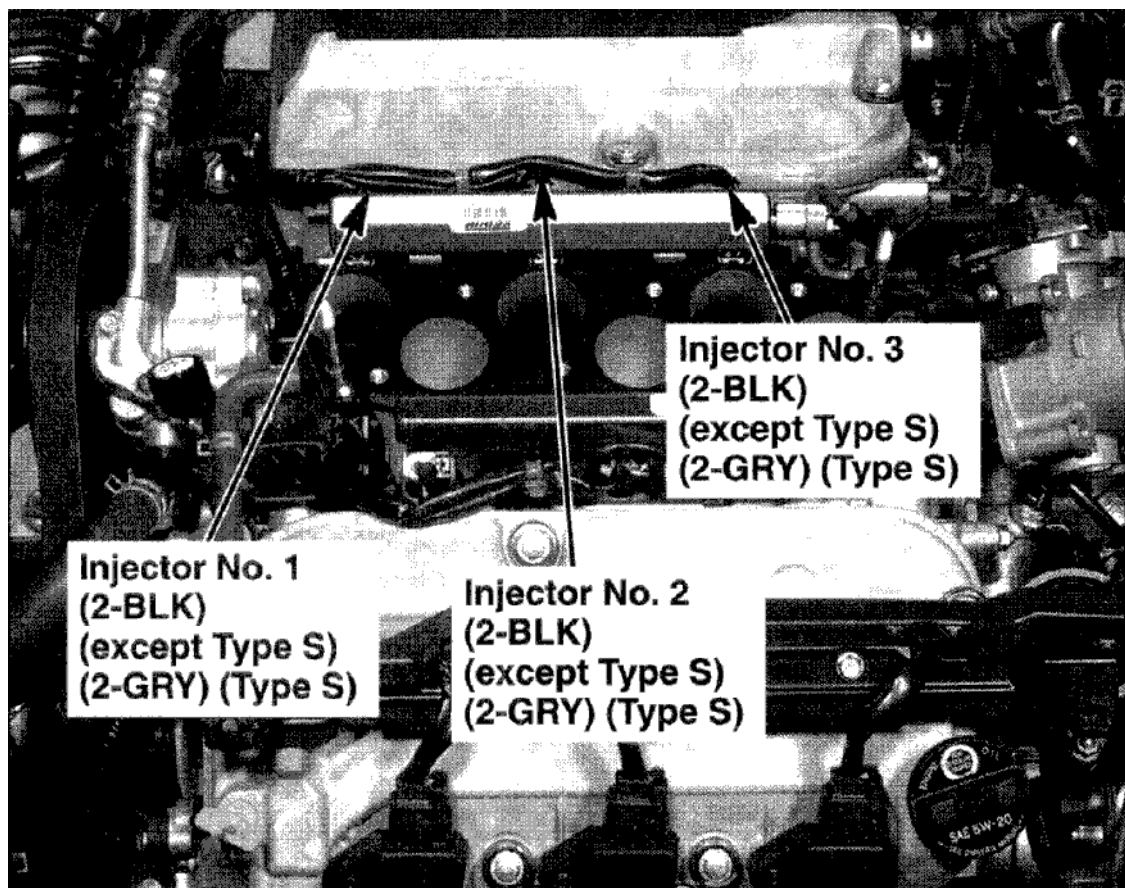

G00447593

Fig. 11: Middle Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

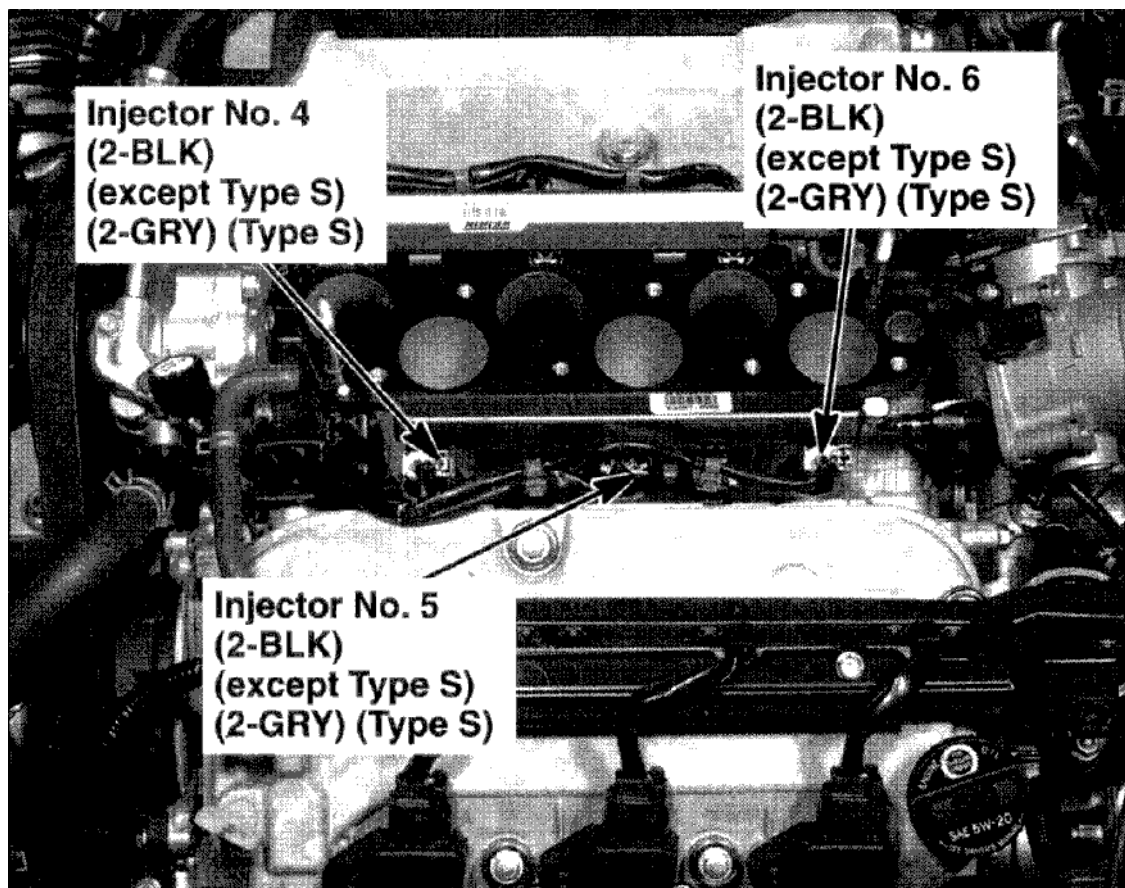

G00447595

Fig. 12: Middle Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

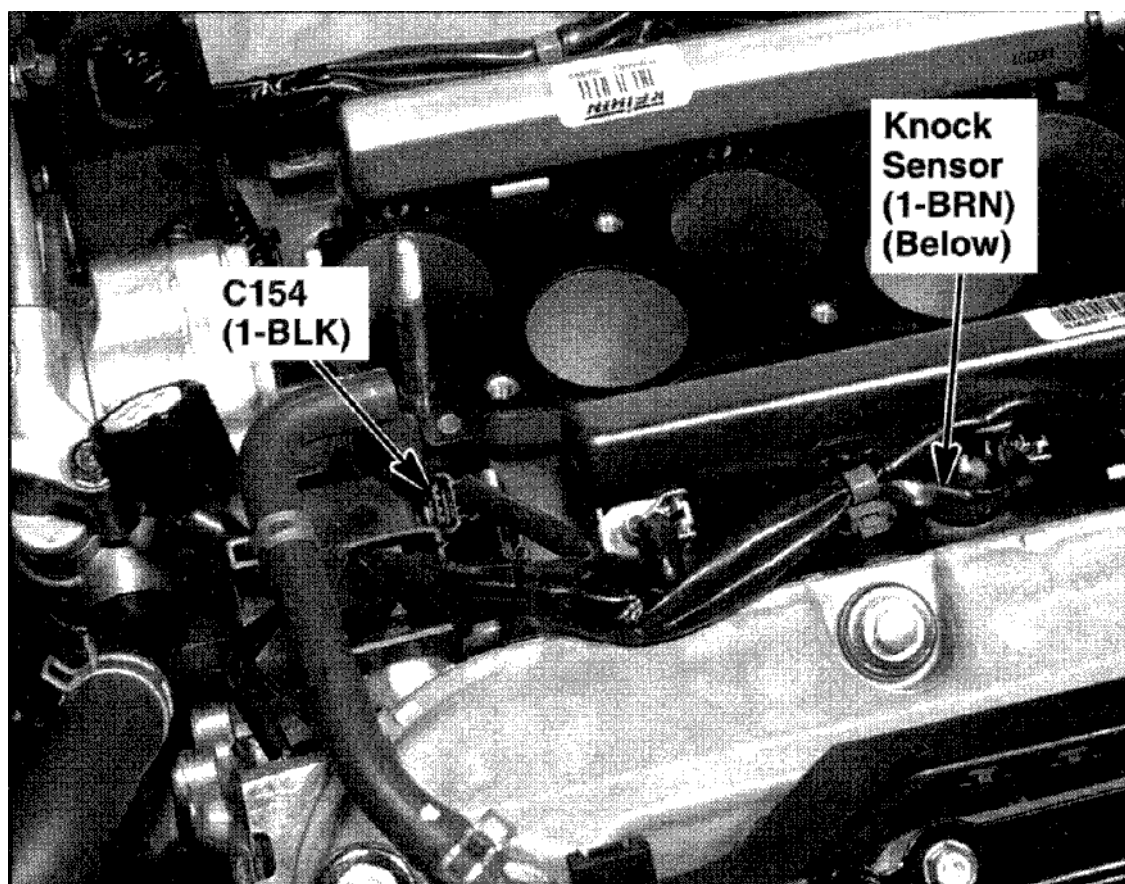

G00447596

Fig. 13: Middle Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

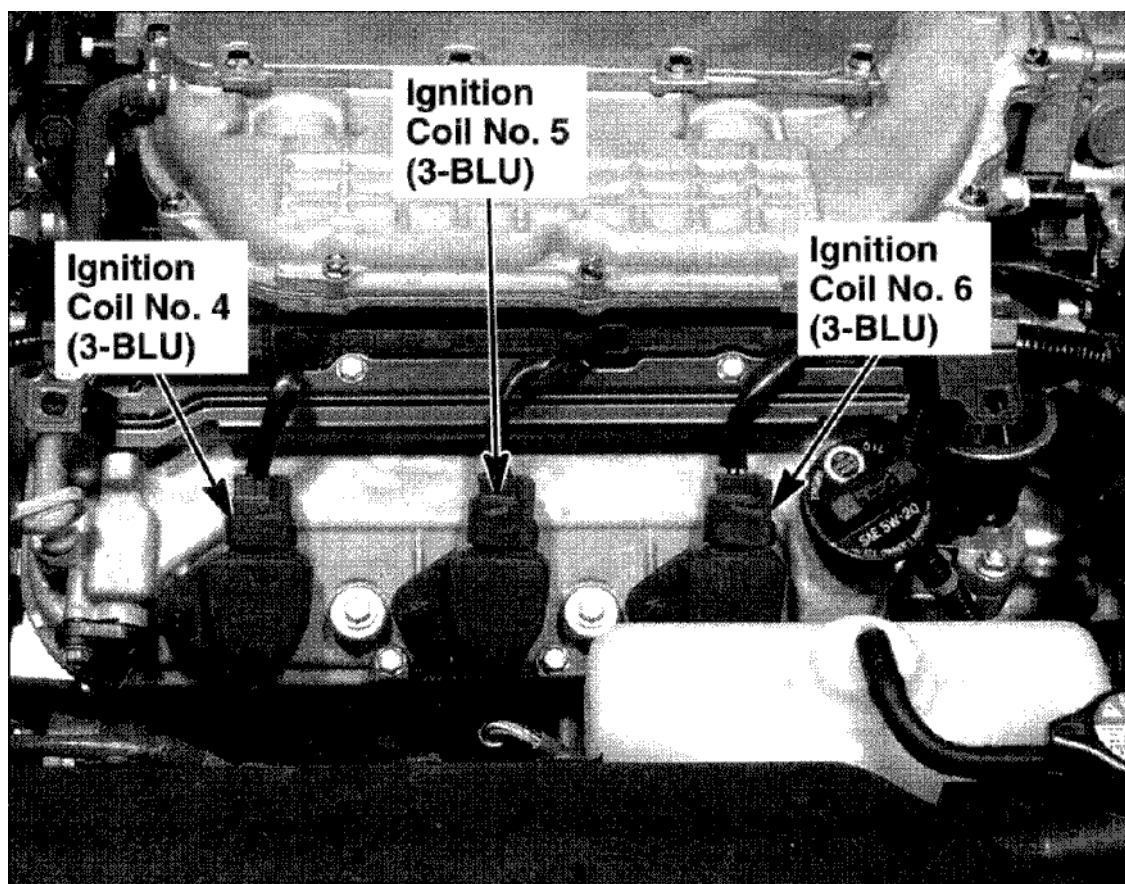

G00447597

Fig. 14: Front Of Engine

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

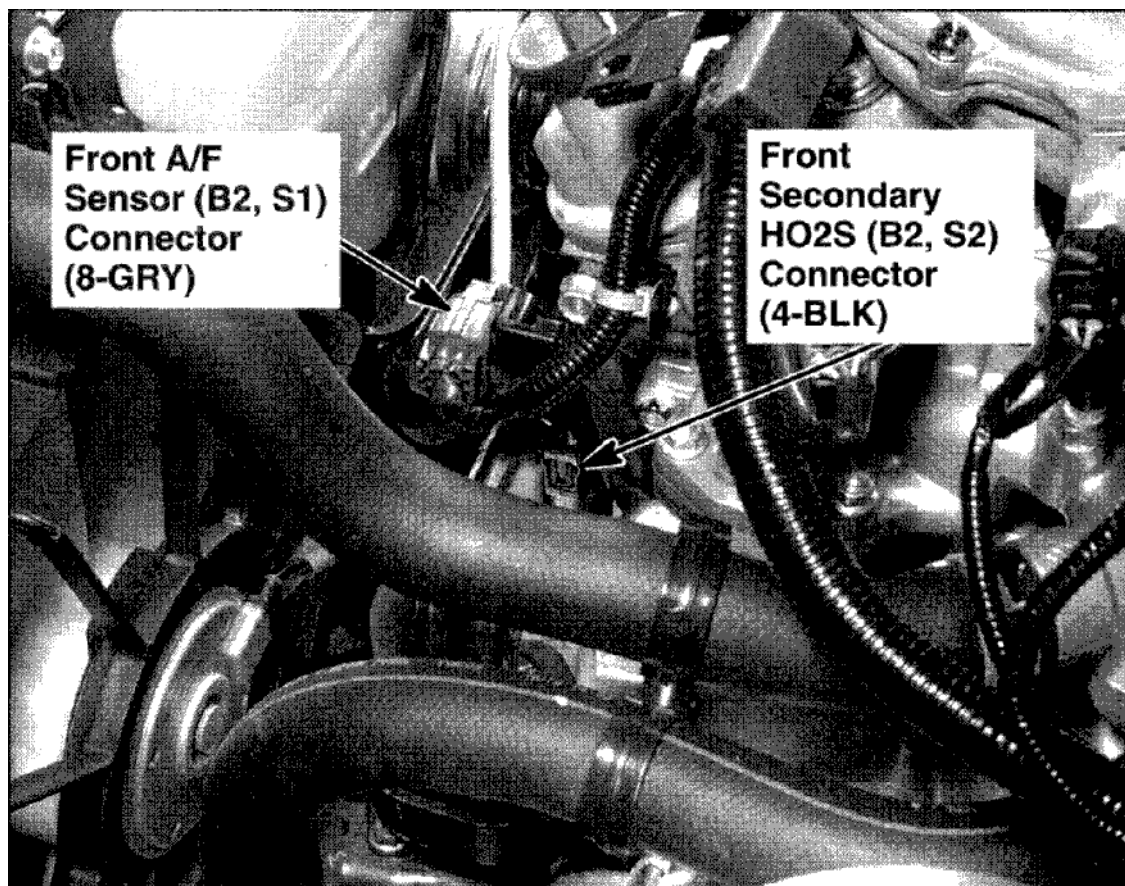

G00447598

Fig. 15: Left Front Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

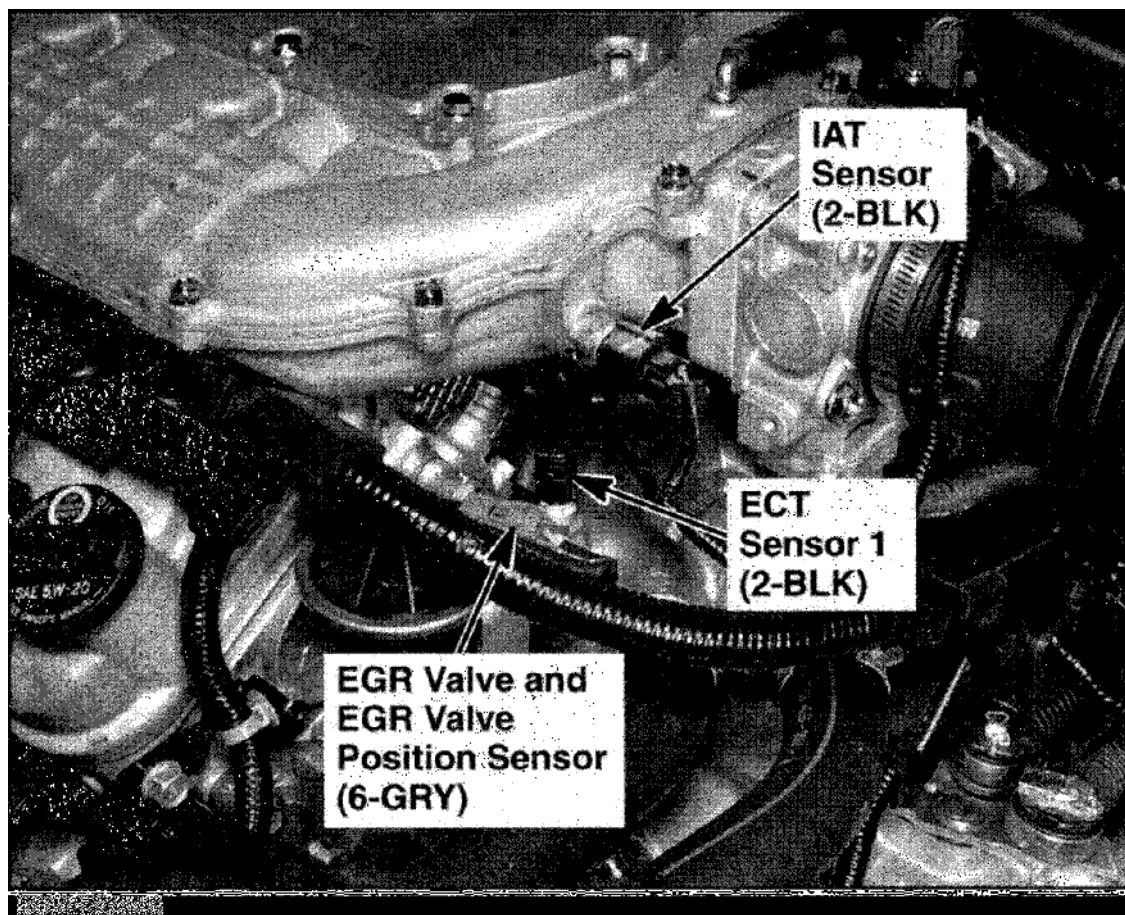 


Fig. 16: Left Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

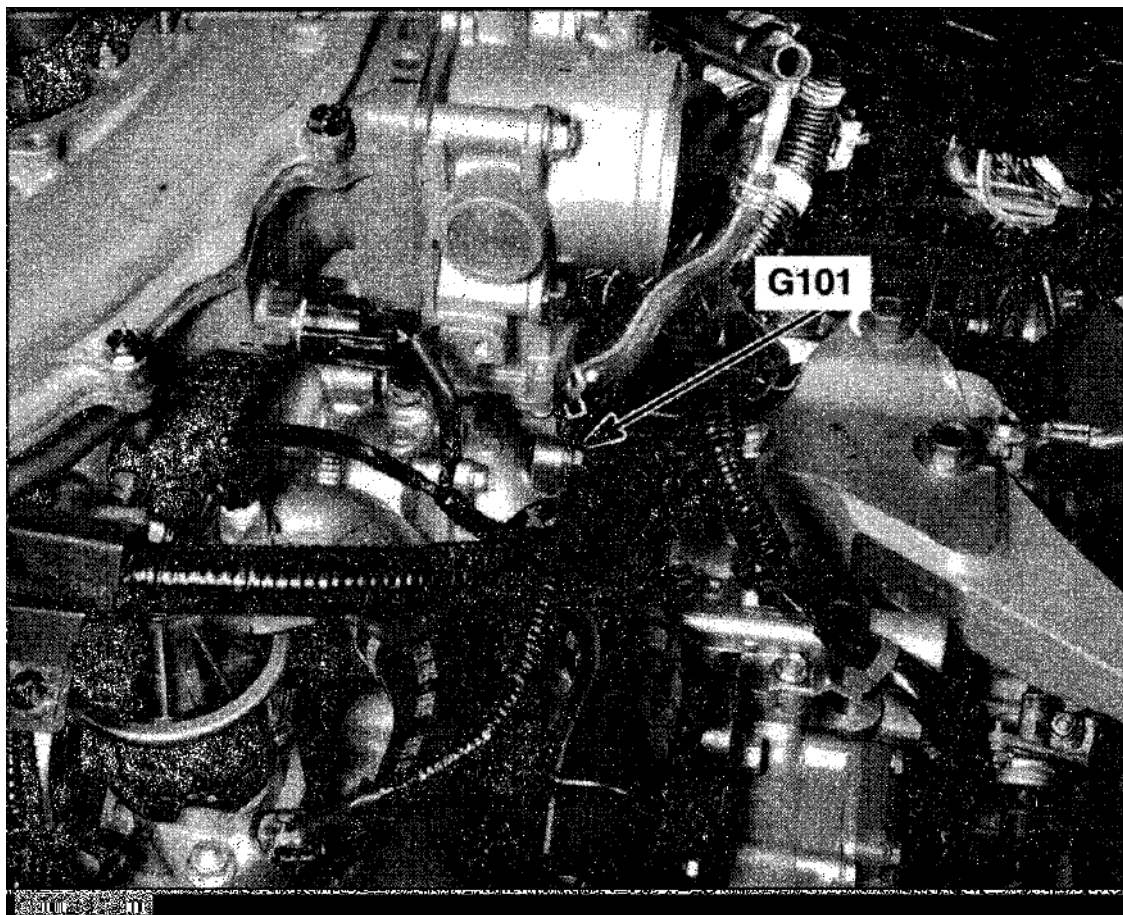 


Fig. 17: Left Side Of Engine (A/T)

Courtesy of AMERICAN HONDA MOTOR CO., INC.


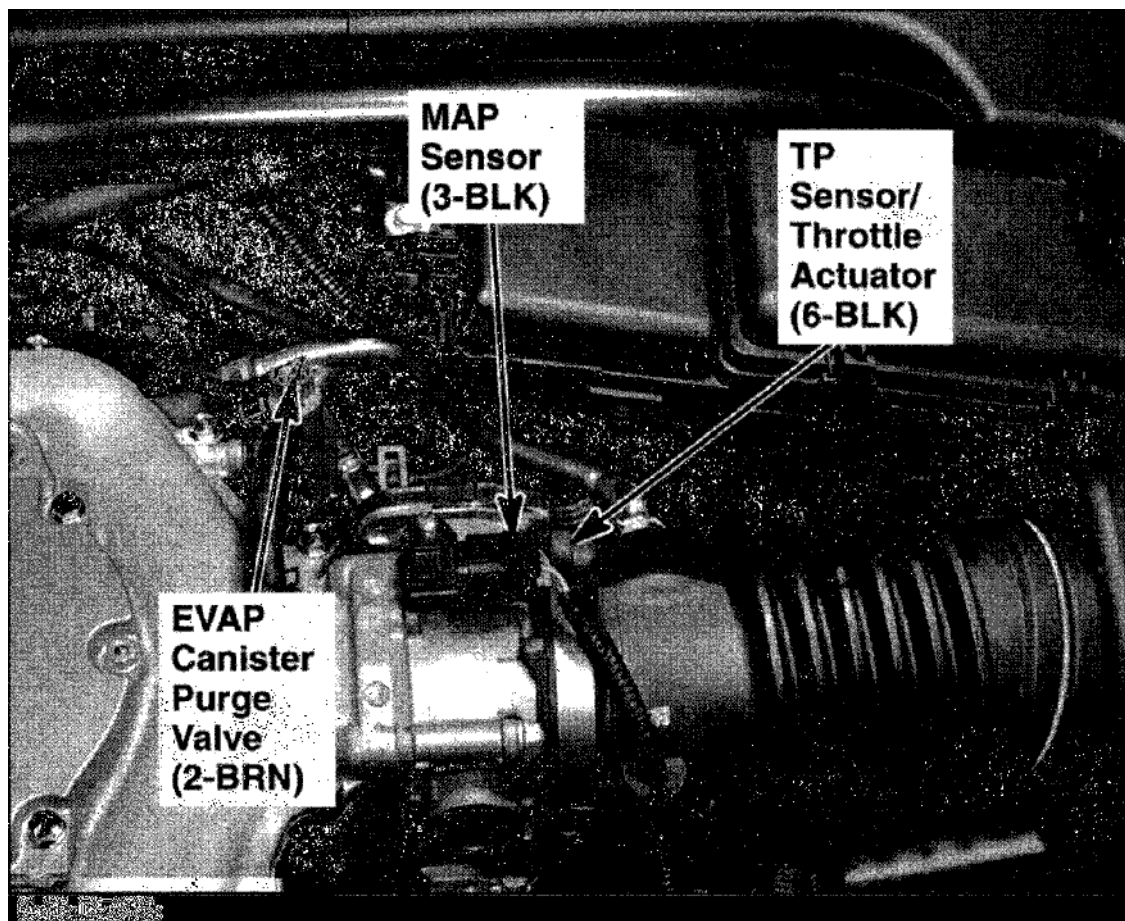 


Fig. 18: Left Side Of Engine

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

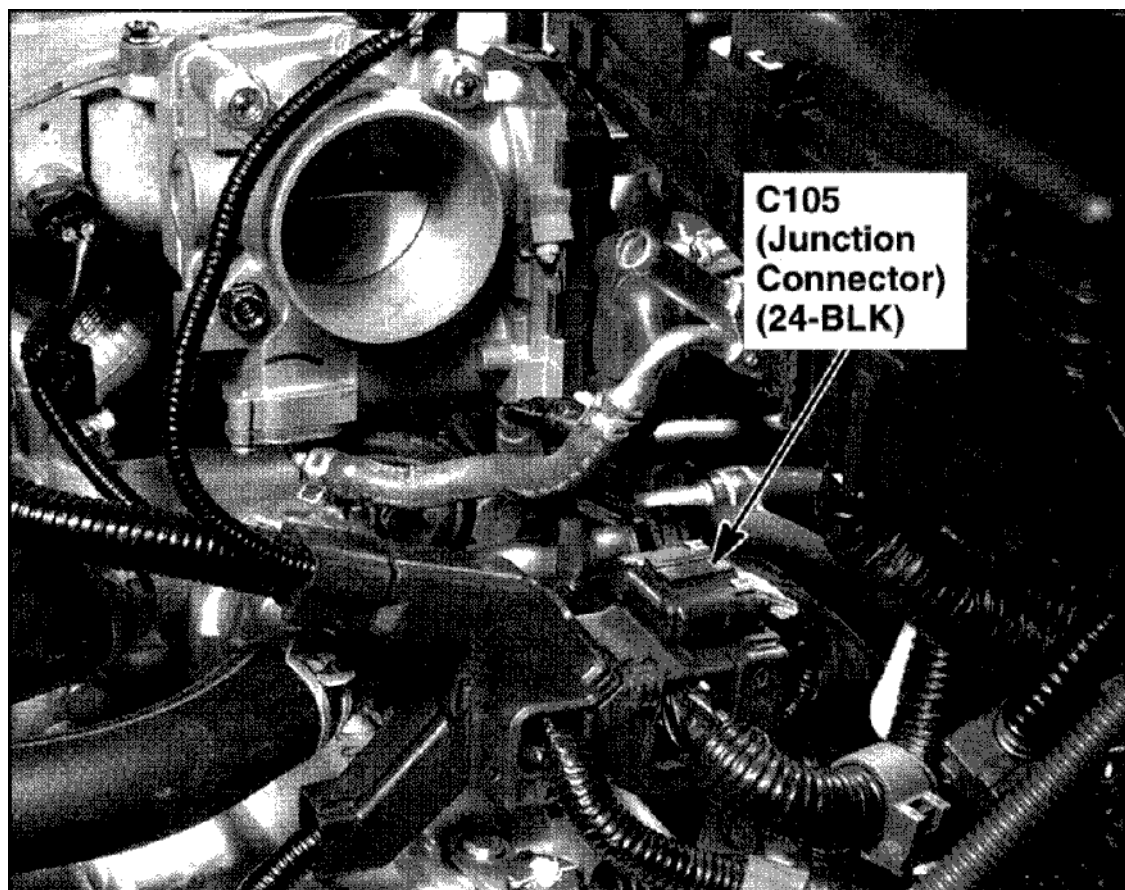

G00447602

Fig. 19: Left Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.


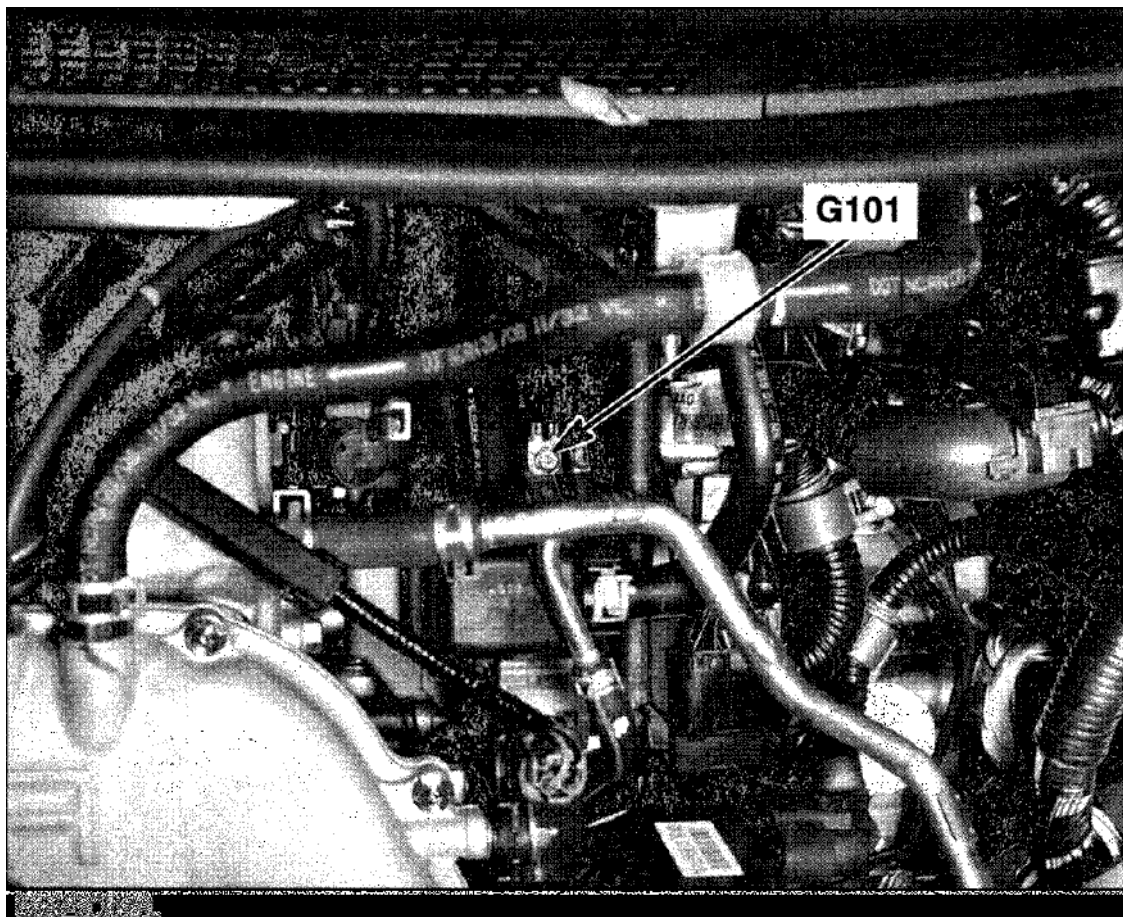 


Fig. 20: Left Side Of Engine (M/T)

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

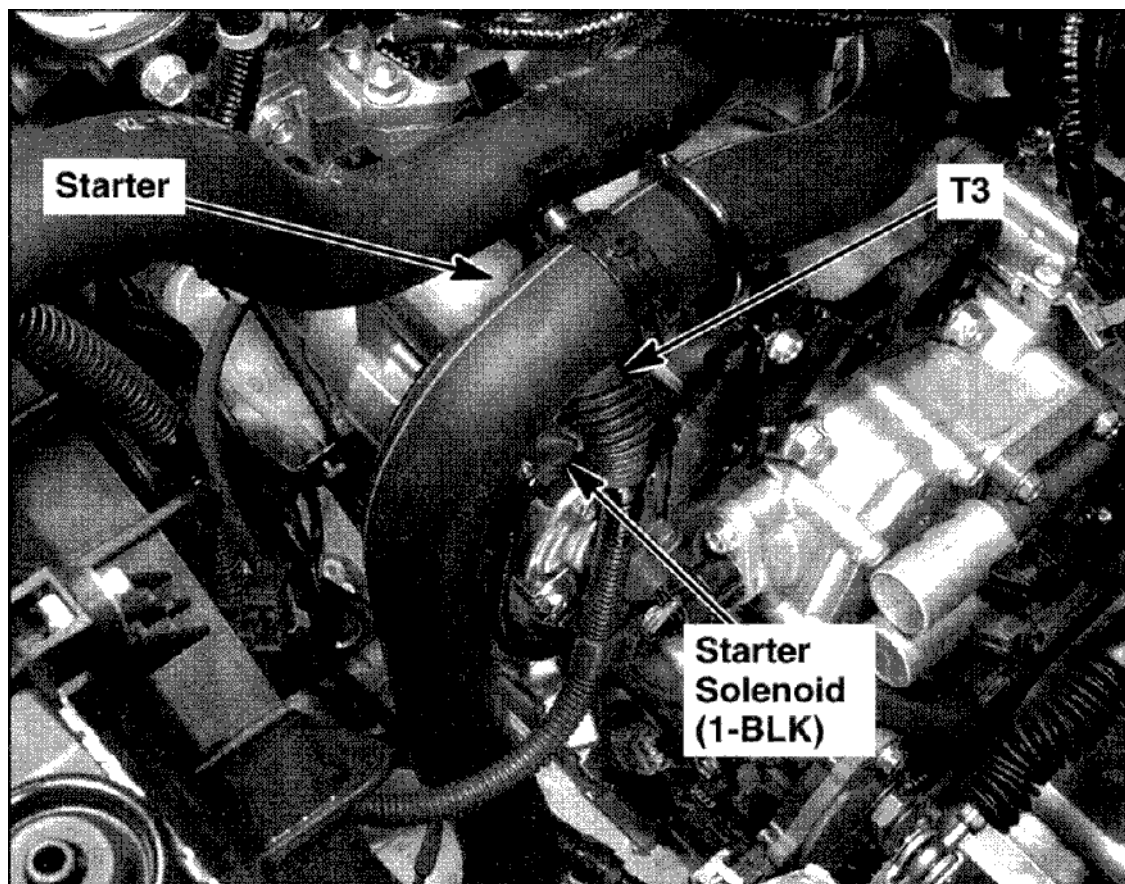


G00447605

Fig. 21: Transmission Housing

Courtesy of AMERICAN HONDA MOTOR CO., INC.



 Fig. 22: Transmission Housing (M/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

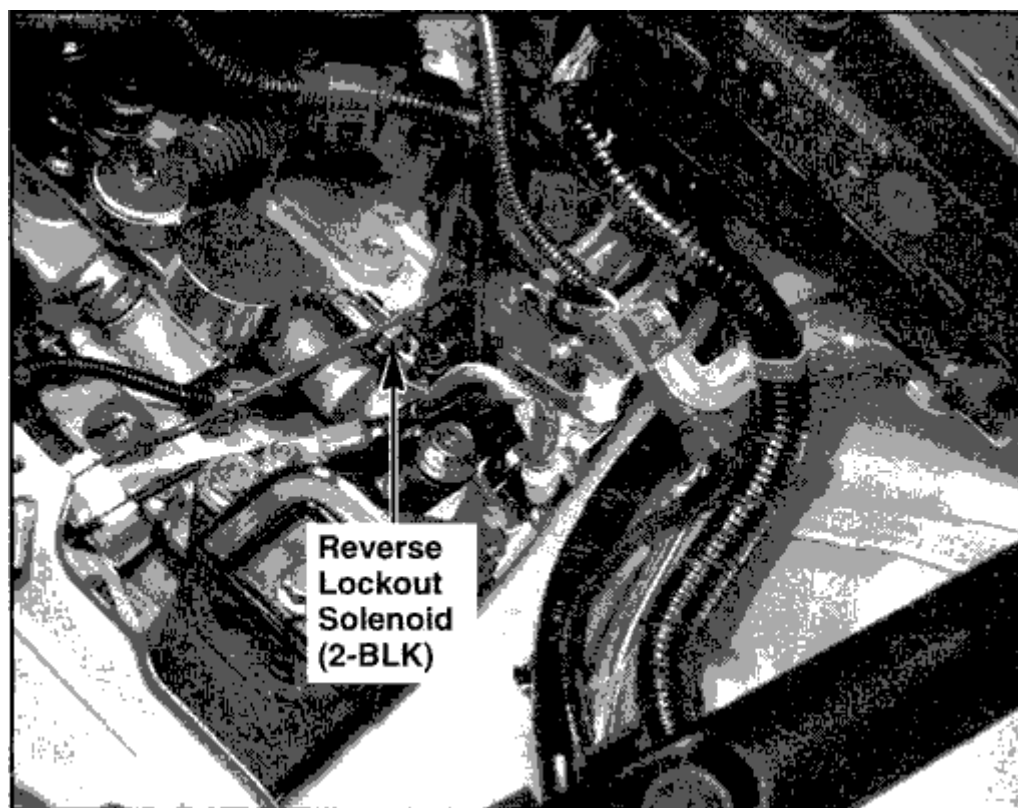

G00288490

Fig. 23: Transmission Housing (M/T)

Courtesy of AMERICAN HONDA MOTOR CO., INC.


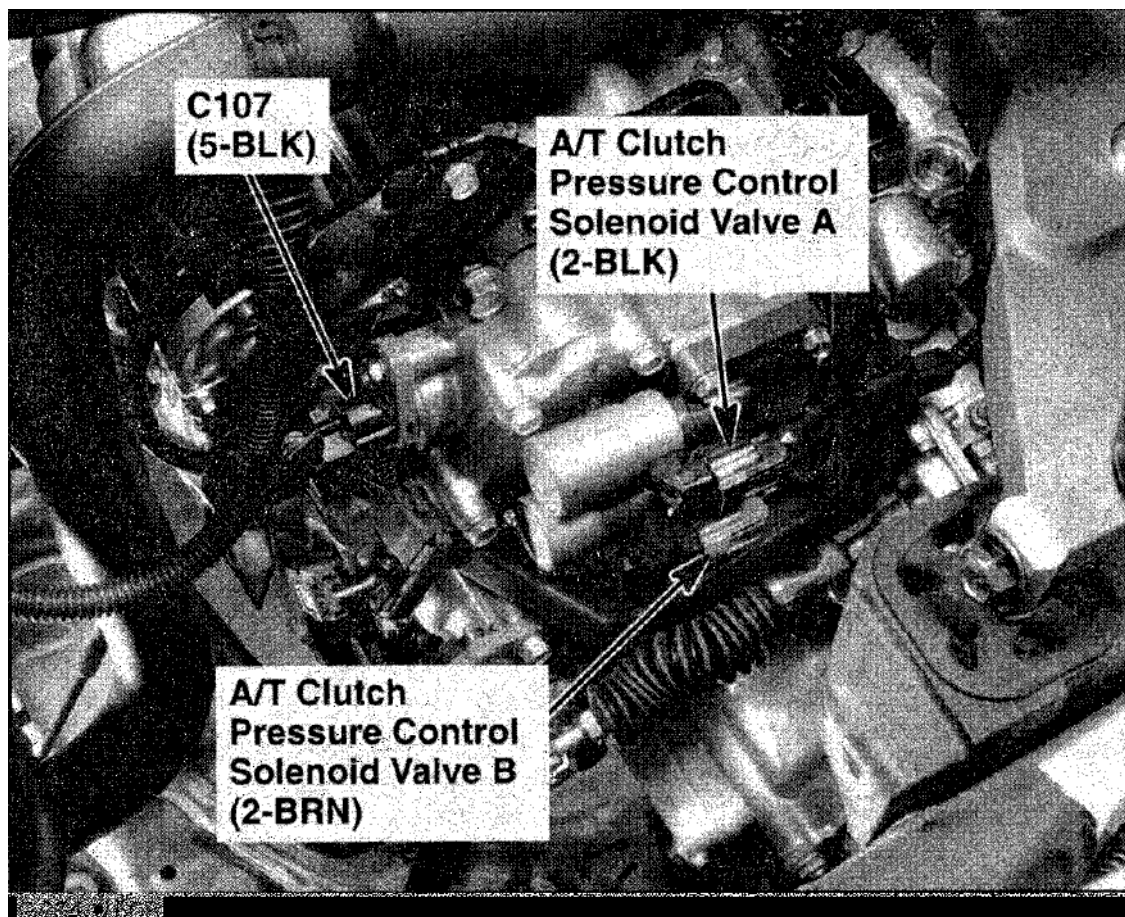 


Fig. 24: Transmission Housing (A/T)

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

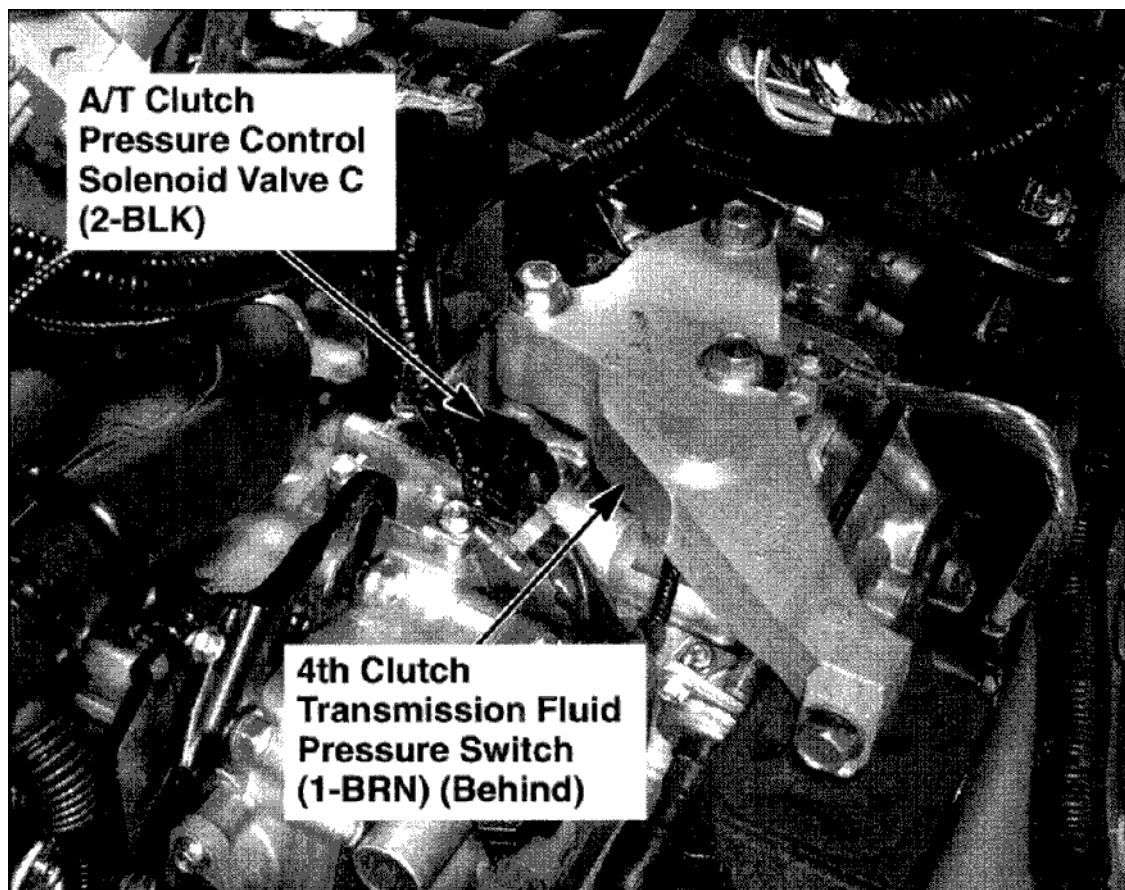

G00447609

Fig. 25: Transmission Housing (A/T)

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

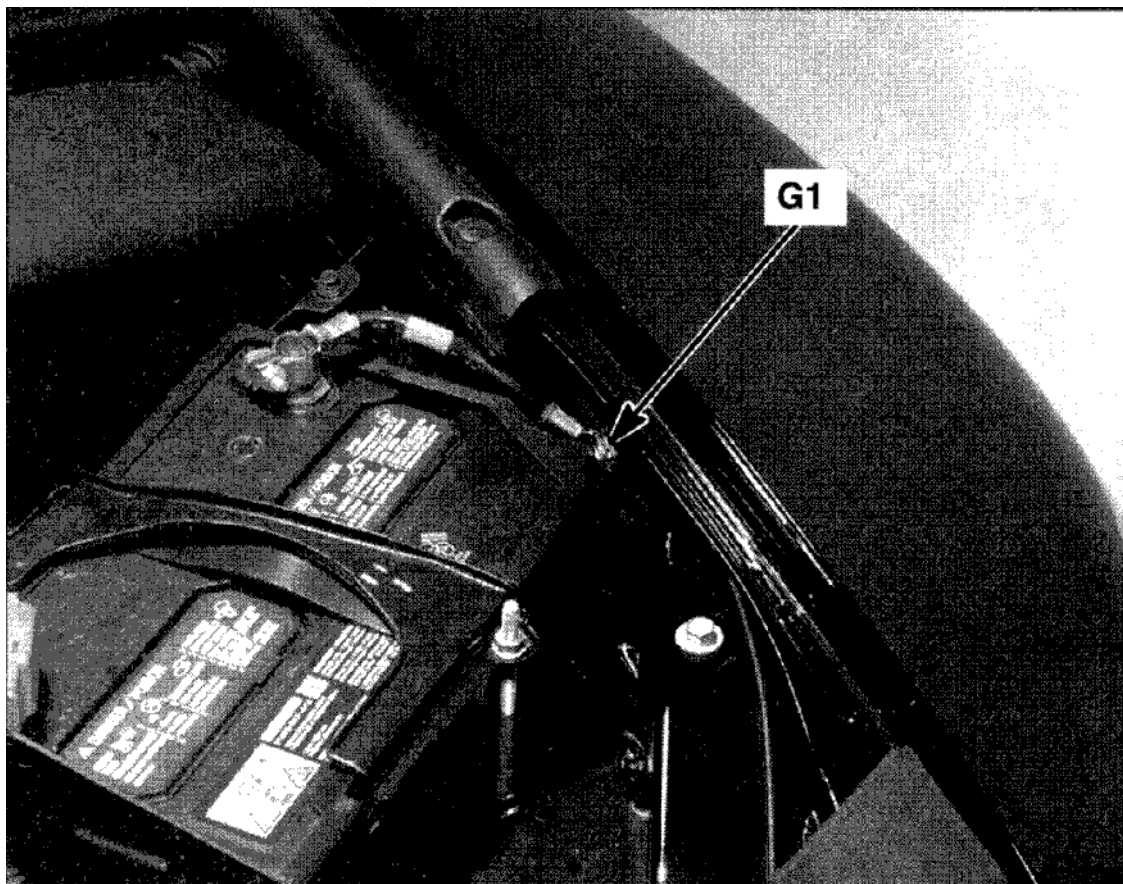

G00447611

Fig. 26: Left Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.


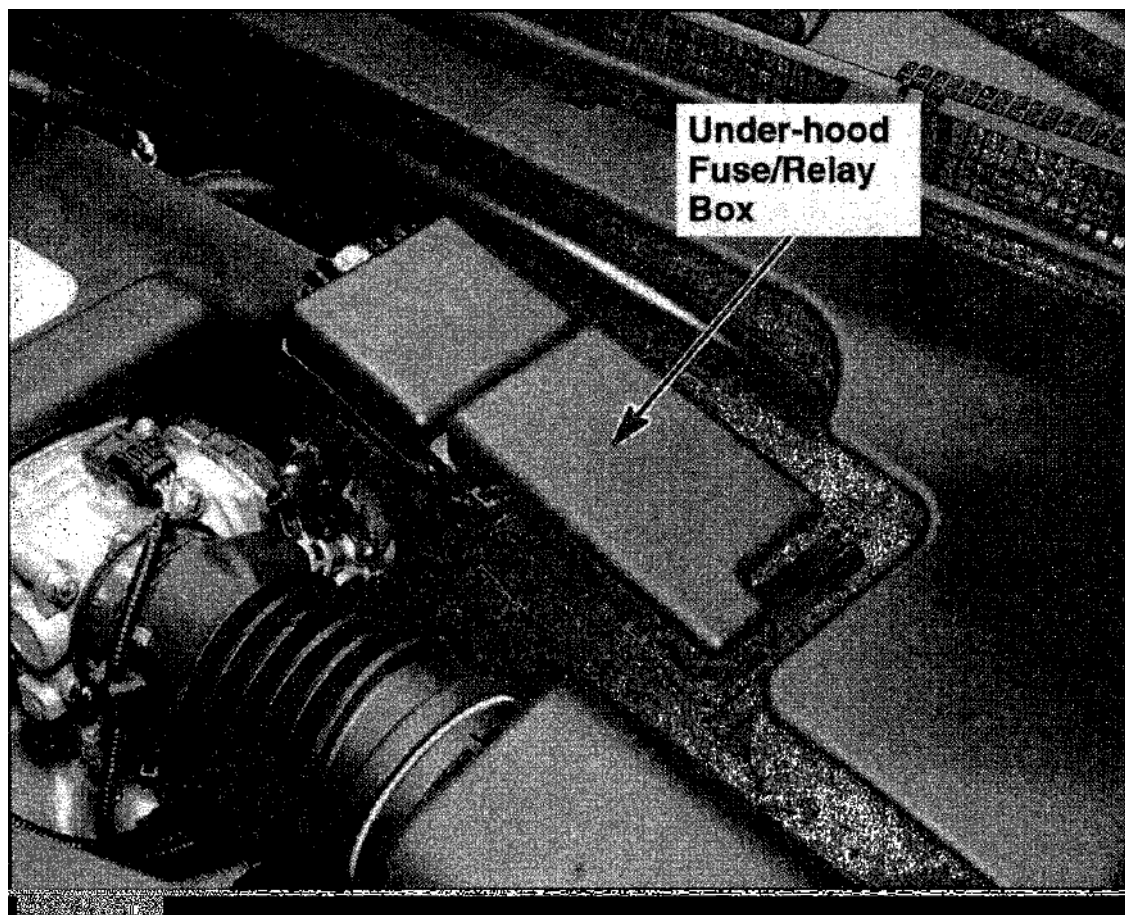 



Fig. 27: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

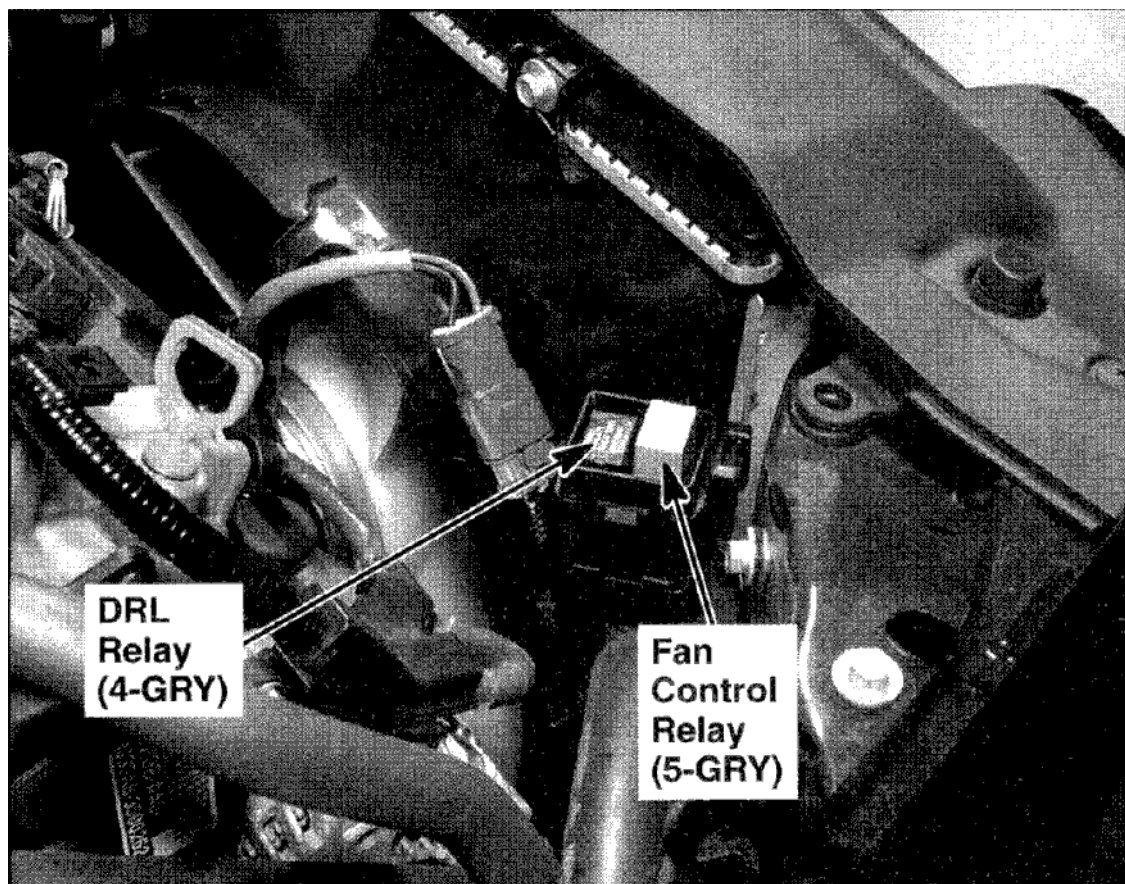 

G00447613

Fig. 28: Right Side Of Engine Compartment

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

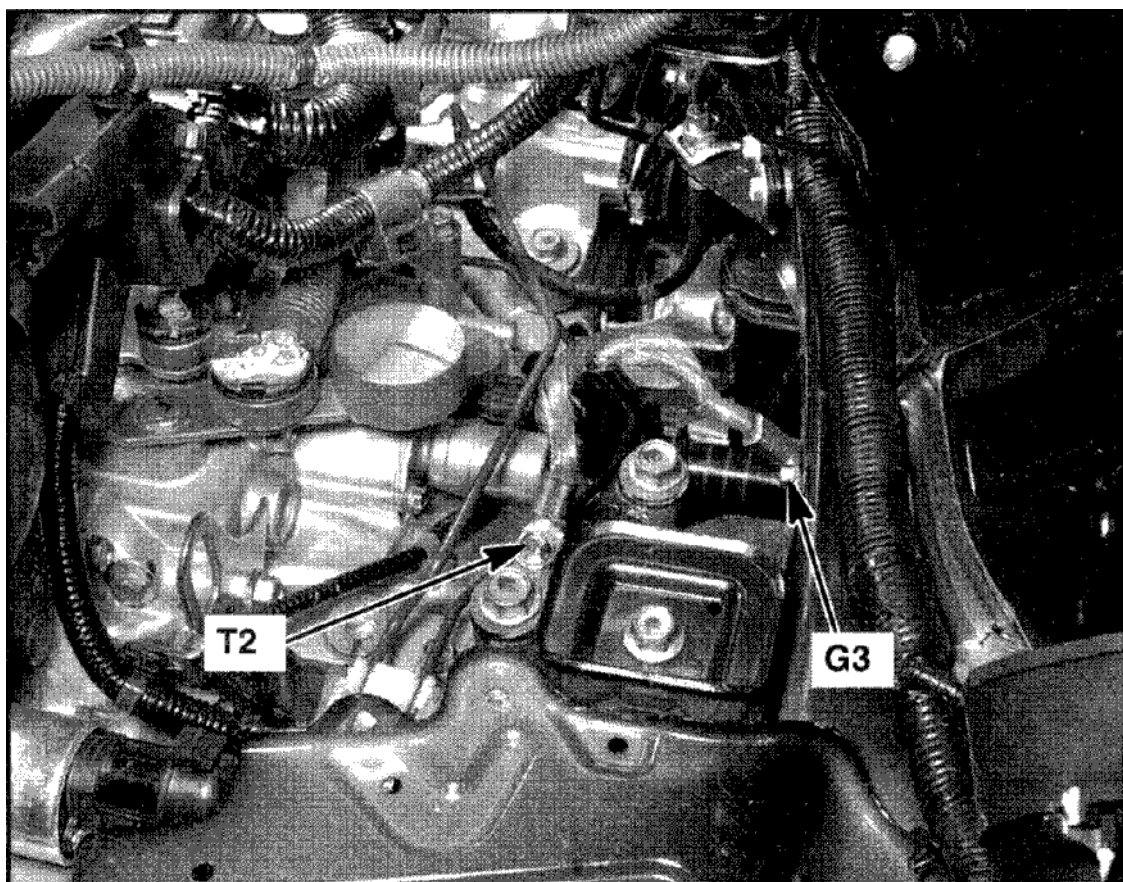


G00447614

Fig. 29: Left Side Of Engine Compartment (M/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00288504

 
Fig. 30: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

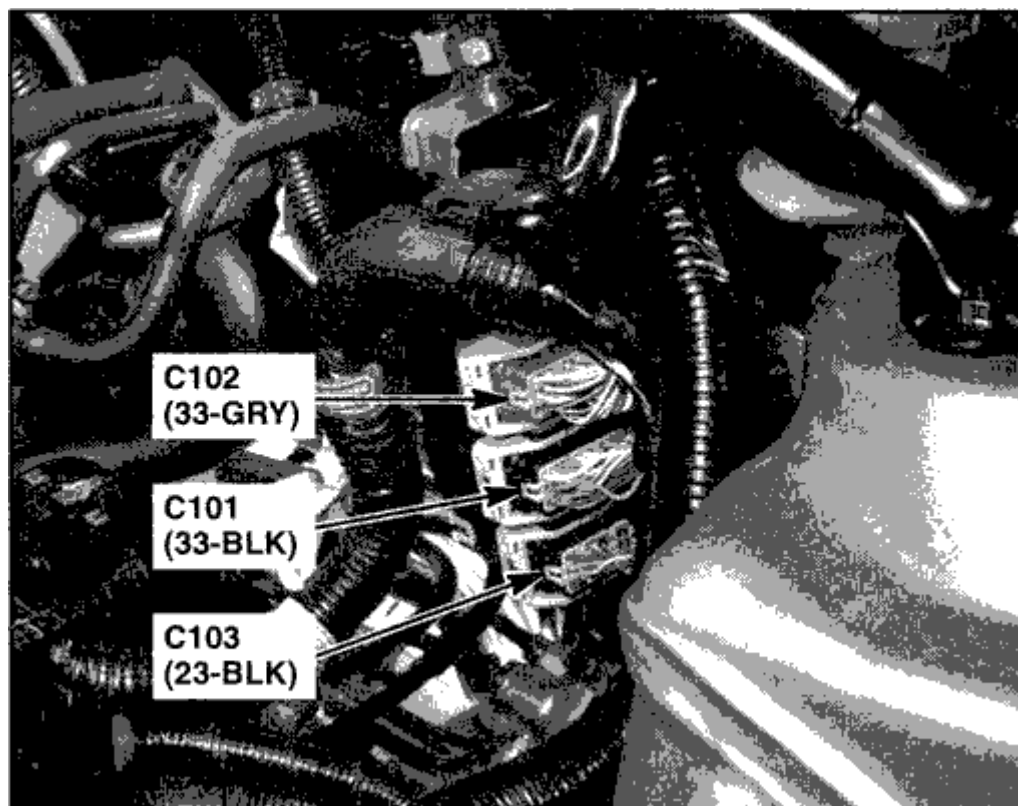

G00288505

Fig. 31: Left Side Of Engine Compartment

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

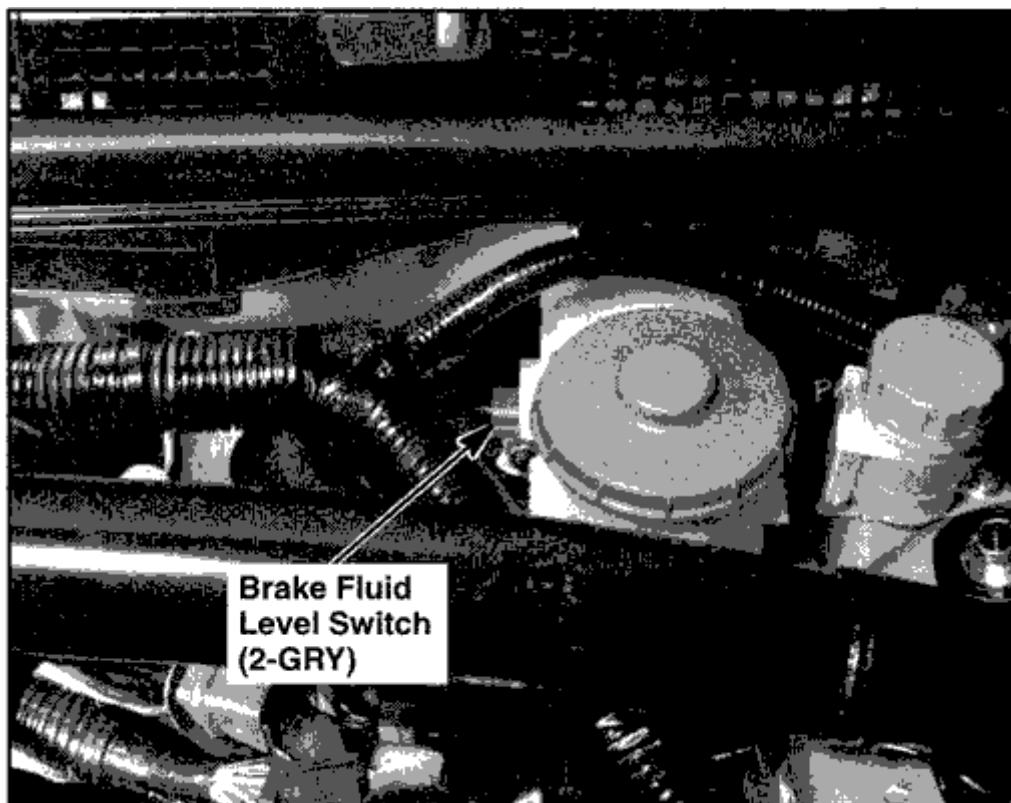

G00288506

Fig. 32: Left Side Of Engine Compartment


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00288507

Fig. 33: Left Side Of Cowl Cover

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

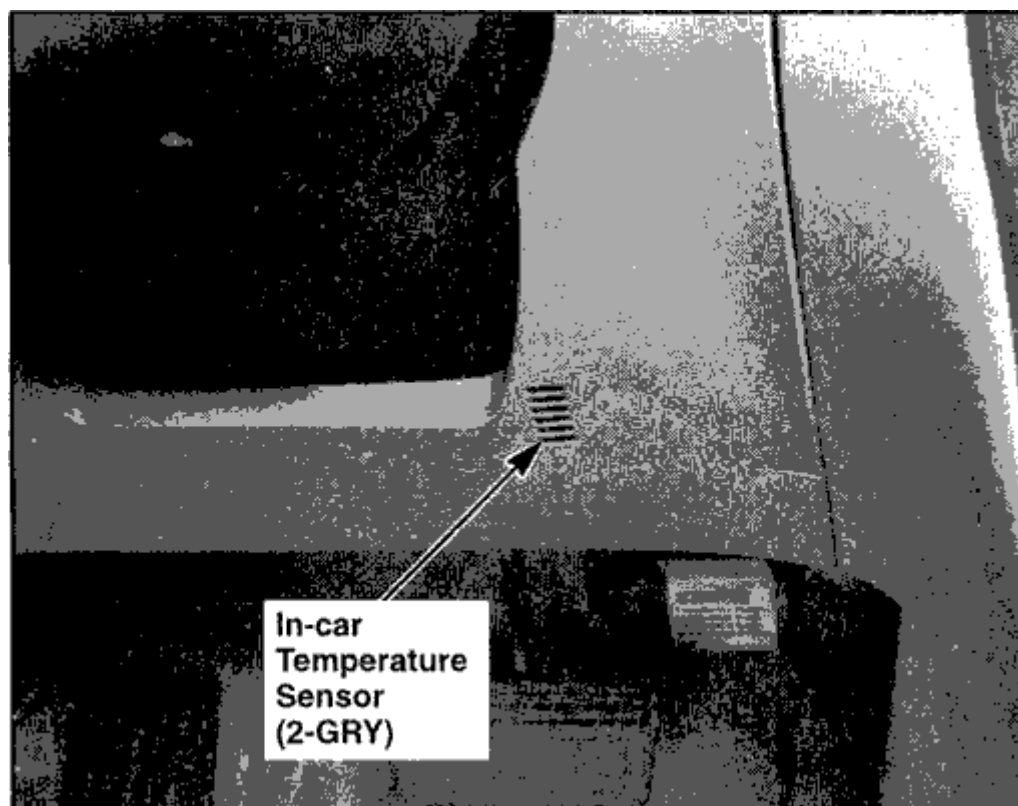

G00288514

Fig. 34: Left Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

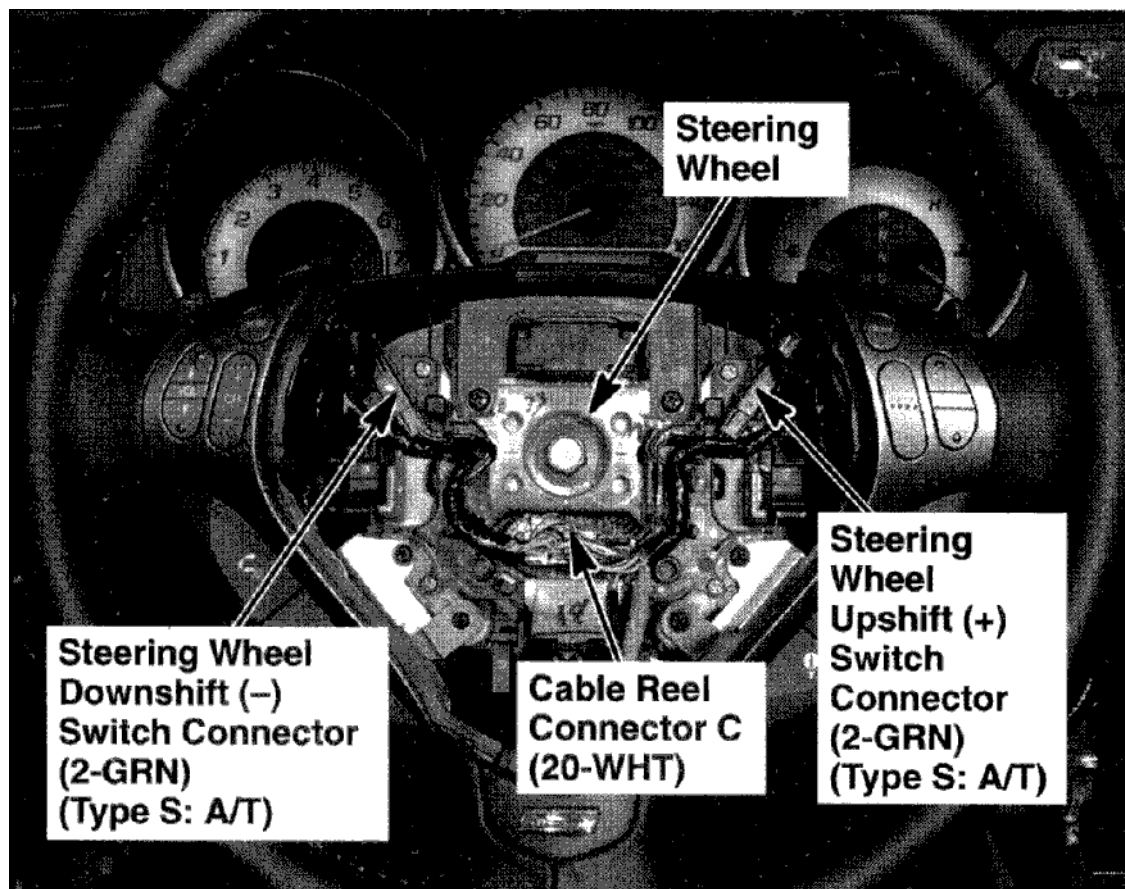

G00447616


Fig. 35: Steering Wheel

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

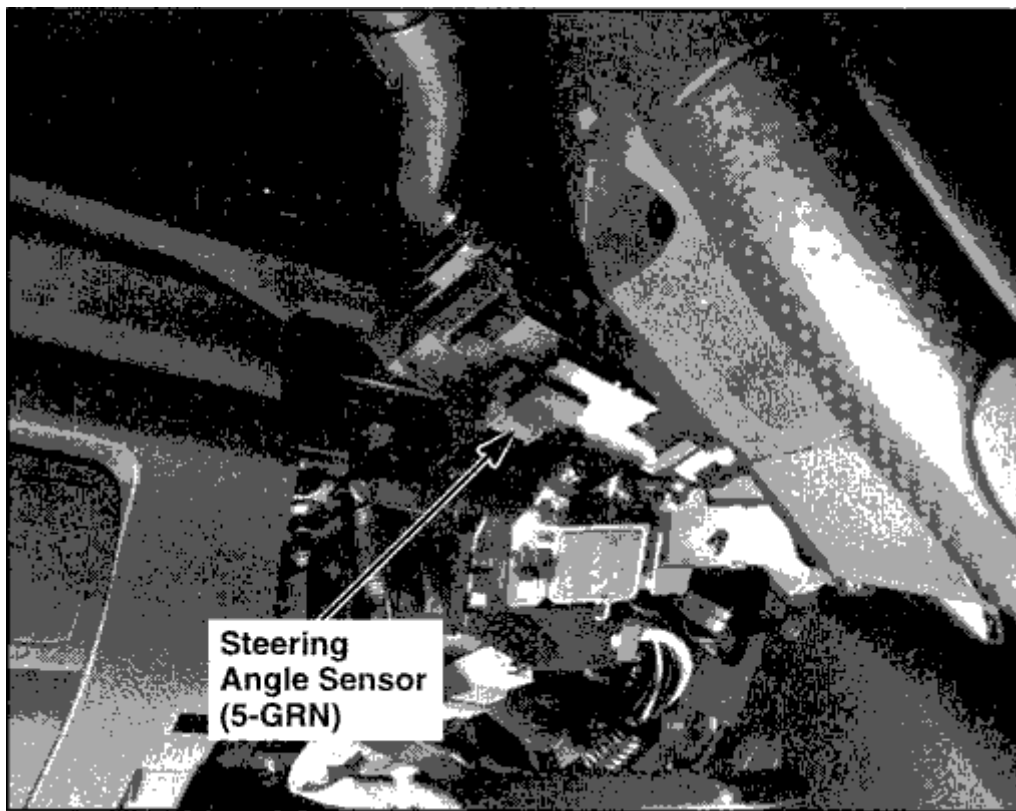

G00288517

 
Fig. 36: Under Steering Column Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

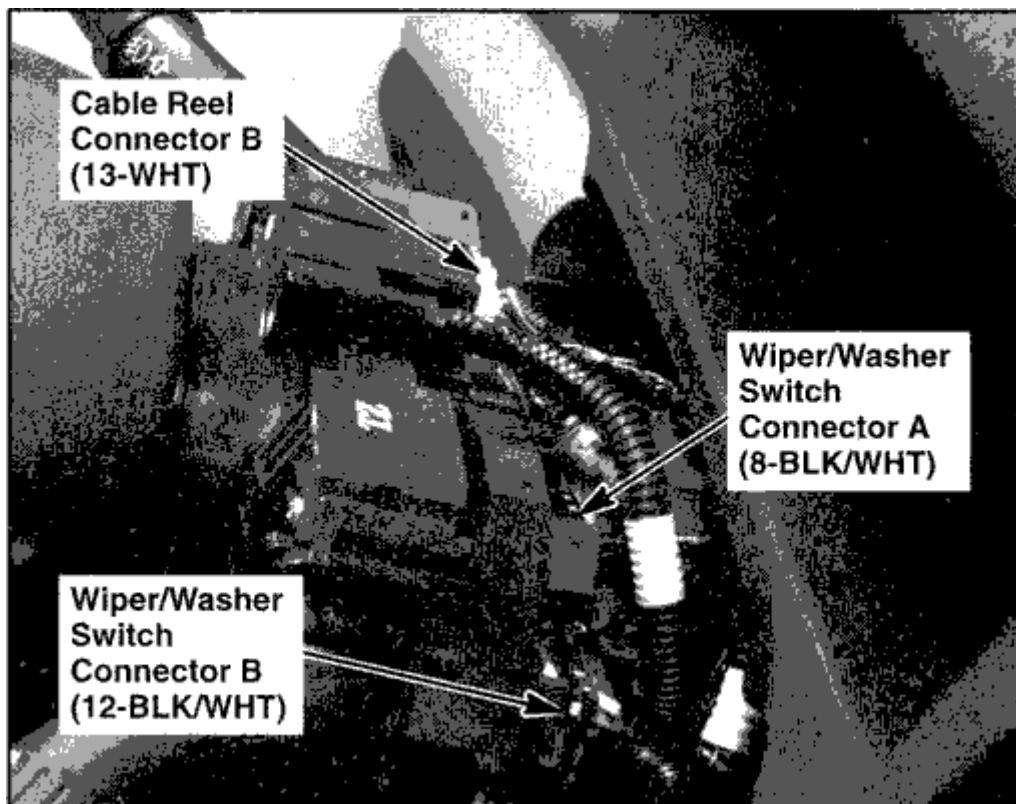

G00288518

Fig. 37: Under Steering Column Cover

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

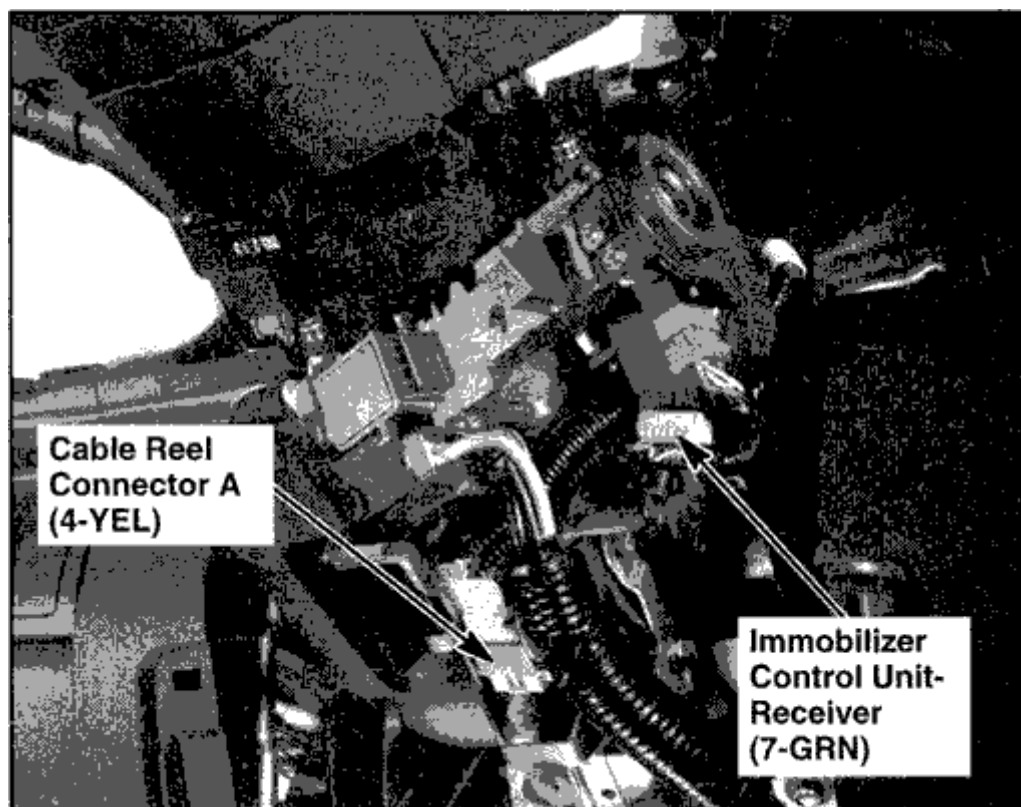

G00288519

Fig. 38: Under Steering Column Cover

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

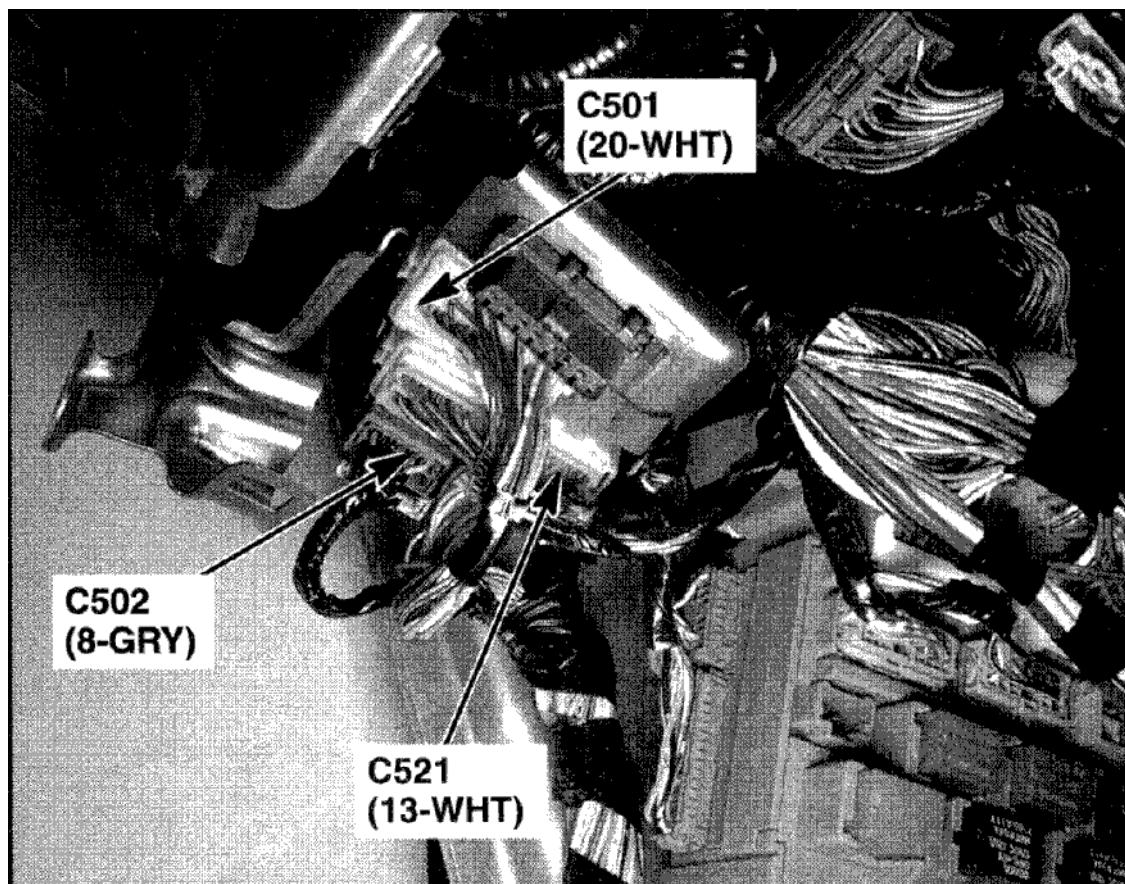

G00447617

Fig. 39: Under Left Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

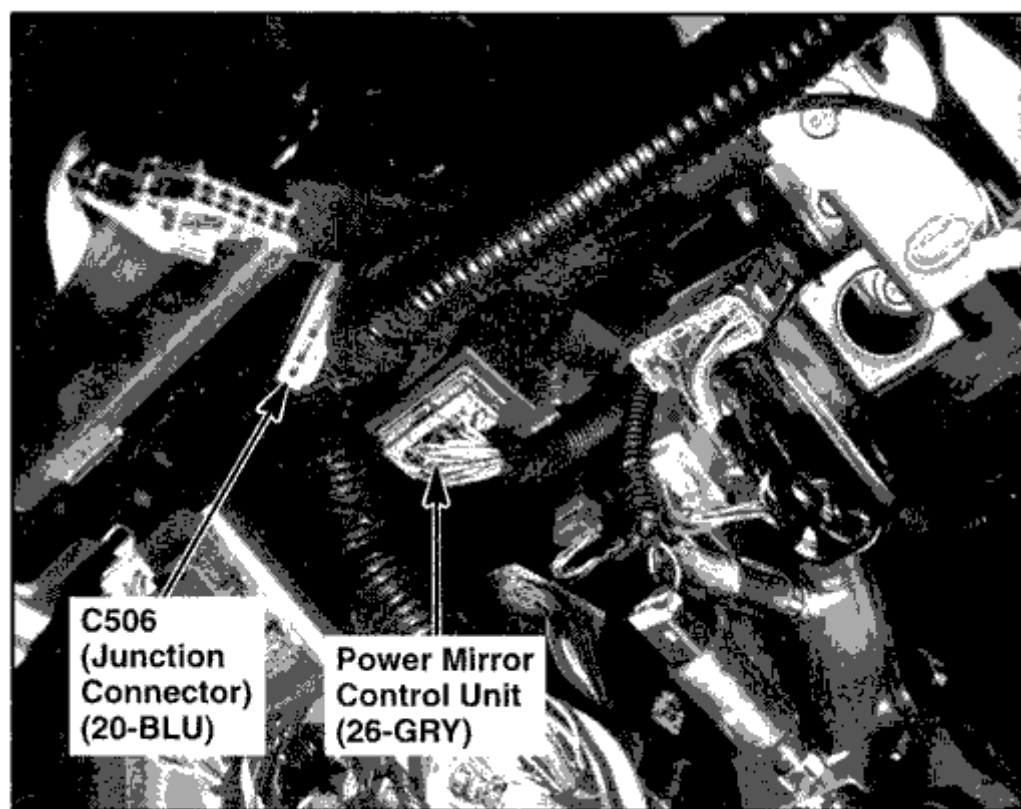

G00288524

Fig. 40: Left Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

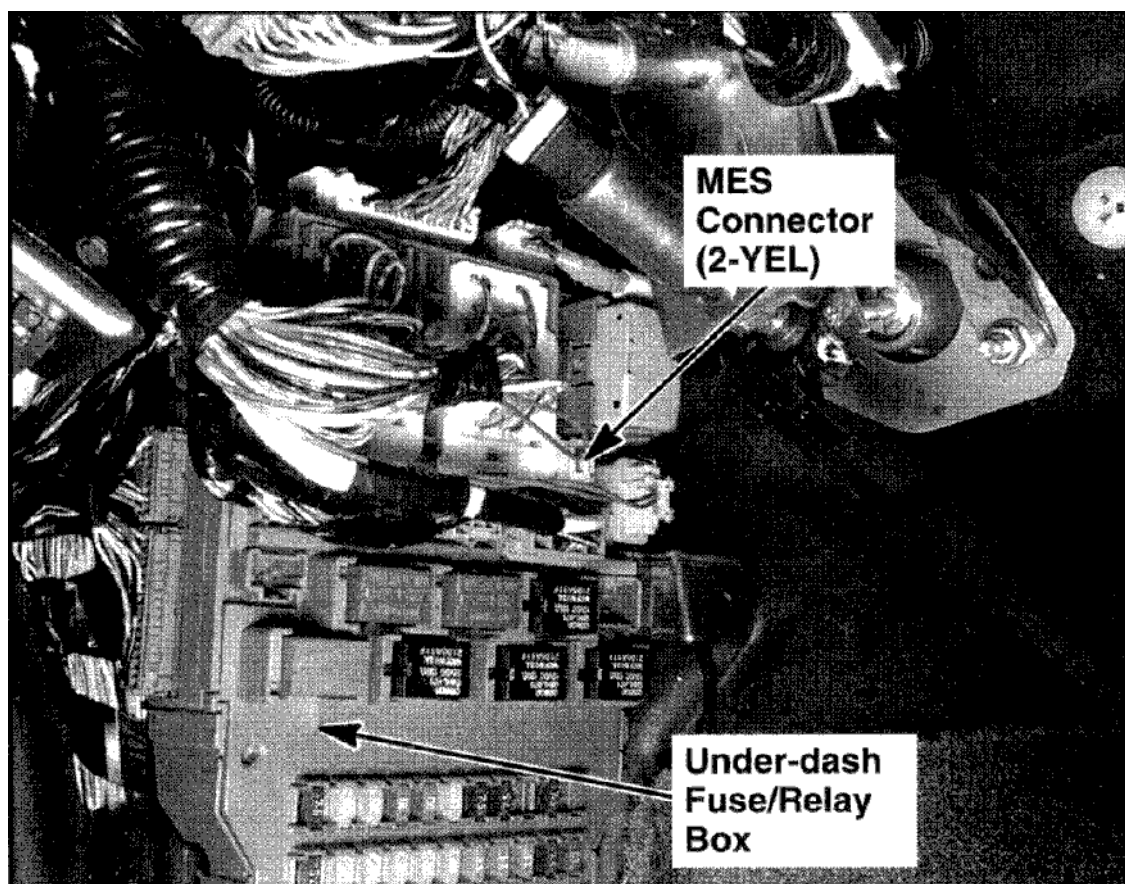

G00447619

Fig. 41: Behind Left Kick Panel

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

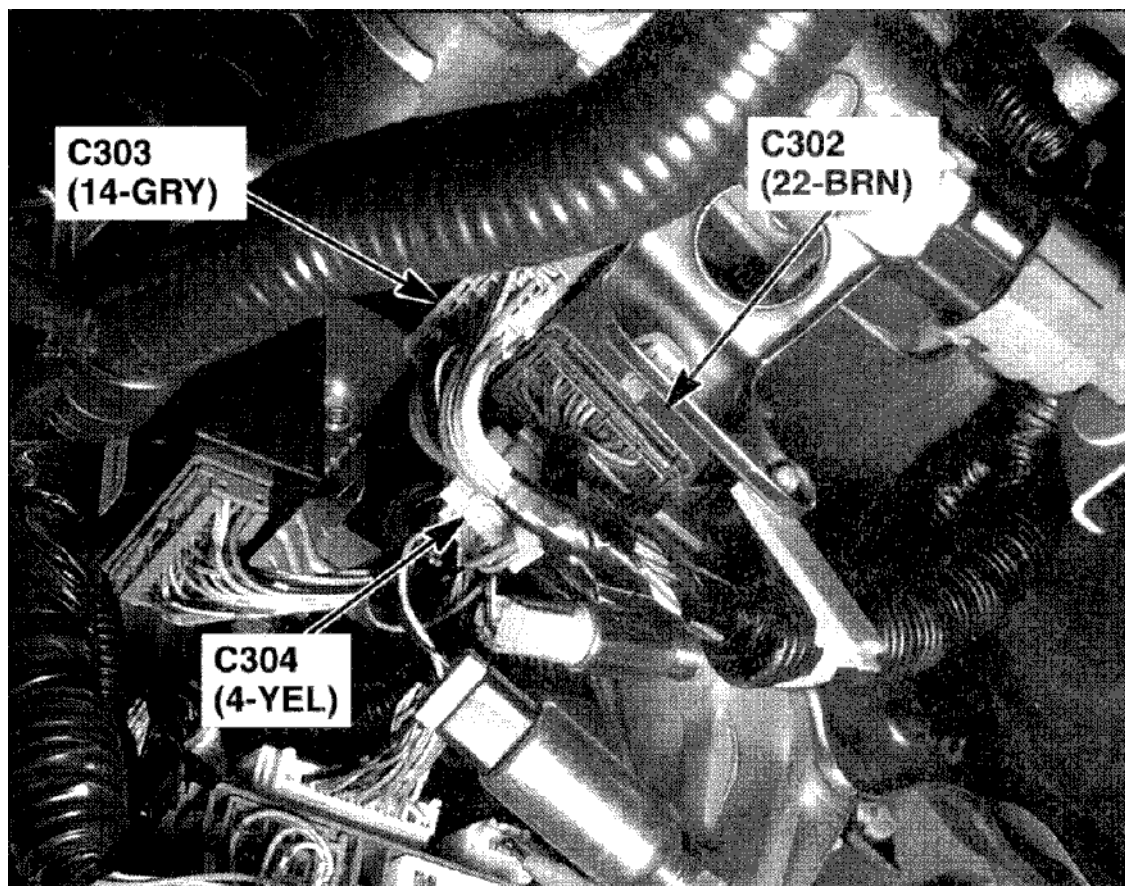

G00447624

Fig. 42: Under Left Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

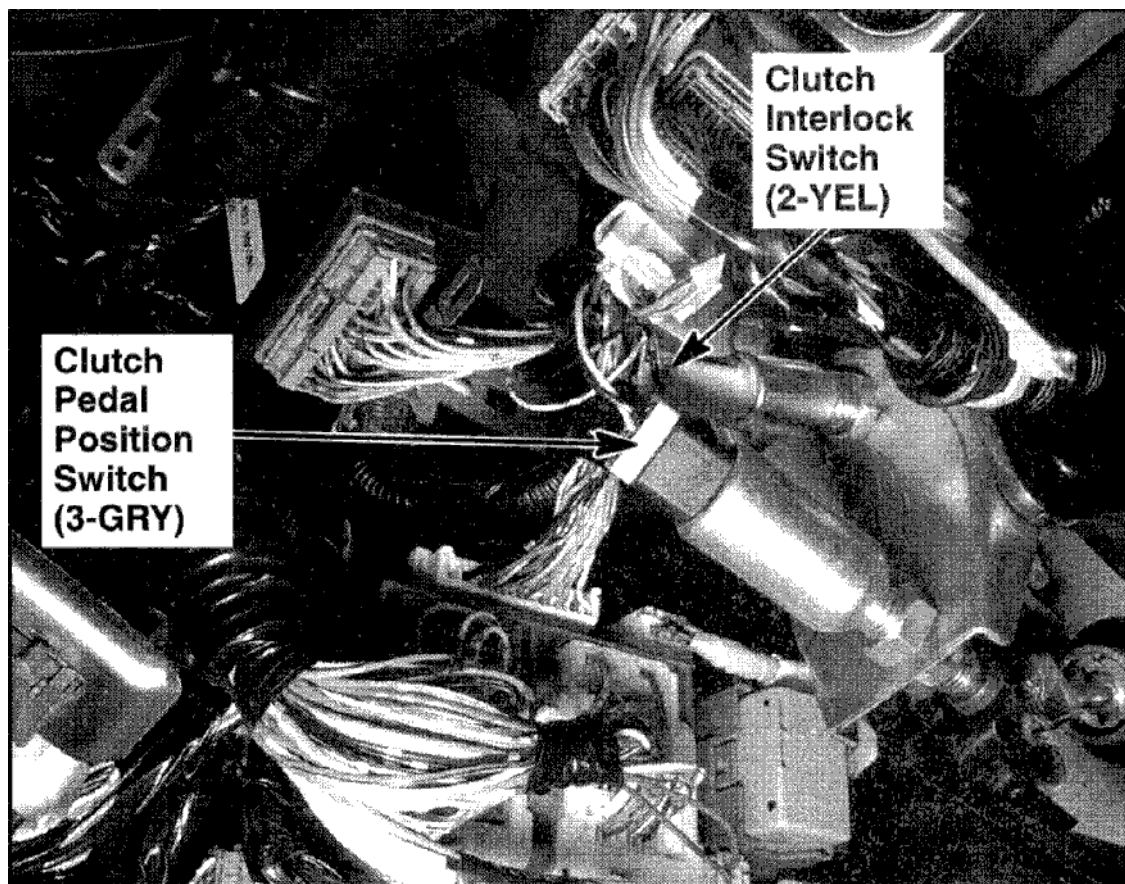

G00447623

Fig. 43: Under Left Side Of Dash (M/T)

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

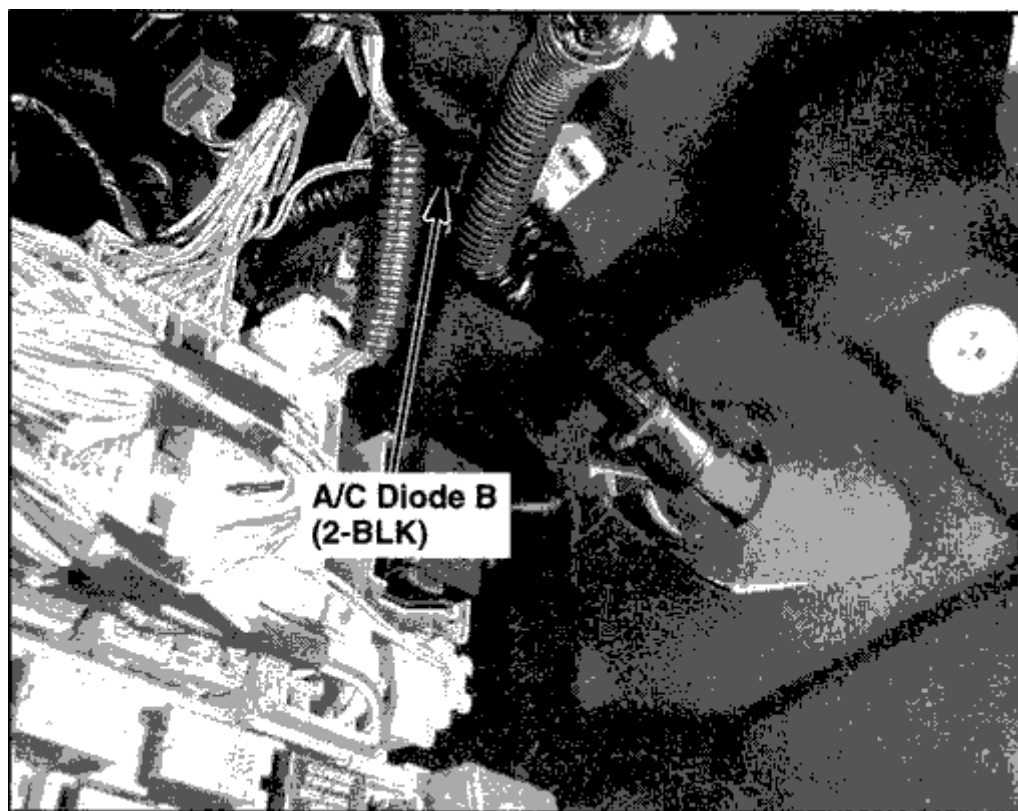

G00288529

Fig. 44: Left Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

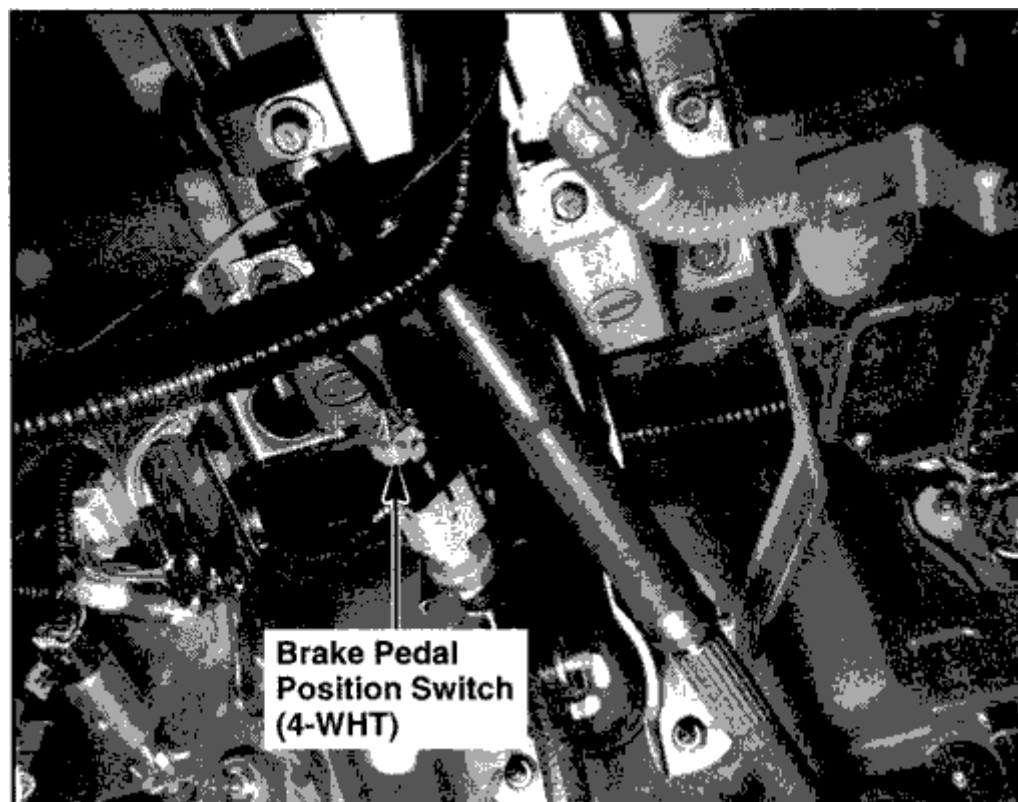

G00288530

Fig. 45: Left Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

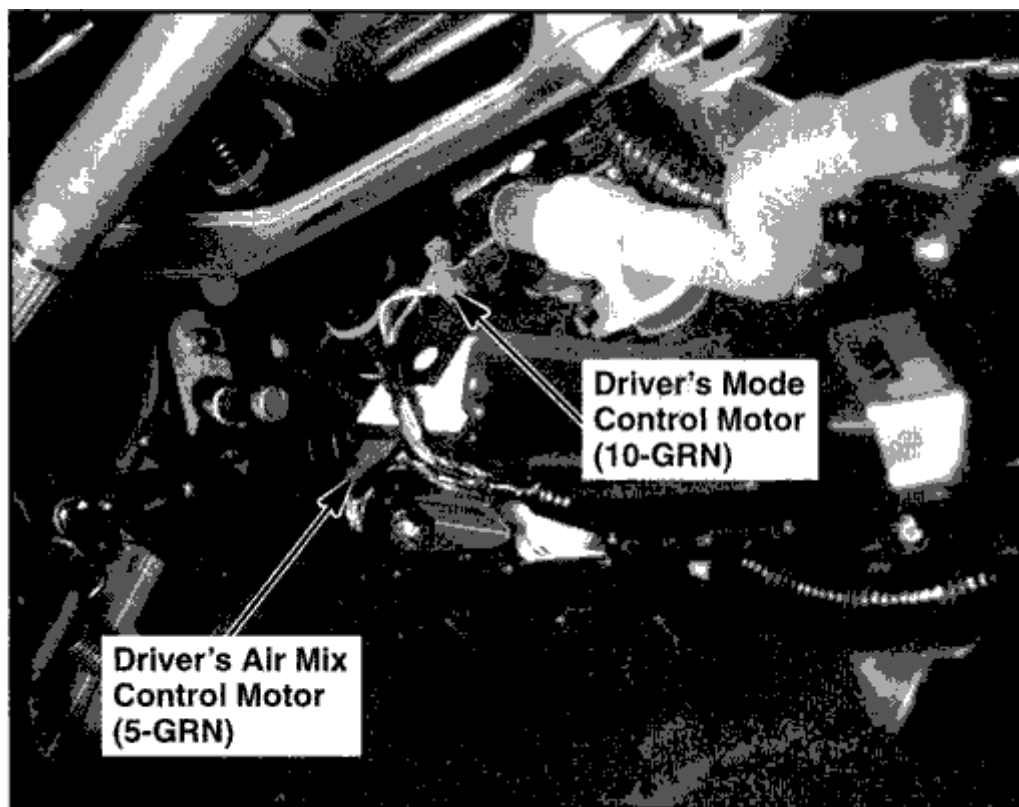

G00288531

Fig. 46: Left Side Of Dash

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

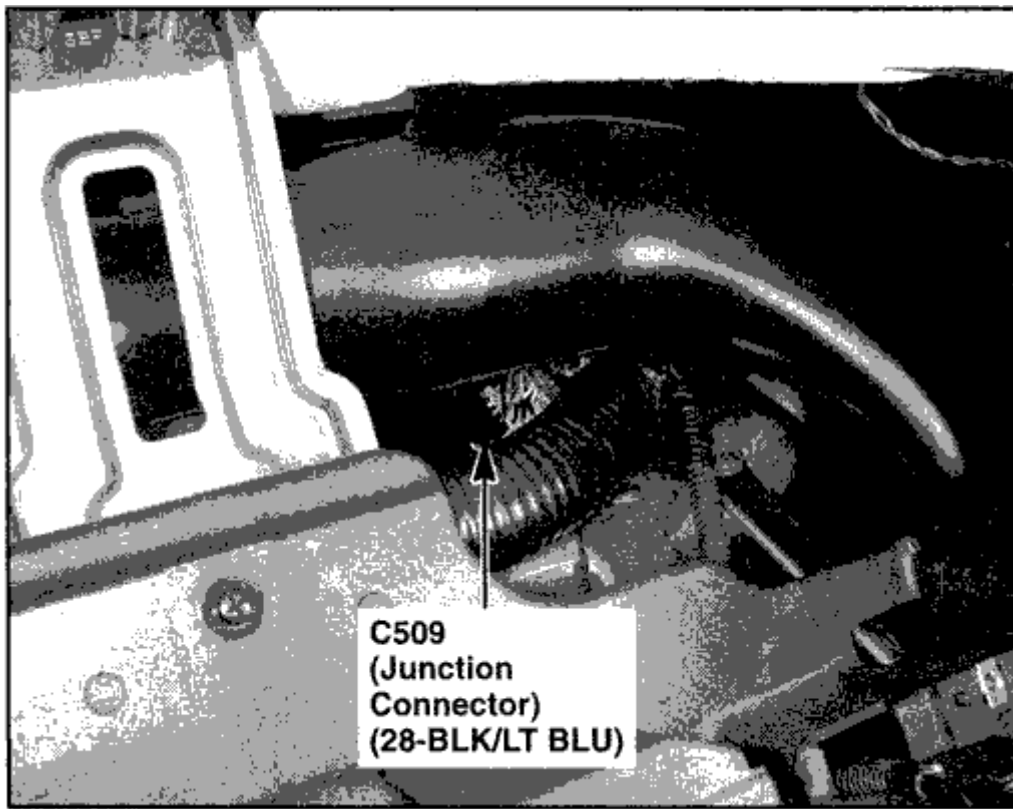

G00288532

Fig. 47: Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.


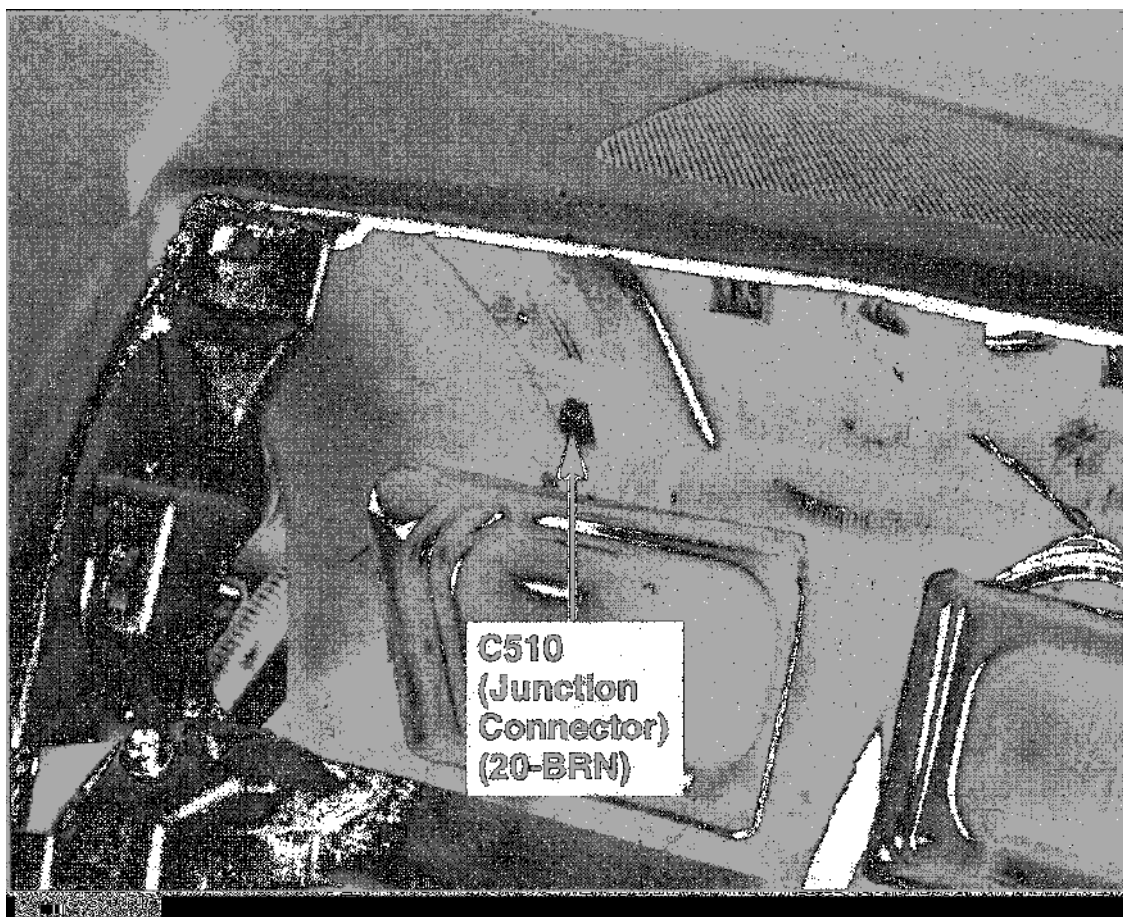 


Fig. 48: Under Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

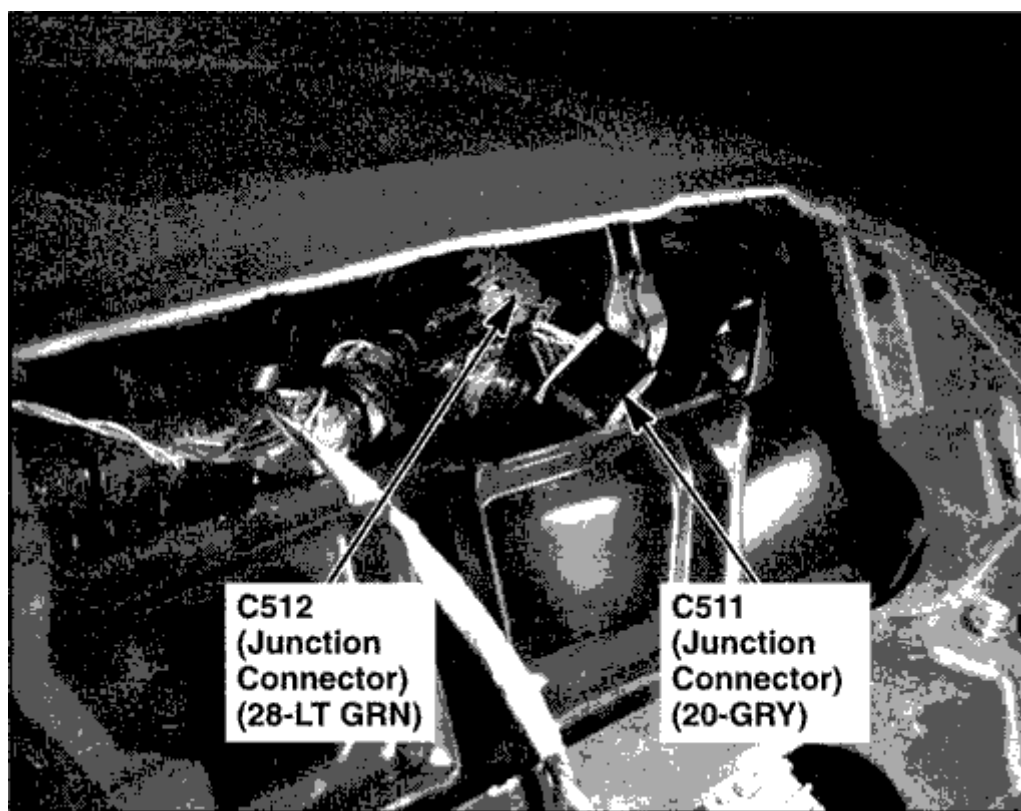

G00288542

Fig. 49: Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

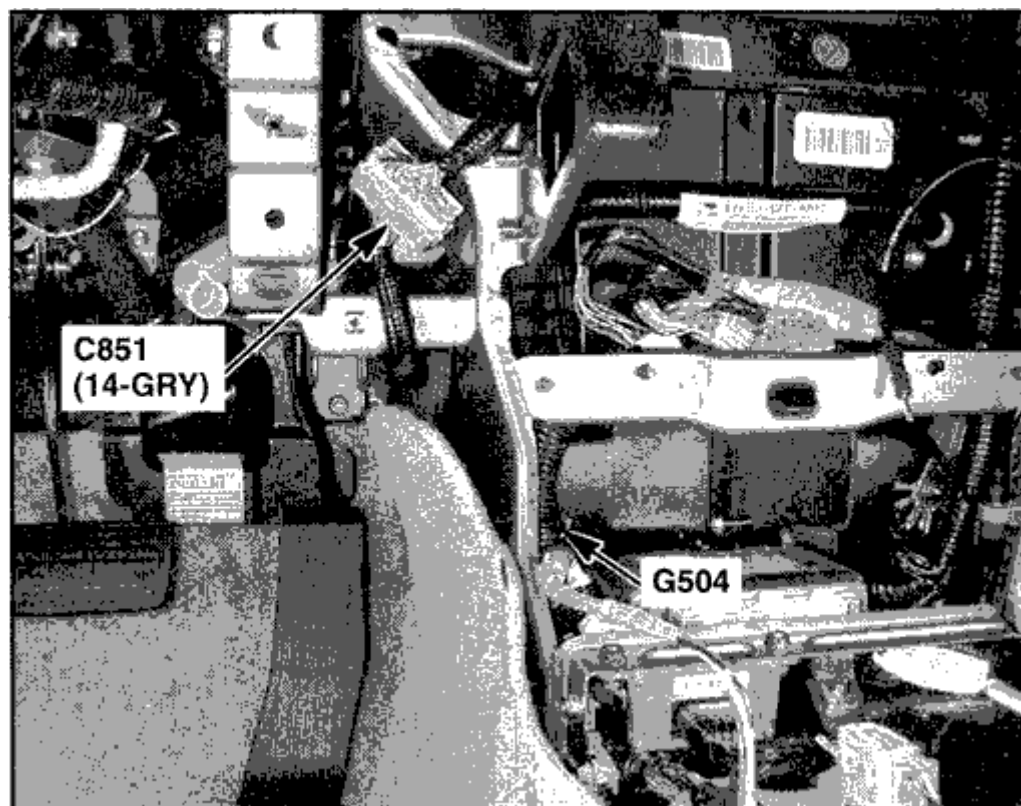

G00288543

Fig. 50: Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

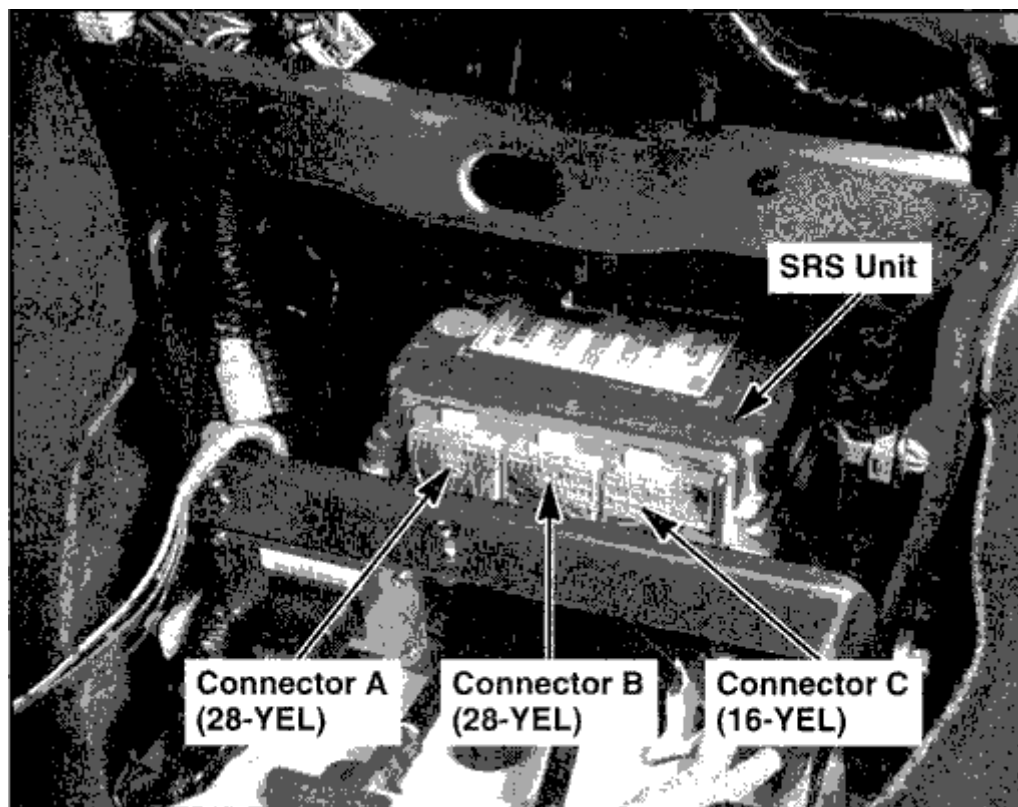

G00288544

Fig. 51: Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

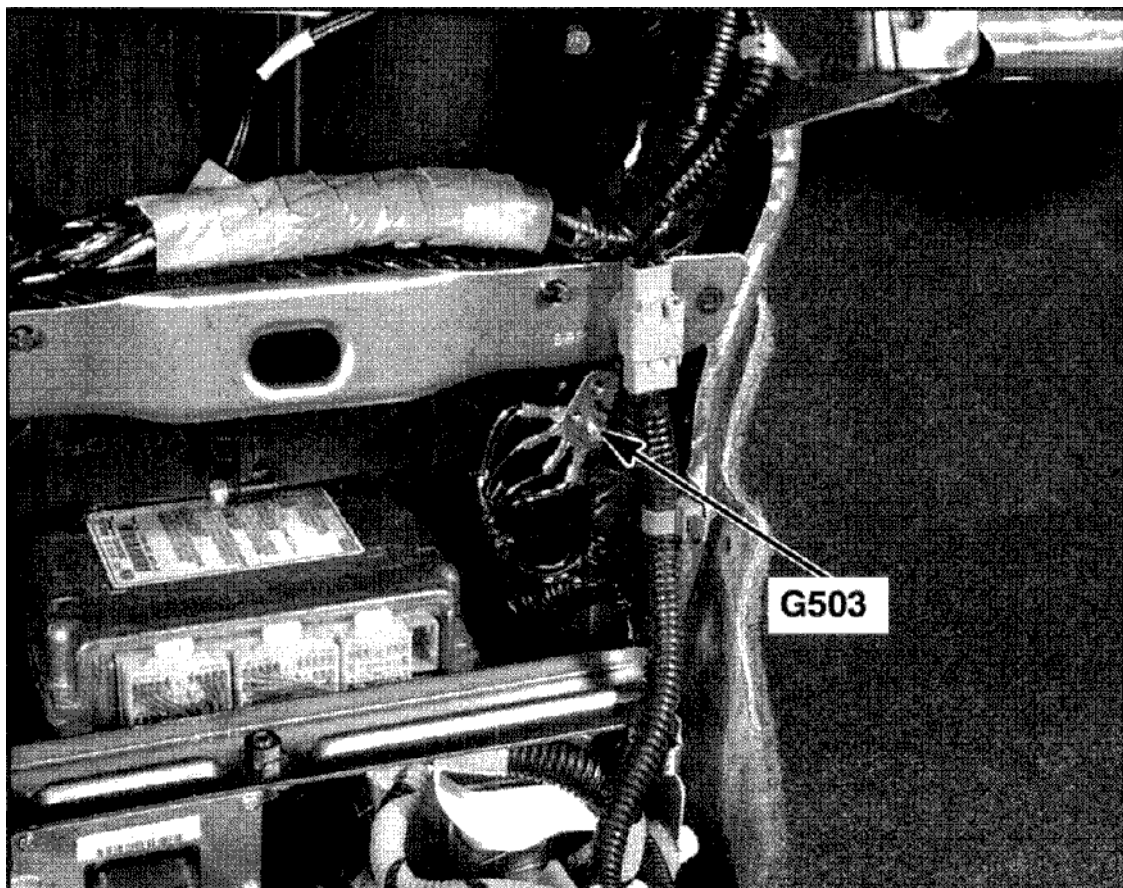

G00447625

Fig. 52: Under Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

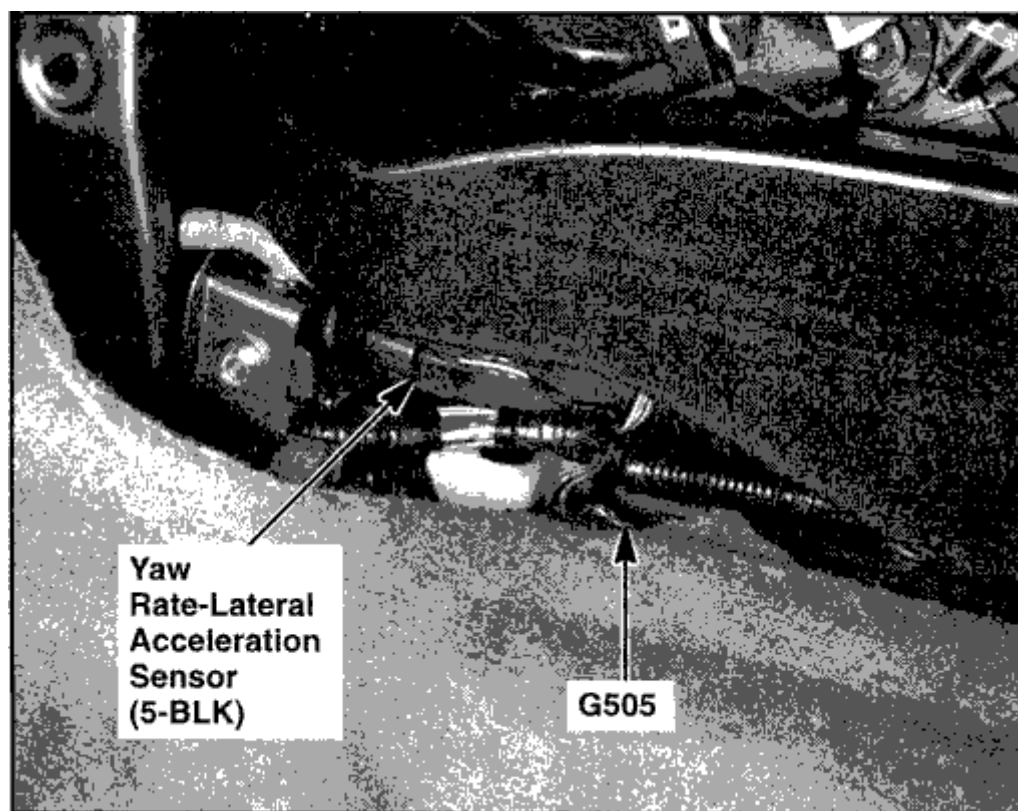

G00288546

Fig. 53: Center Console

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

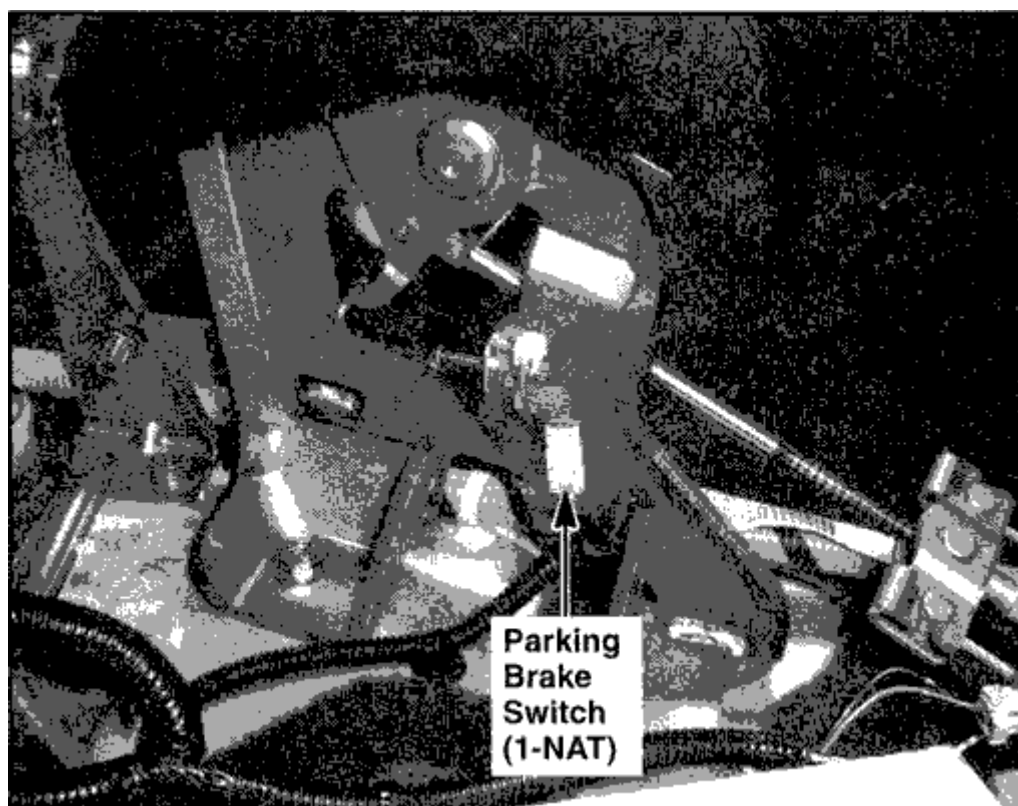

G00288548

Fig. 54: Center Console

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

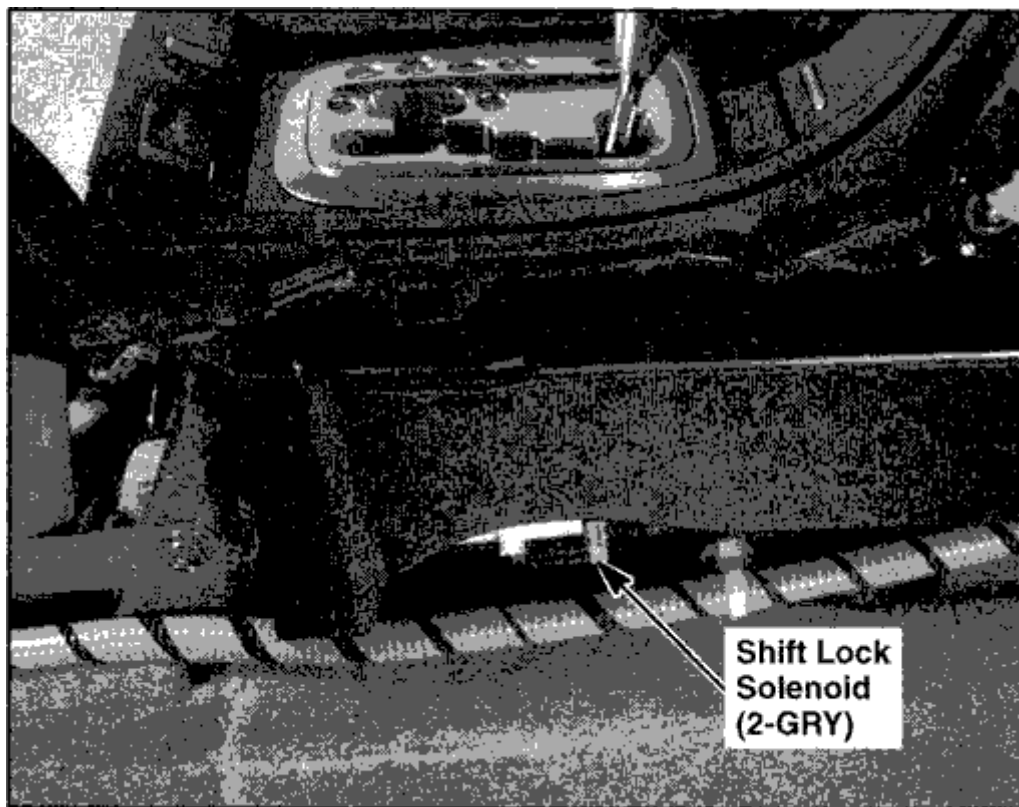

G00288549

Fig. 55: Center Console (A/T)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

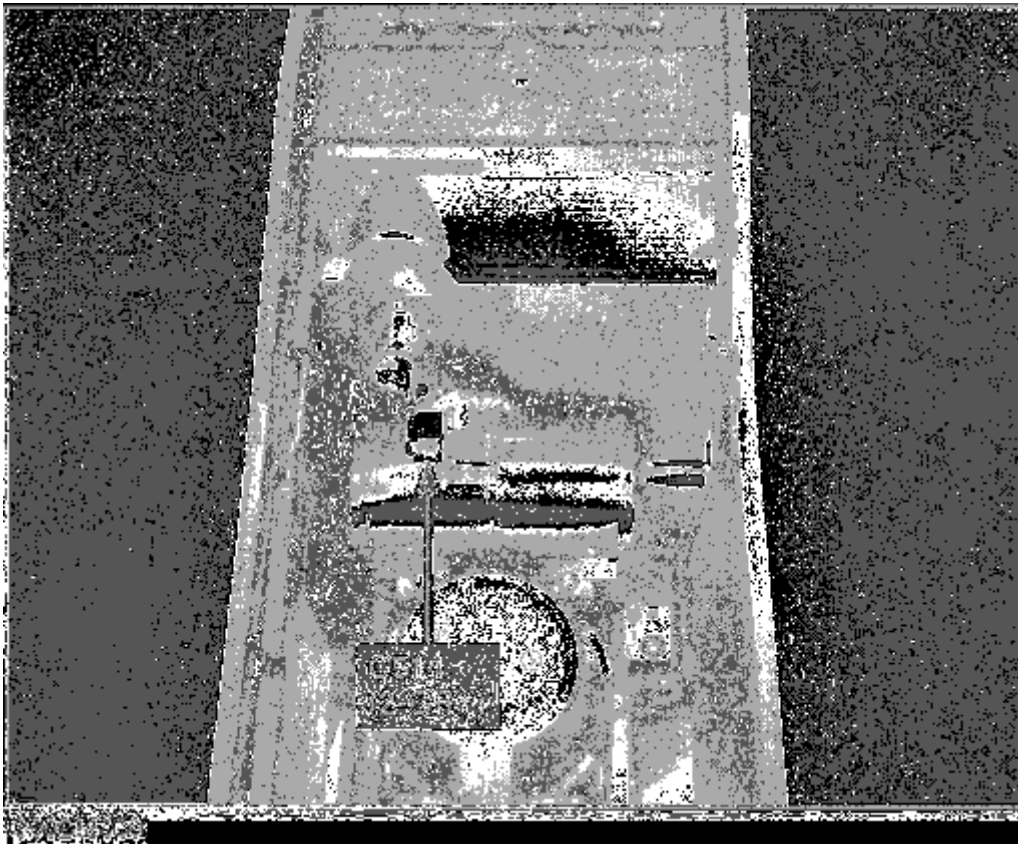 


Fig. 56: Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.


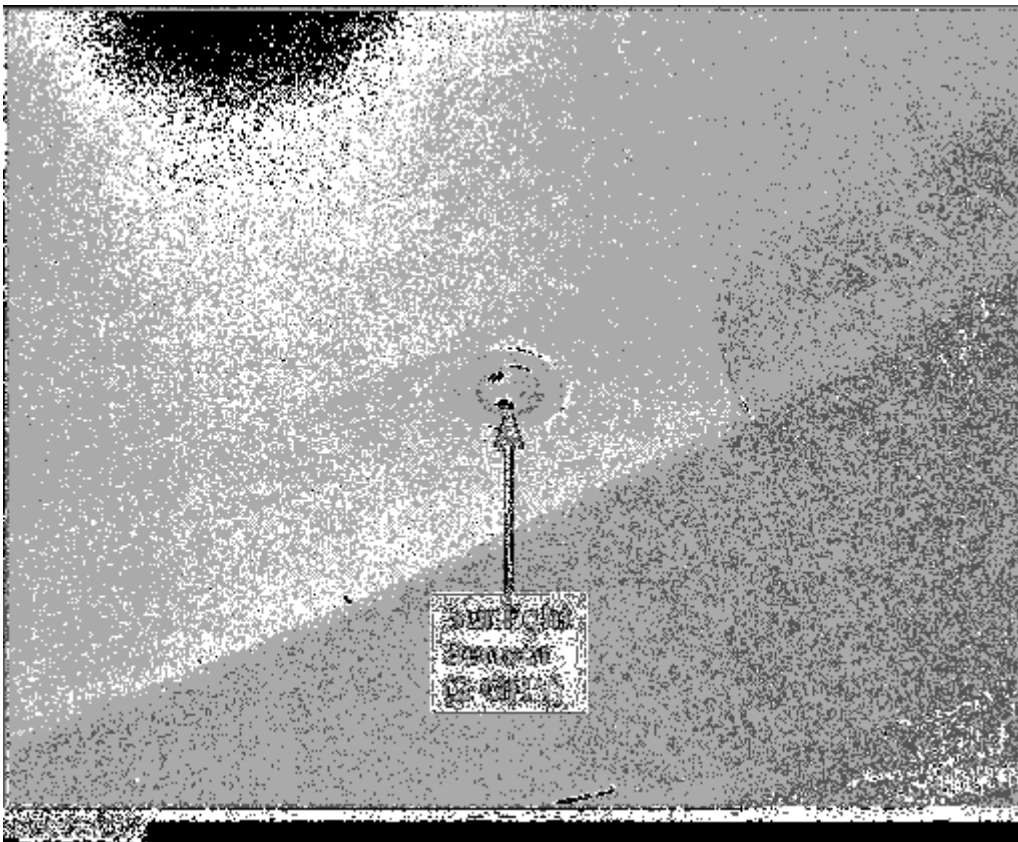 


Fig. 57: Right Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

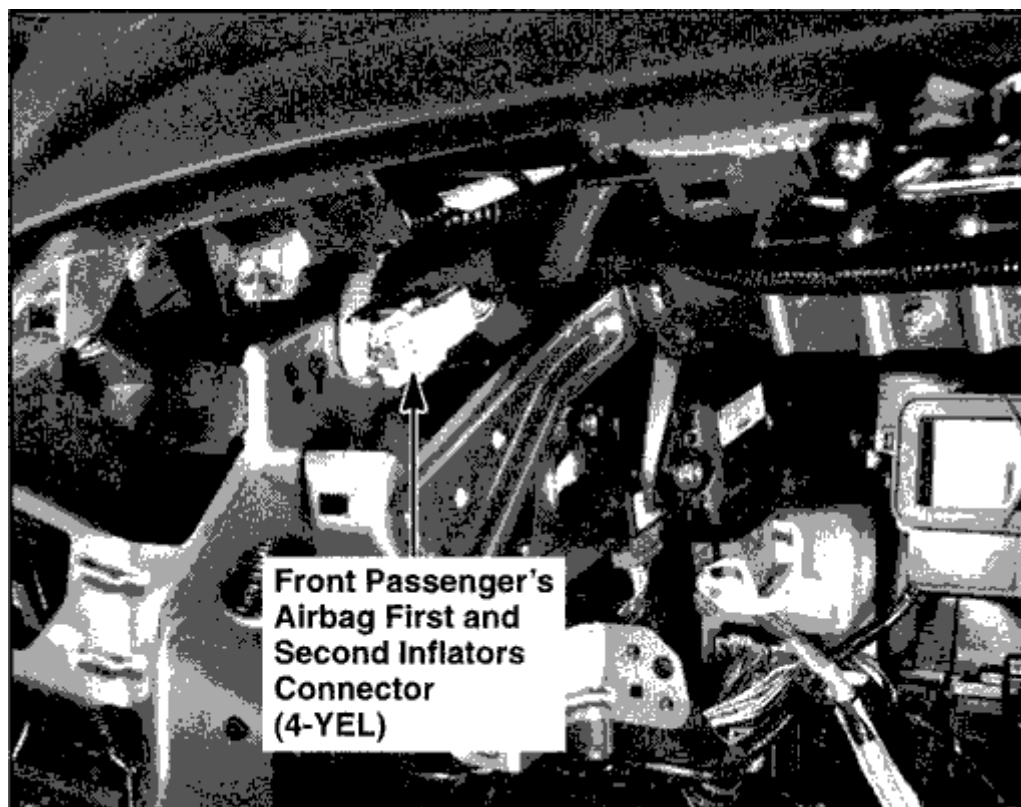

G00288553

Fig. 58: Right Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

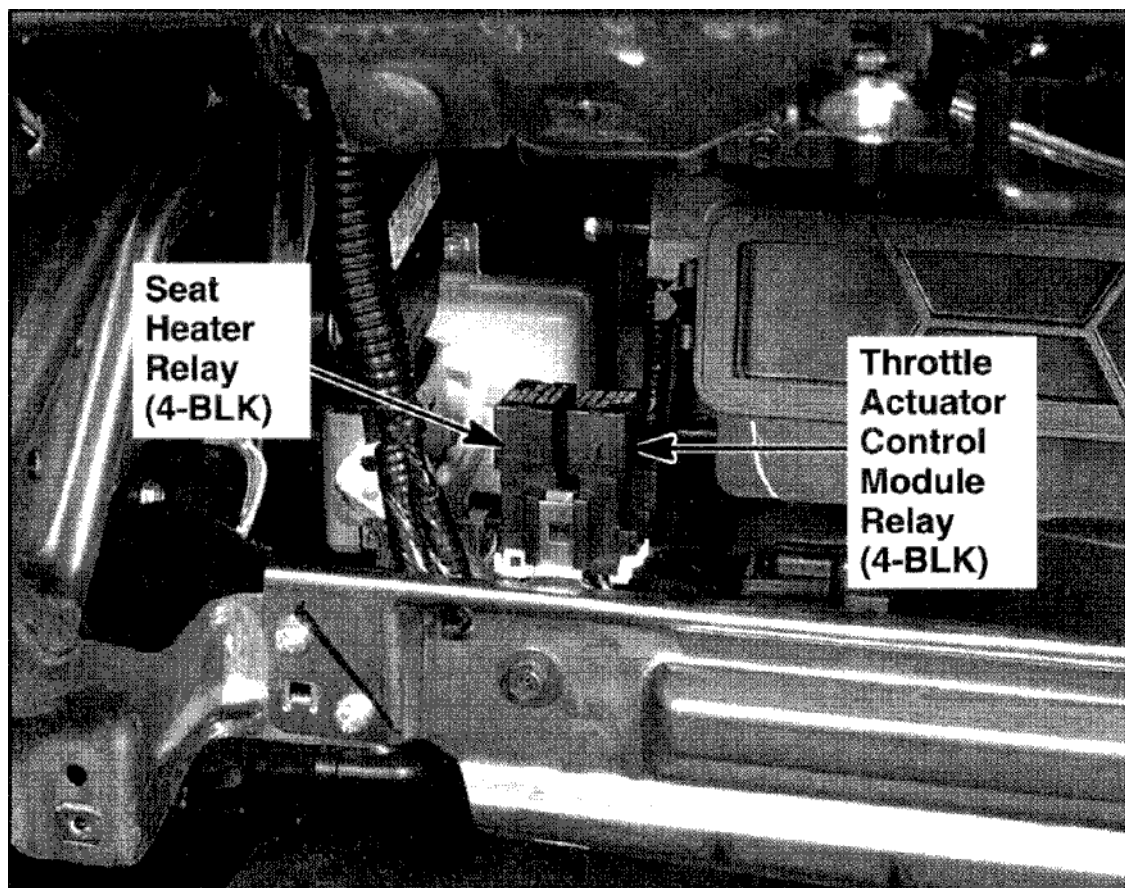

G00447628

Fig. 59: Behind Glove Box

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

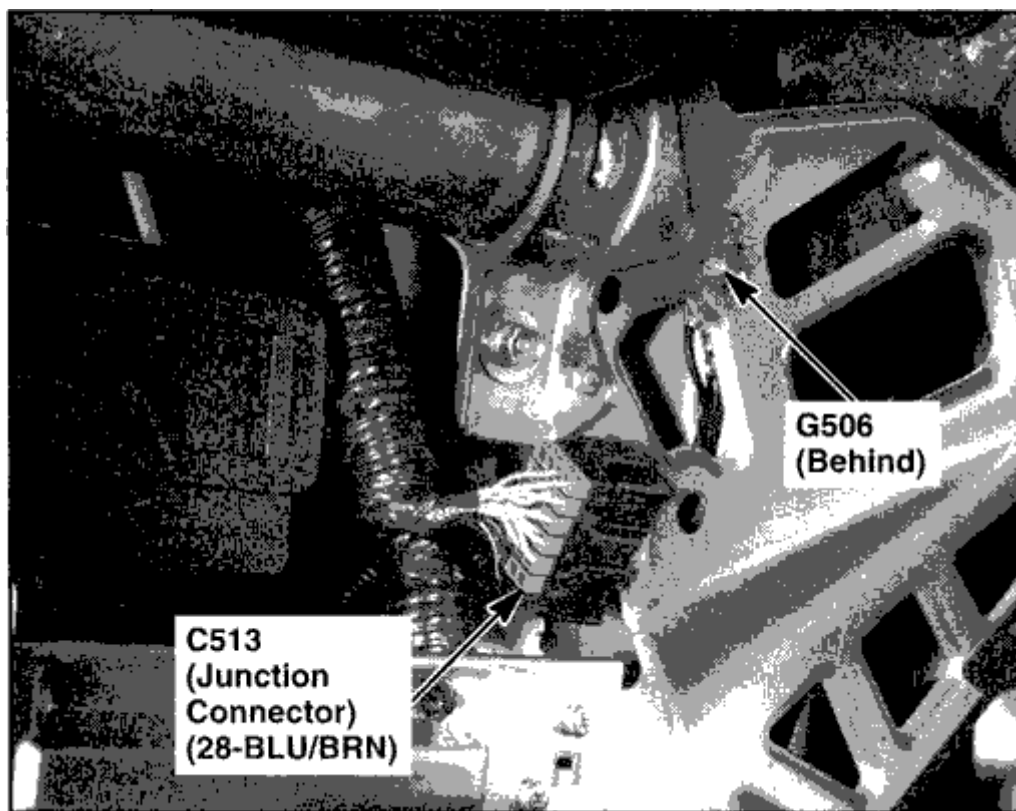

G00288557

Fig. 60: Behind Glove Box

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

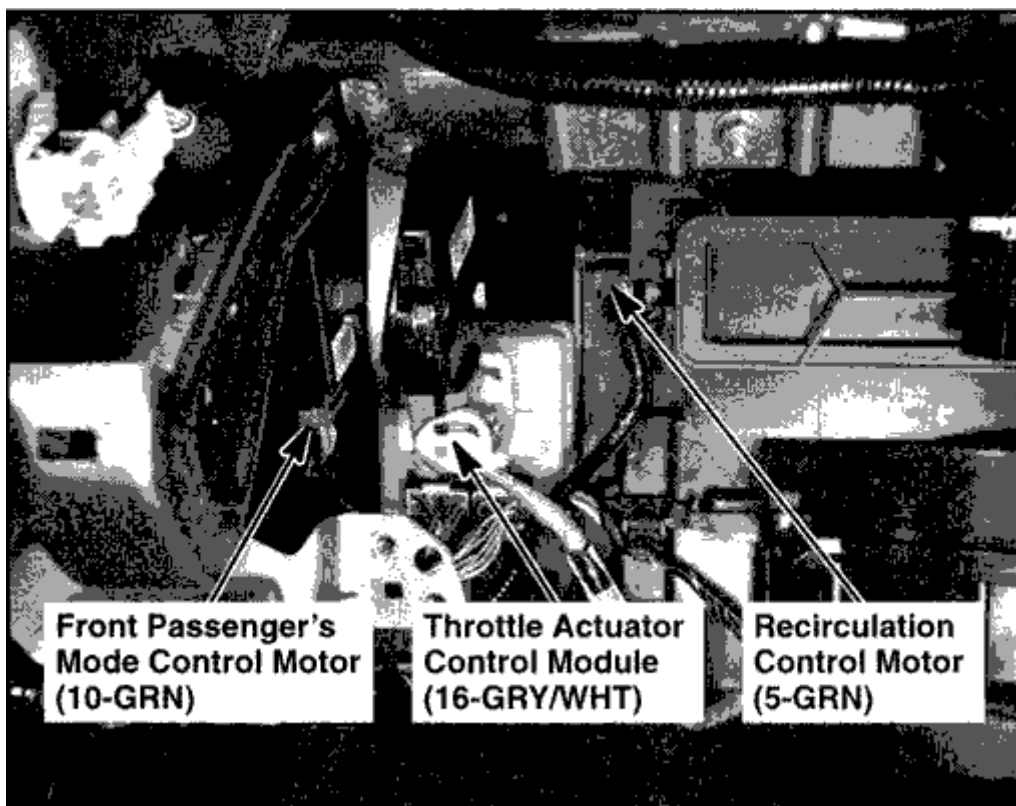

G00288554

Fig. 61: Right Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

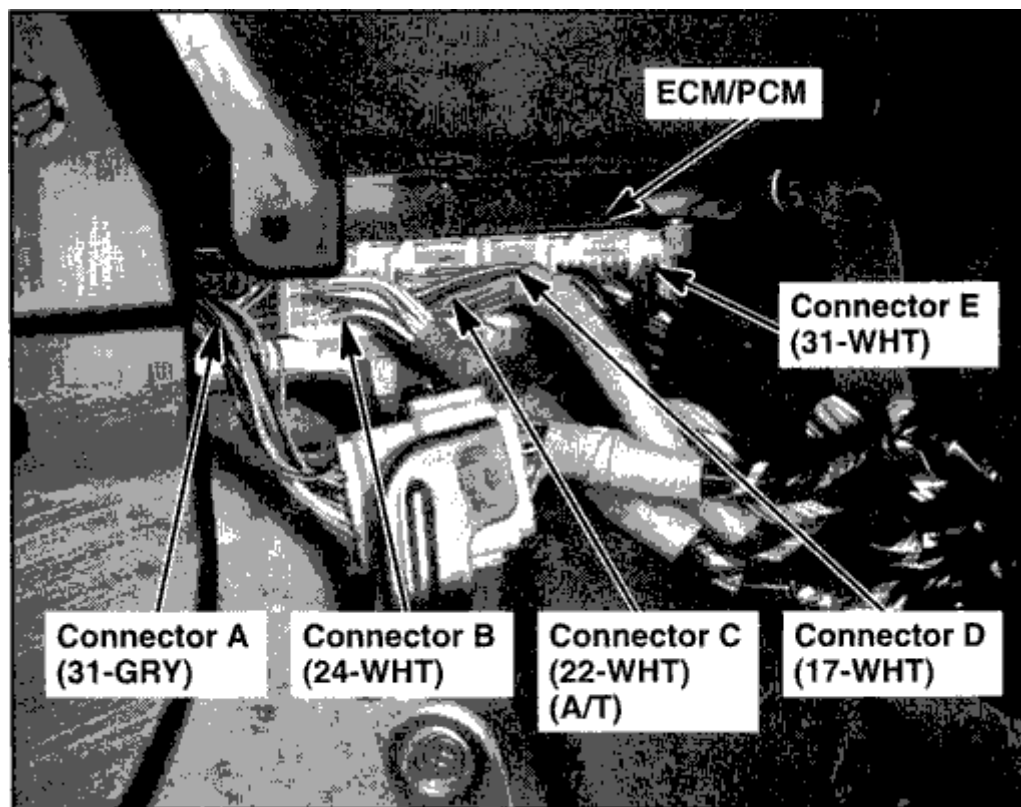

G00288559

Fig. 62: Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

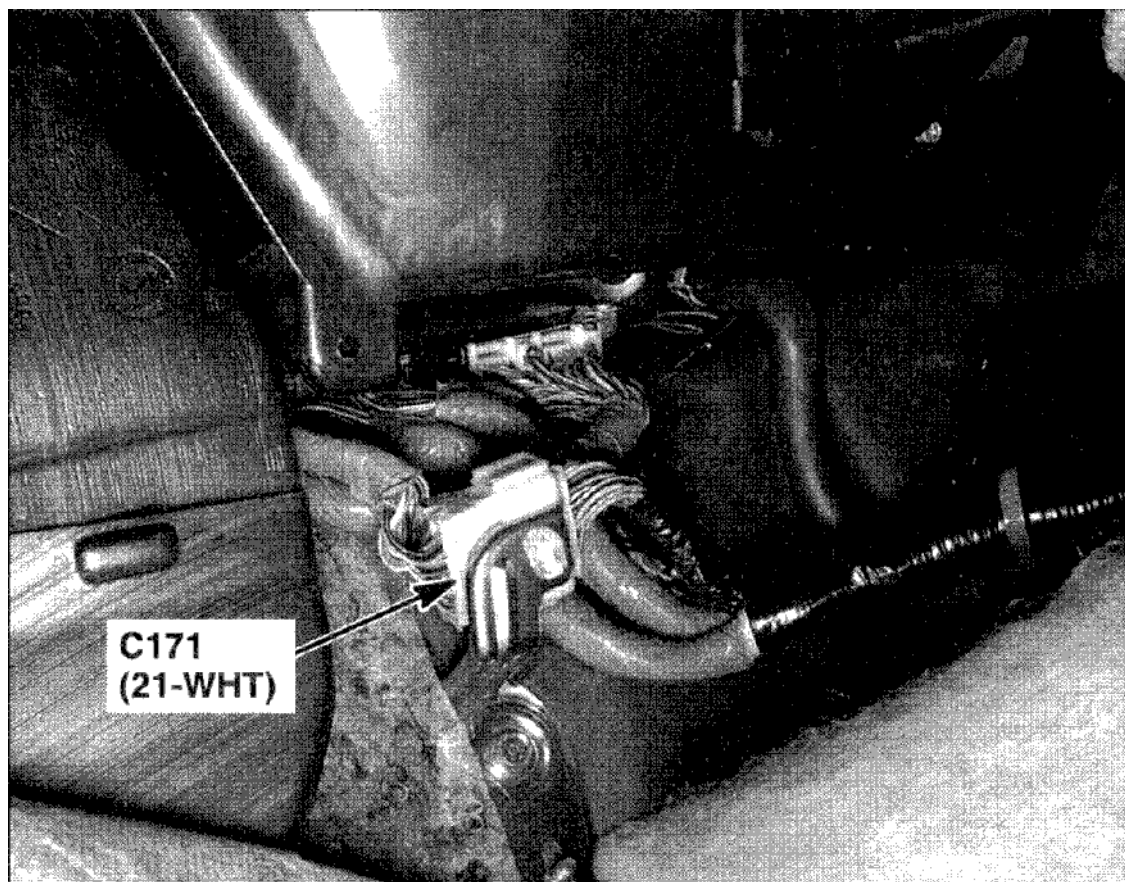

G00447663

Fig. 63: Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

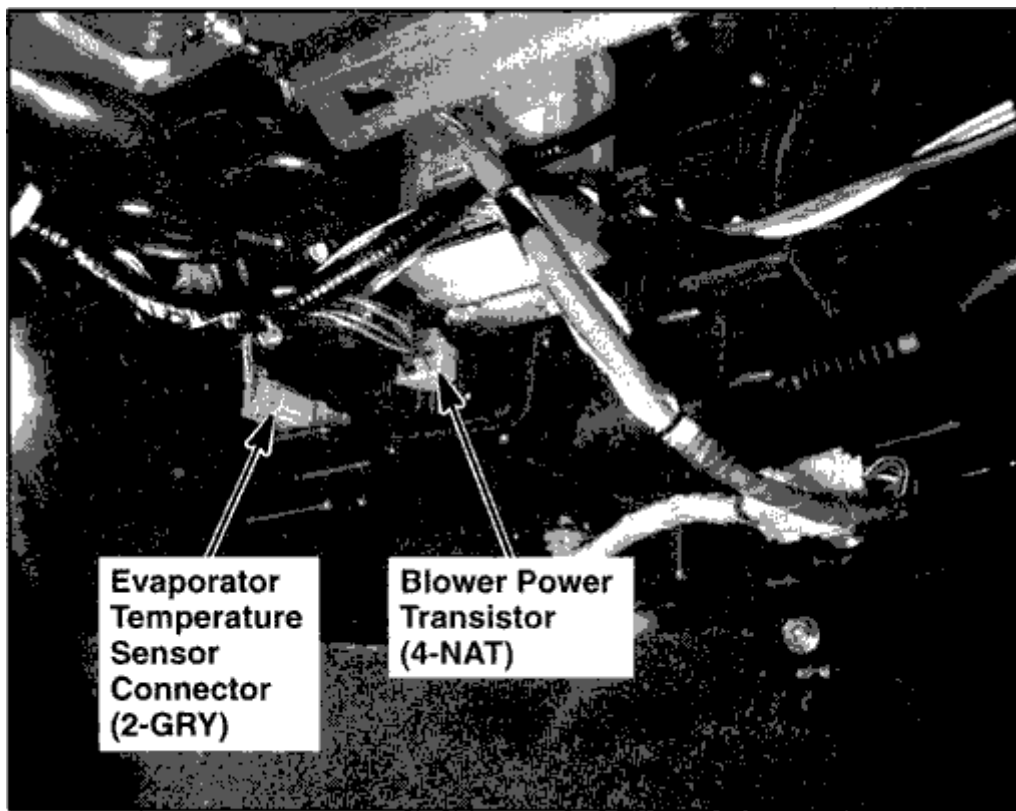

G00288561

Fig. 64: Right Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

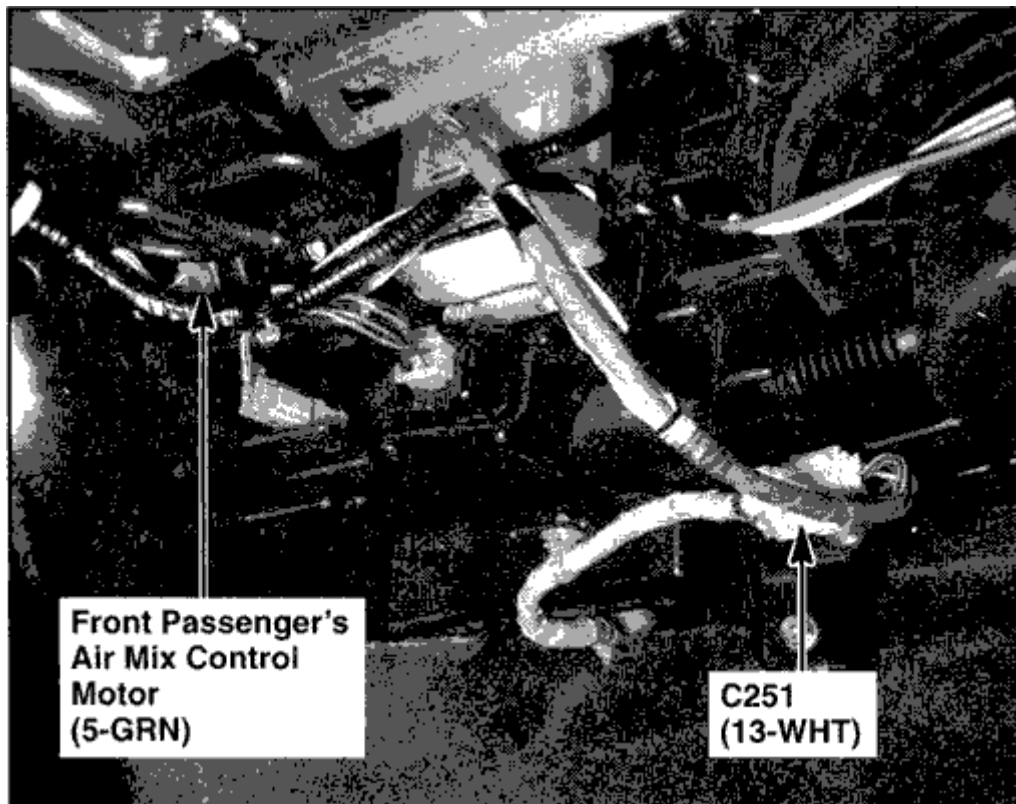

G00288562

Fig. 65: Right Side Of Dash

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

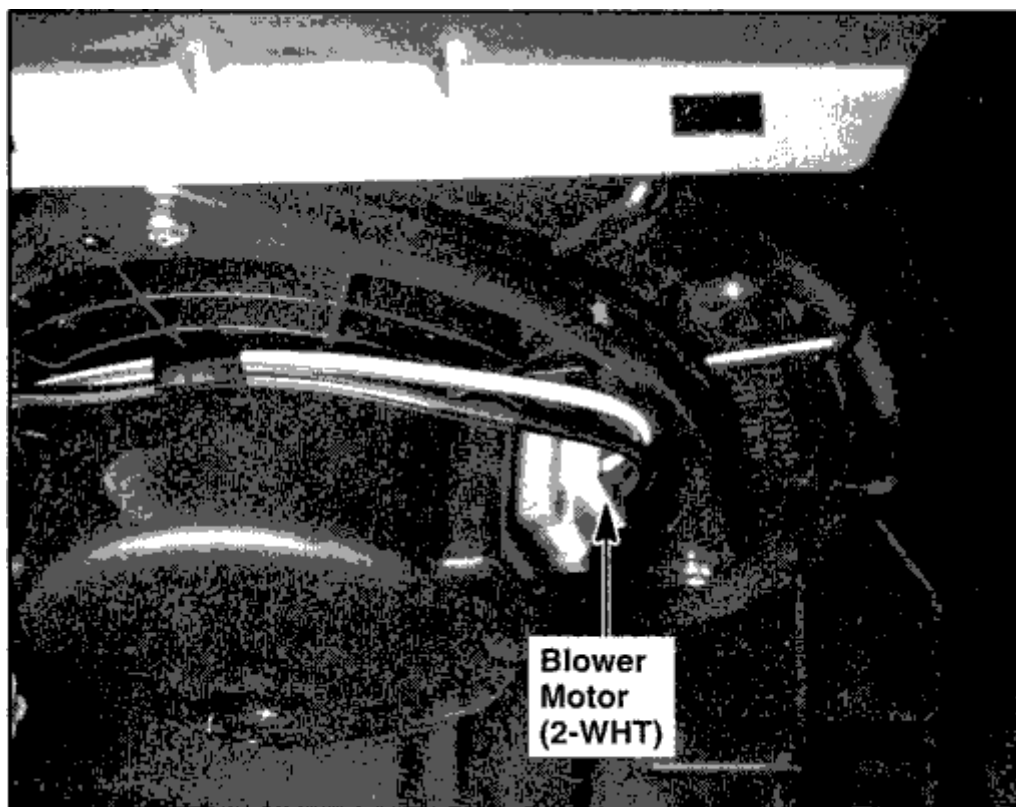

G00288563

Fig. 66: Right Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.


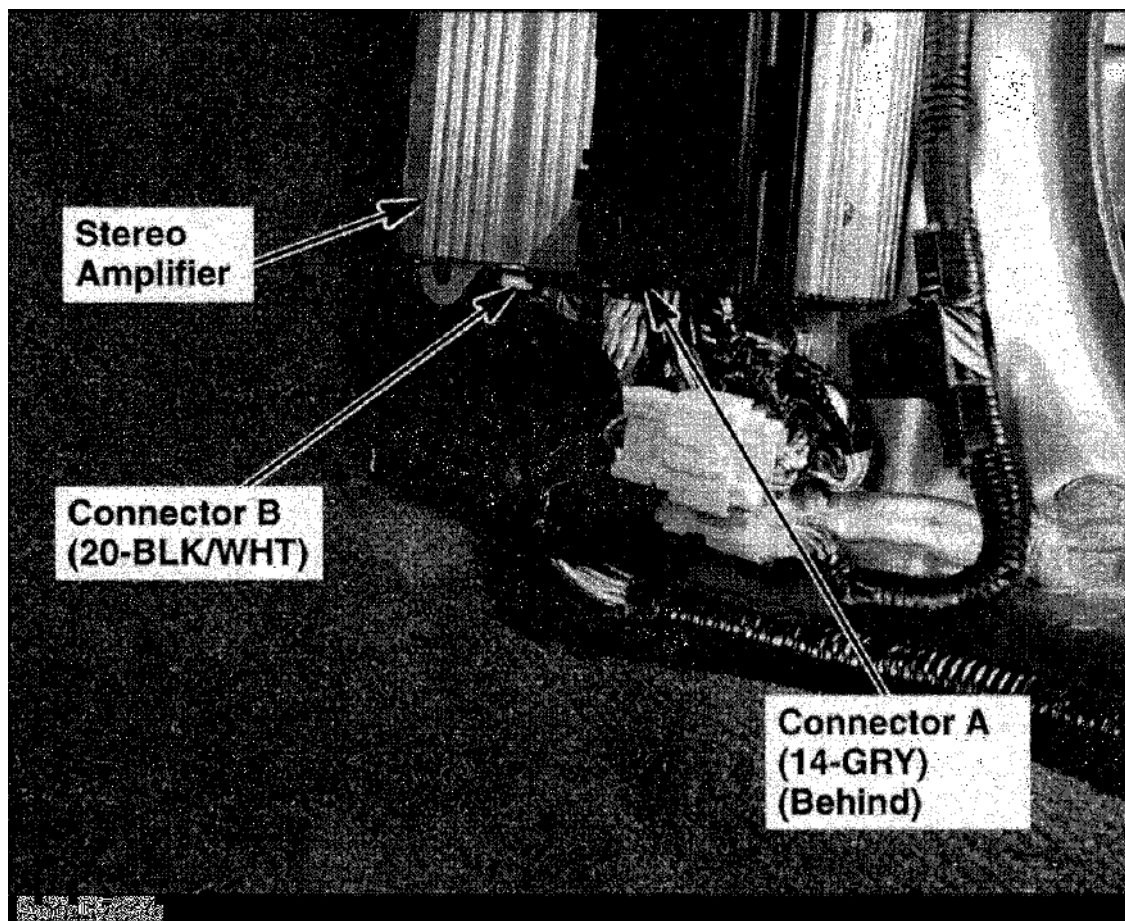 



Fig. 67: Behind Right Kick Panel

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

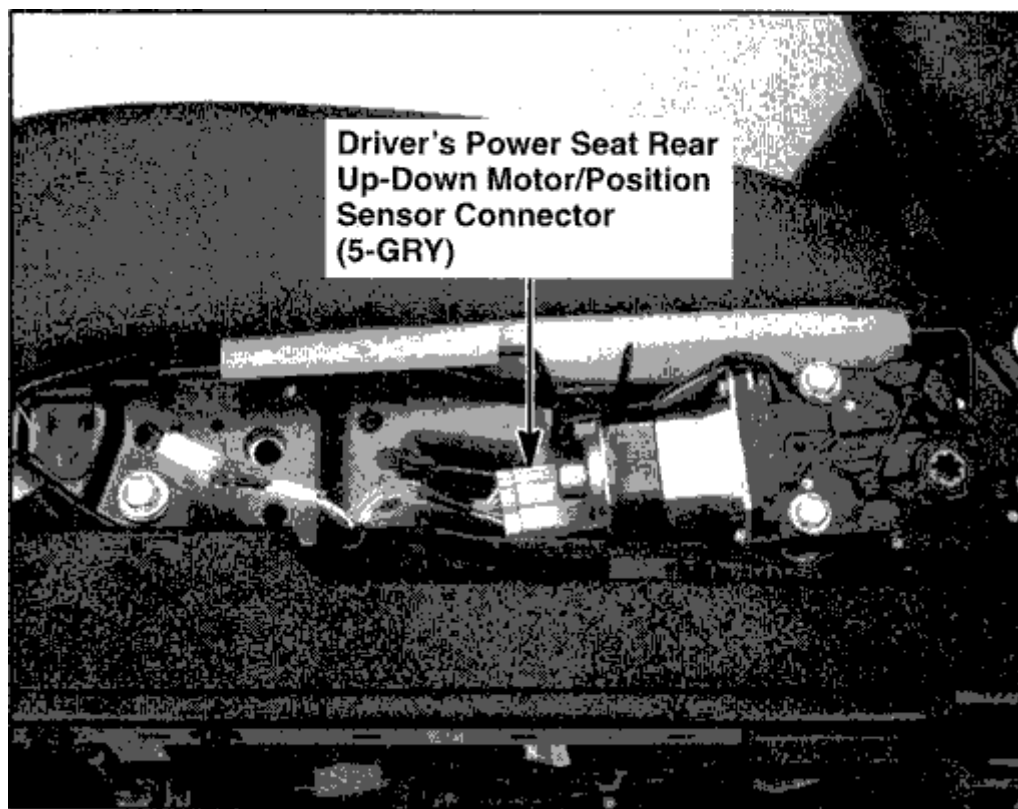

G00288567

 
Fig. 68: Left Side Of Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

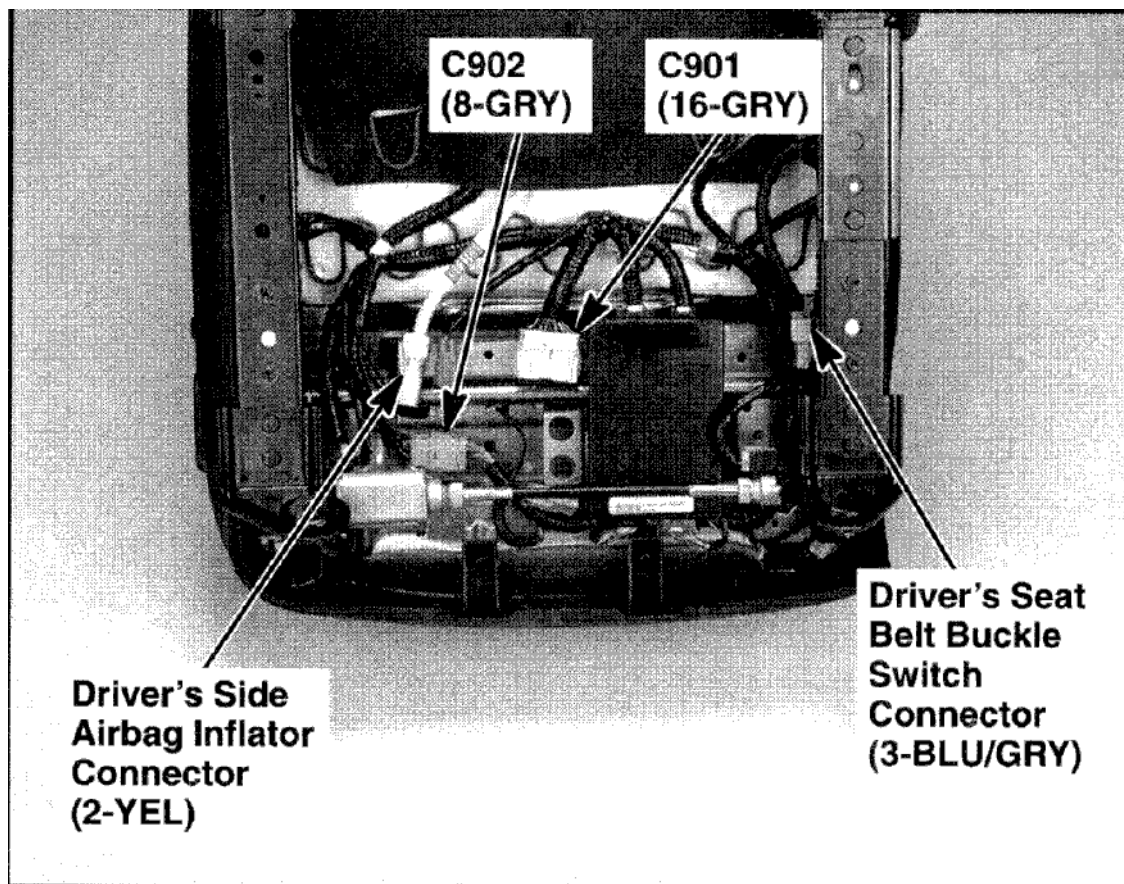

G00447630

Fig. 69: Under Driver's Seat

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

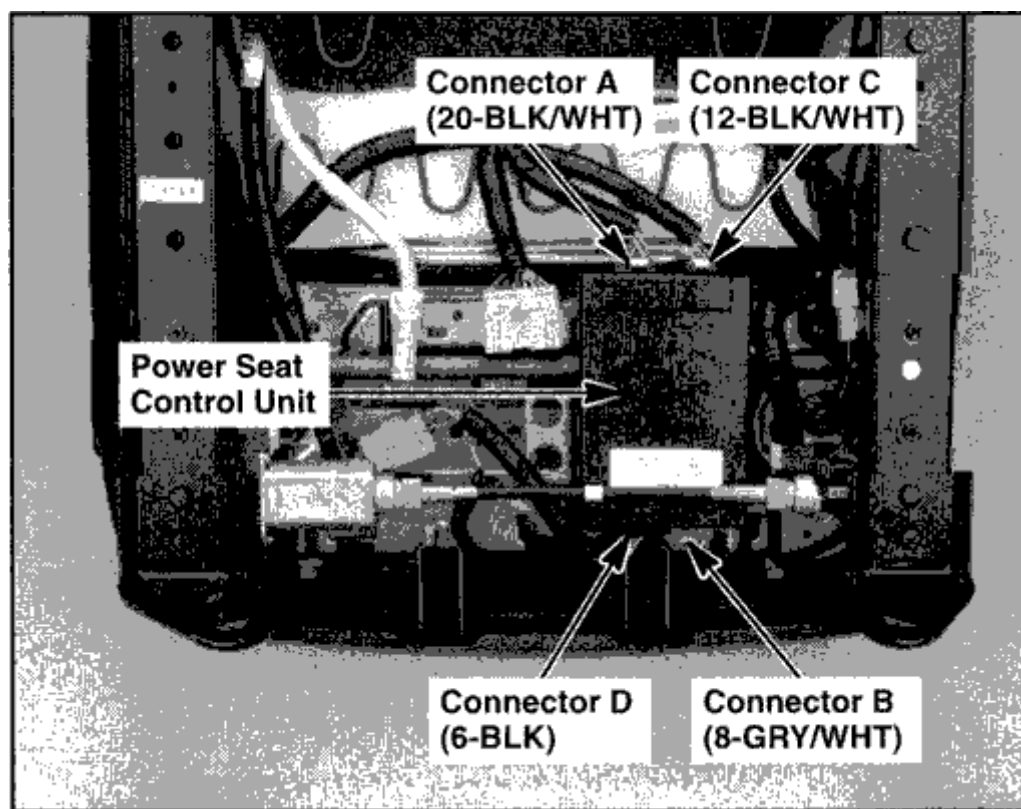

G00288572

Fig. 70: Under Driver's Seat

Courtesy of AMERICAN HONDA MOTOR CO., INC.


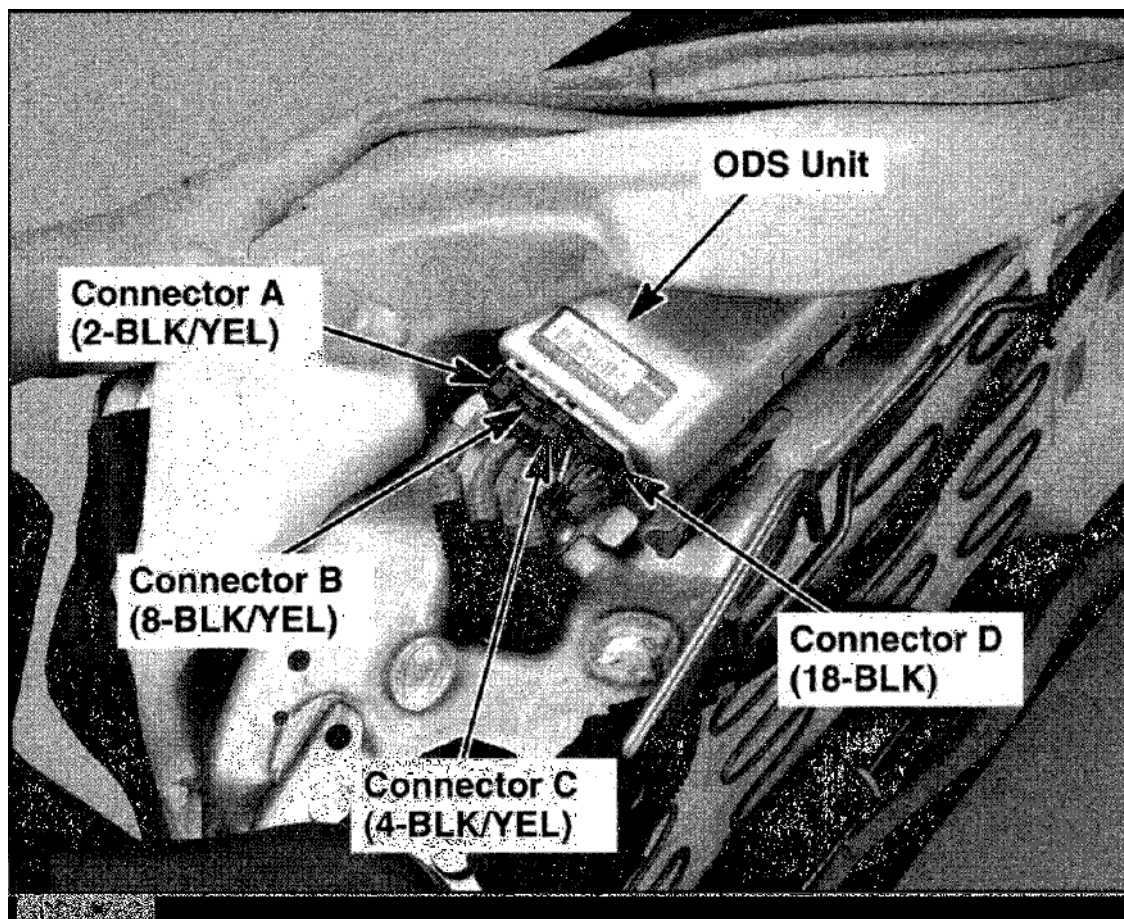 



Fig. 71: In Left Side Of Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

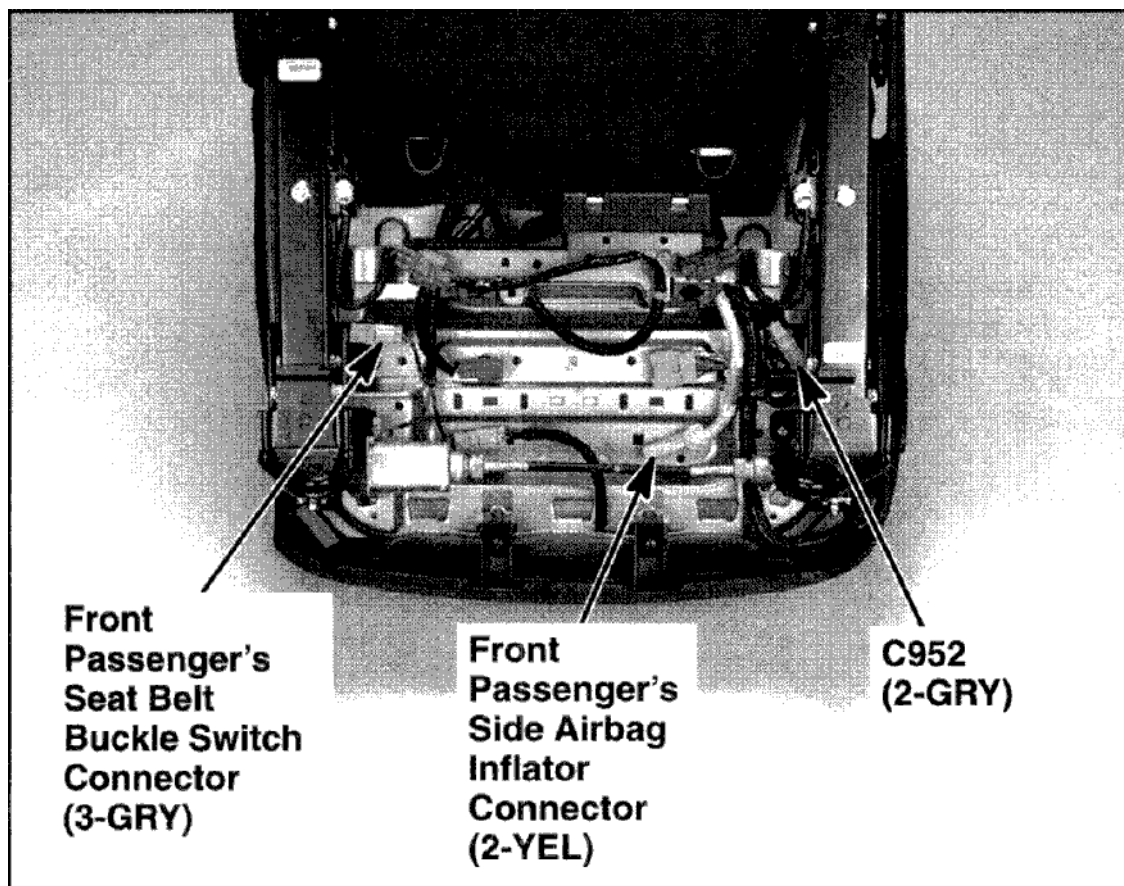 

G00447632

Fig. 72: Under Front Passenger's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

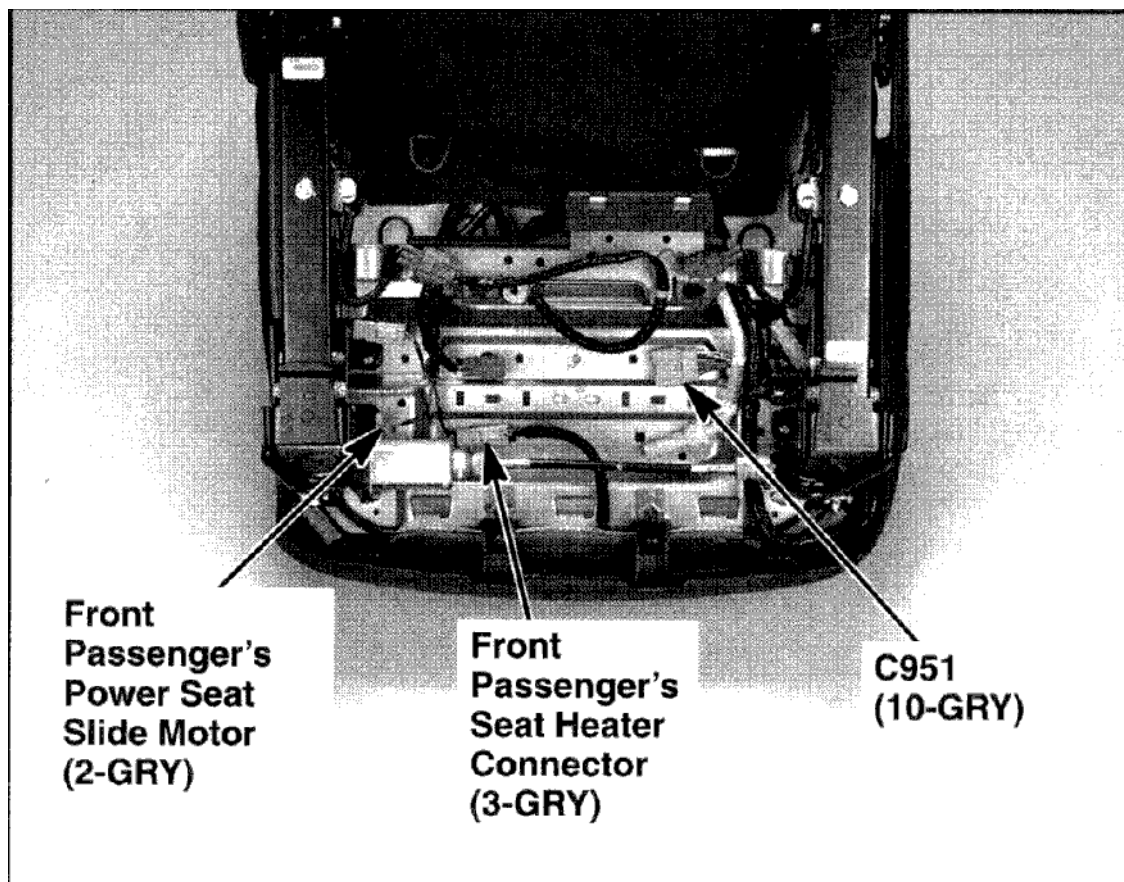

G00447633

Fig. 73: Under Front Passenger's Seat

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

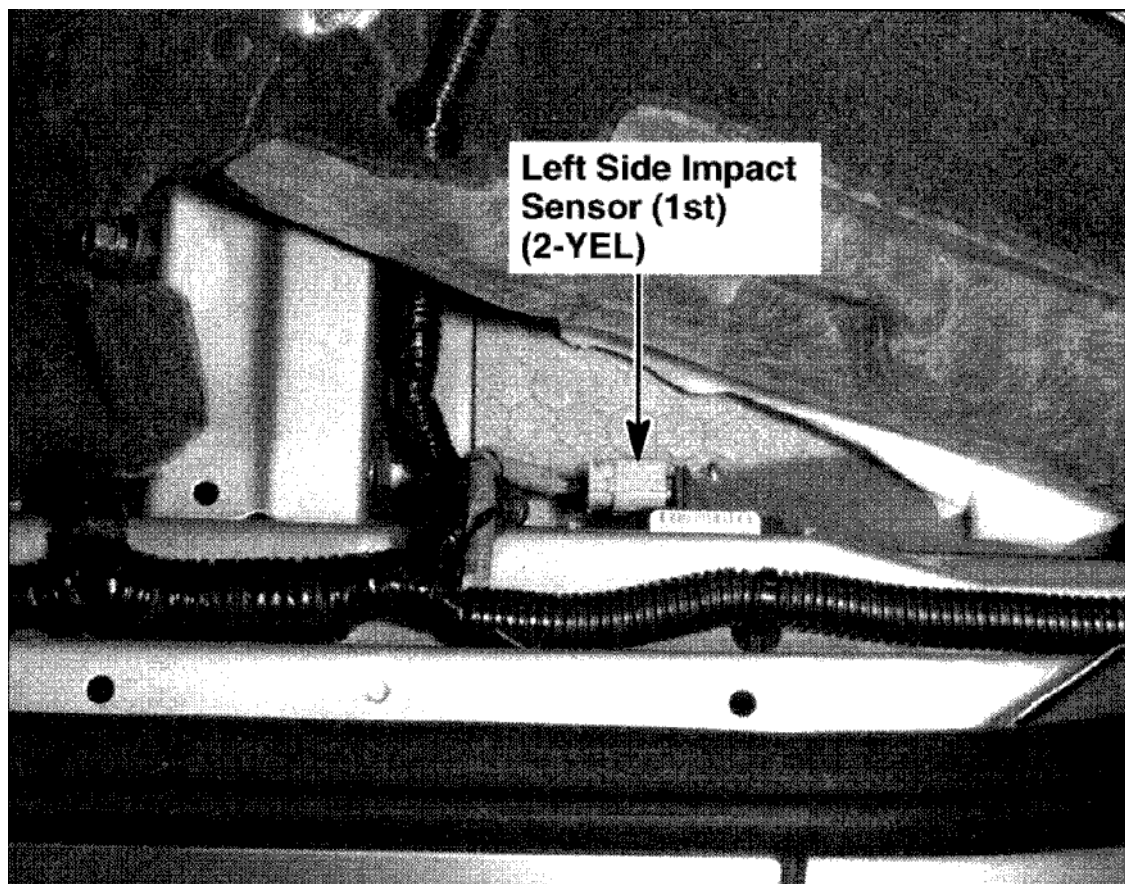

G00447669

Fig. 74: Left & Right Side Of Floor

Courtesy of AMERICAN HONDA MOTOR CO., INC.

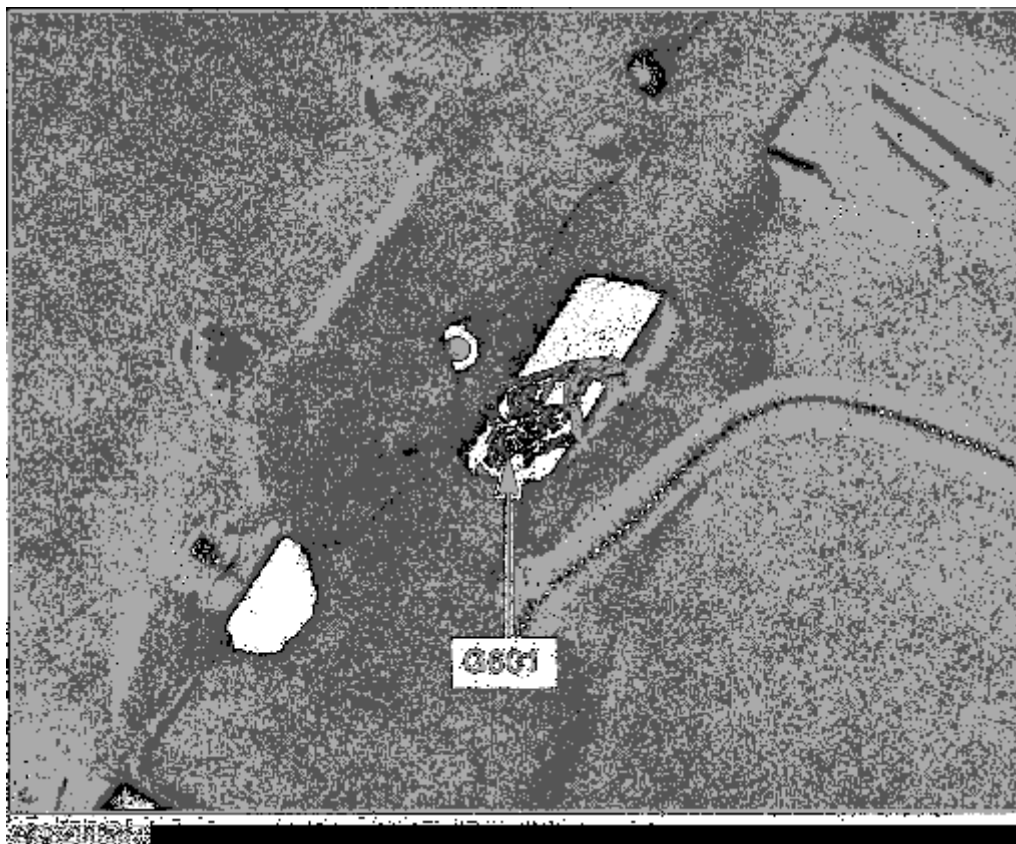 


Fig. 75: Left Side Of Floor

Courtesy of AMERICAN HONDA MOTOR CO., INC.


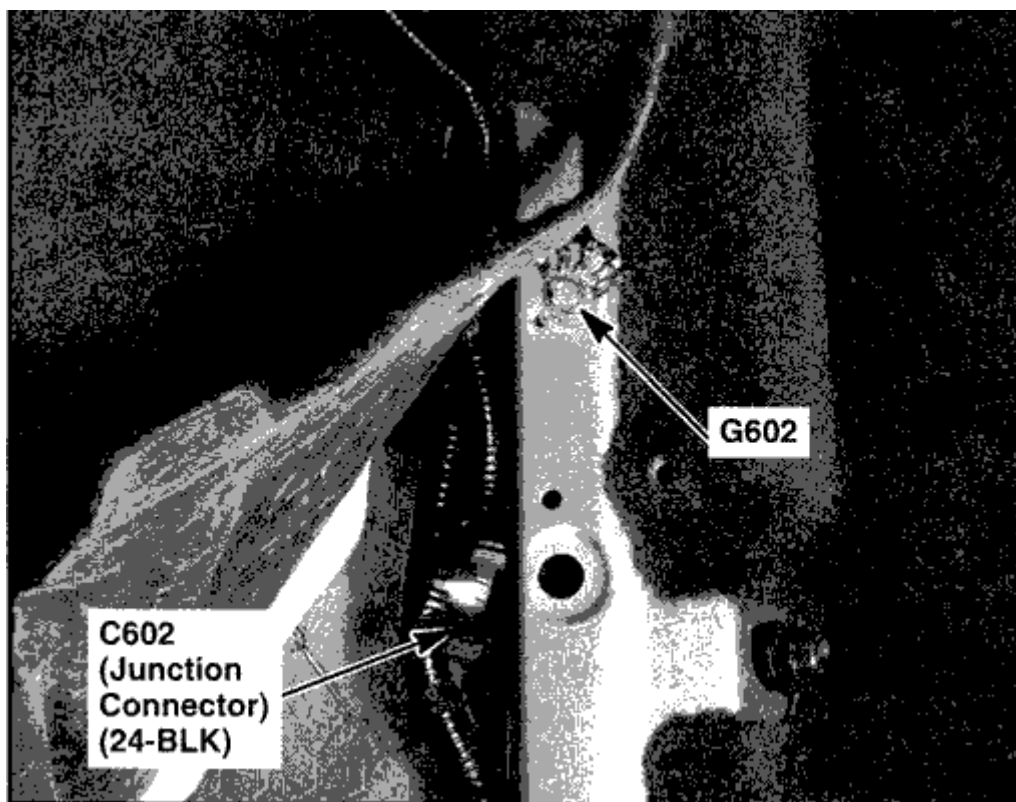 


Fig. 76: Right Side Of Floor

G00288588

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

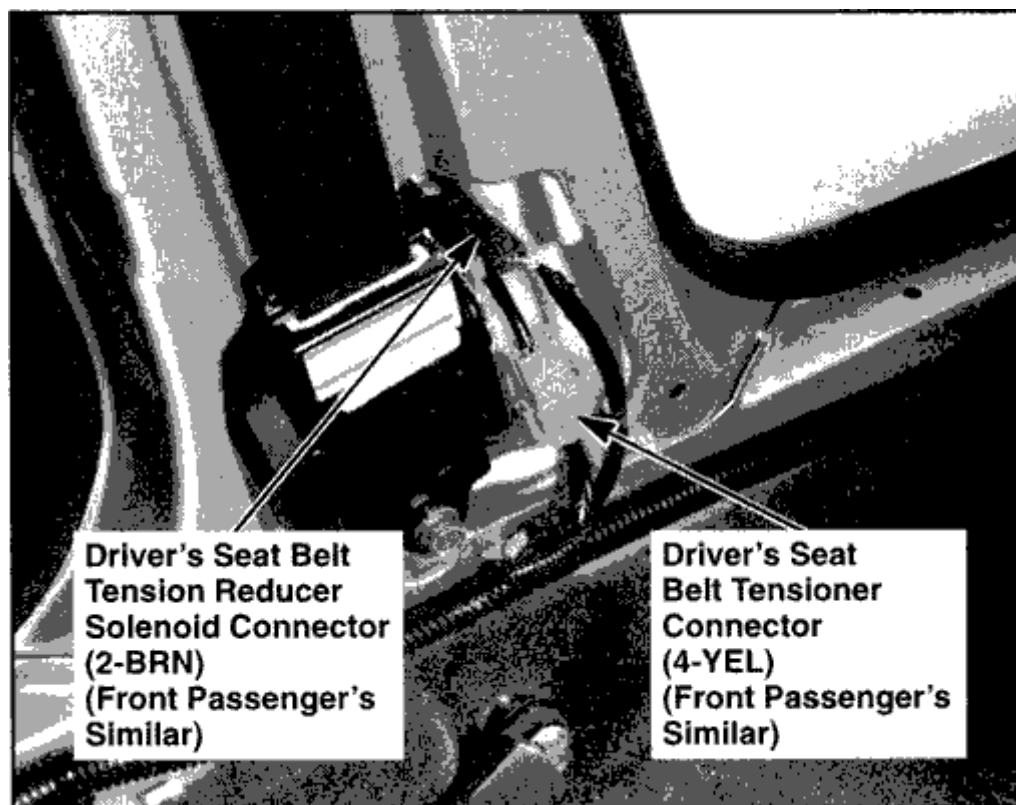

G00288589

Fig. 77: Left & Right "B" Pillar

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

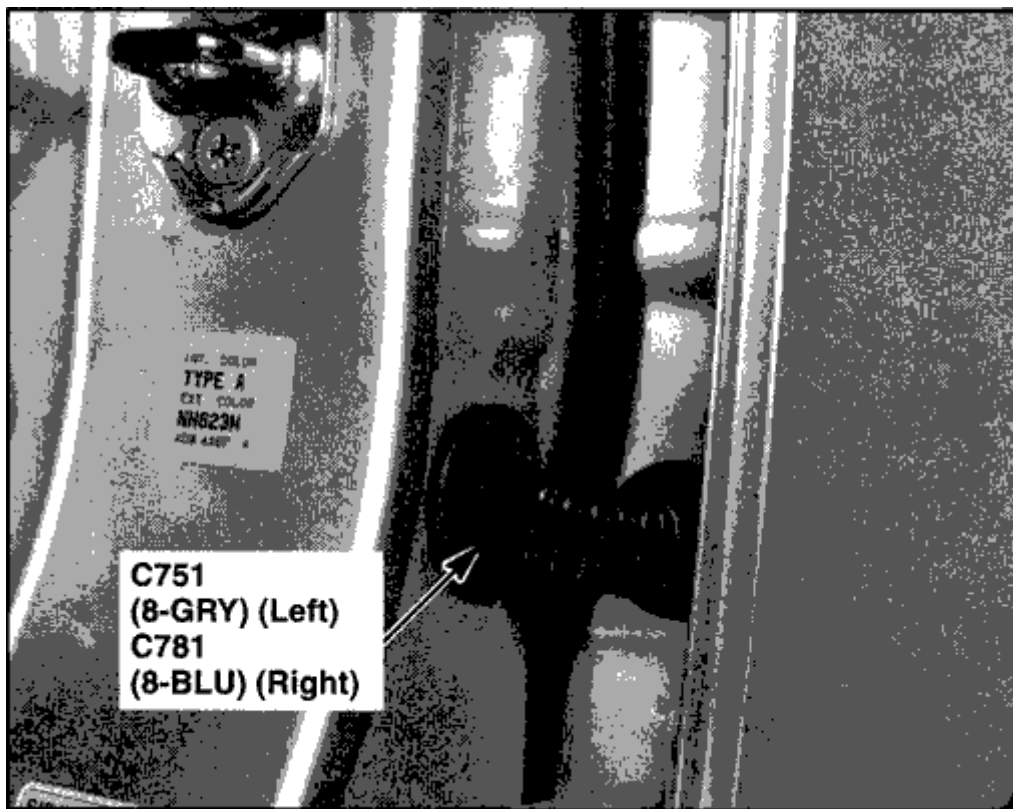

G00288591

Fig. 78: Left & Right "B" Pillar

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

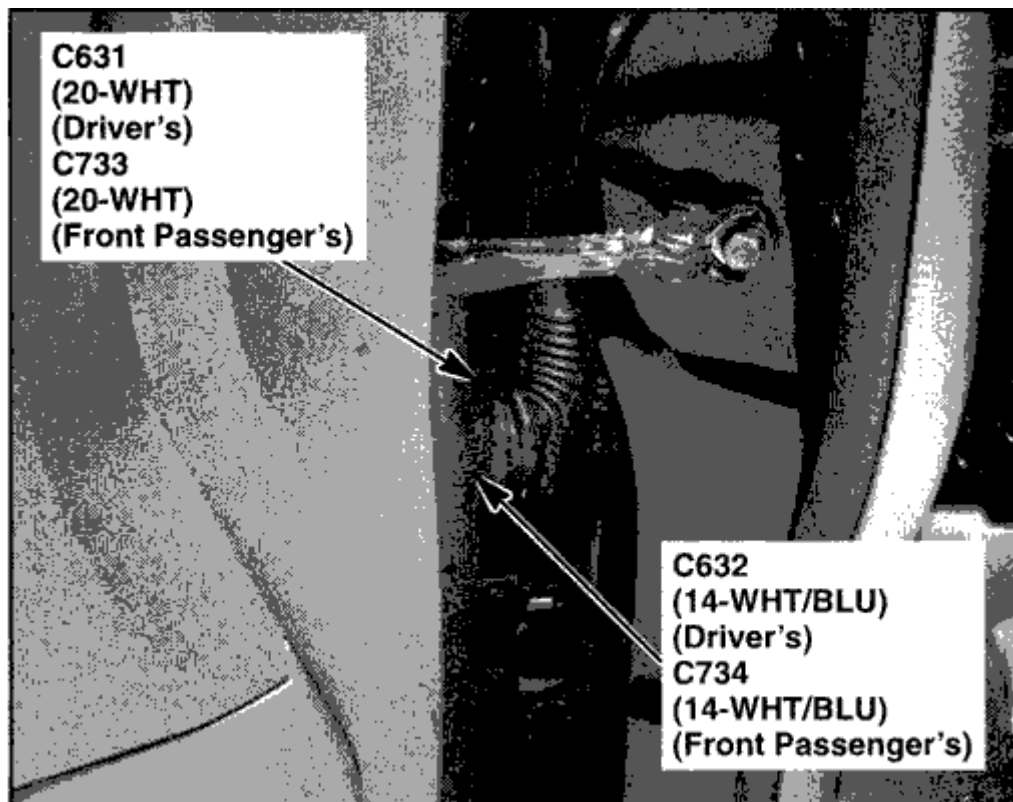

G00288596

Fig. 79: Left & Right Front Door

Courtesy of AMERICAN HONDA MOTOR CO., INC.



Fig. 80: Driver's Door

Courtesy of AMERICAN HONDA MOTOR CO., INC.


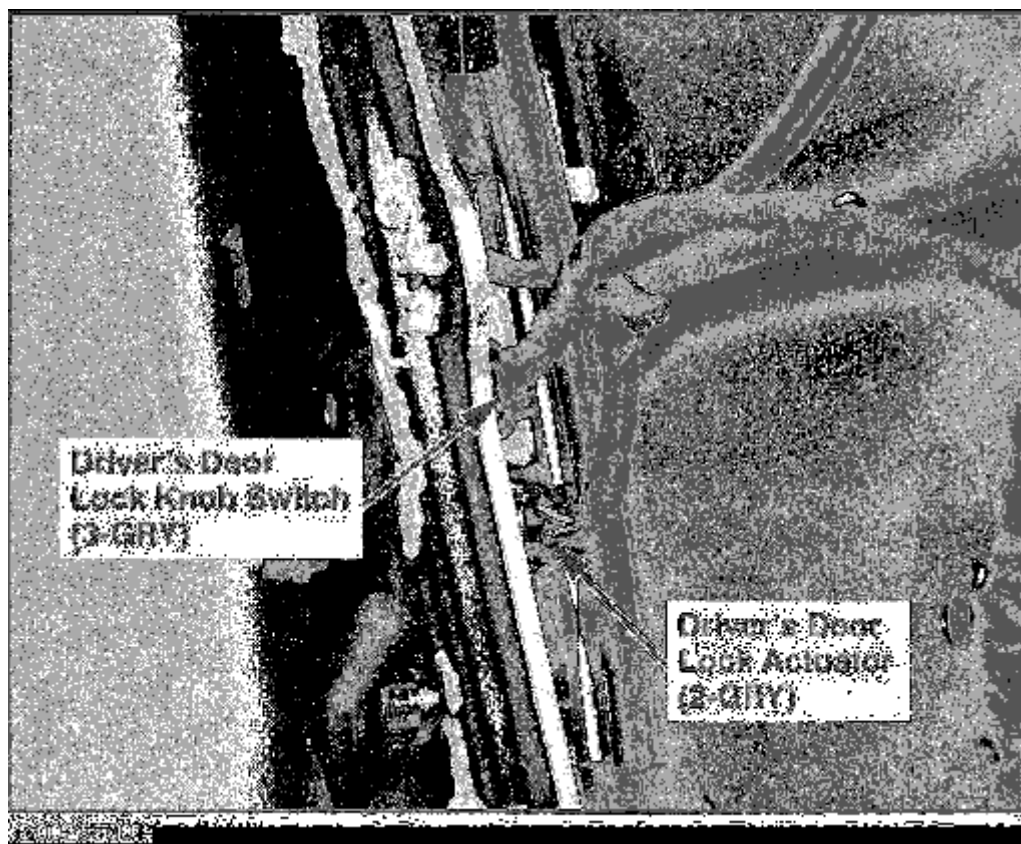 



Fig. 81: Left & Right Front Door
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

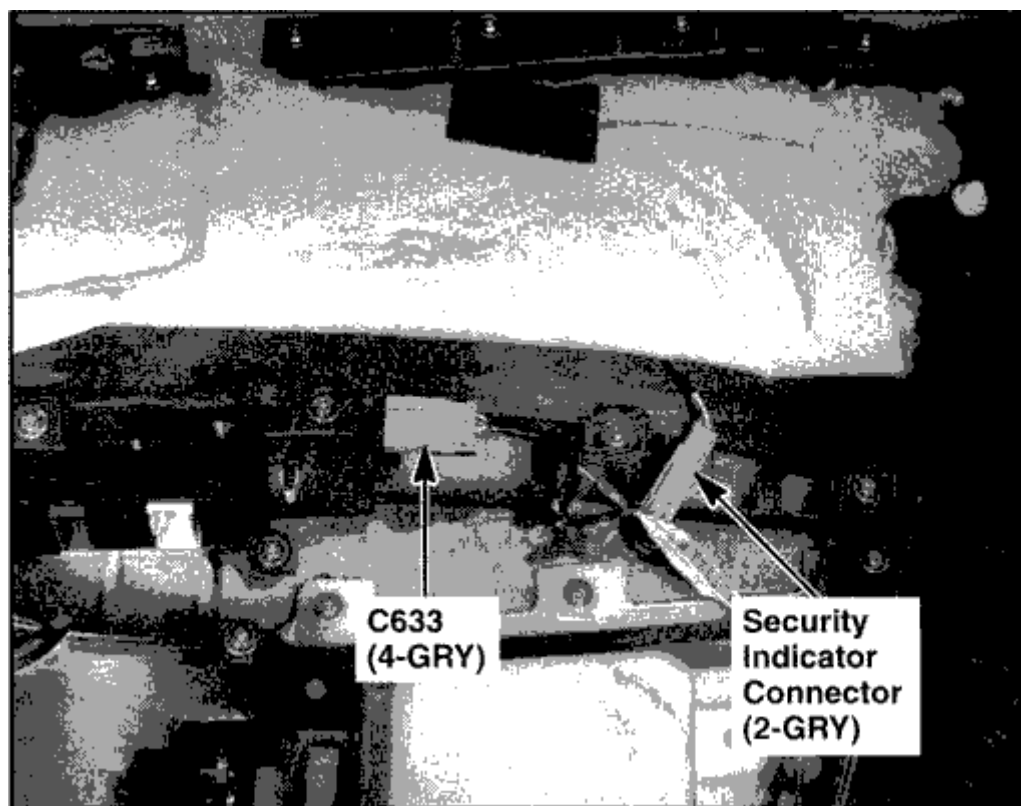 

G00288603

Fig. 82: Driver's Door

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

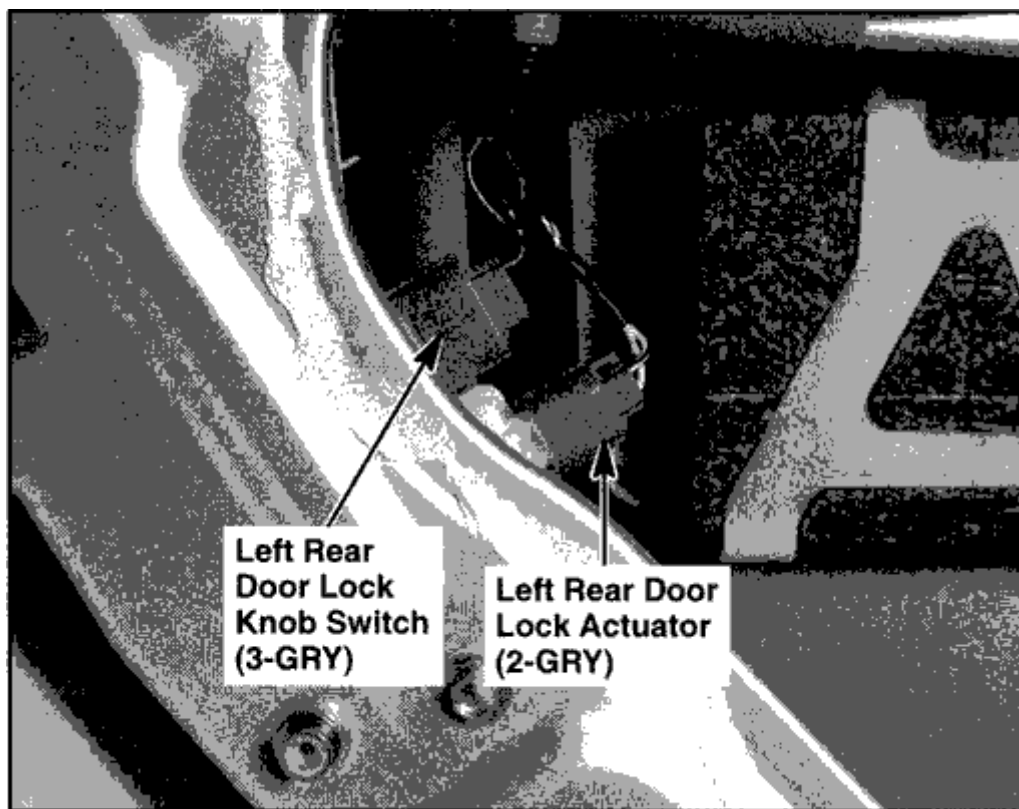


Left Rear
Door Lock
Knob Switch
(3-GRY)

Left Rear Door
Lock Actuator
(2-GRY)

G00288607

Fig. 83: Left & Right Rear Door

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

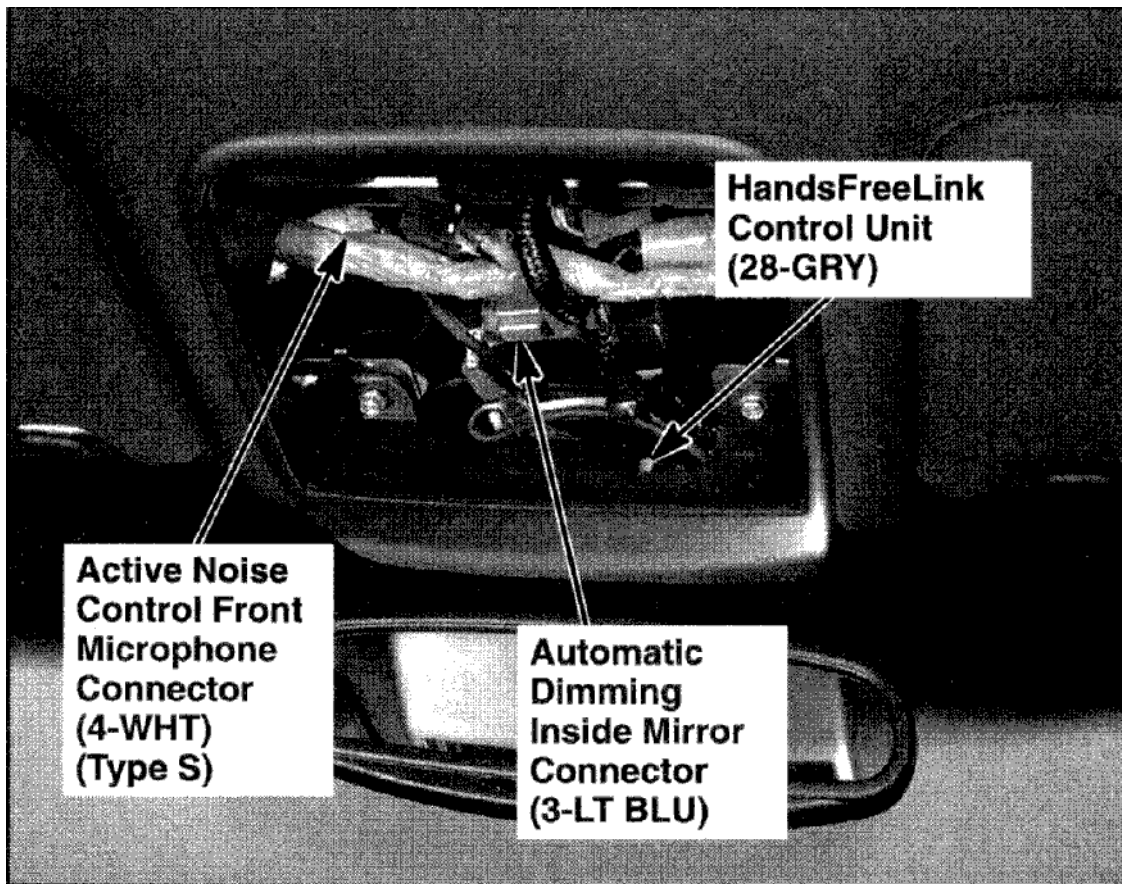

G00447634

Fig. 84: Front Of Roof

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

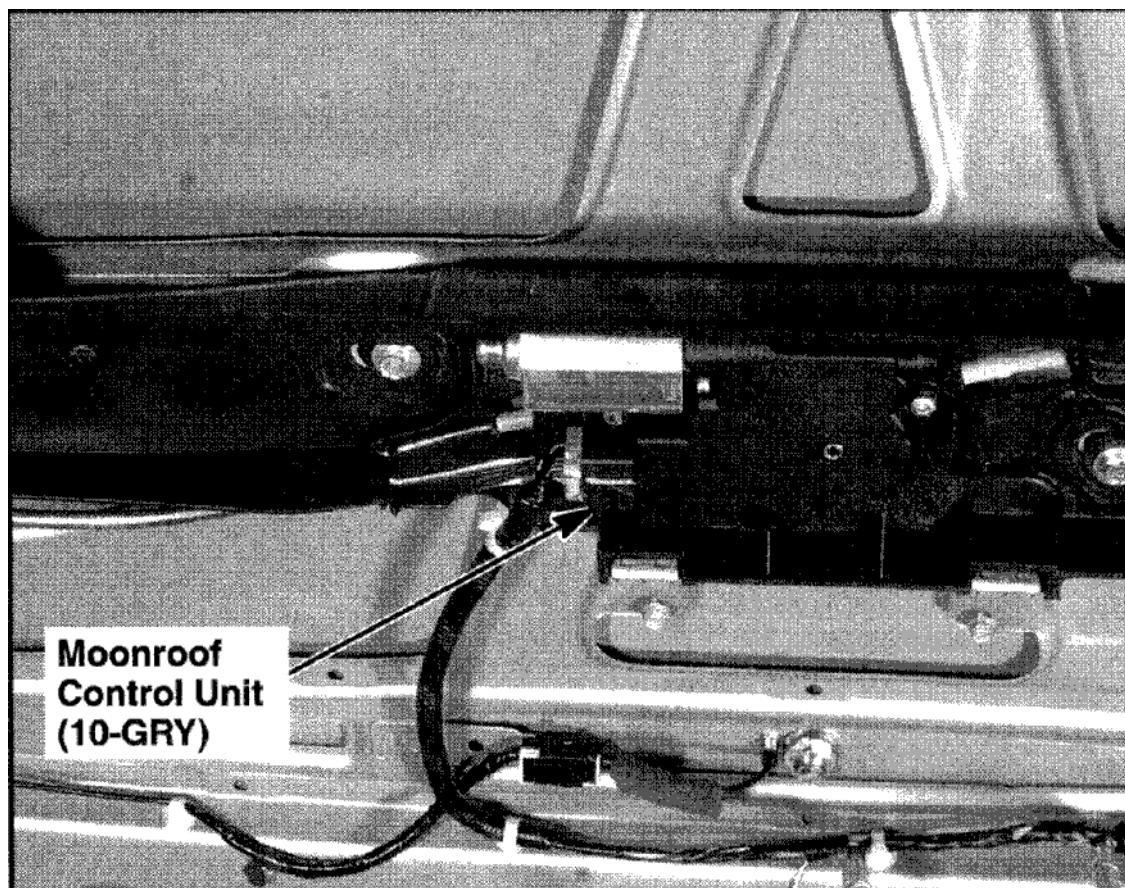

G00447635

Fig. 85: Rear Of Roof

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

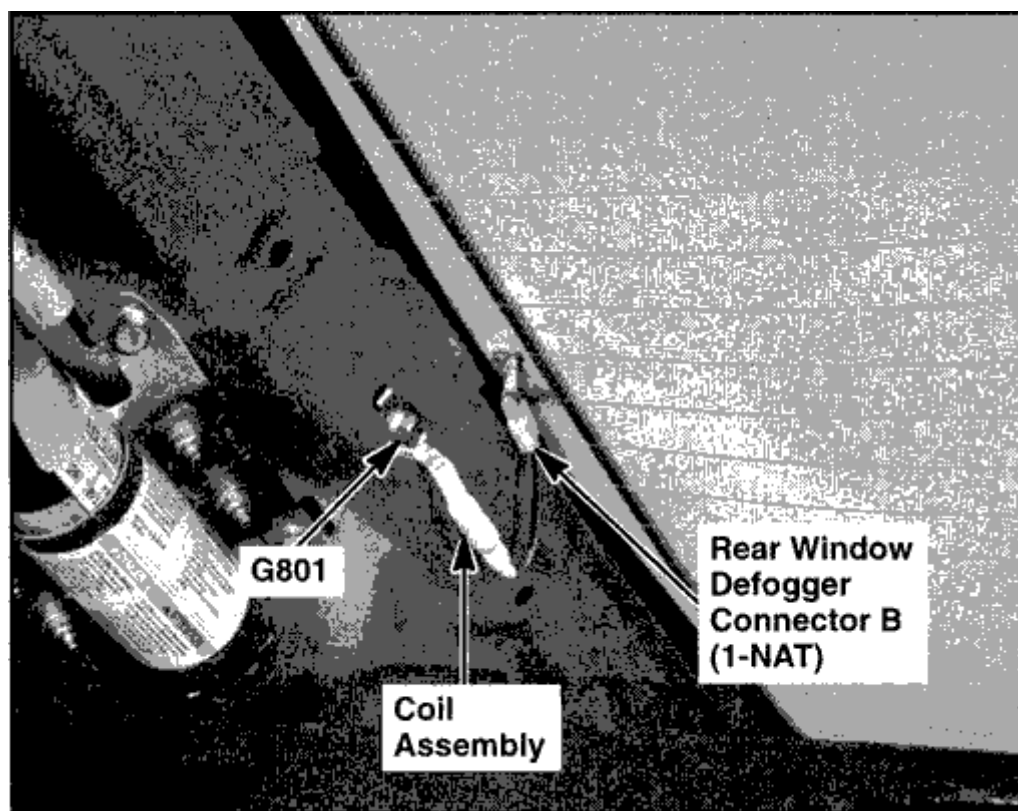

G00288616


Fig. 86: Right "C" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.



Fig. 87: Left "C" Pillar

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

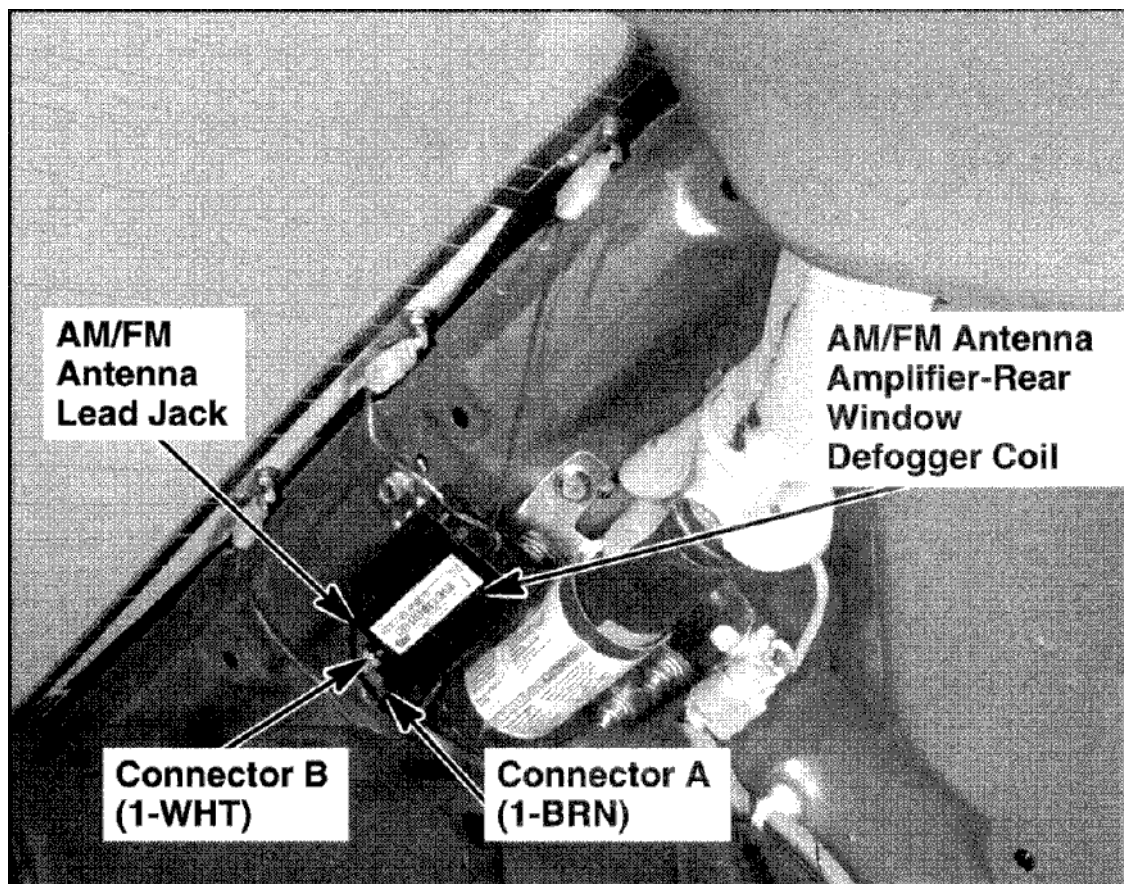

G00447636

Fig. 88: Left "C" Pillar

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

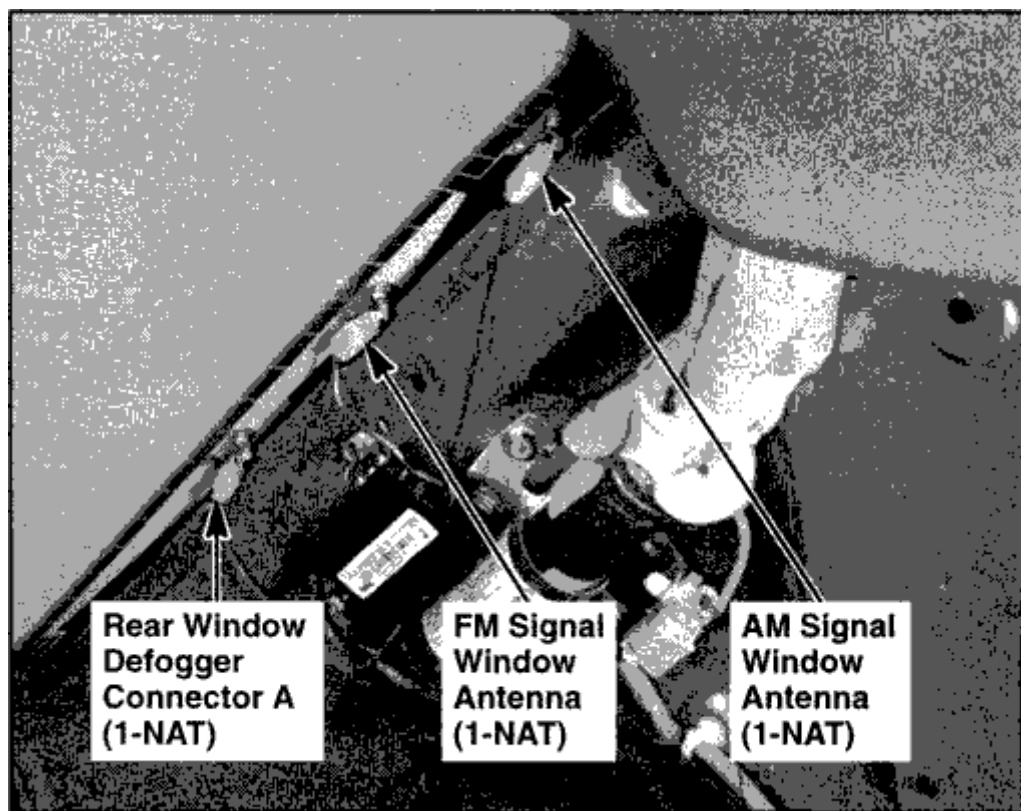

G00288619

Fig. 89: Left "C" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.

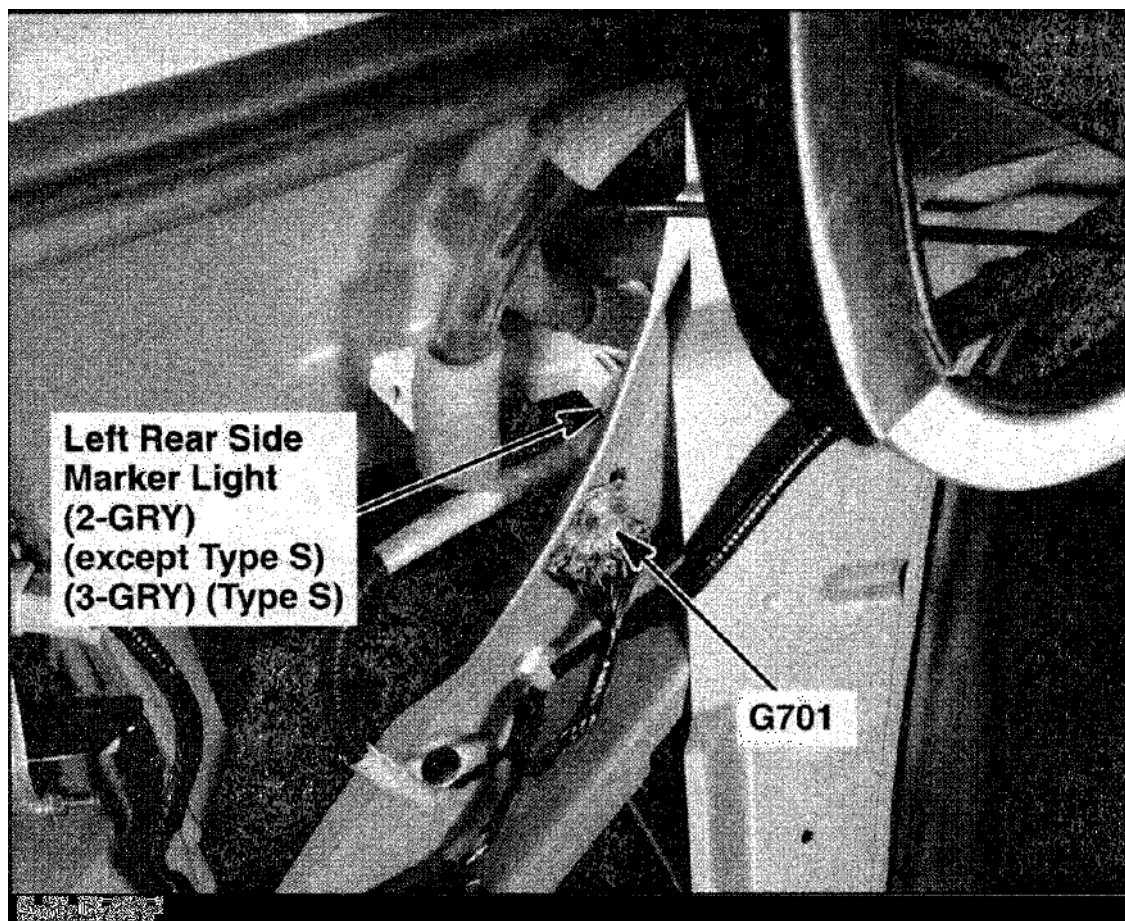 


Fig. 90: Left Side Of Trunk (Right Similar)

Courtesy of AMERICAN HONDA MOTOR CO., INC.


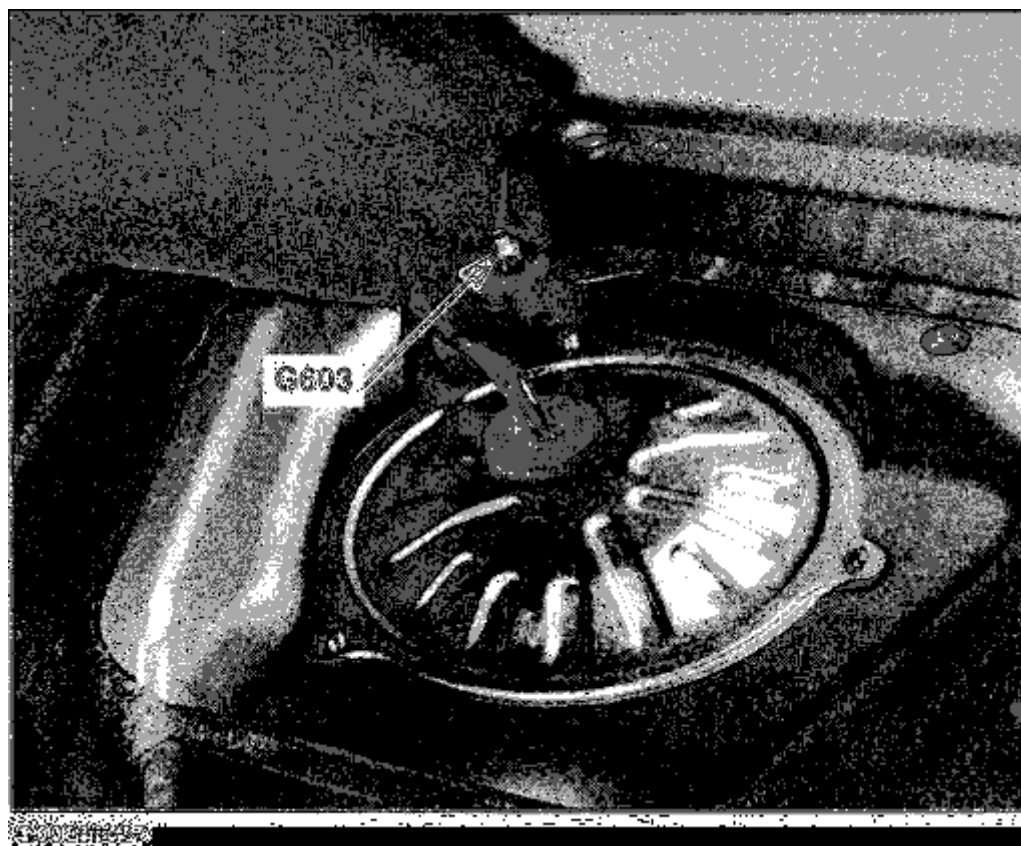 


Fig. 91: Front Of Trunk
Courtesy of AMERICAN HONDA MOTOR CO., INC.

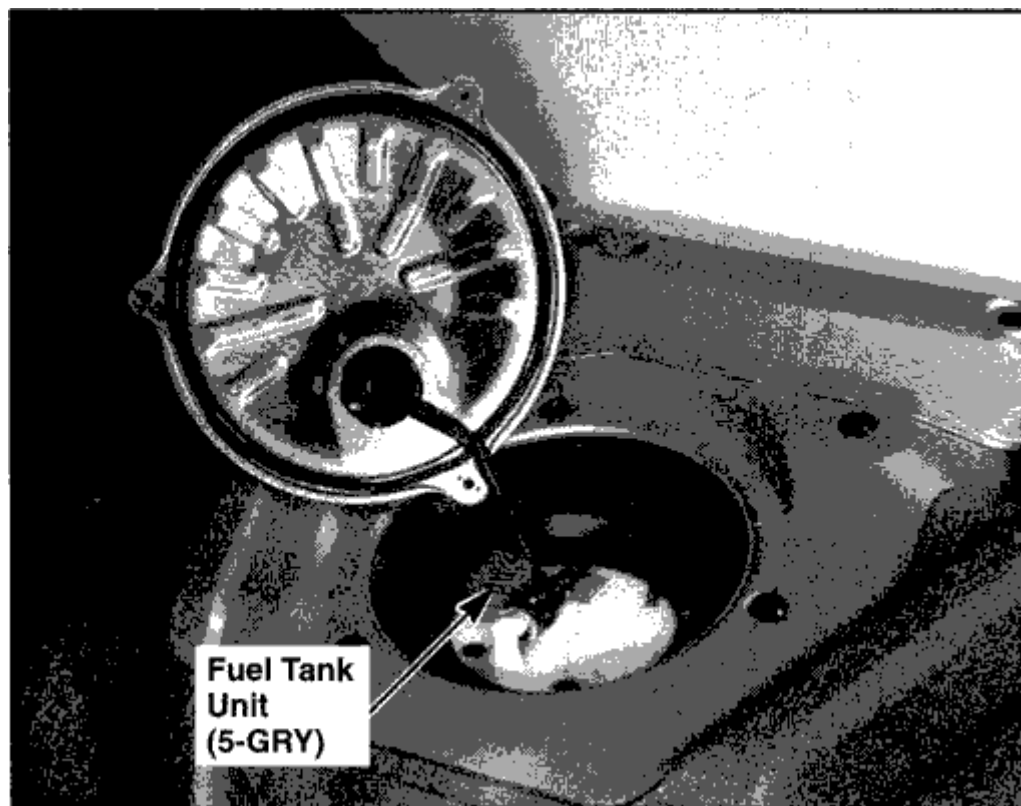 

G00288628

Fig. 92: Front Of Trunk

Courtesy of AMERICAN HONDA MOTOR CO., INC.


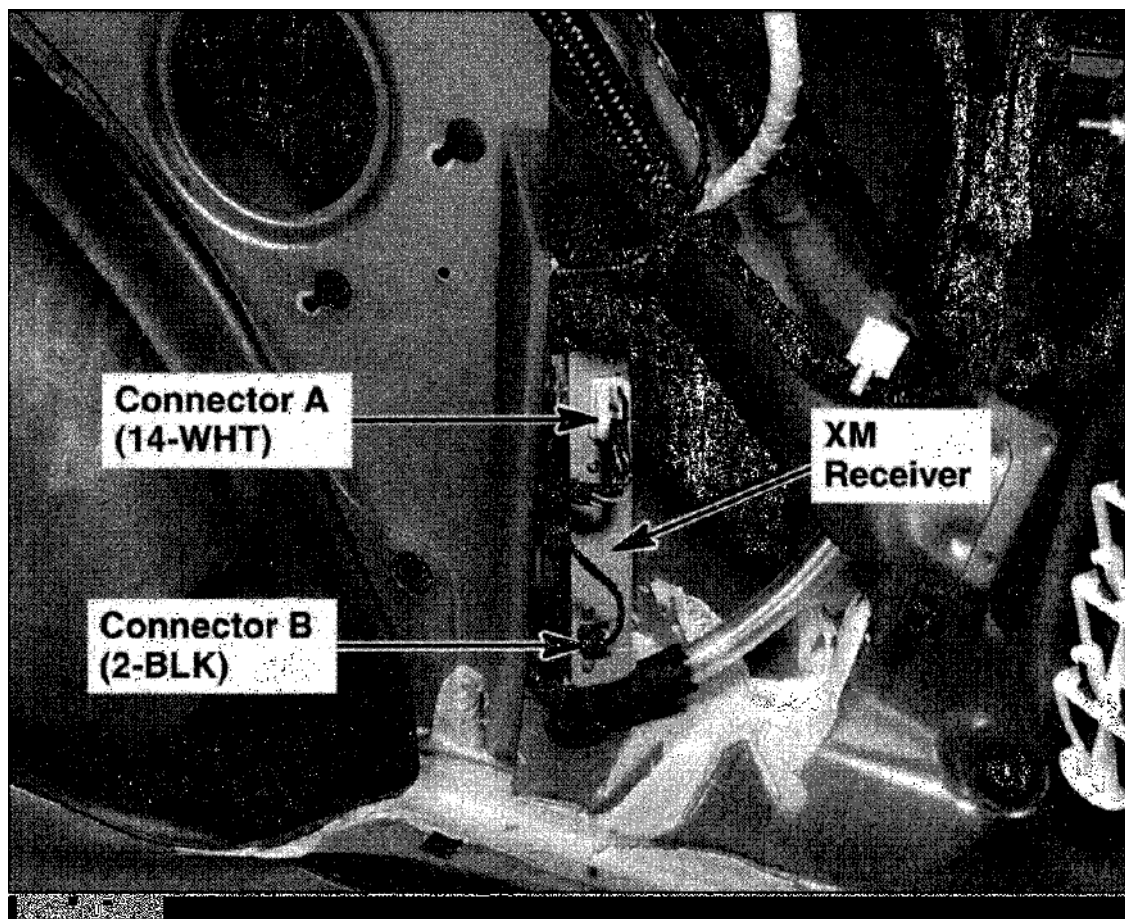 



Fig. 93: Right Side Of Trunk (Except USA Navigation)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

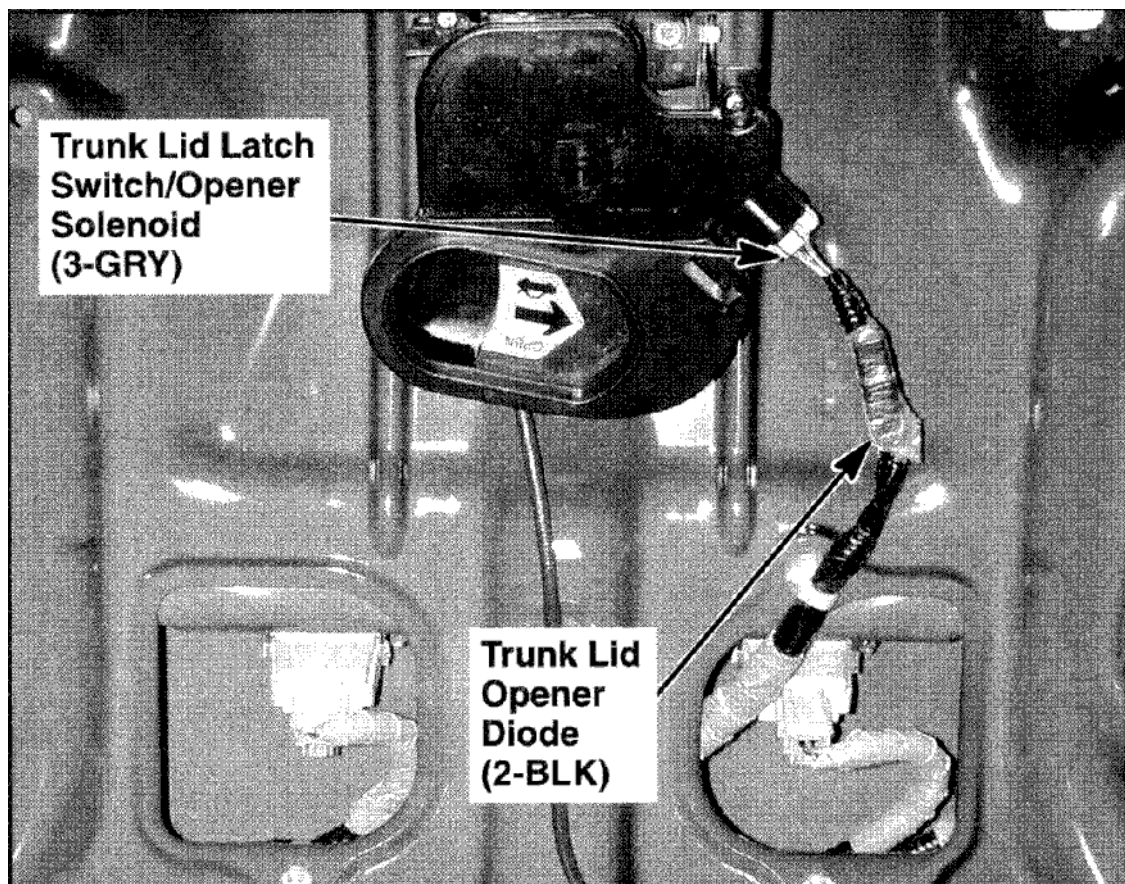 

G00447639

Fig. 94: Middle Of Trunk Lid

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

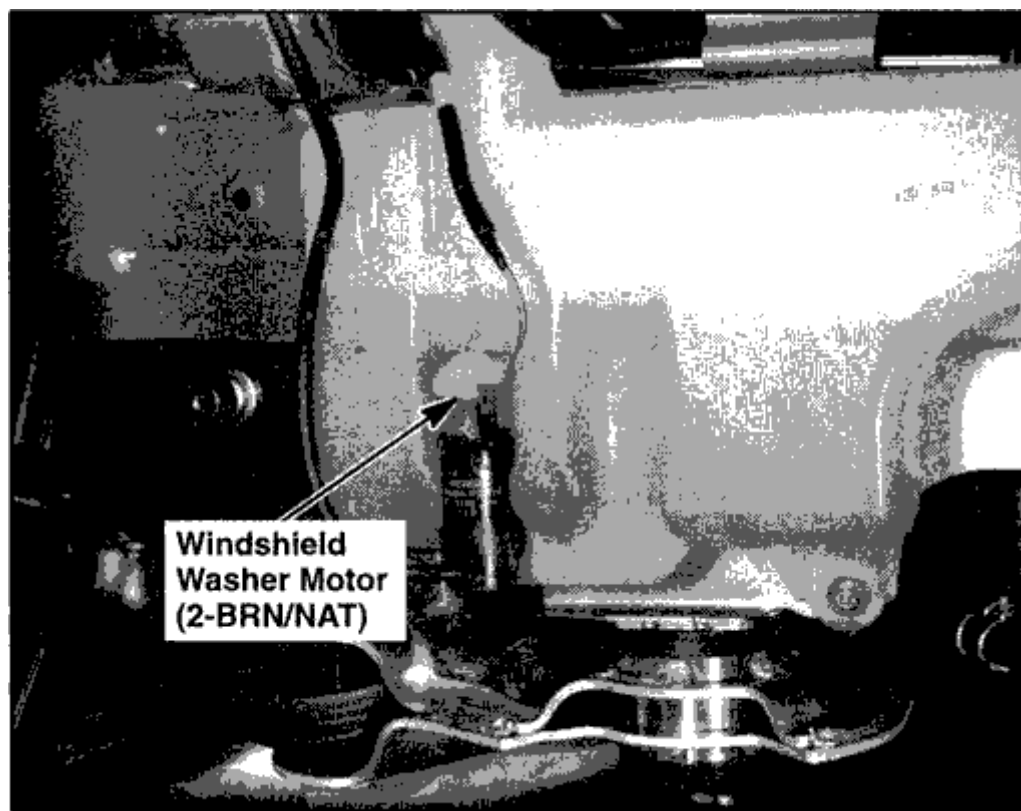

G00288634

Fig. 95: Right Side Of Front Bumper

Courtesy of AMERICAN HONDA MOTOR CO., INC.


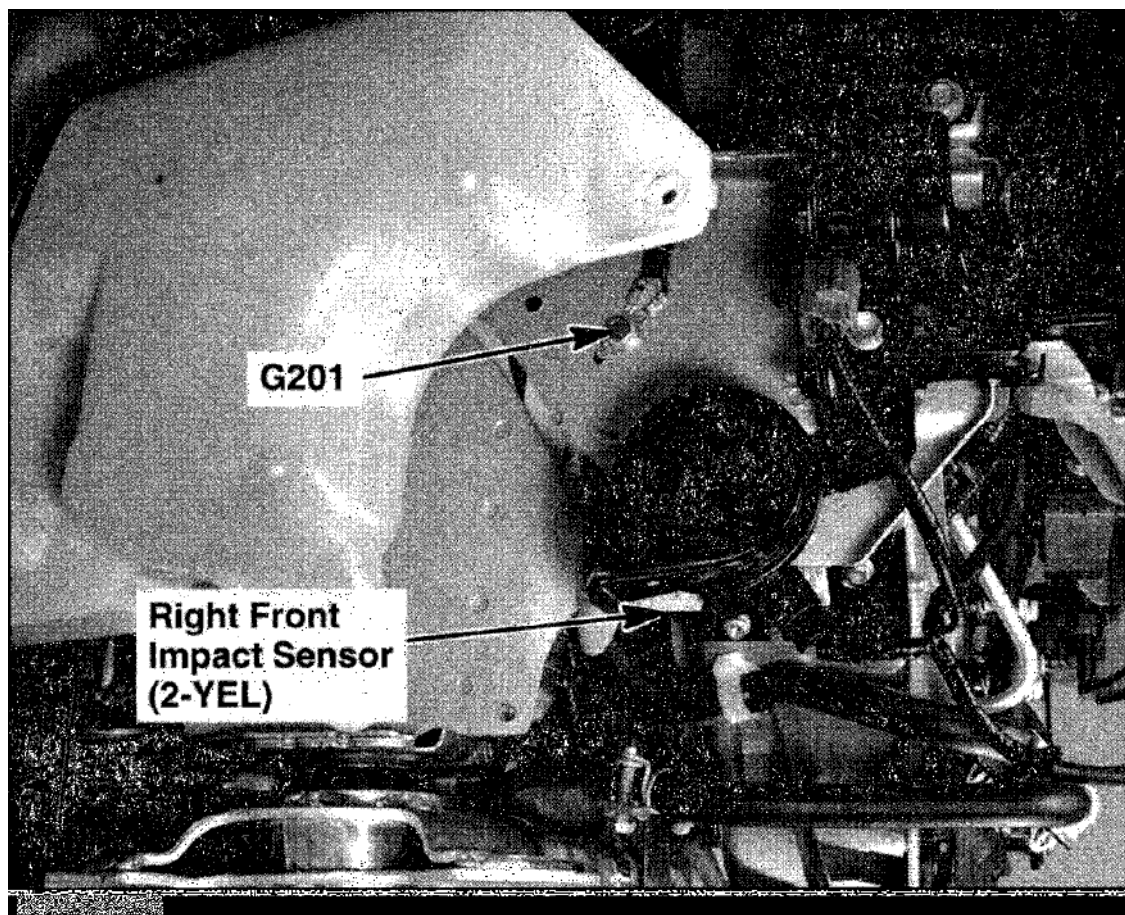 


Fig. 96: Behind Right Side Of Front Bumper

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

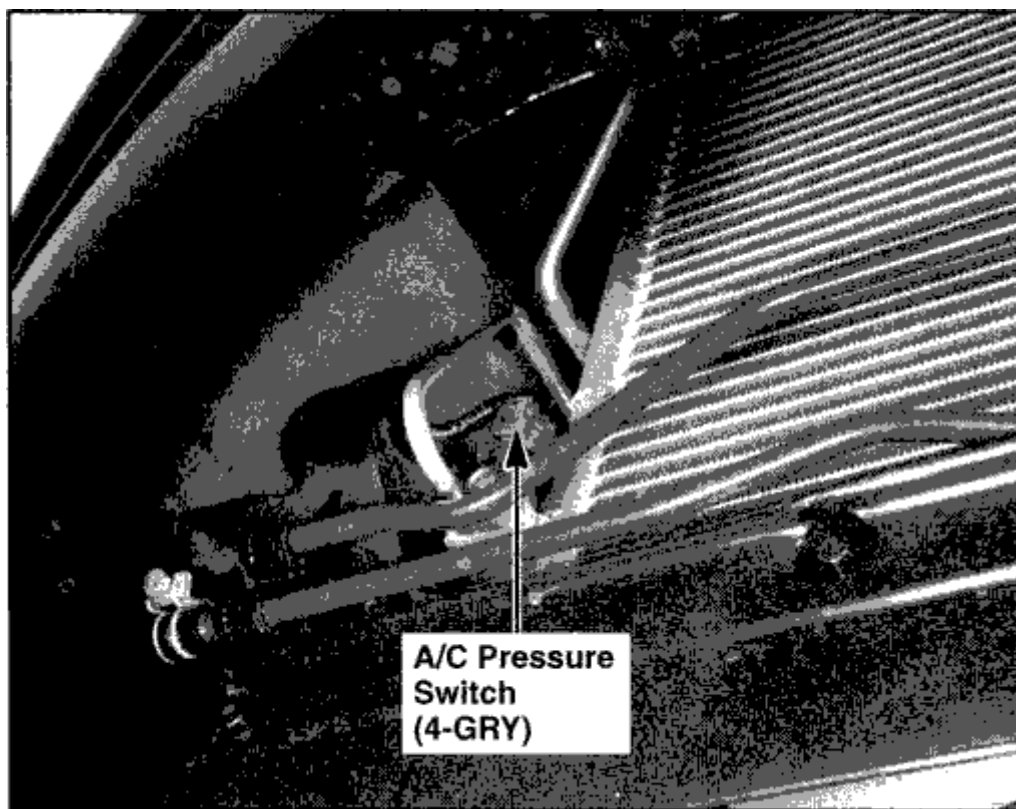

G00288636

Fig. 97: Right Side Of Front Bumper

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

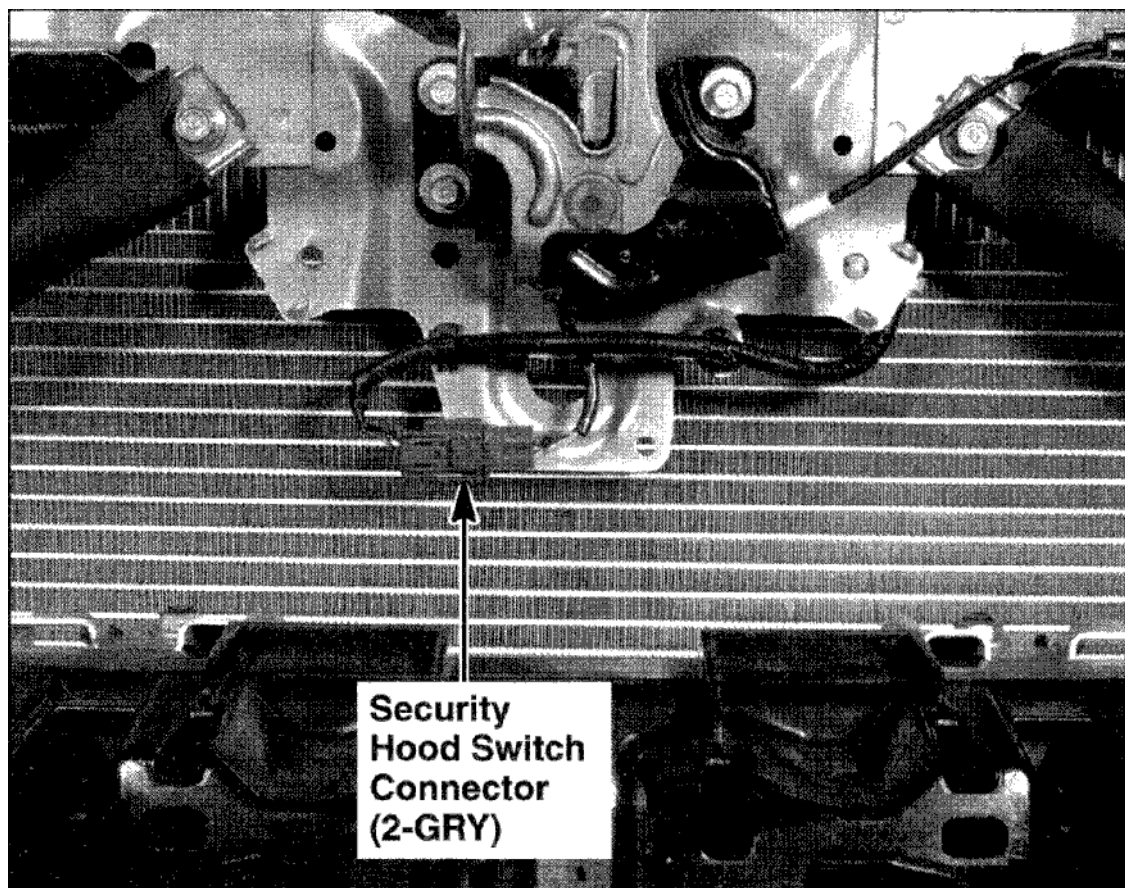

G00447642

Fig. 98: Behind Middle Of Front Bumper

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

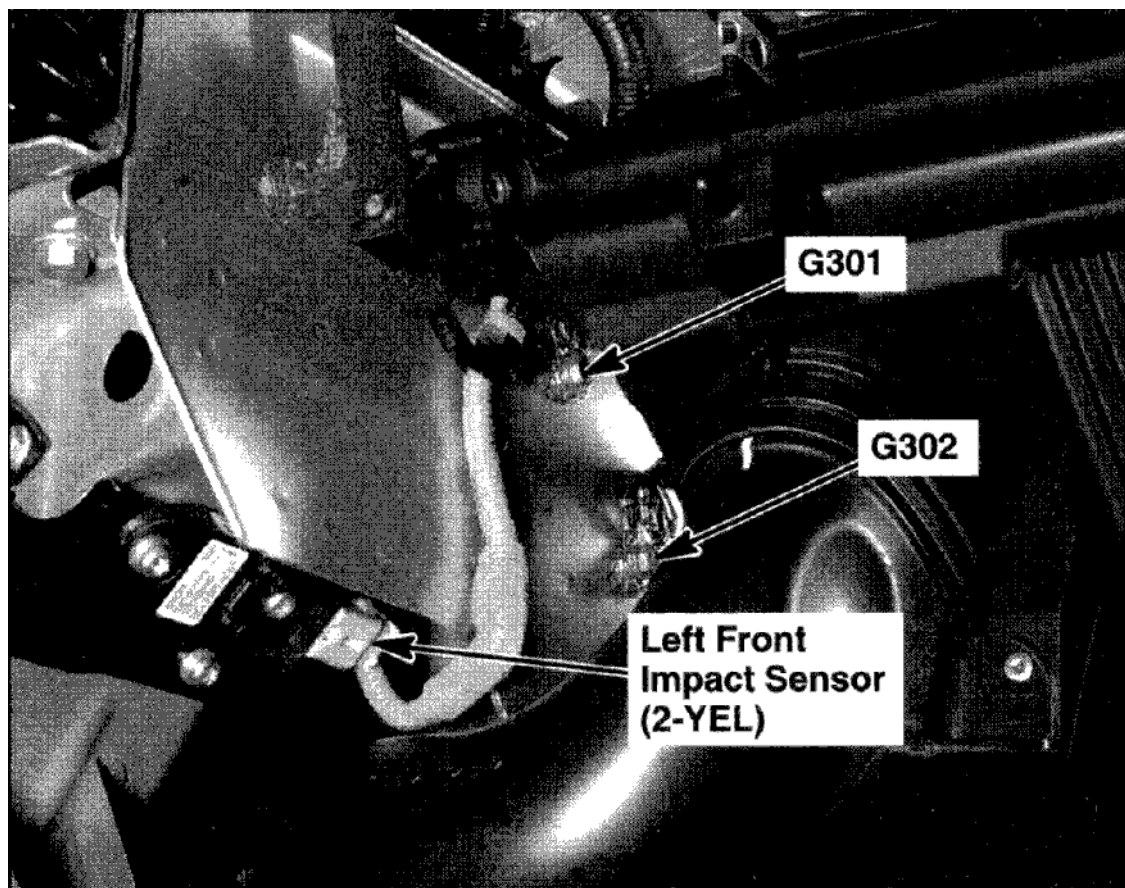

G00447641

Fig. 99: Behind Left Side Of Front Bumper

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

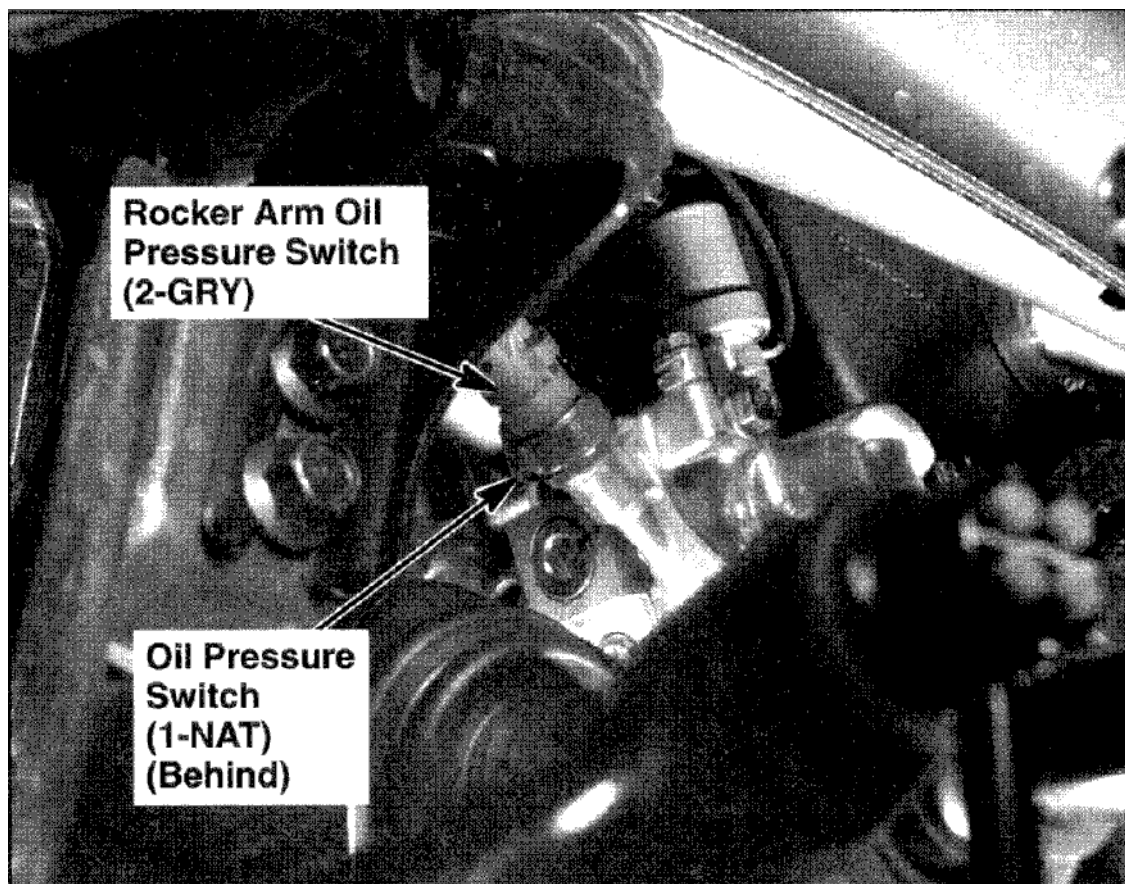

G00447682

Fig. 100: Right Side Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

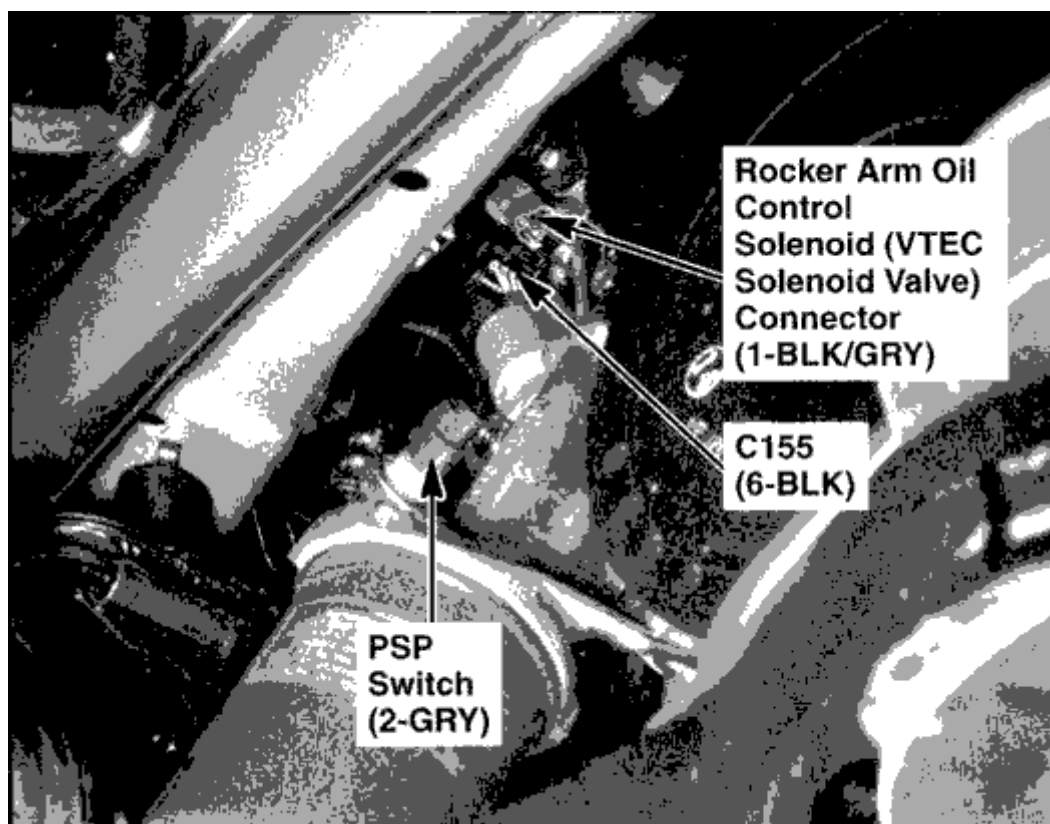

G00421351

Fig. 101: Right Side Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

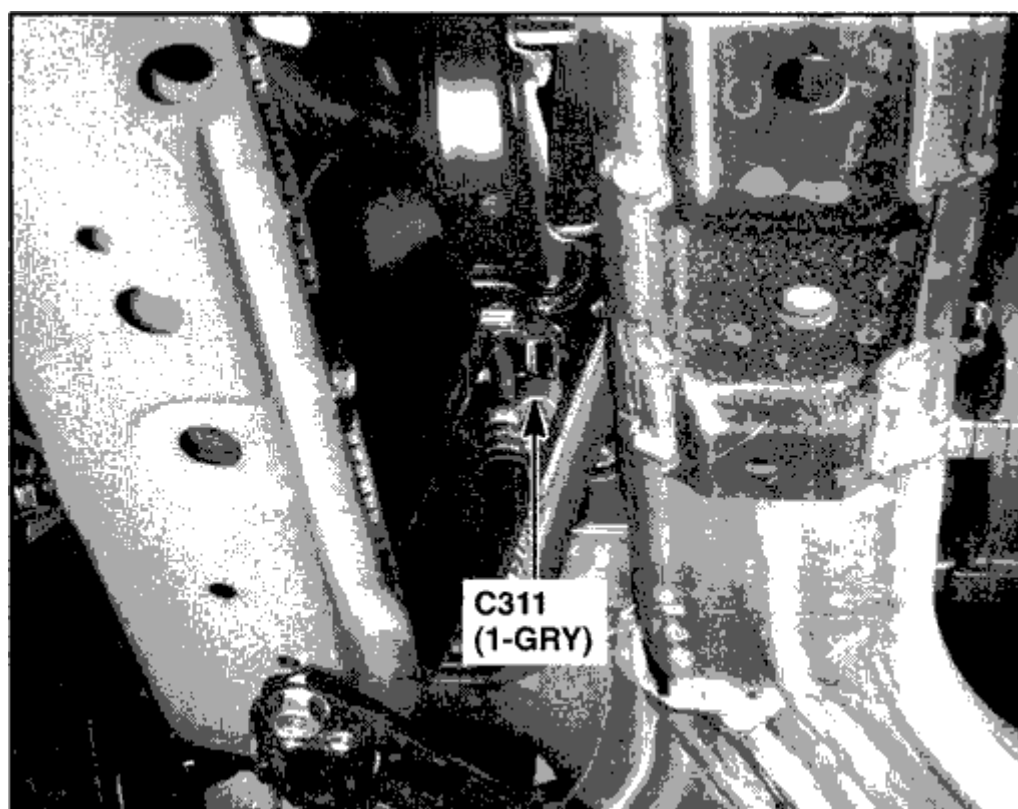

G00288643

Fig. 102: Right Side Of Engine Compartment

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

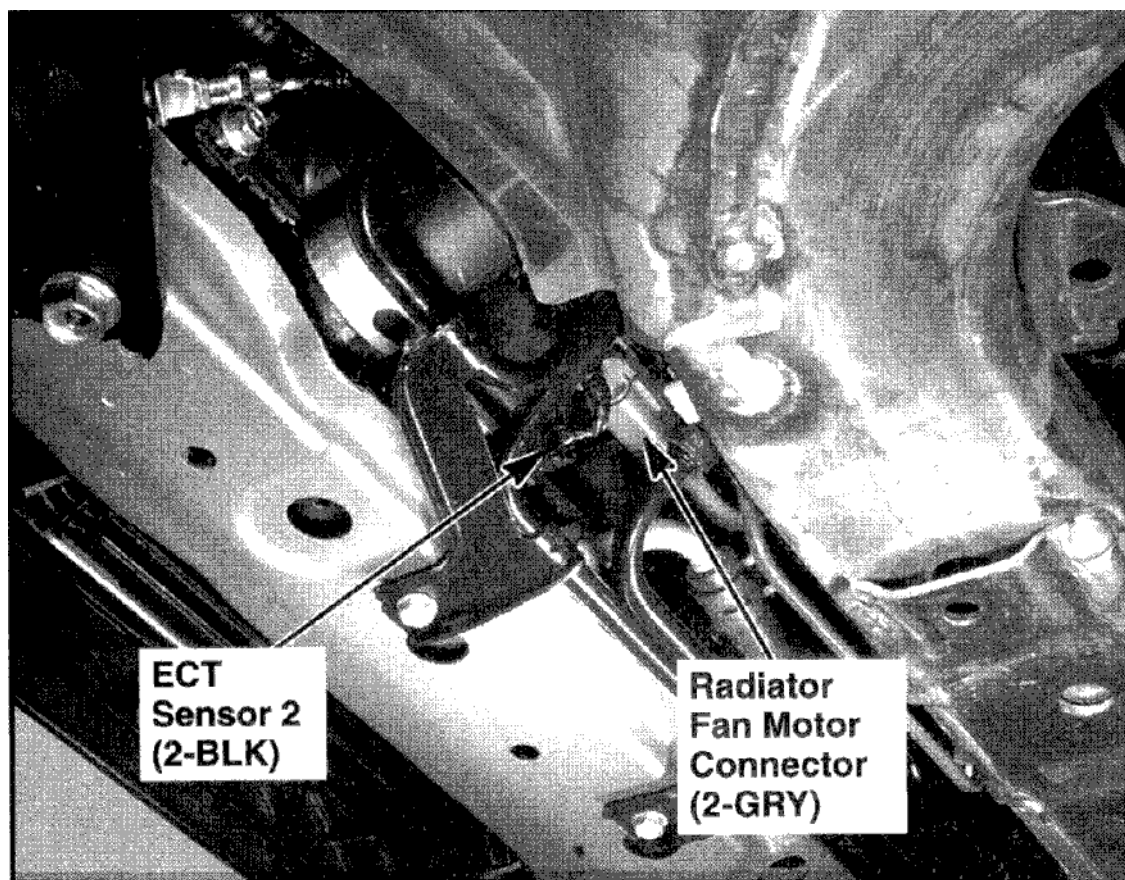

G00447644

Fig. 103: Under Front Of Engine Compartment

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

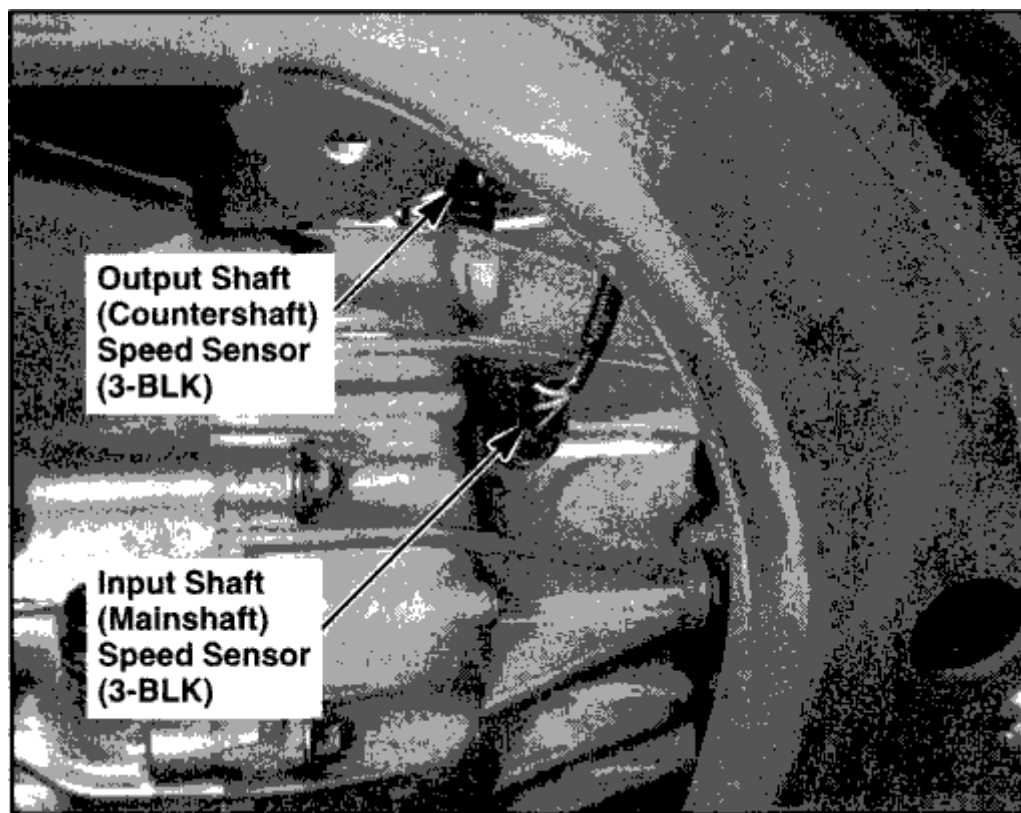

G00288646

Fig. 104: Transmission Housing (M/T)

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

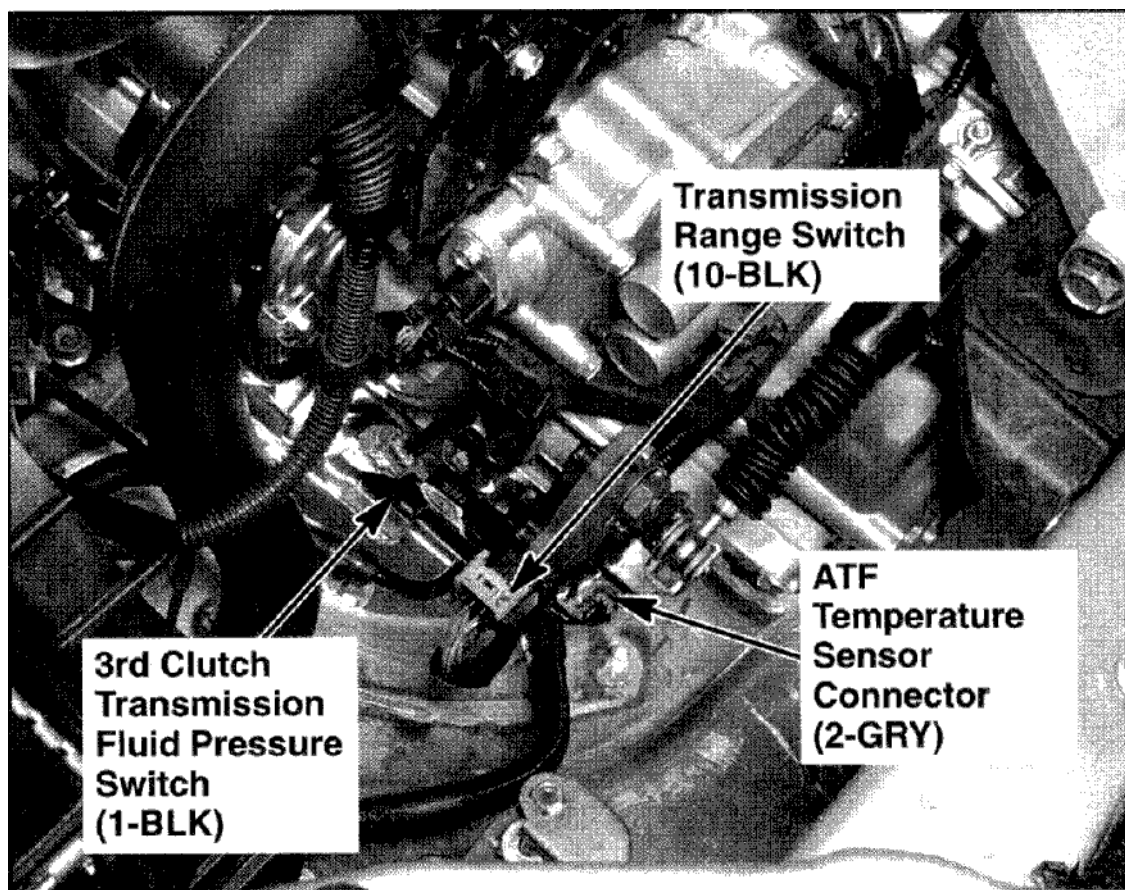

G00447647

Fig. 105: Transmission Housing (A/T)

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

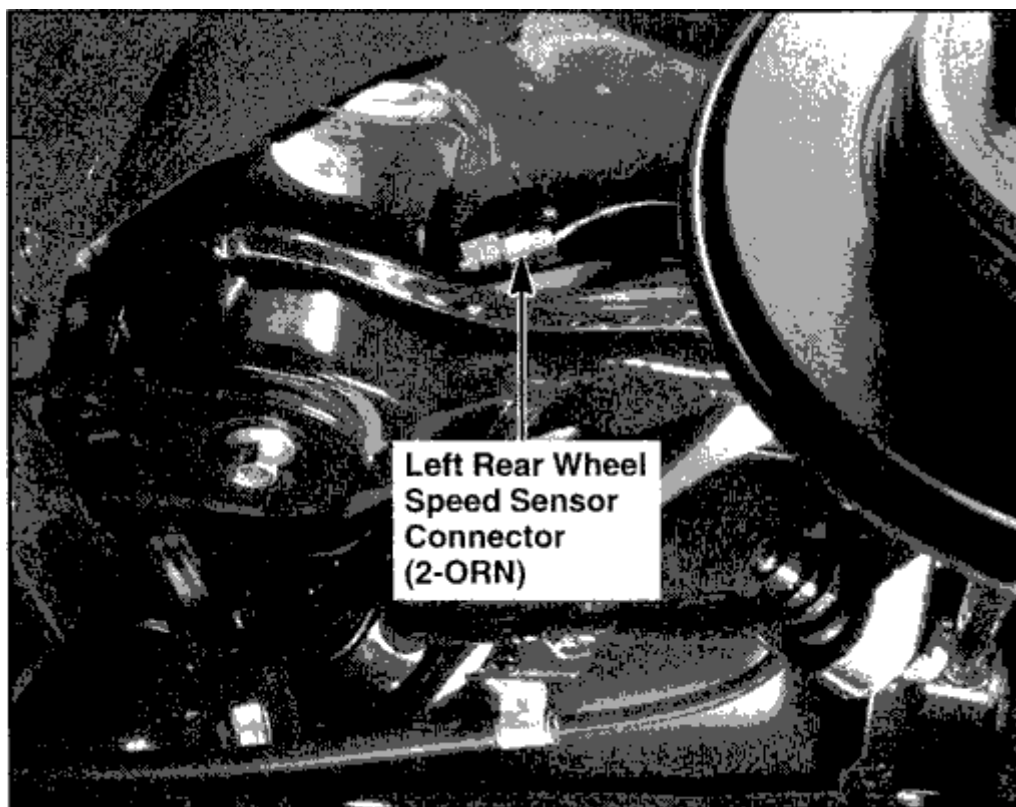

G00288649

Fig. 106: Under Left & Right Rear Of Vehicle
 Courtesy of AMERICAN HONDA MOTOR CO., INC.


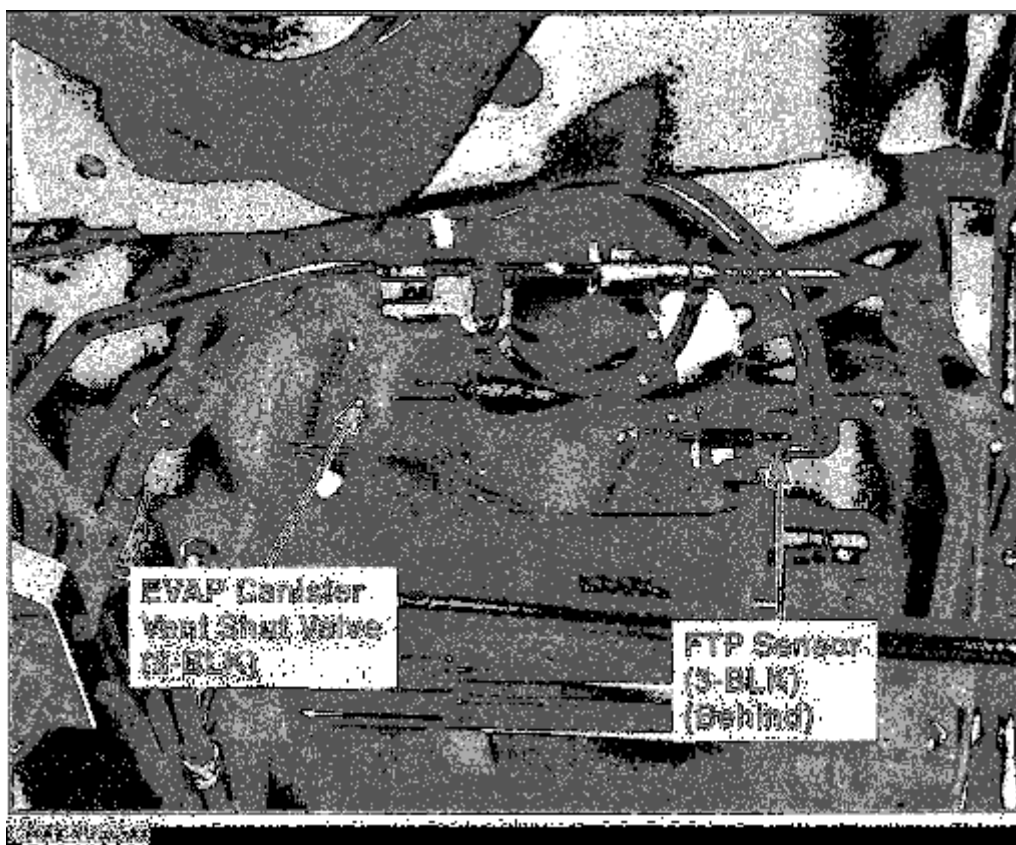 


Fig. 107: Under Left Rear Of Vehicle

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

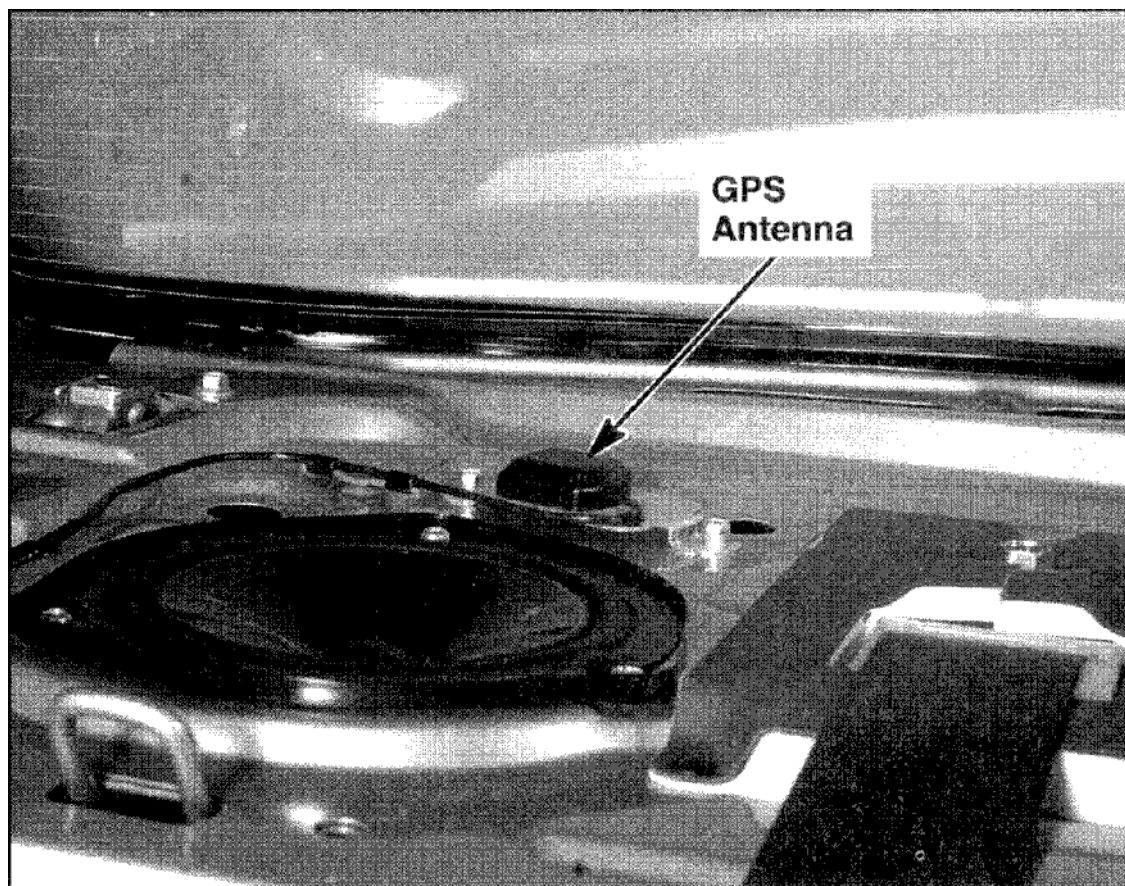

G00447674

Fig. 108: Right Side Of Rear Shelf (Navigation)

Courtesy of AMERICAN HONDA MOTOR CO., INC.


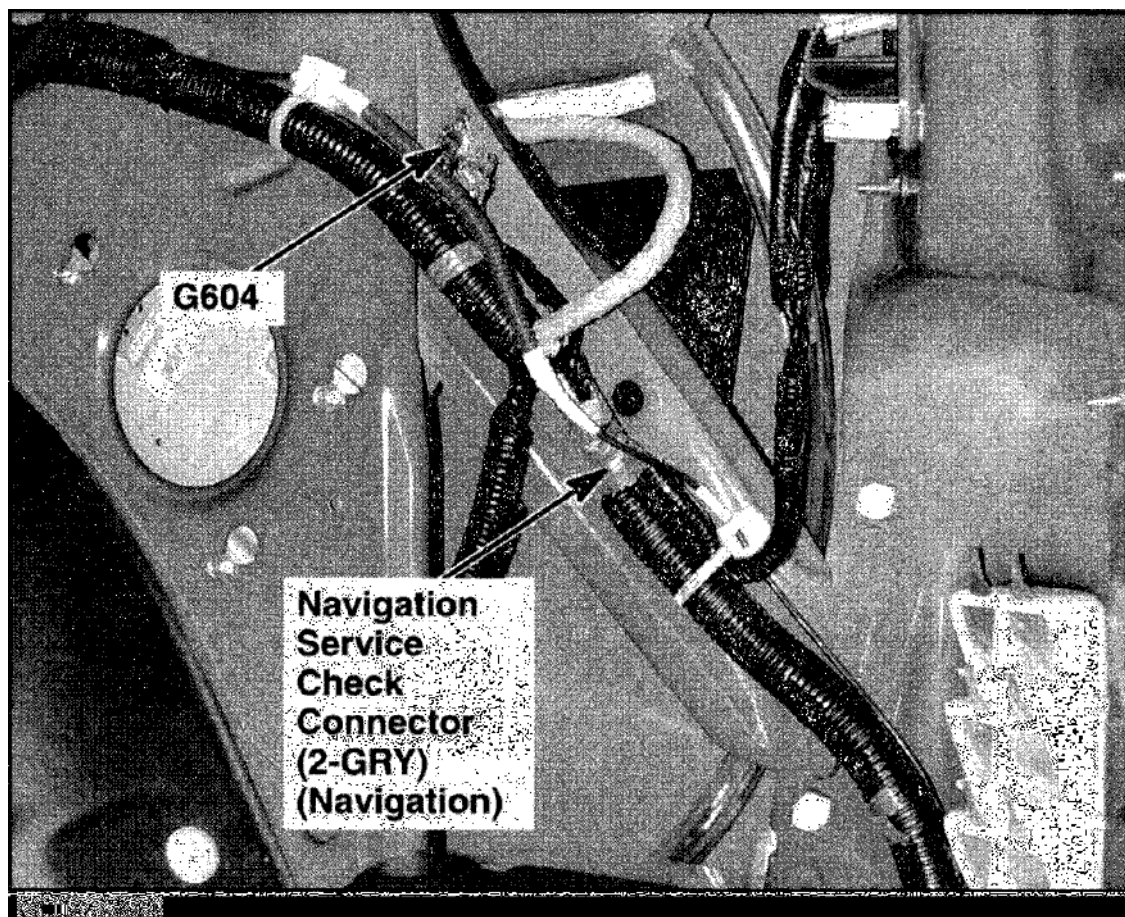 


Fig. 109: Right Side Of Trunk

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

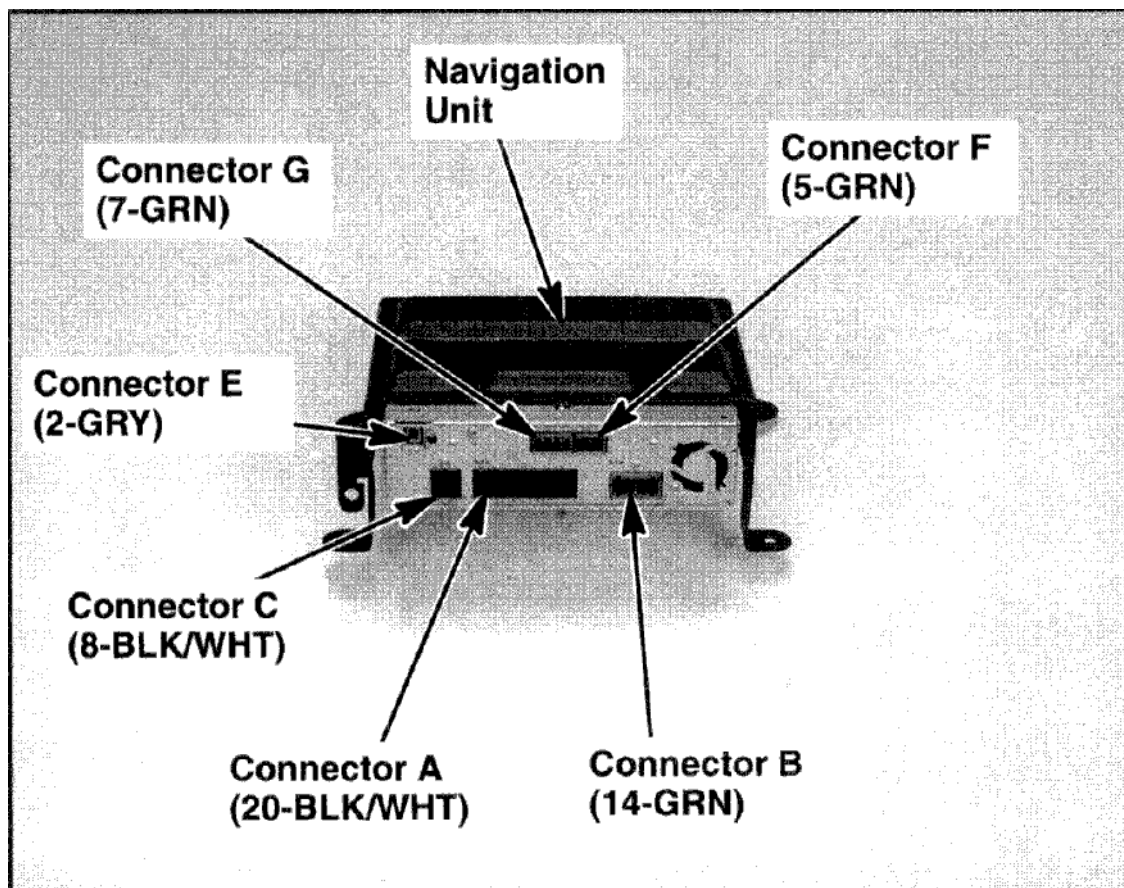

G00447652

Fig. 110: Behind Navigation Unit

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

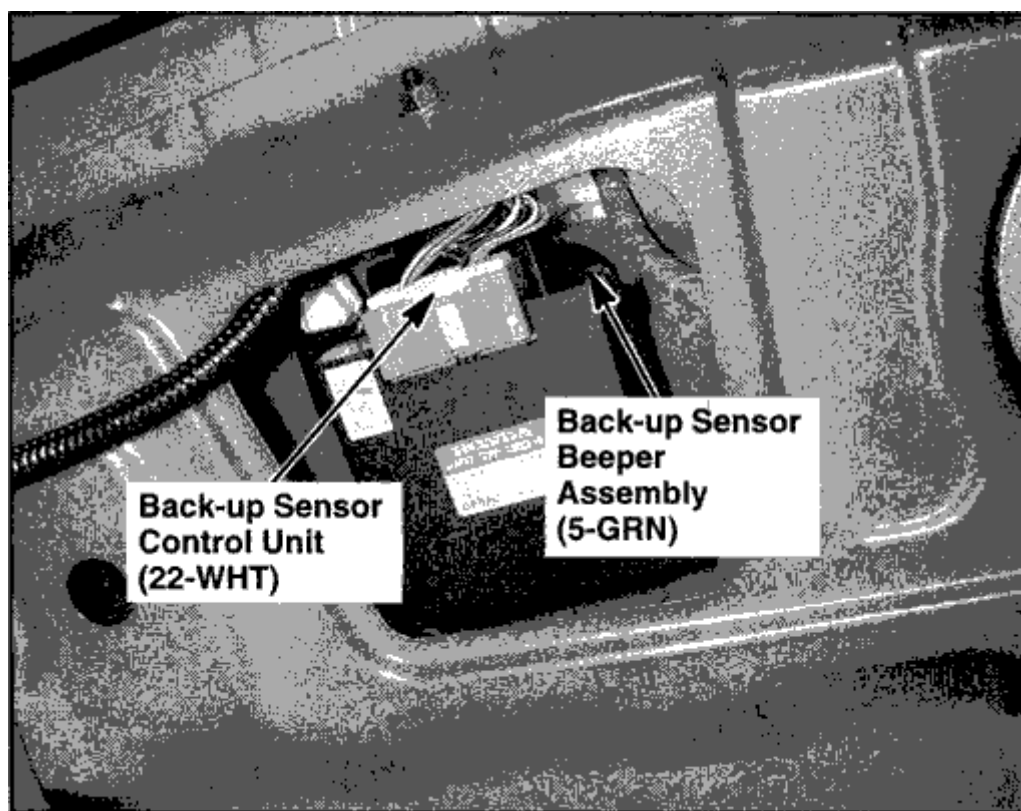

G00288657

Fig. 111: Rear Shelf

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

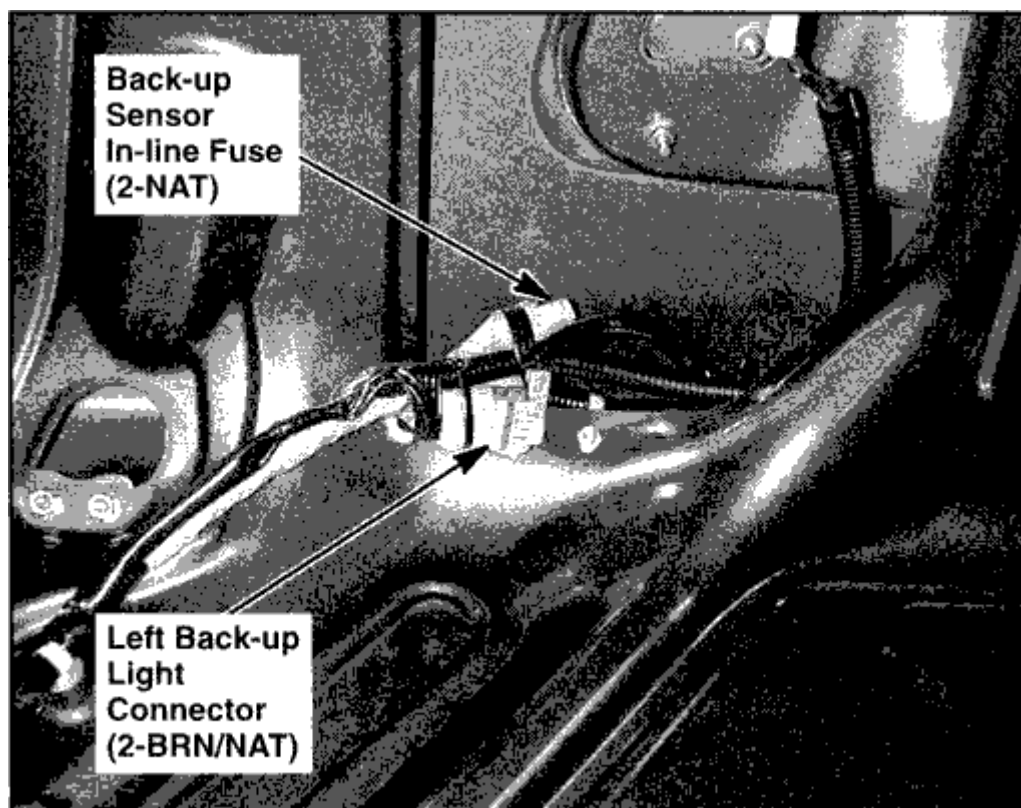

G00288658

Fig. 112: Trunk Lid

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

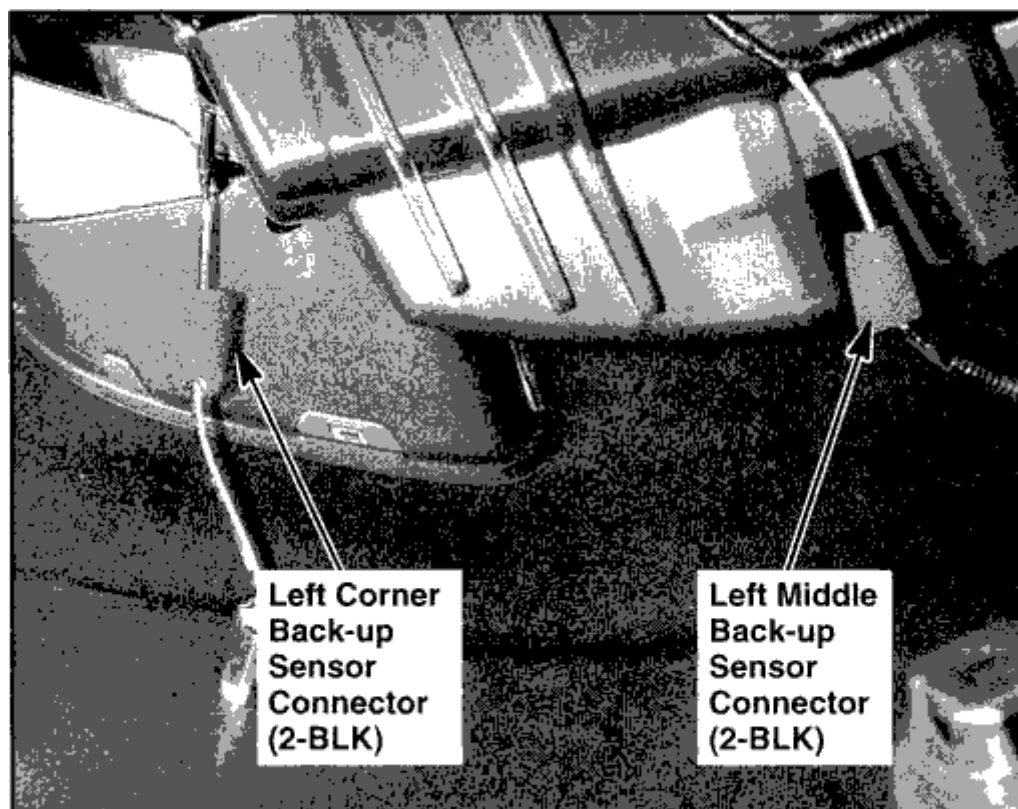

G00288659


Fig. 113: Left & Right Side Of Rear Bumper

Courtesy of AMERICAN HONDA MOTOR CO., INC.



Fig. 114: Rear Of Roof

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

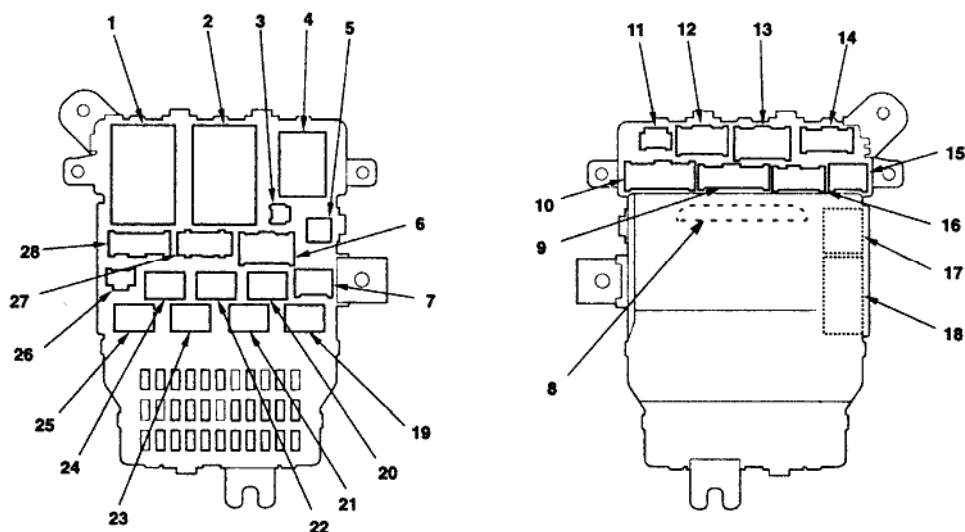

Ref	Socket
1	X
2	N
3	R (MES connector)
4	Turn signal/hazard relay
5	S
6	A
7	T
8	MICU
9	E
10	F
11	I
12	C
13	B
14	D
15	G
16	H
17	Q (MICU)
18	P (MICU)
19	Starter cut relay
20	Accessory power socket relay
21	A/F sensor relay
22	PGM-FI main relay 1
23	Power window relay
24	Ignition coil relay
25	PGM-FI main relay 2
26	M
27	K
28	J

G00292061

 Fig. 115: Under-Dash Fuse/Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

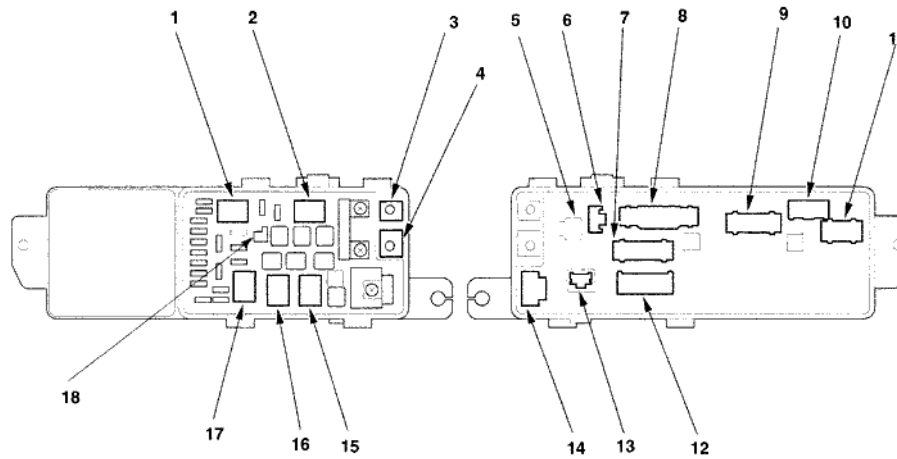Fuse/Relay Box Index

Ref	Socket	Cavities	Connects to
1	Radiator fan relay	4	Starter cable Engine wire harness
2	A/C condenser fan relay	4	
3	T101		
4	T102		
5	B	1	Not used
6	C	2	Engine compartment wire harness (left branch)
7	E	16	Engine compartment wire harness (left branch)
8	F	20	Engine compartment wire harness (left branch)
9	H	14	Engine compartment wire harness (left branch)
10	J	5	Engine compartment wire harness (left branch)
11	K	10	Engine compartment wire harness (left branch)
12	D	9	Engine compartment wire harness (left branch)
13	A (ELD unit)	3	Engine compartment wire harness (left branch)
14	G	2	Engine compartment wire harness (left branch)
15	Blower motor relay	4	
16	A/C compressor clutch relay	4	
17	Rear window defogger relay	4	
18	A/C diode A	2	

G00447688

Fig. 116: Under-Hood Fuse/Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.


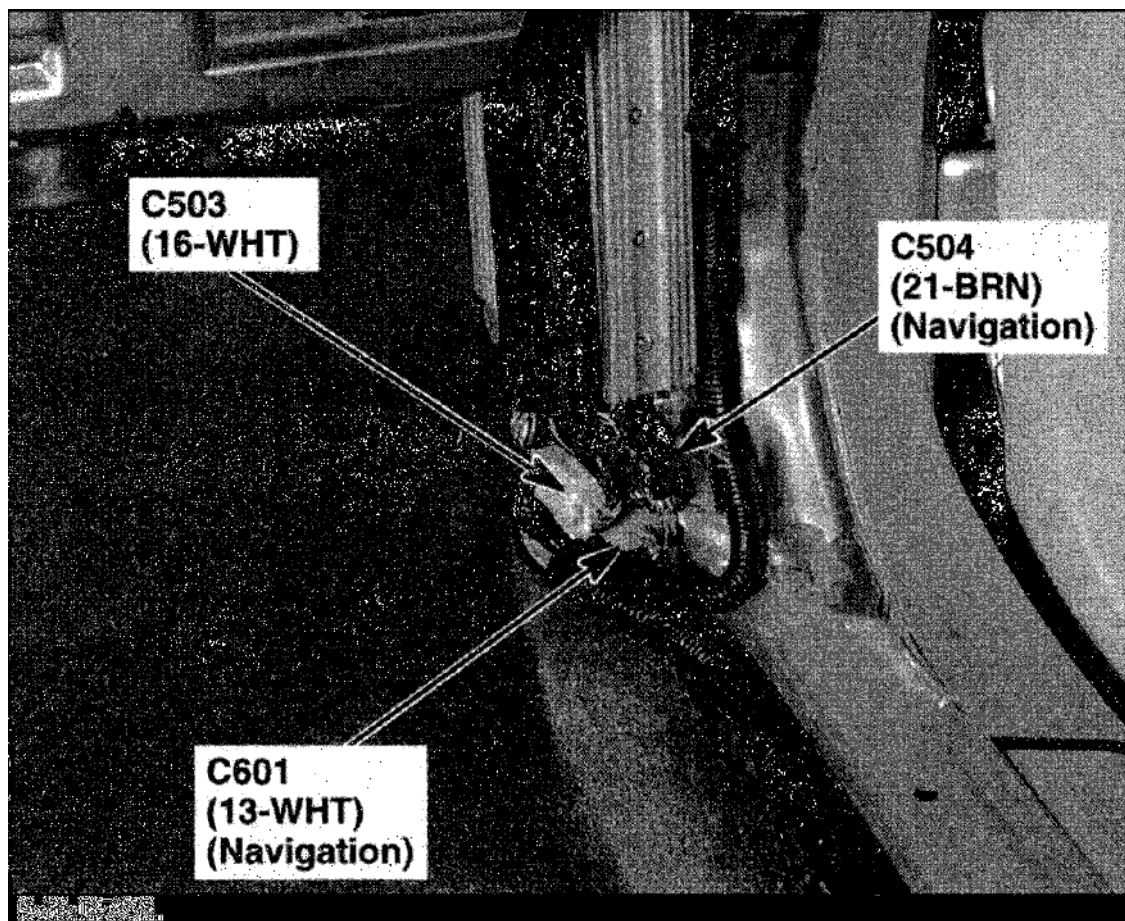 


Fig. 117: Behind Right Kick Panel

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

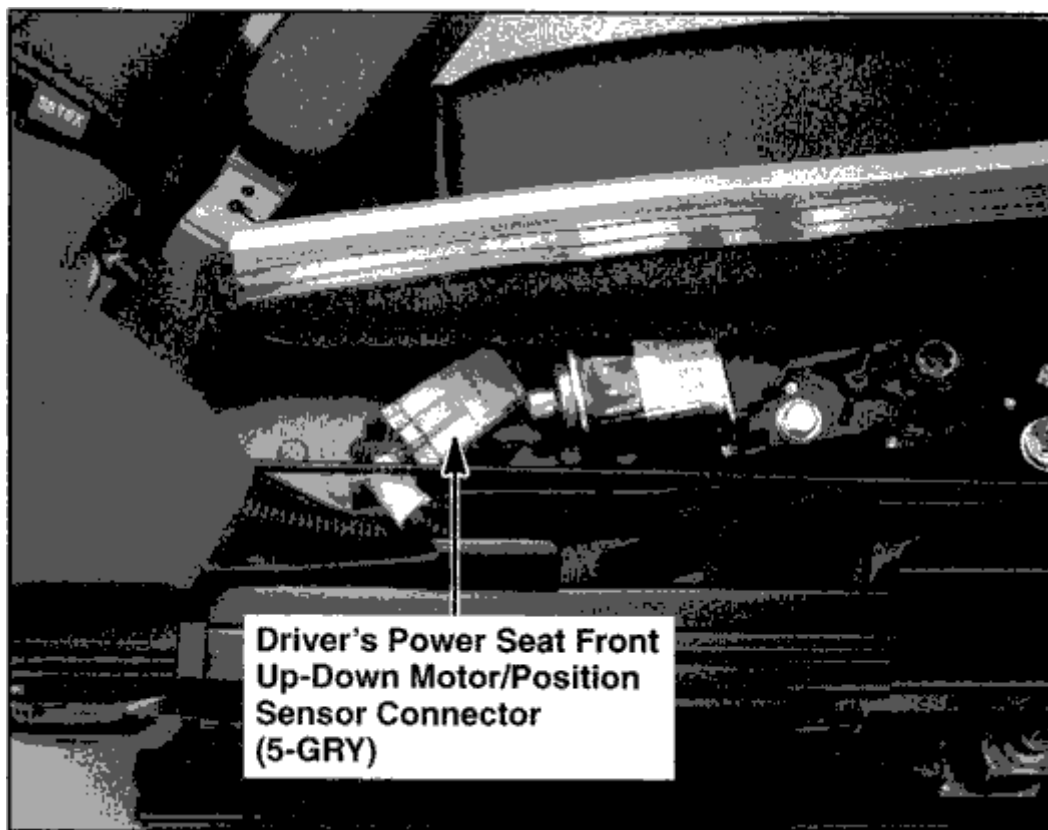

G00365816

Fig. 118: Right Side Of Driver's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

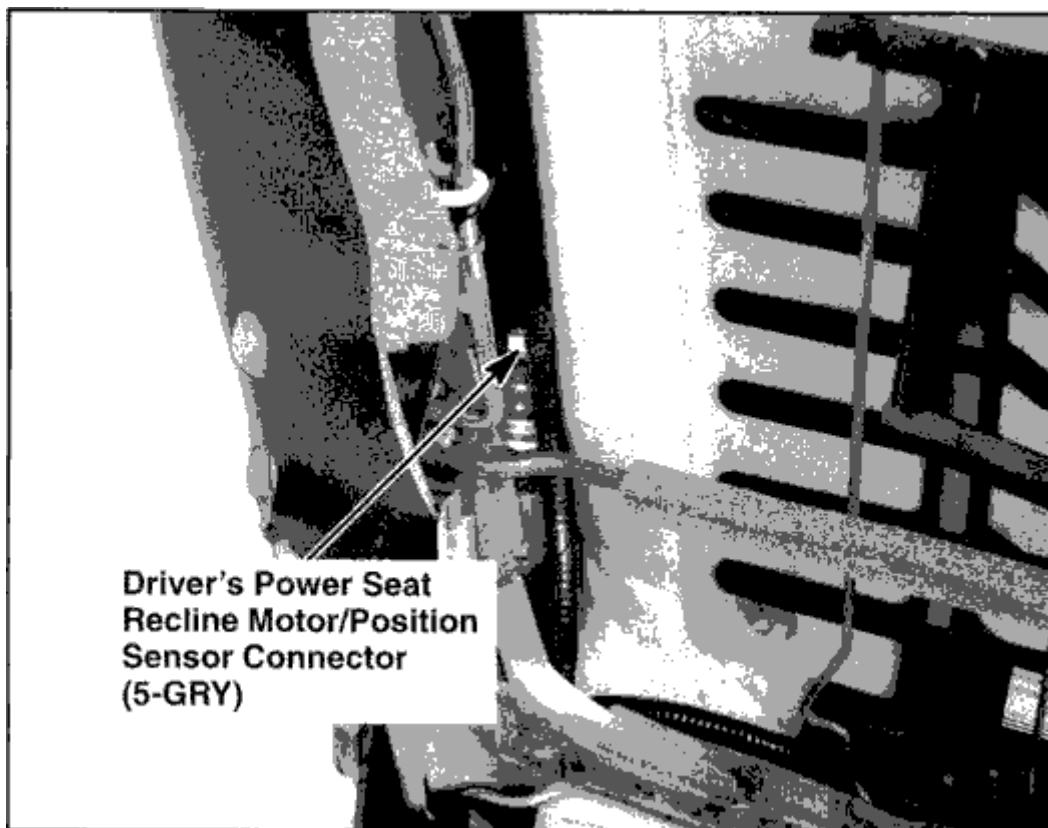

G00365817

Fig. 119: Driver's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

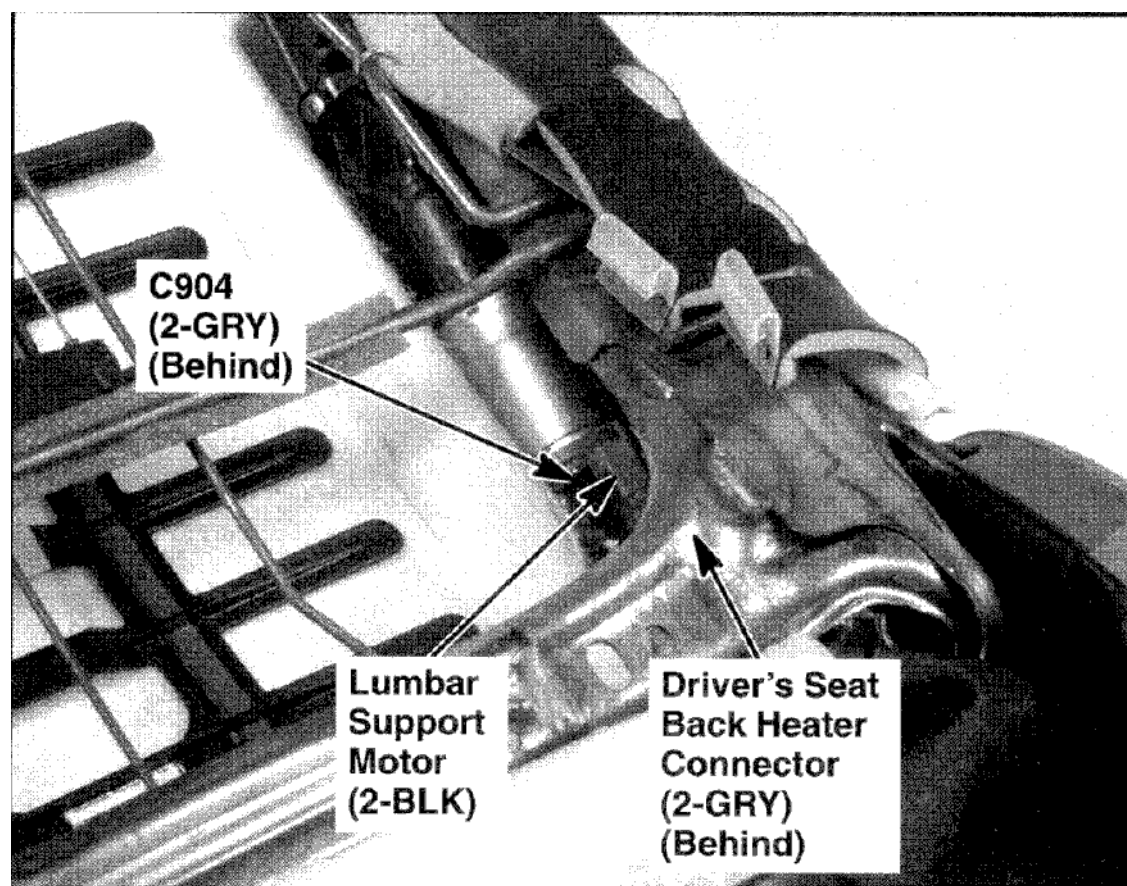

G00447665

Fig. 120: Driver's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

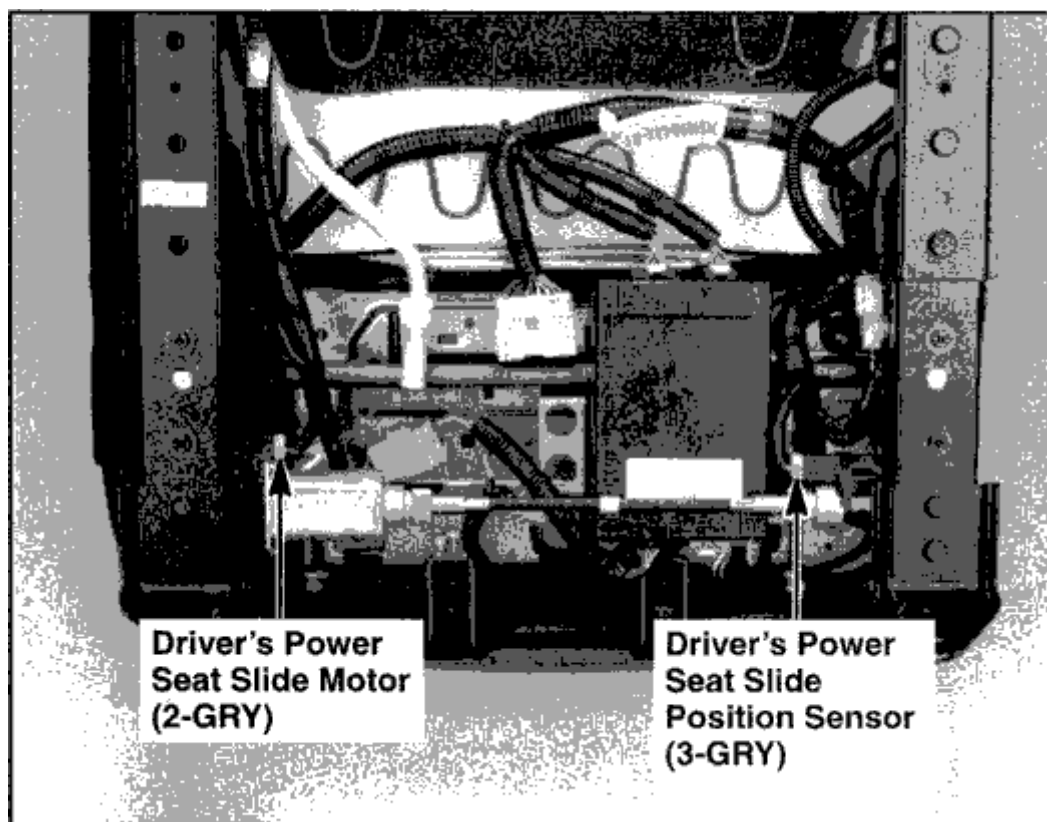

G00365819

Fig. 121: Under Driver's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

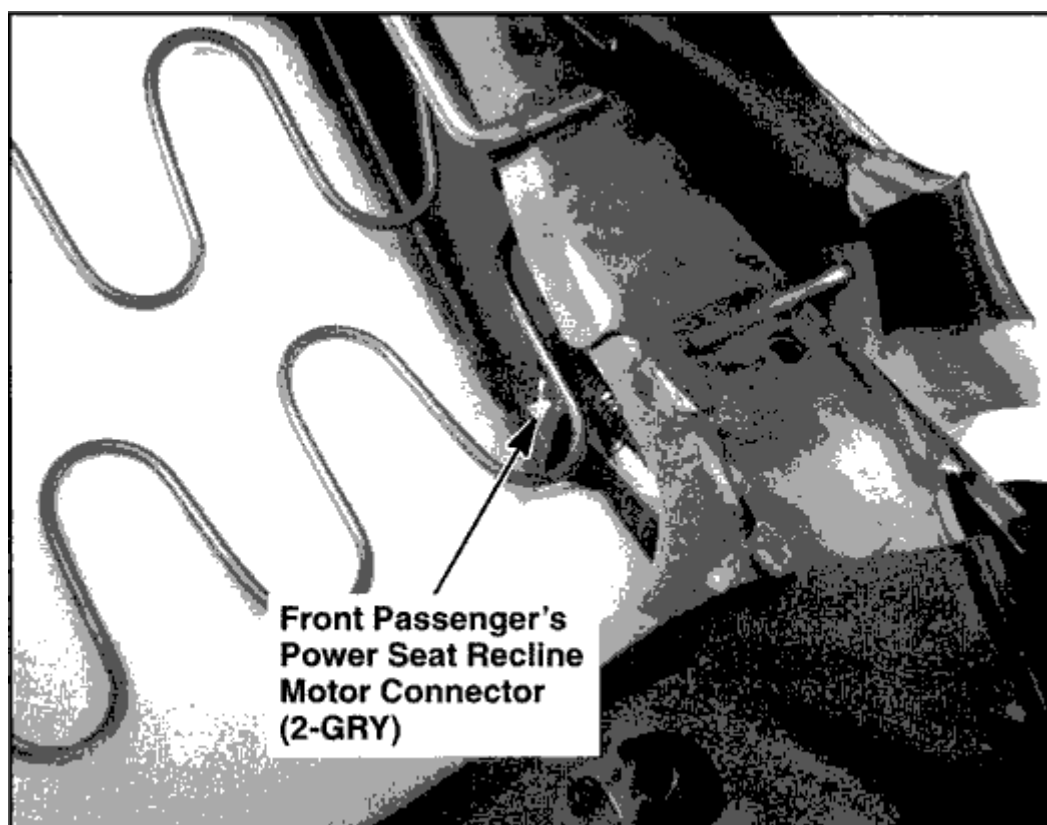

G00365821

Fig. 122: Front Passenger's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

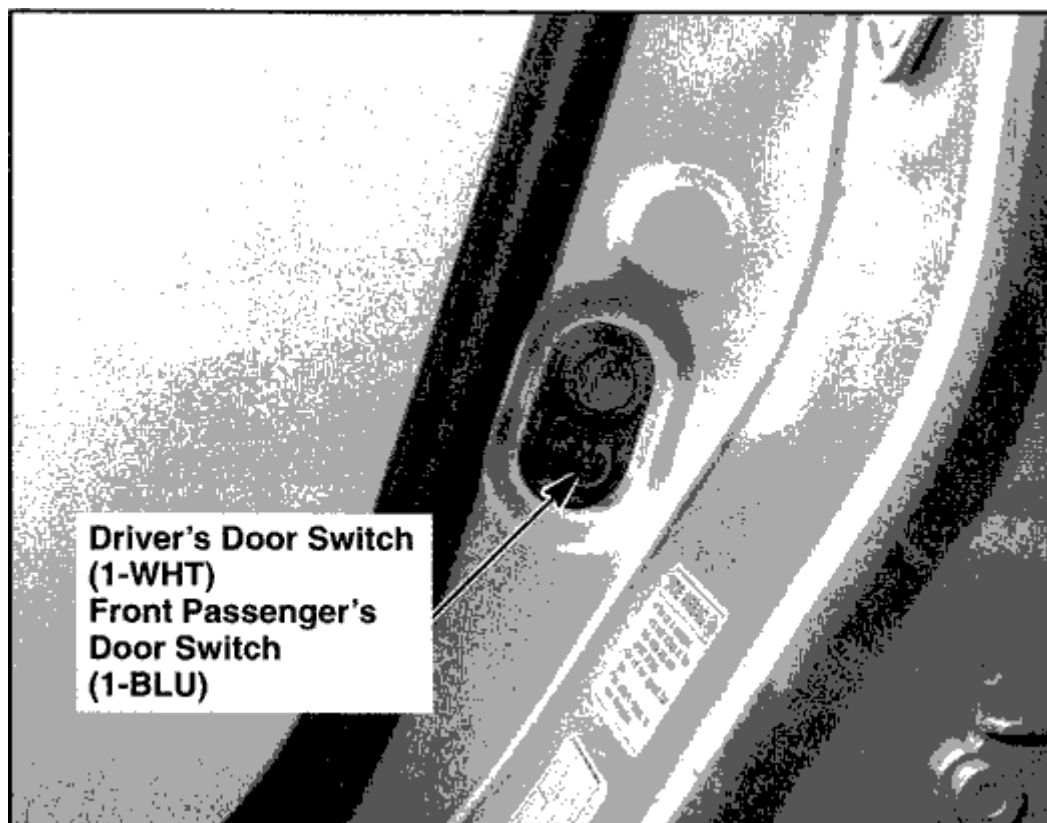

G00365822

Fig. 123: Left & Right "B" Pillar

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

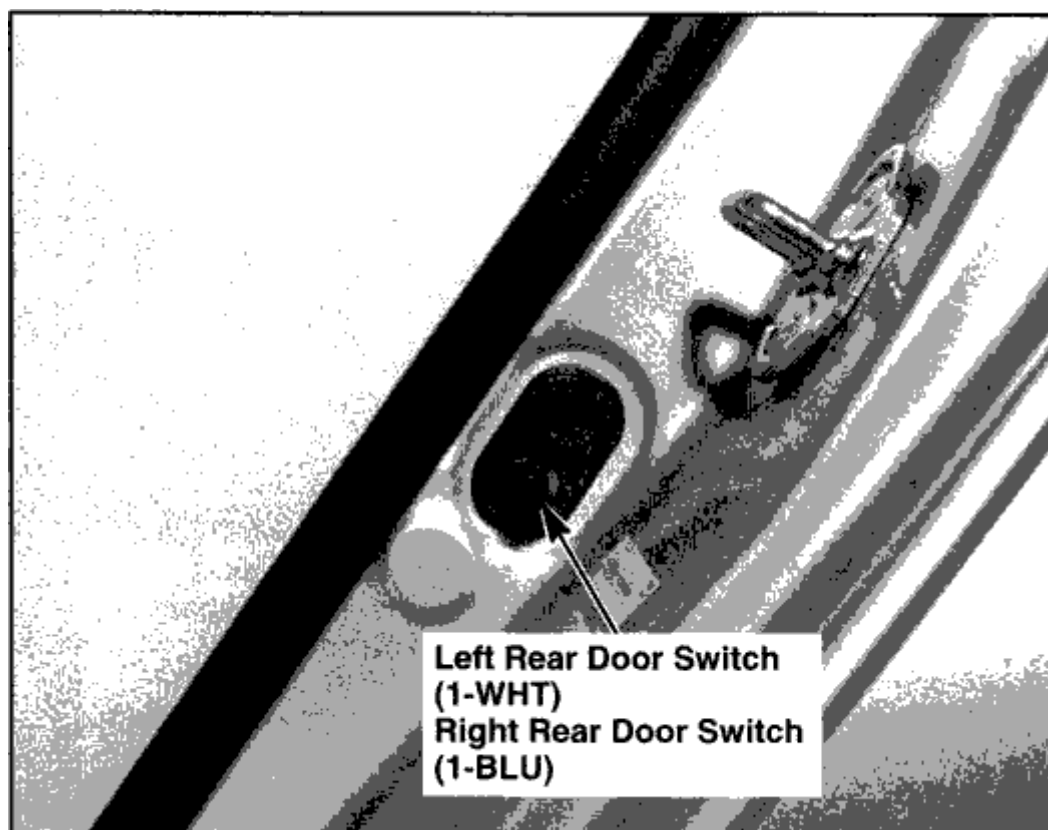

G00365823

Fig. 124: Left & Right "C" Pillar

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

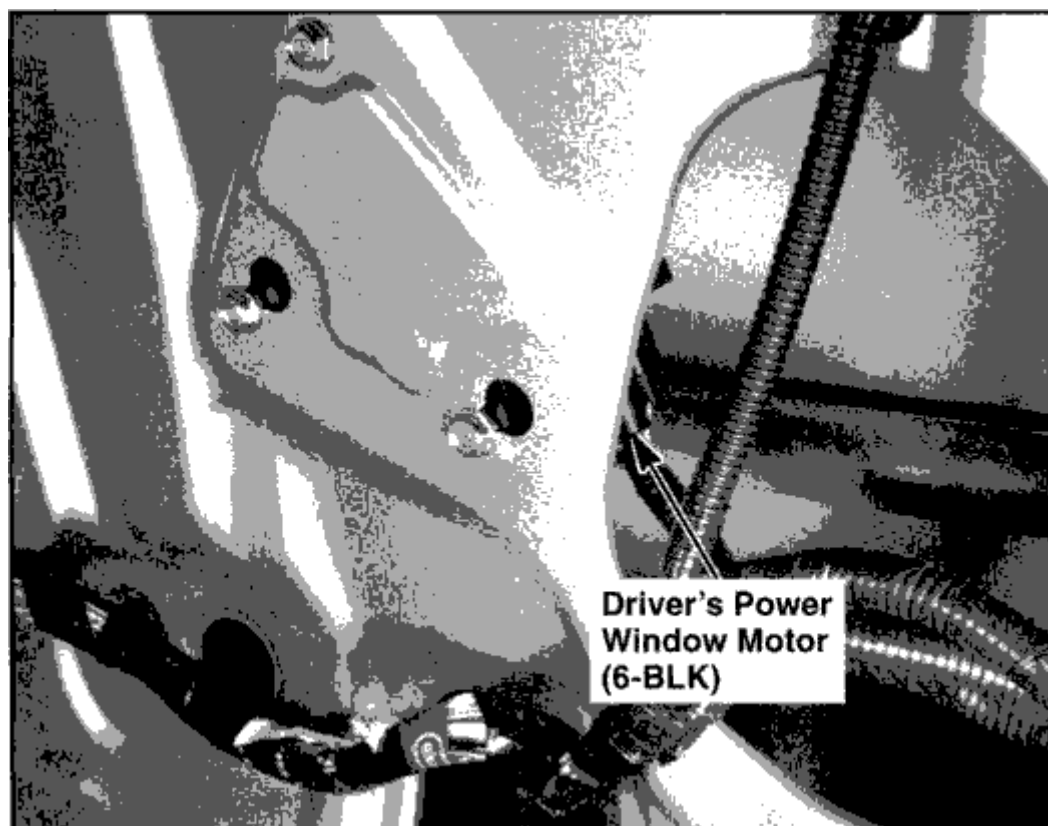

G00365824

Fig. 125: Left & Right Front Door

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

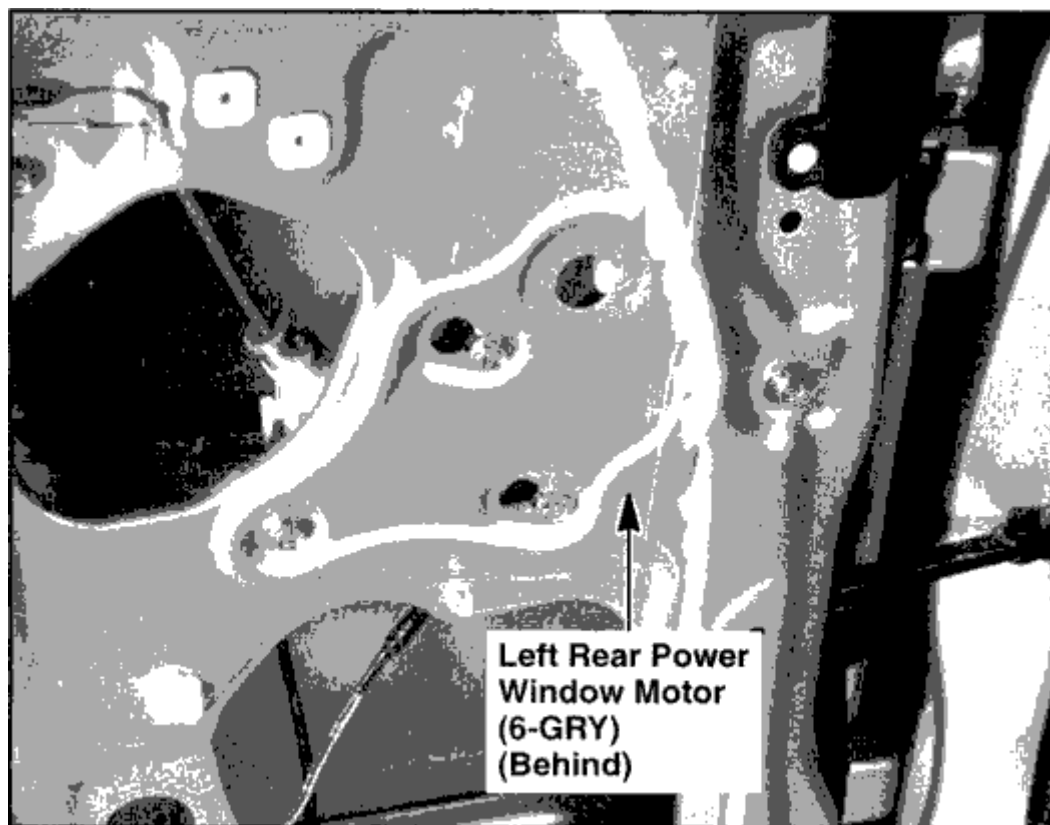

G00365825

Fig. 126: Left & Right Rear Door

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

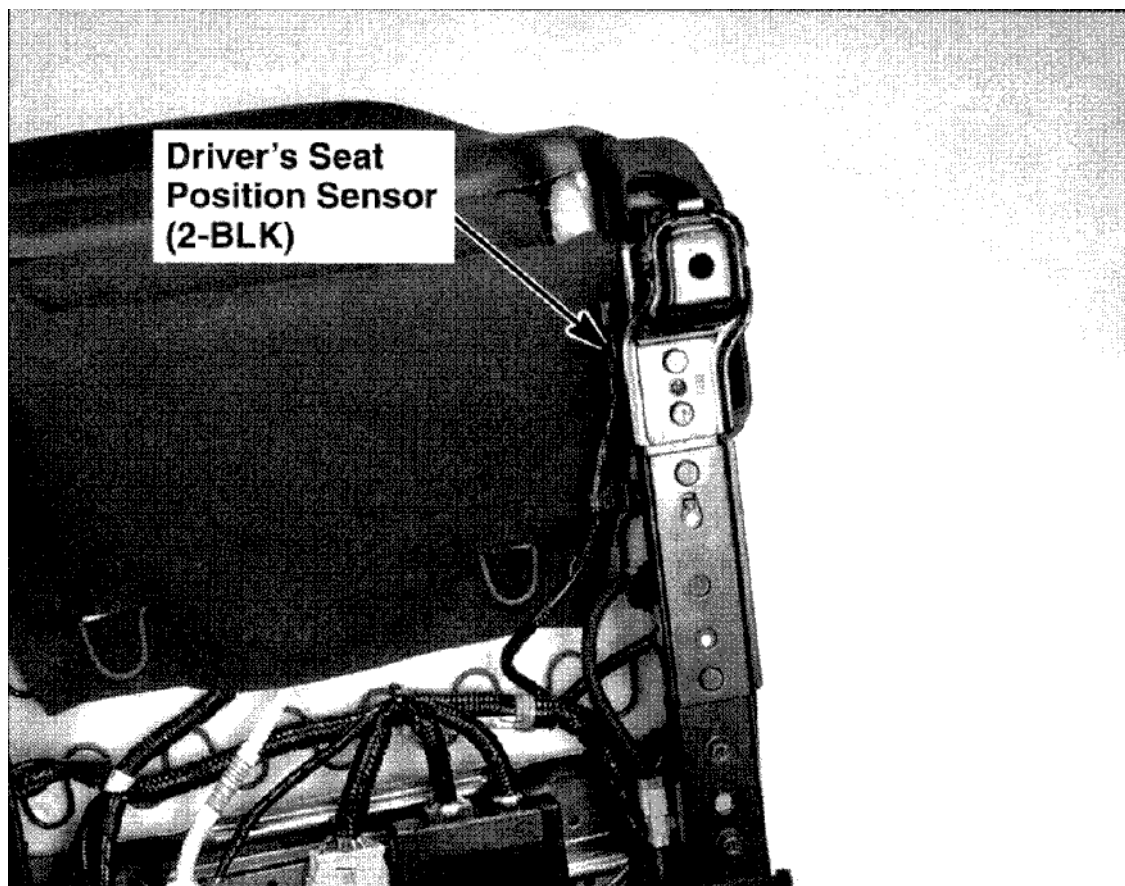

G00447666

Fig. 127: Under Driver's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

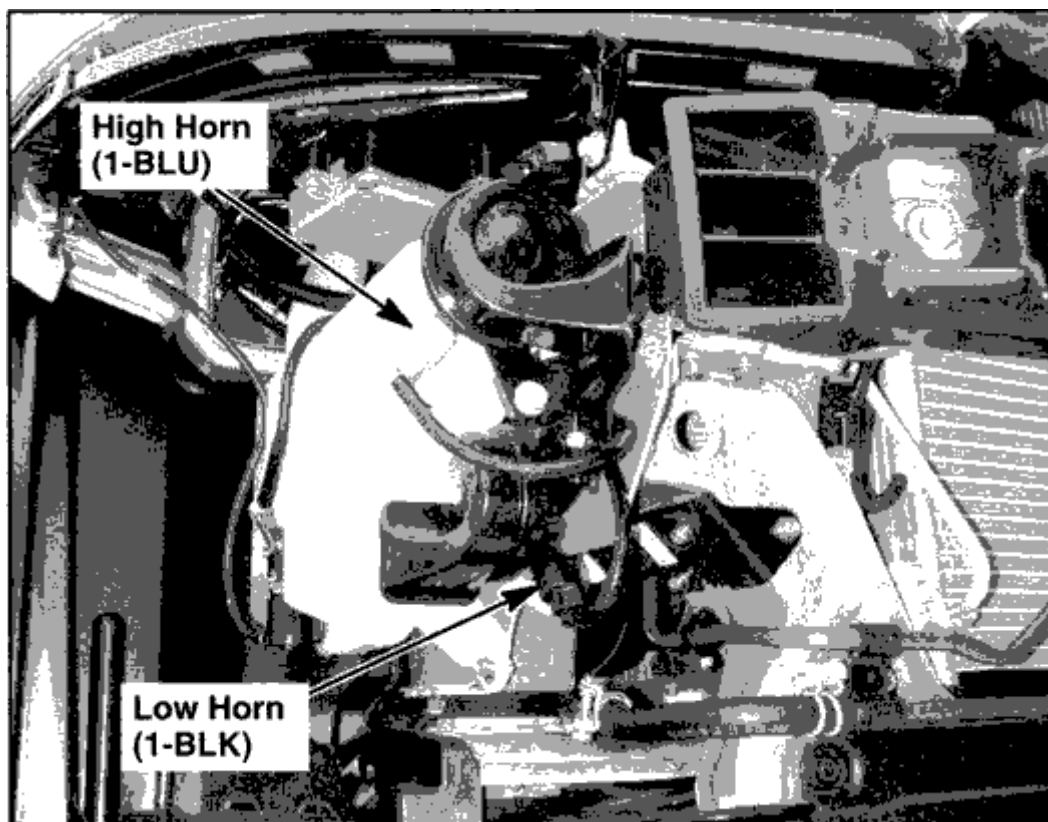

G00365829

Fig. 128: Right Side Of Front Bumper

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

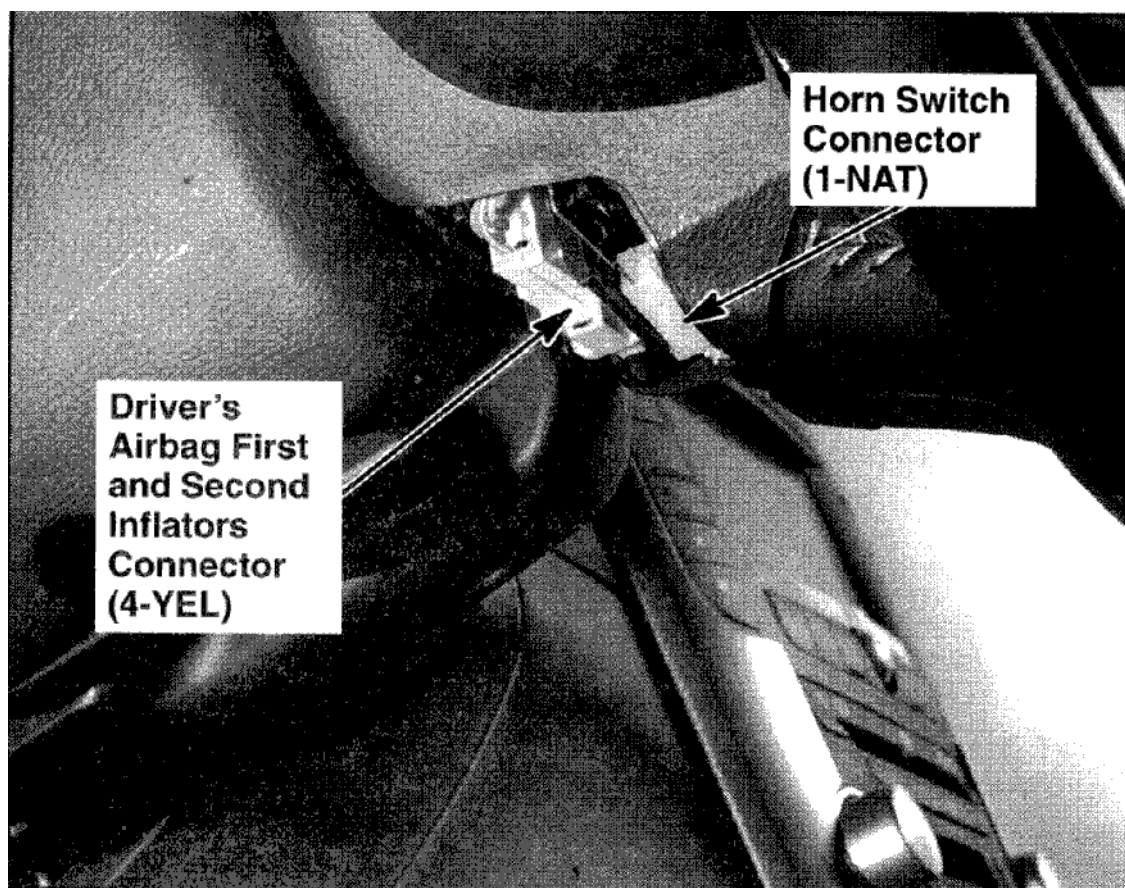

G00447657

Fig. 129: Steering Wheel

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

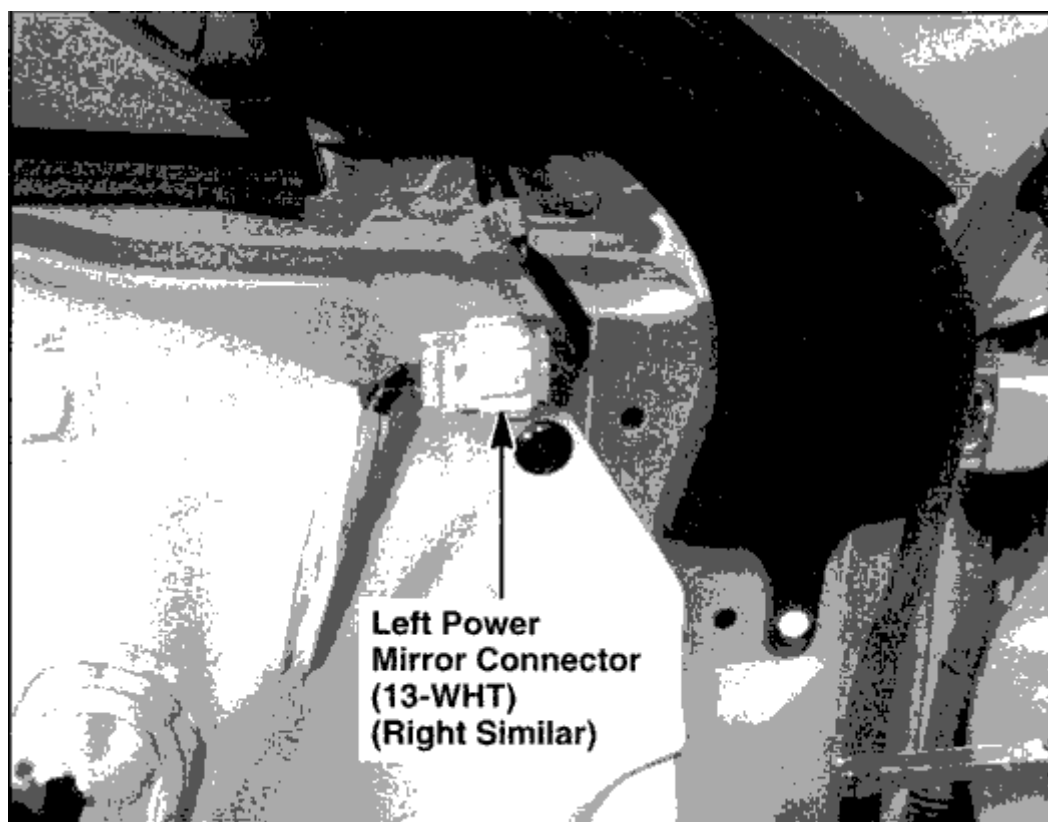


Left Power
Mirror Connector
(13-WHT)
(Right Similar)

G00421348

Fig. 130: Left & Right Front Door

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

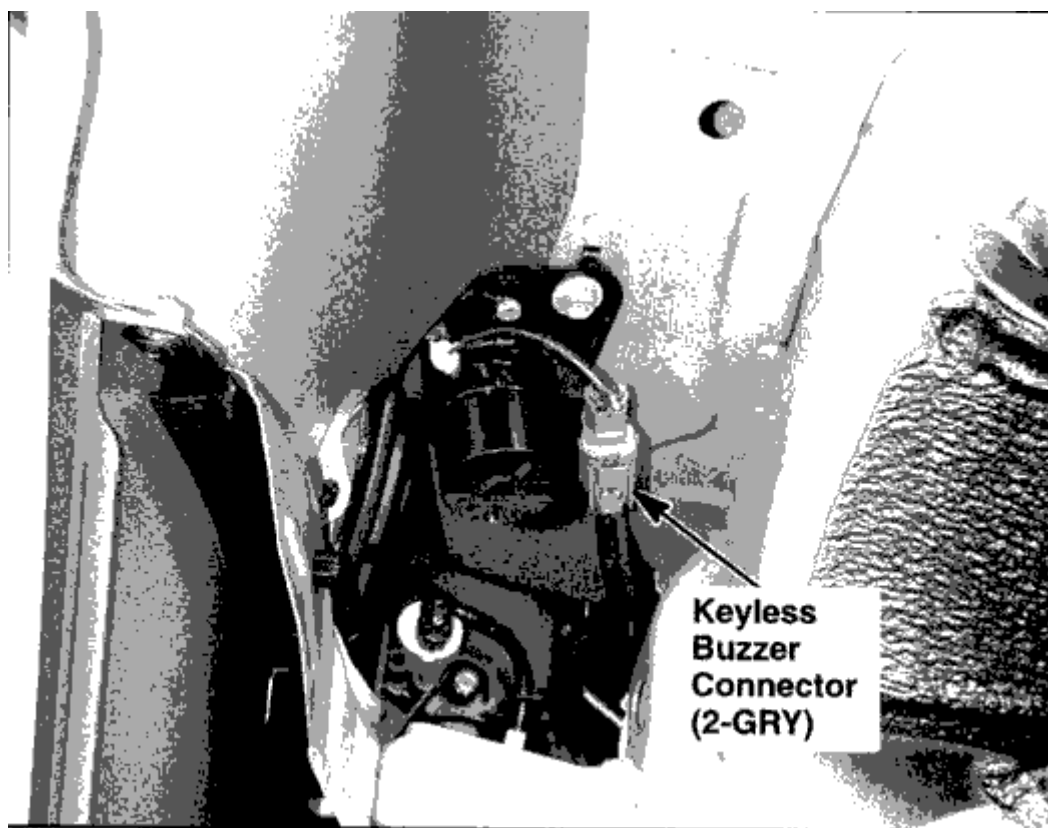


Keyless
Buzzer
Connector
(2-GRY)

G00421352

Fig. 131: Left Front Fender

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

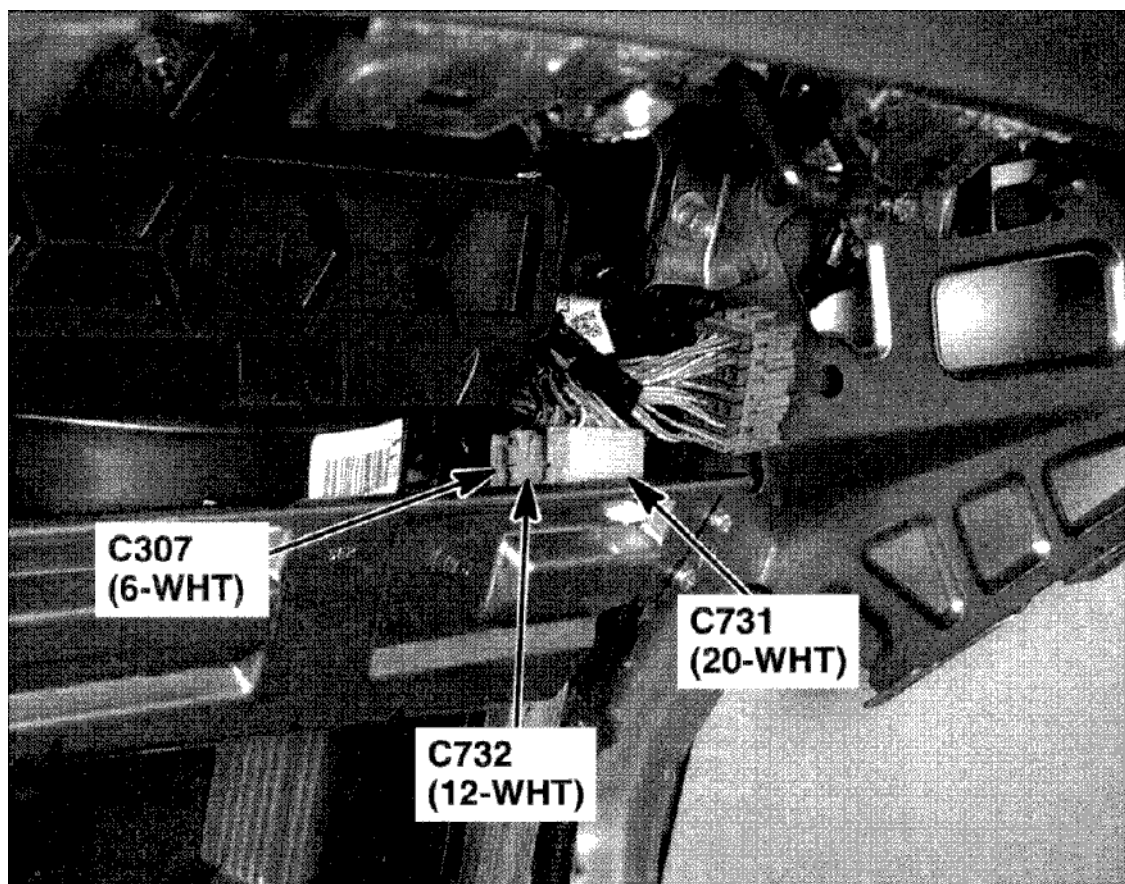

G00447662

Fig. 132: Behind Glove Box

Courtesy of AMERICAN HONDA MOTOR CO., INC.


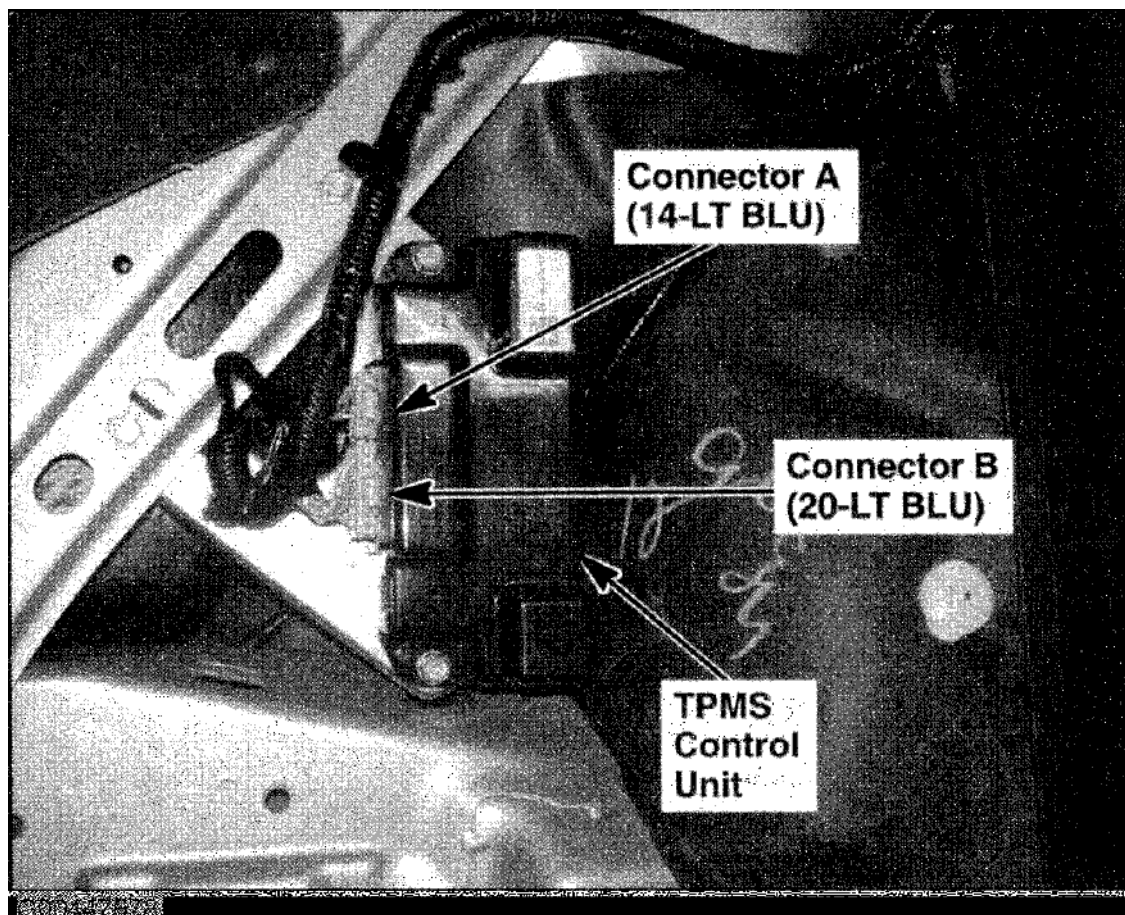 


Fig. 133: Behind Left Rear Seat Back

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

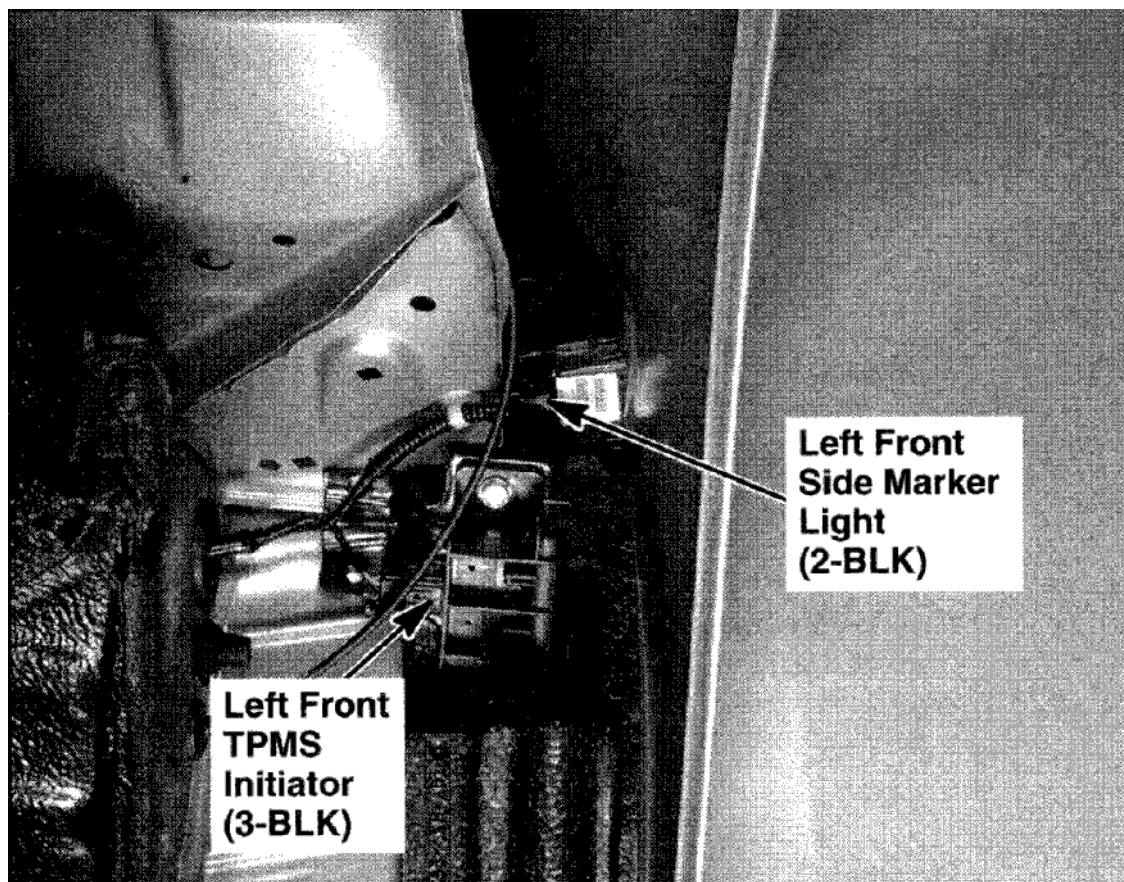

G00447681

Fig. 134: Left Front Fender

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

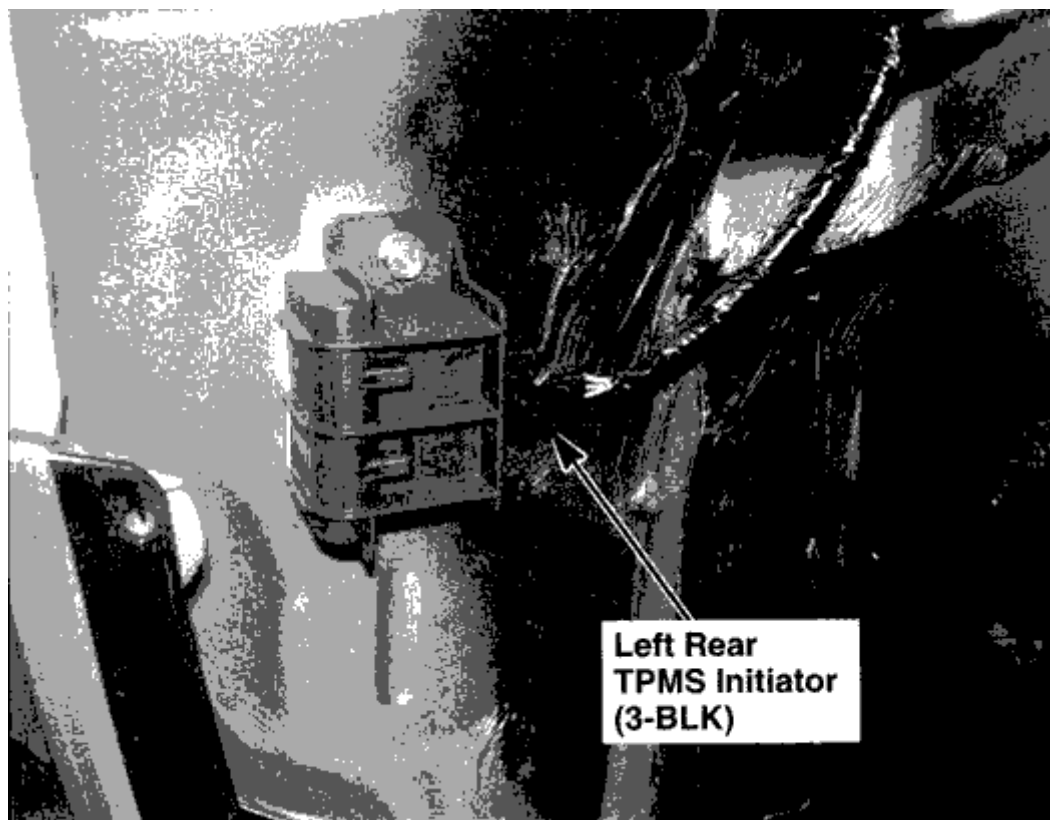

G00421358

Fig. 135: Left Rear Fender

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

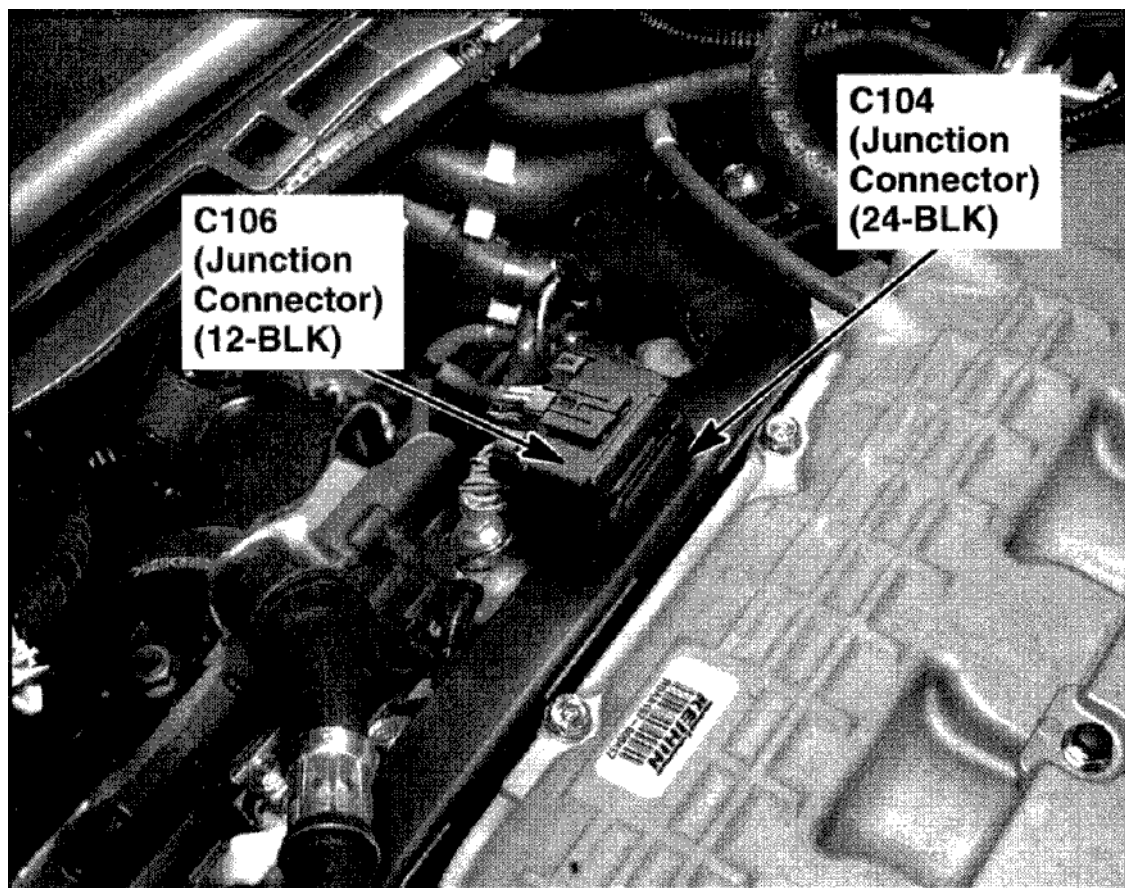

G00447599

Fig. 136: Middle Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

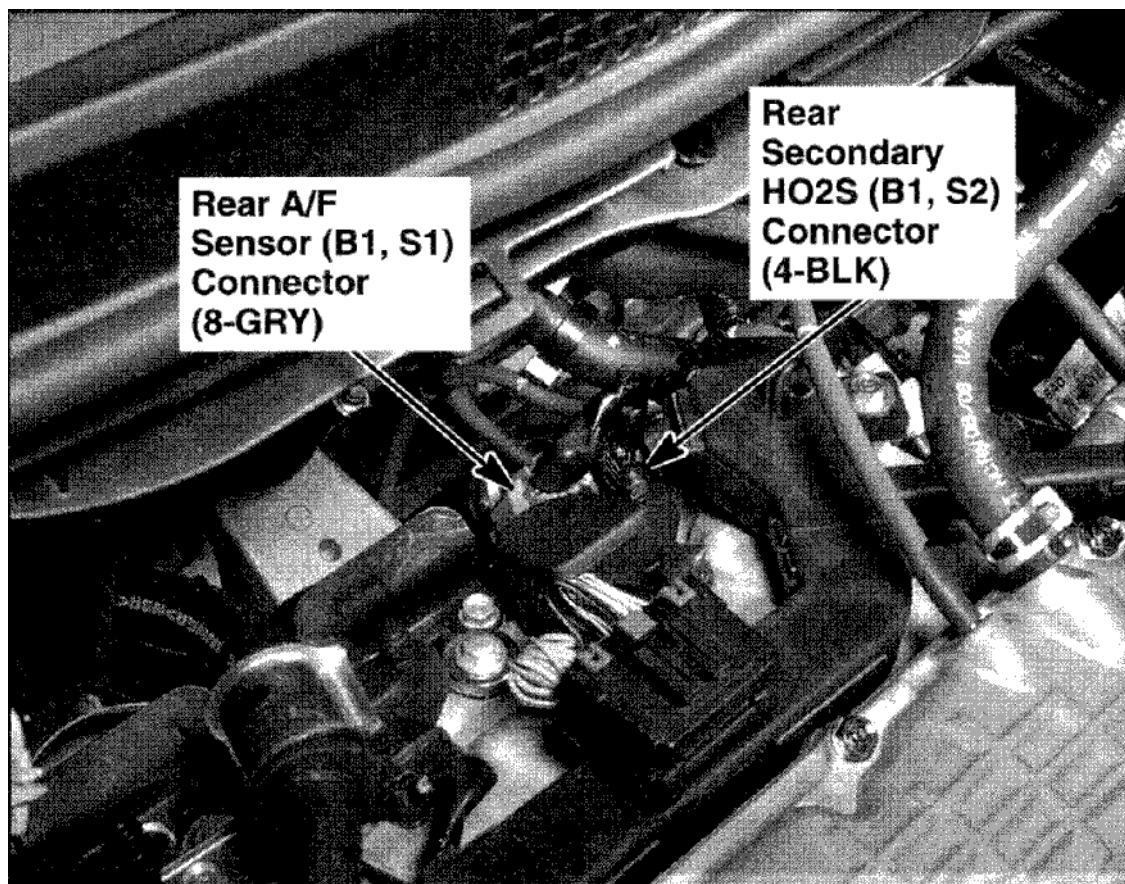

G00447606

Fig. 137: Left Rear Of Engine

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

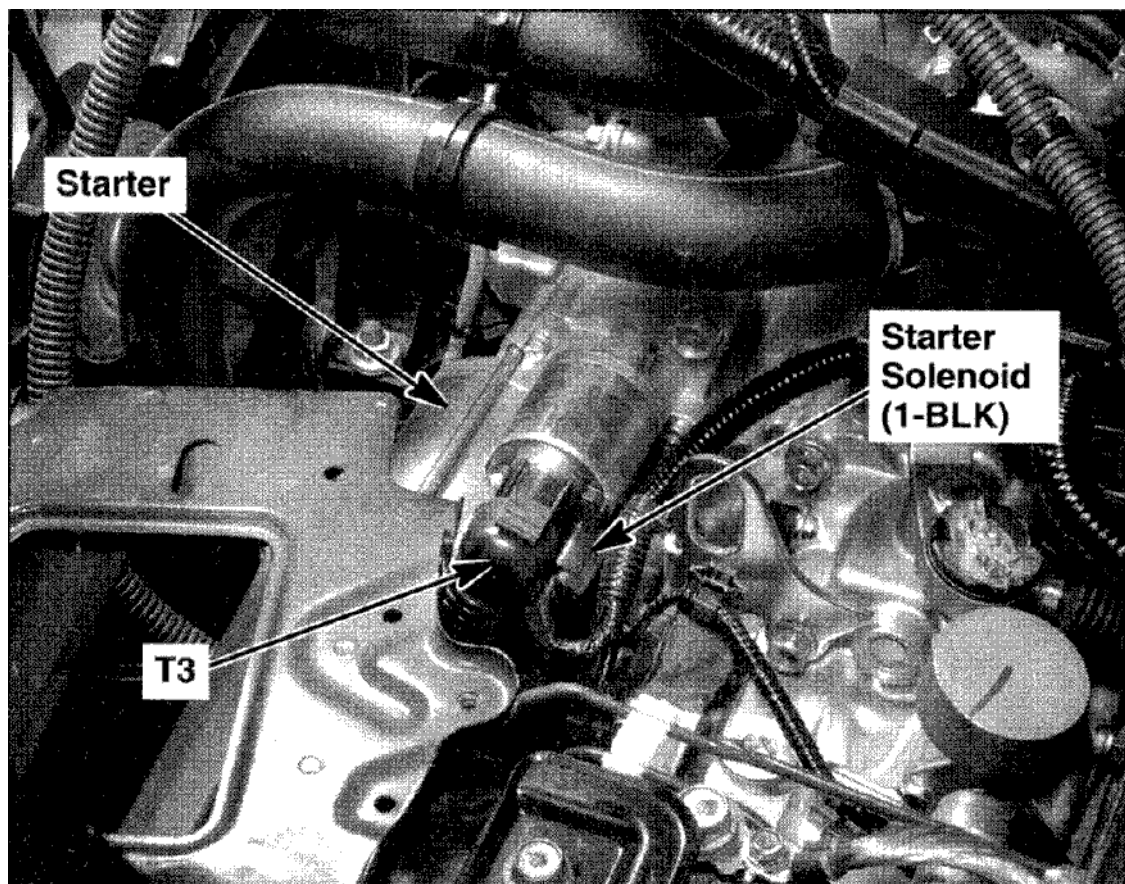

G00447607

Fig. 138: Transmission Housing (M/T)

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

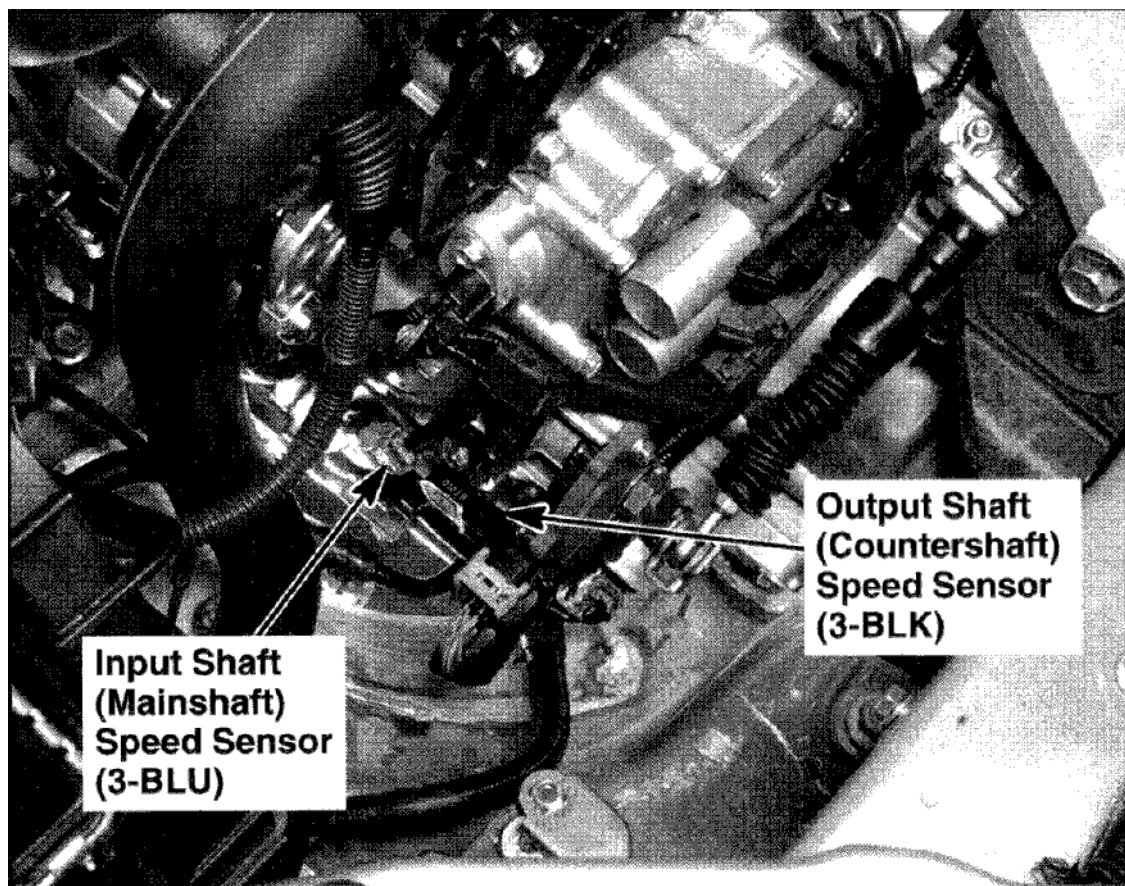

G00447610


Fig. 139: Transmission Housing (A/T)

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

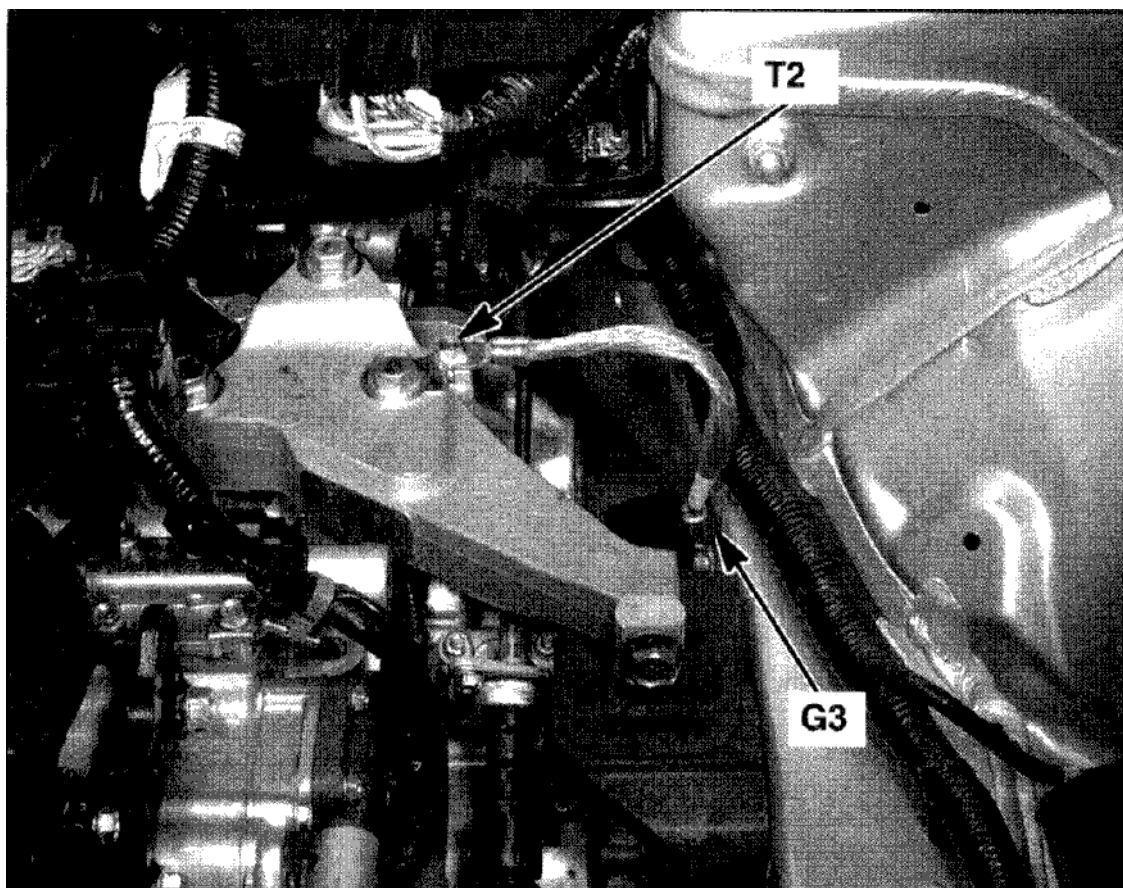

G00447621

 Fig. 140: Left Side Of Engine Compartment (A/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

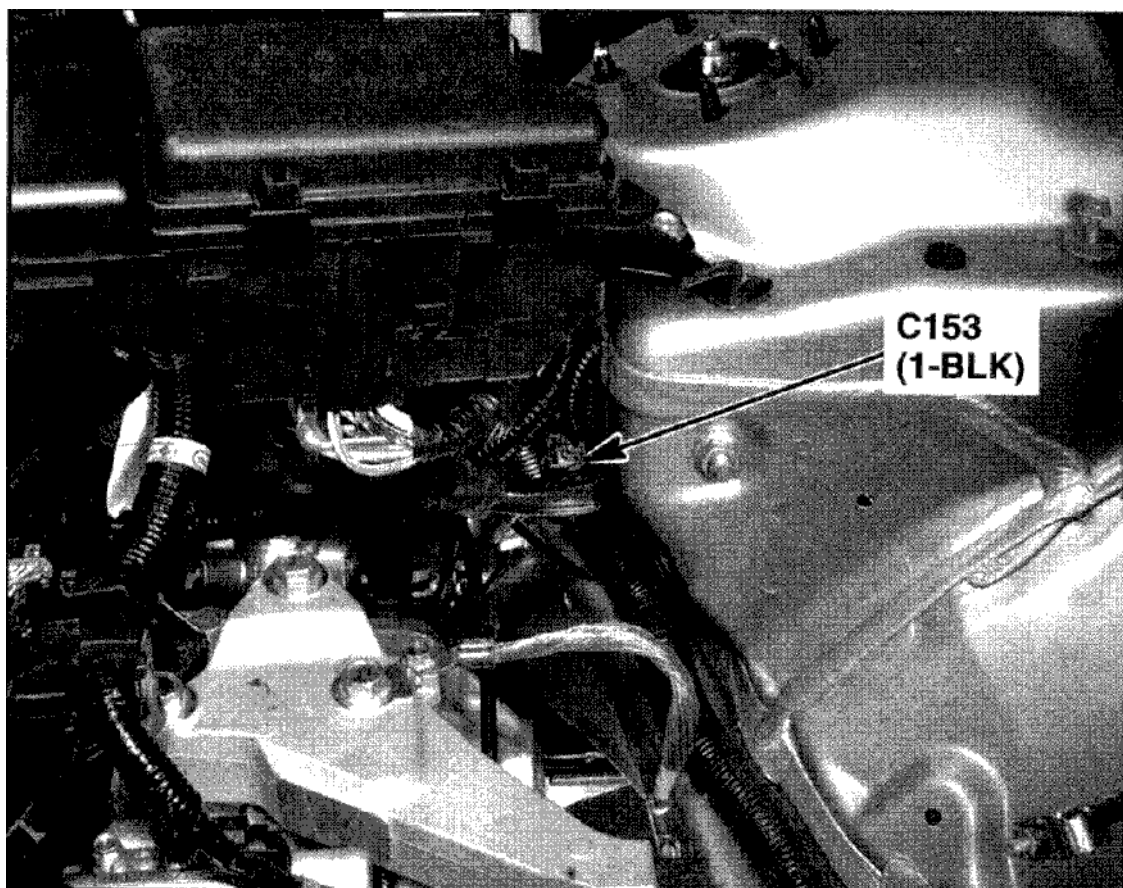

G00447615

Fig. 141: Left Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.


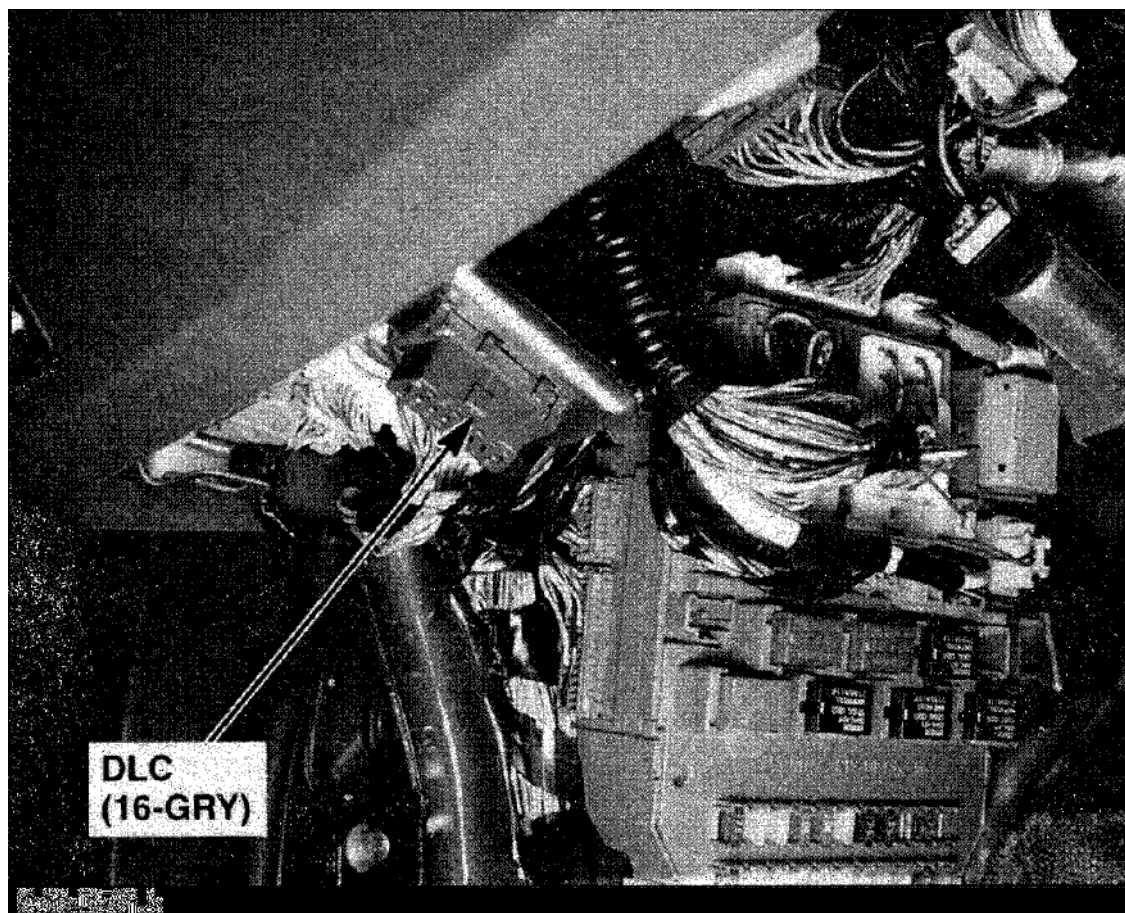 


Fig. 142: Under Left Side Of Dash

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

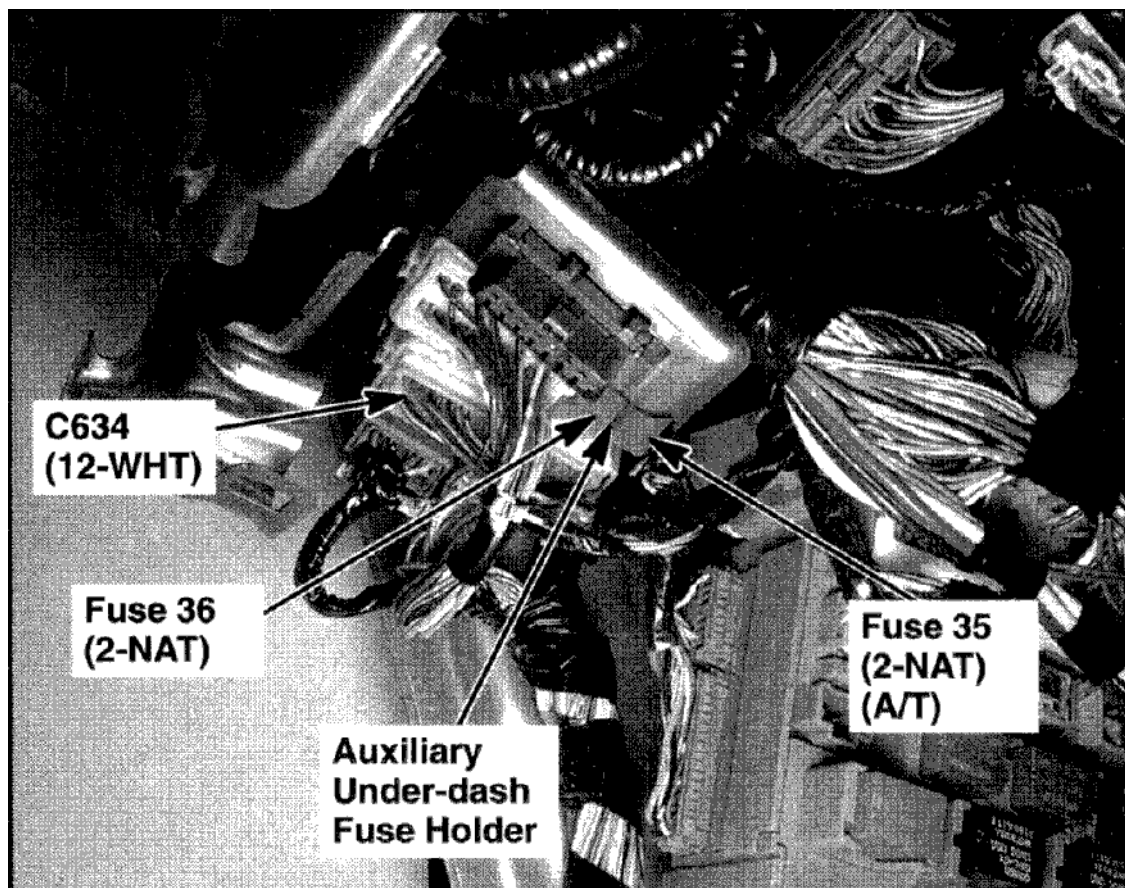

G00447620

Fig. 143: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.


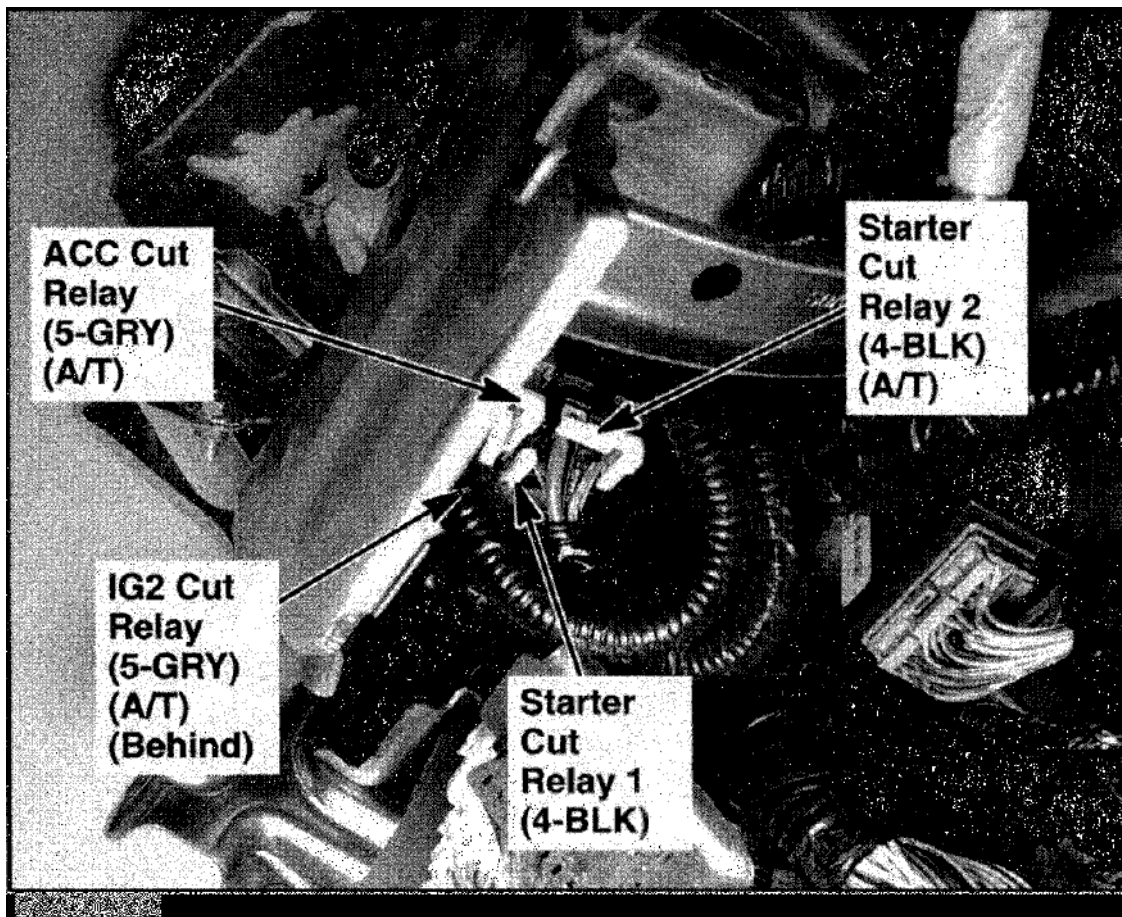 


Fig. 144: Under Left Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

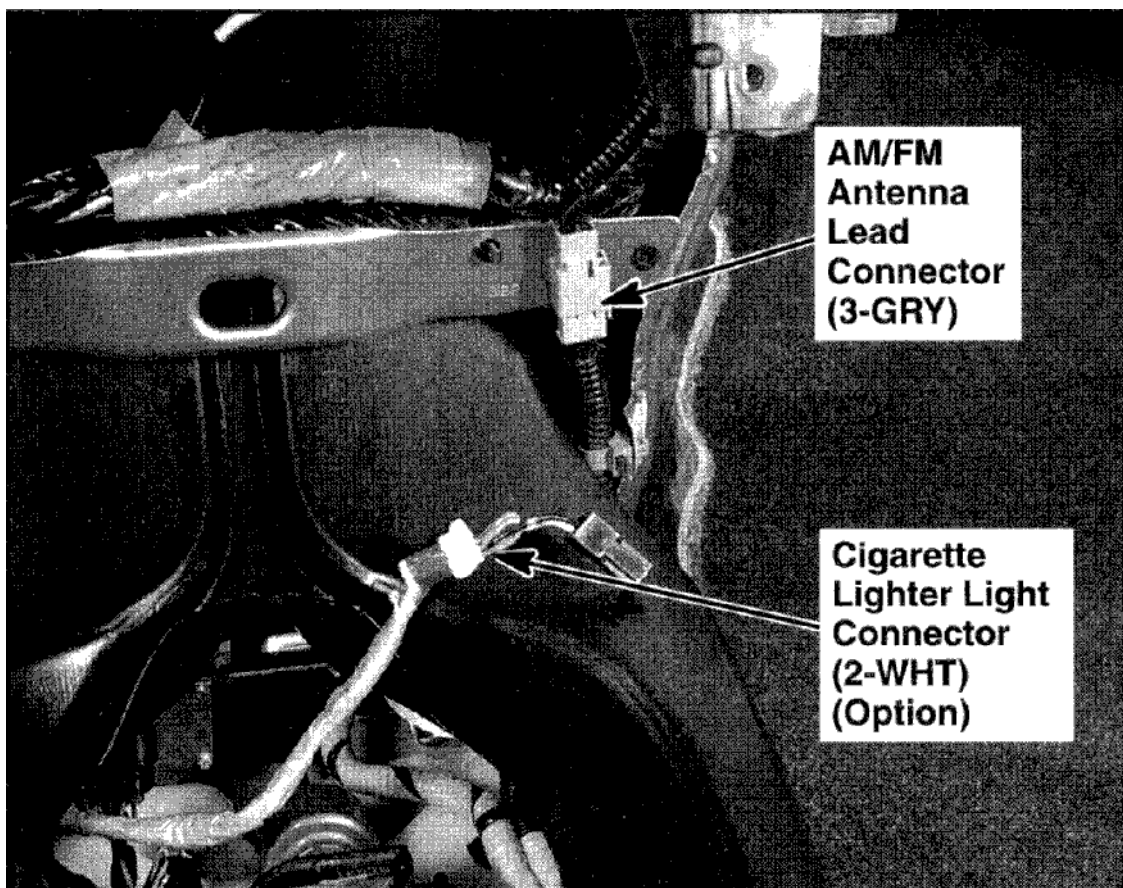

G00447626

Fig. 145: Under Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

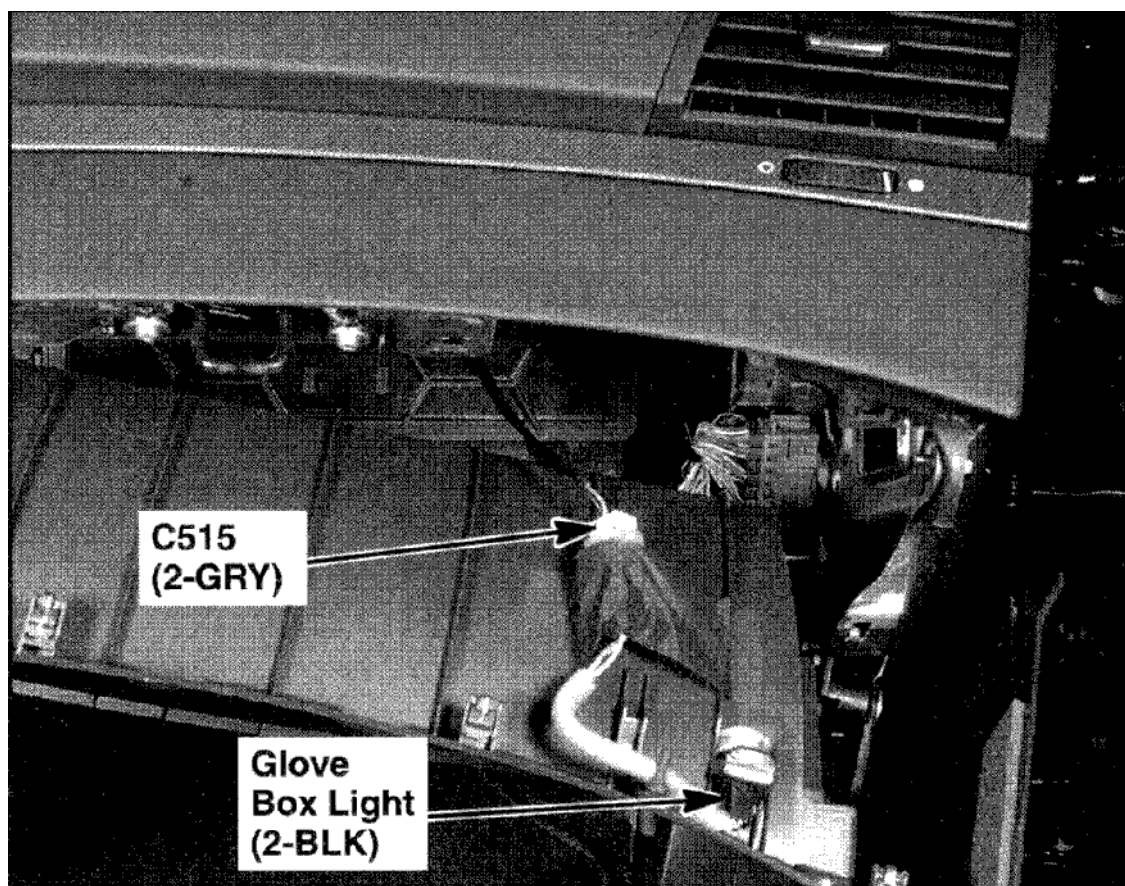

G00447627

Fig. 146: Behind Glove Box

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

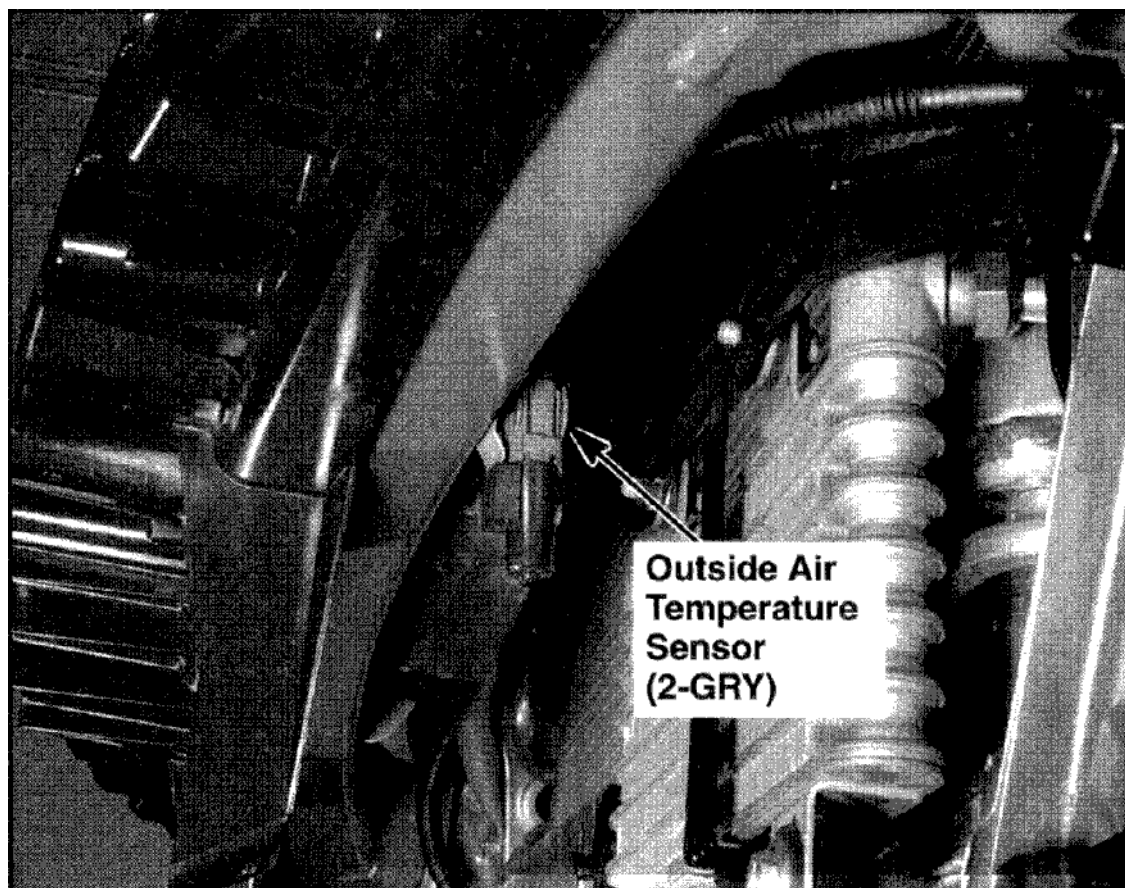

G00447643

Fig. 147: Behind Middle Of Front Bumper

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

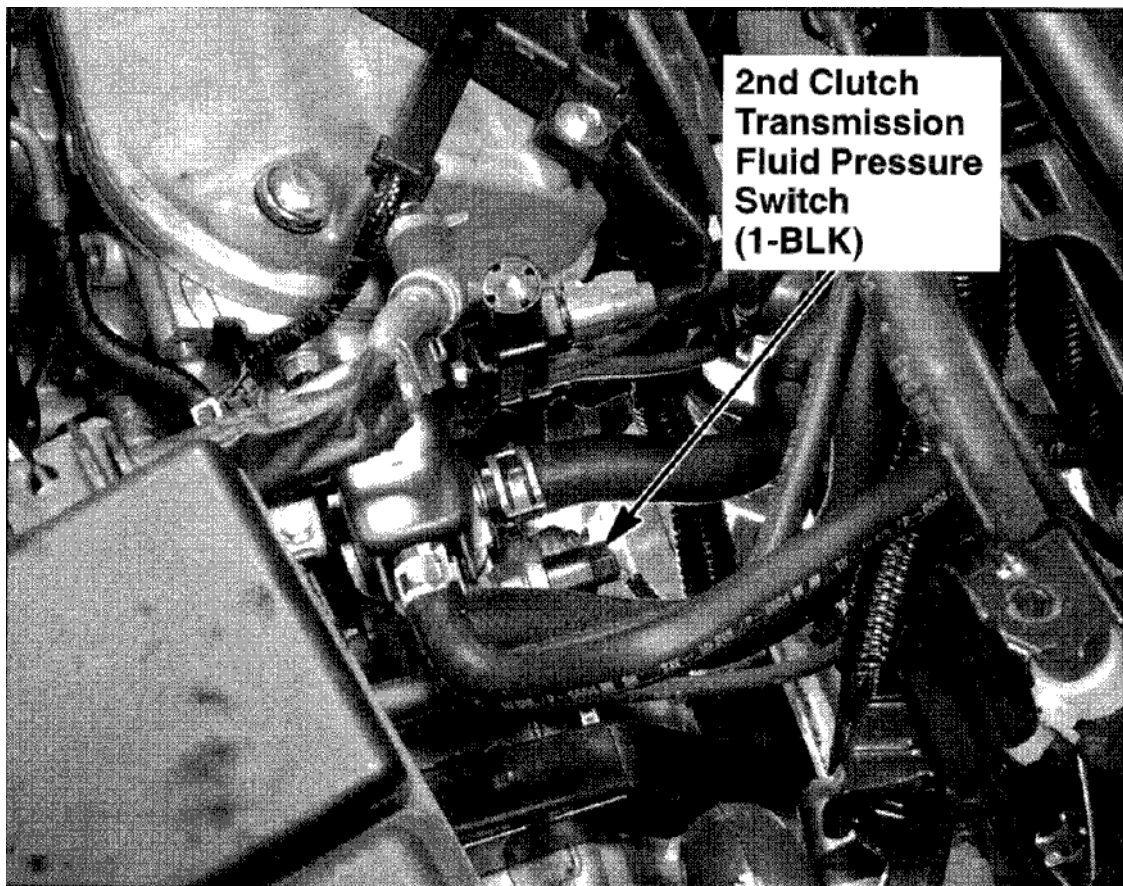

G00447645

Fig. 148: Transmission Housing (A/T)

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

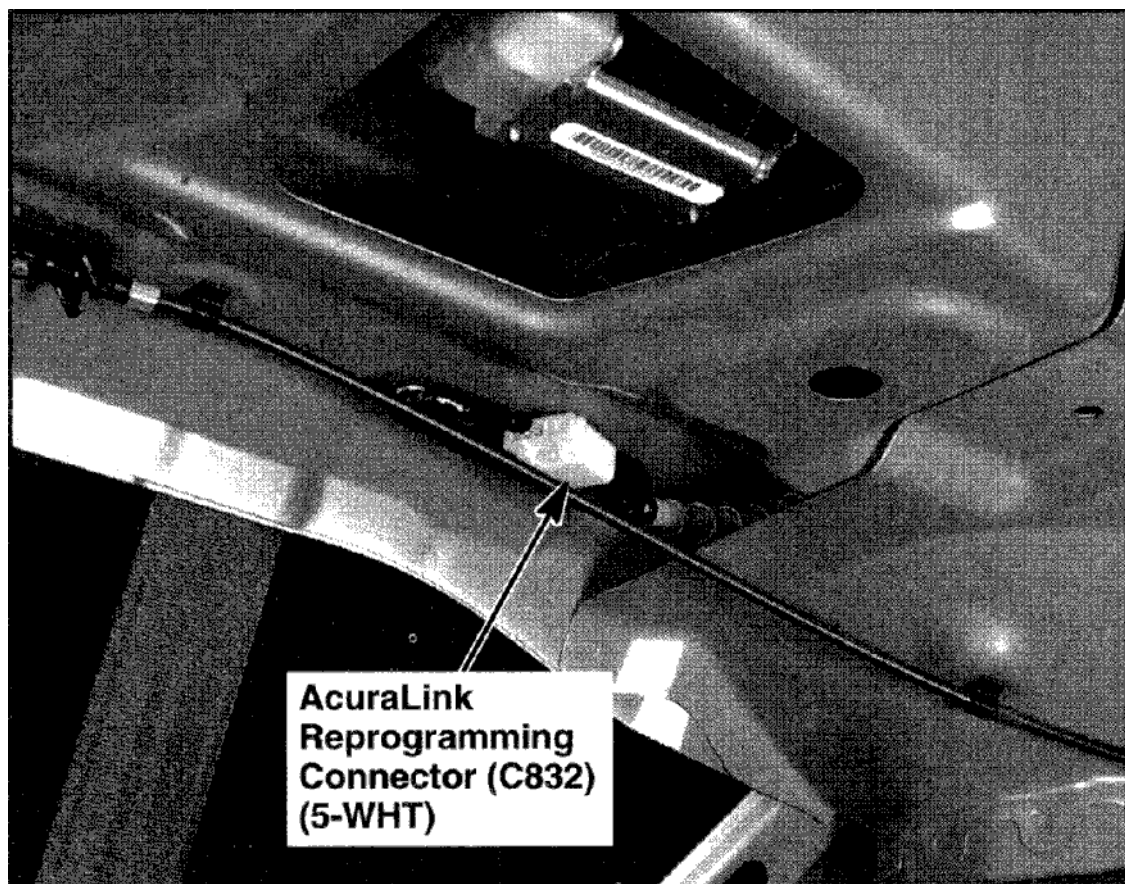

G00447649

Fig. 149: Right Side Of Rear Shelf

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

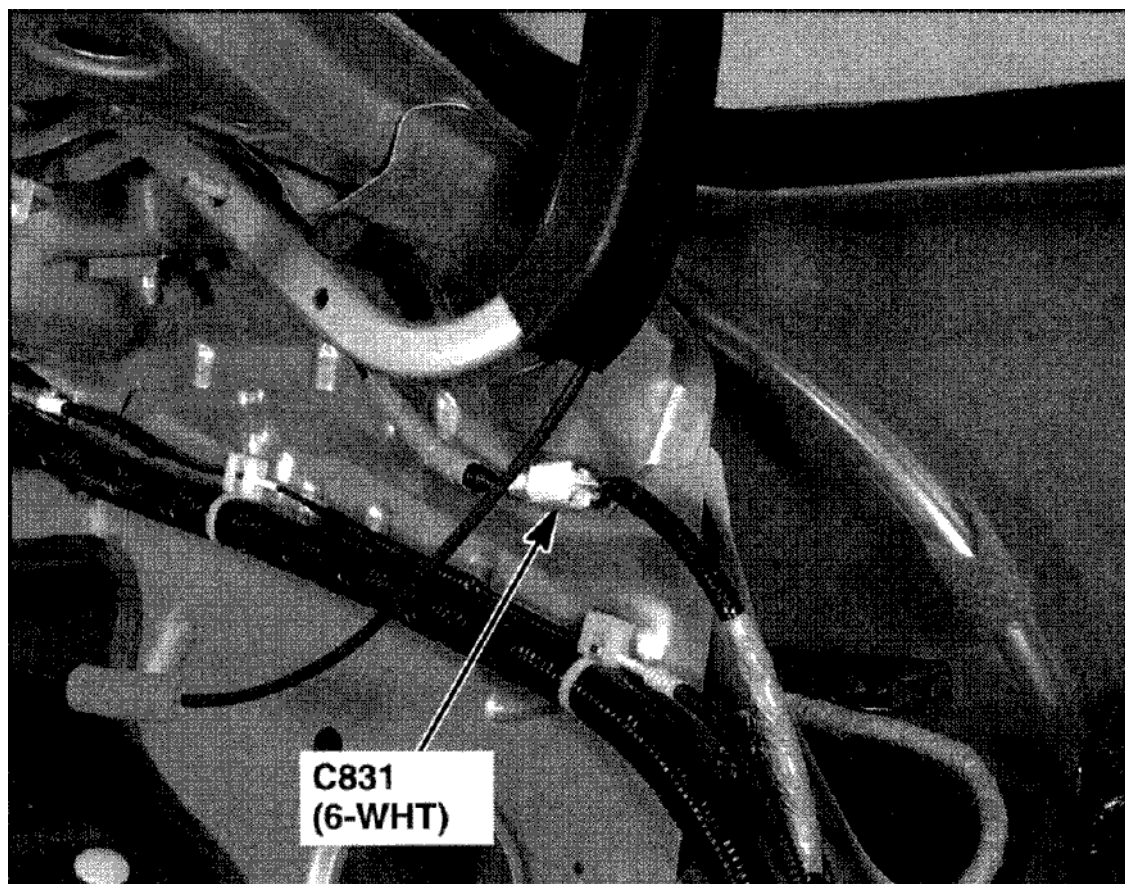

G00447650

Fig. 150: Right Side Of Trunk (Navigation)

Courtesy of AMERICAN HONDA MOTOR CO., INC.


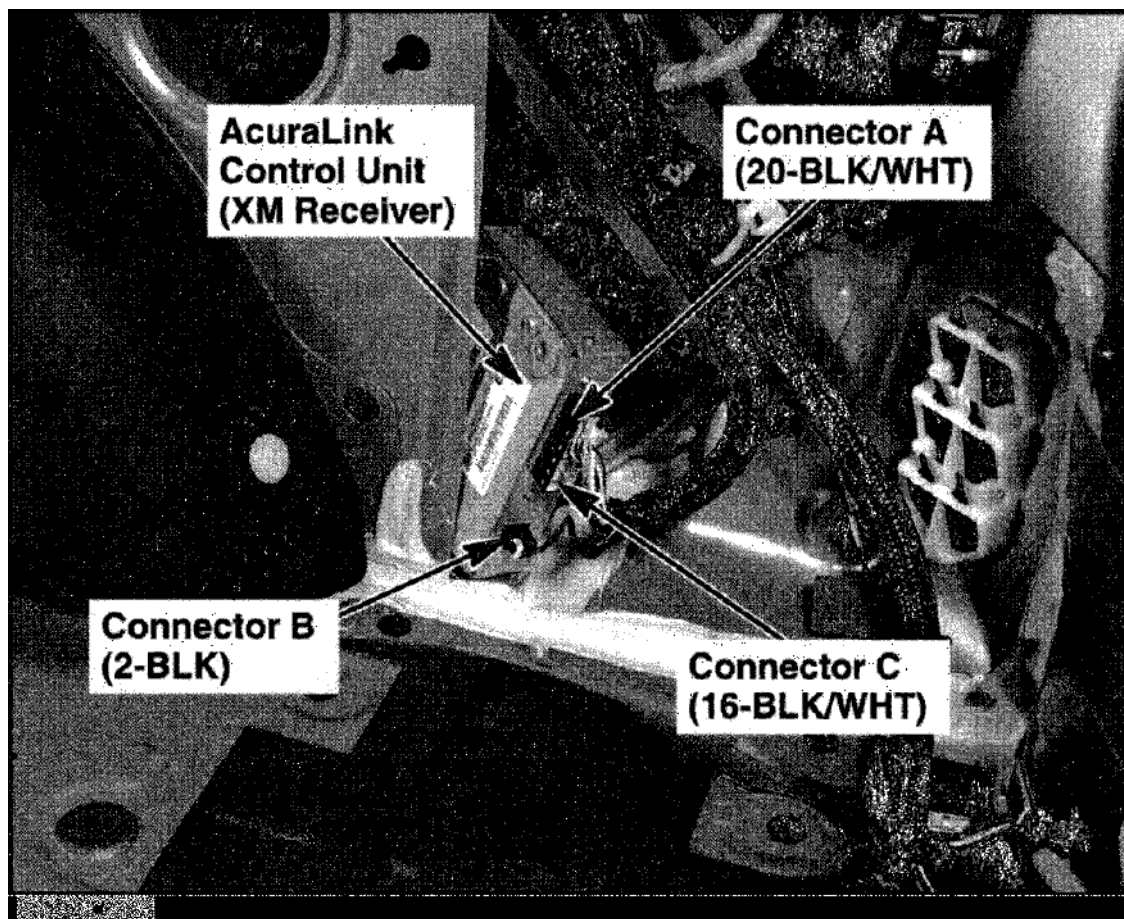 



Fig. 151: Right Side Of Trunk (USA: Navigation)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

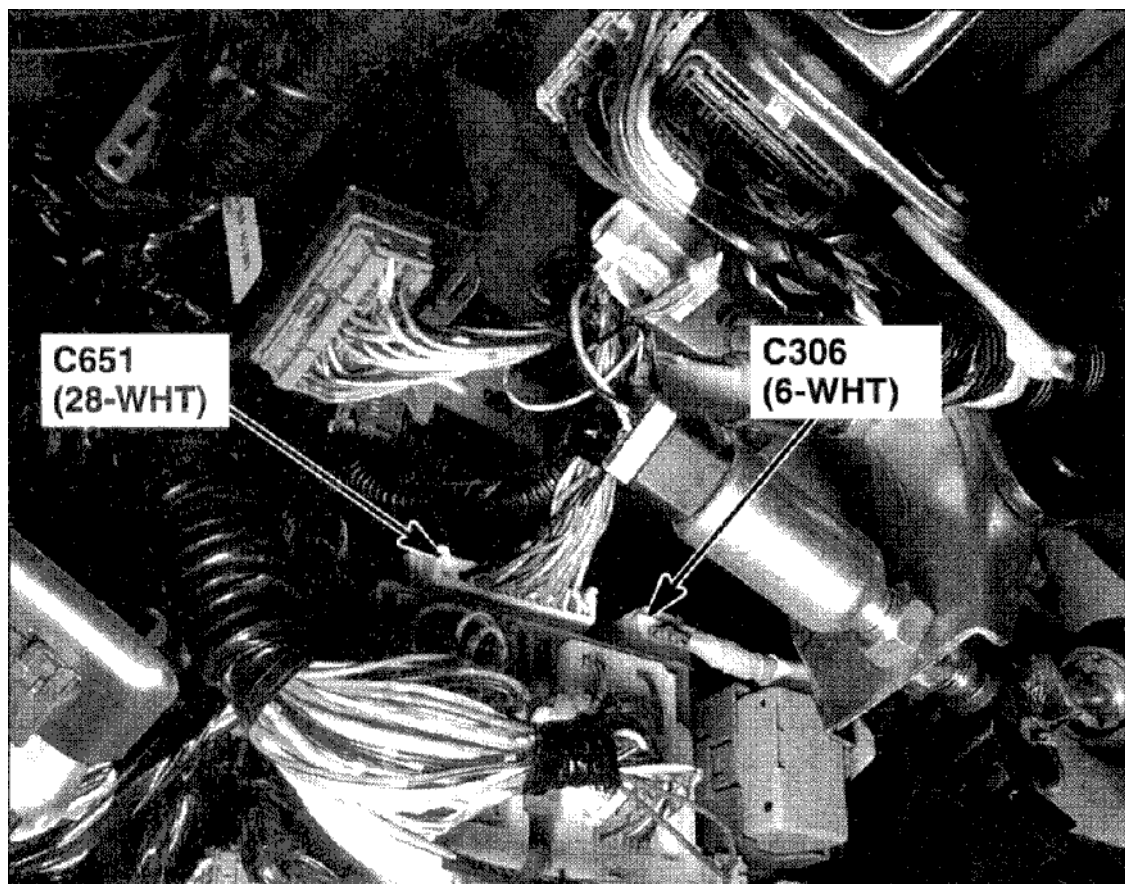 

G00447653

Fig. 152: Behind Left Kick Panel

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

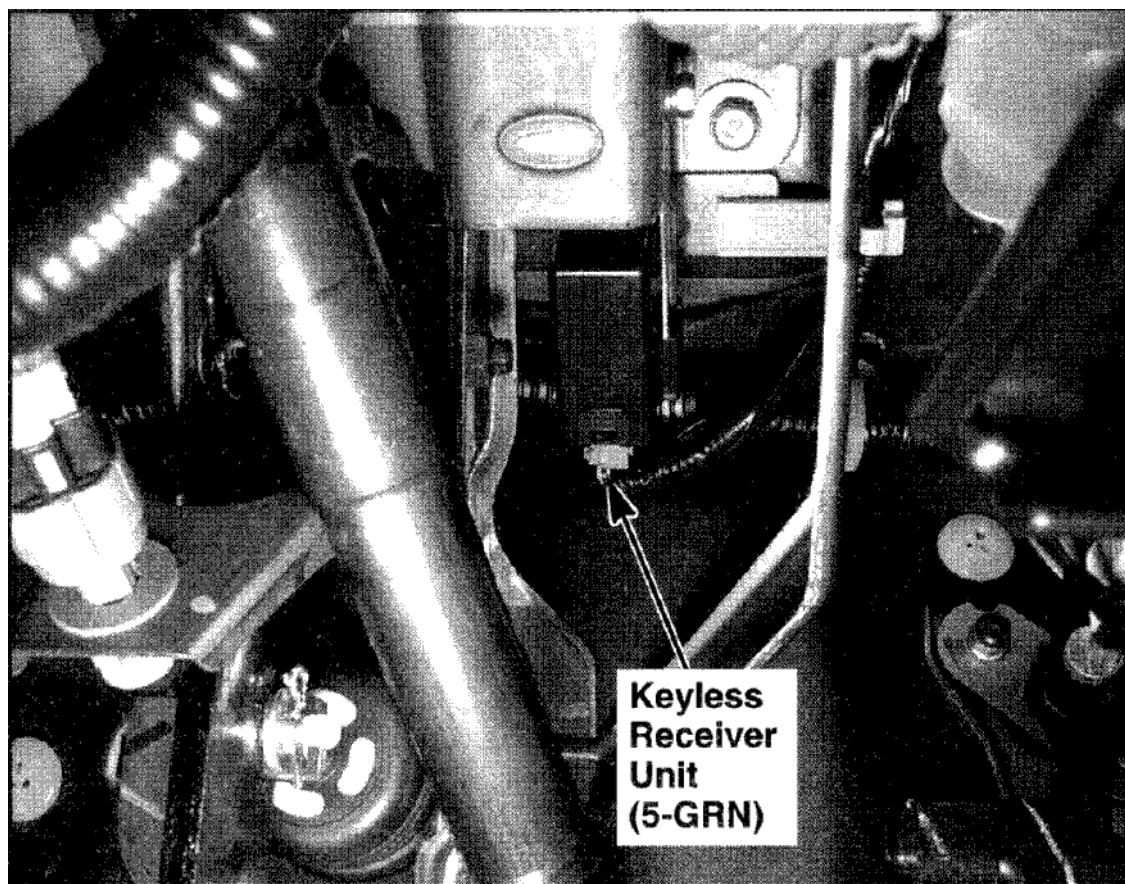

G00447654

Fig. 153: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.


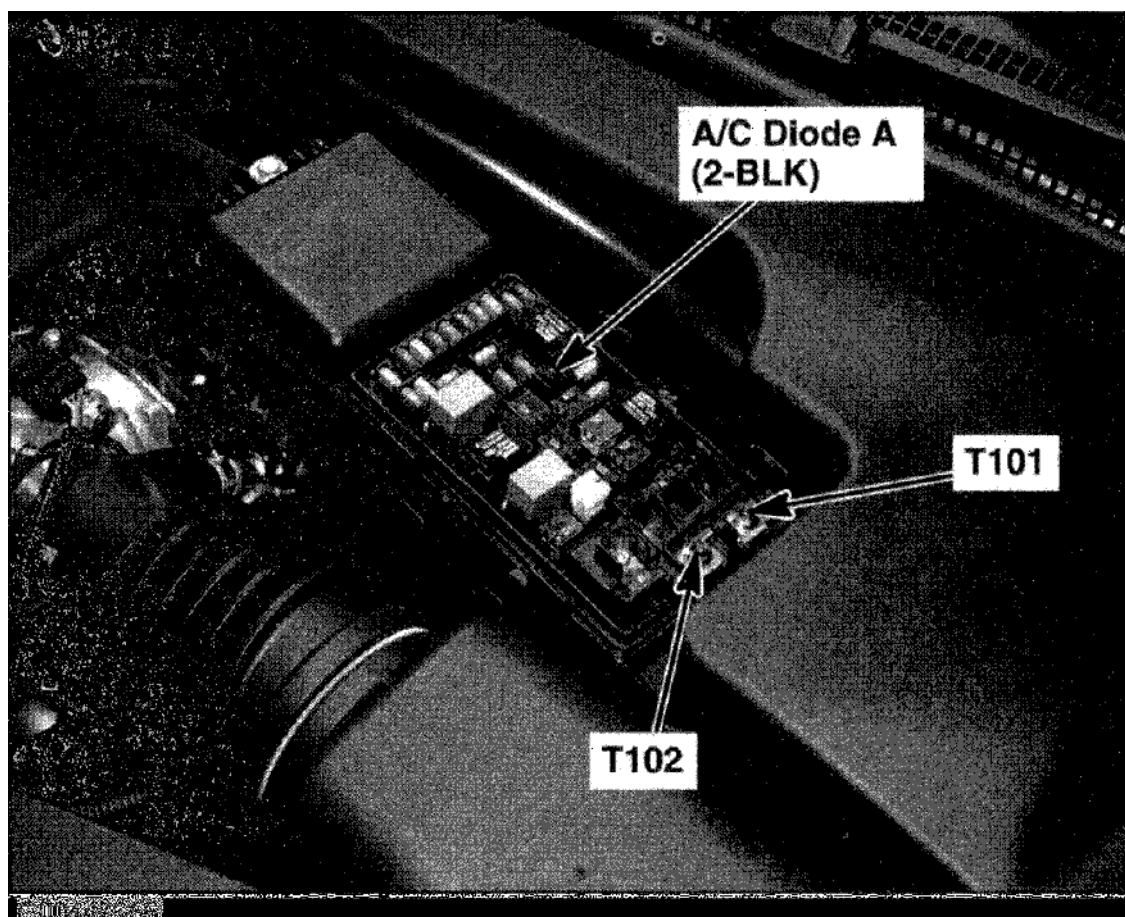 



Fig. 154: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

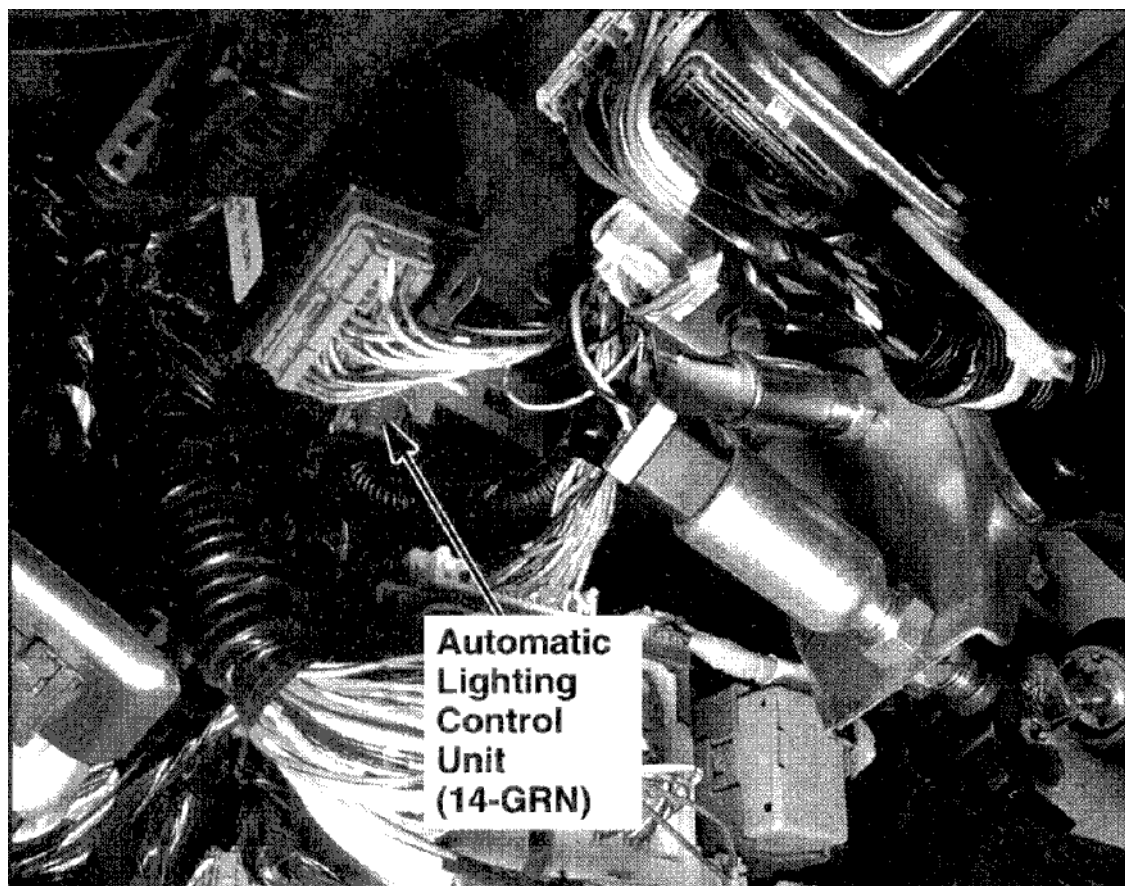 

G00447658

Fig. 155: Under Left Side Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

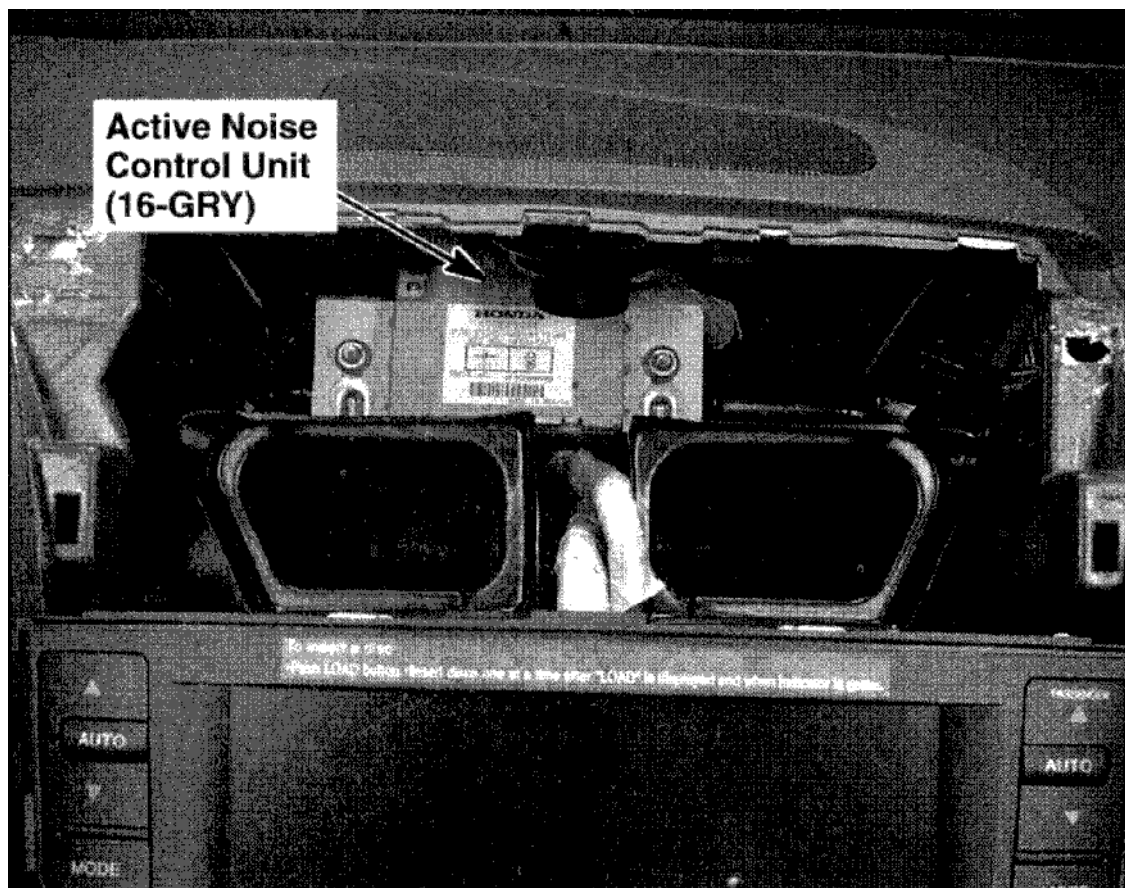

G00447655

Fig. 156: Under Middle Of Dash

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

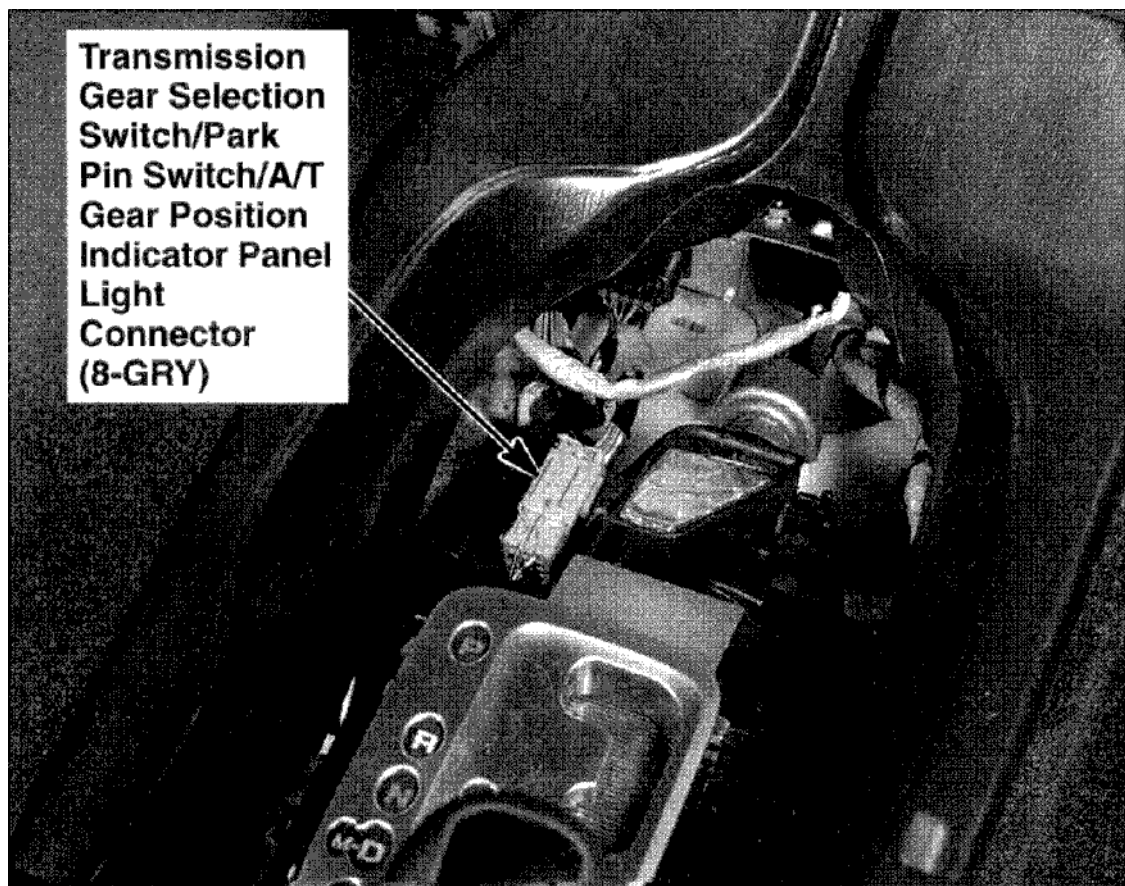

G00447660

Fig. 157: Under Center Console (A/T)

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

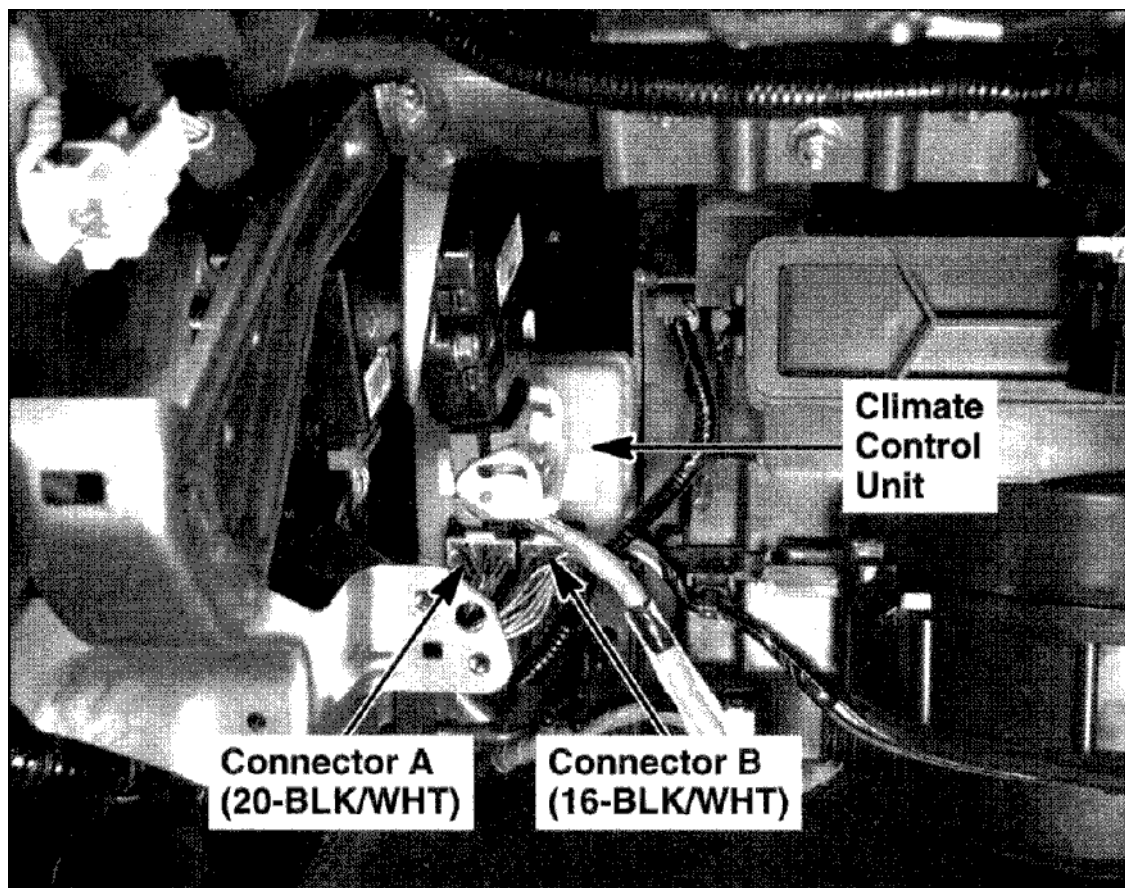

G00447661

Fig. 158: Behind Glove Box

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

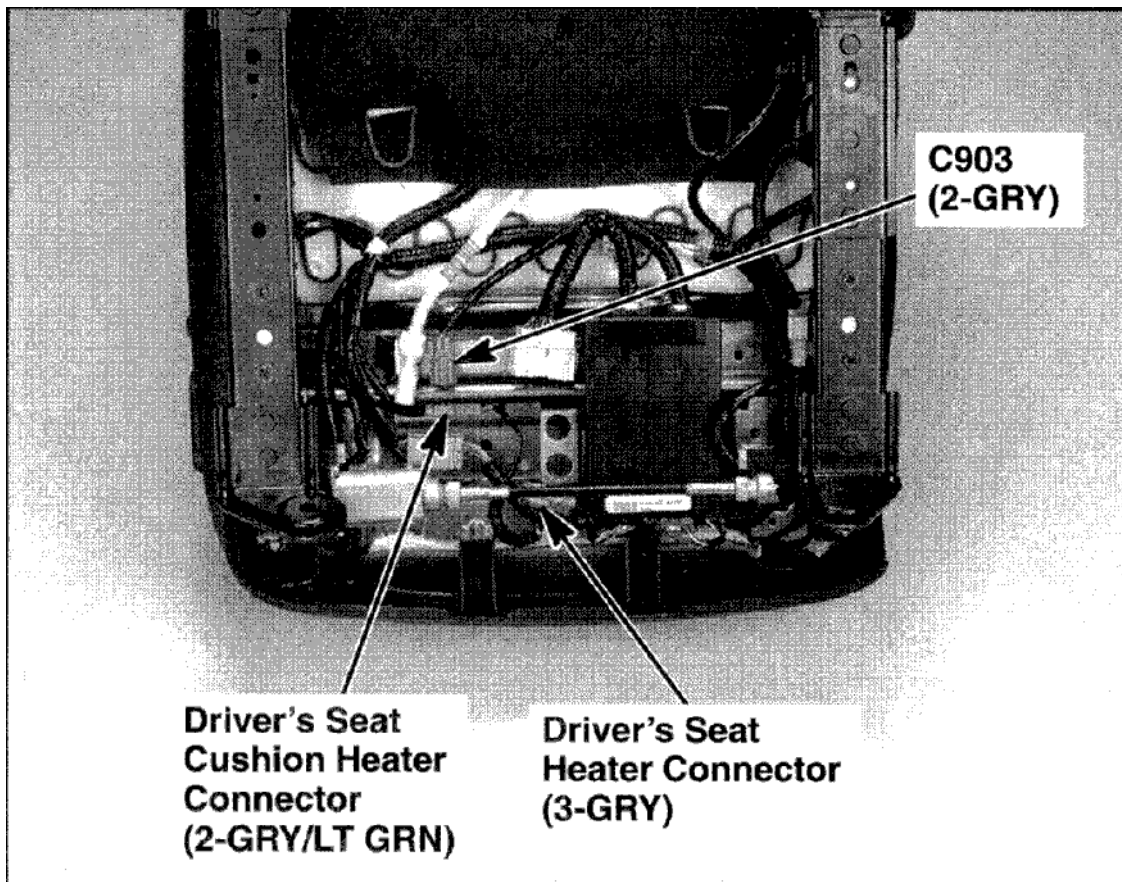

G00447667

Fig. 159: Under Driver's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

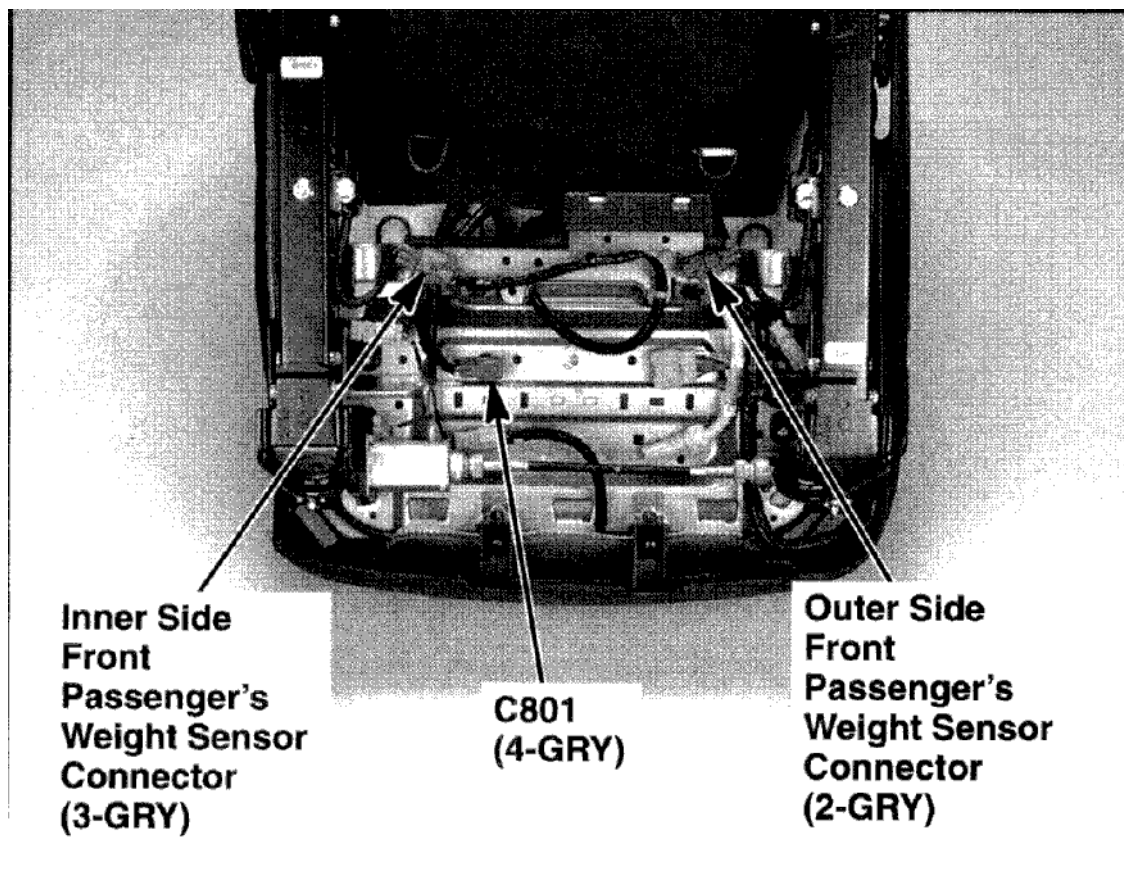

G00447668

Fig. 160: Under Front Passenger's Seat

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

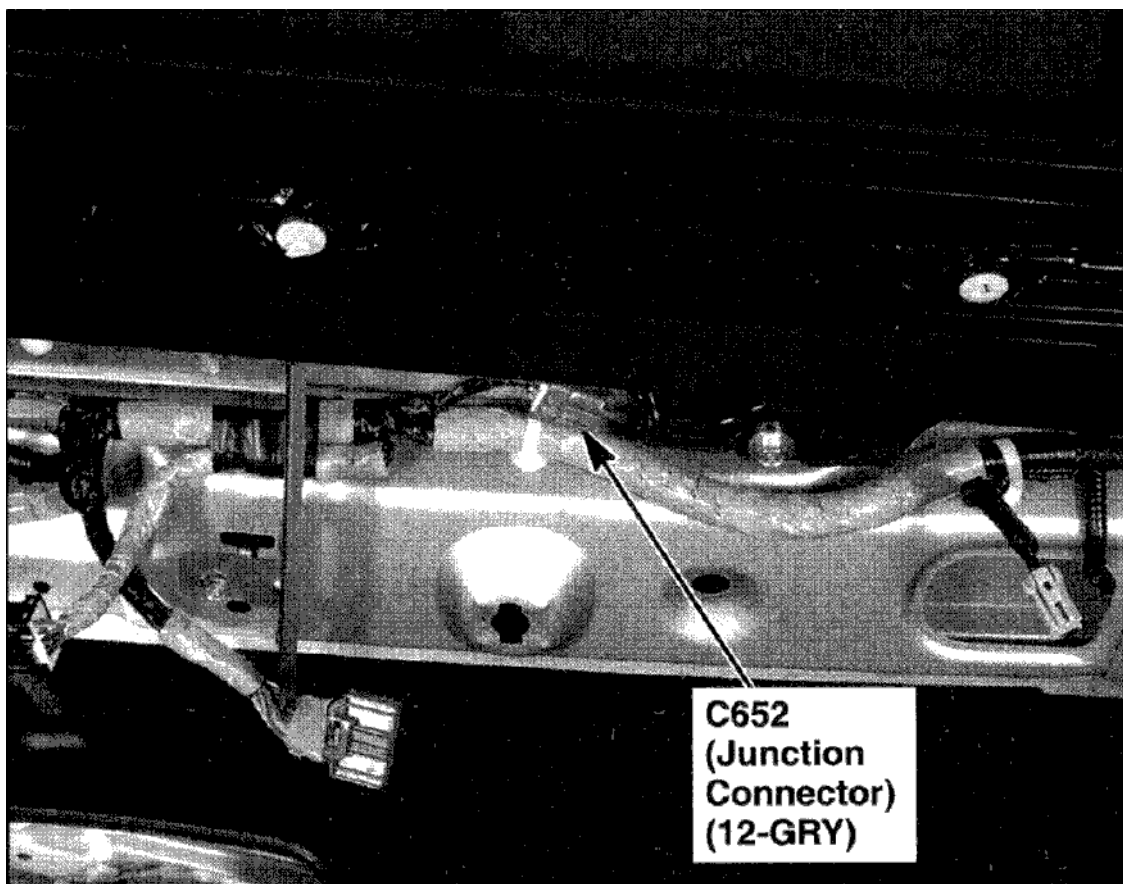

G00447670

Fig. 161: Front Of Roof

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

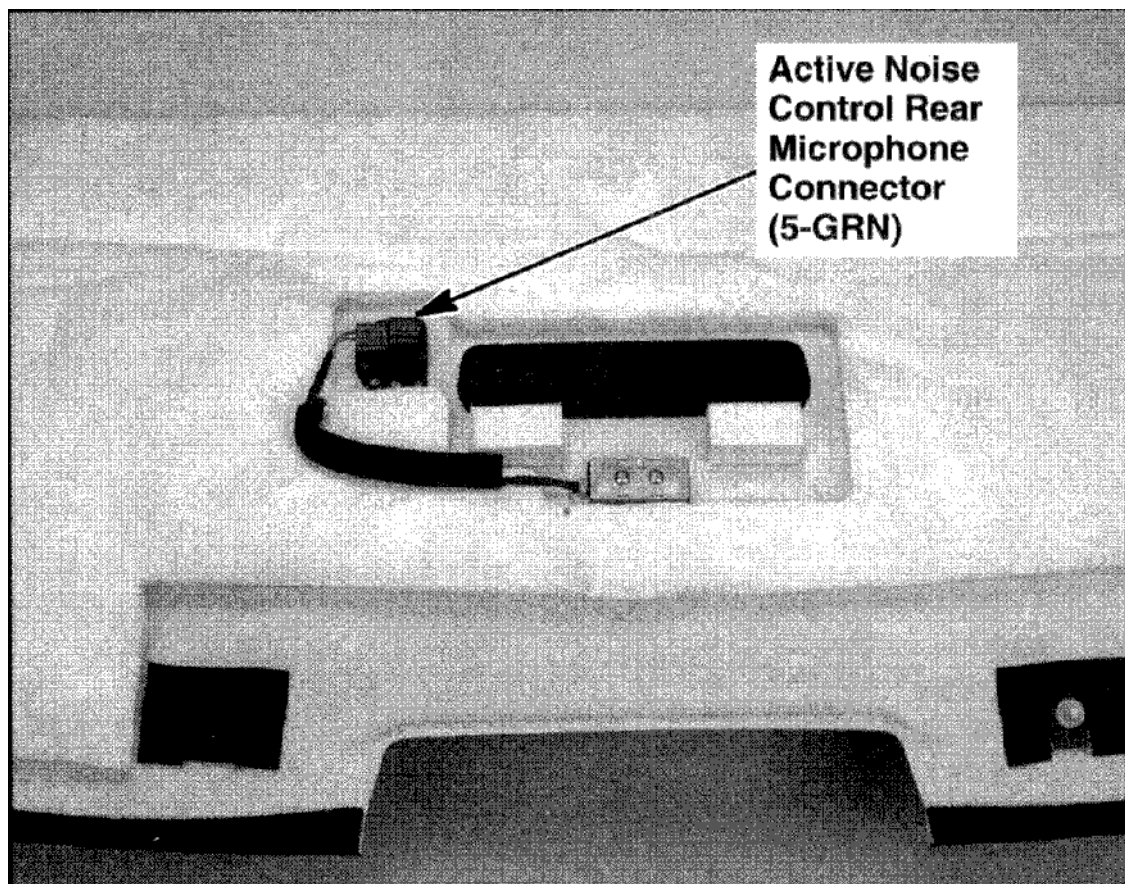

G00447671

Fig. 162: Rear Of Roof

Courtesy of AMERICAN HONDA MOTOR CO., INC.


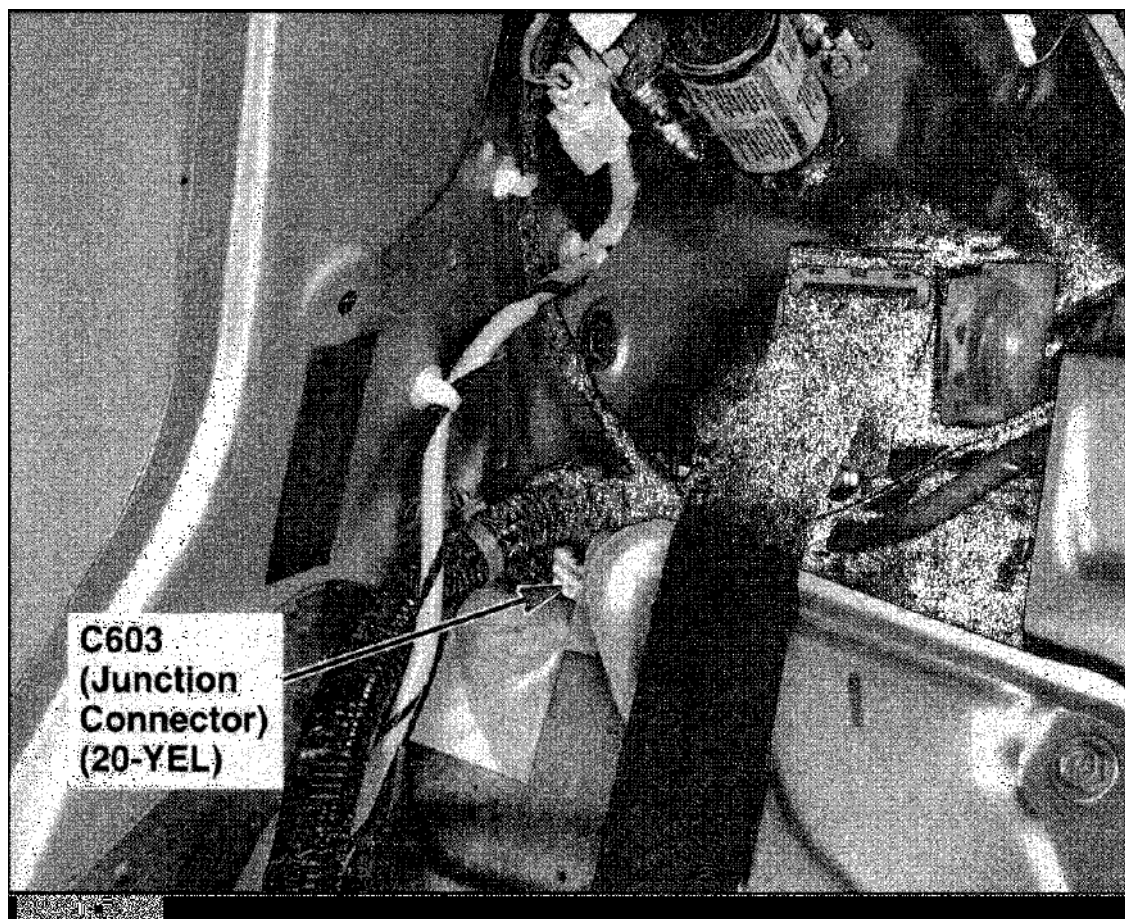 


Fig. 163: Right "C" Pillar

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

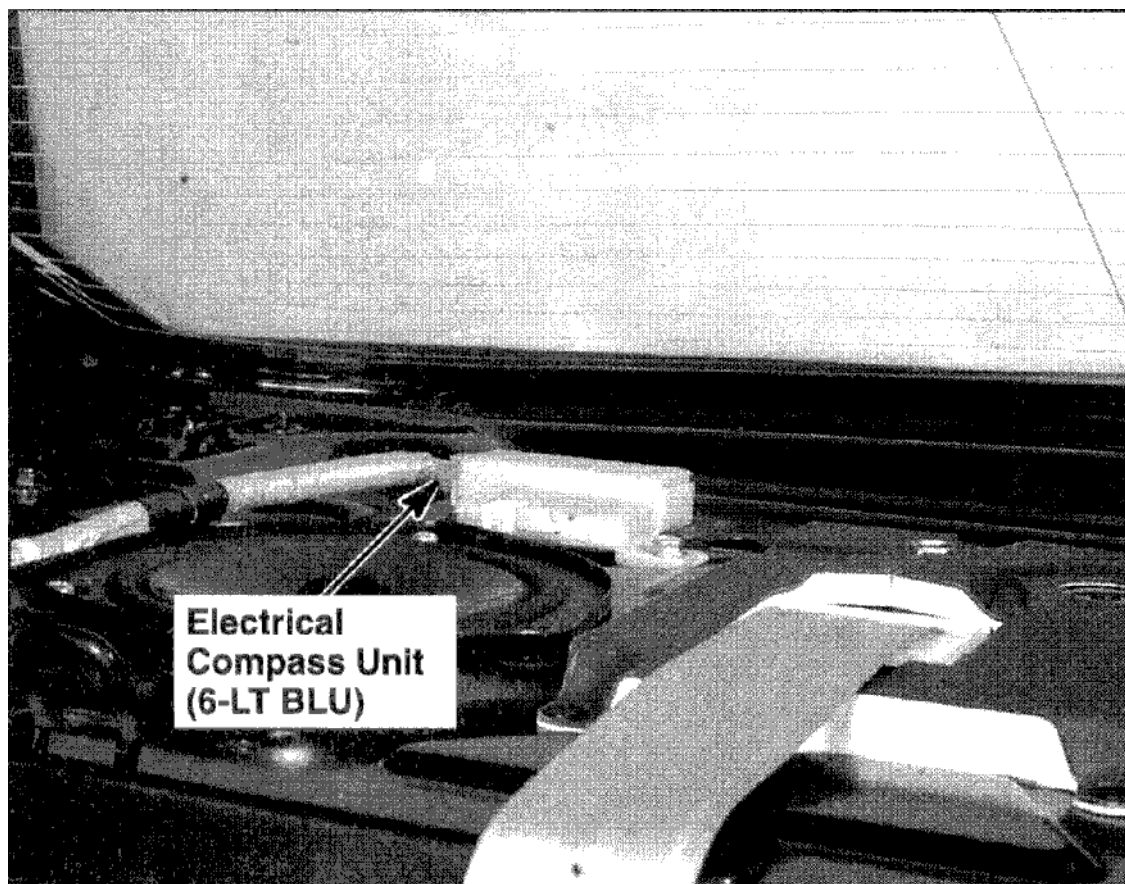

G00447673

Fig. 164: Right Side Of Rear Shelf

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

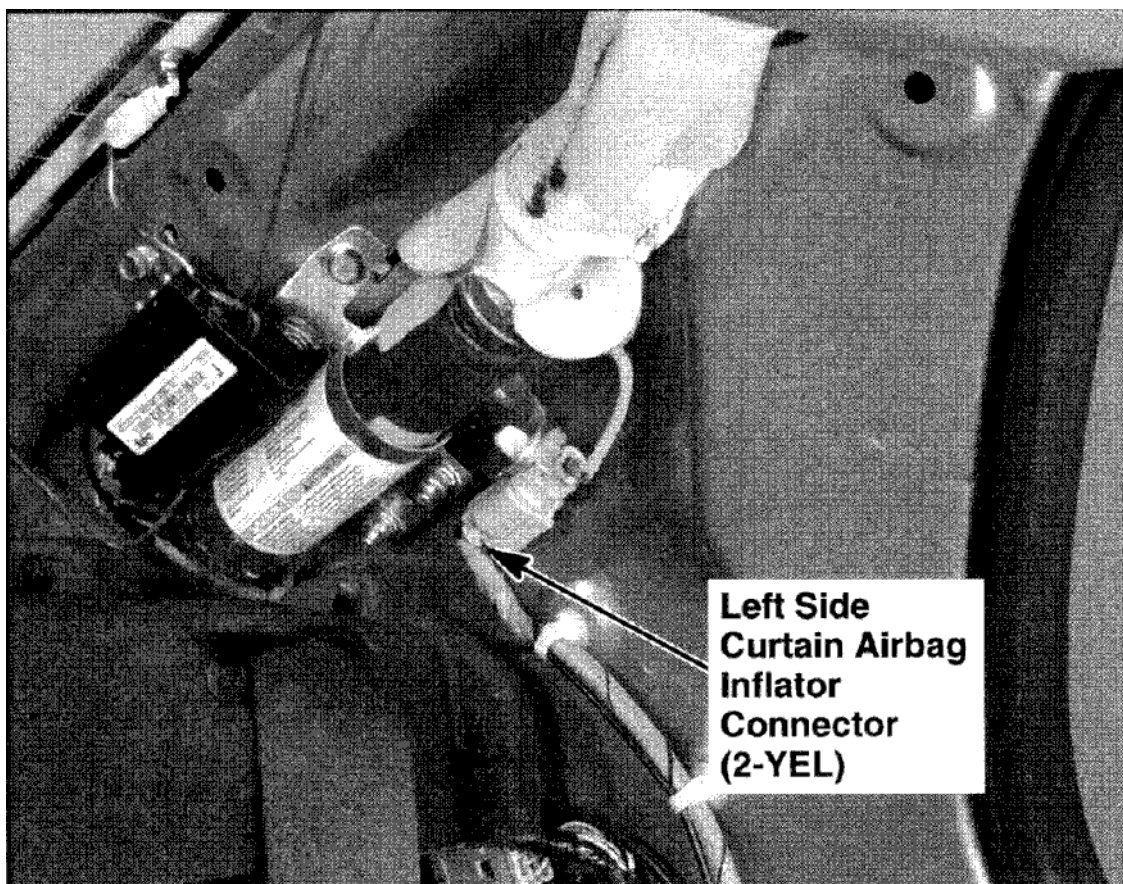

G00447676

Fig. 165: Left "C" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.



Fig. 166: Left "C" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.


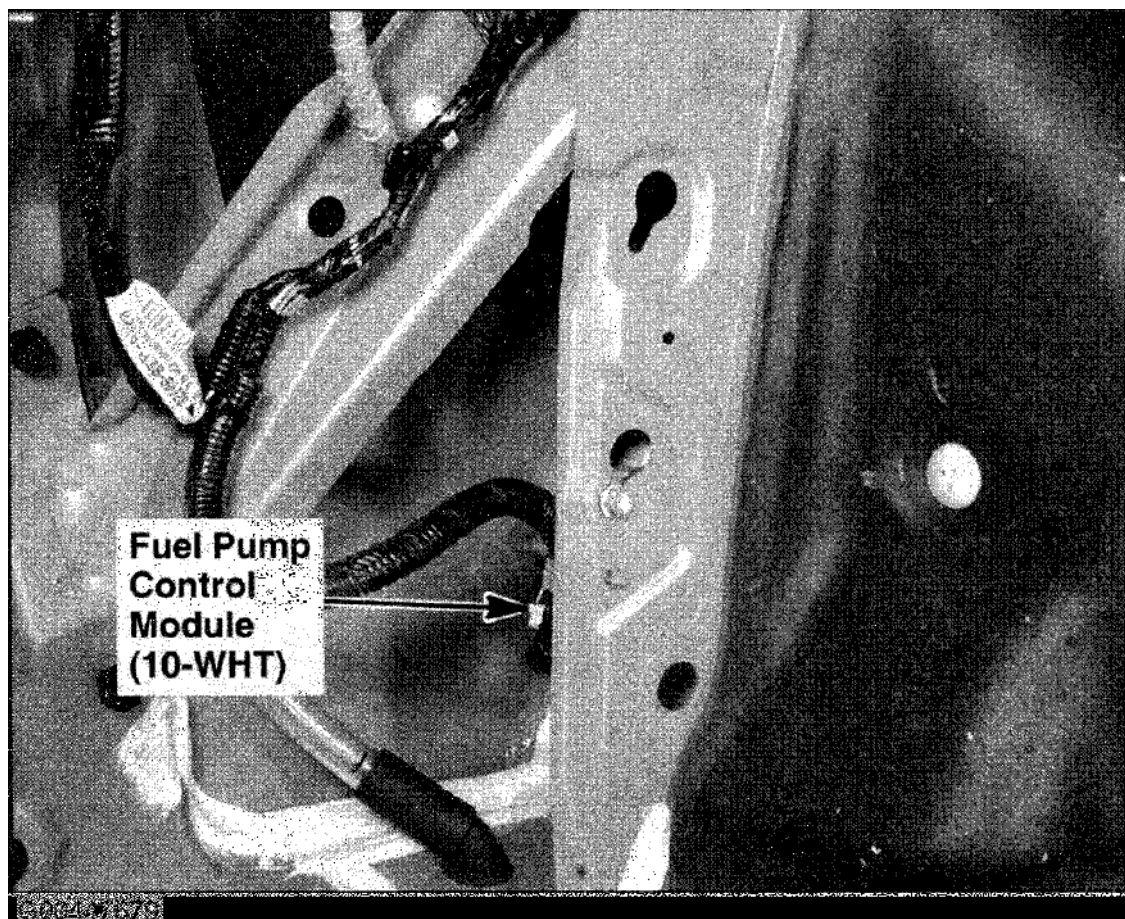 


Fig. 167: Left Side Of Trunk (Type S)

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

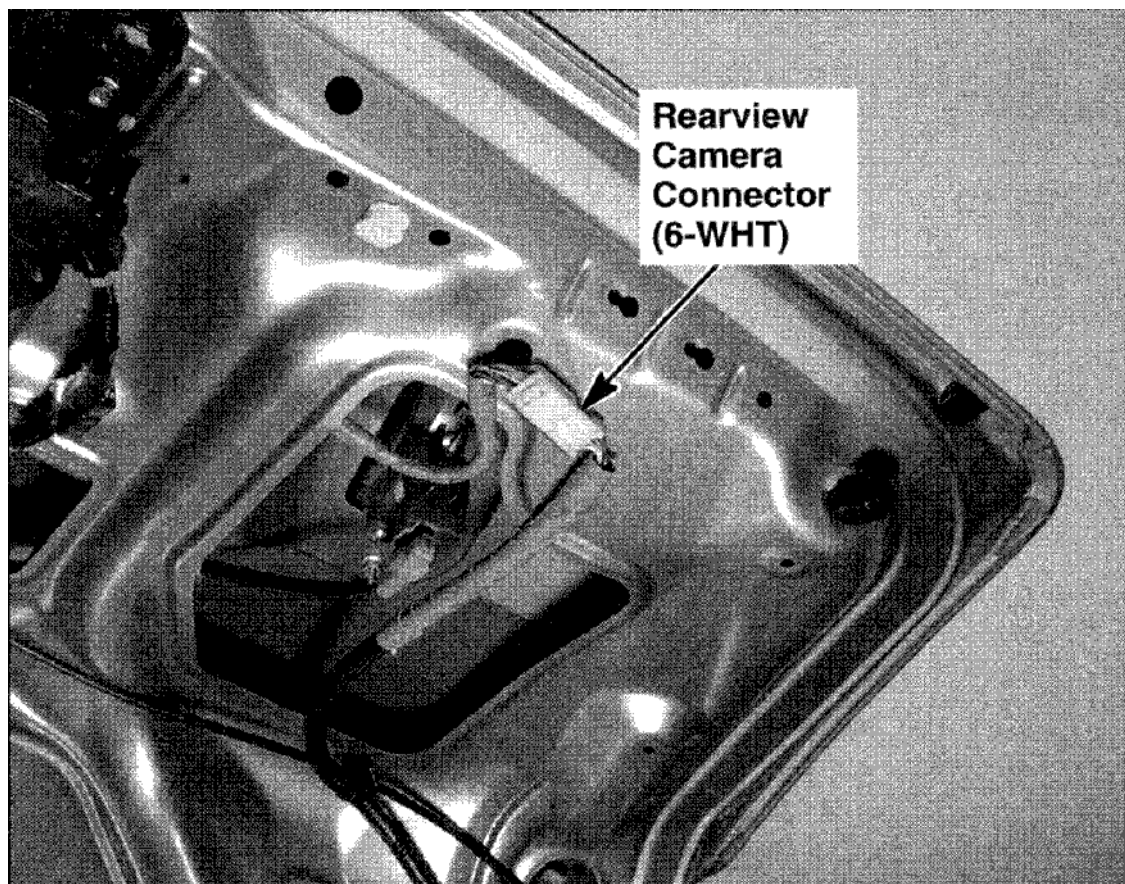

G00447680

Fig. 168: Right Side Of Trunk Lid

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

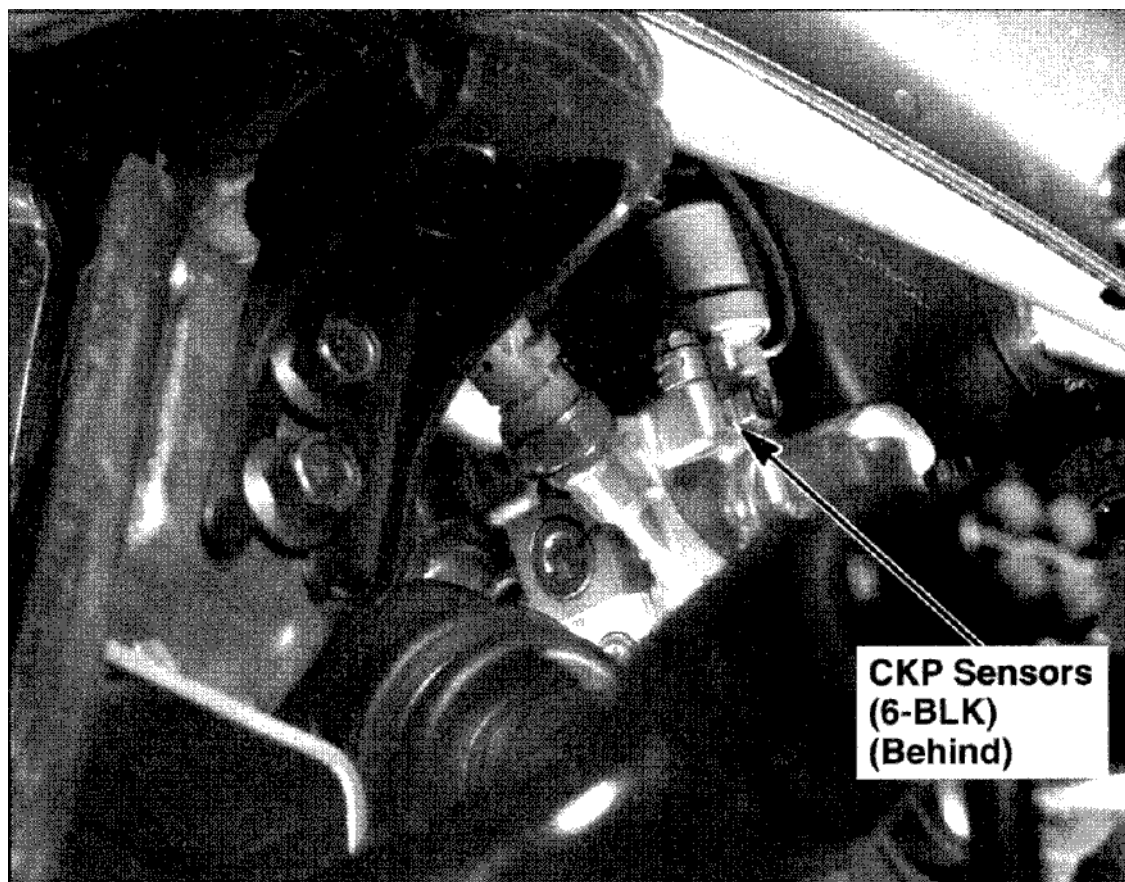

G00447683

Fig. 169: Behind Crankshaft Pulley

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

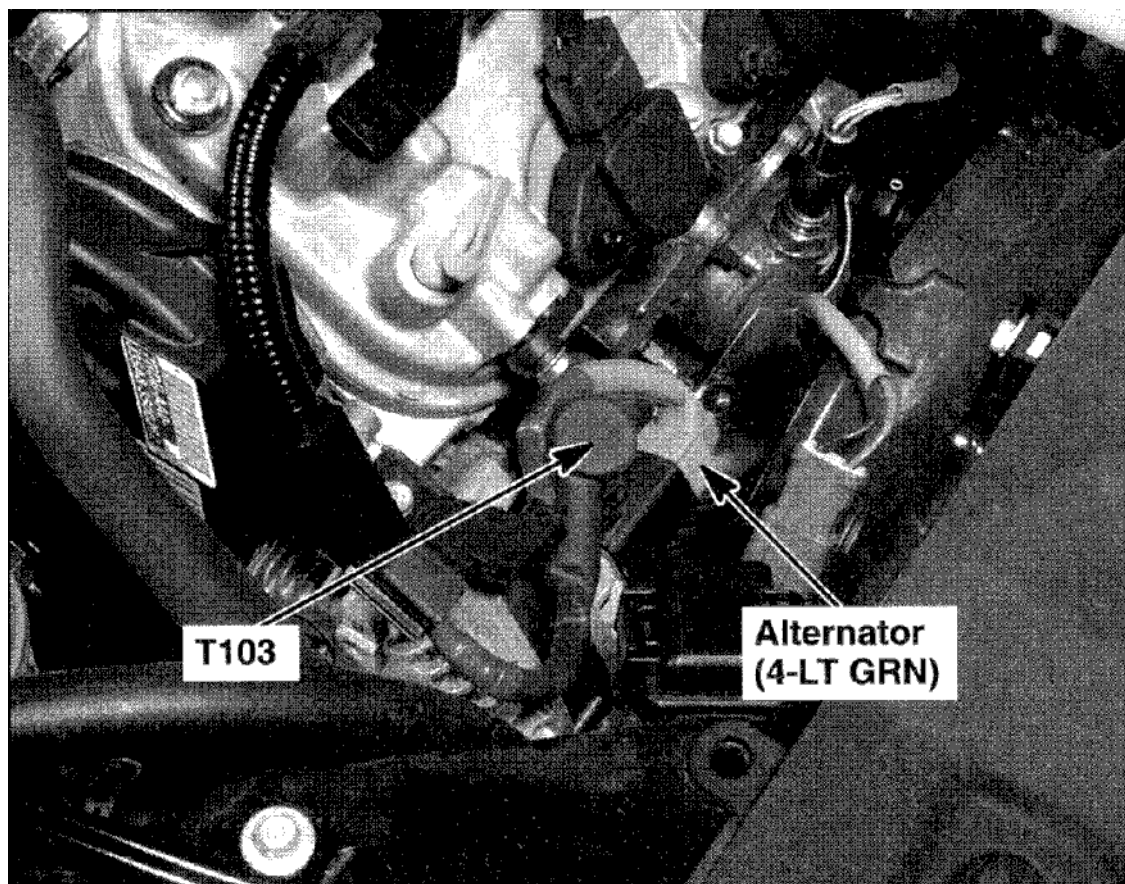

G00447684

Fig. 170: Right Front Of Engine

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

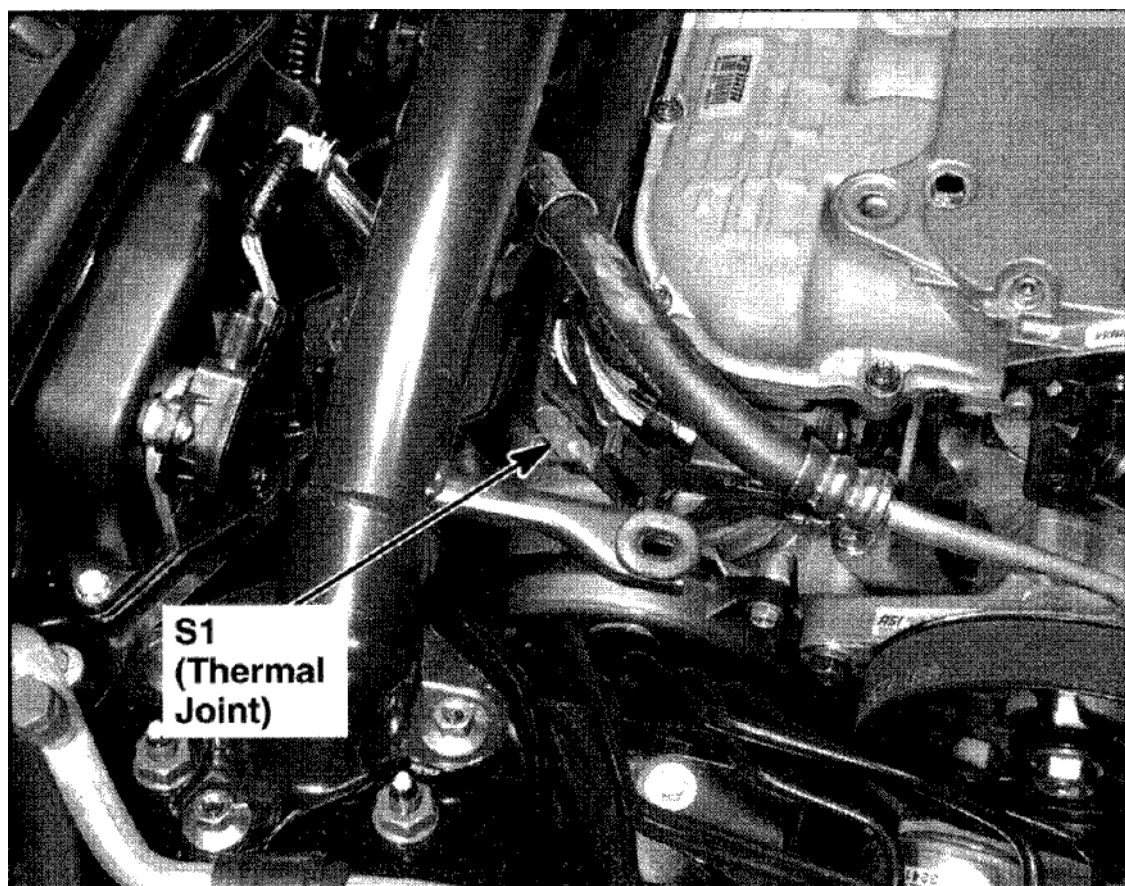

G00447685

Fig. 171: Right Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.


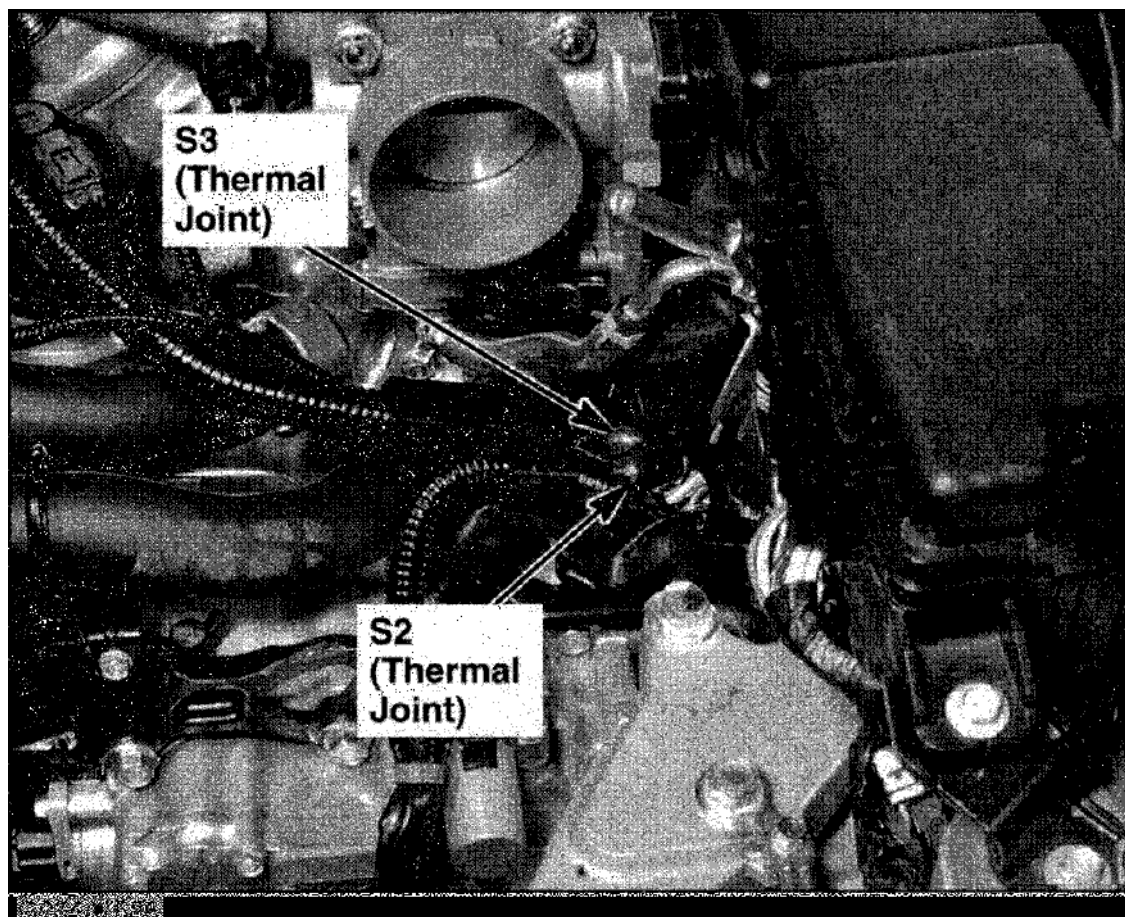 


Fig. 172: Left Side Of Engine (A/T)

 
Courtesy of AMERICAN HONDA MOTOR CO., INC.

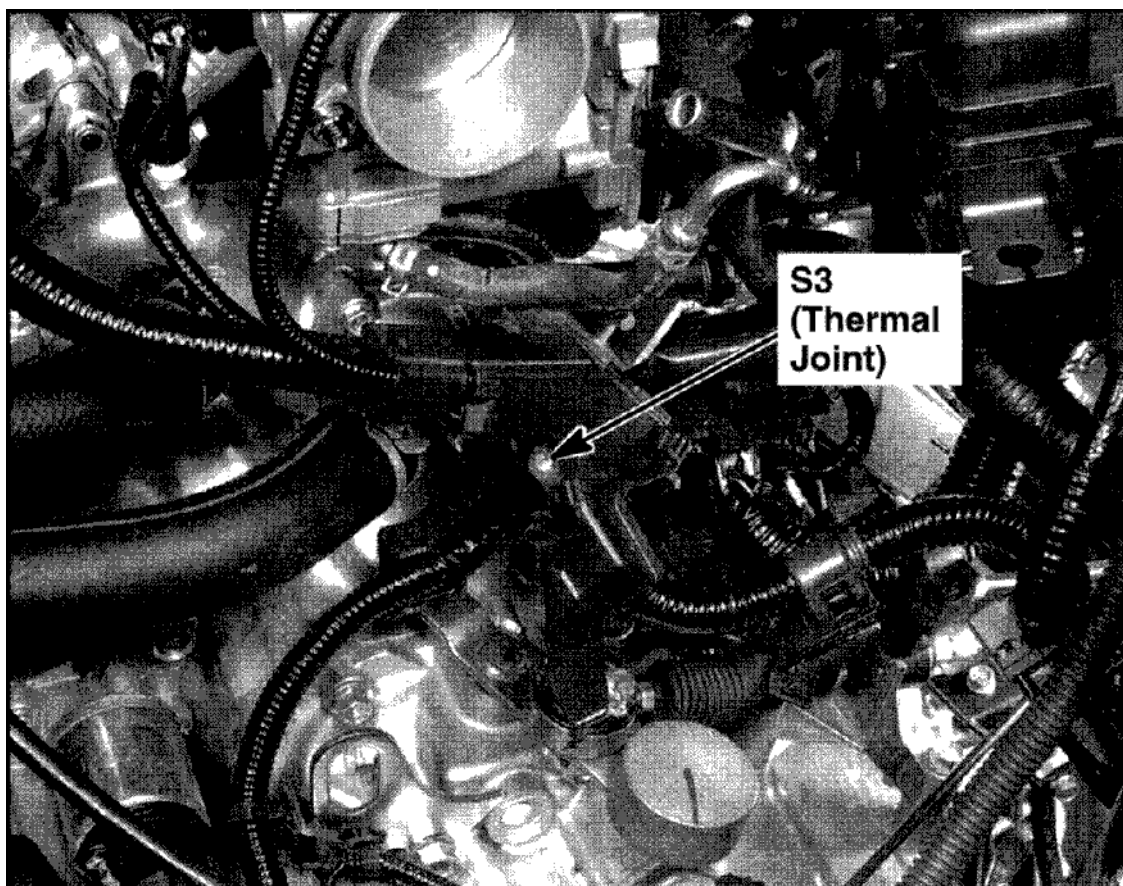

G00447687

Fig. 173: Left Side Of Engine (M/T)

 Courtesy of AMERICAN HONDA MOTOR CO., INC.

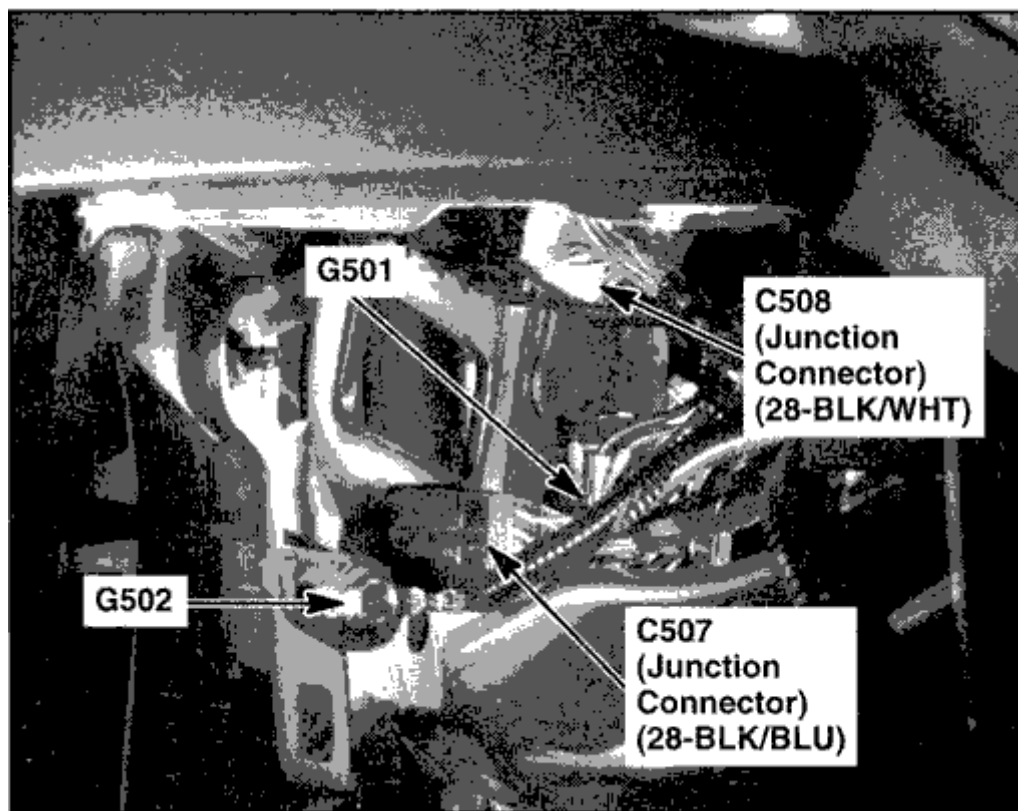

G00288522

Fig. 174: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.