


Buick LaCrosse 2009 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located on the passenger side of the instrument panel.

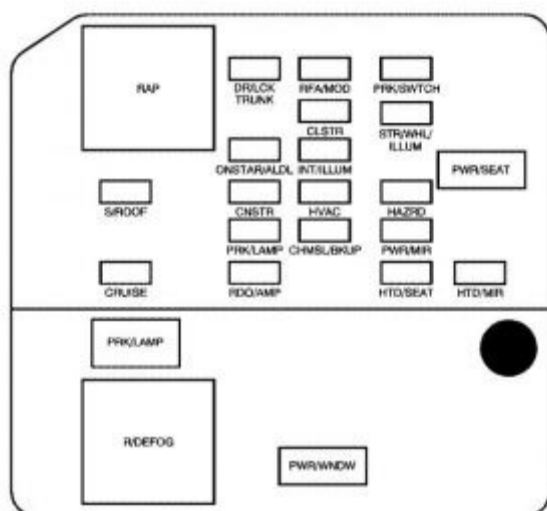

Buick LaCrosse – fuse box – instrument panel


Fuses	Usage
CHMSL/BKUP	Center High-Mounted Stoplamp, Back-up Lamp
CLSTR	Cluster
CNSTR	Canister Vent
CRUISE	Cruise Control
DR/LCK TRUNK	Door Locks, Trunk
HAZRD	Turn Signal, Hazard
HTD/MIR	Heated Mirrors
HTD/SEAT	Heated Seats
HVAC	Climate Control System
INT/ILLUM	Interior Lamps
ONSTAR/ALDL	OnStar®, Data Link
PRK/LAMP	Park Lamps
PRK/SWITCH	Ignition Key Lock
PWR/MIR	Power Mirrors
PWR/SEAT	Power Seats
PWR/WNDW	Power Window
RDO/AMP	Radio, Amplifie
RFA/MOD	Remote Keyless Entry

S/ROOF	Sunroof
STR/WHL/ ILLUM	Steering Wheel Controls Illumination

Relays	Usage
RAP	Retained Accessory Power
PRK/LAMP	Park Lamp Relay
R/DEFOG	Rear Defogger Relay

Underhood Fuse Block

3.8L V6 engines

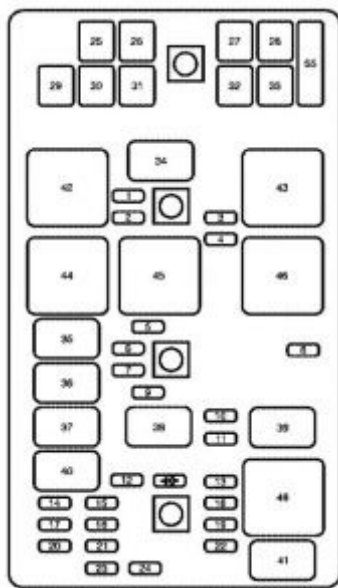

Buick LaCrosse – fuse box – engine compartment (3.8L V6 engine)

Mini Fuses	Usage
1	Driver Side High-Beam
2	Passenger Side High-Beam
3	Driver Side Low-Beam
4	Passenger Side Low-Beam
5	Windshield Wiper
6	Washer/Regulated Voltage Control
7	Fog Lamps
8	Transmission Control Module
9	Supplemental Inflatable Restraint
10	Auxiliary Power
11	Horn


12	Emission
13	Air Conditioner Clutch
14	Oxygen Sensor
15	Powertrain Control Module
16	Powertrain Control Module, Electronic Throttle Control
17	Electronic Throttle Control
18	Display
19	Antilock Brake Solenoid
20	Fuel Injector
21	Transmission Solenoid
22	Fuel Pump
23	Antilock Brake System
24	Ignition
25	Air Pump
26	Battery Main 1
27	Battery Main 2
28	Battery Main 3
29	Fan 1
30	Battery Main 4
31	Antilock Brake System Motor
32	Fan 2
33	Starter
34	Antilock brake system valves

Mini-Relays	Usage
42	Fan 1
43	Fan 3
44	Windshield Wiper High
45	Windshield Wiper
46	Fan 2
48	Crank

Fuse Puller	Usage
55	Fuse Puller

Diodes	Usage
	Air Conditioner Compressor Clutch Diode

5.3L V8 Engine

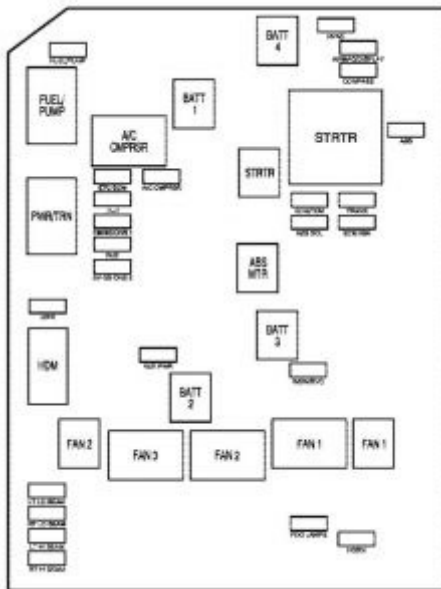

Buick LaCrosse – fuse box – engine compartment (5.8L V8 engine)

Fuses	Usage
A/C CMPSR	Air Conditioning Compressor
ABS	Antilock Brake System (ABS)
ABS MTR	ABS Motor
ABS SOL	ABS Solenoid
AIRBAG/ DISPLAY	Airbag, Display
AUX PWR	Auxiliary Power
BATT 1	Battery 1
BATT 2	Battery 2
BATT 3	Battery 3
BATT 4	Battery 4
COMPASS	Compass
ECM IGN	Engine Control Module (ECM), Ignition
ECM/TCM	ECM, Transmission Control Module (TCM)
EMISSIONS 1	Emissions 1
EMISSIONS 2	Emissions 2
ETC/ECM	Electronic Throttle Control, ECM

FAN 1	Cooling Fan 1
FAN 2	Cooling Fan 2
FOGLAMPS	Fog Lamps
FUEL/PUMP	Fuel Pump
HORN	Horn
HVAC	Climate Control System
INJ 1	Injectors 1
INJ 2	Injectors 2
LT HI BEAM	Driver Side High-Beam Headlamps
LT LO BEAM	Driver Side Low-Beam Headlamp
RT HI BEAM	Passenger Side High-Beam Headlamp
RT LO BEAM	Passenger Side Low-Beam Headlamp
STRTR	Starter
TRANS	Transmission
WPR	Windshield Wipers
WSW/RVC1	Windshield Washers, Regulated Voltage Control

Relays	Usage
A/C CMPSR	Air Conditioning Compressor
FAN 1	Cooling Fan 1
FAN 2	Cooling Fan 2
FAN 3	Cooling Fan 3
FUEL/PUMP	Fuel Pump
HDM	Headlamp Driver Module
PWR/TRN	Powertrain
STRTR	Starter