


DOOR CONTROL MODULE SYSTEM

Component Index

- [Driver Door Module \(DDM\)](#)
- [Front Passenger Door Module \(FPDM\)](#)
- [Fuse Block-Rear](#)


DOOR CONTROL MODULE SYSTEM

Circuit Schematic

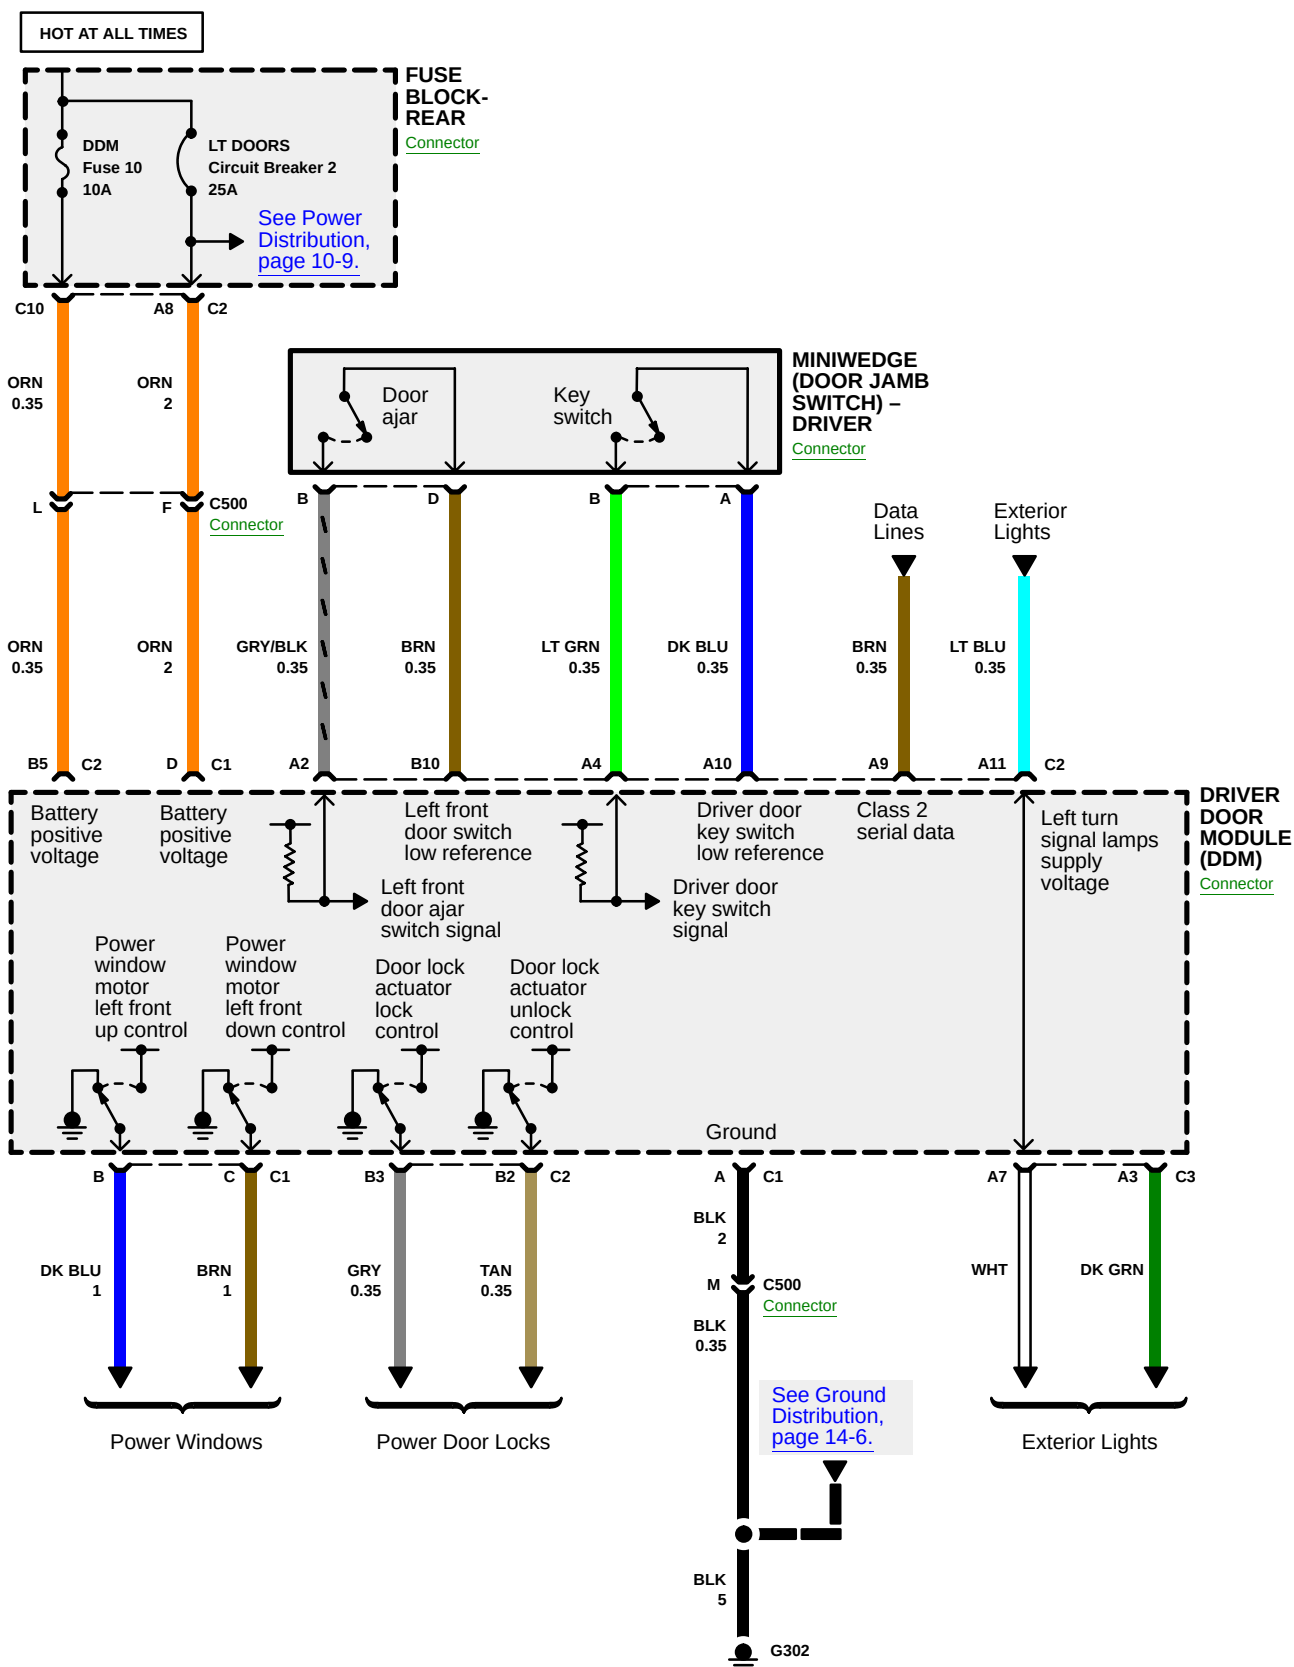


DOOR CONTROL MODULE SYSTEM

Circuit Schematic

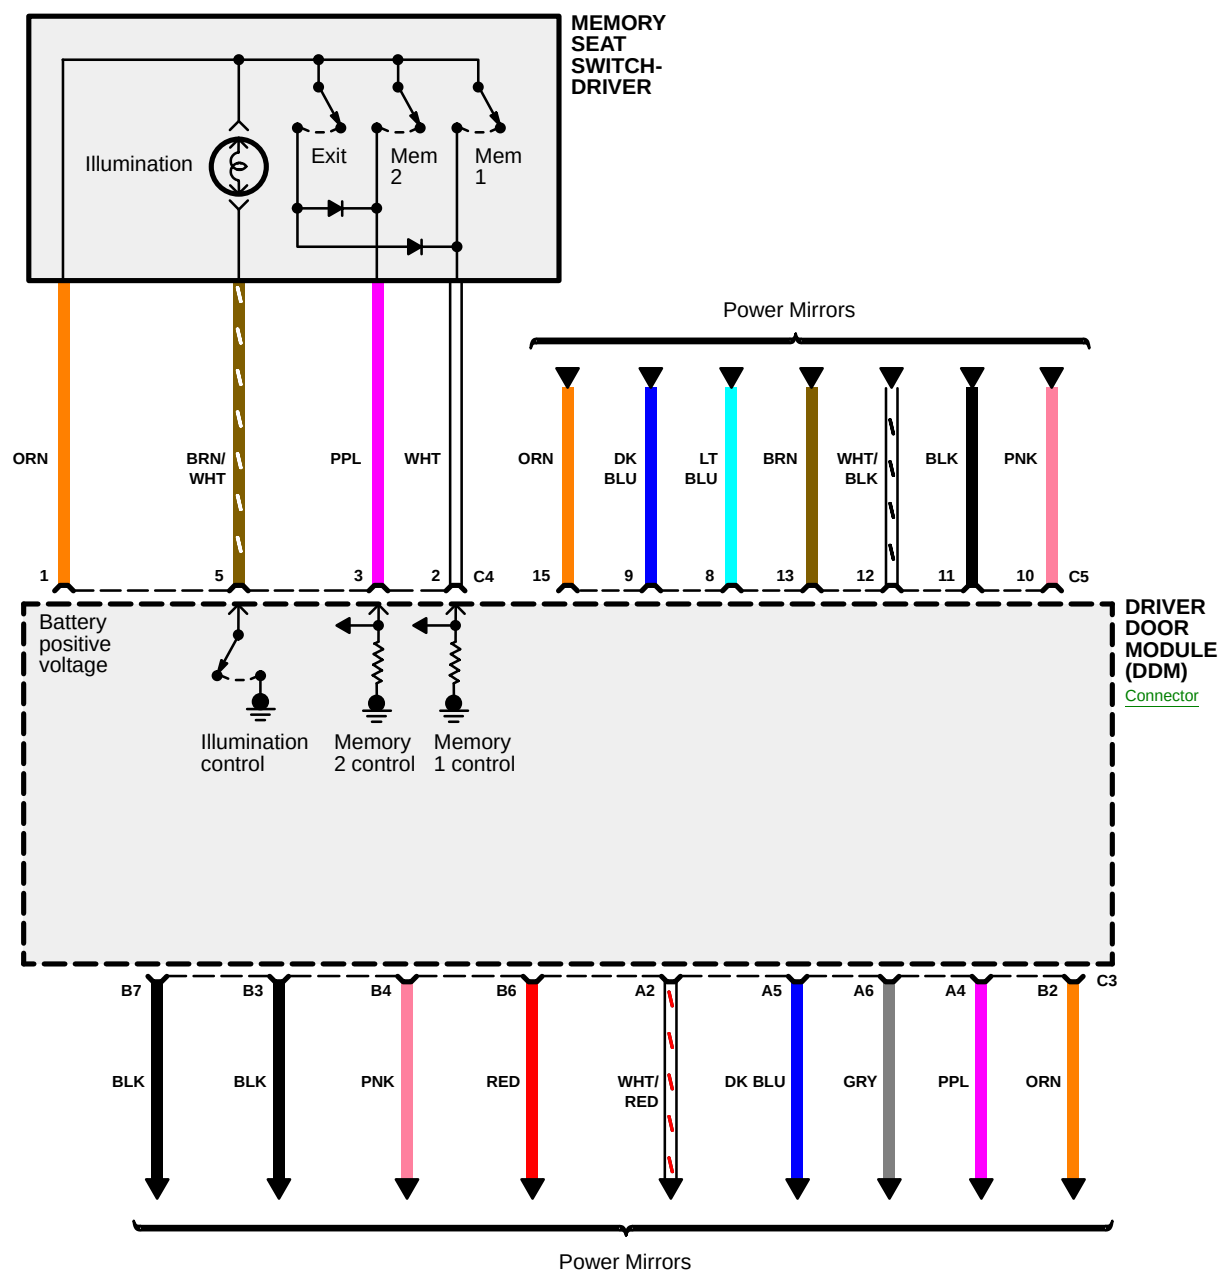


DOOR CONTROL MODULE SYSTEM

Circuit Schematic

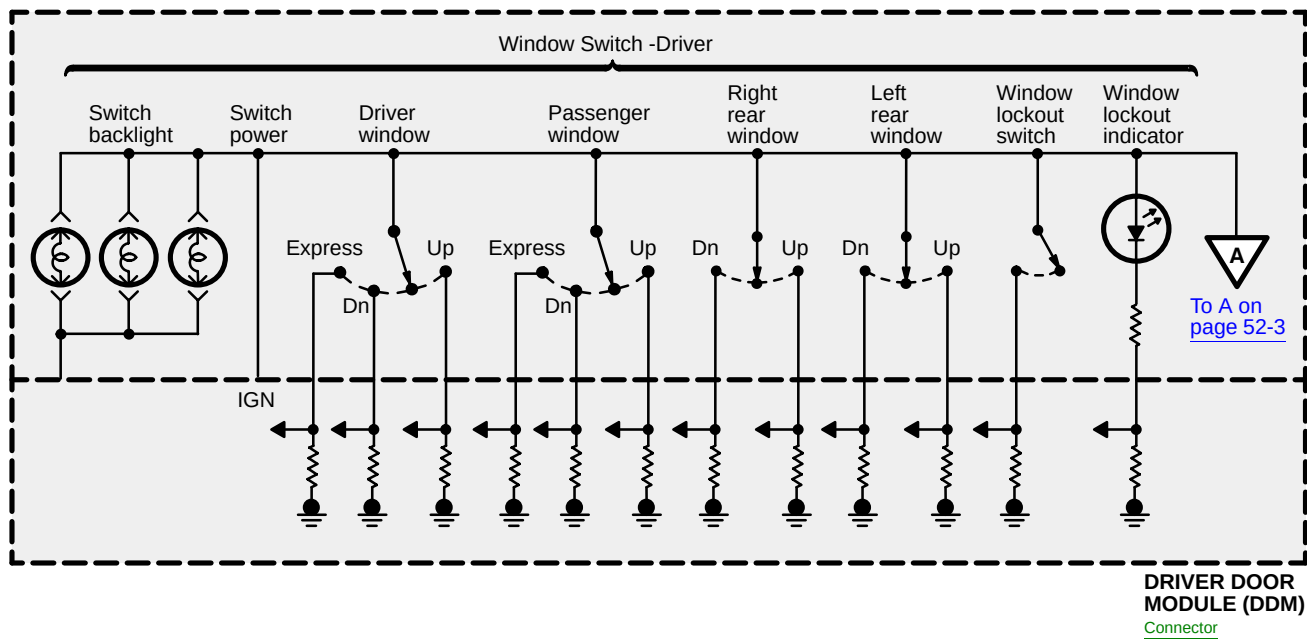


DOOR CONTROL MODULE SYSTEM

Circuit Schematic

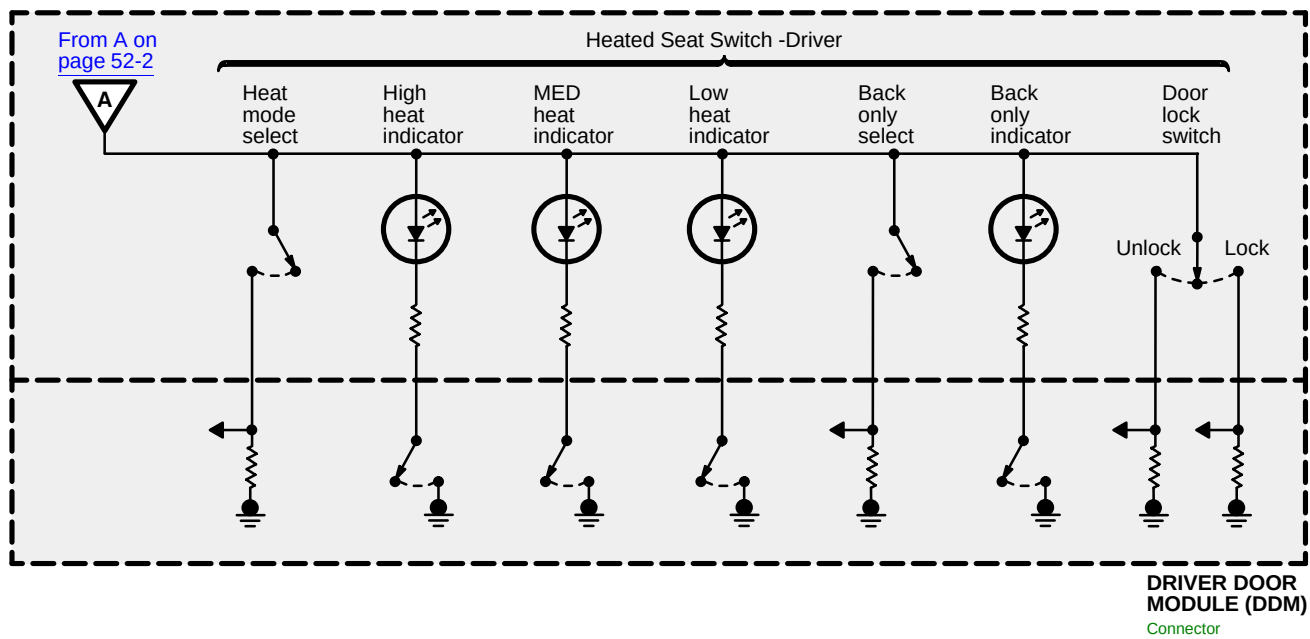


DOOR CONTROL MODULE SYSTEM

Circuit Schematic

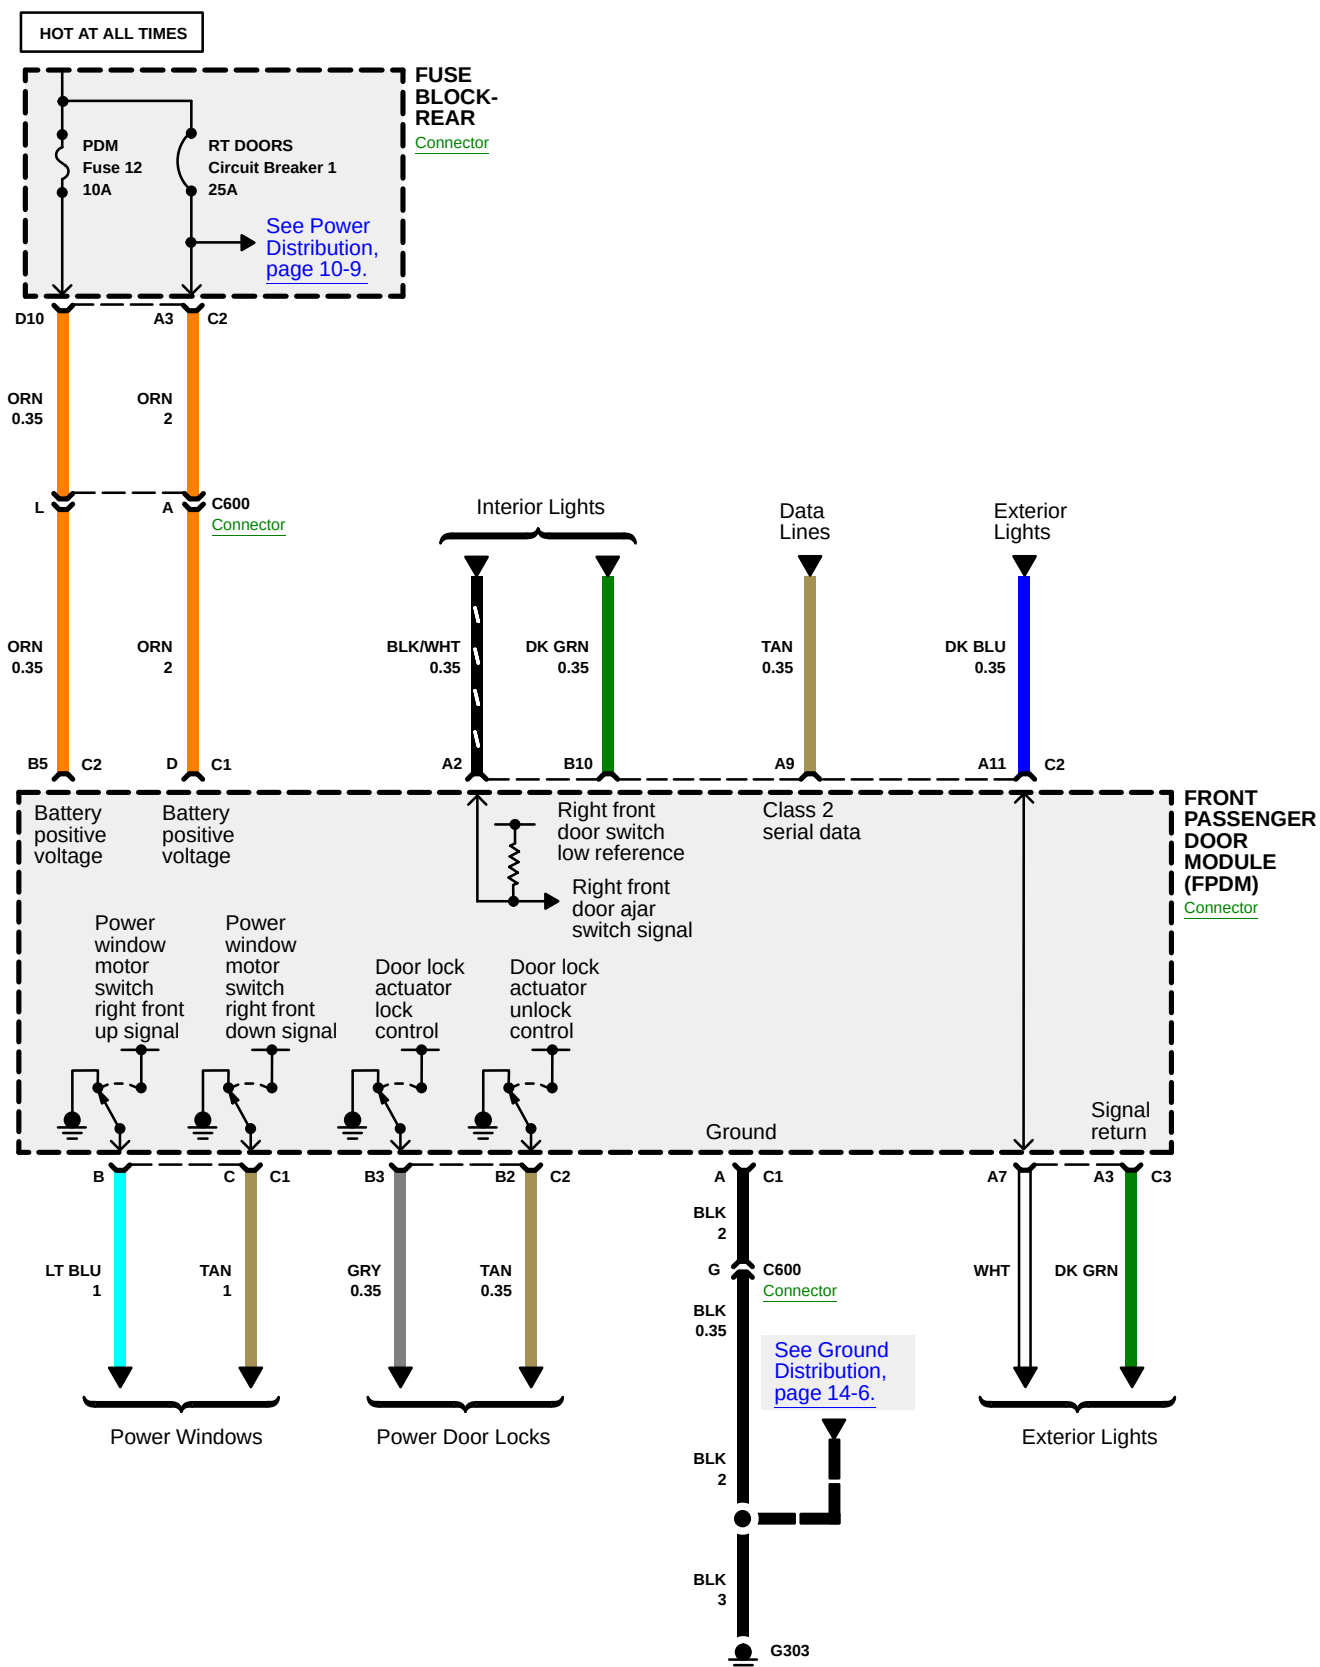

DOOR CONTROL MODULE SYSTEM

Circuit Schematic

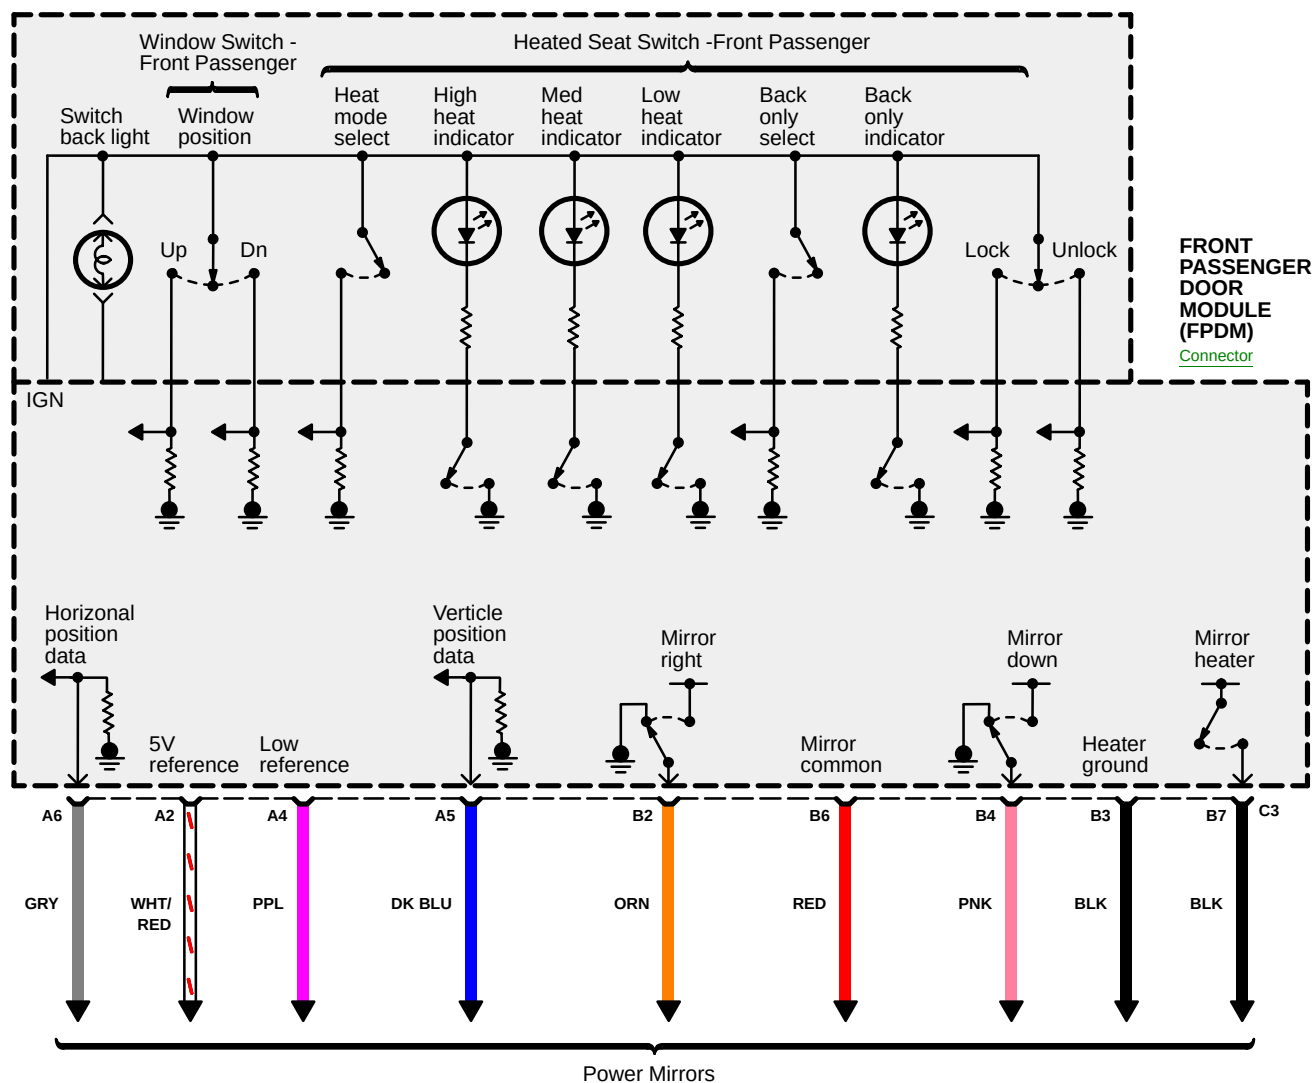

DOOR CONTROL MODULE SYSTEM

Circuit Operation

The driver door module is supplied power at all times through Fuse 10 DDM and Circuit Breaker 2 LT DOORS.

The driver door module is supplied power at all times through Fuse 12 PDM and Circuit Breaker 1 RT DOORS.

The driver and passenger door modules control various functions such as power-window, power-mirror, power-lock and power-seat controls. See corresponding system cell for circuit operation.

DOOR CONTROL MODULE SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Driver Door Module (DDM) . . . On lower part of the driver door switch panel	95
Front Passenger Door	
Module (FPDM) On lower part of passenger door switch panel	96
Fuse Block-Rear Under the left rear seat	52
<u>Connector</u>	
C500 (12-BLK) Midpoint of leading edge of left front door	93
C600 (12-BLK) Midpoint of leading edge of right front door	93
<u>Ground</u>	
G302 On the lower left B-pillar	105
G303 On the lower right B-pillar	105