


DAY-NIGHT MIRROR

Component Index

- [Ambient Air Temperature Sensor](#)
- [Fuse Block-Rear](#)
- [Fuse Block-Underhood](#)
- [Inside Rearview Mirror](#)

DAY-NIGHT MIRROR

Circuit Schematic

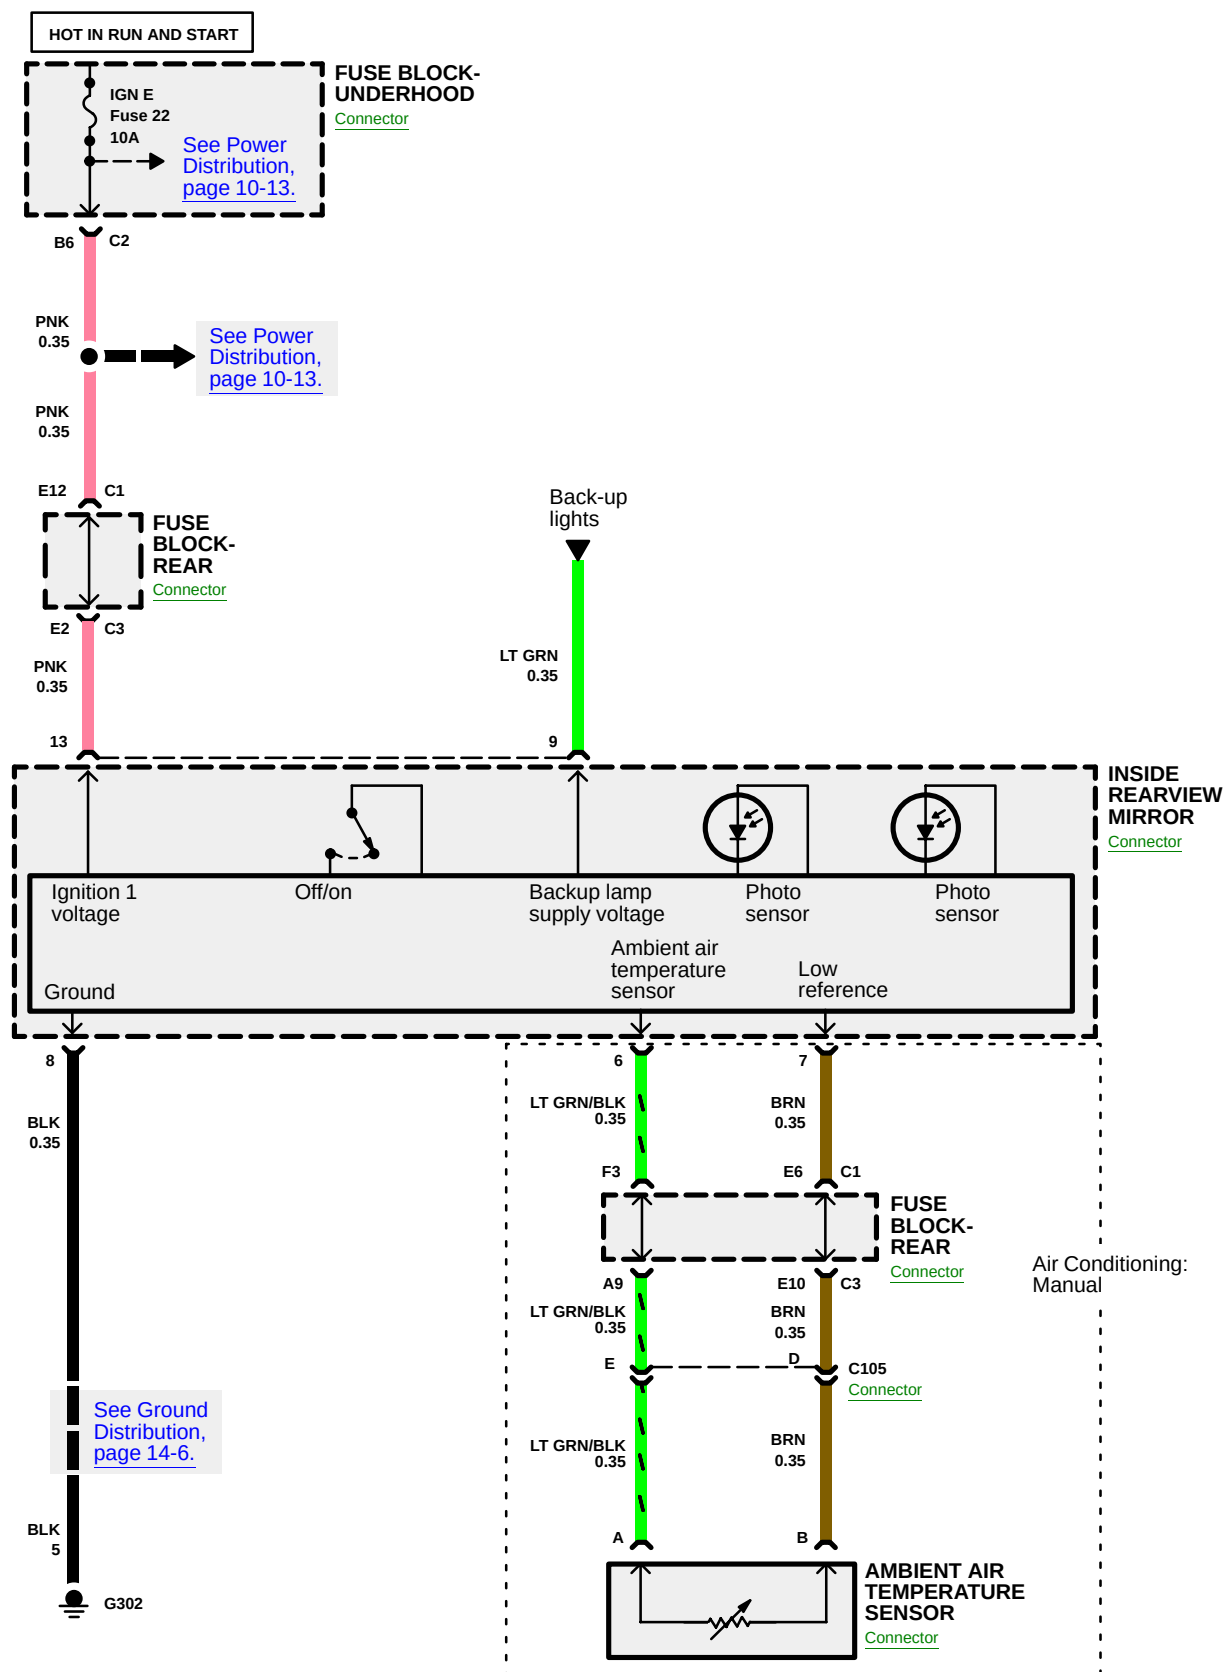

DAY-NIGHT MIRROR

Circuit Operation

With the ignition ON, ignition voltage is supplied to the mirror from the IGN E fuse in the underhood fuse block. Ground for the mirror is provided by G302.

The inside rearview mirror with the automatic day-night feature system consist of the following components:

- Inside rearview mirror
- Ambient air temperature sensor

DAY-NIGHT MIRROR

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Ambient Air Temperature	
Sensor	Above the left side of the grille 1
Fuse Block-Rear	Under the left rear seat 52
Fuse Block-Underhood	Left side of engine compartment 3
Inside Rearview Mirror	Upper center of windshield 88
Connector	
C105 (10-BLK)	Left side of engine compartment 4
Ground	
G302	On the lower left B-pillar 105