


Battery, starter and alternator


From July 2018

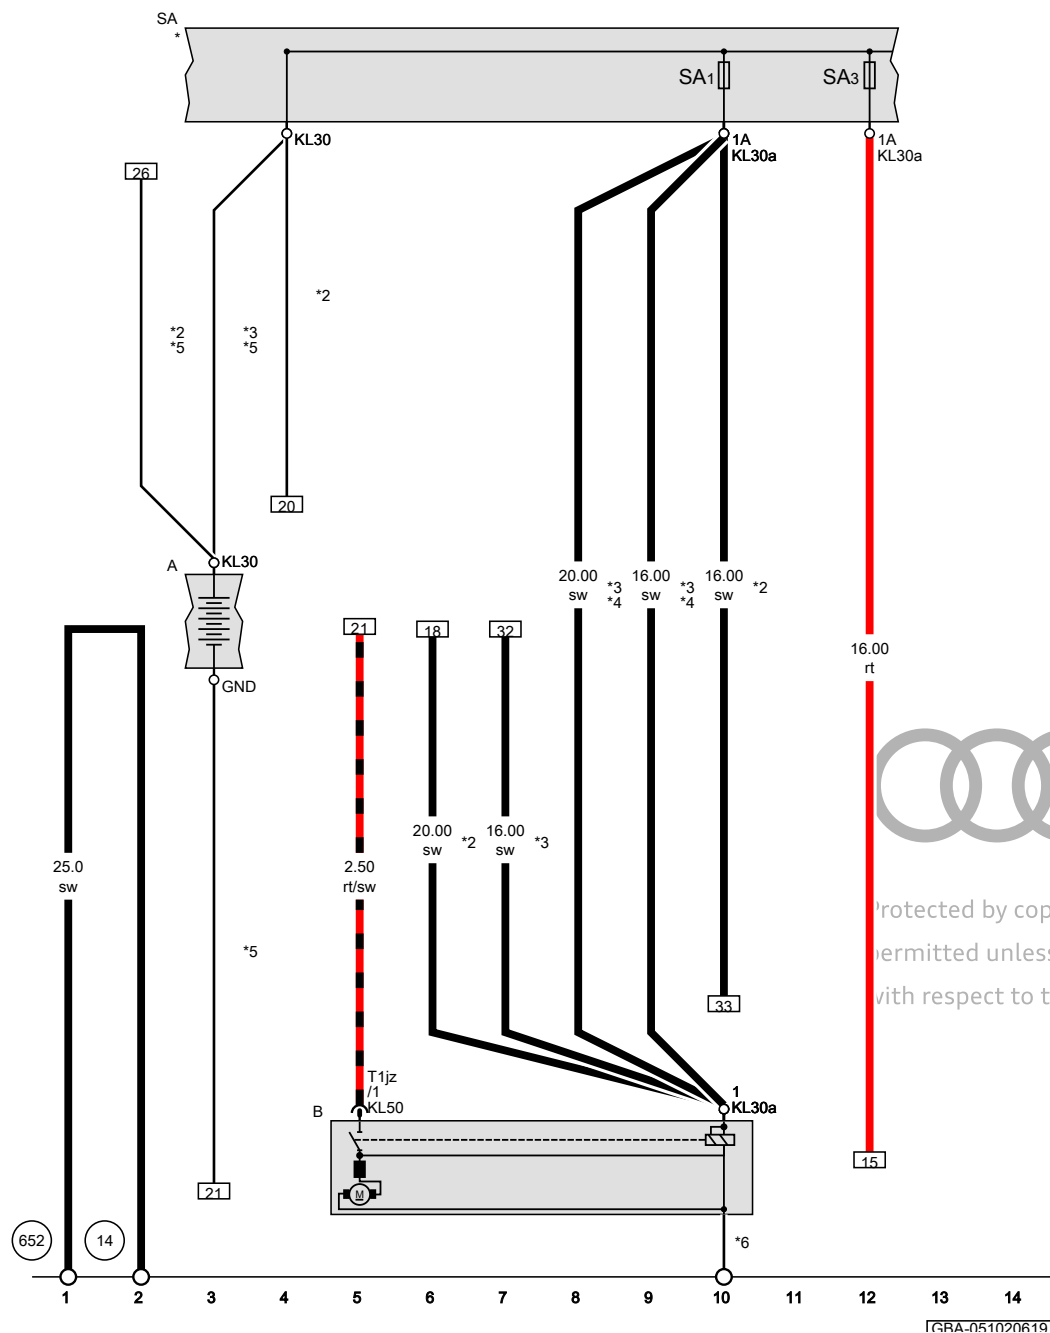

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

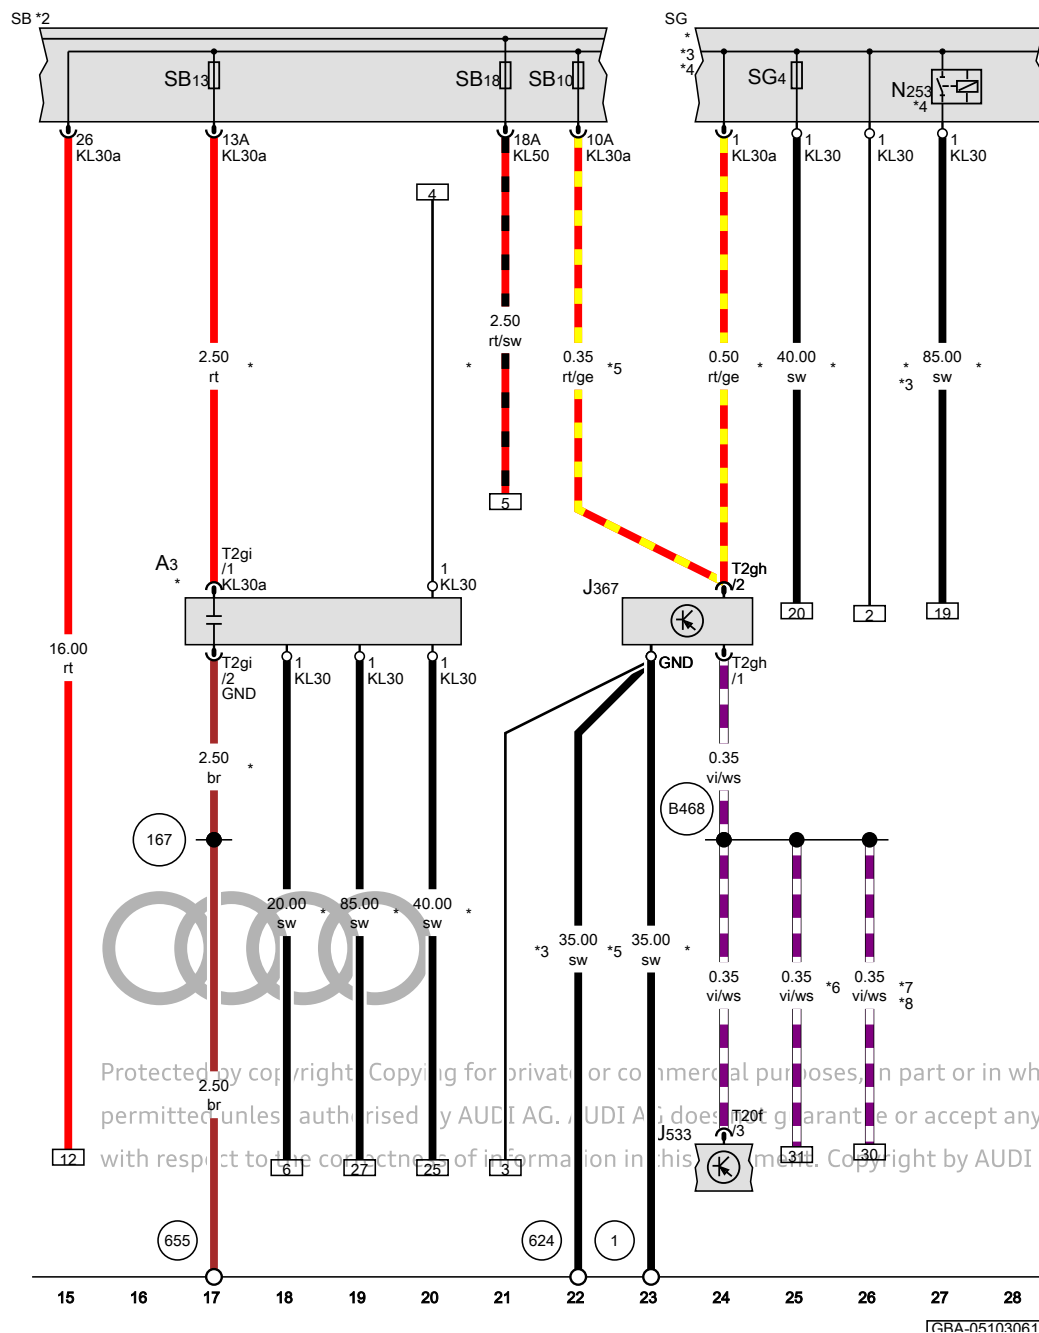

Front module vehicle battery, Battery monitor control unit, Data bus diagnostic interface, Battery isolation igniter, Fuse holder B, Fuse holder G

- A3 Front module vehicle battery
- J367 Battery monitor control unit
- J533 Data bus diagnostic interface
- N253 Battery isolation igniter
- SB Fuse holder B
- SB10 Fuse 10 on fuse holder B
- SB13 Fuse 13 on fuse holder B
- SB18 Fuse 18 on fuse holder B
- SG Fuse holder G
- SG4 Fuse 4 on fuse holder G
- T2gh 2-pin connector, black
- T2gi 2-pin connector, black
- T20f 20-pin connector, red


- 1 Earth strap, battery - body
- 167 Earth connection 4, in engine compartment wiring harness
- 624 Earth point, starter battery
- 655 Earth point, on left headlight
- B468 Connection 4, in main wiring harness

- * For models with battery in luggage compartment
- *2 see applicable current flow diagram for fuses in engine compartment
- on the battery
- *4 see applicable current flow diagram for airbag
- *5 For models with battery in engine compartment
- *6 For models with 2.0l petrol engine
- *7 For models with 1.0l petrol engine
- *8 For models with 1.5l petrol engine

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Alternator

- C Alternator
- T2m 2-pin connector, black
- T4b 4-pin connector, black
- T4g 4-pin connector, black
- T8a 8-pin connector, black
- T8c 8-pin connector, black
- TGEN1 Coupling point 1 for alternator
- * For models with battery in engine compartment
- *2 For models with battery in luggage compartment
- *3 For models with 2.0l petrol engine
- *4 For models with 1.0l petrol engine
- *5 For models with 1.5l petrol engine

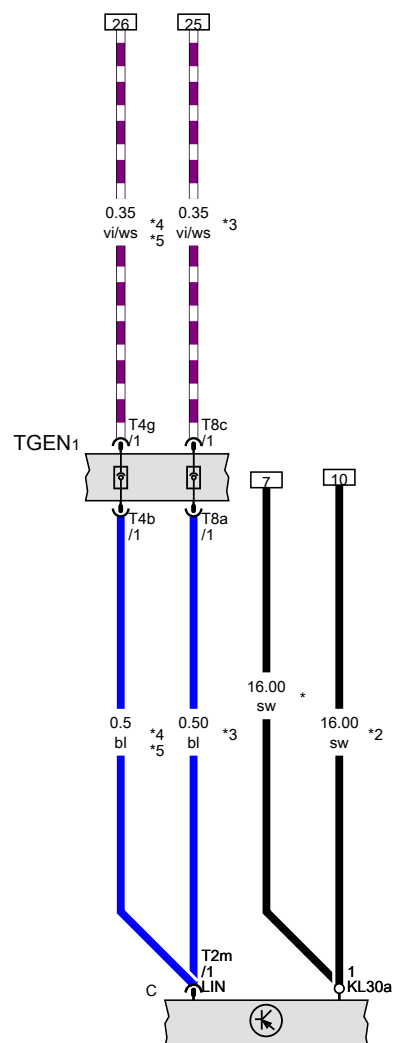

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.