



Front Bumper Removal/Installation

Special Tools Required

Push pin puller 07AAC-SJAA100

NOTE:

- Use the special tool to remove the clips.
- Have an assistant help you when removing and installing the front bumper.
- Take care not to scratch the front bumper and the body.
- Put on gloves to protect your hands.

 
1. Remove these items:

- Front air spoiler (see page 20-151)
- Upper grille cover (see page 20-163)


2. Remove the bolts (A, B), screws (C), and the clips (D) securing the front bumper (E).

Fastener Locations

A ▶ : Bolt, 2 B ▶ : Bolt, 4 C ▶ : Screw, 2




D ▶ : Clip, 2

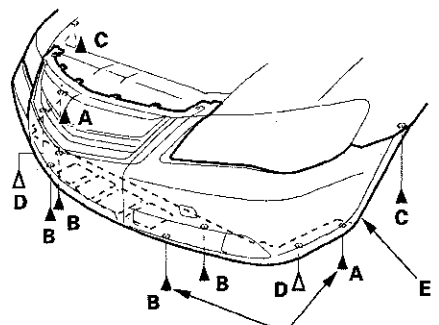


6 x 1.0 mm
9.8 N·m
(1.0 kgf-m, 7.2 lbf-ft)

3. Pull on the front bumper (A) at the wheel arch areas to release it from the hooks (B) on the side spacers (C).

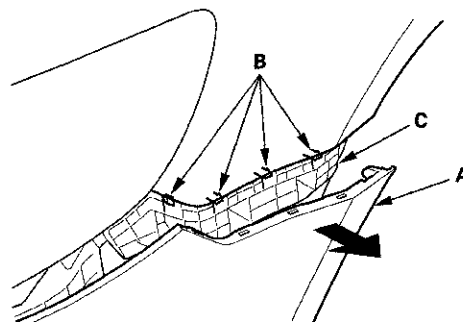

4. With the help of an assistant, pull the wheel arch portion away from the side spacer (A) while pulling the front bumper (B) to release the bumper from the hooks (C) on the corner upper beam (D).

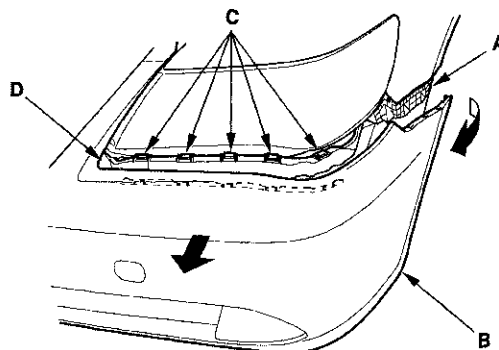


(cont'd)

Bumpers

Front Bumper Removal/Installation (cont'd)



5. Disconnect the front fog light connectors (A), outside temperature sensor connector (B), and the headlight washer tube (C), then remove the front bumper (D).

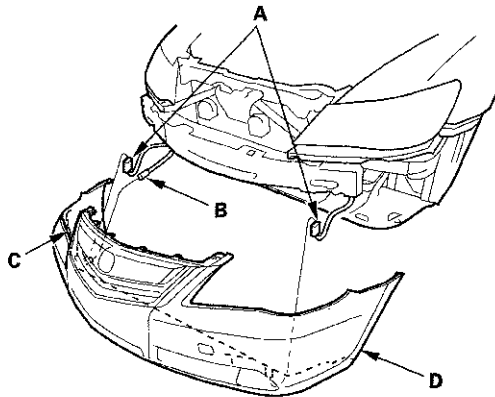

6. Release the hooks, then remove the front bumper absorber (A).

Fastener Locations

 ▷ : Hook, 6

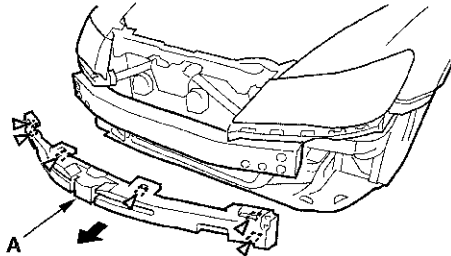

7. Install the bumper in the reverse order of removal, and note these items:

- Make sure the front fog light connectors and the outside temperature sensor connector are plugged in properly, and the headlight washer tube is connected properly.
- Make sure the front bumper engages the hooks (of both corner upper beams and side spacers) on each side securely.
- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips and hooks into place securely.

Front Bumper Lower Face Replacement


 
NOTE:

- Take care not to scratch the front bumper.
- Put on gloves to protect your hands.

1. Remove the front bumper (see page 20-149).
2. Remove the bolts and the clips, then remove the front bumper lower face (A) from the front bumper (B).

Fastener Locations

▶ : Bolt, 4 ▷ : Clip, 2

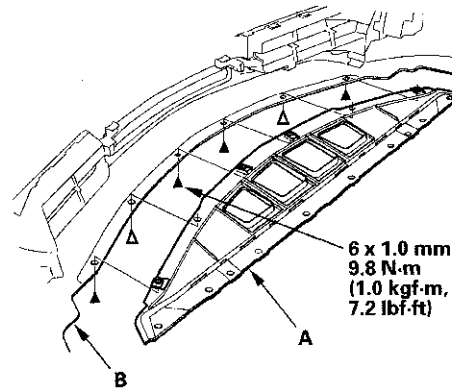

3. Install the plate in the reverse order of removal.



Front Air Spoiler Replacement

Special Tools Required

Push pin puller 07AAC-SJAA100


NOTE:

- Use the special tool to remove the clips.
- Take care not to scratch the front bumper.
- Put on gloves to protect your hands.

1. Remove the clips and the bolts from under the front bumper (A).

Fastener Locations

▷ : Clip, 2 ▶ : Bolt, 4

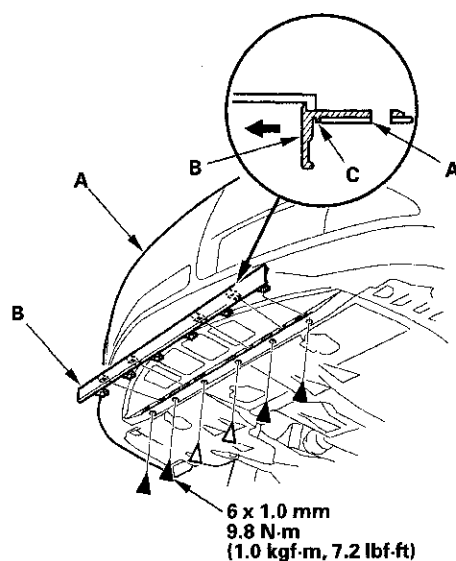

2. Pull the front air spoiler (B) out to release the hooks (C), then remove the spoiler.
3. Install the spoiler in the reverse order of removal.

NOTE: If the clips are damaged or stress-whitened, replace them with new ones.

Front Bumper Lower Stay Replacement

NOTE:

- Take care not to scratch the front bumper.
- Put on gloves to protect your hands.


1. Remove the front bumper (see page 20-149).
2. Remove the bolts, then remove the front bumper lower stay (A).

Fastener Locations

▶ : Bolt, 2



6 x 1.0 mm
9.8 N-m
(1.0 kgf-m,
7.2 lbf-ft)

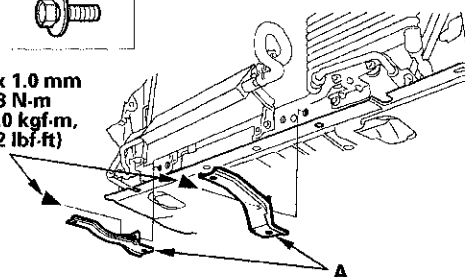

3. Install the lower stay in the reverse order of removal.

Bumpers

Front Bumper Duct Trim Replacement


NOTE:

- Take care not to scratch the front bumper.
- Put on gloves to protect your hands.

1. Remove the front bumper (see page 20-149).
2. Remove the front bumper duct trim (A).
 - 1 Release the headlight washer tube (B) from the hooks (C) on the front bumper duct trim.
 - 2 Remove the screw, and then remove the front bumper duct trim from the bumper (D).

Fastener Locations

► : Screw, 3

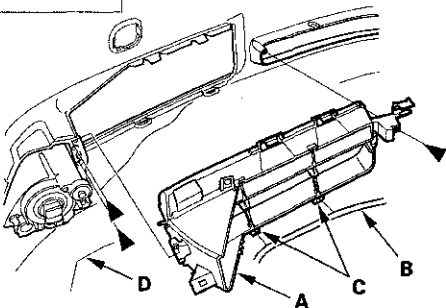


3. If necessary, remove the screws (A, B), and then remove the molding (C).

Left side

Fastener Locations


A ► : Screw, 3 B ► : Screw, 3

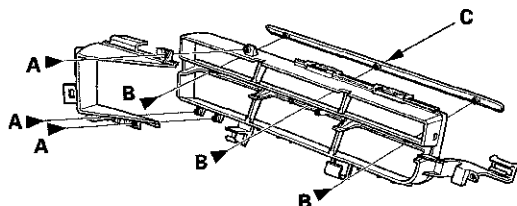

Right side

Fastener Locations

A ► : Screw, 4 B ► : Screw, 3

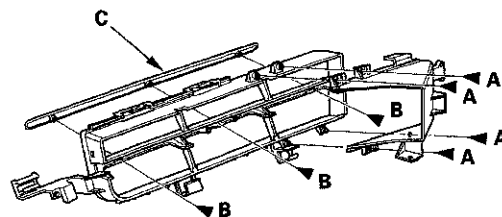

4. Install the front bumper duct trim in the reverse order of removal.



Rear Bumper Removal/Installation

Special Tools Required

- KTC trim tool set SOJATP2014 *
- Push pin puller 07AAC-SJAA100
- * Available through the Acura Tool and Equipment Program; 888-424-6857

NOTE:

- Use the special tool to remove the clips.
- Have an assistant help you when removing and installing the rear bumper.
- Take care not to scratch the rear bumper and the body.
- Put on gloves to protect your hands.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.


1. Remove the caps (A), then remove the bolts (B).

Fastener Locations

B ▶ Bolt, 2 C ▶ Screw, 4 D ▶ Screw, 2




E ▶ Clip, 2

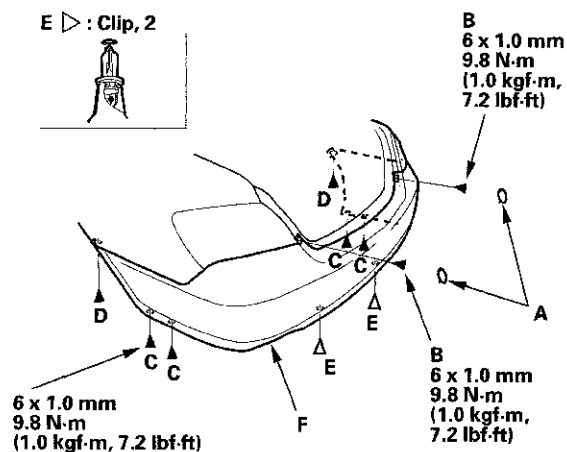


2. Remove the screws (C, D), and the clips (E) securing the rear bumper (F).

3. Pull on the rear bumper (A) at the wheel arch areas to release it from the hooks (B) on the side spacers (C).

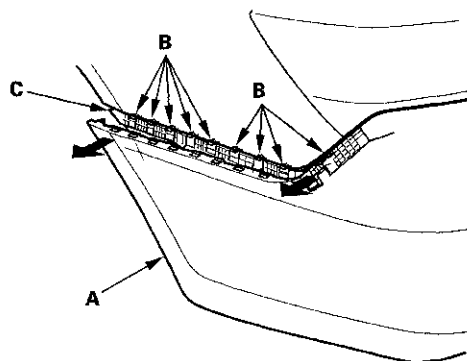

4. With the help of an assistant, pull the wheel arch portion away from the side spacer (A), while pulling the rear bumper (B) to release the bumper from the hooks (C) on the side bracket (D).

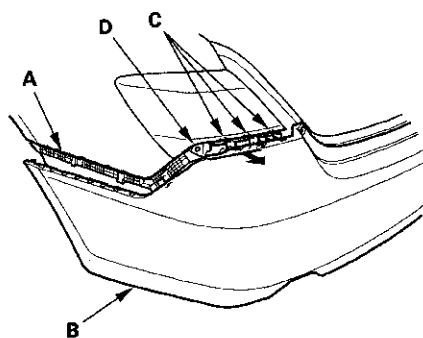


(cont'd)

Bumpers

Rear Bumper Removal/Installation (cont'd)


5. With the help of an assistant, pull the rear bumper (A) to release the bumper from the hooks (B) on both upper brackets (C).

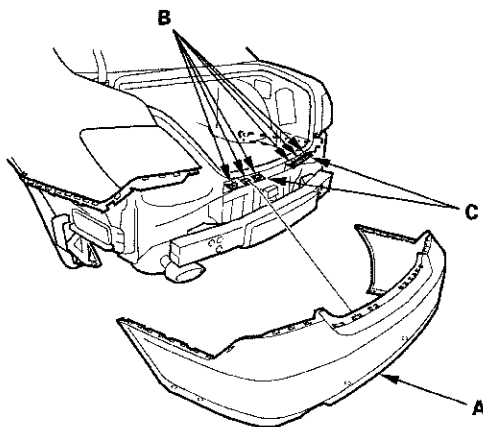

6. Release the hooks, then remove the rear bumper absorber (A).

Fastener Locations

▷ : Hook, 4

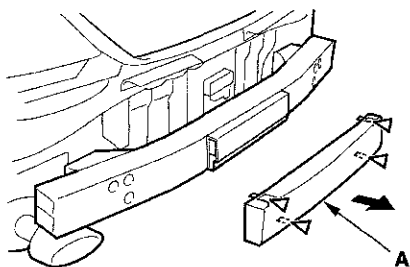

7. Install the bumper in the reverse order of removal, and note these items:

- Make sure the rear bumper engages the hooks (of both upper bracket, side bracket, and side spacers) on each side securely.
- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips and the hooks into place securely.

Rear Bumper Lower Grille Replacement


NOTE:

- Take care not to scratch the rear bumper.
- Put on gloves to protect your hands.

1. Remove the rear bumper (see page 20-153).
2. Remove the clips and detach the hooks (A), then remove the rear bumper lower grille (B).

Fastener Locations

▷ : Clip, 2

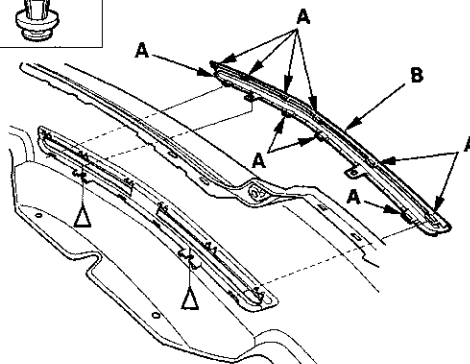

3. Install the rear bumper lower grille in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the hooks and the clips into place securely.