

2014 ELECTRICAL

Wiring Systems And Power Management - Component Connector End Views - Index - Acadia, Enclave, Traverse

COMPONENT CONNECTOR END VIEWS - INDEX

NOTE: Component Connector end views are sorted in alpha/Numeric sequence based upon connector ID (Code), NOT component name. If you do not know the connector ID, a search using the relevant component name may help locate the desired connector link.

COMPONENT CONNECTOR END VIEWS - INDEX

Description
<u>A3L Sunshade - Left</u>
<u>A3R Sunshade - Right</u>
<u>A7 Fuel Pump and Level Sensor Assembly</u>
<u>A9A Outside Rearview Mirror - Driver (DL6 or DS3 or DM8)</u>
<u>A9A Outside Rearview Mirror - Driver X1 (DNP)</u>
<u>A9A Outside Rearview Mirror - Driver X2 (DNP)</u>
<u>A9B Outside Rearview Mirror - Passenger (DL6 or DS3 or DM8)</u>
<u>A9B Outside Rearview Mirror - Passenger X1 (DNP)</u>
<u>A9B Outside Rearview Mirror - Passenger X2 (DNP)</u>
<u>A10 Inside Rearview Mirror</u>
<u>A11 Radio X1</u>
<u>A11 Radio X2</u>
<u>A11 Radio X3 (U42)</u>
<u>A11 Radio X4</u>
<u>A12 Digital Radio Receiver Control Module (U2K or UBS)</u>
<u>A13 Rear Audio Control Module (RCA)</u>
<u>A21 Radio/HVAC Control - Auxiliary X1 (ULD)</u>
<u>A21 Radio/HVAC Control - Auxiliary X2 (ULD)</u>
<u>A23C Liftgate Latch Assembly (TB4)</u>
<u>A23C Liftgate Latch Assembly (TB5)</u>
<u>A23D Door Latch Assembly - Driver</u>
<u>A23LR Door Latch Assembly - Left Rear (A45 or AXE)</u>
<u>A23P Door Latch Assembly - Passenger</u>
<u>A23RR Door Latch Assembly - Right Rear (A45 or AXE)</u>
<u>B1 A/C Refrigerant Pressure Sensor</u>
<u>B5LF Wheel Speed Sensor - Left Front</u>
<u>B5LR Wheel Speed Sensor - Left Rear</u>
<u>B5RF Wheel Speed Sensor - Right Front</u>

2014 GMC Acadia Denali

2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia, Enclave, Traverse

<u>B5RR Wheel Speed Sensor - Right Rear</u>
<u>B7A Inside Air Temperature Sensor (CJ2)</u>
<u>B7D Air Temperature Sensor - Duct Left Lower (CJ2)</u>
<u>B7E Air Temperature Sensor - Duct Right Lower (CJ2)</u>
<u>B7H Air Temperature Sensor - Duct Left Upper (CJ2)</u>
<u>B7J Air Temperature Sensor - Duct Right Upper (CJ2)</u>
<u>B9 Ambient Air Temperature Sensor</u>
<u>B10 Ambient Light Sensor (C67)</u>
<u>B18 Battery Current Sensor</u>
<u>B19B Brake Booster Vacuum Sensor</u>
<u>B20 Brake Fluid Level Switch</u>
<u>B22 Brake Pedal Position Sensor</u>
<u>B23A Camshaft Position Sensor - Bank 1 Exhaust</u>
<u>B23B Camshaft Position Sensor - Bank 1 Intake</u>
<u>B23C Camshaft Position Sensor - Bank 2 Exhaust</u>
<u>B23D Camshaft Position Sensor - Bank 2 Intake</u>
<u>B24 Cellular Phone Microphone (UE1)</u>
<u>B26 Crankshaft Position Sensor</u>
<u>B34 Engine Coolant Temperature Sensor</u>
<u>B35 Engine Oil Level Switch</u>
<u>B37 Engine Oil Pressure Switch</u>
<u>B39 A/C Evaporator Temperature Sensor</u>
<u>B47 Fuel Pressure Sensor</u>
<u>B47B Fuel Rail Pressure Sensor</u>
<u>B52C Heated Oxygen Sensor - Bank 1 Sensor 1</u>
<u>B52D Heated Oxygen Sensor - Bank 1 Sensor 2</u>
<u>B52E Heated Oxygen Sensor - Bank 2 Sensor 1</u>
<u>B52F Heated Oxygen Sensor - Bank 2 Sensor 2</u>
<u>B55 Hood Ajar Switch (BTV)</u>
<u>B59L Front Impact Sensor - Left</u>
<u>B59R Front Impact Sensor - Right</u>
<u>B63LF Side Impact Sensor - Left Front</u>
<u>B63LR Side Impact Sensor - Left Rear</u>
<u>B63RF Side Impact Sensor - Right Front</u>
<u>B63RR Side Impact Sensor - Right Rear</u>
<u>B68A Knock Sensor 1</u>
<u>B68B Knock Sensor 2</u>
<u>B71L Liftgate Object Sensor - Left (TB5)</u>
<u>B71R Liftgate Object Sensor - Right (TB5)</u>
<u>B74 Manifold Absolute Pressure Sensor</u>
<u>B75C Multifunction Intake Air Sensor</u>

2014 GMC Acadia Denali

2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia, Enclave, Traverse

<u>B78E Rear Object Sensor - Left Middle (UD7)</u>
<u>B78F Rear Object Sensor - Right Middle (UD7)</u>
<u>B78G Rear Object Sensor - Left Outer (UD7)</u>
<u>B78H Rear Object Sensor - Right Outer (UD7)</u>
<u>B80 Park Brake Switch</u>
<u>B87 Rearview Camera (UVC)</u>
<u>B89D Seat Front Vertical Position Sensor - Driver (A45)</u>
<u>B90D Seat Horizontal Position Sensor - Driver (A45)</u>
<u>B92D Seat Rear Vertical Position Sensor - Driver (A45)</u>
<u>B92L Side Object Sensor - Left (UFT)</u>
<u>B92R Side Object Sensor - Right (UFT)</u>
<u>B93D Seat Recline Position Sensor - Driver (A45)</u>
<u>B99 Steering Wheel Angle Sensor</u>
<u>B102 Steering Column Tilt Position Sensor (N38)</u>
<u>B104 Sunload Sensor (CJ2)</u>
<u>B107 Accelerator Pedal Position Sensor</u>
<u>B118B Windshield Washer Fluid Level Switch</u>
<u>B119 Multi-axis Acceleration Sensor</u>
<u>B150 Fuel Tank Pressure Sensor</u>
<u>B153D Seat Belt Buckle - Driver</u>
<u>B153P Seat Belt Buckle - Passenger</u>
<u>B268 Liftgate Full Open Switch (TB5)</u>
<u>E1D Accent Lamp - Driver Door (W49)</u>
<u>E1G Accent Lamp - Left Instrument Panel (W49 or X88)</u>
<u>E1H Accent Lamp - Right Instrument Panel (W49)</u>
<u>E1LR Accent Lamp - Left Rear Door (W49)</u>
<u>E1P Accent Lamp - Passenger Door (W49)</u>
<u>E1RR Accent Lamp - Right Rear Door (W49)</u>
<u>E1Z Accent Lamp - Middle Instrument Panel (Z88 or X88)</u>
<u>E2LF Side Marker Lamp - Left Front (W49)</u>
<u>E2LF Side Marker Lamp - Left Front (X88 or Z88)</u>
<u>E2LR Side Marker Lamp - Left Rear (W49)</u>
<u>E2LR Side Marker Lamp - Left Rear (X88)</u>
<u>E2RF Side Marker Lamp - Right Front (W49)</u>
<u>E2RF Side Marker Lamp - Right Front (X88 or Z88)</u>
<u>E2RR Side Marker Lamp - Right Rear (W49)</u>
<u>E2RR Side Marker Lamp - Right Rear (X88)</u>
<u>E4C Daytime Running Lamp - Left (W49 or Z88 with T61)</u>
<u>E4D Daytime Running Lamp - Right (W49 or Z88 with T61)</u>
<u>E4E Headlamp - Left High Beam (X88)</u>
<u>E4E Headlamp - Left High Beam (Z88 without TVD)</u>

2014 GMC Acadia Denali2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia,
Enclave, Traverse

<u>E4F Headlamp - Right High Beam (X88)</u>
<u>E4F Headlamp - Right High Beam (Z88 without TVD)</u>
<u>E4G Headlamp - Left Low Beam (X88)</u>
<u>E4G Headlamp - Left Low Beam (Z88 without TVD)</u>
<u>E4H Headlamp - Right Low Beam (X88)</u>
<u>E4H Headlamp - Right Low Beam (Z88 without TVD)</u>
<u>E4J Park Lamp - Left Front (W49)</u>
<u>E4K Park Lamp - Right Front (W49)</u>
<u>E4LF Turn Signal Lamp - Left Front (W49 or Z88)</u>
<u>E4N Park/Turn Signal Lamp - Left (X88)</u>
<u>E4P Park/Turn Signal Lamp - Right (X88)</u>
<u>E4RF Turn Signal Lamp - Right Front (W49 or Z88)</u>
<u>E5A Backup Lamp - Left (W49)</u>
<u>E5A Backup Lamp - Left (X88)</u>
<u>E5A Backup Lamp - Left (Z88)</u>
<u>E5B Backup Lamp - Right (W49)</u>
<u>E5B Backup Lamp - Right (X88)</u>
<u>E5B Backup Lamp - Right (Z88)</u>
<u>E5E Tail Lamp - Left (W49)</u>
<u>E5F Tail Lamp - Right (W49)</u>
<u>E5G Tail Lamp - Left Inner (Z88)</u>
<u>E5H Tail Lamp - Right Inner (Z88)</u>
<u>E5S Tail/Stop and Turn Signal Lamp - Left (W49 or X88)</u>
<u>E5T Tail/Stop and Turn Signal Lamp - Right (W49 or X88)</u>
<u>E6 Center High Mounted Stop Lamp (W49)</u>
<u>E6 Center High Mounted Stop Lamp (without W49)</u>
<u>E7L License Plate Lamp - Left</u>
<u>E7R License Plate Lamp - Right</u>
<u>E8A Door Sill Plate Lamp - Driver (B8K)</u>
<u>E8B Door Sill Plate Lamp - Passenger (B8K)</u>
<u>E8J Instrument Panel Courtesy Lamp - Left (B8K)</u>
<u>E8K Instrument Panel Courtesy Lamp - Right (B8K)</u>
<u>E8M Liftgate Courtesy Lamp - Left</u>
<u>E8N Liftgate Courtesy Lamp - Right</u>
<u>E14A Seat Heating Element - Driver Back (KA1)</u>
<u>E14A Seat Heating Element - Driver Back (KB6)</u>
<u>E14A Seat Heating Element - Driver Back (SPO Accessory)</u>
<u>E14B Seat Heating Element - Driver Cushion (KA1)</u>
<u>E14B Seat Heating Element - Driver Cushion (KB6)</u>
<u>E14B Seat Heating Element - Driver Cushion (SPO Accessory)</u>
<u>E14C Seat Heating Element - Passenger Back (KA1)</u>

2014 GMC Acadia Denali

2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia, Enclave, Traverse

<u>E14C Seat Heating Element - Passenger Back (KB6)</u>
<u>E14C Seat Heating Element - Passenger Back (SPO Accessory)</u>
<u>E14D Seat Heating Element - Passenger Cushion (KA1)</u>
<u>E14D Seat Heating Element - Passenger Cushion (KB6)</u>
<u>E14D Seat Heating Element - Passenger Cushion (SPO Accessory)</u>
<u>E18 Rear Defogger Grid X1</u>
<u>E18 Rear Defogger Grid X2</u>
<u>E29LF Fog Lamp - Left Front (W49 with T96)</u>
<u>E29LF Fog Lamp - Left Front (Z88 with T96)</u>
<u>E29R Fog Lamp - Rear (W49 with T79)</u>
<u>E29RF Fog Lamp - Right Front (W49 with T96)</u>
<u>E29RF Fog Lamp - Right Front (Z88 with T96)</u>
<u>E37B Dome/Reading Lamps - 2nd Row (C3U with U42)</u>
<u>E37B Dome/Reading Lamps - 2nd Row (without U42)</u>
<u>E37C Dome/Reading Lamps - 3rd Row</u>
<u>E37E Dome/Reading Lamps - Front Overhead Console</u>
<u>E38 Flood Lamp - Center Console</u>
<u>F101 Passenger Instrument Panel Air Bag</u>
<u>F105L Roof Rail Air Bag - Left</u>
<u>F105R Roof Rail Air Bag - Right</u>
<u>F106D Seat Side Air Bag - Driver</u>
<u>F106DA Seat Side Air Bag - Driver Inboard (AYQ)</u>
<u>F106P Seat Side Air Bag - Passenger</u>
<u>F107 Steering Wheel Air Bag X1</u>
<u>F107 Steering Wheel Air Bag X2</u>
<u>F112D Seat Belt Retractor Pretensioner - Driver</u>
<u>F112P Seat Belt Retractor Pretensioner - Passenger</u>
<u>F113D Seat Belt Anchor Pretensioner - Driver</u>
<u>F113P Seat Belt Anchor Pretensioner - Passenger</u>
<u>G6 Brake Booster Pump - Auxiliary</u>
<u>G10L Cooling Fan Motor - Left</u>
<u>G10R Cooling Fan Motor - Right</u>
<u>G13 Generator X1</u>
<u>G18 High Pressure Fuel Pump</u>
<u>G19 Rear Window Washer Pump</u>
<u>G24 Windshield Washer Pump</u>
<u>K8 Blower Motor Control Module X1</u>
<u>K8 Blower Motor Control Module X2</u>
<u>K8A Blower Motor Control Module - Auxiliary X1</u>
<u>K8A Blower Motor Control Module - Auxiliary X2</u>
<u>K9 Body Control Module X1</u>

2014 GMC Acadia Denali

2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia, Enclave, Traverse

<u>K9 Body Control Module X2</u>
<u>K9 Body Control Module X3</u>
<u>K9 Body Control Module X4</u>
<u>K9 Body Control Module X5</u>
<u>K9 Body Control Module X6</u>
<u>K9 Body Control Module X7</u>
<u>K13 DVD Control Module X1 (SPO Accessory)</u>
<u>K13 DVD Control Module X2 (SPO Accessory)</u>
<u>K13 DVD Control Module X3 (SPO Accessory)</u>
<u>K13 DVD Control Module X4 (SPO Accessory)</u>
<u>K13 DVD Control Module X5 (SPO Accessory)</u>
<u>K13 DVD Control Module X6 (SPO Accessory)</u>
<u>K17 Electronic Brake Control Module</u>
<u>K18 Compass Module (U80)</u>
<u>K20 Engine Control Module X1</u>
<u>K20 Engine Control Module X2</u>
<u>K20 Engine Control Module X3</u>
<u>K26 Headlamp Control Module (TSH or T26)</u>
<u>K26A Headlamp High Beam Control Module - Left (W49)</u>
<u>K26B Headlamp High Beam Control Module - Right (W49)</u>
<u>K29D Seat Heating Control Module - Driver X1 (KA1 without A45)</u>
<u>K29D Seat Heating Control Module - Driver X2 (KA1 without A45)</u>
<u>K29D Seat Heating Control Module - Driver X3 (KA1 without A45)</u>
<u>K29D Seat Heating Control Module - Driver X4 (KA1 without A45)</u>
<u>K33 HVAC Control Module X1</u>
<u>K33 HVAC Control Module X2 (C67)</u>
<u>K33 HVAC Control Module X2 (CJ2)</u>
<u>K33 HVAC Control Module X3</u>
<u>K33 HVAC Control Module X4</u>
<u>K36 Inflatable Restraint Sensing and Diagnostic Module (SDM) X1</u>
<u>K36 Inflatable Restraint Sensing and Diagnostic Module (SDM) X2</u>
<u>K38 Chassis Control Module</u>
<u>K39 Liftgate Control Module X1 (TB5)</u>
<u>K39 Liftgate Control Module X2 (TB5)</u>
<u>K39 Liftgate Control Module X3 (TB5)</u>
<u>K40 Seat Memory Control Module X1 (A45)</u>
<u>K40 Seat Memory Control Module X2 (A45)</u>
<u>K40 Seat Memory Control Module X3 (A45)</u>
<u>K40 Seat Memory Control Module X4 (A45)</u>
<u>K40 Seat Memory Control Module X5 (A45)</u>
<u>K40 Seat Memory Control Module X6 (A45)</u>

2014 GMC Acadia Denali

2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia, Enclave, Traverse

<u>K40 Seat Memory Control Module X7 (A45)</u>
<u>K41 Front and Rear Parking Assist Control Module X1 (UD7)</u>
<u>K41 Front and Rear Parking Assist Control Module X2 (UD7)</u>
<u>K47 Rear Differential Clutch Control Module X1 (M7X)</u>
<u>K47 Rear Differential Clutch Control Module X2 (M7X)</u>
<u>K53D Seat Blower Assembly - Driver Back (KB6)</u>
<u>K53P Seat Blower Assembly - Passenger Back (KB6)</u>
<u>K55D Seat Blower Assembly - Driver Cushion (KB6)</u>
<u>K55P Seat Blower Assembly - Passenger Cushion (KB6)</u>
<u>K61 Sunroof Control Module (C3U)</u>
<u>K64 Content Theft Deterrent Control Module</u>
<u>K73 Telematics Communication Interface Control Module (VCIM) X2 (UE1)</u>
<u>K73 Telematics Communication Interface Control Module X1 (UE1)</u>
<u>K77 Remote Control Door Lock Receiver</u>
<u>K85 Passenger Presence Module</u>
<u>KR103 DVD Relay (SPO Accessory)</u>
<u>M3L Headlamp Horizontal Motor - Left (TSH or T26)</u>
<u>M3R Headlamp Horizontal Motor - Right (TSH or T26)</u>
<u>M6 Air Temperature Door Actuator (C67)</u>
<u>M6B Air Temperature Door Actuator - Auxiliary</u>
<u>M6L Air Temperature Door Actuator - Left (CJ2)</u>
<u>M6R Air Temperature Door Actuator - Right (CJ2)</u>
<u>M7 Transmission Shift Lock Control Solenoid Actuator</u>
<u>M8 Blower Motor</u>
<u>M8B Blower Motor - Auxiliary</u>
<u>M28L High Beam Solenoid Actuator - Left (W49)</u>
<u>M28L High Beam Solenoid Actuator - Left (Z88 with TVD)</u>
<u>M28R High Beam Solenoid Actuator - Right (W49)</u>
<u>M28R High Beam Solenoid Actuator - Right (Z88 with TVD)</u>
<u>M37 Mode Door Actuator</u>
<u>M37B Mode Door Actuator - Auxiliary</u>
<u>M45 Rear Wiper Motor (without X88)</u>
<u>M45 Rear Wiper Motor (X88)</u>
<u>M46 Air Recirculation Door Actuator(CJ2)</u>
<u>M50D Seat Front Vertical Motor - Driver (AG1 or AH5 or AG3)</u>
<u>M51D Seat Horizontal Motor - Driver (AG1 or AH5 or AG3)</u>
<u>M51P Seat Horizontal Motor - Passenger (AG2 or AH8)</u>
<u>M52D Seat Lumbar Support Horizontal Motor - Driver (AG3 or AH5)</u>
<u>M52P Seat Lumbar Support Horizontal Motor - Passenger (AH8)</u>
<u>M55D Seat Rear Vertical Motor - Driver (AG1 or AH5 or AG3)</u>
<u>M56D Seat Recline Motor - Driver (AG3 or AH5)</u>

2014 GMC Acadia Denali2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia,
Enclave, Traverse

<u>M56P Seat Recline Motor - Passenger (AH8)</u>
<u>M64 Starter Motor X2</u>
<u>M65 Steering Column Telescope Motor (N38)</u>
<u>M68 Steering Column Tilt Motor (N38)</u>
<u>M72 Variable Power Steering Solenoid Valve (NV7)</u>
<u>M74D Window Motor - Driver (AXE)</u>
<u>M74D Window Motor - Driver (without AXE)</u>
<u>M74LR Window Motor - Left Rear</u>
<u>M74P Window Motor - Passenger (AXE)</u>
<u>M74P Window Motor - Passenger (without AXE)</u>
<u>M74RR Window Motor - Right Rear</u>
<u>M75 Windshield Wiper Motor</u>
<u>M93 Key Capture Solenoid Actuator</u>
<u>P2 Transmission Shift Lever Position Indicator</u>
<u>P6 Clock (W49)</u>
<u>P12A Horn - High Note</u>
<u>P12B Horn - Low Note</u>
<u>P14 Passenger Air Bag Disable Indicator</u>
<u>P16 Instrument Cluster</u>
<u>P19AC Speaker - Subwoofer (UQA or UQS)</u>
<u>P19AG Speaker - Left Front Door (UQA or UQS)</u>
<u>P19AG Speaker - Left Front Door (UQF)</u>
<u>P19AH Speaker - Right Front Door (UQA or UQS)</u>
<u>P19AH Speaker - Right Front Door (UQF)</u>
<u>P19AL Speaker - Left Rear Door (UQA or UQS with W49)</u>
<u>P19AL Speaker - Left Rear Door (UQA or UQS without W49)</u>
<u>P19AL Speaker - Left Rear Door (UQF)</u>
<u>P19AM Speaker - Right Rear Door (UQA or UQS with W49)</u>
<u>P19AM Speaker - Right Rear Door (UQA or UQS without W49)</u>
<u>P19AM Speaker - Right Rear Door (UQF)</u>
<u>P19B Speaker - Center Instrument Panel (UQA or UQS)</u>
<u>P19H Speaker - Left Front Tweeter</u>
<u>P19L Speaker - Left Rear Compartment (UQA or UQS)</u>
<u>P19V Speaker - Right Front Tweeter</u>
<u>P19Y Speaker - Right Rear Compartment (UQA or UQS)</u>
<u>P22D Video Display - Driver Seat Headrest X1 (SPO Accessory)</u>
<u>P22D Video Display - Driver Seat Headrest X2 (SPO Accessory)</u>
<u>P22P Video Display - Passenger Seat Headrest X1 (SPO Accessory)</u>
<u>P22P Video Display - Passenger Seat Headrest X2 (SPO Accessory)</u>
<u>P23 Video Display (U42)</u>
<u>P29 Head-Up Display (UV6)</u>

2014 GMC Acadia Denali

2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia, Enclave, Traverse

Q2 A/C Compressor Clutch**Q6A Camshaft Position Actuator Solenoid Valve - Bank 1 Exhaust****Q6B Camshaft Position Actuator Solenoid Valve - Bank 1 Intake****Q6C Camshaft Position Actuator Solenoid Valve - Bank 2 Exhaust****Q6D Camshaft Position Actuator Solenoid Valve - Bank 1 Intake****Q8 Control Solenoid Valve Assembly X1****Q8 Control Solenoid Valve Assembly X2****Q8 Control Solenoid Valve Assembly X3****Q8 Control Solenoid Valve Assembly X4****Q12 Evaporative Emission Purge Solenoid Valve****Q13 Evaporative Emission Vent Solenoid Valve****Q17A Fuel Injector 1****Q17B Fuel Injector 2****Q17C Fuel Injector 3****Q17D Fuel Injector 4****Q17E Fuel Injector 5****Q17F Fuel Injector 6****Q38 Throttle Body****Q46 A/C Compressor Solenoid Valve****Q75 Liftgate Motor Clutch (TB5)****R6A Terminating Resistor - High Speed Bus (M7V)****S2 Transmission Manual Shift Switch****S13D Door Lock Switch - Driver (without AXE)****S13P Door Lock Switch - Passenger (without AXE)****S16 Driver Information Center Switch (UH9)****S25 Garage Door Opener (UG1)****S26 Hazard Warning Switch****S27 Head-Up Display Switch (UV6)****S30 Headlamp Switch****S31D Seat Heating and Cooling Switch - Driver (KB6)****S31P Seat Heating and Cooling Switch - Passenger (KB6)****S32D Seat Heating Switch - Driver (KA1)****S32P Seat Heating Switch - Passenger (KA1)****S33 Horn Switch X1****S3 Horn Switch X2****S34B HVAC Controls Switch Assembly - Auxiliary (without ULD)****S39 Ignition Switch****S45A Liftgate Control Switch - Exterior****S45B Liftgate Control Switch - Interior (TB5)****S47D Seat Memory Switch - Driver (A45)****S48A Multifunction Switch - Instrument Panel**

2014 GMC Acadia Denali2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia,
Enclave, Traverse

<u>S52 Outside Rearview Mirror Switch (without AXE)</u>
<u>S64D Seat Adjuster Switch - Driver (AG1)</u>
<u>S64D Seat Adjuster Switch - Driver (AG3)</u>
<u>S64D Seat Adjuster Switch - Driver (AH5)</u>
<u>S64P Seat Adjuster Switch - Passenger (AG2)</u>
<u>S64P Seat Adjuster Switch - Passenger (AH8)</u>
<u>S65D Seat Lumbar Support Switch - Driver (AG3 or AH5)</u>
<u>S65P Seat Lumbar Support Switch - Passenger (AH8)</u>
<u>S70L Steering Wheel Controls Switch - Left</u>
<u>S70R Steering Wheel Controls Switch - Right (UK3)</u>
<u>S71 Steering Column Tilt and Telescope Switch (N38)</u>
<u>S72 Sunroof Switch (C3U)</u>
<u>S78 Turn Signal/Multifunction Switch X1</u>
<u>S78 Turn Signal/Multifunction Switch X2</u>
<u>S79D Window Switch - Driver X1 (without AXE)</u>
<u>S79D Window Switch - Driver X2 (without AXE)</u>
<u>S79LR Window Switch - Left Rear</u>
<u>S79P Window Switch - Passenger (without AXE)</u>
<u>S79RR Window Switch - Right Rear</u>
<u>S84D Door Switch Panel Control Module - Driver X1 (AXE)</u>
<u>S84D Door Switch Panel Control Module - Driver X2 (AXE)</u>
<u>S84D Door Switch Panel Control Module - Driver X3 (AXE)</u>
<u>S84D Door Switch Panel Control Module - Driver X4 (AXE)</u>
<u>S84D Door Switch Panel Control Module - Driver X7 (AXE)</u>
<u>S84P Door Switch Panel Control Module - Passenger X1 (AXE)</u>
<u>S84P Door Switch Panel Control Module - Passenger X2 (AXE)</u>
<u>S84P Door Switch Panel Control Module - Passenger X3 (AXE)</u>
<u>S84P Door Switch Panel Control Module - Passenger X4 (AXE)</u>
<u>S84P Door Switch Panel Control Module - Passenger X7 (AXE)</u>
<u>T1 Accessory DC/AC Power Inverter Module (KV1)</u>
<u>T3 Audio Amplifier X1 (UQA or UQS)</u>
<u>T3 Audio Amplifier X2 (UQA or UQS)</u>
<u>T3 Audio Amplifier X3 (UQA or UQS)</u>
<u>T7L Headlamp Ballast - Left (Z88 with TVD or W49)</u>
<u>T7R Headlamp Ballast - Right (Z88 with TVD or W49)</u>
<u>T8A Ignition Coil 1</u>
<u>T8B Ignition Coil 2</u>
<u>T8C Ignition Coil 3</u>
<u>T8D Ignition Coil 4</u>
<u>T8E Ignition Coil 5</u>
<u>T8F Ignition Coil 6</u>

2014 GMC Acadia Denali

2014 ELECTRICAL Wiring Systems And Power Management - Component Connector End Views - Index - Acadia, Enclave, Traverse

T9 Infrared Transmitter (U42)

X80G Accessory Power Receptacle - Instrument Panel

X80H Accessory Power Receptacle - Center Console

X80L Accessory Power Receptacle - Rear Console (DK1)

X80R Accessory Power Receptacle - Rear Compartment (without DK1)

X81 Accessory Power Receptacle - 110V AC X1 (KV1)

X81 Accessory Power Receptacle - 110V AC X2 (KV1)

X82 Audio/Video Input Adapter (U42)

X84 Data Link Connector

X85 Steering Wheel Air Bag Coil X1

X85 Steering Wheel Air Bag Coil X2

X85 Steering Wheel Air Bag Coil X3

X88 Trailer Connector (V92)