

GROUP 80

CONFIGURATION DIAGRAMS


CONTENTS

OVERALL CONFIGURATION DIAGRAM.....	80-2	DASH PANEL.....	80-16
OVERALL WIRING DIAGRAM <LH drive vehicles>.....	80-2	DASH PANEL <LH drive vehicles>	80-16
OVERALL WIRING DIAGRAM <RH drive vehicles>	80-3	DASH PANEL <RH drive vehicles>.....	80-22
ENGINE COMPARTMENT.....	80-4	FLOOR AND ROOF	80-28
ENGINE COMPARTMENT <LH drive vehicles>.....	80-4	FLOOR AND ROOF <LH drive vehicles> ..	80-28
ENGINE COMPARTMENT <RH drive vehicles>	80-6	FLOOR AND ROOF <RH drive vehicles> ..	80-30
ENGINE AND TRANSMISSION.....	80-8	DOOR	80-32
ENGINE AND TRANSMISSION <LH drive vehicles>.....	80-8	DOOR <LH drive vehicles>	80-32
ENGINE AND TRANSMISSION <RH drive vehicles>	80-12	DOOR <RH drive vehicles>.....	80-34
		TRUNK (LUGGAGE COMPARTMENT)	80-36
		TRUNK <LH drive vehicles>	80-36
		TRUNK <RH drive vehicles>	80-37

OVERALL CONFIGURATION DIAGRAM

OVERALL WIRING DIAGRAM <LH drive vehicles>

M1801000101175

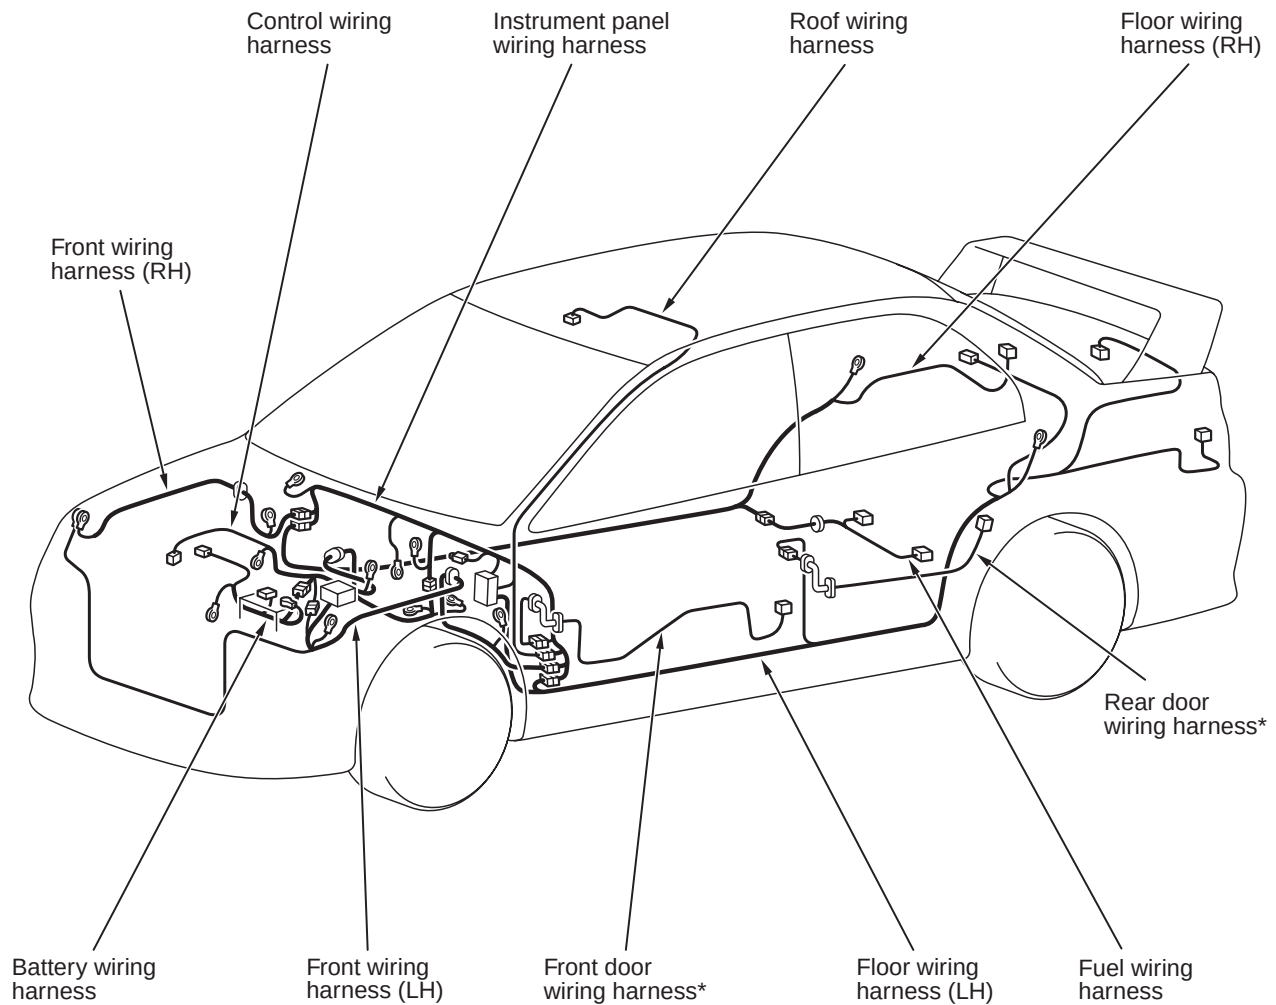


AC208864 AE

NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

OVERALL WIRING DIAGRAM <RH drive vehicles>

M1801000101186

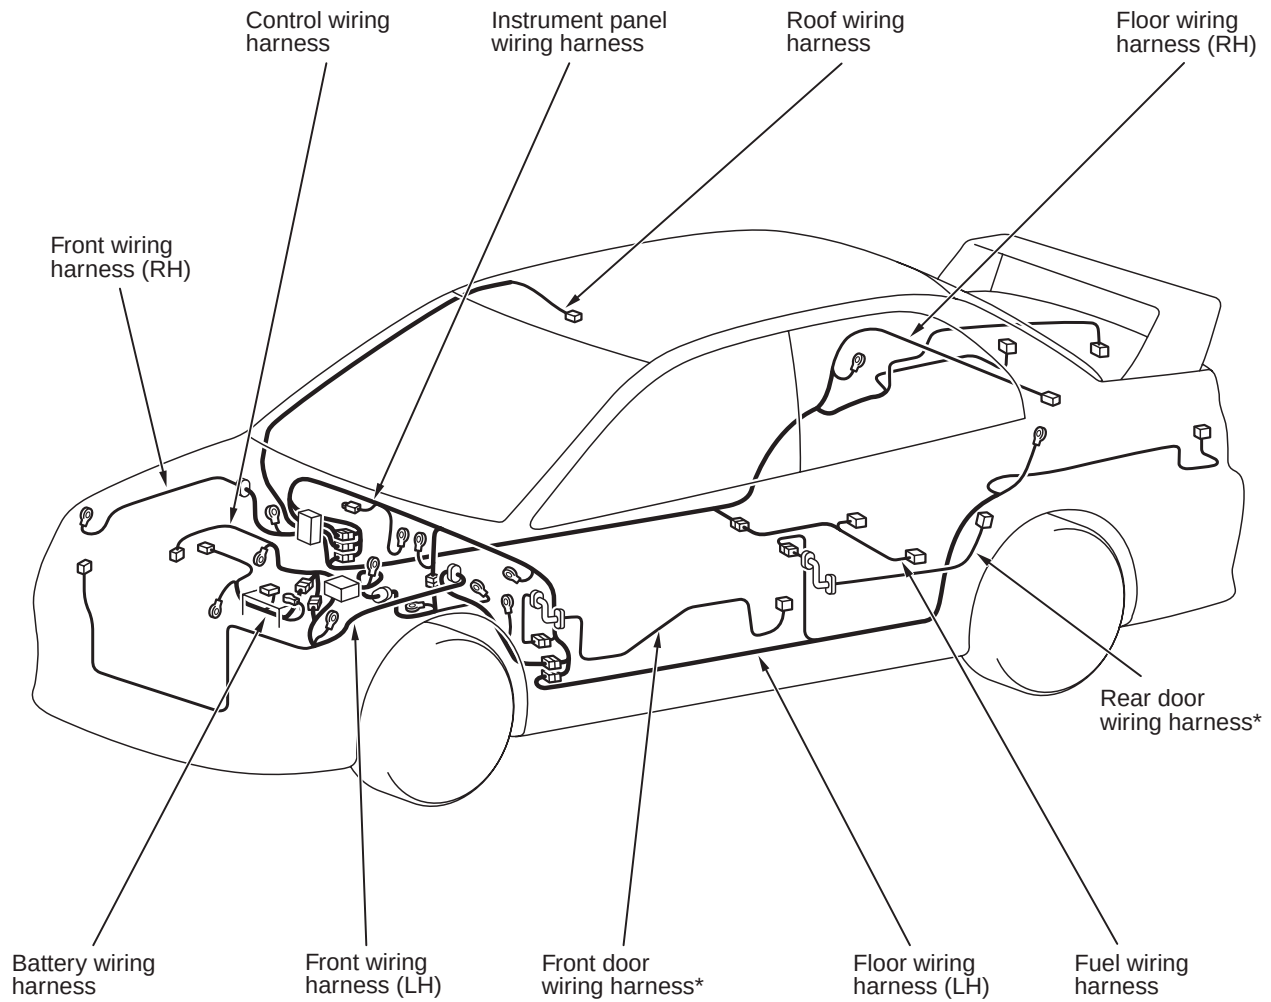

AC310155AB


NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

ENGINE COMPARTMENT

ENGINE COMPARTMENT <LH drive vehicles>

M1801000302213

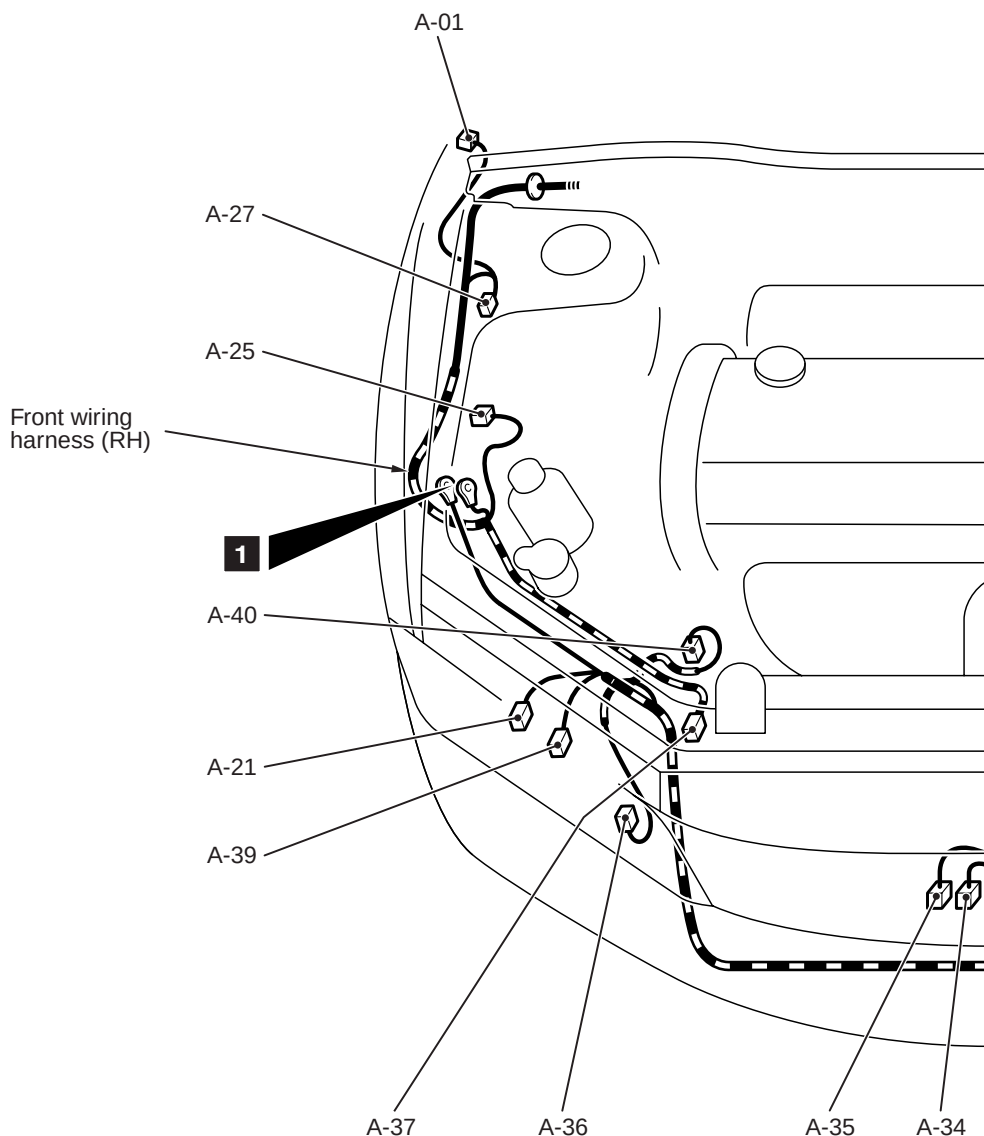
Connector
symbol**A**Connector colour
code

B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

AC500087AB

A-01	(2-GR)	Side turn signal lamp (RH)
A-02	(2-GR)	Side turn signal lamp (LH)
A-03	(2-B)	Wheel speed sensor (Front: LH)
A-05X	(4)	Horn relay
A-06X	(4)	Condenser fan relay (LO)
A-07X	(4)	Condenser fan relay (HI)
A-09X	(4)	Fan control relay
A-10X	(11)	Front-ECU
A-11X	(11)	Front-ECU

A-12	(2-B)	Front wiring harness (LH) and control wiring harness combination
A-13	(8-B)	Front wiring harness (LH) and control wiring harness combination
A-15	(2-B)	Headlamp (HI: LH)
A-17	(3-GR)	Fan controller
A-18	(1-B)	Horn (HI)
A-19	(1-B)	Horn (LO)

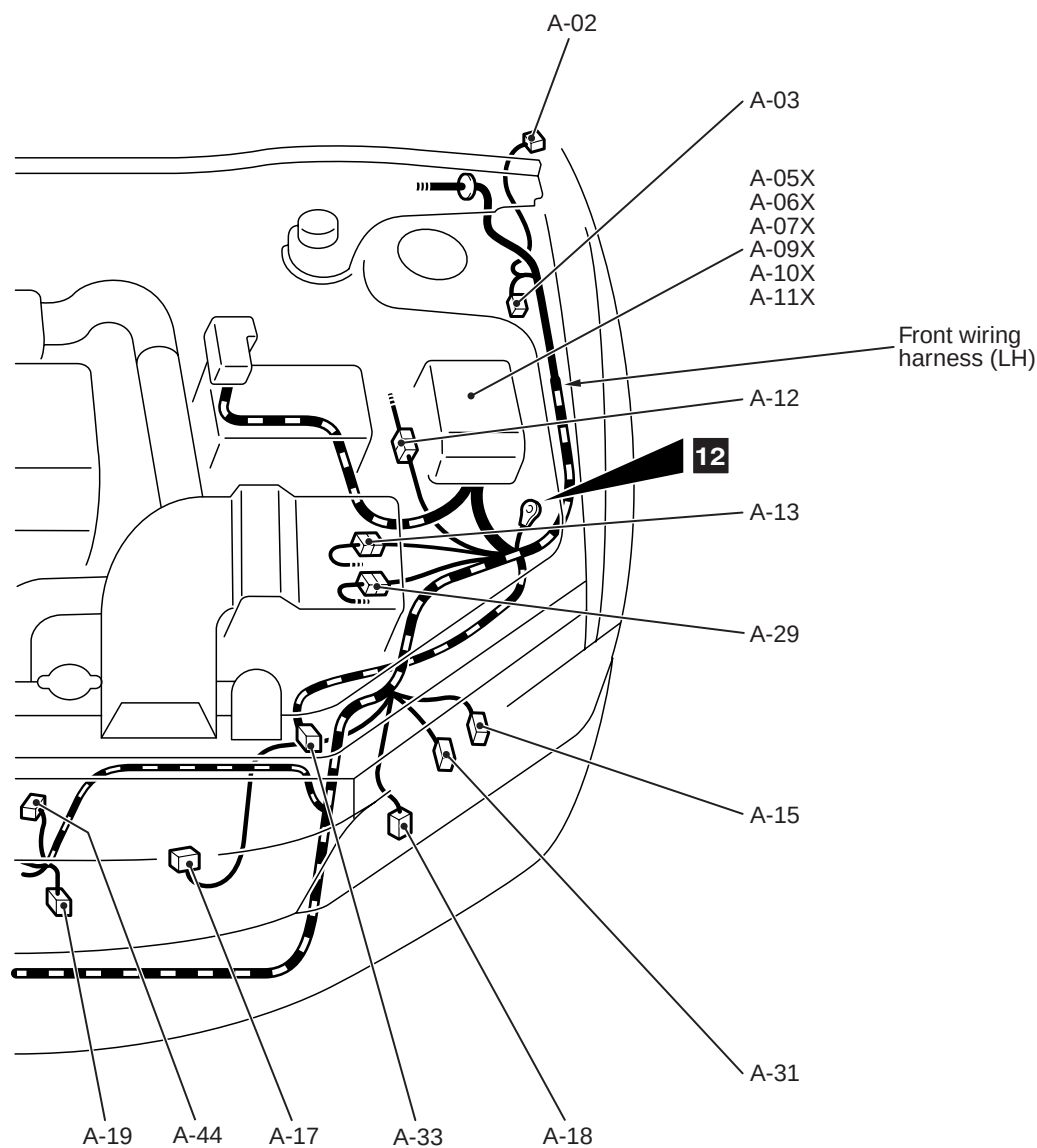


AC500088AB

A-21	(2-B)	Headlamp (HI: RH)	A-34	(2-B)	Condenser fan motor
A-25	(2-BR)	Dual pressure switch	A-35	(2-GR)	Condenser fan motor
A-27	(2-B)	Wheel speed sensor (Front: RH)	A-36	(1-B)	A/C compressor
A-29	(8-B)	Front wiring harness (LH) and control wiring harness combination	A-37	(2-Y)	Front impact sensor (RH)
A-31	(8-B)	Headlamp assembly (LH)	A-39	(8-B)	Headlamp assembly (RH)
A-33	(2-Y)	Front impact sensor (LH)	A-40	(1-B)	Power steering fluid pressure switch
			A-44	(2-BR)	Outside thermo sensor

ENGINE COMPARTMENT <RH drive vehicles>

M1801000302224

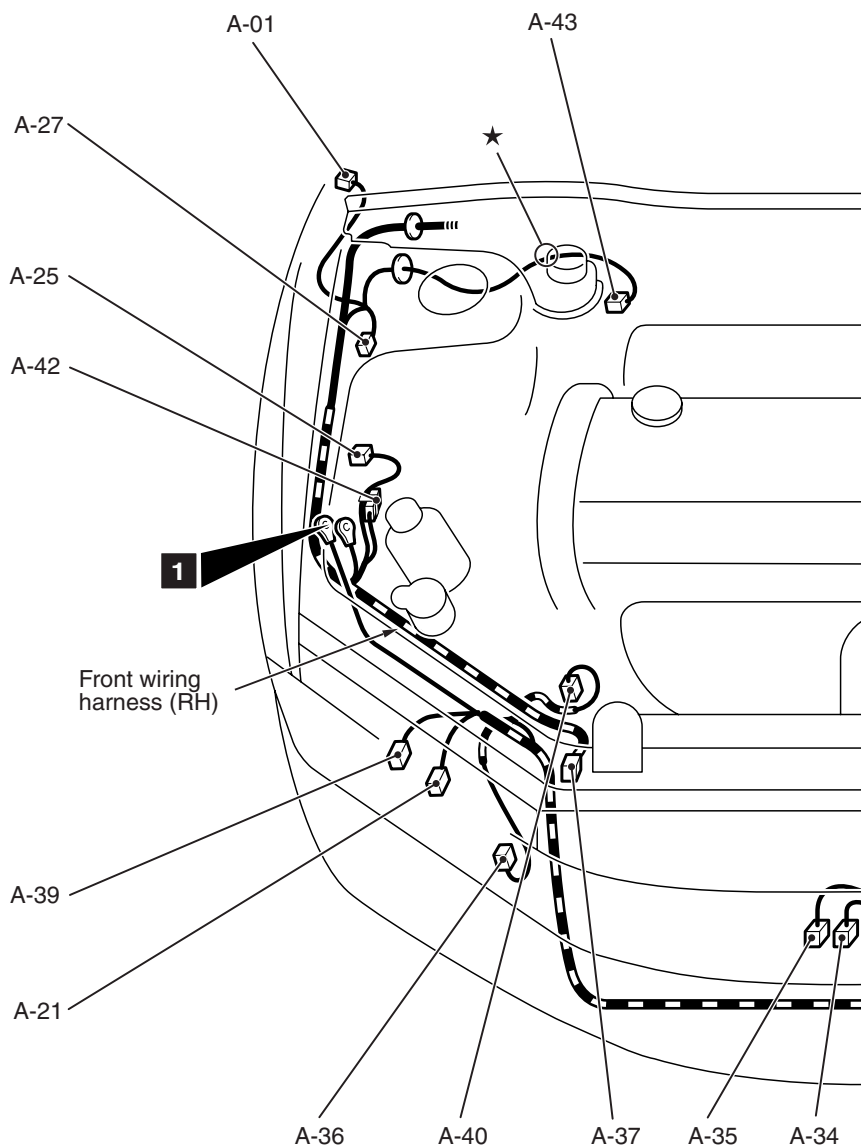
Connector
symbol**A**Front wiring
harness (RH)Connector colour
code

B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

AC500090AB

A-01	(2-GR)	Side turn signal lamp (RH)
A-02	(2-GR)	Side turn signal lamp (LH)
A-03	(2-B)	Wheel speed sensor (Front: LH)
A-05X	(4)	Horn relay
A-06X	(4)	Condenser fan relay (LO)
A-07X	(4)	Condenser fan relay (HI)
A-09X	(4)	Fan control relay
A-10X	(11)	Front-ECU

A-11X	(11)	Front-ECU
A-12	(2-B)	Front wiring harness (LH) and control wiring harness combination
A-15	(2-B)	Headlamp (HI: LH)
A-17	(3-GR)	Fan controller
A-18	(1-B)	Horn (HI)
A-19	(1-B)	Horn (LO)

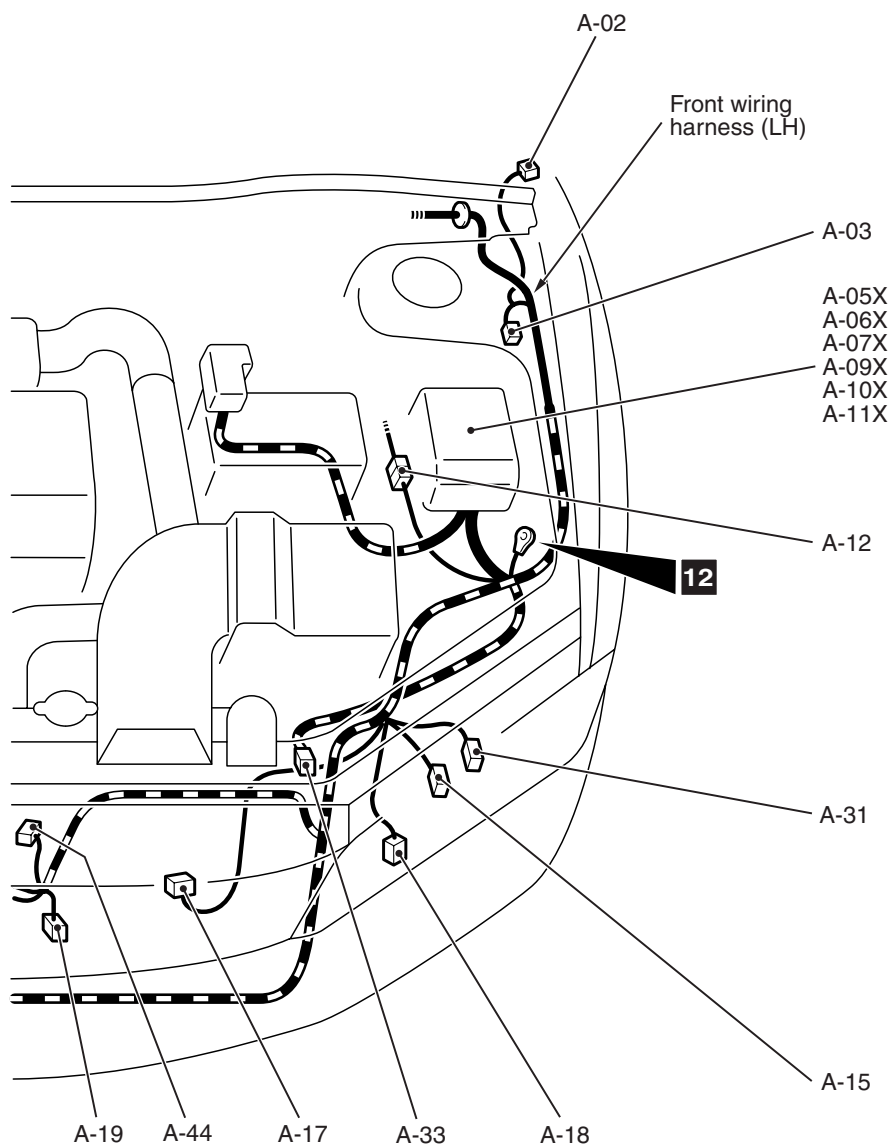


AC500091AB

A-21	(2-B)	Headlamp (HI: RH)	A-36	(1-B)	A/C compressor
A-25	(2-BR)	Dual pressure switch	A-37	(2-Y)	Front impact sensor (RH)
A-27	(2-B)	Wheel speed sensor (Front: RH)	A-39	(8-B)	Headlamp assembly (RH)
A-31	(8-B)	Headlamp assembly (LH)	A-40	(1-B)	Power steering fluid pressure switch
A-33	(2-Y)	Front impact sensor (LH)	A-42	(2)	No connection
A-34	(2-B)	Condenser fan motor	A-43	(2-GR)	Brake fluid level switch
A-35	(2-GR)	Condenser fan motor	A-44	(2-BR)	Outside thermo sensor

ENGINE AND TRANSMISSION**ENGINE AND TRANSMISSION <LH drive vehicles>**


M1801000401693

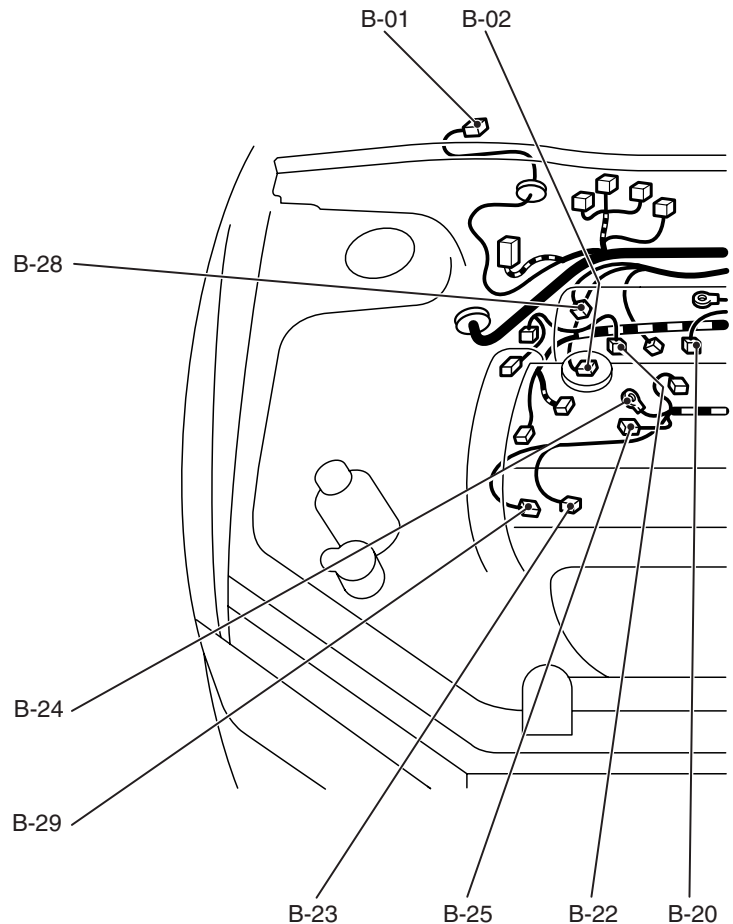Connector
symbol**B** -01
thru
-30Connector colour
codeB : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC500093AB

B-01 (5-GR) Windshield wiper motor
 B-02 (2-B) Purge control solenoid valve
 B-03 (4-B) Throttle position sensor
 B-04 (3-B) Vehicle speed sensor
 B-05 (2-GR) Brake fluid level switch
 B-06X (1) Engine speed detection connector

B-12X (4) Engine control relay
 B-13X (4) A/C compressor relay
 B-14 (10-B) Control wiring harness and battery
 wiring harness combination
 B-17 (2-B) Injector (4)

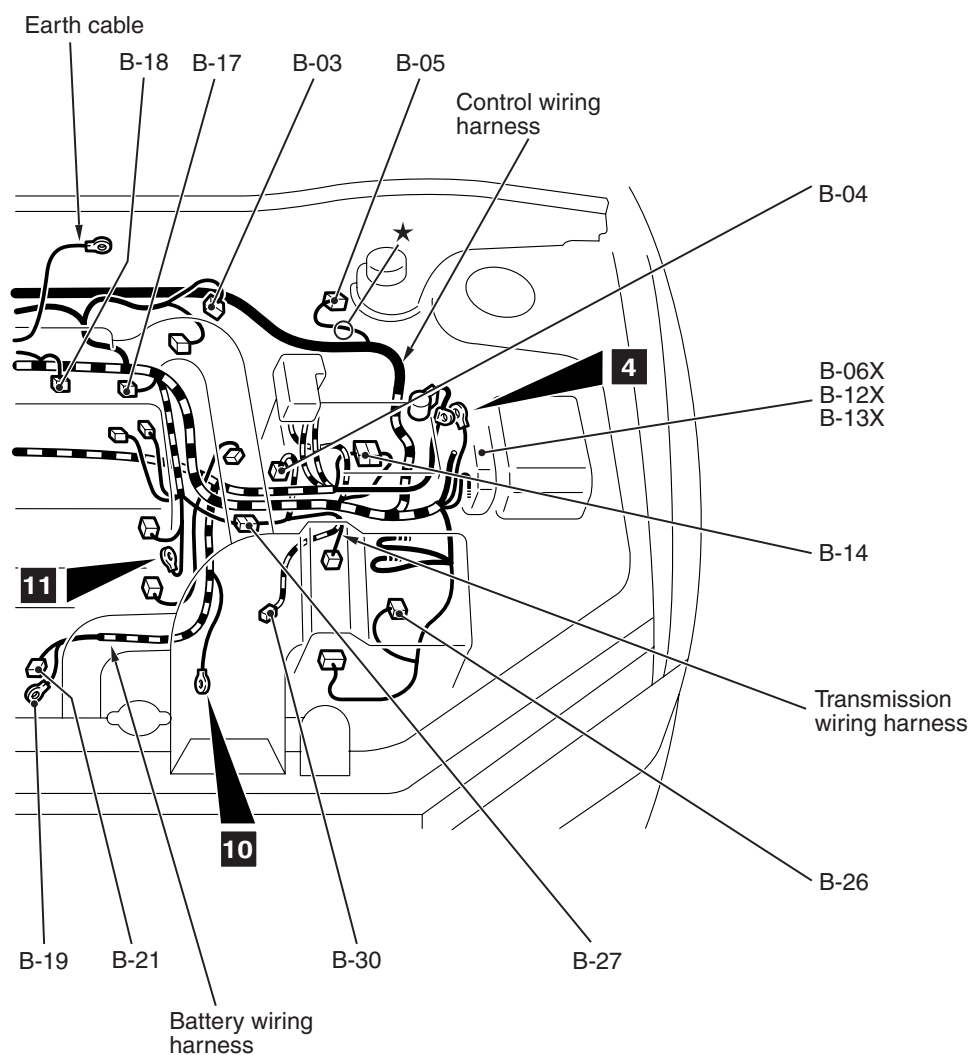


AC500094AB

B-18	(2-B)	Injector (3)
B-19	(1)	Starter
B-20	(2-B)	Injector (2)
B-21	(1-B)	Starter
B-22	(2-B)	Injector (1)
B-23	(1-B)	Oil pressure switch
B-24	(1)	Alternator
B-25	(4-GR)	Alternator

B-26	(2-GR)	Wastegate solenoid valve
B-27	(8-B)	Control wiring harness and transmission wiring harness combination
B-28	(2-B)	Fuel pressure control solenoid valve
B-29	(2-B)	Engine oil level sensor
B-30	(2-B)	Transmission oil temperature sensor

ENGINE AND TRANSMISSION <LH drive vehicles> (CONTINUED)

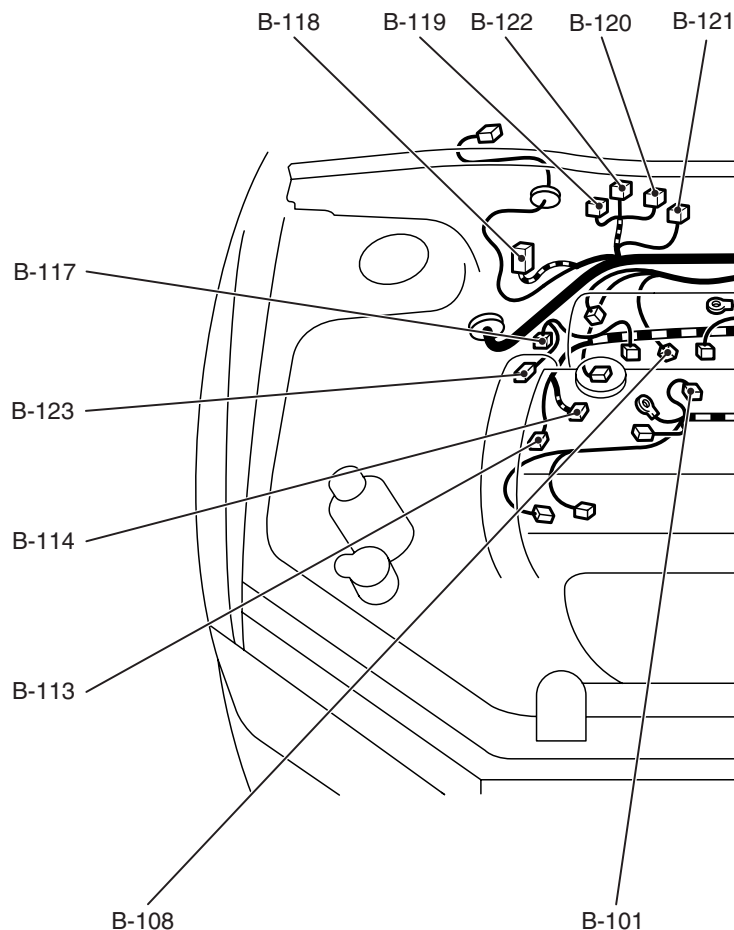
Connector
symbol**B** -101
thru
-124Connector colour
code

B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

AC500093AC

B-101 (2-BR) EGR control solenoid valve
 B-103 (3-GR) Ignition coil (1)
 B-104 (6-B) Idle speed control servo
 B-105 (7-B) Air flow sensor

B-106 (3-B) Exhaust camshaft position sensor
 B-107 (2-B) Engine coolant temperature sensor
 B-108 (2-GR) Detonation sensor

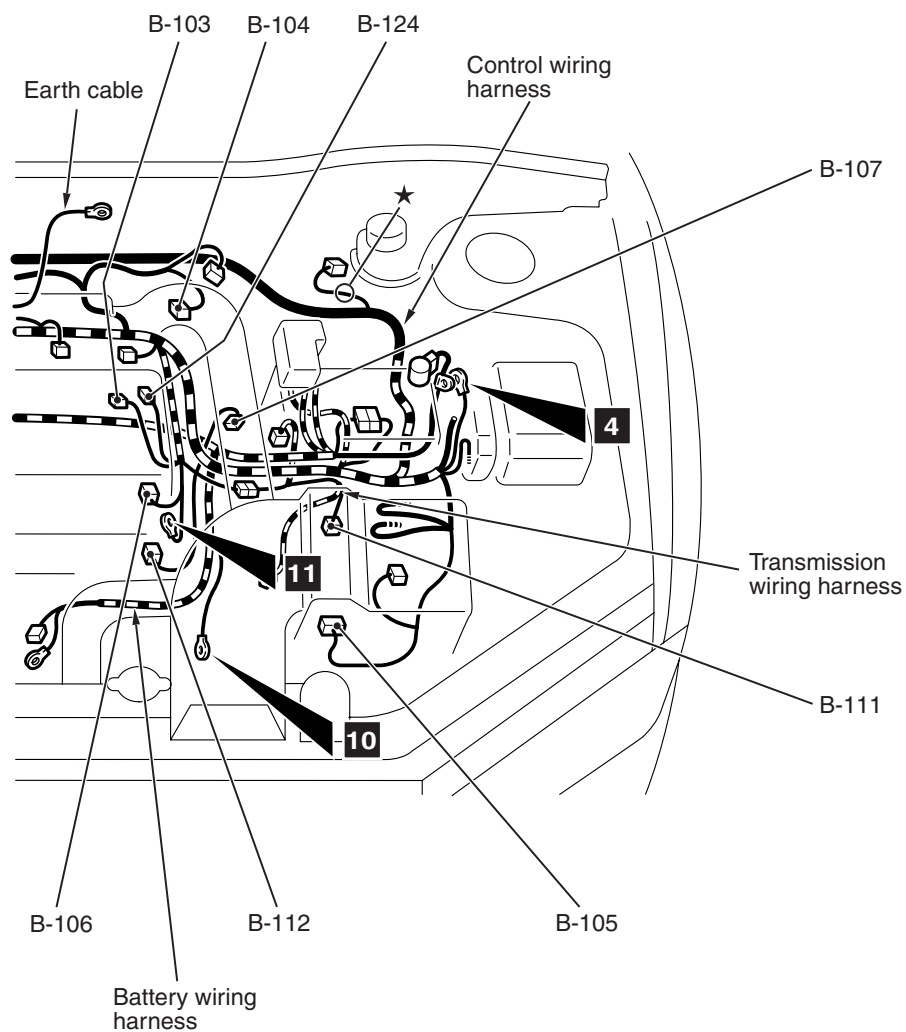

AC500094AC

B-111	(2-B)	Back-up lamp switch
B-112	(1-B)	Engine coolant temperature gauge unit
B-113	(4-B)	Oxygen sensor (Front)
B-114	(3-GR)	Ignition coil (2)
B-117	(3-B)	Crank angle sensor
B-118	(34-B)	ABS-ECU


B-119	(6-B)	Injector resistor
B-120	(4)	Fuel pump relay (3)
B-121	(2-B)	Fuel pump resistor
B-122	(4)	Electric pump relay
B-123	(2-B)	Oil feeder control valve
B-124	(3-B)	Intake camshaft position sensor

ENGINE AND TRANSMISSION <RH drive vehicles>

M1801000401701

Connector
symbol**B** -01
thru
-29Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

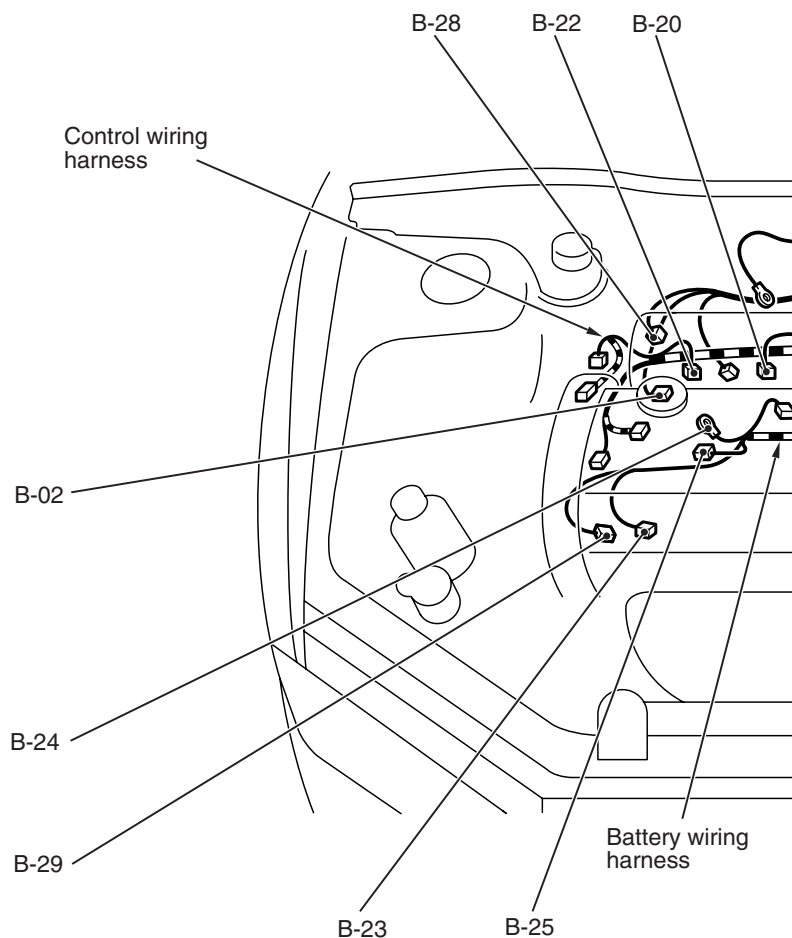

AC500096AB

B-01	(5-GR)	Windshield wiper motor
B-02	(2-B)	Purge control solenoid valve
B-03	(4-B)	Throttle position sensor
B-04	(3-B)	Vehicle speed sensor
B-06X	(1)	Engine speed detection connector
B-10X	(4)	Ignition coil relay

B-12X	(4)	Engine control relay
B-13X	(4)	A/C compressor relay
B-14	(10-B)	Control wiring harness and battery wiring harness combination
B-17	(2-B)	Injector (4)

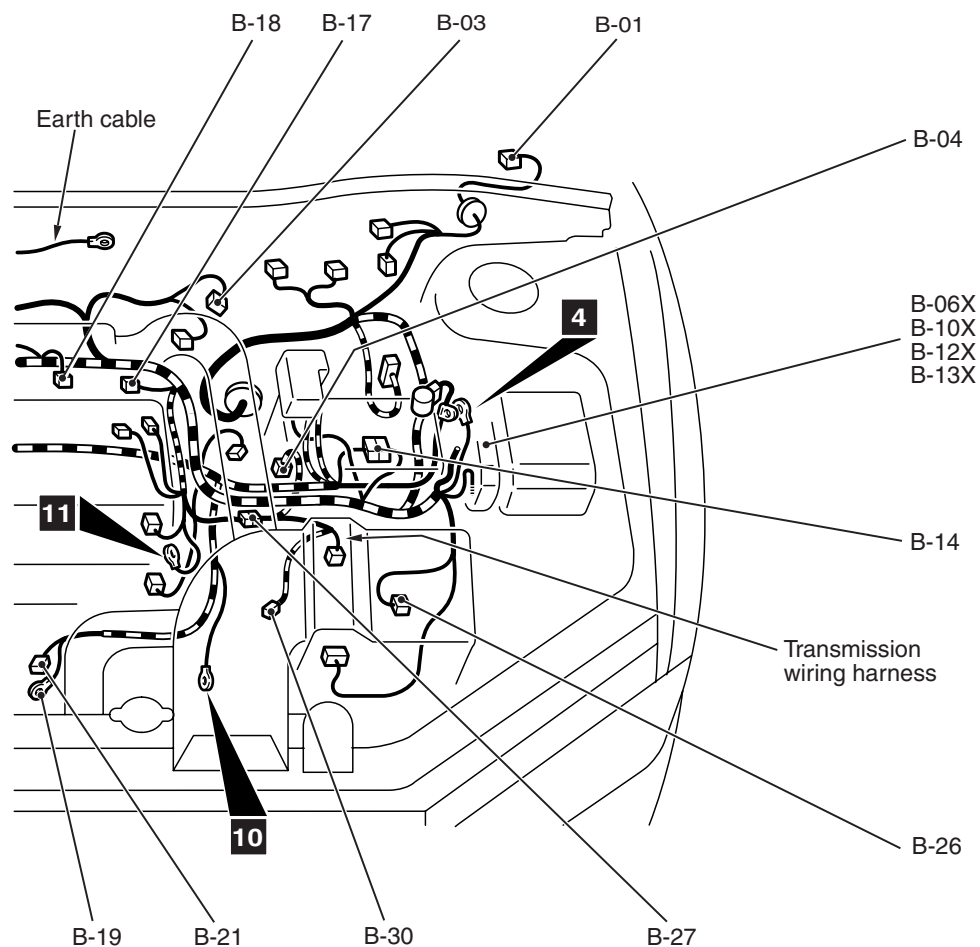


AC500097AB

B-18	(2-B)	Injector (3)	B-26	(2-GR)	Wastegate solenoid valve
B-19	(1)	Starter	B-27	(8-B)	Control wiring harness and transmission wiring harness combination
B-20	(2-B)	Injector (2)			
B-21	(1-B)	Starter	B-28	(2-B)	Fuel pressure control solenoid valve
B-22	(2-B)	Injector (1)	B-29	(2-B)	Engine oil level sensor
B-23	(1-B)	Oil pressure switch	B-30	(2-B)	Transmission oil temperature sensor
B-24	(1)	Alternator			
B-25	(4-GR)	Alternator			

ENGINE AND TRANSMISSION <RH drive vehicles> (CONTINUED)

Connector
symbol**B** -101
thru
-124Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

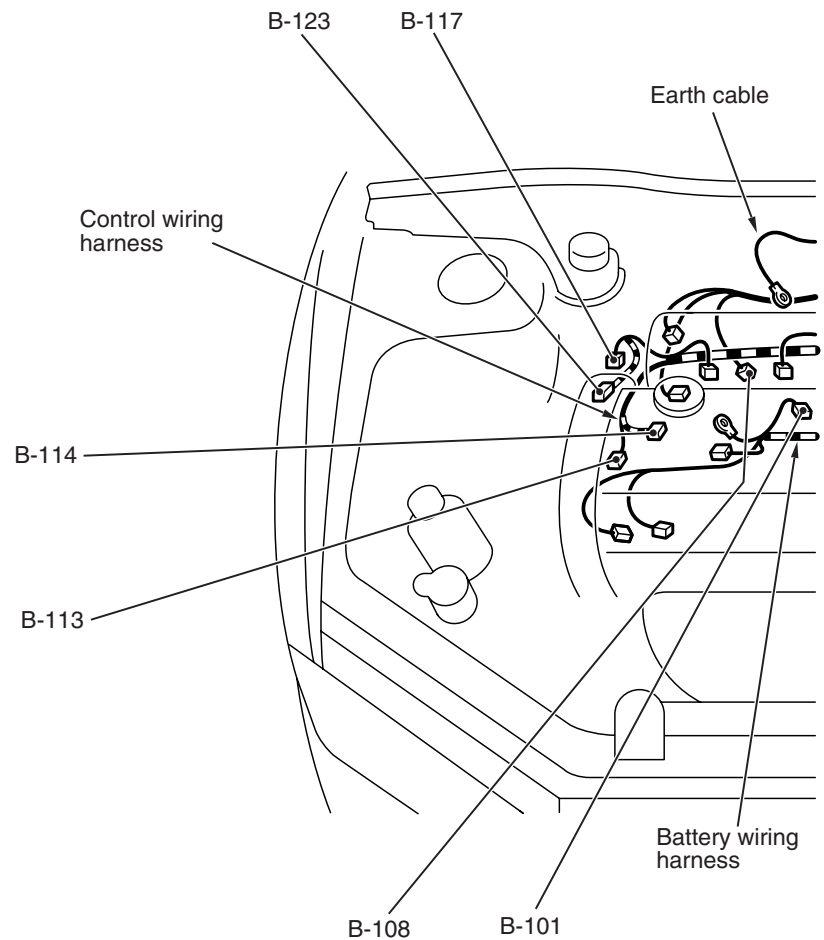

AC500096AC

B-101 (2-BR) EGR control solenoid valve
 B-103 (3-GR) Ignition coil (1)
 B-104 (6-B) Idle speed control servo
 B-105 (7-B) Air flow sensor

B-106 (3-B) Exhaust camshaft position sensor
 B-107 (2-B) Engine coolant temperature sensor
 B-108 (2-GR) Detonation sensor

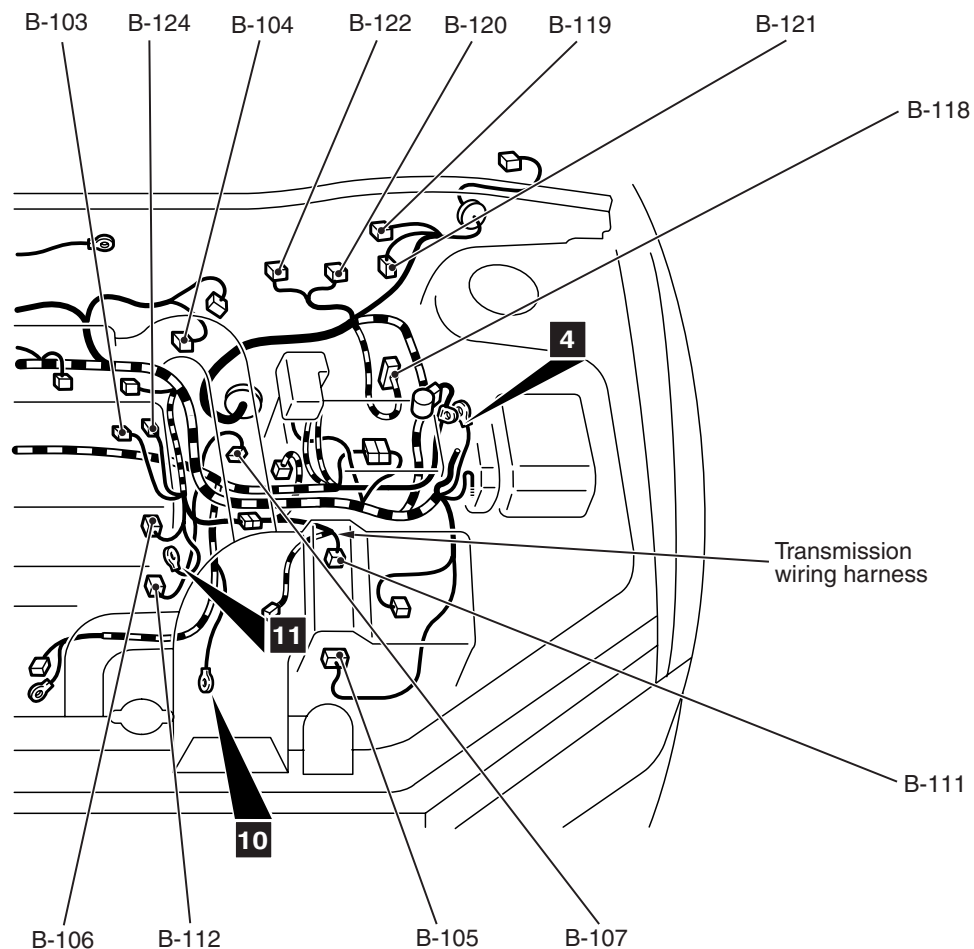

B-111	(2-B)	Back-up lamp switch
B-112	(1-B)	Engine coolant temperature gauge unit
B-113	(4-B)	Oxygen sensor (Front)
B-114	(3-GR)	Ignition coil (2)
B-117	(3-B)	Crank angle sensor
B-118	(34-B)	ABS-ECU

B-119	(6-B)	Injector resistor
B-120	(4)	Fuel pump relay (3)
B-121	(2-B)	Fuel pump resistor
B-122	(4)	Electric pump relay
B-123	(2-B)	Oil feeder control valve
B-124	(3-B)	Intake camshaft position sensor

AC500097AC

DASH PANEL <LH drive vehicles>


Connector
symbol

C -01
thru
-37

Diagram of the instrument panel wiring harness. Callouts include C-01, C-02, C-03, C-04, C-05, C-29, C-21, C-24, C-20, C-23, C-18, C-17, C-28, C-37, C-36, C-27, C-15, C-14, C-13, C-12, and the Instrument panel wiring harness. Numbered callouts 5, 6, 7, 14, and 15 point to specific components or areas. A label J/B is also present.

C-01	(21)	Combination meter
C-02	(21-L)	Combination meter
C-03	(4)	Hazard warning switch
C-04	(4)	Clock
C-05	(22-GR)	J/C (1)
C-06	(22-GR)	J/C (3)

C-07	(7)	Outside/inside air selection damper control motor
C-10	(13)	Instrument panel wiring harness and A/C wiring harness combination
C-12	(20-Y)	SRS-ECU
C-13	(22-Y)	SRS-ECU

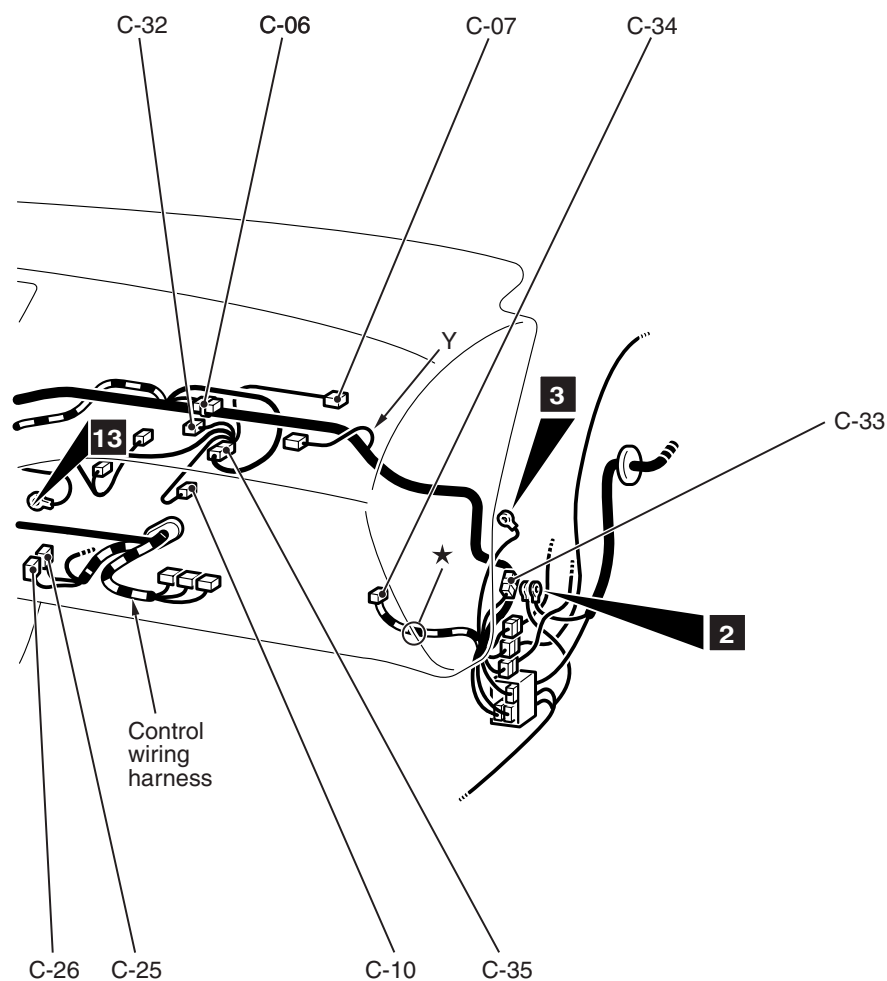

AC500100AB

C-14	(16-B)	Diagnosis connector
C-15	(12)	Diagnosis connector
C-17	(20)	Instrument panel wiring harness and front door wiring harness (LH) combination
C-18	(6)	Instrument panel wiring harness and roof wiring harness combination
C-20	(6)	Fog lamp switch
C-21	(13)	J/C (5)
C-23	(22-B)	J/C (4)
C-24	(6-GR)	Headlamp levelling switch
C-25	(26-Y)	4WD-ECU

C-26	(22-Y)	4WD-ECU
C-27	(6)	Engine oil level relay
C-28	(1)	Instrument panel wiring harness and floor wiring harness (LH) combination
C-29	(1-B)	Spare connector (for audio)
C-32	(2)	Heater water temperature sensor
C-33	(2)	No connection
C-34	(6)	Blower linear controller
C-35	(2)	Air thermo sensor
C-36	(20-B)	A/C-ECU
C-37	(16-B)	A/C-ECU


DASH PANEL <LH drive vehicles> (CONTINUED)

Connector
symbol

C -101
thru
-145

Connector colour
code


B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

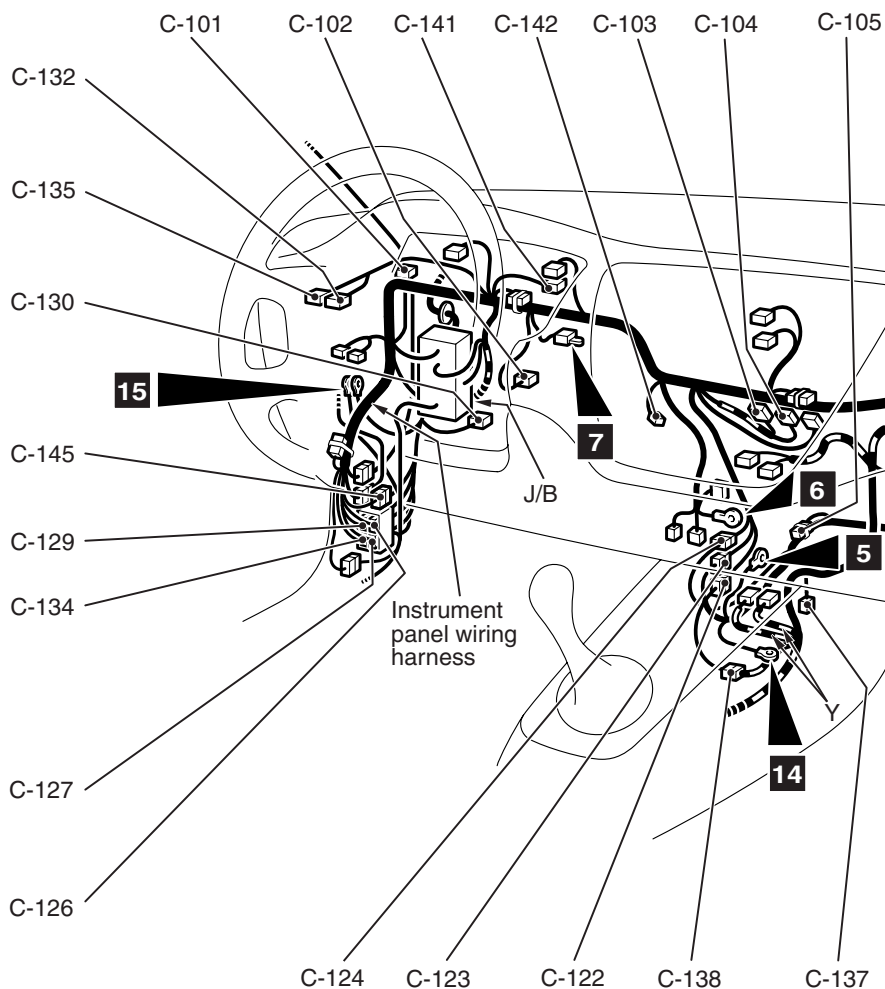

AC500099AC

C-101	(22-L)	J/C (2)
C-102	(4)	Stop lamp switch
C-103	(14)	Spare connector (for audio)
C-104	(1)	Roof antenna
C-105	(33)	J/C (6)
C-106	(2-R)	Air bag module (squib) <Passenger's side>
C-109	(2)	Instrument panel wiring harness and tweeter wiring harness combination
C-110	(16)	Instrument panel wiring harness and front door wiring harness (RH) combination



C-111	(13)	Front wiring harness (RH) and instrument panel wiring harness combination
C-112	(9-GR)	Instrument panel wiring harness and floor wiring harness (RH) combination
C-113	(25)	Instrument panel wiring harness and floor wiring harness (RH) combination
C-117	(30-GR)	Engine-ECU
C-119	(28-GR)	Engine-ECU
C-121	(35-GR)	Engine-ECU
C-122	(22-L)	Instrument panel wiring harness and control wiring harness combination

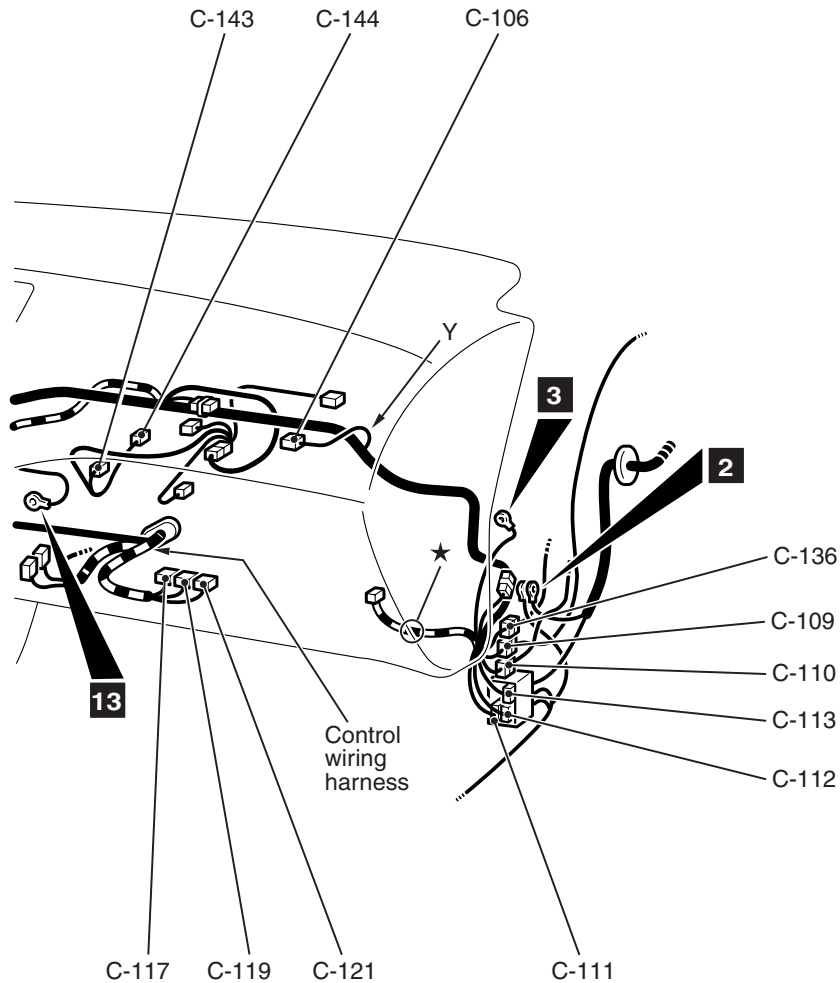

AC500100AC

C-123 (10-GR)	Instrument panel wiring harness and control wiring harness combination	C-135 (6)	ACD mode changeover switch
C-124 (25)	Instrument panel wiring harness and control wiring harness combination	C-136 (11-L)	Instrument panel wiring harness and control wiring harness combination
C-126 (3)	Front wiring harness (LH) and instrument panel wiring harness combination	C-137 (4)	Oxygen sensor (Rear)
C-127 (13)	Instrument panel wiring harness and floor wiring harness (LH) combination	C-138 (1)	Instrument panel wiring harness and control wiring harness combination
C-129 (25)	Front wiring harness (LH) and instrument panel wiring harness combination	C-141 (5)	Photo sensor
C-130 (2)	Clutch switch	C-142 (2-B)	Interior temperature sensor
C-132 (11-B)	Remote controlled mirror switch	C-143 (6)	Mode selection damper control motor and potentiometer
C-134 (11-B)	Floor wiring harness (LH) and instrument panel wiring harness combination	C-144 (6)	Air mixing damper control motor and potentiometer
		C-145 (2)	Instrument panel wiring harness and front wiring harness (LH) combination


DASH PANEL <LH drive vehicles> (CONTINUED)

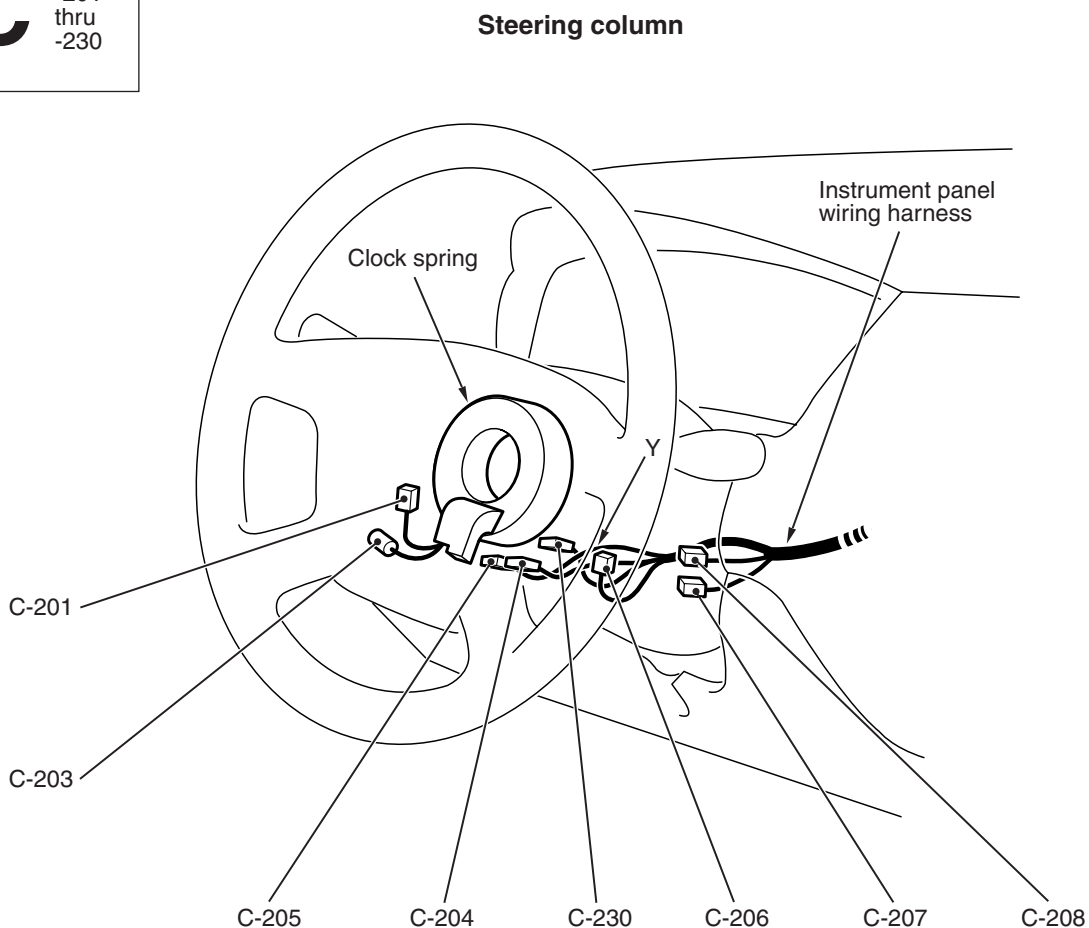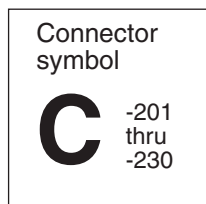

AC208208AC


C-201 (2)	Air bag module (squib) <Driver's side>
C-203 (1)	Horn switch
C-204 (6)	Clock spring
C-205 (4-Y)	Clock spring
C-206 (10)	Column switch
C-207 (7)	Key reminder switch
C-208 (6)	Ignition switch
C-209 (13)	Instrument panel wiring harness and J/B combination

C-210 (14)	Instrument panel wiring harness and J/B combination
C-211 (6)	Instrument panel wiring harness and J/B combination
C-212 (1-B)	Instrument panel wiring harness and J/B combination
C-214 (28)	Instrument panel wiring harness and J/B combination

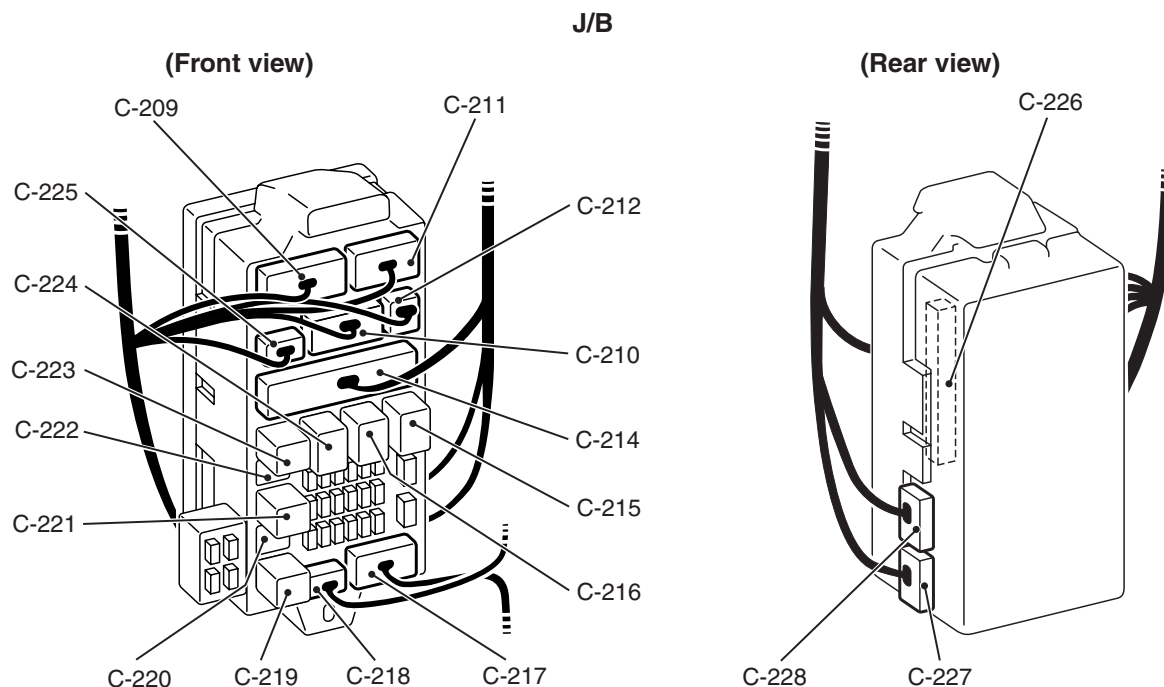

Connector colour
code

B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

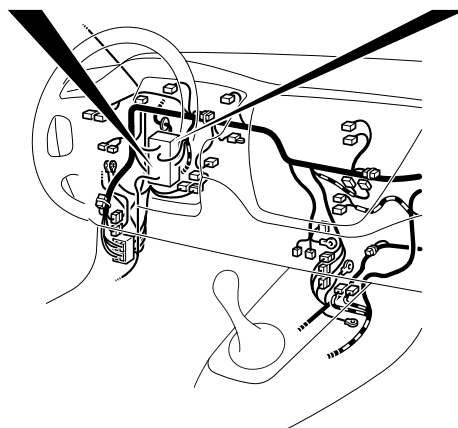

AC500713AB

C-215 (5)	Defogger relay
C-216 (5)	Blower relay
C-217 (15)	Floor wiring harness (LH) and J/B combination
C-218 (3)	Roof wiring harness and J/B combination
C-219 (4)	Rear fog lamp relay
C-220 (4)	No connection
C-221 (4)	Fuel pump relay (2)

C-222 (4)	No connection
C-223 (4)	Fuel pump relay (1)
C-224 (5)	Power window relay
C-225 (2)	Instrument panel wiring harness and J/B combination
C-226 (20)	ETACS-ECU
C-227 (24)	ETACS-ECU
C-228 (24-GR)	ETACS-ECU
C-230 (5)	Steering wheel sensor

DASH PANEL <RH drive vehicles>


M1801000601556

Connector
symbol

C -01
thru
-37

Connector colour
code


B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

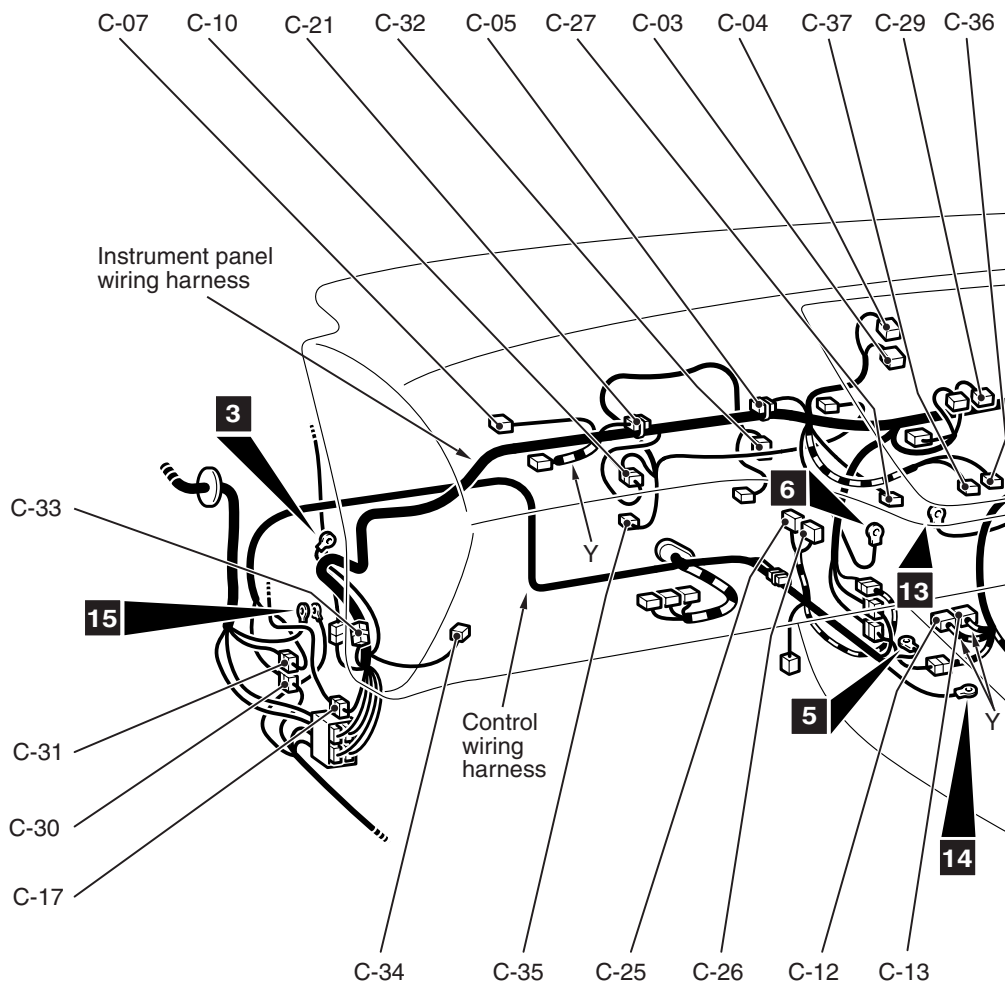

AC500103AB

C-01	(21)	Combination meter
C-02	(21-L)	Combination meter
C-03	(4)	Hazard warning switch
C-04	(4)	Clock
C-05	(22-GR)	J/C (1)
C-06	(22-GR)	J/C (3)

C-07	(7)	Outside/inside air selection damper control motor
C-10	(13)	Instrument panel wiring harness and A/C wiring harness combination
C-12	(20-Y)	SRS-ECU
C-13	(22-Y)	SRS-ECU

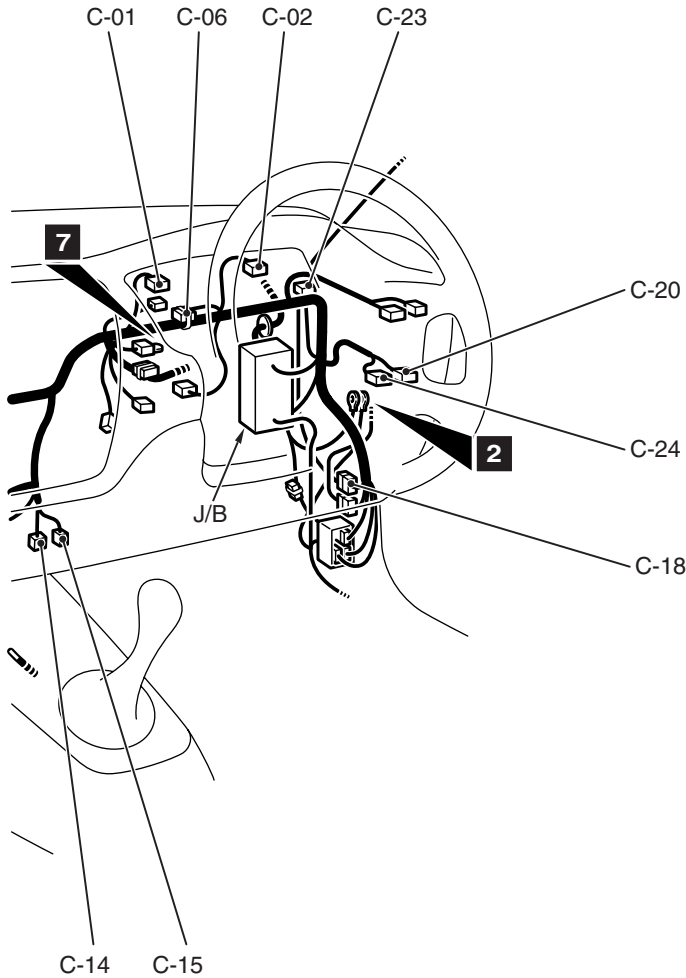


AC500104AB

C-14	(16-B)	Diagnosis connector
C-15	(12)	Diagnosis connector
C-17	(16)	Instrument panel wiring harness and front door wiring harness (LH) combination
C-18	(6)	Instrument panel wiring harness and roof wiring harness combination
C-20	(6)	Fog lamp switch
C-21	(13)	J/C (5)
C-23	(22-B)	J/C (4)
C-24	(6-GR)	Headlamp levelling switch
C-25	(26-Y)	4WD-ECU
C-26	(22-Y)	4WD-ECU

C-27	(6)	Engine oil level relay
C-29	(1-B)	Spare connector (for audio)
C-30	(1-GR)	Control wiring harness and floor wiring harness (LH) combination
C-31	(16)	Control wiring harness and front wiring harness (LH) combination
C-32	(2)	Heater water temperature sensor
C-33	(2)	No connection
C-34	(6)	Blower linear controller
C-35	(2)	Air thermo sensor
C-36	(20-B)	A/C-ECU
C-37	(16-B)	A/C-ECU


DASH PANEL <RH drive vehicles> (CONTINUED)

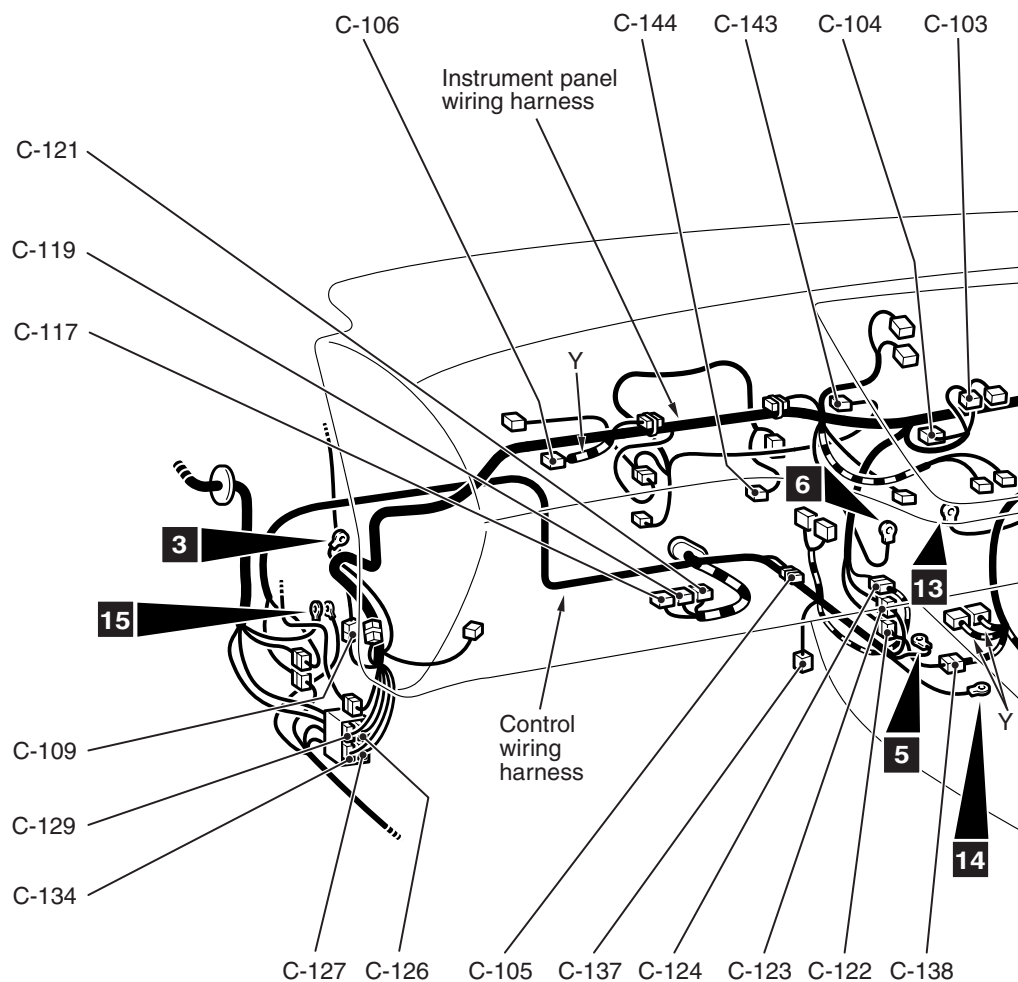Connector
symbol**C** -101
thru
-144Connector colour
codeB : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC500103AC

C-101 (22-L)	J/C (2)
C-102 (4)	Stop lamp switch
C-103 (14)	Spare connector (for audio)
C-104 (1)	Roof antenna
C-105 (33)	J/C (6)
C-106 (2-R)	Air bag module (squib) <Passenger's side>
C-109 (2)	Instrument panel wiring harness and tweeter wiring harness combination
C-110 (20)	Instrument panel wiring harness and front door wiring harness (RH) combination


C-111 (25)	Front wiring harness (RH) and instrument panel wiring harness combination
C-112 (9-GR)	Instrument panel wiring harness and floor wiring harness (RH) combination
C-113 (13)	Instrument panel wiring harness and floor wiring harness (RH) combination
C-117 (30-GR)	Engine-ECU
C-119 (28-GR)	Engine-ECU
C-121 (35-GR)	Engine-ECU
C-122 (22-L)	Instrument panel wiring harness and control wiring harness combination

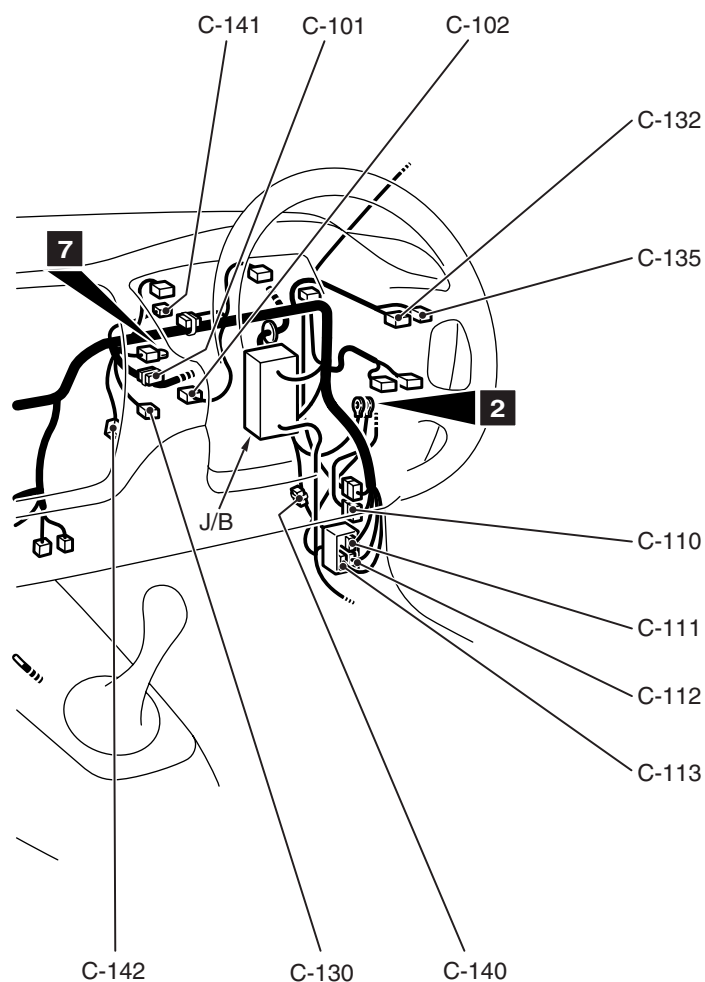


AC500104AC

C-123 (10-GR)	Instrument panel wiring harness and control wiring harness combination	C-134 (11-B)	Floor wiring harness (LH) and instrument panel wiring harness combination
C-124 (25)	Instrument panel wiring harness and control wiring harness combination	C-135 (6)	ACD mode changeover switch
C-126 (3)	Front wiring harness (LH) and instrument panel wiring harness combination	C-137 (4)	Oxygen sensor (Rear)
C-127 (13)	Instrument panel wiring harness and floor wiring harness (LH) combination	C-138 (11)	Instrument panel wiring harness and control wiring harness combination
C-129 (25)	Front wiring harness (LH) and instrument panel wiring harness combination	C-140 (2)	No connection
C-130 (2)	Clutch switch	C-141 (5)	Photo sensor
C-132 (11-B)	Remote controlled mirror switch	C-142 (2-B)	Interior temperature sensor
		C-143 (6)	Mode selection damper control motor and potentiometer
		C-144 (6)	Air mixing damper control motor and potentiometer

DASH PANEL <RH drive vehicles> (CONTINUED)

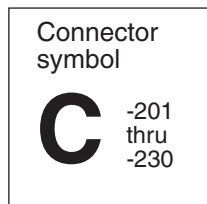

Steering column

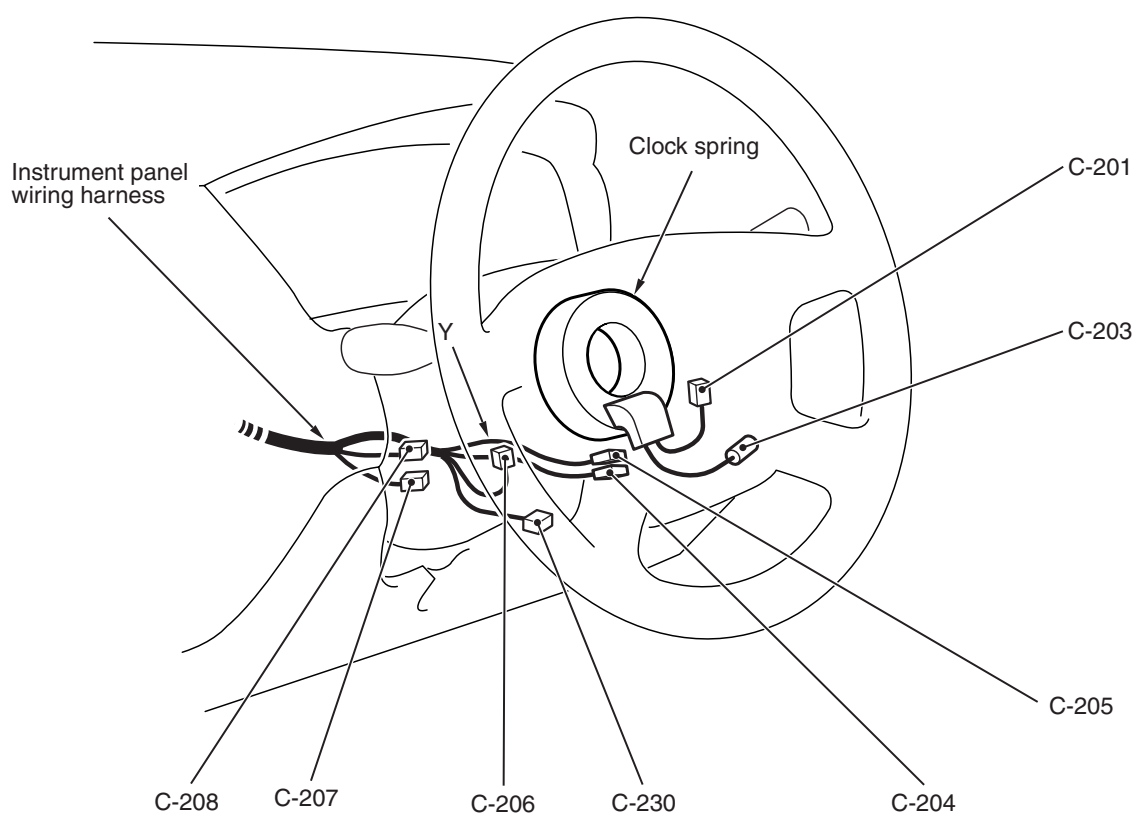

AC212076AC


C-201 (2)	Air bag module (squib) <Driver's side>
C-203 (1)	Horn switch
C-204 (6)	Clock spring
C-205 (4-Y)	Clock spring
C-206 (10)	Column switch
C-207 (7)	Key reminder switch
C-208 (6)	Ignition switch
C-209 (13)	Instrument panel wiring harness and J/B combination

C-210 (14)	Instrument panel wiring harness and J/B combination
C-211 (6)	Instrument panel wiring harness and J/B combination
C-212 (1-B)	Instrument panel wiring harness and J/B combination
C-214 (28)	Instrument panel wiring harness and J/B combination

J/B

(Front view)

(Rear view)

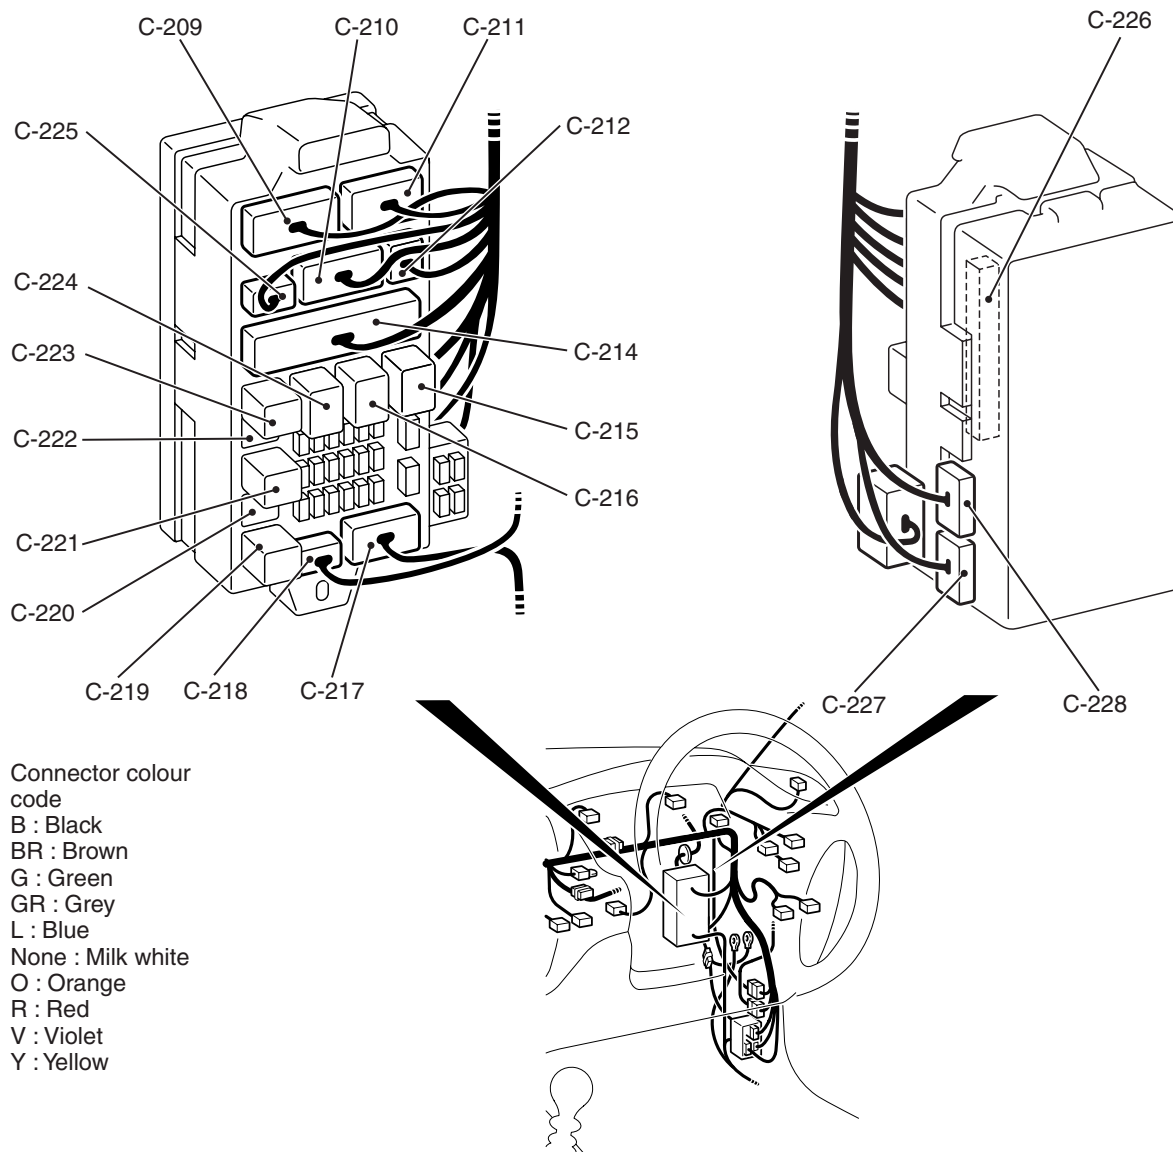

C-215 (5)	Defogger relay
C-216 (5)	Blower relay
C-217 (15)	Floor wiring harness (RH) and J/B combination
C-218 (3)	Roof wiring harness and J/B combination
C-219 (4)	Rear fog lamp relay
C-220 (4)	No connection
C-221 (4)	Fuel pump relay (2)


C-222 (4)	No connection
C-223 (4)	Fuel pump relay (1)
C-224 (5)	Power window relay
C-225 (2)	Instrument panel wiring harness and J/B combination
C-226 (20)	ETACS-ECU
C-227 (24)	ETACS-ECU
C-228 (24-GR)	ETACS-ECU
C-230 (5)	Steering wheel sensor

AC500714AB

FLOOR AND ROOF


FLOOR AND ROOF <LH drive vehicles>

M1801000901386

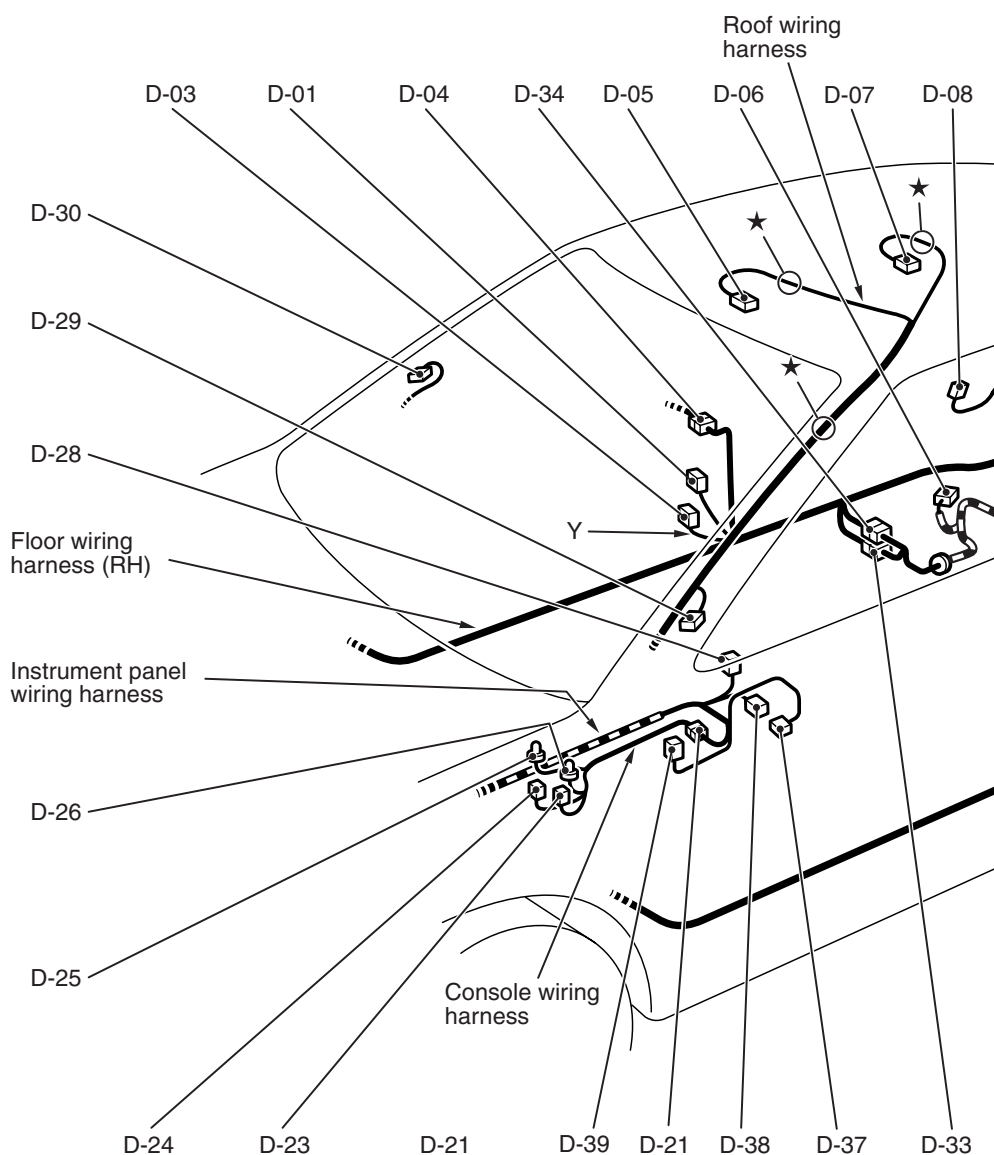Connector
symbol**D**

AC310169AB

D-01	(3)	Front door switch (RH)	D-11	(3)	Rear door switch (LH)
D-03	(2-B)	Seat belt pre-tensioner (RH)	D-12	(5-GR)	Fuel pump and gauge unit (main)
D-04	(8)	Floor wiring harness (RH) and rear door wiring harness (RH) combination	D-13	(2-B)	Wheel speed sensor (Rear: LH)
			D-15	(8)	Floor wiring harness (LH) and rear door wiring harness (LH) combination
D-05	(2)	Front room lamp	D-16	(2-B)	Seat belt pre-tensioner (LH)
D-06	(2-B)	Wheel speed sensor (Rear: RH)	D-18	(3)	Front door switch (LH)
D-07	(2-GR)	Rear room lamp	D-21	(4)	Instrument panel wiring harness and console wiring harness combination
D-08	(3)	Rear door switch (RH)			
D-10	(2)	Fuel gauge unit (sub)			

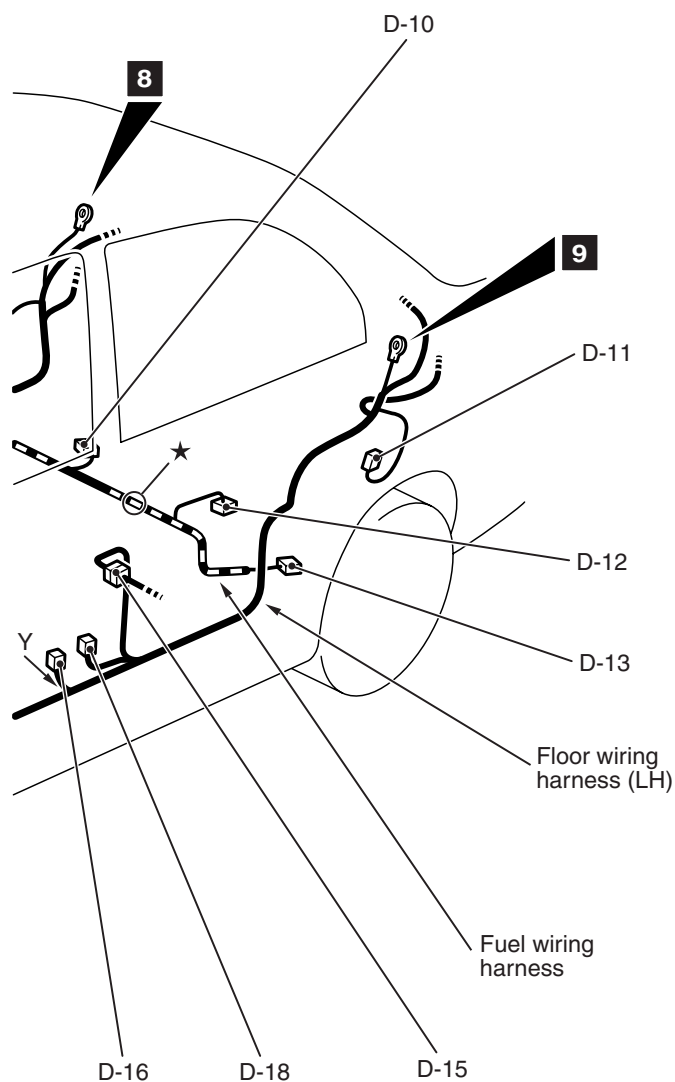

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow


AC310170AE

D-23	(1)	Cigarette lighter
D-24	(1-B)	Cigarette lighter
D-25	(2-B)	Ashtray illumination lamp
D-26	(2-B)	Cigarette lighter illumination lamp
D-28	(1-B)	Parking brake switch
D-29	(2)	Tweeter (LH)
D-30	(2)	Tweeter (RH)

D-33	(1)	Floor wiring harness (RH) and fuel wiring harness combination
D-34	(8)	Floor wiring harness (RH) and fuel wiring harness combination
D-37	(3-B)	G-sensor (lateral)
D-38	(3-B)	G-sensor (longitudinal)
D-39	(6)	No connection


FLOOR AND ROOF <RH drive vehicles>

M1801000901397

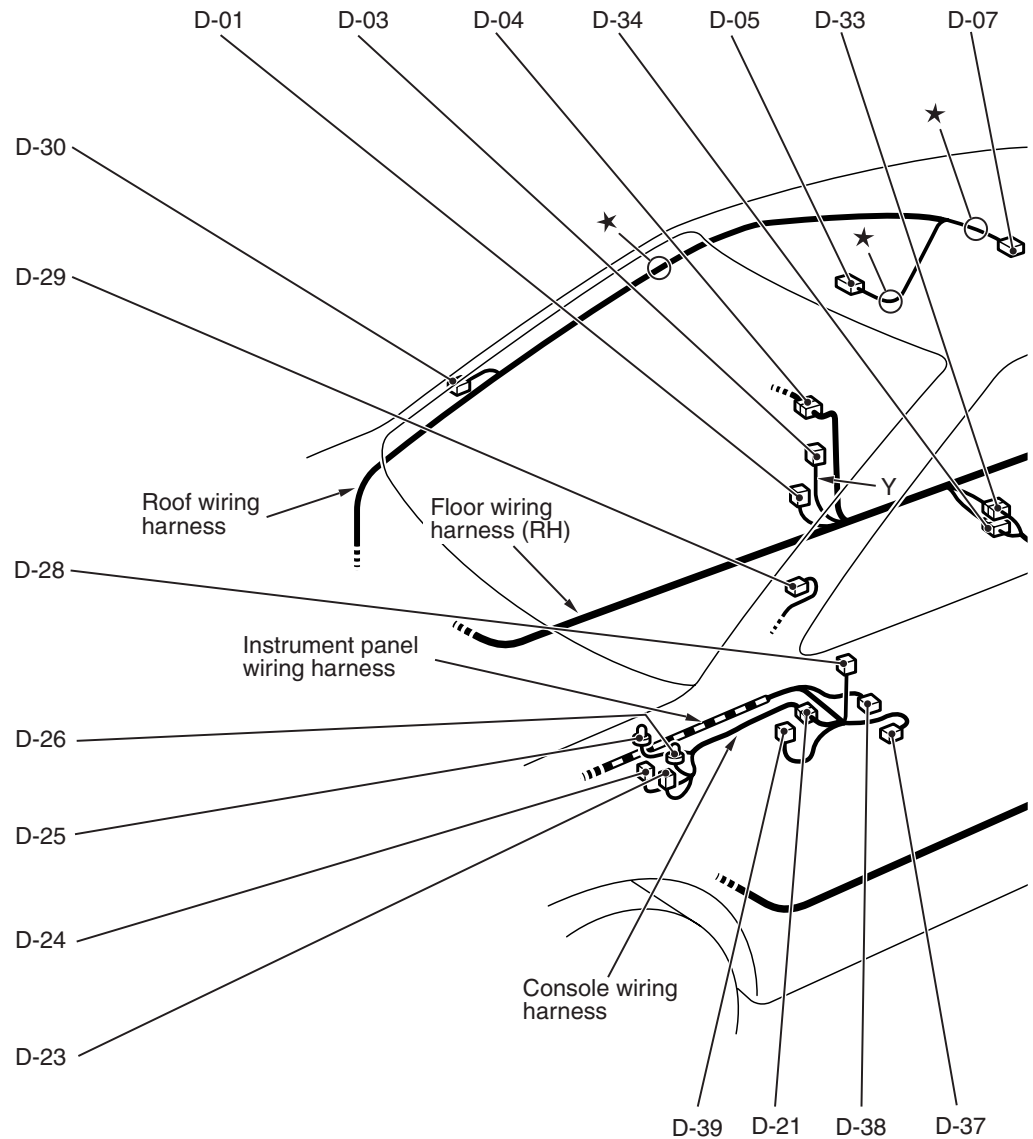Connector
symbol**D**

AC310176AC

D-01	(3)	Front door switch (RH)	D-11	(3)	Rear door switch (LH)
D-03	(2-B)	Seat belt pre-tensioner (RH)	D-12	(5-GR)	Fuel pump and gauge unit (main)
D-04	(8)	Floor wiring harness (RH) and rear door wiring harness (RH) combination	D-13	(2-B)	Wheel speed sensor (Rear: LH)
			D-15	(8)	Floor wiring harness (LH) and rear door wiring harness (LH) combination
D-05	(2)	Front room lamp	D-16	(2-B)	Seat belt pre-tensioner (LH)
D-06	(2-B)	Wheel speed sensor (Rear: RH)	D-18	(3)	Front door switch (LH)
D-07	(2-GR)	Rear room lamp	D-21	(4)	Instrument panel wiring harness and console wiring harness combination
D-08	(3)	Rear door switch (RH)			
D-10	(2)	Fuel gauge unit (sub)			

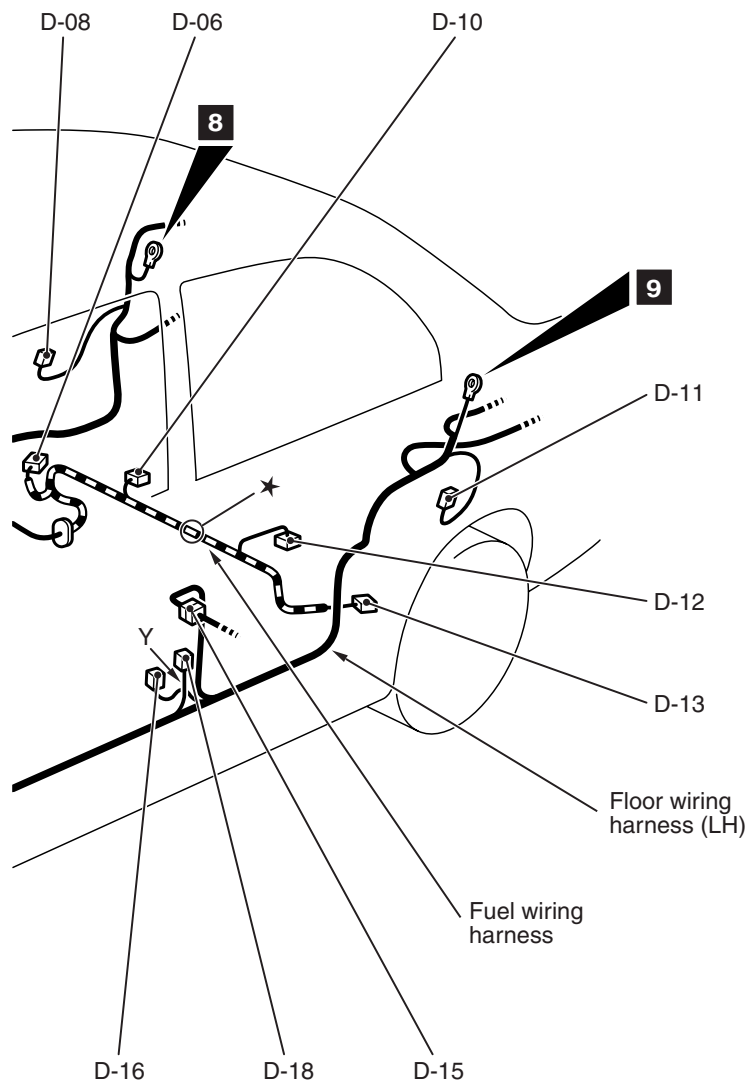

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC310177AD


D-23	(1)	Cigarette lighter
D-24	(1-B)	Cigarette lighter
D-25	(2-B)	Ashtray illumination lamp
D-26	(2-B)	Cigarette lighter illumination lamp
D-28	(1-B)	Parking brake switch
D-29	(2)	Tweeter (LH)
D-30	(2)	Tweeter (RH)

D-33	(1)	Floor wiring harness (RH) and fuel wiring harness combination
D-34	(8)	Floor wiring harness (RH) and fuel wiring harness combination
D-37	(3-B)	G-sensor (lateral)
D-38	(3-B)	G-sensor (longitudinal)
D-39	(6)	No connection

DOOR

DOOR <LH drive vehicles>


M1801001401276

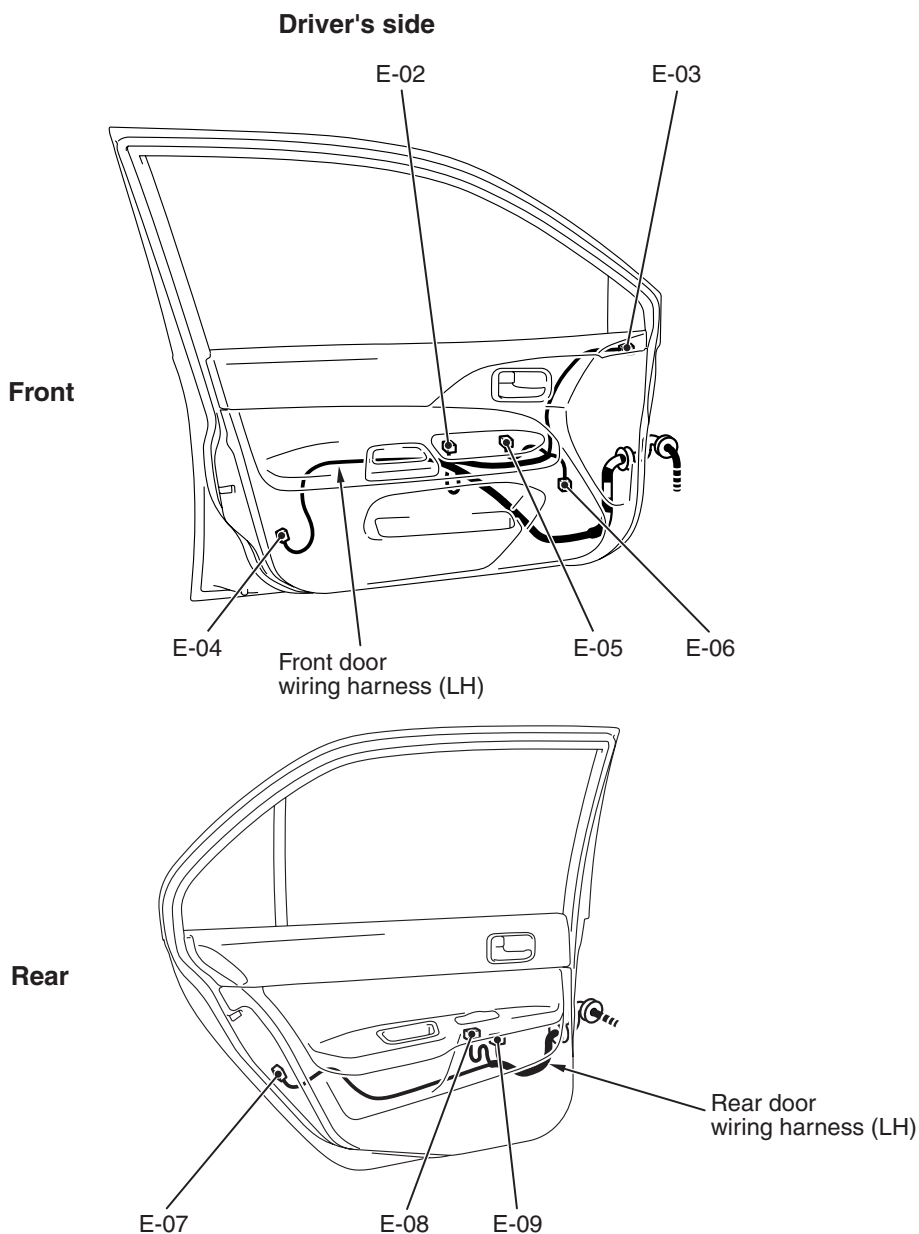Connector
symbol**E**

AC310171 AB

E-02 (6-GR) Power window motor (Front: LH)
 E-03 (7) Remote controlled mirror (LH)
 E-04 (6-B) Door lock actuator (Front: LH)
 E-05 (14) Power window main switch
 E-06 (2) Door speaker (LH)

E-07 (6-B) Door lock actuator (Rear: LH)
 E-08 (8) Power window sub switch (Rear: LH)
 E-09 (6-GR) Power window motor (Rear: LH)
 E-10 (7) Remote controlled mirror (RH)

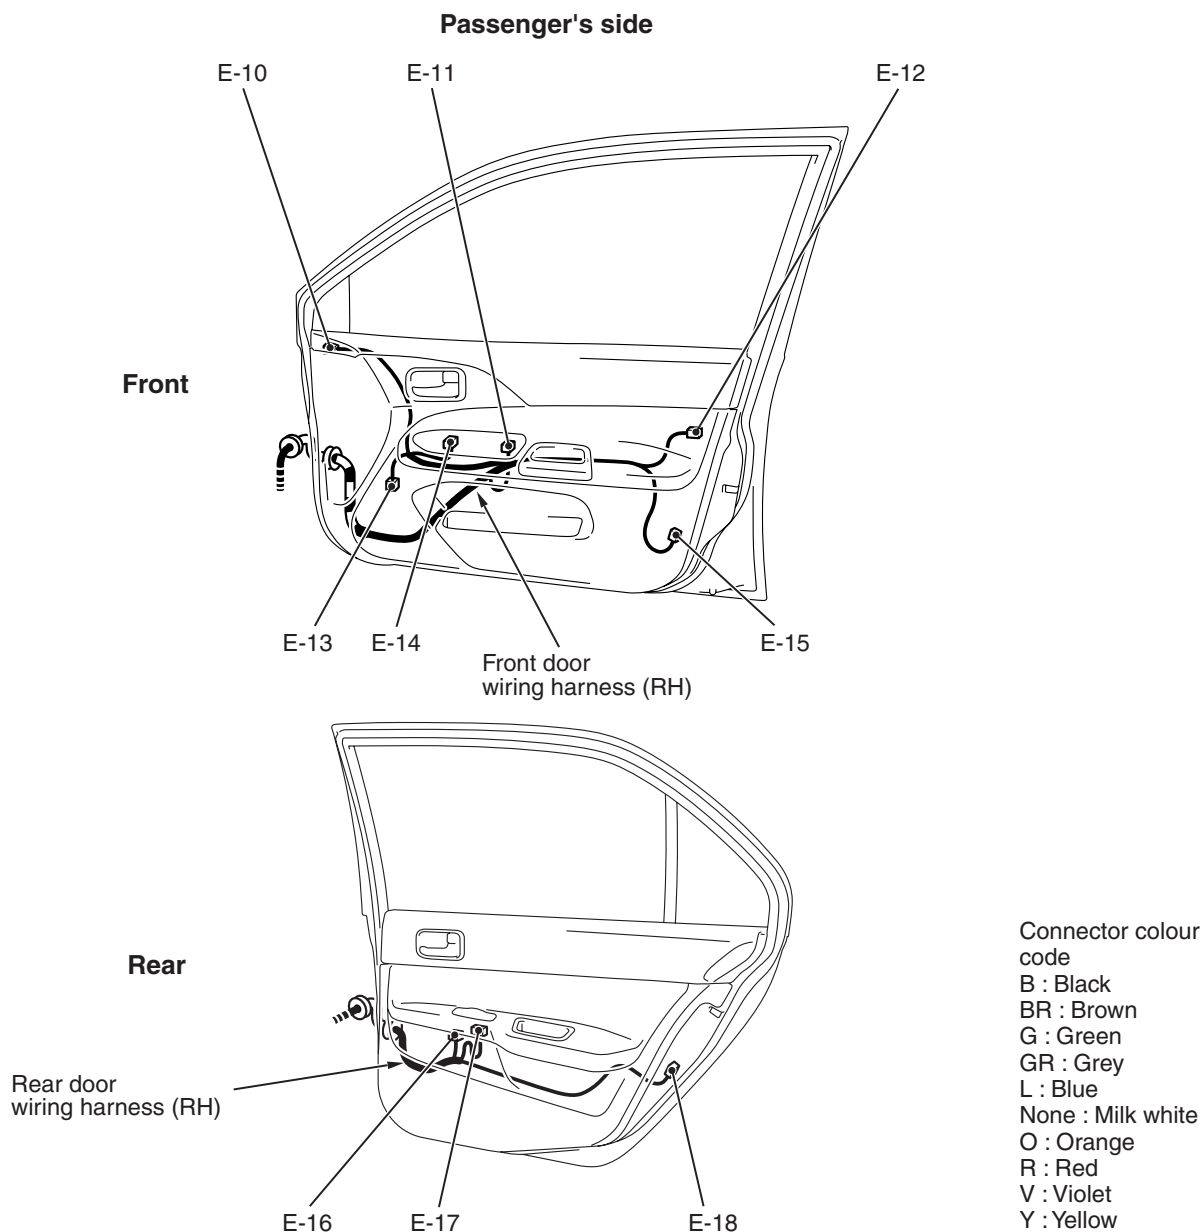


AC208224AC

E-11	(6-GR)	Power window motor (Front: RH)
E-12	(3-B)	Door lock key cylinder switch
E-13	(2)	Door speaker (RH)
E-14	(8)	Power window sub switch (Front)

E-15	(6-B)	Door lock actuator (Front: RH)
E-16	(6-GR)	Power window motor (Rear: RH)
E-17	(8)	Power window sub switch (Rear: RH)
E-18	(6-B)	Door lock actuator (Rear: RH)

DOOR <RH drive vehicles>



M1801001401287

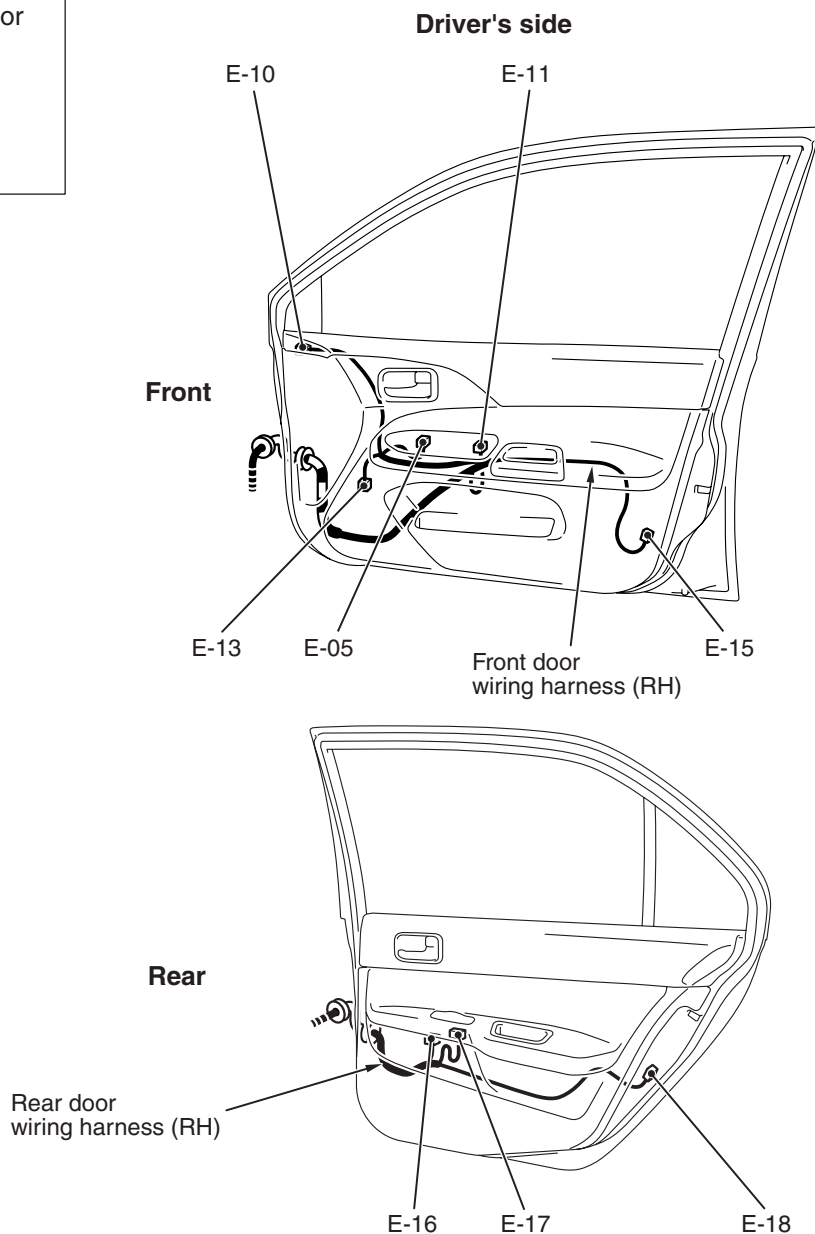Connector
symbol**E**

AC310172AB

E-02 (6-GR) Power window motor (Front: LH)
 E-03 (7) Remote controlled mirror (LH)
 E-04 (6-B) Door lock actuator (Front: LH)
 E-05 (14) Power window main switch
 E-06 (2) Door speaker (LH)

E-07 (6-B) Door lock actuator (Rear: LH)
 E-08 (8) Power window sub switch (Rear: LH)
 E-09 (6-GR) Power window motor (Rear: LH)
 E-10 (7) Remote controlled mirror (RH)

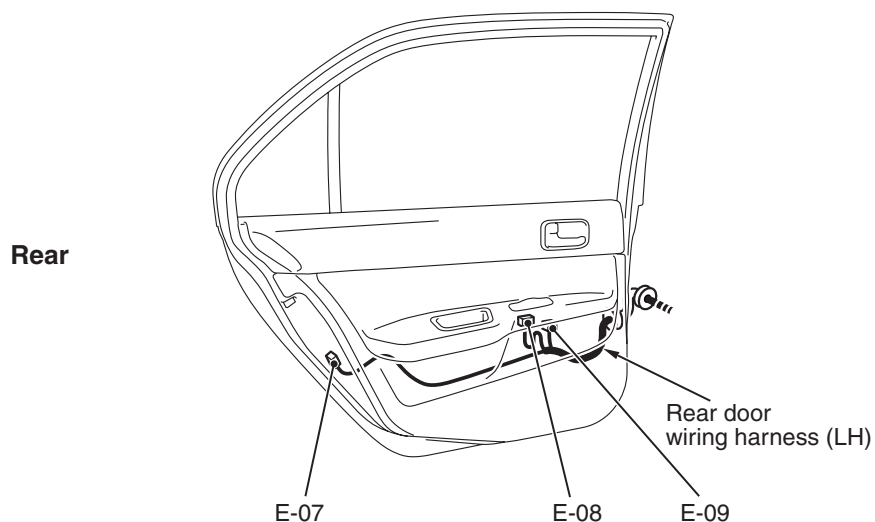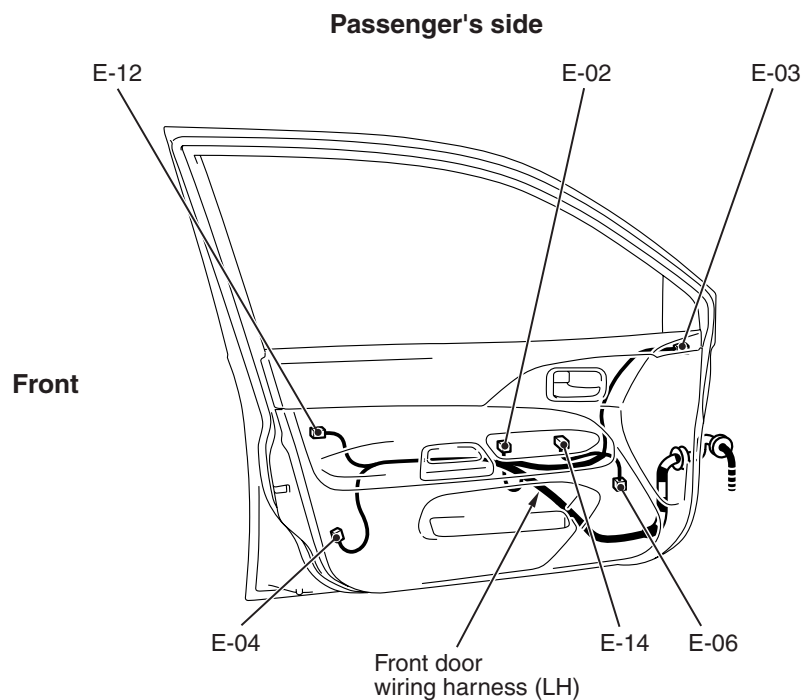

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC310173AD


E-11 (6-GR) Power window motor (Front: RH)
E-12 (3-B) Door lock key cylinder switch
E-13 (2) Door speaker (RH)
E-14 (8) Power window sub switch (Front)

E-15 (6-B) Door lock actuator (Front: RH)
E-16 (6-GR) Power window motor (Rear: RH)
E-17 (8) Power window sub switch (Rear: RH)
E-18 (6-B) Door lock actuator (Rear: RH)

TRUNK (LUGGAGE COMPARTMENT)

TRUNK <LH drive vehicles>

M1801001500560


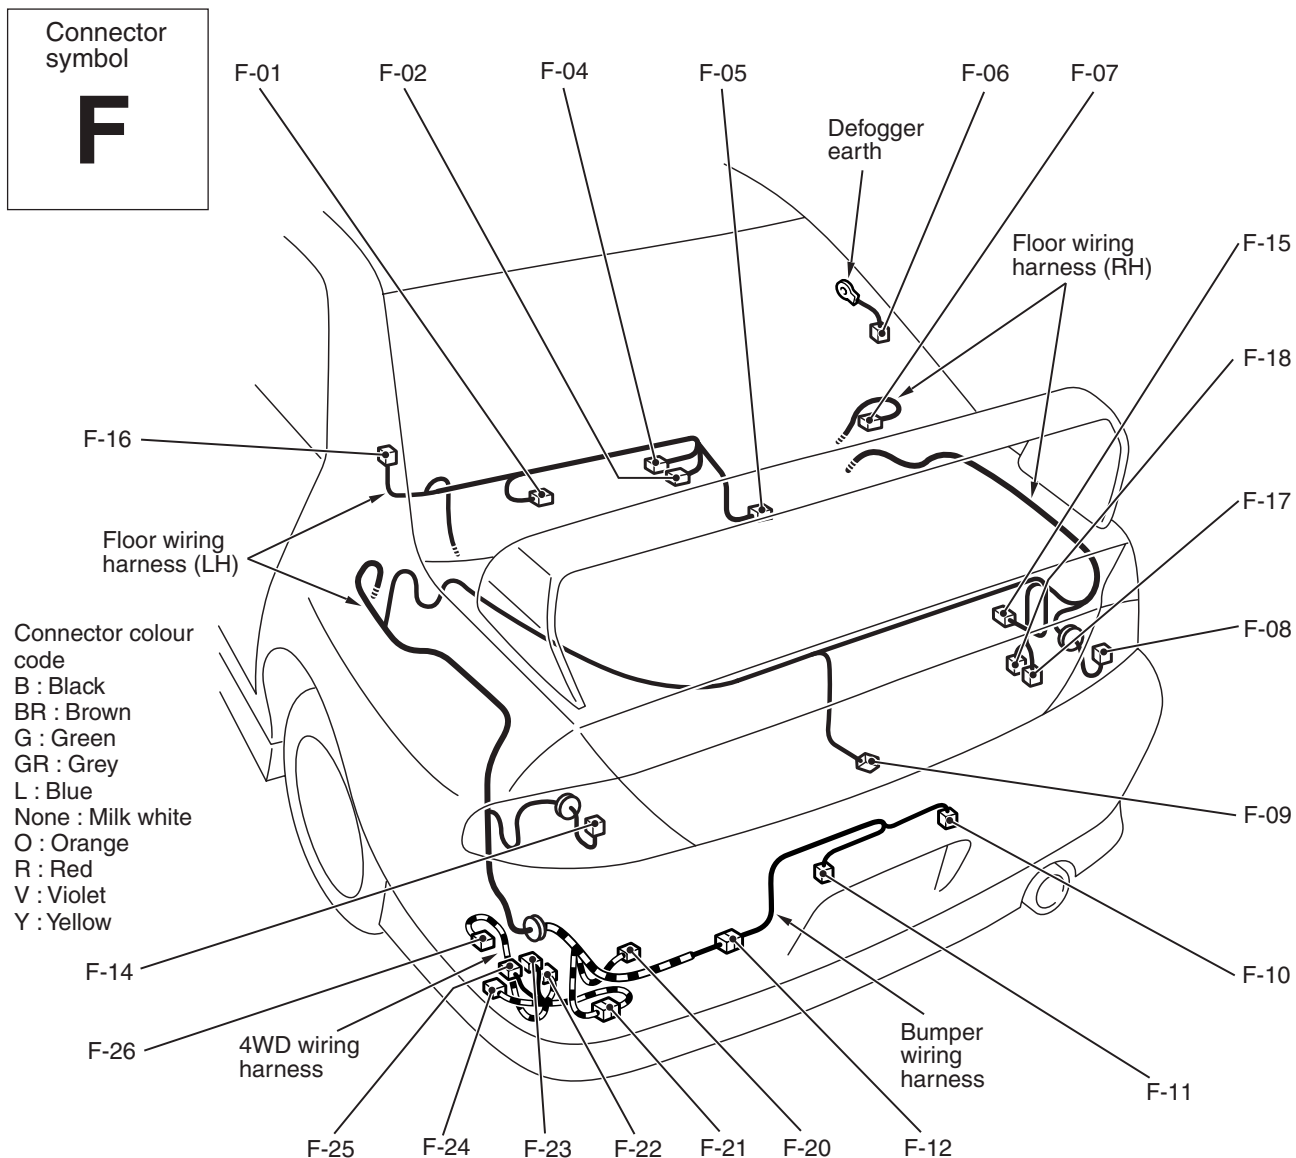


AC310174AB

F-01	(2)	Rear speaker (LH)	F-15	(2)	High mounted stop lamp <rear spoiler>
F-02	(2)	Luggage compartment lamp	F-16	(1)	Defogger (+)
F-04	(2-B)	High mounted stop lamp <rear shelf>	F-17	(2-G)	No connection
F-05	(4)	No connection	F-18	(2)	Windshield washer motor
F-06	(1-B)	Defogger (-)	F-20	(2-B)	Electric pump
F-07	(2)	Rear speaker (RH)	F-21	(8-B)	Floor wiring harness (LH) and 4WD wiring harness combination
F-08	(6-B)	Rear combination lamp (RH)	F-22	(2-B)	Direction valve (LH)
F-09	(1-B)	Luggage compartment lamp switch	F-23	(2-B)	Direction valve (RH)
F-10	(2-GR)	Licence plate lamp (RH)	F-24	(3-B)	Proportioning valve (for ACD control)
F-11	(2-GR)	Licence plate lamp (LH)	F-25	(3-B)	Proportioning valve (for AYC control)
F-12	(2-GR)	Floor wiring harness (LH) and bumper wiring harness combination	F-26	(3-B)	Pressure sensor
F-14	(6-B)	Rear combination lamp (LH)			

TRUNK <RH drive vehicles>

M1801001500571

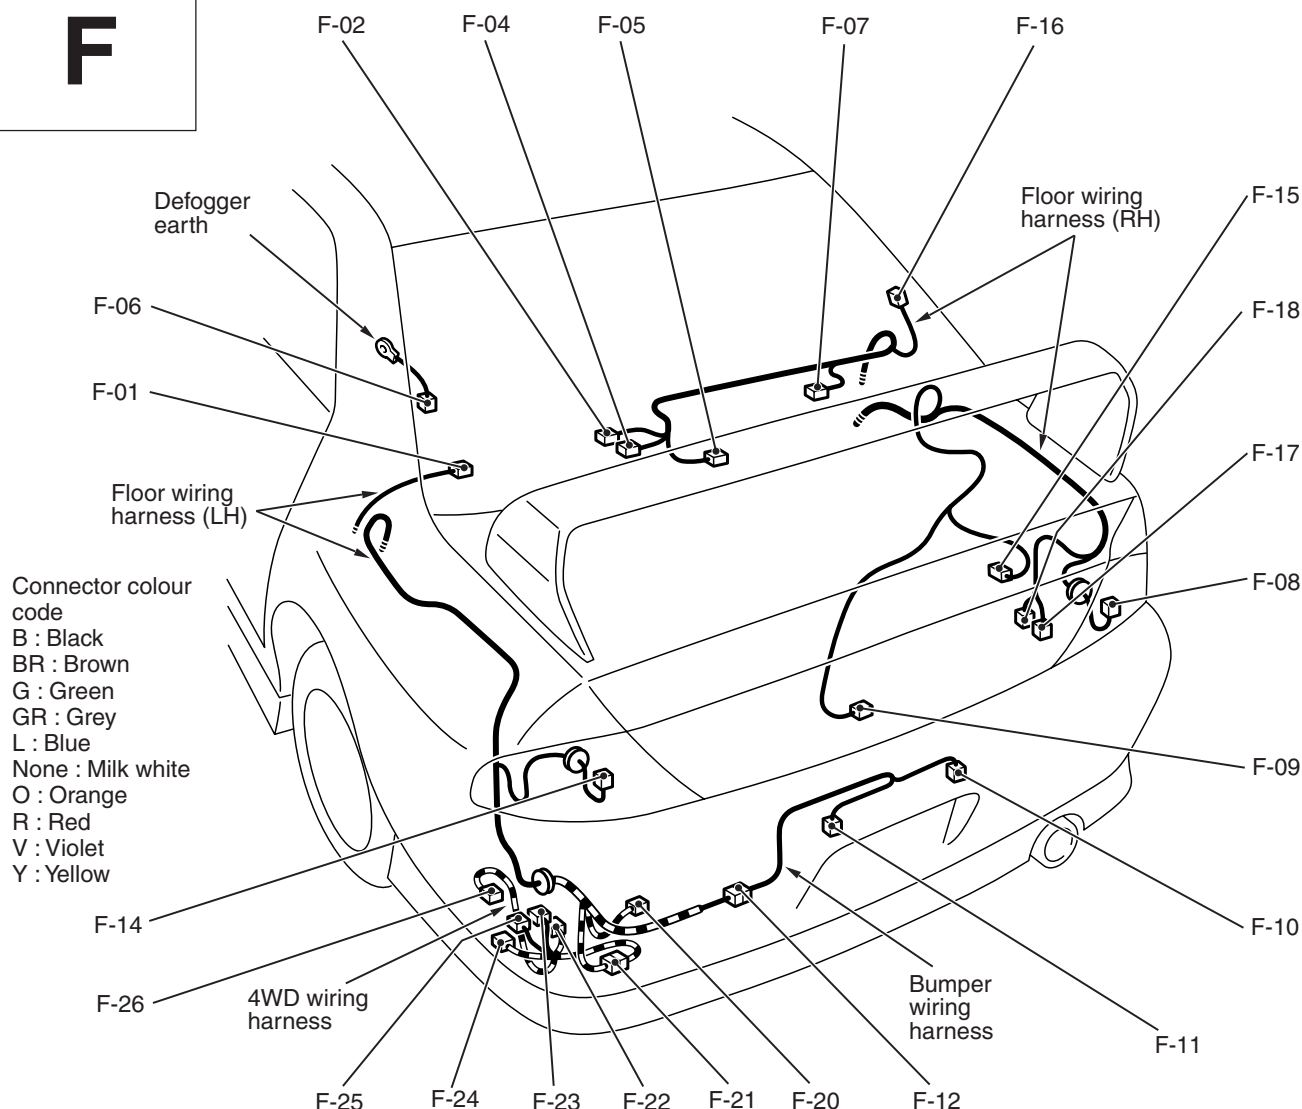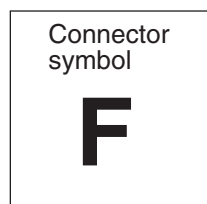

AC310175AB

F-01	(2)	Rear speaker (LH)	F-15	(2)	High mounted stop lamp <rear spoiler>
F-02	(2)	Luggage compartment lamp	F-16	(1)	Defogger (+)
F-04	(2-B)	High mounted stop lamp <rear shelf>	F-17	(2-G)	No connection
F-05	(4)	No connection	F-18	(2)	Windshield washer motor
F-06	(1-B)	Defogger (-)	F-20	(2-B)	Electric pump
F-07	(2)	Rear speaker (RH)	F-21	(8-B)	Floor wiring harness (LH) and 4WD wiring harness combination
F-08	(6-B)	Rear combination lamp (RH)	F-22	(2-B)	Direction valve (LH)
F-09	(1)	Luggage compartment lamp switch	F-23	(2-B)	Direction valve (RH)
F-10	(2-GR)	Licence plate lamp (RH)	F-24	(3-B)	Proportioning valve (for ACD control)
F-11	(2-GR)	Licence plate lamp (LH)	F-25	(3-B)	Proportioning valve (for AYC control)
F-12	(2-GR)	Floor wiring harness (LH) and bumper wiring harness combination	F-26	(3-B)	Pressure sensor
F-14	(6-B)	Rear combination lamp (LH)			

NOTES