

GROUP 52A

INTERIOR

CONTENTS

SPECIAL TOOL	52A-2	HEADLINING	52A-17
		REMOVAL AND INSTALLATION	52A-17
INSTRUMENT PANEL ASSEMBLY*	52A-2	INSIDE REAR VIEW MIRROR	52A-18
REMOVAL AND INSTALLATION	52A-2		
DISASSEMBLY AND REASSEMBLY	52A-6	FRONT SEAT ASSEMBLY	52A-18
		REMOVAL AND INSTALLATION	52A-18
FRONT FLOOR CONSOLE ASSEMBLY	52A-7	DISASSEMBLY AND REASSEMBLY	52A-19
REMOVAL AND INSTALLATION	52A-7		
REAR FLOOR CONSOLE ASSEMBLY	52A-8	REAR SEAT ASSEMBLY	52A-20
REMOVAL AND INSTALLATION	52A-8	REMOVAL AND INSTALLATION	52A-20
DISASSEMBLY AND REASSEMBLY	52A-8	DISASSEMBLY AND REASSEMBLY	52A-21
TRIMS	52A-10	FRONT SEAT BELT	52A-22
REMOVAL AND INSTALLATION	52A-10	REMOVAL AND INSTALLATION	52A-22
		REAR SEAT BELT	52A-23
DOOR TRIM	52A-12	REMOVAL AND INSTALLATION	52A-23
REMOVAL AND INSTALLATION	52A-12		

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING


- *Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).*
- *Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.*
- *MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B - Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.*

NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring, and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).

SPECIAL TOOL

M1521000600349

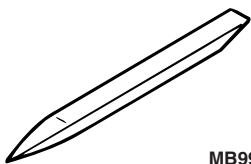Tool	Number	Name	Use
 MB990784	MB990784	Ornament remover	Removal of switch, trim, etc.

INSTRUMENT PANEL ASSEMBLY

REMOVAL AND INSTALLATION

M1521001701018

The following bolts and screws are used for installing the instrument panel. Bolts and screws are indicated as marks shown in the illustration in the sections of "Removal and Installation" and "Disassembly and Reassembly."

Name	Symbol	Size (D × L) mm	Colour	Shape
Tapping screw	a	5 × 16	Black	 ACX01282
	b	5 × 16	-	
	c	5 × 16	Green	
	d	5 × 12	-	 ACX01283
Bolt with washer	e	6 × 12	-	 ACX02229
	f	5 × 20	-	 AC005505


D: Thread diameter L: Effective thread length

CAUTION

- Refer to GROUP 52B, SRS Service Precautions [P.52B-3](#) and Driver's, Passenger's (front) Air Bag Module and Clock Spring [P.52B-110](#) before removing the passenger's (front) air bag module.
- Do not subject the SRS-ECU to any shocks when removing or installing the instrument panel.

Pre-removal and Post-installation Operation

- Removal and Installation of Front Pillar Trim (Refer to [P.52A-10](#)).
- Hood Opener Lever (Refer to GROUP 42, Hood [P.42-4](#)).

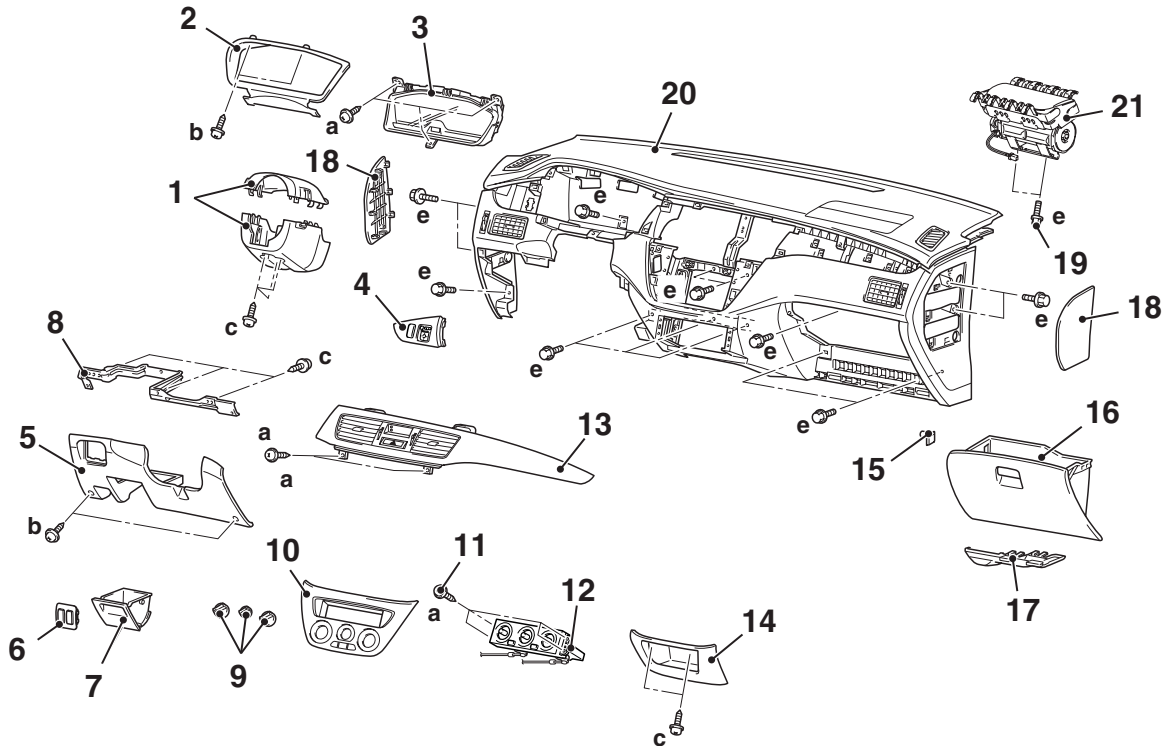

AC309832 AC

Removal steps


1. Column cover
2. Meter bezel
3. Combination meter
4. Instrument panel ornament
5. Under cover
6. Switch panel
7. Side box
8. Lower frame
9. Heater control knob
10. Centre panel
11. Heater control assembly mounting screw
12. Heater control assembly
13. Centre air outlet panel

Removal steps (Continued)


14. Centre lower case
15. Stopper
16. Glove box
17. Harness cover
18. Instrument panel side cover
19. SRS passenger's (front) air bag module mounting bolt
 - Steering column shaft mounting bolt (Refer to GROUP 37, Steering Column Shaft [P.37-15](#)).
20. Instrument panel assembly
21. SRS passenger's (front) air bag module

<<A>>


CLIP AND CLAW POSITION

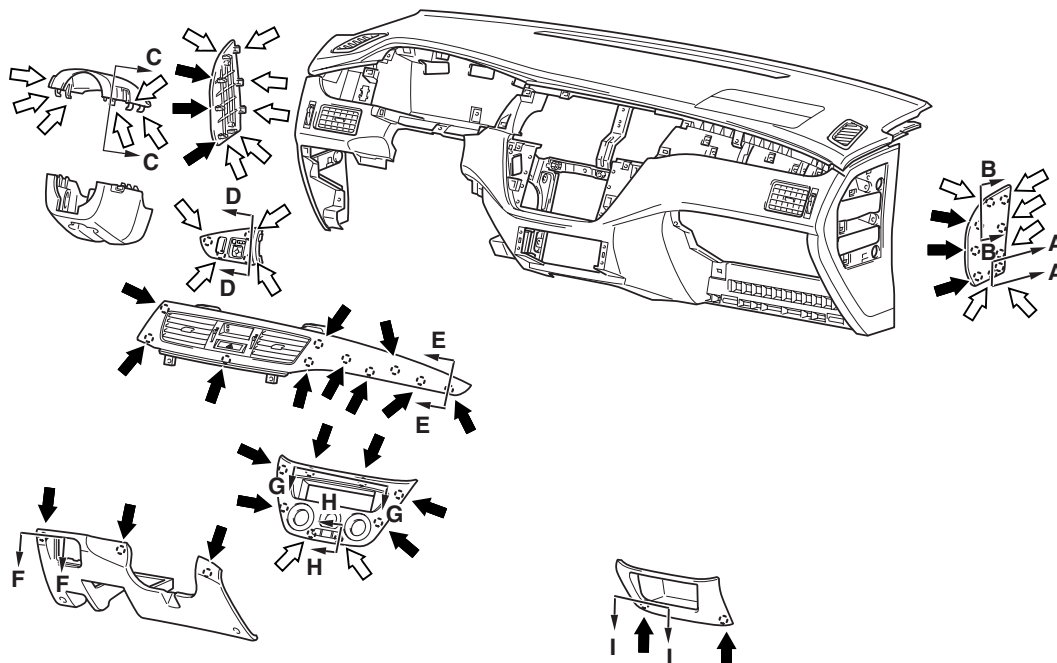


Section A – A

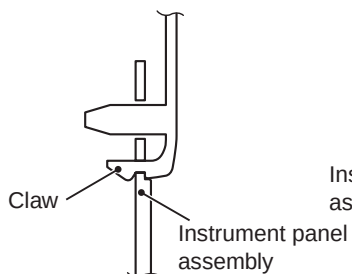


Section B – B

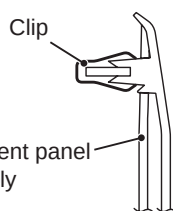


Section C – C

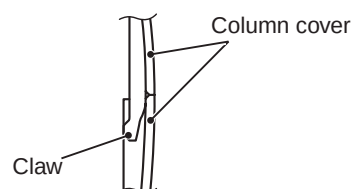


Section D – D

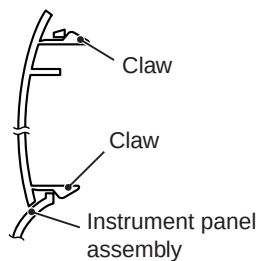


Section E – E

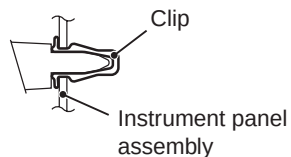


Section F – F

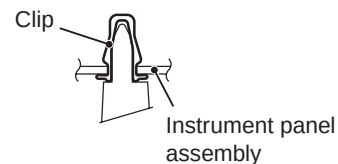


Section G – G

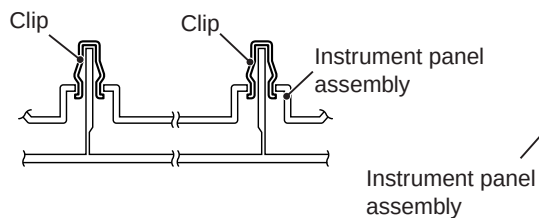

Section H – H

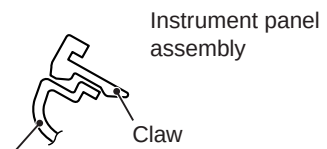

Section I – I

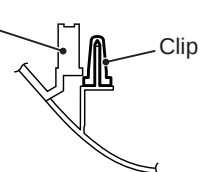


REMOVAL SERVICE POINT

<<A>> SRS PASSENGER'S (FRONT) AIR BAG MODULE REMOVAL

CAUTION


- Do not damage the claws of the hinge when removing the passenger's (front) air bag module.
- Store the removed passenger's (front) air bag module with the deployed side facing upward, in a clean and dry place.

Insert the flat-tipped screwdriver into the position shown in the illustration and pull up the screwdriver to disengage the claws for removal of the passenger's (front) air bag module.

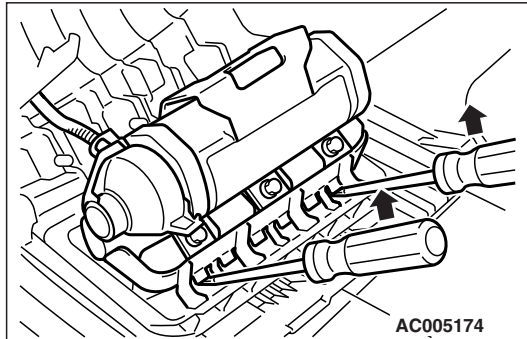

DISASSEMBLY AND REASSEMBLY

M1521001900622

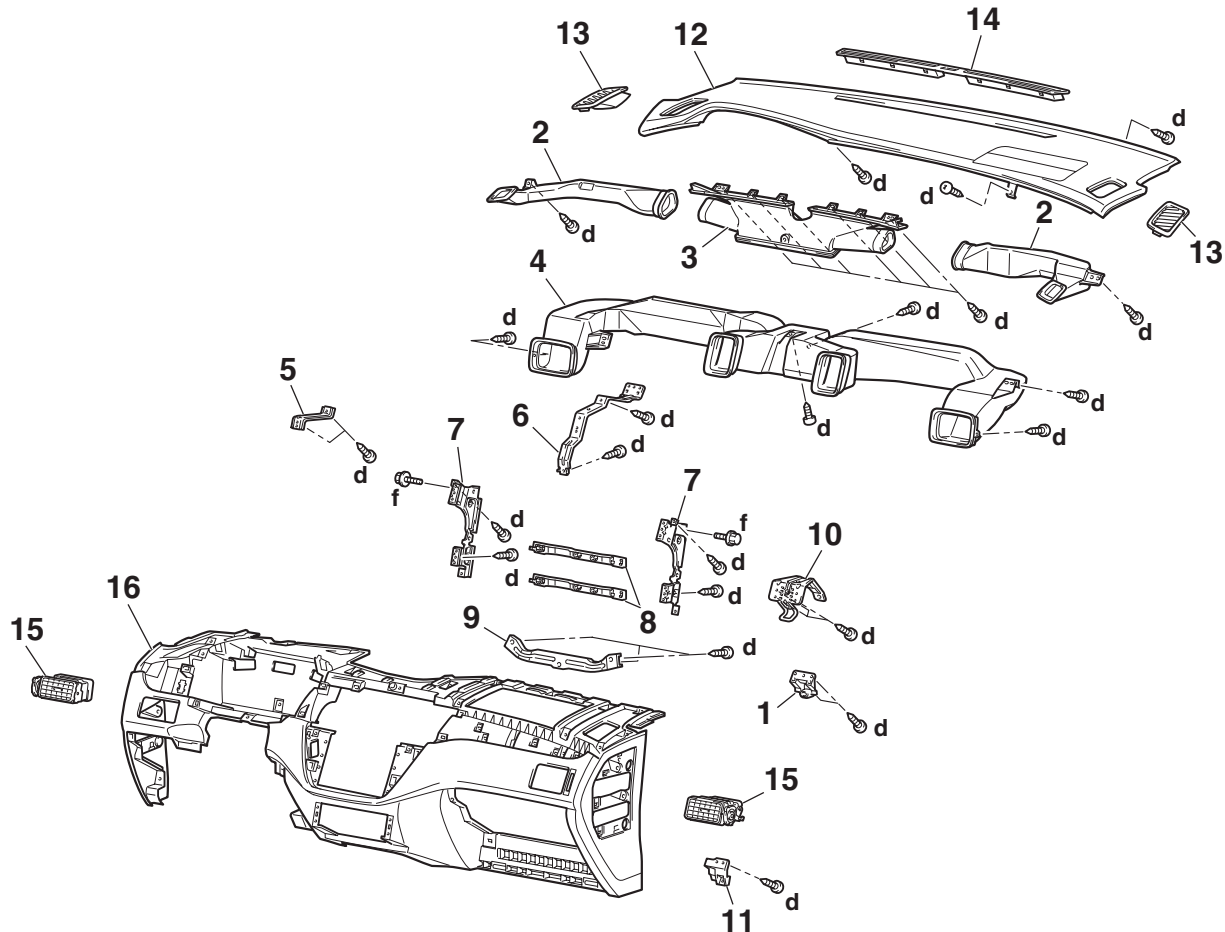

AC005175AG

Disassembly steps

1. Instrument panel upper support
2. Side defroster duct
3. Centre defroster duct
4. Distribution duct
5. Driver side upper bracket
6. Centre upper reinforcement
7. Instrument panel centre reinforcement
8. Bridge reinforcement

Disassembly steps (Continued)

9. Centre lower reinforcement
10. Glove box striker
11. Glove box cover
12. Instrument panel pad
13. Side demister
14. Defroster garnish
15. Side air outlet assembly
16. Instrument panel


FRONT FLOOR CONSOLE ASSEMBLY

REMOVAL AND INSTALLATION

M1521005200164

Pre-removal and Post-installation Operation

- Removal and Installation of Rear Floor Console (Refer to P.52A-8).

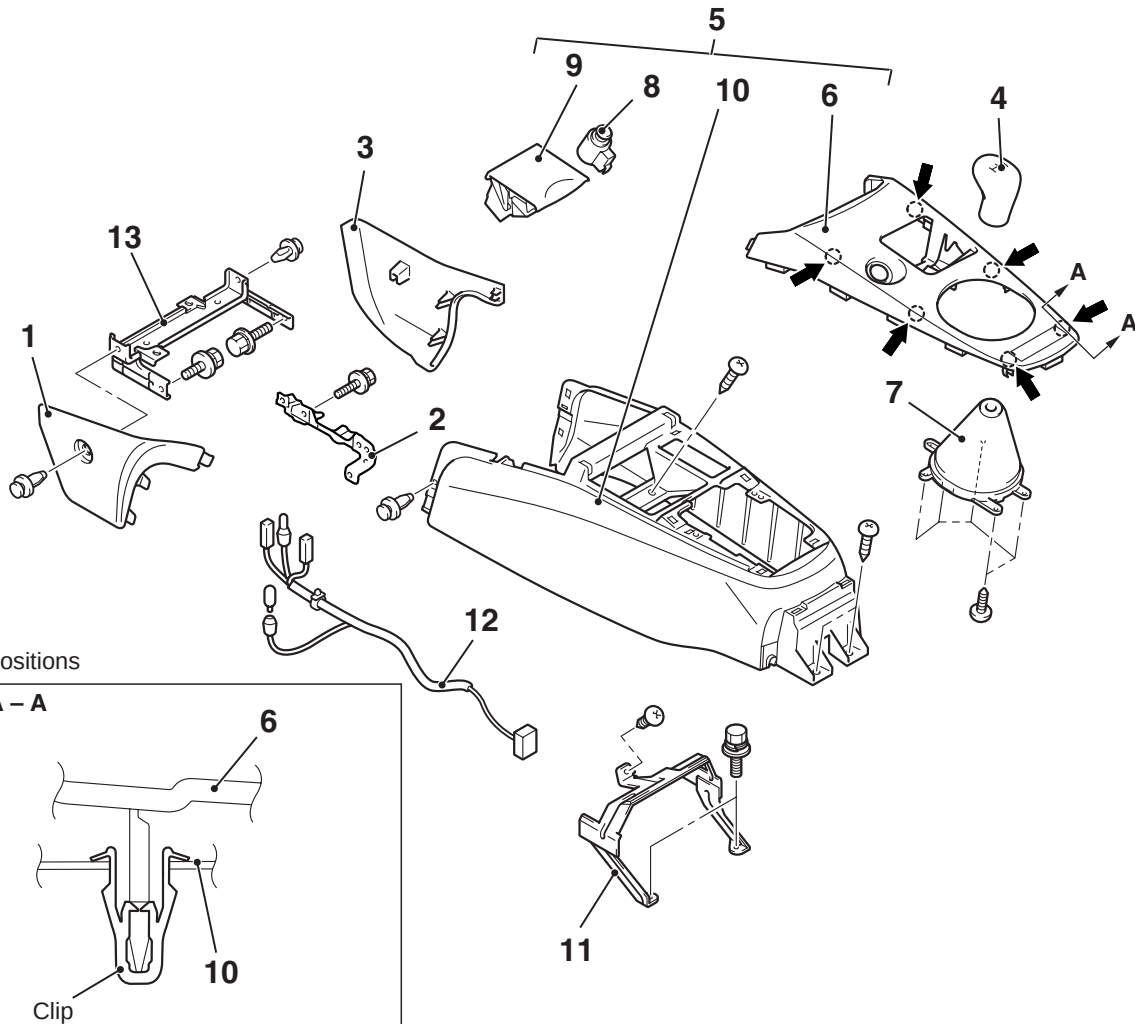

AC504404 AB

Removal steps

- Console side cover (LH)
- Console side cover bracket <R.H. drive vehicles>
- Console side cover (RH) <L.H. drive vehicles>
- Shift lever knob
- Front floor console assembly
- Front floor console panel


Removal steps (Continued)

- Shift lever cover
- Cigarette lighter
- Ashtray
- Front floor console
- Front floor console bracket
- Harness
- Console side cover bracket <L.H. drive vehicles>

REAR FLOOR CONSOLE ASSEMBLY

REMOVAL AND INSTALLATION

M1521005700084

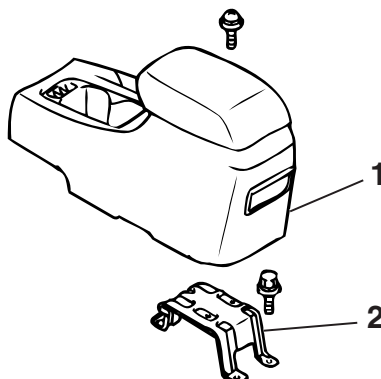

AC211586AB

Removal steps


1. Rear console assembly
- Rear seat cushion assembly (refer to [P.52A-20](#)).
- Front scuff plate (refer to [P.52A-10](#)).
- Rear scuff plate (refer to [P.52A-10](#)).

Removal steps (Continued)

- Lower centre pillar trim (refer to [P.52A-10](#)).
- Floor carpet
- 2. Rear console bracket

DISASSEMBLY AND REASSEMBLY

M1521005900118

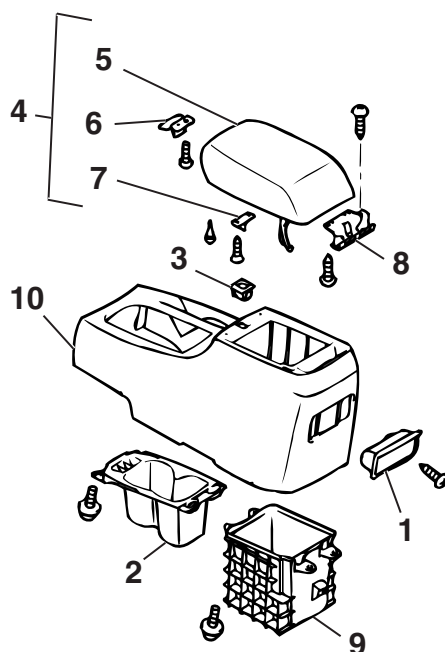

AC211588AB

Disassembly steps


1. Ashtray
2. Cup holder
3. Hole lock
4. Console lid assembly
5. Console lid

Disassembly steps (Continued)

6. Upper lid lock
7. Lower lid striker
8. Hinge bracket
9. Box
10. Rear floor console

DISASSEMBLY SERVICE POINT
<<A>> CONSOLE LID ASSEMBLY
REMOVAL


Insert the special tool ornament remover (MB990784) into the hinges of the console lid assembly and the rear floor console through the ashtray mounting hole to pry for removal.

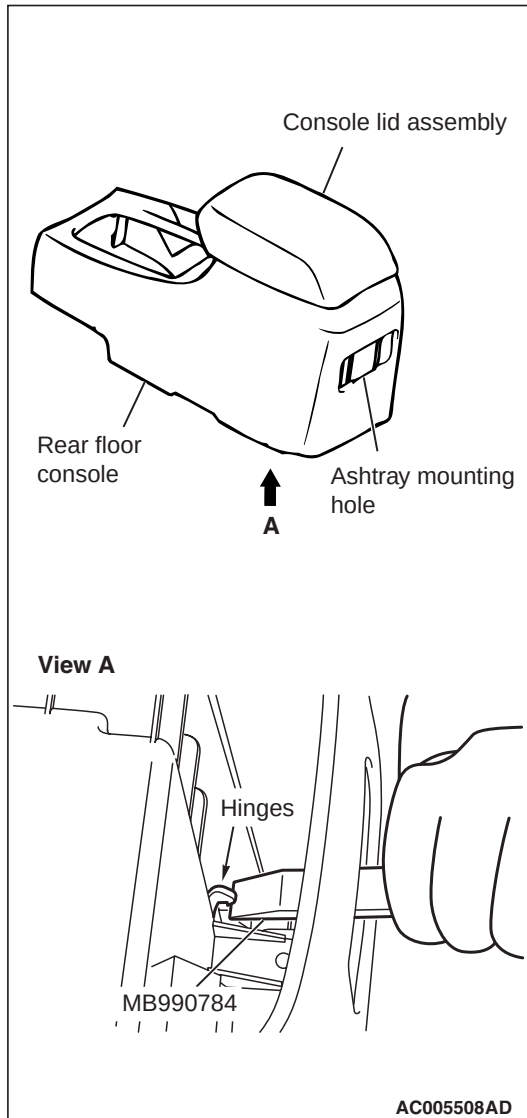

TRIMS

REMOVAL AND INSTALLATION

M1521001100499

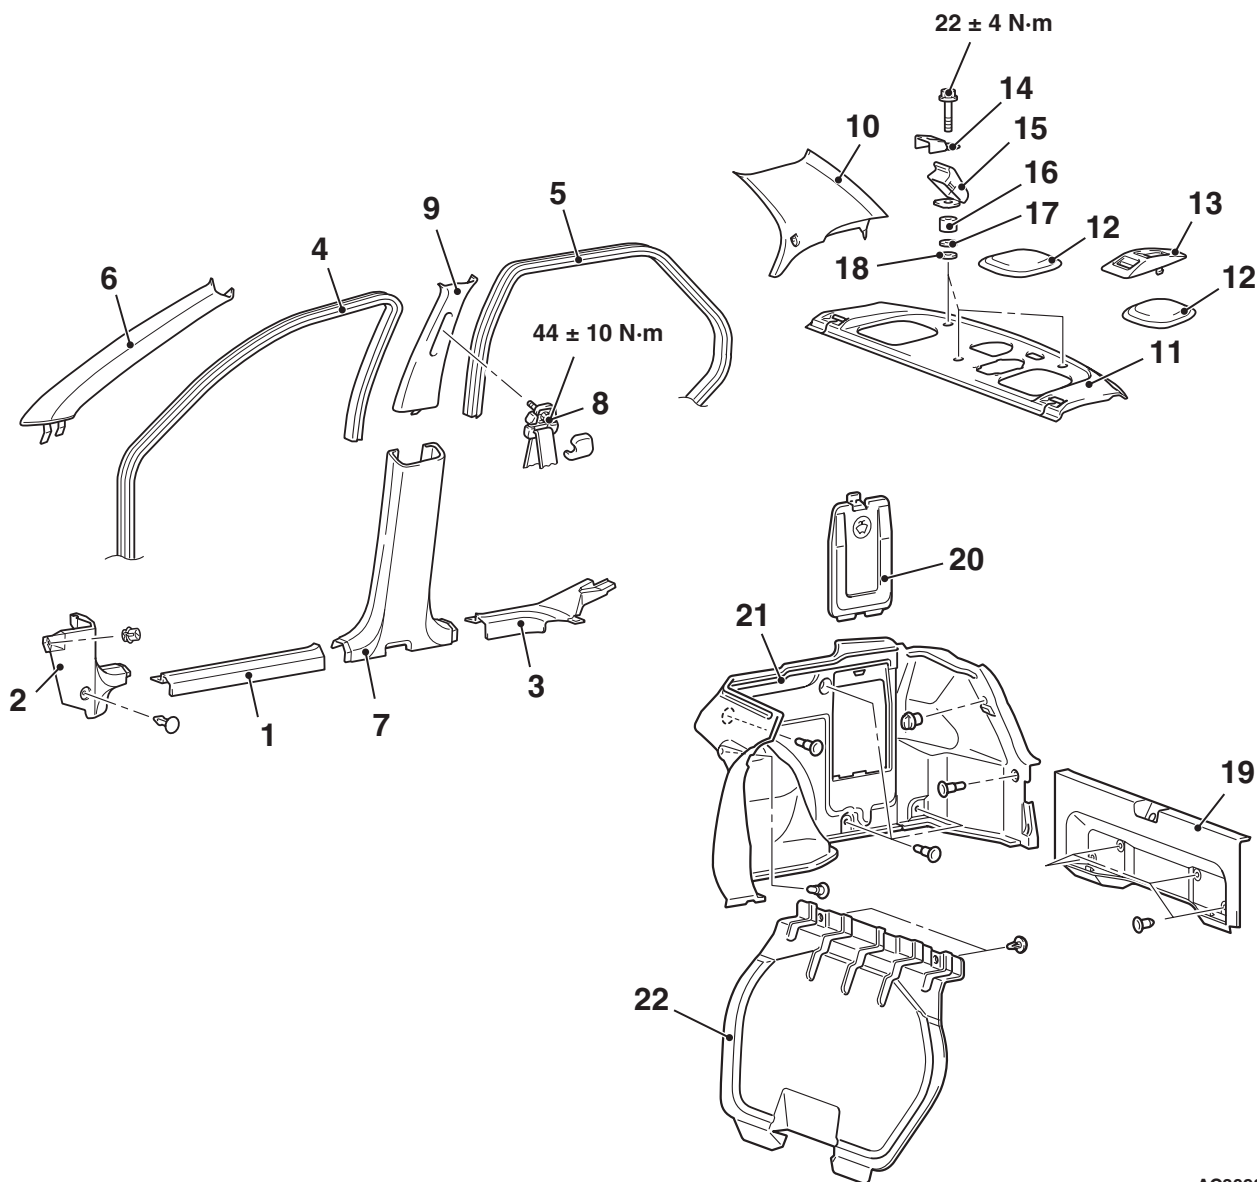


AC309857AB

<<A>>

- | | |
|-------------------------------|------------------------------|
| 1. Front scuff plate | 12. Speaker garnish |
| 2. Cowl side trim | 13. Retractor cover |
| 3. Rear scuff plate | 14. Child restraint fitting |
| 4. Front door opening trim | 15. Cover |
| 5. Rear door opening trim | 16. Spacer |
| 6. Front pillar trim | 17. Plain washer |
| 7. Lower centre pillar trim | 18. Fiber washer |
| 8. Front seat belt connection | 19. Rear end trim |
| 9. Upper centre pillar trim | 20. Trunk room side trim lid |
| 10. Rear pillar trim | 21. Trunk room side trim |
| 11. Rear shelf trim | 22. Trunk room front trim |


CLIP POSITION

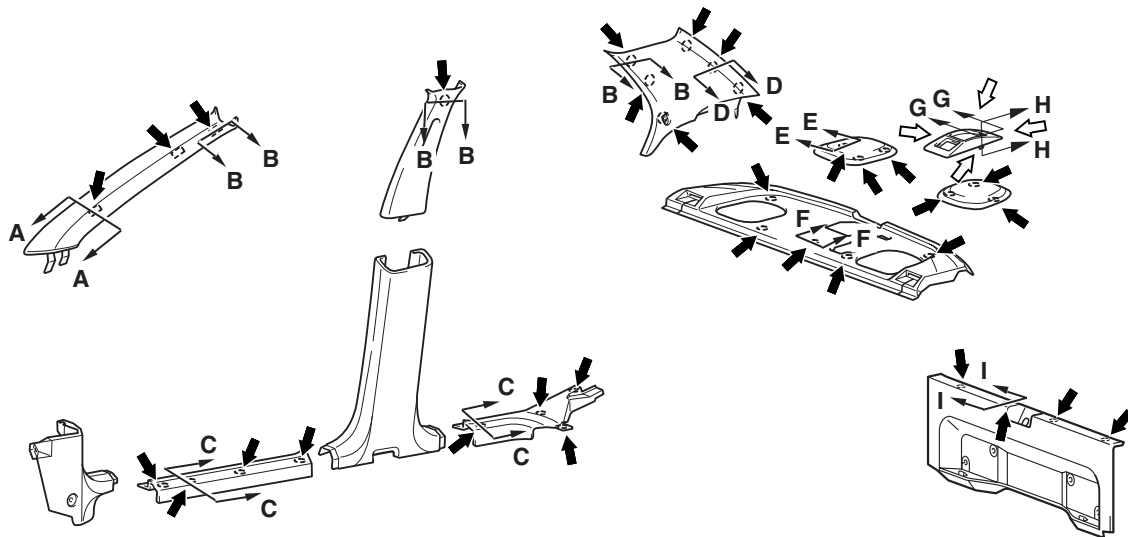


Note

- ➡ : Clip positions
- ↔ : Claw positions


Section A – A

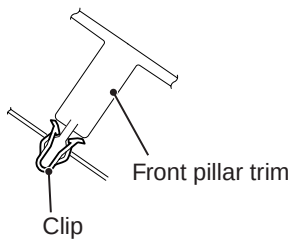


Section D – D

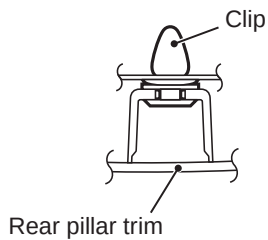


Section G – G

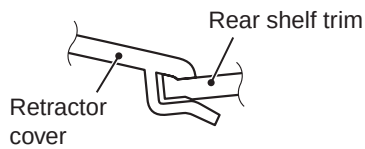


Section B – B

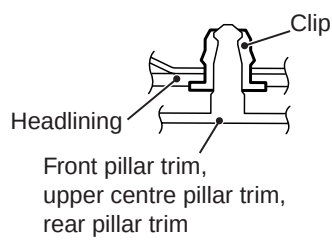


Section E – E

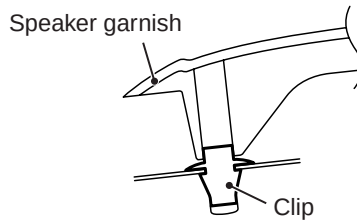


Section H – H

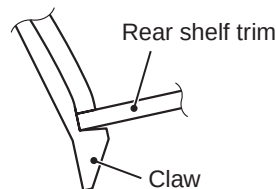


Section C – C

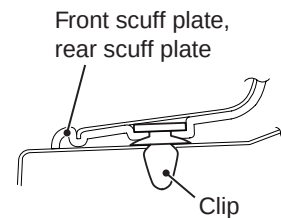

Section F – F

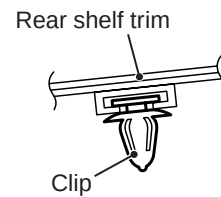


Section I – I

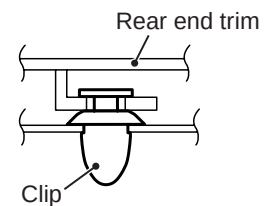

REMOVAL SERVICE POINT

<<A>> FRONT PILLAR TRIM REMOVAL

Release the clip by pulling in the direction shown in the illustration and remove the front pillar trim.

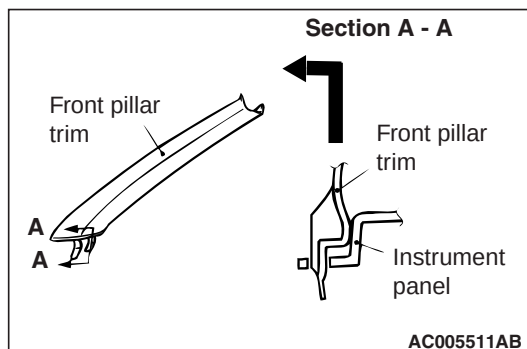


DOOR TRIM

REMOVAL AND INSTALLATION

M1521006400213

<Front door trim>

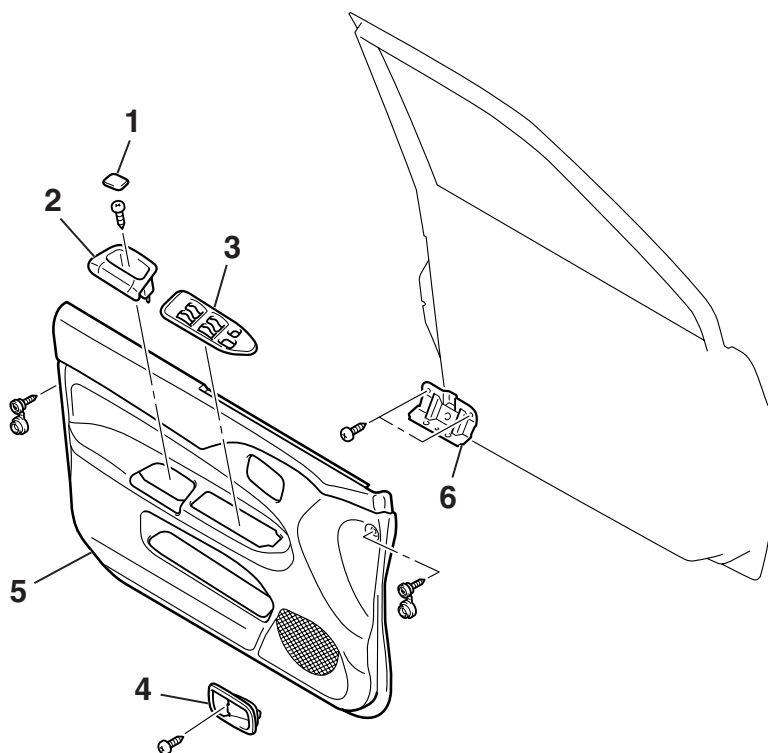

AC210022AB

Removal steps


1. Cap
2. Pull handle box
3. Power window switch panel assembly

<<A>>

Removal steps (Continued)

4. Door inside handle cover
5. Front door trim
6. Front door pull handle bracket

<Rear door trim>

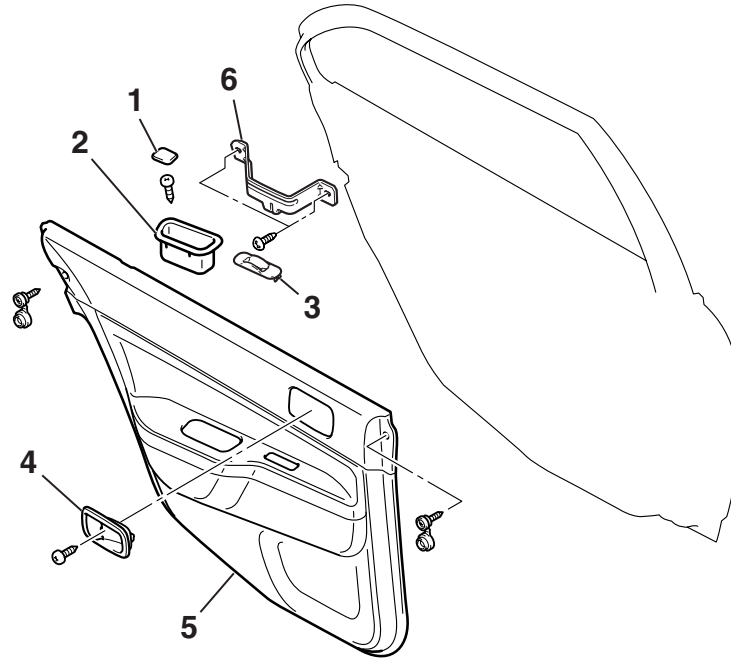

AC210019AB

Removal steps

1. Cap
2. Pull handle box
3. Power window switch panel assembly


<<A>>

Removal steps (Continued)


4. Door inside handle cover
5. Rear door trim
6. Rear door pull handle bracket

CLIP AND CLAW POSITIONS


<Front door trim>

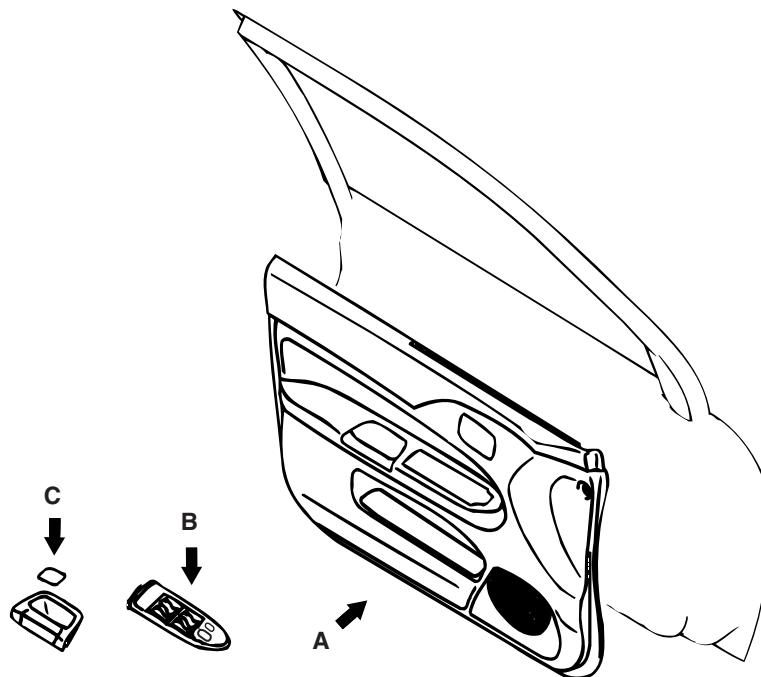


View A

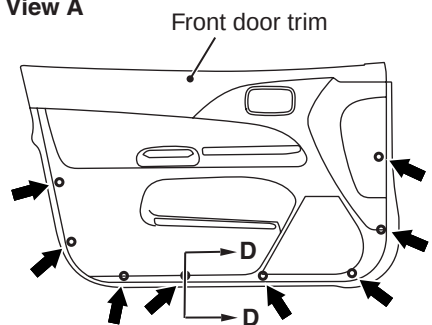


Section D - D

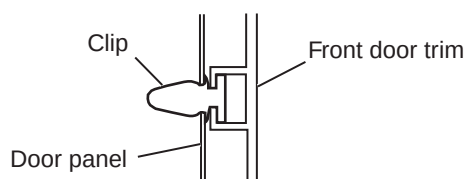


Section F - F

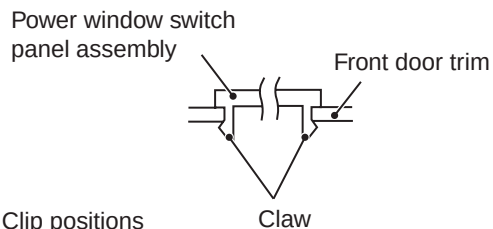


View B

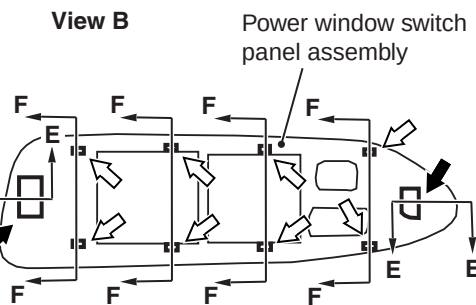


Section E - E

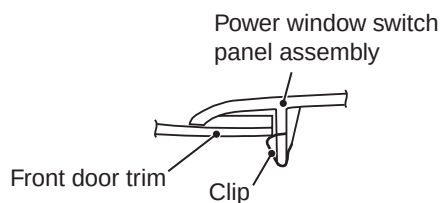

Section G - G

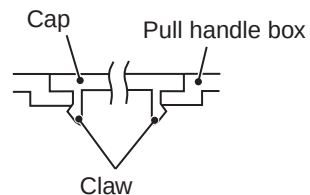


View C

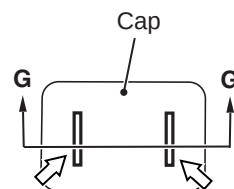


Note

- (1) : Clip positions
 (2) : Claw positions


<Rear door trim>

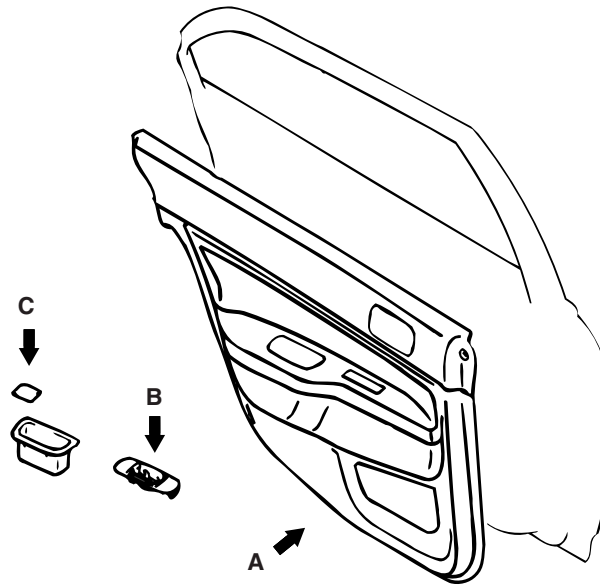


View A

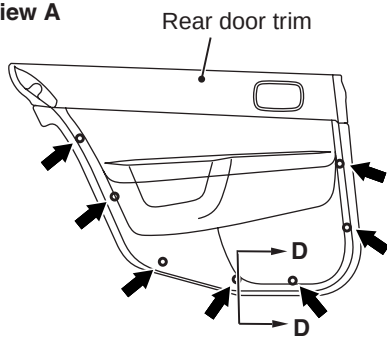


View B

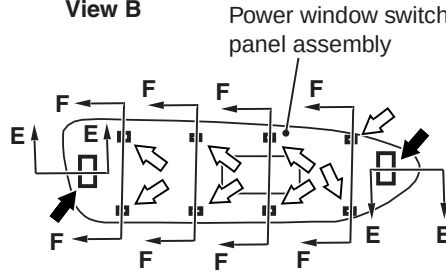


View C

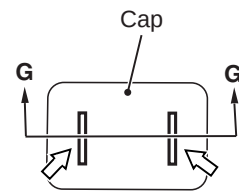


Section D - D

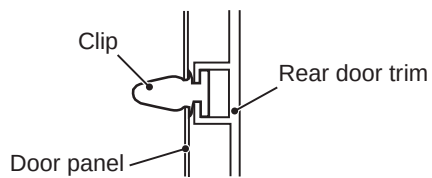


Section E - E

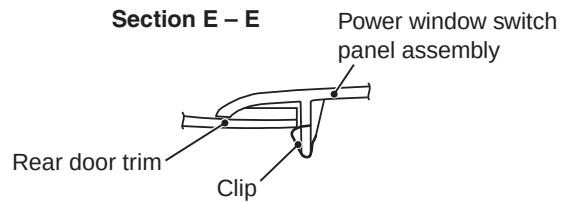

Section F - F

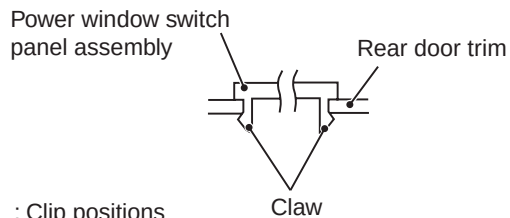


Section G - G

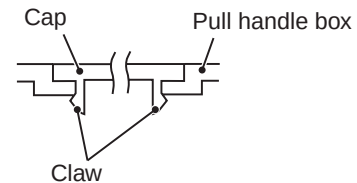


Note

- (1) : Clip positions
(2) : Claw positions

REMOVAL SERVICE POINT
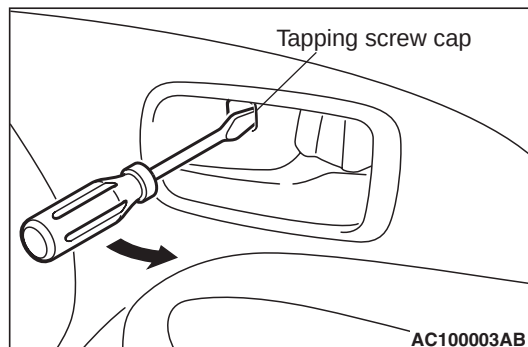
<<A>> DOOR INSIDE HANDLE COVER
REMOVAL

1. Insert a flat-tipped screwdriver into the rear end of the tapping screw cap on the door inside handle cover, and pry out the cap in the direction shown. Then remove the tapping screw.

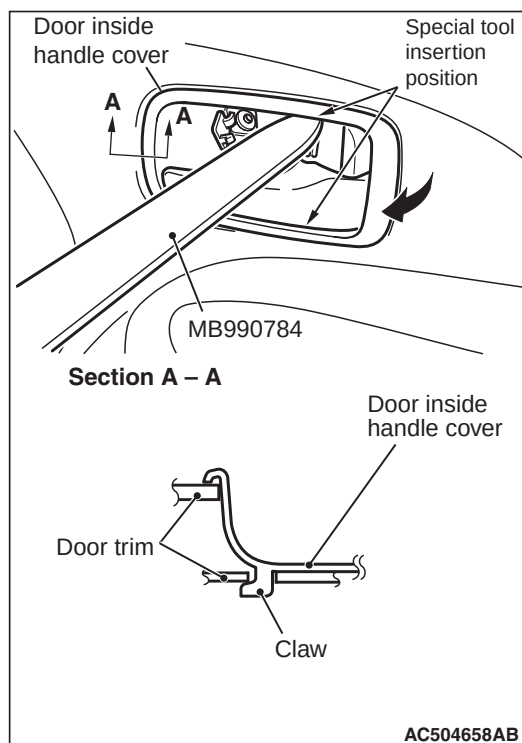

2. Insert special tool ornament remover (MB990784) into the clearance between the door inside handle cover and the door inside handle, and disengage the claws of the door inside handle.
3. Insert special tool ornament remover (MB990784) into the rear end of the inside handle cover, and pry out the cover in the direction shown. Then remove the door inside handle cover.


HEADLINING

REMOVAL AND INSTALLATION

M1521001400393

Pre-removal and Post-installation Operation

Front Pillar Trim, Centre Pillar Trim Upper, Rear pillar Trim Removal and Installation (Refer to [P.52A-10](#)).

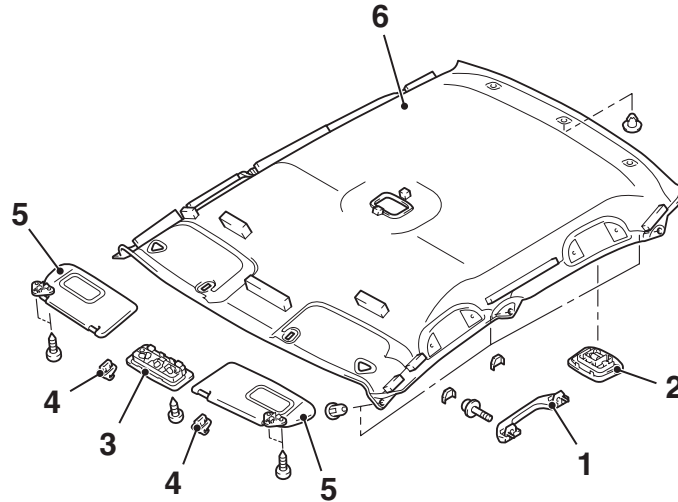

AC304633 AB

Removal steps

1. Assist grip
2. Room lamp assembly
3. Front room lamp

<<A>>


Removal steps (Continued)

4. Sunvisor holder
5. Sunvisor assembly
 - Front floor console assembly (Refer to [P.52A-7](#)).
6. Headlining

<>

REMOVAL SERVICE POINTS

<<A>> SUNVISOR HOLDER REMOVAL

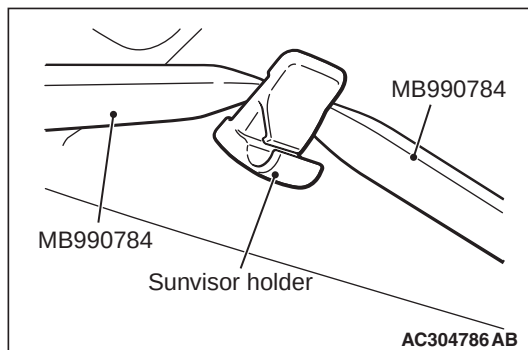

Insert the special tool ornament remover (MB990784) into the claws of the sunvisor holder to remove the hinges.


<> HEADLINING REMOVAL

Bend the headlining to removal from the front passenger's door.

INSIDE REAR VIEW MIRROR

M1521002600260

REMOVAL SERVICE POINT

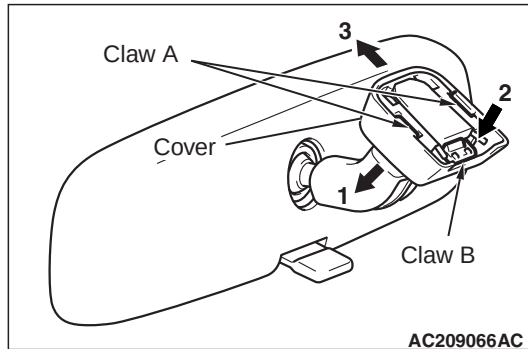


1. Disengage claw A and lower the cover in the arrow 1 direction.
2. Push claw B in the arrow 2 direction to unlock, and pull out the mirror in the arrow 3 direction.

FRONT SEAT ASSEMBLY

REMOVAL AND INSTALLATION

M1522001300429

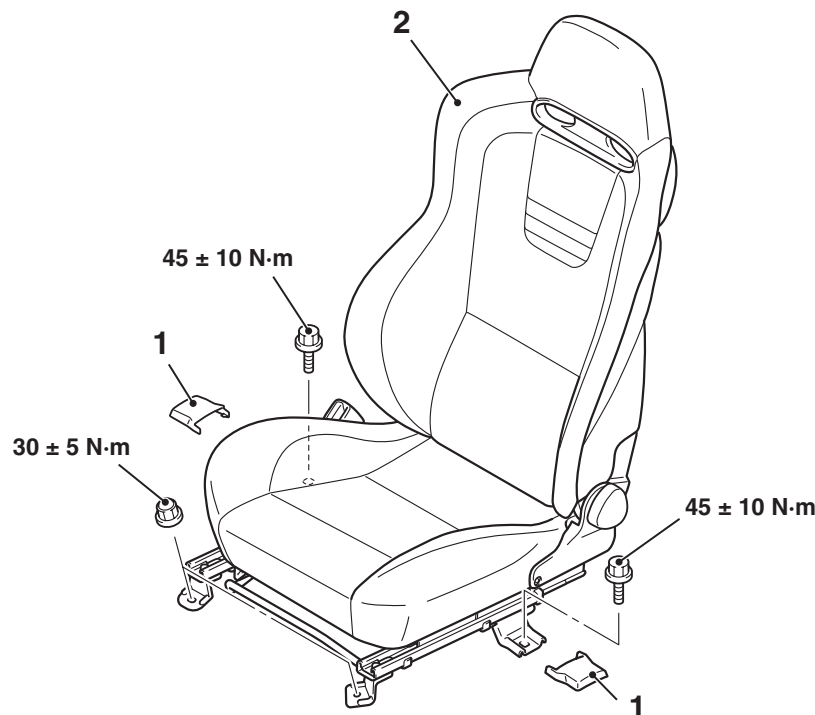


AC310714AB

Removal steps

1. Front seat anchor cover
 2. Front seat assembly
- >>A<<

INSTALLATION SERVICE POINT

>>A<< FRONT SEAT ASSEMBLY INSTALLATION

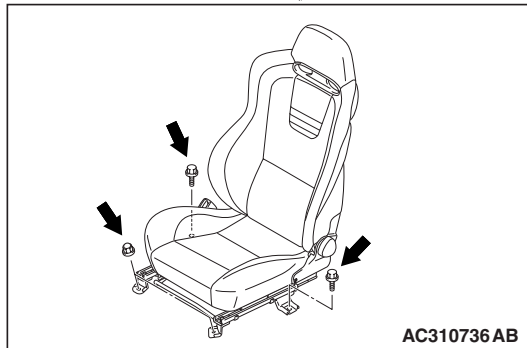


Temporarily tighten the nuts and bolts in all mounting locations shown in the illustration with no load applied to the front seat cushion, and check the operation of the seat slide.

2. Tighten the nuts and bolts in all mounting locations to the specified torque.

DISASSEMBLY AND REASSEMBLY

M1522001500519

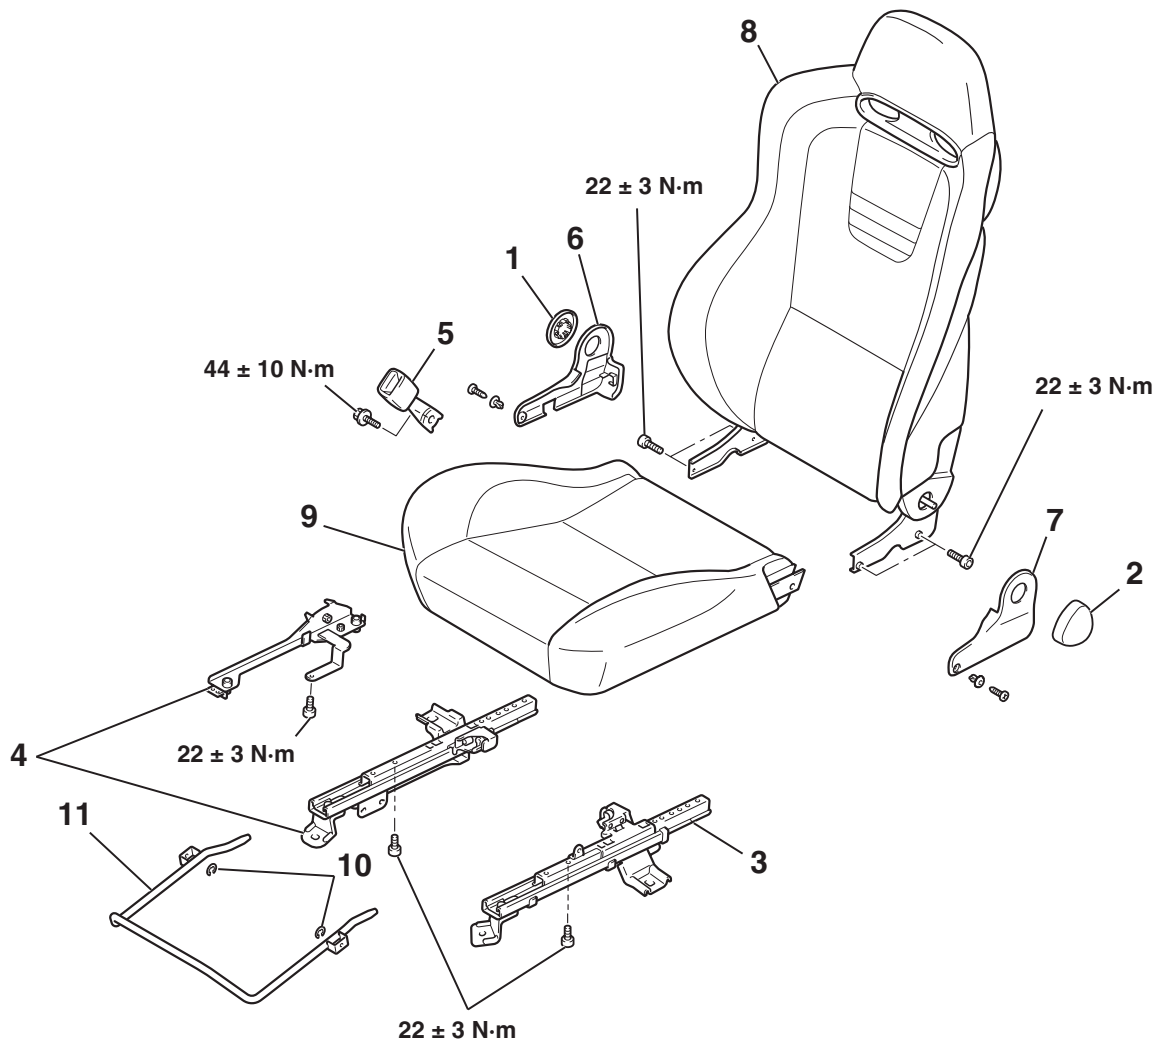

AC310735AB

Disassembly steps


1. Cap
2. Reclining adjuster knob
3. Slide adjuster outer
4. Slide adjuster inner
5. Inner seat belt
6. Cushion shield inner

Disassembly steps (Continued)

7. Cushion shield outer
8. Seatback assembly
9. Seat cushion assembly
10. Snap ring
11. Slide adjuster lever

REAR SEAT ASSEMBLY**REMOVAL AND INSTALLATION**

M1522001800338

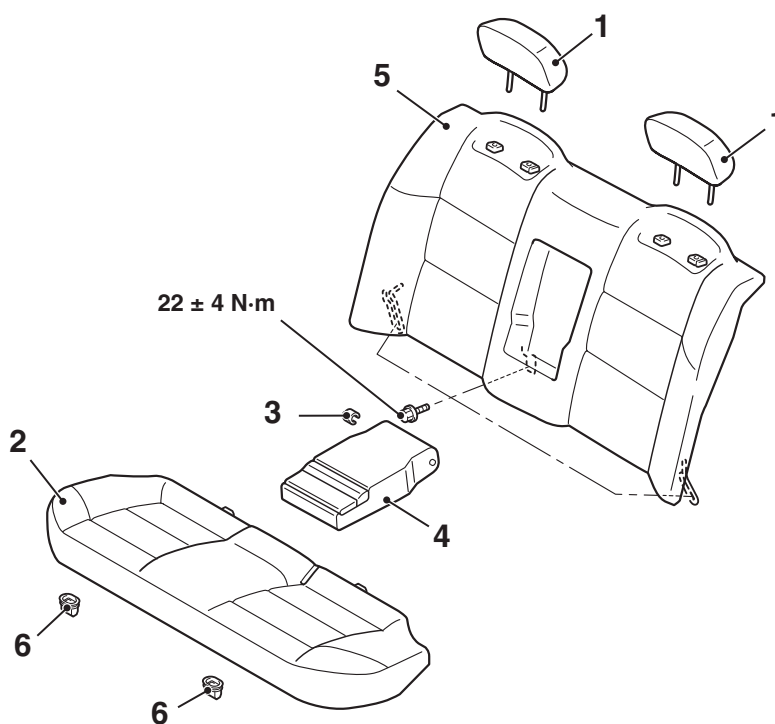

AC310031AB

1. Headrestraint

Removal steps


- >>B<<
2. Rear seat cushion assembly
 3. Armrest spacer

Removal steps (Continued)

- >>A<<
4. Armrest
 5. Rear seatback assembly
 6. Rear seat hook


INSTALLATION SERVICE POINTS

>>A<< INSTALLATION OF REAR SEAT-BACK ASSEMBLY

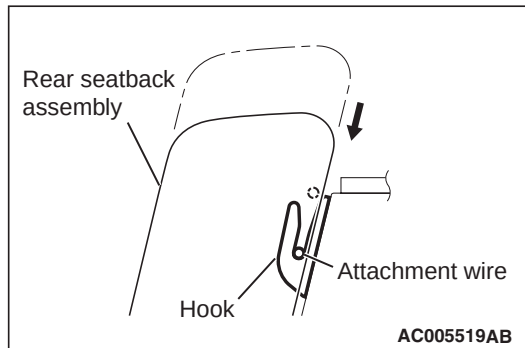

Press the rear seatback assembly in the direction shown in the illustration and fit the attachment wire into the hook securely to install the rear seatback assembly.


>>B<< INSTALLATION OF REAR SEAT CUSHION ASSEMBLY

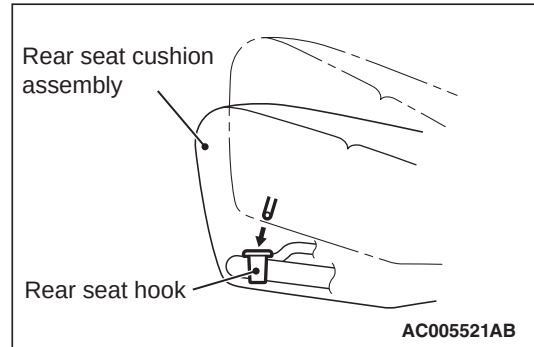

Fit the rear seat cushion into the rear seat hook securely.

DISASSEMBLY AND REASSEMBLY

M1522002000380

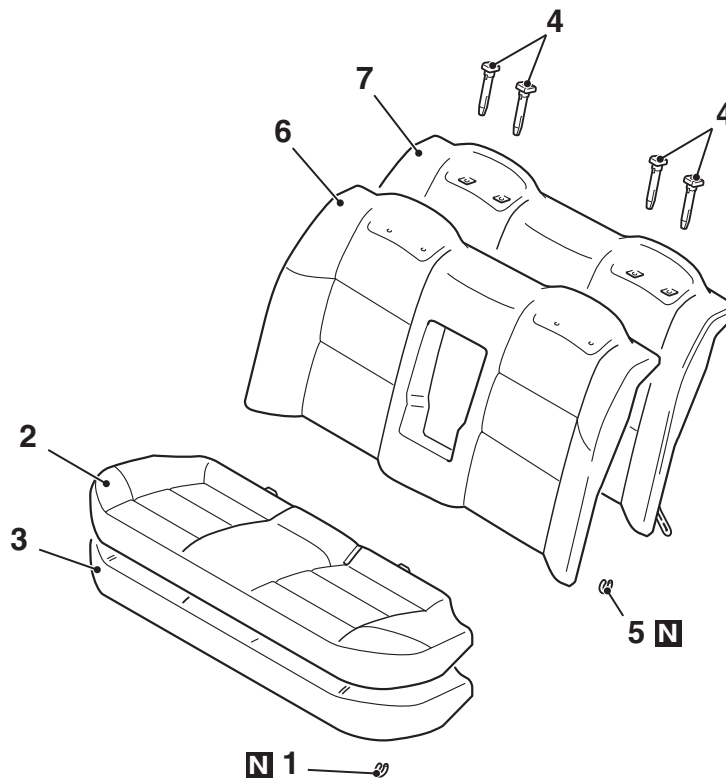

Disassembly steps

1. Hog ring
2. Rear seat cushion cover
3. Rear seat cushion pad
4. Headrest guide

Disassembly steps (Continued)

5. Hog ring
6. Rear seatback cover
7. Rear seatback pad

AC310045AB

FRONT SEAT BELT

REMOVAL AND INSTALLATION


M1523001300400

CAUTION

SRS: Before removing and installing the seat belts with pre-tensioner, refer to GROUP 52B, Seat Belts with Pre-tensioner [P.52B-120](#).

Pre-removal and Post-installation Operation

- Turn the ignition key to the LOOK (OFF) position.
- Disconnect the negative battery terminal.

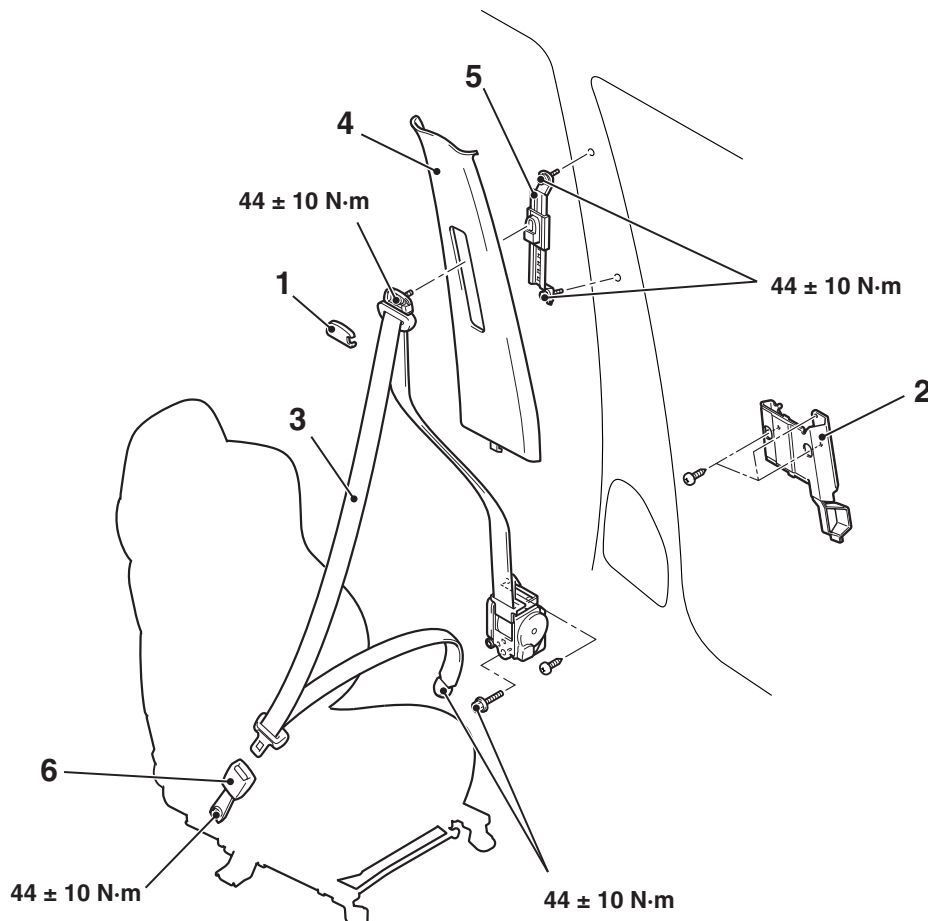

AC310727 AB

Outer seat belt removal steps

1. Sash guide cover
 - Lower centre pillar trim (refer to [P.52A-10](#)).
2. Bracket
3. Outer seat belt (refer to GROUP 52B, Seat Belts with Pre-tensioner [P.52B-120](#)).

Outer seat belt removal steps

4. Upper centre pillar trim (Refer to [P.52A-10](#)).
 5. Adjustable seat belt anchor
- #### Inner seat belt removal steps
- Shield cover (refer to [P.52A-19](#)).
 6. Inner seat belt

- Rear shelf trim (refer to P.52A-10).
- 1. Centre seat belt, inner
- 2. Inner seat belt
- 3. Centre seat belt, outer
- 4. Outer seat belt

NOTES