

2007-2008 ELECTRICAL**Fuse/Relay Boxes - TL****CONNECTOR TO FUSE/ RELAY BOX INDEX****UNDER-HOOD FUSE/ RELAY BOX****UNDER-HOOD FUSE / RELAY BOX REFERENCE**

Socket	Ref	Terminal	Connects to
A/C compressor clutch relay	16	4	
A/C condenser fan relay	2	4	
A (ELD unit)	13	3	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
B	5		Not used
Blower motor relay	15	4	
C	6	2	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
D	12	9	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
E	7	16	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
F	8	20	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
G	14	2	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
H	9	14	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
J	10	5	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
K	11	10	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
Radiator fan relay	1	4	
Rear window defogger relay	17	4	
T101	4		Starter cable (see <u>CONNECTOR TO HARNESS INDEX</u>)
T102	3		Engine wire harness • A/T (see <u>ENGINE WIRE HARNESS (A/T)</u>) • M/T (see <u>ENGINE WIRE HARNESS (M/T)</u>)

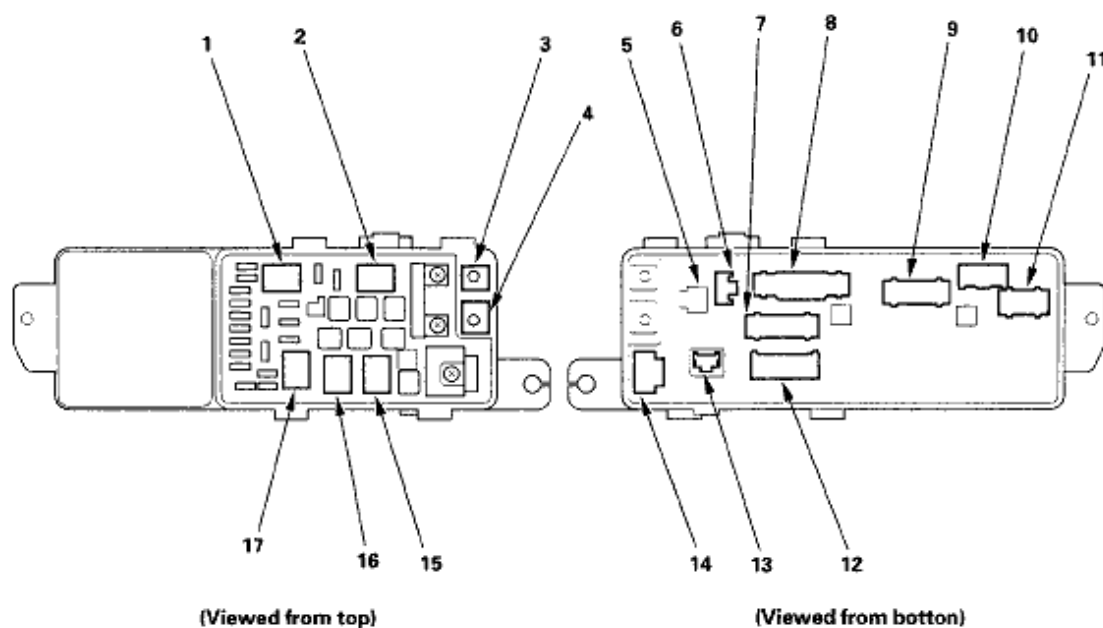


Fig. 1: Identifying Under-Hood Fuse/ Relay Box Terminals
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

UNDER-HOOD MULTI-RELAY BOX

UNDER-HOOD MULTI-RELAY BOX REFERENCE

Socket	Ref	Terminal	Connects to
Daytime running lights relay	1	4	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (RIGHT BRANCH)</u>)
Fan control relay	2	5	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (RIGHT BRANCH)</u>)

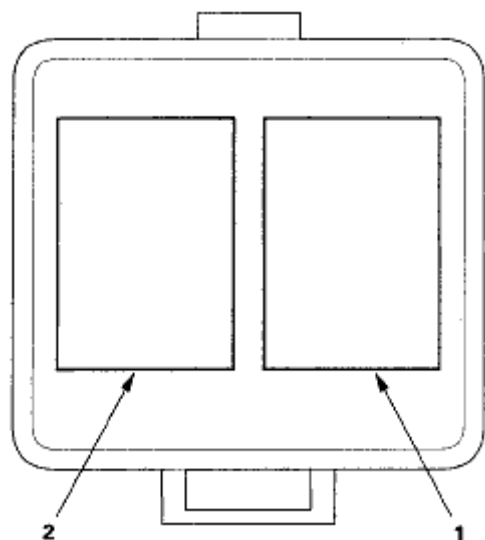


Fig. 2: Identifying Under-Hood Multi-Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

UNDER-DASH FUSE/ RELAY BOX

UNDER-DASH FUSE / RELAY BOX REFERENCE

Socket	Ref	Terminal	Connects to
A	6	6	Dashboard wire harness (see <u>DASHBOARD WIRE HARNESS (LEFT BRANCH)</u>)
Accessory power socket relay	19	4	
A/ F sensor relay	20	4	
B	12	6	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
C	11	12	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
D	13	17	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)</u>)
E	8	16	Floor wire harness (see <u>FLOOR WIRE HARNESS (LEFT BRANCH)</u>)
F	9	14	Floor wire harness (see <u>FLOOR WIRE HARNESS (LEFT BRANCH)</u>)
G	14	6	Floor wire harness (see <u>FLOOR WIRE HARNESS (LEFT BRANCH)</u>)
H	15	14	Floor wire harness (see <u>FLOOR WIRE HARNESS (LEFT BRANCH)</u>)
Ignition coil relay	23	4	
J	27	21	Driver's door subharness (see <u>DRIVER'S DOOR WIRE HARNESS A</u>)
K	26	12	Driver's door subharness (see <u>DRIVER'S DOOR WIRE HARNESS A</u>)
M	25	3	MICS service check connector
N	2	45	Dashboard wire harness (see <u>DASHBOARD WIRE HARNESS (LEFT BRANCH)</u>)
P (MICU)	17	30	Dashboard wire harness (see <u>DASHBOARD WIRE HARNESS (LEFT BRANCH)</u>)
PGM-FI main relay 1	21	4	
PGM-FI main relay 2	24	4	
Power window relay	22	4	
Q (MICU)	16	14	Dashboard wire harness (see <u>DASHBOARD WIRE HARNESS (LEFT BRANCH)</u>)
R (MES connector)	3	2	Dashboard wire harness (see <u>DASHBOARD WIRE HARNESS (LEFT BRANCH)</u>)
S	5	2	Dashboard wire harness (see <u>DASHBOARD WIRE HARNESS (LEFT BRANCH)</u>)
Fog light relay	18	4	
T	7	6	Optional connector
Turn signal/ hazard relay	4	6	
W	10	5	Roof wire harness (see <u>ROOF WIRE HARNESS</u>)

X	1	39	Dashboard wire harness (see DASHBOARD WIRE HARNESS (LEFT BRANCH))
---	---	----	---

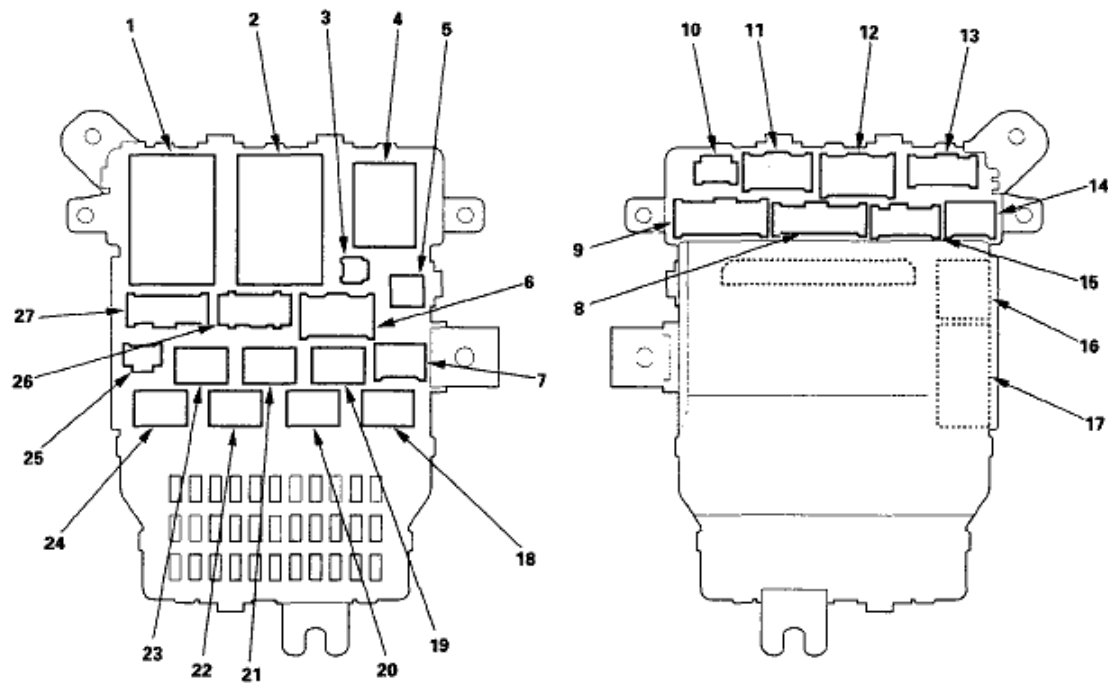


Fig. 3: Identifying Under-Dash Fuse/ Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.