


Diagnostic Connector (DLC3) Circuit

CIRCUIT DESCRIPTION


When terminals TC and CG are connected, DTC in the normal mode or test mode can be read from the check engine warning light. SIL is used by the M-OBD communication with the hand-held tester.

WIRING DIAGRAM

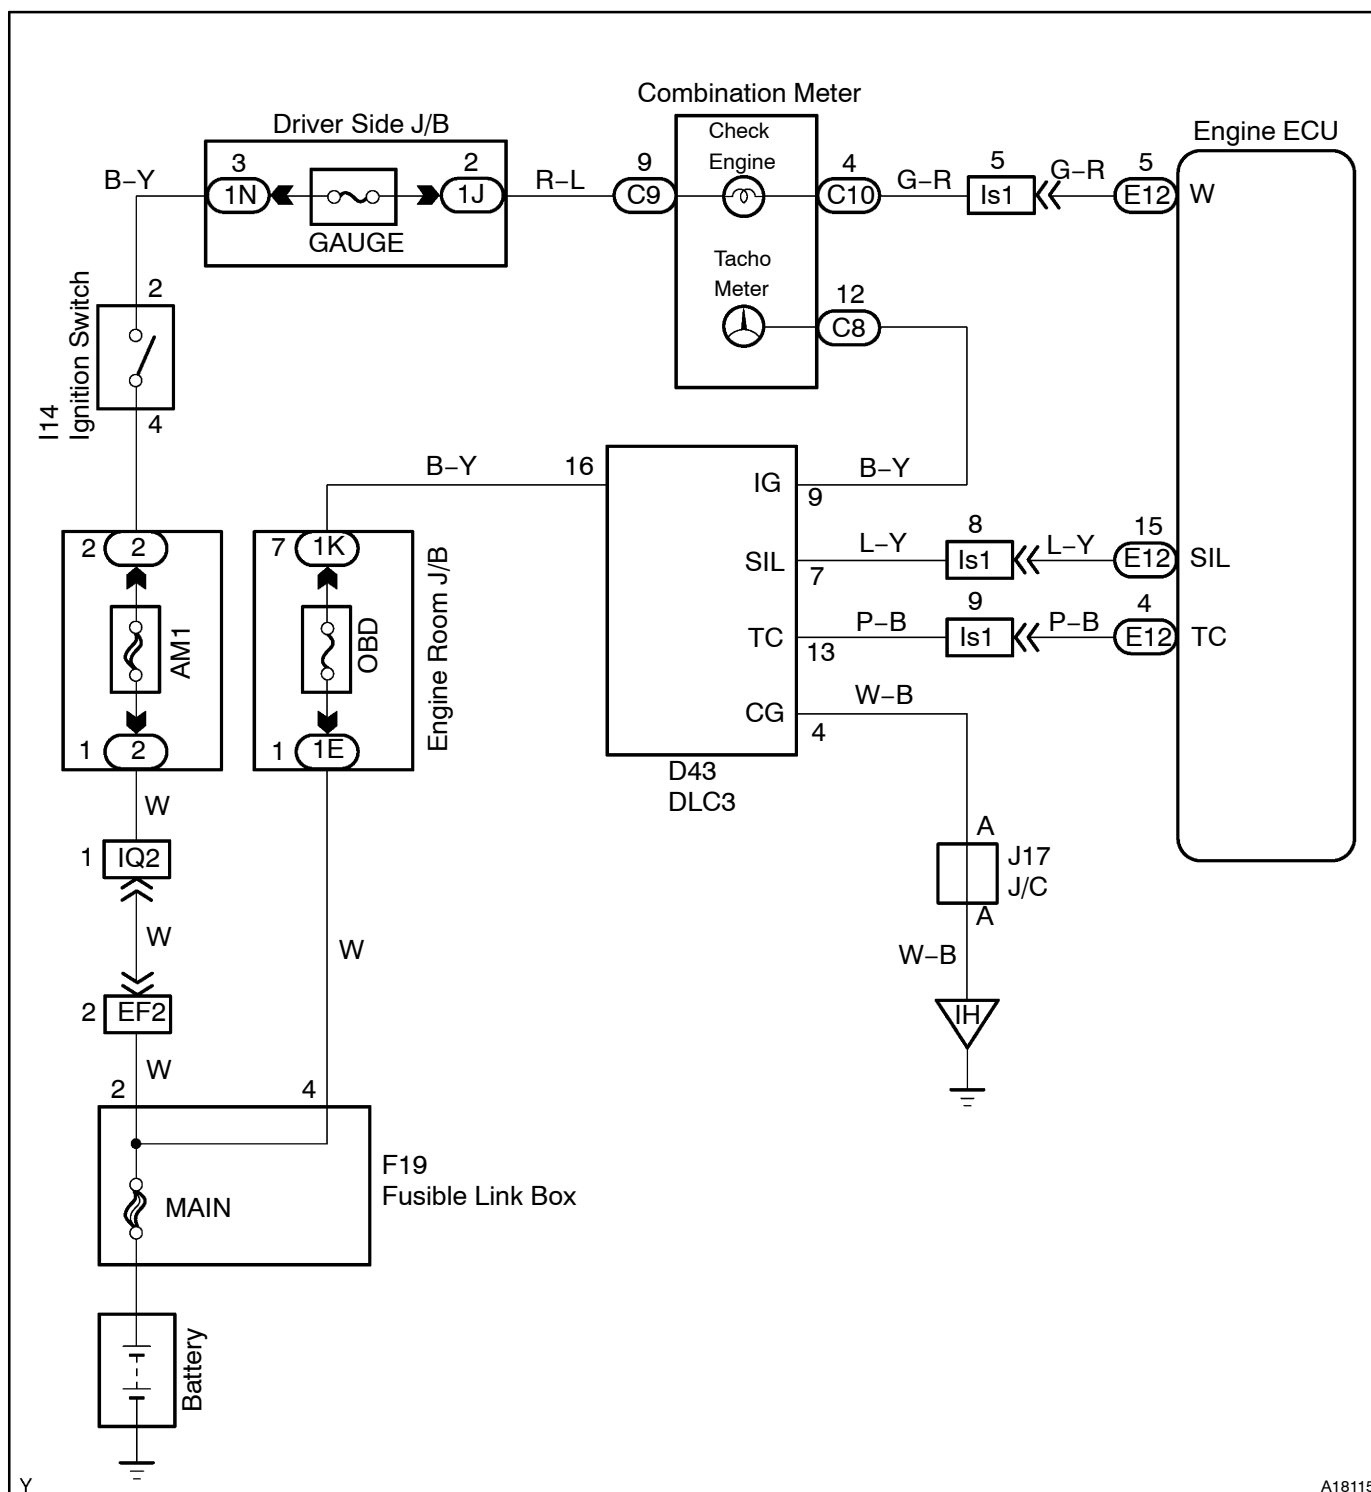

INSPECTION PROCEDURE

1 Check the check engine warning light condition.

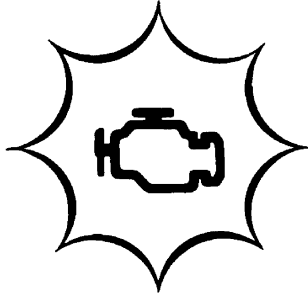

FI2547

PREPARATION:

- (a) Turn the ignition switch ON.
- (b) Using SST, connect terminals TC and CG of the DLC3.
SST 09843-18040

CHECK:

Check the check engine warning light condition.

OK:

Check engine warning light: Blinking

HINT:


If this inspection is OK and there is no hand-held tester, it is unnecessary to perform the following steps, and it means this circuit is OK. Proceed to next circuit inspection shown on problem symptom table (See page DI-18).

OK

Go to step 7.

NG

2 Check voltage between terminals TC and CG of DLC3.

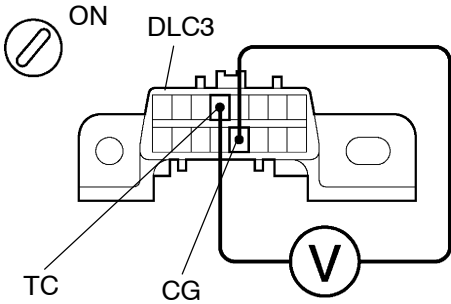

A04971

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals TC and CG of the DLC3.

OK:

Voltage: 9 – 14 V

OK

Go to step 5.

NG

3 Check continuity terminal CG of DLC3 and body ground.

NG

Repair or replace harness or connector.

OK

4 Check for open and short in harness and connector between terminal TC of DLC3 and terminal TC of engine ECU (See page IN-19).


NG

Repair or replace harness or connector.

OK

Check and replace engine ECU (See page IN-19).

5 Check voltage between terminal W of engine ECU connector and body ground.

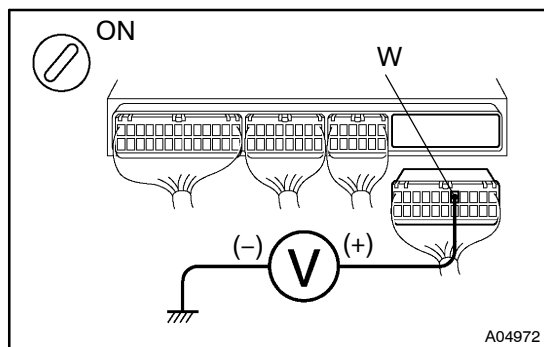

PREPARATION:

- (a) Remove the glove compartment door.
- (b) Disconnect the connector of the engine ECU.
- (c) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminal W of the engine ECU connector and the body ground.

OK:

Voltage: 9 – 14 V

OK

Check and replace engine ECU (See page IN-19).

NG

6 Check the bulb of check engine warning light.

NG

Replace bulb.

OK

Check for open in harness and connector between terminal W of engine ECU and combination meter (See page IN-19).


7 Can you read the DTC (including normal DTC) using hand-held tester?

YES

Proceed to next circuit inspection shown on problem symptom table (See page DI-18).

NO

8 Check voltage between terminal BATT of DLC3 and body ground.

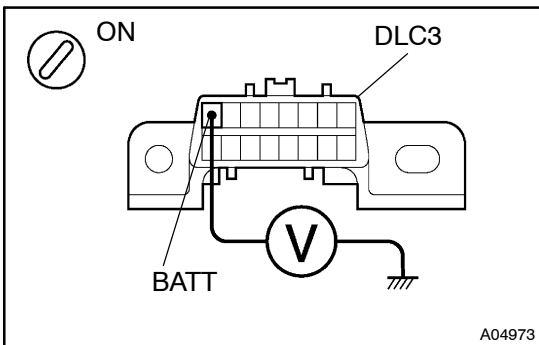

CHECK:

Measure the voltage between terminal BATT of the DLC3 and the body ground.

OK:

Voltage: 9 – 14 V

NG

Check for open and short in harness and connector between terminal BATT of DLC3 and fusible link block (See page IN-19).

OK

Check for open and short in harness and connector between terminal SIL of DLC3 and terminal SIL of engine ECU (See page IN-19).