

2017 ACCESSORIES & EQUIPMENT

Cellular, Entertainment and Navigation - Description and Operation - CT6

DESCRIPTION AND OPERATION

NAVIGATION SYSTEM DESCRIPTION AND OPERATION (WITH CW1)

Navigation System Components

The navigation system contains the following components:

- Navigation Control Module
- Infotainment Display/Faceplate Controls
- Radio
- Human Machine Interface Module
- Global positioning system (GPS) antenna
- Digital media broadcast (DMB) antenna
- USB
- Auxiliary Jack

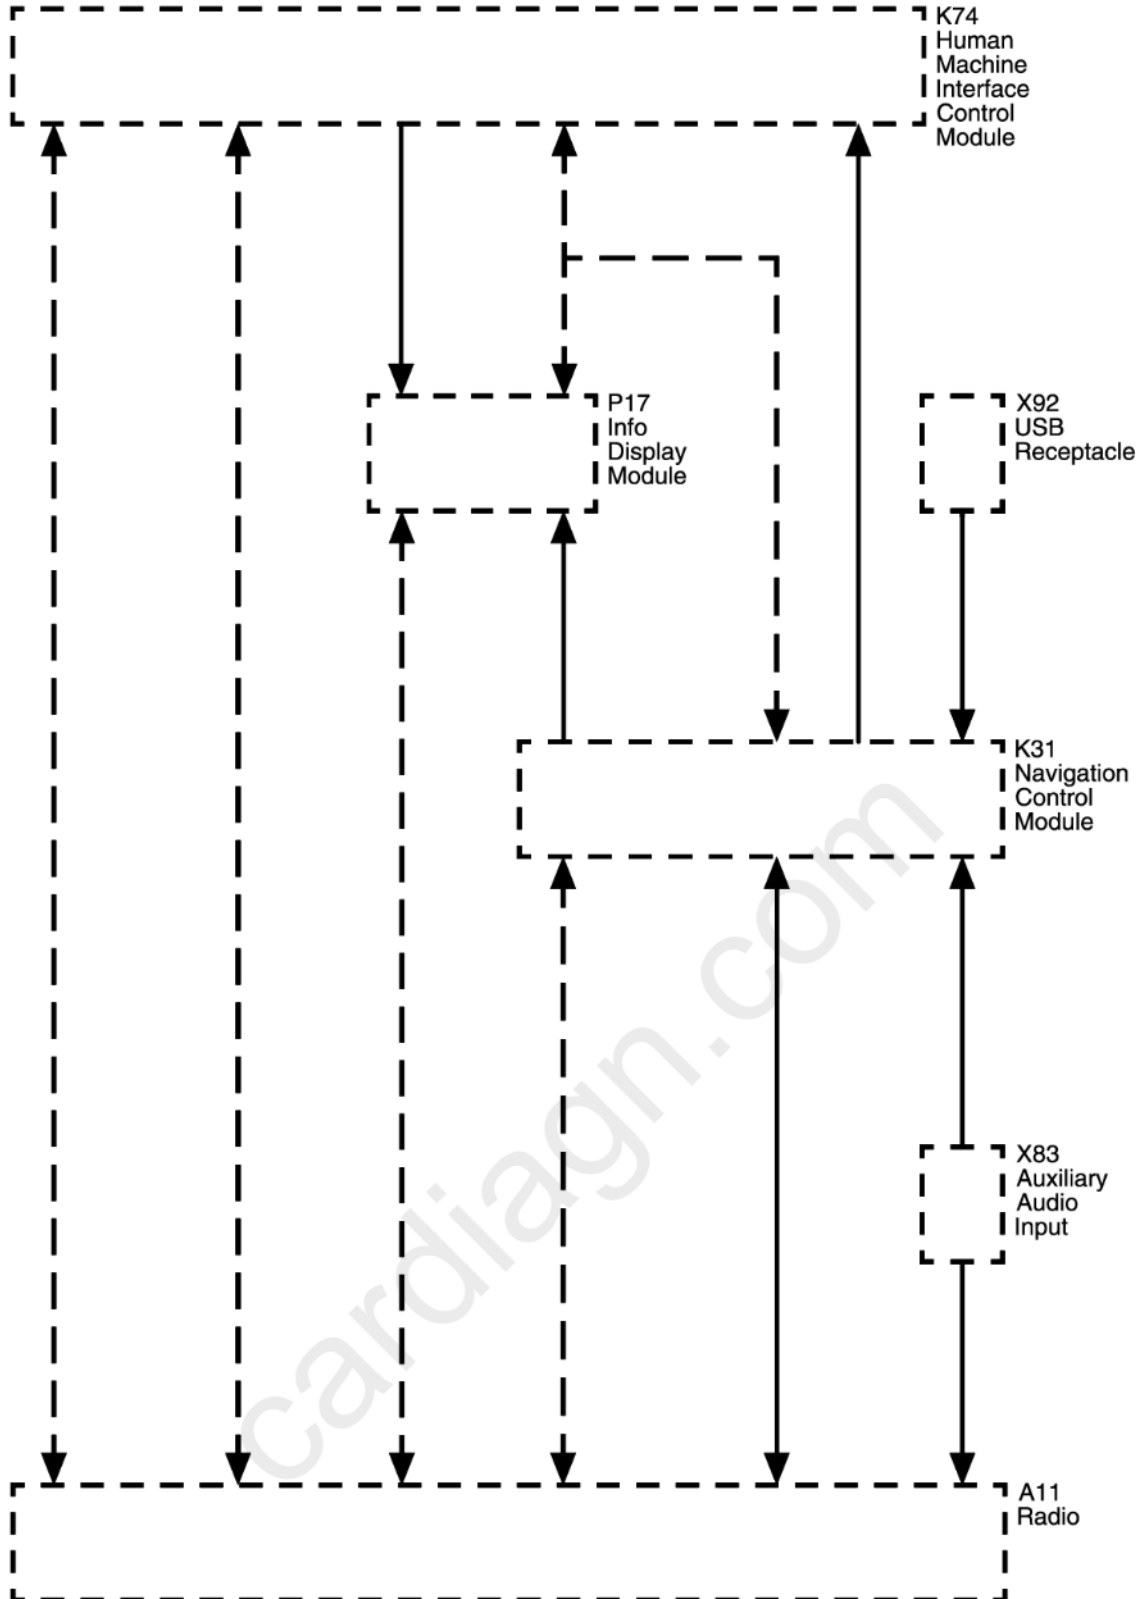


Fig. 1: Navigation System Block Diagram

Courtesy of GENERAL MOTORS COMPANY

Navigation Control Module

The Navigation Control Module performs many functions, the main purpose is GPS navigation and DMB Broadcast however it does have some other functions. For a complete understanding of all the features, refer to the User manual.

The Navigation Control Module can be controlled via touch screen or hard keys. Refer to the User manual for additional information.

The Navigation Control Module communicates with the Human Machine Interface, Info Display/Faceplate controls and Radio through various Serial Data circuits.

The Navigation Control Module is capable of displaying a map on the Info Display of the route selected to a particular destination. Voice prompts then alert the operator of upcoming events (turns) and arrivals

at the destination. The Navigation Control Module will automatically recalculate if the route is not followed. The Navigation Control Module uses data received from the global positioning system (GPS) satellites as well as sensors in GPS antenna to accurately display the current position of the vehicle.

Infotainment Display/Faceplate controls

The Infotainment Display and Faceplate controls are a separate component from the Radio combined into one assembly. The Assembly contains the control knobs and buttons for all Audio, HVAC, Navigation and Display functions. The assembly is supplied battery voltage and ground from the vehicle harness.

Control information, touch communications and dimming level for the display are communicated via a LIN serial data circuit to the Human Machine Interface and Navigation Control Modules.

The Human Machine Interface and Navigation Control Modules send the display digital video data for on-screen display through dedicated video cables.

The knob and button controls communicate via a LIN serial data circuit with the Radio. Messages communicated include the following:

- Wake-up/power states messages
- Diagnostic information
- Button presses/knob rotations
- Commands for the state of indicators
- Back-Lighting dimming level

Radio

The Radio is connected to both the Human Machine Interface and Navigation Control Modules via several connections. The Radio receives both Stereo and Mono audio from multiple audio circuits at the Navigation Control module and also receives audio from the Human Machine Interface via MOST Serial Data. The Radio then outputs this audio via MOST bus.

Human Machine Interface Module

The Human Machine Interface module is responsible for the following: Video for the Infotainment Display, Bluetooth®, USB and speech recognition functions.

The HMI communicates with the Info display and Navigation Control modules via the LIN bus for control information, touch communications and dimming level. Digital video data is sent to the Info display through a dedicated video cable. The Human Machine Interface also receives USB data as well as a MIC input from Navigation Control Module when applicable.

Global Positioning System (GPS) Antenna

The Global Positioning System (GPS) antenna is located externally of the vehicle. The GPS antenna is powered through a coaxial cable from the Navigation Control module. The Antenna contains not only function for basic GPS but a Geomagnetic sensor, Acceleration sensor, Motion sensor and a Gyroscope to provide accurate GPS location. Interference to the system may occur if signals are obstructed by atmospheric conditions, objects, tall buildings and trees.

Digital Media Broadcast (DMB) Antenna

The Digital Media Broadcast (DMB) antenna is located externally of the vehicle. The DMB antenna is used to provide traffic information, News information and Points of Interest. The DMB antenna is powered through a coaxial cable from the Navigation Control module. Interference to the system may occur if signals are obstructed by atmospheric conditions, objects, tall buildings and trees.

USB Connectors

Several USB Connectors may be available on the vehicle depending on the Radio configuration. The Navigation Control Module should have a USB connector located in either the trunk or armrest that interfaces directly with the unit, this port may be used for map and software updates as well as to play

MP3 music files. However not all portable media player devices or file types are compatible. Refer to the owner's manual for information on USB devices, control and operation.

Auxiliary Jack

The Auxiliary Jack is connected to both the Radio and Navigation Control Module. It is connected to the Radio for Auxiliary Jack detection only and to the Navigation Control Module for pass through of audio back to the Radio.

ONSTAR DESCRIPTION AND OPERATION

This OnStar® system consists of the following components:

- Telematics communication interface control module
- OnStar® three button assembly
- Microphone
- Cellular antenna
- Navigation antenna
- Bluetooth® antenna (If equipped)
- Back up battery (If equipped)
- Wi-Fi Hotspot (If equipped)
- TTY (Teletypewriter)

This system also interfaces with the factory installed vehicle audio system.

OnStar Block Diagram

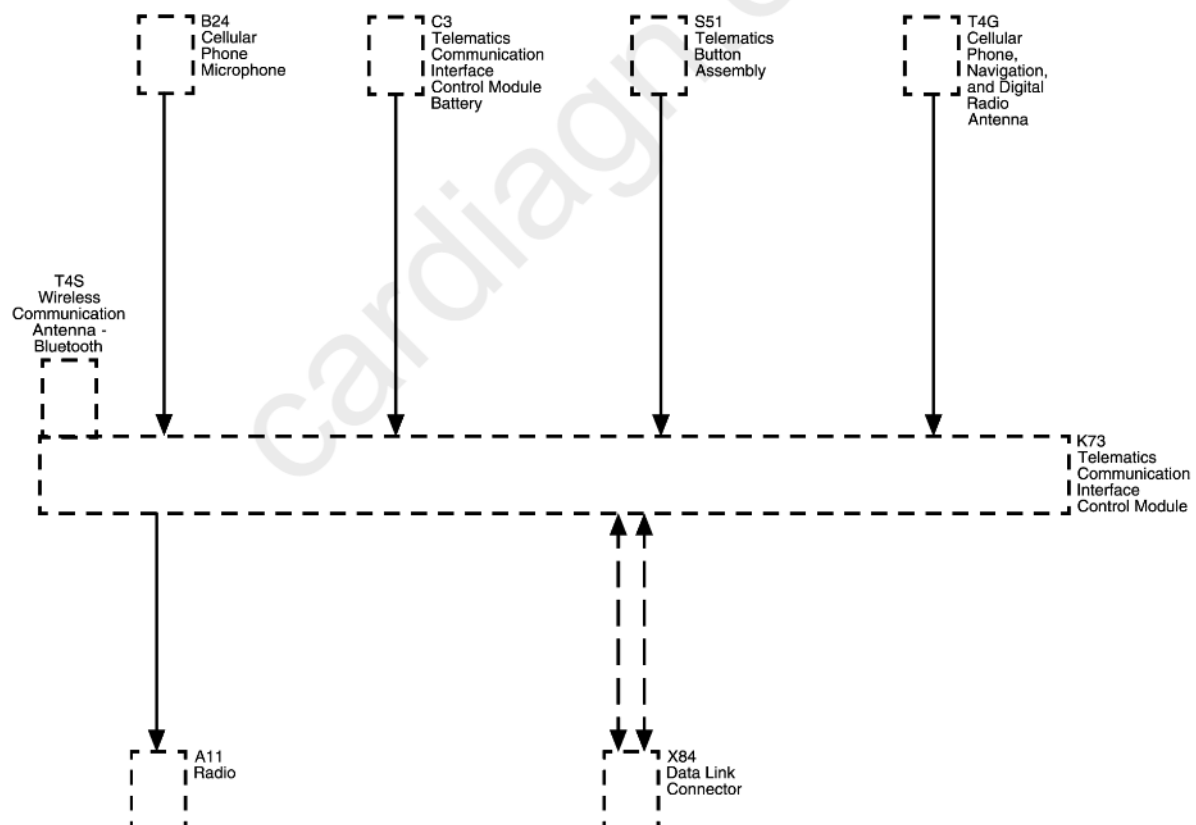


Fig. 2: Identifying OnStar Block Diagram

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
B24	B24 Cellular Phone Microphone
C3	C3 Telematics Communication Interface Control Module Battery
S51	S51 Telematics Button Assembly
T4G	T4G Cellular Phone, Navigation and Digital Radio Antenna

Callout	Component Name
T4S	T4S Wireless Communication Antenna - Bluetooth
K73	K73 Telematics Communication Interface Control Module
A11	A11 Radio
X84	X84 Data Link Connector

Telematics Communication Interface Control Module

The OnStar® Generation 10 system uses Global System for Mobile Communication (GSM) to communicate data and voice signals over the national cellular network. The module may also have the ability to act as a Wireless Local Area Network (WLAN) Wi-Fi hotspot similar to a home wireless router. The module houses an internal WLAN antenna enabling hotspot connectivity and streaming high speed media to the entertainment system. The module also may enable Teletypewriter (TTY) and be capable of Bluetooth communication utilizing an internal antenna. The module is capable of up to 4G LTE speeds and houses 2 technology systems, one to process Global Positioning System (GPS) data and another for cellular information. The module sends and receives all cellular communications over two cellular antennas and cellular antenna coax cables.

The OnStar® Gen 10 system has two antenna inputs, a primary cellular signal and a combined GPS/secondary cellular signal. The OnStar® system uses the United States Global Positioning System (GPS) signals to provide location on demand. GPS is a space-based satellite navigation system that provides location and time information in all weather conditions, anywhere on or near Earth where there is an unobstructed line of sight to four or more GPS satellites.

The module also has the capability of activating certain features such as, the horn, remote engine starting, initiating door lock/unlock or activating the exterior lamps using the serial data circuits. These functions can be commanded by the OnStar® Call Center per a customer request or mobile device app depending on vehicle and customer subscription.

Dedicated circuits are used to connect the telematics communication interface control module to a microphone, the button assembly, radio and if equipped the Back Up Battery (BUB). The telematics communication interface control module communicates with the rest of the vehicle over the serial data bus.

Power is provided by a dedicated, fused B+ circuit. Ground is provided through the vehicle wiring harness attached to the module. The power mode state is determined by the telematics communication interface control module through serial data messaging.

OnStar® Three Button Assembly

- The OnStar® button assembly may be part of the rearview mirror or a separate, stand alone unit. The button assembly is comprised of 3 buttons or 3 capacitive touch buttons and status LED's or an error indicator. The buttons are defined as follows:
 - The answer/end button, which is black with a white phone icon or a white driver figure seated with voice signals near its face, allows the user to answer and end calls or initiate speech recognition.
 - The blue OnStar® call center button, which displays the OnStar® logo, allows the user to connect to the OnStar® call center.
 - The emergency button, which displays white letters "SOS" with red background, sends a high priority emergency call to the OnStar® call center when pressed.

If the LED does not illuminate, this may indicate that the customers OnStar® subscription is not active or has expired. Push the blue OnStar® button to connect to an advisor who can then verify the account status.

The telematics communication interface control module supplies 10 volts to the OnStar® button assembly on the keypad supply voltage circuit. When pressed, each button completes a circuit across a resistor allowing a specific voltage to be returned to the telematics communication interface control module on the keypad signal circuit. Depending upon the voltage range returned the telematics communication interface control module is able to identify which button has been pressed.

The OnStar® status LED or error indicator is located near the buttons. The LED is green when the system is ON and operating normally. When any indicator is illuminated and flashing, it is an indication that a call is in progress. When the LED is red, this indicates a system malfunction is present. In the event there is a system malfunction and the OnStar® system is still able to make a call, the LED will flash red during the call.

Each LED or error indicator is controlled by either the telematics communication interface control module over dedicated LED signal circuits or by low speed GM LAN serial data depending on the inside rearview mirror option. Ground for the LED is provided by the wiring harness attached to the button assembly.

Secondary OnStar® Controls

Some vehicles may have an additional button that when pushed can engage the OnStar® system. The button may be a symbol of a face with sound waves or may say MUTE or be a symbol of a radio speaker with a slash through it.

By engaging the OnStar® system with this feature, the user can interact with the system by use of voice commands. A complete list of these commands is supplied in the information provided to the customer. If the information is not available for reference, at any command prompt the user can say "HELP" and the telematics communication interface control module will return an audible list of available commands.

OnStar® Microphone

The cellular microphone can be part of the rearview mirror assembly or a stand-alone unit in the headliner or roof console. In either case, the telematics communication interface control module supplies approximately 10V to the microphone on the cellular microphone signal circuit. The microphone modifies the 10V depending on the volume and voice being detected. A cellular microphone low reference circuit or a drain wire provides a ground for the microphone. The microphone signal circuits pass through the telematics communication interface control module to support entertainment voice recognition.

Cellular and GPS Antennas

The combination antenna will have any of the following antenna elements when equipped with OnStar®:

- Primary cellular element
- Secondary cellular element
- GPS element
- Digital radio element
- AM/FM element

The Gen 10 OnStar® system uses 2 cellular antenna elements to send and receive cellular data, the primary cellular element and the secondary cellular element. The primary cellular signal is carried by a coax cable that connects the antenna directly to the telematics communication interface control module. Details of the secondary cellular signal are further described below.

The GPS antenna element is used to collect the signals of the orbiting GPS satellites. Within the antenna is housed a low noise amplifier that allows for a more broad and precise reception of this data. Also housed within the antenna is circuitry to combine the GPS signal and the secondary cellular signal. Without navigation, the combination GPS/secondary cellular signal is carried by a coax cable that connects directly to the telematics communication interface control module. The cable also provides a path for DC current for powering the antenna. With navigation, the combination GPS/secondary cellular signal is carried by a coax cable that connects to the navigation signal splitter. The splitter supplies the GPS signal to the navigation/entertainment system and the GPS/cellular signal to the telematics communication interface control module.

The digital radio element collects digital radio signals from two satellites and where necessary terrestrial repeaters. The digital radio signal is carried by a coax cable and connected to the digital radio receiver. Refer to [**Radio/Audio System Description and Operation**](#) for further details.

The radio signal is sent from a broadcast station and is then received by the AM/FM radio antenna element. The AM/FM radio signal is carried by a coax cable and is connected to the radio. Refer to **Radio/Audio System Description and Operation** for further details.

OnStar® RemoteLink

OnStar® RemoteLink is a mobile app to link mobile devices to a vehicle for limited diagnostics and feature controls. After downloading the app and registering the device, vehicle owners with an eligible vehicle can use their mobile devices to access real-time data from their vehicle and perform specific commands remotely.

All communication between the app and the vehicle is powered by OnStar's® advanced connected vehicle technology. An active OnStar® account as well as a valid OnStar® username and password are required to use the app. The remote commands must be enabled by logging into the user's OnStar® account prior to using the app. Refer to the owners manual for available vehicle data and control features.

Compass Heading

The telematics communication interface module has a compass feature to calculate vehicle direction which is displayed via the instrument panel cluster or designated display. The compass heading is determined by dead reckoning until the GPS 3d fix is established. The dead reckoning is accomplished by using the yaw rate sensors and wheel ticks to determine heading changes from a GPS known heading. The GPS 3d fix heading is determined by the differential of two locations. If "CAL" is displayed on the Instrument Panel Cluster or designated display refer to the owners manual for steps to calibrate the compass.

Bluetooth® (If Equipped)

Bluetooth® wireless technology is a short-range communications technology intended to replace the cables connecting portable and/or fixed devices while maintaining high levels of security. Only vehicles with steering wheel controls will have Bluetooth® functionality. In order to utilize the vehicle's Bluetooth® system, a Bluetooth® equipped cellular phone is required.

The Bluetooth® antenna is internal to the telematics communication interface control module, radio or human machine interface module and is used to send and receive signals from a Bluetooth® enabled cellular phone. The available features and functions are determined by the software within the device being used and the telematics communication interface control module. The operating range of the signal from the vehicle is approximately 30 feet. Note that the operating range is dependent upon the cellular phone being used and battery level of the phone.

With Bluetooth® technology customers can experience hands-free calling as their Bluetooth® capable cellular phones are wirelessly connected to the vehicle. It will allow customers to place and receive calls using the steering wheel controls and voice recognition. The vehicle audio system will allow you to listen to your call through the vehicle speakers and adjust volume through steering wheel or radio controls.

Not all Bluetooth® cellular phones are guaranteed to work with the vehicle's Bluetooth® system. Based on the cellular phone's service provider and the manufacturer's implementation of Bluetooth®, not all phones support all available Bluetooth® functionality. Bluetooth® enabled cellular phones will be tested for vehicle compatibility and a feature compatibility list will be provided via the GM Bluetooth® website: <http://www.gm.com/vc/bluetooth/>

Bluetooth® Features Supported

The following is a list of features supported by the Bluetooth® system. Note that not all devices will support all of the listed functions.

- Automatic reconnection - highest priority phone will automatically be connected to vehicle when vehicle ignition is on
- Hands-free dialing- via digits, redial, name tags (phone number saved to a nametag via voice recognition)
- Answering a call

- Ending a call
- Mute a Call
- Rejecting a call - ignore an incoming call
- Call Waiting
- Three-way Calling - initiated from hands-free system
- Send Number During a Call - this is used when calling a menu-driven phone system
- Transfer a Call - transfer call from vehicle to cellular phone and visa versa
- Voice Pass-Thru - allow access to the voice recognition commands on the cellular phone

Pairing a Bluetooth® Cellular Phone to the Vehicle

In order to use hands-free calling, the cellular phone must be paired to the vehicle. Up to five devices can be paired to the vehicle at one time, but only one can be connected at any given time. To pair a phone, the customer must know how to operate the Bluetooth® functionality of their phone. The pairing process must only be done one time for each phone, unless that phone's information is deleted. The system will always generate a password and will provide that password if the device you are pairing does not support Secure Simple Pairing (SSP). If the device being paired does support SSP the system will not provide the password and automatically pair the device. For safety reasons, the pairing process is disabled while the vehicle is moving.

Once the Bluetooth® cellular phone has been paired with vehicle, it will automatically connect to the vehicle when the ignition is on and the device is on. When more than one paired phone is in the vehicle, the phone with the highest priority will be connected. If the cellular phone is in use while getting into the vehicle, the phone can be switched to hands-free mode with the press of a button. In addition, a call in progress can be transferred from the vehicle hands-free mode to the phone to continue the call as the customer exits the vehicle.

Complete pairing instructions are provided in the Vehicle Owners Manual.

Back-up Battery (If Equipped)

NOTE: Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Disconnecting power to the OnStar® module in any way while the ignition is ON or with retained accessory power activated may cause activation of the OnStar® Back-Up Battery. This action is per design as the back-up battery is designed to provide power to the telematics communication interface control module so an emergency notification call can be made after an event where the main battery is disabled. Once the Back-Up Battery is activated it will stay on until the power is restored back to the telematics communication interface control module. The telematics communication interface control module naturally chooses the main supply voltage as it's default supply, but if the main supply is removed or lost for any reason the OnStar® module will use the Back-Up Battery as a power supply as long as the default supply can not be detected. The back-up battery is not rechargeable and once discharged below 9.5 volts the back-up battery must be replaced.

Certain OnStar® equipped vehicles may also be equipped with a back-up battery. The back-up battery is a non-rechargeable, lithium battery intended to provide an auxiliary power source for the telematics communication interface control module in the event where power from the main vehicle battery is lost.

The back-up battery is intended to have a limited life span of approximately 4 years and is designed to maintain an open circuit voltage between 16 V and 9 V throughout this period. This allows the battery to power the basic functions of the telematics communication interface control module for least one 200 second (5 minute) call at the end of the 4 year span, should the main vehicle battery be lost. In the case of a vehicle losing vehicle battery power, OnStar® will switch over to the backup battery based on an internal algorithm. It will look for an air-bag deploy or near-deploy, messages from the SDM. If there are no messages the OnStar® module will stay wake for a few minutes longer and monitor the buttons in the mirror. If not pressed, the modules will power down and shut off completely.

The back-up battery is connected to the telematics communication interface control module through the back-up battery positive voltage circuit and back-up battery ground circuit and is protected from a short circuit by means of an internal fuse. In the event the back-up battery, battery positive voltage circuit is shorted to the back-up battery ground circuit or chassis ground, the fuse will open and render the back-up battery permanently inoperable. The status of the back-up battery and its associated wiring is monitored by the telematics communication interface control module.

Wi-Fi Hotspot

The telematics communication interface control module acts as a Wireless Local Area Network (WLAN) Wi-Fi hotspot router and uses direct 4G LTE connectivity to the internet. It has the ability to connect up to 7 devices at one time. A data plan is required and when purchased, a security default password is established. There are several ways to change the SSID or password, by placing a call to the OnStar® Call Center, by using the Gen 10 mobile app or through the scan tool.

The system utilizes a secure autoconnect feature between the telematics communication interface control module and the radio/HMI. No user interaction is required, it is always available and ready to connect to a dedicated in car device. The ignition must be in Run, Accessory or RAP for Wi-Fi to operate.

Audio System Interface

When the OnStar® requires audio output, a serial data message is sent to the audio system to mute all radio functions and transmit OnStar® originated audio. The OnStar® audio is transmitted to the vehicle audio system by a dedicated signal circuit and a low reference circuit.

The audio system will mute and an audible ring will be heard through the speakers if the vehicle receives a call with the radio ON.

On some vehicles, the HVAC blower speed may be reduced when the OnStar® system is active to aid in reducing interior noise. When the system is no longer active, the blower speed will return to its previous setting.

OnStar® Sleep Cycle

The OnStar® system uses a unique sleep cycle to allow the system to receive cellular calls while the ignition is in the OFF position and retained accessory power mode has ended. This cycle enables the telematics communication interface control module to perform remote functions, such as door unlock, as commanded over the air by the OnStar® Call Center and to continue to maintain an acceptable level of battery electrical drain.

The OnStar® system uses 4 states of readiness, depending upon the type of cellular market the vehicle is in when the ignition is put into the OFF state:

- High power
- Low power
- Sleep
- Digital standby

The high power state is in effect whenever the ignition is in the ON or RUN position or retained accessory power is enabled and the OnStar® system is sending or receiving calls or when the system is performing a remote function.

The low power state is in effect when the OnStar® system is idle with the ignition in the ON or RUN position or with retained accessory power enabled.

The sleep state is entered after the vehicle has been shut off and the retained accessory power has timed out while in an analog cellular area. At a predetermined time recorded within the telematics communication interface control module, the system re-enters the low power state to listen for a call from the OnStar® Call Center for 1 minute. After this interval, the system will again return to the sleep state for 9 minutes. If a call is sent during the 1 minute interval, the OnStar® system will receive the call and immediately go into the high power mode to perform any requested functions. If no call is received during the 1 minute interval, the system will go back into the sleep mode for another 9 minutes.

This process will continue for up to 48 hours, after which the OnStar® system will turn off until the ignition is turned to the ON or RUN position.

The digital standby power state is entered after the vehicle has been shut off and the retained accessory power has timed out while in a digital cellular area. When in digital standby mode, the OnStar® module is able to perform all remote functions as commanded by an OnStar® advisor at any time, for a continuous 120 hours. After 120 hours, the OnStar® module will go into sleep mode until a wake up signal from the vehicle is seen by the telematics communication interface control module. If the OnStar® module loses the digital cellular signal it will revert to analog mode and follow the standard sleep state (9 minutes OFF, 1 minute standby) based on the time of the GPS signals, this will continue until a digital cellular signal is again received.

If the OnStar® system loses battery power while the system is in a standby or sleep mode, the system will remain OFF until battery power is restored and the ignition is turned to the ON or RUN position.

Features

OnStar® Personal Calling

The hands free, OnStar® personal calling cellular phone feature is an additional feature of the OnStar® system. This feature is embedded within the telematics communication interface control module; however it must be activated by an OnStar® advisor. OnStar® personal calling operates similar to most hand held cellular phones in that the availability for its usage is based on minutes or units. The customer must have a current OnStar® subscription, as this feature cannot be utilized without it. To use OnStar® personal calling, the customer must also purchase units (minutes) as outlined in the owners guide provided with the OnStar® system. Units begin to deplete, 1 unit is equal to 1 minute, as the customer makes outbound phone calls, answers inbound phone calls or while connected to the OnStar® virtual advisor. In addition, units may also have an expiration date, depending upon the type of units purchased.

Customers have the ability to store telephone numbers within the module, referenced by a nametag for the convenience of frequently dialed numbers. After storing a nametag, the user can dial this number by initiating the OnStar® personal calling feature, speaking the word "call," and repeating the nametag assigned.

Turn by Turn Navigation

Turn by Turn Navigation allows the driver to contact OnStar® to obtain directions for driving from a current location to a desired location. The Turn by Turn Navigation system stores your planned route and continually checks your position along that route, when you deviate from the planned route, the system will recognize this and prompt the driver with verbal prompts for how to proceed. The driver then responds verbally to direct the system to continue the current routing or to recalculate the route because of a missed turn.

Advisor Record Feature

The Advisor Record Feature allows the user to store any information given during a call with an OnStar® Advisor. Recording is activated by pressing the blue OnStar® button during a call; pressing the button a second time stops the recording. The stored information can be played back by pressing the phone button on the three button assembly and using the voice command "Advisor Playback".

Teletypewriter (TTY) Users

OnStar® has the ability to communicate to deaf, hard-of-hearing or speech-impaired customers while in the vehicle. The available dealer-installed TTY system can provide in-vehicle access to all of the OnStar® services, except Virtual Advisor and OnStar® Turn-by-Turn Navigation.

Deactivated OnStar® Accounts

In the event a customer has not renewed their OnStar® account after expiration or the account was never activated, OnStar® will make a discrete cellular call to the vehicle to deactivate the OnStar® system. Before taking this action, customers are notified that the OnStar® system in their vehicle will be deactivated unless they elect to renew the account. After the OnStar® account has been deactivated, customers will experience the following:

- The OnStar® status LED will not illuminate.
- The OnStar® system will NOT attempt to connect to the OnStar® Call Center in the event of a collision or if the vehicle's front air bags deploy for any other reason.
- An emergency button press will play a demo message indicating the service has been deactivated.
- An OnStar® Call Center button press will connect the customer with a dedicated sales team who can sell an OnStar® subscription and reactivate the vehicle. Depending on the type of OnStar® hardware in the vehicle, the customer may first hear a demonstration message stating there is no current OnStar® subscription for the vehicle and directing the customer what to do to activate services.
- OnStar® personal calling will not be available, as this feature requires the customer to have a current OnStar® account. Attempts to use this feature may result in cellular connection failure messages and the inability to connect to the number dialed.

Certain vehicles that have never had an active OnStar® account or that have been deactivated, may be unable to establish a connection with the OnStar® Call Center. When normal published diagnostic procedures do not indicate a possible cause for the no connect concern, the vehicle may have been deactivated. For deactivated vehicles, a no connect response should be considered normal operation. Further diagnosis and subsequent repair is only necessary should the customer elect to become an active OnStar® subscriber or renew the account subscription.

OnStar® Cellular, GPS and Diagnostic Limitations

The proper operation of the OnStar® System is dependent on several elements outside the components integrated into the vehicle. These include the National Cellular Network Infrastructure, the cellular telephone carriers within the network and the GPS.

The cellular operation of the OnStar® system may be inhibited by factors such as the users range from an analog or digital cellular tower, the state of the cellular carrier's equipment and the location where the call is placed. Making an OnStar® key press in areas that lack sufficient cellular coverage or have a temporary equipment failure will result in either the inability of a call to complete with a data transfer or the complete inability to connect to the OnStar® Call Center. The OnStar® system may also experience connection issues if the identification numbers for the module, station identification number, electronic serial number or manufacturers electronic ID, are not recognized by the cellular carriers local signal receiving towers.

The satellites that orbit earth providing the OnStar® system with GPS data have almost no failures associated with them. In the event of a no GPS concern, the failure will likely lie with the inability of the system to gain GPS signals because of its location, i.e. in a parking structure, hardware failure or being mistaken with an OnStar® call which has reached the Call Center without vehicle data.

During diagnostic testing of the OnStar® system, the technician should ensure the vehicle is located in an area that has a clear unobstructed view of the open sky and preferably, an area where analog or digital cellular calls have been successfully placed. These areas can be found by successfully making an OnStar® keypress in a known good OnStar® equipped vehicle and confirming success with the OnStar® Call Center advisor. Such places can be used as a permanent reference for future OnStar® testing.

Mobile Identification Number and Mobile Directory Number

The telematics communication interface control module utilizes 2 numbers for cellular device identification, call routing and connection, a mobile identification number and a mobile directory number. The mobile identification number represents the number used by the cellular carrier for call routing purposes while the mobile directory number represents the number dialed to reach the cellular device.

Operation of the OnStar® Speech Recognition Systems

OnStar® users communicate with 2 speech recognition systems. Speech recognition allows the user to speak to one computer in the vehicle and one reached over a phone line. The computer tries to understand the users command and responds by speaking back or by taking the appropriate action, e.g. dialing the phone.

- Personal Calling uses a speech recognition system that resides in the vehicle. When the user presses the phone button, the system states, Ready and listens for the user's command. The user can speak commands to control the hands-free phone.
- Virtual advisor is a remote speech recognition system that the caller can access by making a phone call. The user connects to virtual advisor by requesting it during personal calling use. The user is then transferred to the virtual advisor server and talks to it via a cellular connection.

The OnStar® speech recognition systems use speech technology that is designed to understand a wide range of American English speakers. Although there is no one right way to speak English, the system will work best when users try to modify their pronunciation should they encounter difficulty. Users who do not obtain good results are advised to try the tips and workarounds found in the Infotainment System Manual or the Owners Manual.

RADIO/AUDIO SYSTEM DESCRIPTION AND OPERATION

The entertainment system on this vehicle may have several different configurations available to it. To determine the specific configuration of the vehicle, please see the Service Parts ID Label and refer to [RPO Code List](#).

Each item in the list below represents topics covered in detail below.

- Data Communications
- Remote Radio Receiver
- Human Machine Interface Module
- Media Disc Player
- Audio Amplifier (If equipped)
- Speaker Operation
- Infotainment Controls and Display
- Antenna System
- Radio Reception
- Theft Deterrent
- Bluetooth® (if equipped)
- Applications (if equipped)
- Auxiliary Audio Input Jack
- USB Port and SD Card Reader
- Navigation System Components and Features (if equipped)
- Valet Mode
- OnStar®
- Steering Wheel Controls (If equipped)
- Auto Volume Control

Data Communications

The infotainment system communicates with other devices on multiple serial data networks during operation.

Infotainment Communications Block Diagram

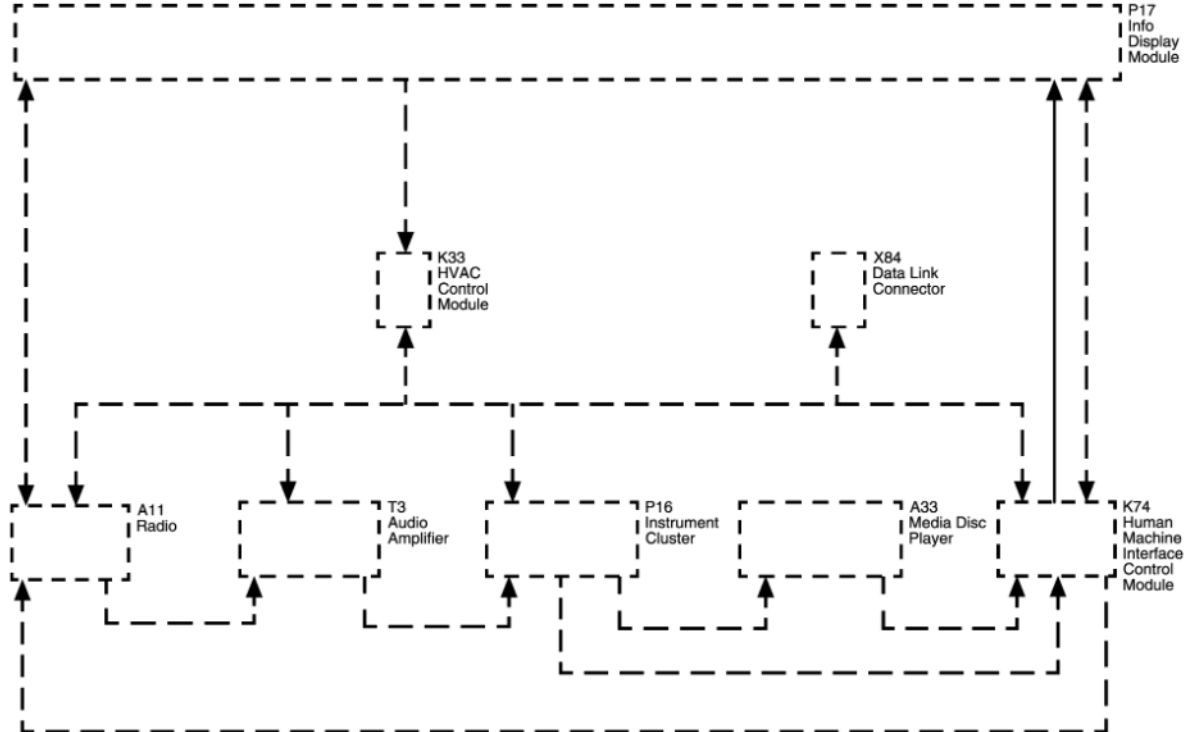


Fig. 3: Infotainment Communications Block Diagram
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
P17	P17 Info Display Module
K33	K33 HVAC Control Module
X84	X84 Data Link Connector
A11	A11 Radio
T3	T3 Audio Amplifier
P16	P16 Instrument Cluster
A33	Media Disc Player
K74	Human Machine Interface Control Module

Media Oriented Systems Transport (MOST)

At the core of the infotainment system is the Media Oriented Systems Transport (MOST) bus, a high-speed multimedia network technology. The serial MOST bus uses a ring topology and synchronous data communication to transmit audio, video, data and control information between any devices attached. The MOST bus uses a dual wire structure to communicate among these devices.

A MOST communication enable circuit is also connected to all components on the MOST bus. The MOST enable circuit is used to wake the network and trigger network diagnostics. Any component on the MOST bus may assert the enable circuit, but communications are initiated by the MOST bus master.

The MOST bus master is the device responsible for normal wake up and initialization of communication on the network. The MOST bus master receives vehicle power state information from the vehicle power mode master. The MOST bus master uses this information to control the power state of the infotainment system.

The MOST bus master is also responsible for maintaining known good network configuration. The MOST bus master will be the device that reports MOST bus errors/DTCs.

The Remote Radio Receiver, Human Machine Interface Module, Remote Optical Drive, Audio Amplifier and the Instrument Panel Cluster all communicate on the MOST bus.

Local Interconnect Network (LIN)

The Local Interconnect Network (LIN) Bus is a single wire communication system. This bus is used to exchange information between a master control module and other smart devices which provide supporting functionality.

The Remote Radio Receiver, Human Machine Interface Module, Information Display, Infotainment Controls and the Multifunction (tunnel) Controls all communicate on the LIN bus.

GMLAN

The Remote Radio Receiver, Audio Amplifier and the Human Machine Interface Module communicate with other components and systems in the vehicle via GMLAN.

Remote Radio Receiver

The radio is the MOST BUS master. The radio also communicates with other components and systems within the vehicle via GMLAN.

The remote radio receiver is responsible for receiving all broadcast audio bands. Broadcast signals from AM, FM and XM bands are transmitted to the radio via the vehicle antenna systems.

Radio Power

The radio receives battery power and ground from the vehicle harness.

The radio does not use a discrete ignition feed circuit for power moding. The power mode master provides the system power mode to the radio via serial data messages. The power mode master determines the system power mode by processing power mode information from ignition switch inputs. Serial data power modes supported by the radio are OFF, ACCESSORY, RUN and CRANK REQUEST.

Radio Audio Outputs

The radio outputs all audio signals digitally over the MOST bus.

Human Machine Interface Module

The human machine interface module is responsible for the following: Video for the infotainment display, Bluetooth®, USB, memory card reader and speech recognition functions.

The human machine interface module communicates with the info display module via the LIN bus for control information, touch communications and dimming level. Digital video data is sent to the display through a dedicated video cable.

Media Disc Player

The media disc player receives control information and outputs digital audio over the MOST bus.

The media disc player receives battery power and ground from the vehicle harness.

Audio Amplifier (If equipped)

Amplifier Interface

A fused battery voltage circuit provides the main amplifier power. The audio amplifier is a participant on the MOST network. The audio amplifier receives audio signals and control information from the MOST bus.

Amplifier Operation

The purpose of the amplifier is to increase the power of a voltage or current signal. The output signal of an amplifier may consist of the same frequencies as the input signal or it may consist of only a portion of the frequencies as in the case of a subwoofer or midrange speaker. The audio amplifier amplifies the signal and sends it to the appropriate speakers.

Each of the audio output channel circuits (+) and (-), at the audio amplifier have a DC bias voltage that is approximately one half of the battery voltage. When using a DMM, each of the audio output channel circuits will measure approximately 6.5V DC. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound. Both the DC bias voltage and the AC voltage signals are needed for the audio system to properly produce sound.

The audio amplifier is also responsible for operation of active noise cancellation. Refer to [Active Noise Cancellation Description And Operation](#) for more information.

Speaker Operation

Speakers turn electrical energy into mechanical energy to move air, using a permanent magnet and an electromagnet. The electromagnet is energized when the radio or amplifier (if equipped) delivers current to the voice coil on the speaker. The voice coil will form a north and south pole that will cause the voice coil and the speaker cone to move in relation to the permanent magnet. The current delivered to the speaker is rapidly changing alternating current (A/C). This causes the speaker cone to move in two directions producing sound.

Infotainment Controls and Display

The infotainment display and controls are a separate component from the radio, combined into an assembly. The assembly contains the control knobs and buttons for all audio and HVAC functions and the information display. The assembly is supplied battery voltage and ground from the vehicle harness.

Control information, touch communications and dimming level for the display are communicated via a LIN serial data circuit to the human machine interface module.

The human machine interface module sends the display digital video data for on-screen display through a dedicated video cable.

The information display provides a feedback on the touch screen and certain controls. Buttons pulse when pressed to affirm that the command is being carried out,

When not actively in use, the screen reverts to minimal images. Proximity Sensing awakens the LCD screen when a hand approaches it.

The controls communicate via a LIN serial data circuit with the remote radio receiver. Messages communicated include the following:

- Wake-up/power state messages
- Diagnostic information
- Button presses/knob rotations
- Commands for the state of indicators
- Back-lighting dimming level

HVAC data for controls and status indicators is communicated between the HVAC controls and the HVAC control module with a separate LIN serial data circuit. HVAC status screen information from the HVAC control module is transmitted to the radio on the GMLAN serial data circuit. The radio communicates the desired screen information to the human machine interface module to be sent to the information display using the video data circuits.

Antenna System

Multi-Band Antenna

The multi-band antenna is located on the roof of the vehicle. This type of antenna may be used with the AM/FM radio, but is primarily for cellular and GPS signals, if the vehicle has these features. Keep this antenna clear of snow and ice build up for clear reception. If the vehicle has a sunroof, the performance of the system may be affected if the sunroof is open. Loading items onto the roof of the vehicle can interfere with the performance of the system, ensure the multi-band antenna is not obstructed.

Diversity Antenna

The diversity antenna system uses antennas applied as appliques to the rear glass and two antenna amplifiers. The right antenna 1 receives both AM and FM signals, while the left antenna 2 receives FM signals only. The antenna amplifier receives the signals from the glass antenna. Each antenna amplifier is connected to the radio by a coaxial cable.

The radio antenna amplifier is enabled when the radio is turned on. The radio provides battery voltage to the antenna amplifier using the center conductor of the antenna coaxial cable. When a 12 V signal is seen by the amplifier on the center conductor of the antenna coax, the received signals are amplified.

When the AM band is selected on the radio, the antenna 1 amplifier connects the AM antenna to the radio. When the FM band is selected, both antenna amplifiers provide FM signals to the radio. The radio switches between the two FM antennas, monitoring the signal strength and combines the signals to create one stronger signal.

Radio Reception

AM/FM Radio Signal

The radio signal is sent from a broadcast station and is then received by an antenna. The strength of the signal received depends on the following:

- The power output (wattage) of the broadcasting station
- The location of the vehicle (or receiver) relative to the broadcast tower.
- Height of the broadcast antenna
- Height of the receiving antenna
- Obstacles between the tower and the receiver
- Atmospheric conditions
- What band (AM or FM) the station is broadcasting
- Type of antenna and the ground plane

Digital Radio Receiver (If equipped)

The XM satellite receiver is integrated into the radio. XM satellite radio provides digital radio reception. The XM signal is broadcast from two satellites and, where necessary, terrestrial repeaters. The high power satellites allow the antenna to receive the XM signal even when foliage and other partial obstructions block the antennas view of the satellite. Terrestrial repeaters are used in dense urban areas. These repeaters will receive the satellite signal and re-broadcast them at much higher power levels in order to ensure reception in areas with densely packed tall buildings. A service fee is required in order to receive the XM service.

Radio Data System (RDS)

The RDS feature is available only on FM stations that broadcast RDS information. This system relies upon receiving specific information from these stations and only works when the information is available. While the radio is tuned to an FM-RDS station, the station name or call letters display. RDS data is carried in what is known as a "subcarrier". A subcarrier is a frequency that the FM broadcaster is authorized to use to send data that is not audible in the main audio program.

RDS functions will only work with FM broadcast stations that are broadcasting RDS data. Not all FM Broadcast stations broadcast RDS data or offer all of the RDS services.

The information displayed is dependent upon the information broadcast by the particular station. The information may vary greatly between stations. RDS functions may not work properly when reception is weak, reception is of poor quality or RDS is not implemented properly by the FM Broadcaster. In some cases, a radio station broadcasting incorrect information may cause the RDS features of the radio to appear to work improperly.

With RDS, the radio can do the following:

- Display text information such as: station identification, type of programming and general information (artist and song title, station messages, call in phone numbers, etc.).
- Seek to stations broadcasting the selected type of programming
- Receive announcements concerning local and national emergencies
- Receive alert warnings of local or national emergencies. When an alert announcement comes on the current radio station, ALERT! displays. You will hear the announcement, even if the volume is low or a CD is playing. If a CD is playing, play stops during the announcement. Alert

announcements cannot be turned off. ALERT! is not affected by tests of the emergency broadcast system. This feature is not supported by all RDS stations.

Theft Deterrent

The radio theft deterrent system is intended to disable or limit radio functionality if incorrect vehicle information is received by the radio. The radio disables functionality if the VIN information received by the radio does not match the VIN information that has been learned by the radio. The radio receives this information via serial data. A possible cause of incorrect VIN info could be the radio was originally installed in another vehicle.

The radio has the following theft operating modes as part of the theft deterrent system:

- Normal Mode: The radio has learned a correct VIN sequence and the VIN information received via serial data matches the learned VIN sequence. In this mode the radio has full functionality.
- No VIN Mode: The radio has not received or learned a correct VIN sequence. In this mode the radio has limited functionality.
- Theft Detected Mode: The radio has learned a correct VIN sequence and the VIN information received via serial data does NOT match the learned VIN sequence. In this mode the radio may be disabled or have limited functionality. The radio display will indicate that theft protection is active.

Bluetooth® (If equipped)

Bluetooth® wireless technology is a short-range communications technology intended to replace the cables connecting portable and/or fixed devices while maintaining high levels of security. The operating range of the signal is approximately 30 feet.

The available features and functions are determined by the type of device and the software within the devices being used. For a feature or function to operate, it must be supported in both devices.

The first connection between devices is established through a process called pairing. In order to pair two devices, a password (passkey) has to be exchanged between the two devices. One device will generate the password, the other device accepts the password to complete the process. Once the devices are paired, future connections between the devices will occur automatically when the devices are on and within range of each other.

The Bluetooth® hardware is internal to the human machine interface module. The human machine interface module supports streaming of data (music, voice, information) from cellular phones and other mobile devices that support those features. The human machine interface module is also capable of interfacing with cellular phones for hands-free features.

- The device must be paired to the system to use the available Bluetooth® feature(s). The pairing process must only be performed once for each device, unless that device's information is deleted.
- Up to five devices can be paired, but only one can be connected at any given time.
- Streaming Audio allows playing music from the mobile device wirelessly. Music stored on the mobile device can be viewed and controlled from the display.
- To stream audio from a mobile device, the device must be unlocked and any additional applications should be closed.

Refer to the vehicle owners manual, supplements and the device manufacturers information for pairing instructions.

Applications (If equipped)

When the system is equipped with Bluetooth®, the system is capable of using applications, commonly referred to as apps.

The term application refers to any piece of software that works on a system (hardware) that is being operated by its own software. Applications are typically small software programs which use the hardware to perform a specific task, as opposed to operating the entire system.

- For an application to be used, it must be installed on both the vehicle infotainment system and a compatible mobile device.
- The device must be connected to the system. this may be done wirelessly via Bluetooth® or via the vehicle USB port. Refer to the device manufacturers information for the proper connection method.
- When the device is connected, the vehicle infotainment system is used to remotely access and control the application on the mobile device.
- The application must work correctly on the device to work with the vehicle infotainment system.
- The user may be required to log-in to the application on the mobile device before using the application from the vehicle controls.
- Using applications will use the device's data plan.
- The device must be unlocked and any additional applications should be closed.

Refer to the owner's manual and supplements for information on mobile devices, control and operation.

Auxiliary Audio Input Jack (If equipped)

The infotainment system may have a 3.5 mm (1/8 in.) auxiliary audio input jack located in the center console. The auxiliary audio input jack interfaces directly with the radio. When a portable audio playback device is connected to the auxiliary jack, an internal switch detects the connection and the radio will switch to AUX as the audio source. Audio signals from the device are sent to the radio from the auxiliary jack via the left, right and common audio signal circuits.

- When a device is first connected to the 3.5 mm (1/8 in.) input jack the infotainment system automatically switches to that device. If an auxiliary device has already been connected, press the AUX or CD/AUX button to select the device.
- Playback of an audio device that is connected to the 3.5 mm jack can only be controlled using the controls on the device.
- The volume control on the device may need to be adjusted to ensure sufficient playback volume through the infotainment system.

USB Port and SD Card Reader

The infotainment system has a USB port and SD card reader slot located in the center console. The USB port and the card reader slot interface with a hub device, internal to the auxiliary jack, USB and memory card receptacle assembly. The auxiliary jack, USB and memory card receptacle assembly receives fused battery voltage and ground from the harness to power the internal hub device as well as providing additional amperage to power USB devices.

The internal hub device interfaces directly with the human machine interface module via a standard USB cable. A Mini type USB connector is used to connect the cable at the USB port and at the human machine interface module and at the auxiliary jack, USB and memory card receptacle. Standard USB male to female connections are typically used for connecting USB cables together where an in-line connection is required. An in-line cable connection is typically found between the console and I/P harness.

USB Port

The USB port allows connectivity to the infotainment system from portable media players or a USB storage device (memory stick/flash drive). When a device is connected to the USB port, the system detects the device and switches to USB as the audio source. Once connected, the device can be controlled from the radio controls.

Not all portable media player devices or file types are compatible. Connection to USB HUB devices is not supported.

Refer to the owner's manual for information on USB devices, control and operation.

SD Card Reader

The infotainment system uses the SD card reader as a mass storage device, similar to a USB storage device.

Refer to the owners manual for information on media types supported via the SD card reader.

Navigation System Components and Features (If equipped)

The human machine interface module provides navigation functionality, if equipped. The human machine interface module provides the following:

- Connection to the global positioning system (GPS) antenna, which provides the vehicle position information.
- Map data for navigation and map route guidance, stored in the human machine interface modules internal memory.
- Route guidance with verbal prompts to the operator.
- Traffic and weather information for display on the navigation system map (with active subscription, where available).

Global Positioning System (GPS) Antenna

The global positioning system (GPS) antenna is part of the multi-band antenna located on the roof of the vehicle. The GPS antenna is used to collect the signals of the orbiting GPS satellites. Within the antenna is housed a low noise amplifier that allows for a more broad and precise reception of this data. The GPS antenna amplifier is powered through the coaxial cable.

The antenna is connected to the human machine interface module through a signal splitter. The signal splitter is a component for dividing the navigation signal into two paths without any transmission loss. This allows the use of a single GPS antenna to provide a signal to both the human machine interface module and the telematics communication interface module.

Route Guidance

The map will display the route to the selected destination. Voice prompts alert the operator of upcoming events (turns) and arrivals at the destination. The navigation system will automatically recalculate if the route is not followed. The human machine interface module uses data received from the global positioning system (GPS) satellites, the vehicle speed signal and serial data information to accurately display the current position of the vehicle.

Points of Interest

The map database provides point of interest information. Points of interests are locations that are frequently visited. Points of interest can be displayed on the map or set as a destination. The following are some of the available Points of interests:

- Gas Station
- Restaurant
- College
- Police Station

Valet Mode

Valet Mode is a customer enabled feature of the infotainment system, found in the settings menu, if equipped. The customer creates and inputs a four digit code using the infotainment controls. Confirming the code and selecting LOCK will lock the infotainment system, steering wheel controls and other vehicle features, dependant on vehicle equipment. The vehicle will remain in valet mode until the same four digit code is reentered.

In the event that the four digit code is forgotten, the scan tool can be used to clear the Valet Mode Code.

OnStar® (If equipped)

When OnStar[®] is activated, a serial data message is sent to the radio that activates a software program. When the software begins its process, the fade goes to the front, Bass and Treble are set to the mid range, the outputs are mono and the audio source is OnStar[®]. OnStar[®] takes priority over any other audio source. All of these actions are preset values stored in the radio.

For additional OnStar[®] information, refer to [OnStar Description and Operation](#).

Steering Wheel Controls (If equipped)

Some audio functions are available using the steering wheel controls. The steering wheel controls duplicate the function of the primary controls available on the radio.

For additional information on steering wheel controls, refer to Steering Wheel Controls Description and Operation.

Auto Volume Control

With auto volume control, the audio system will adjust automatically to make up for road and wind noise as you drive, by increasing the volume as vehicle speed increases. To use auto volume control, set the volume at the desired level and then select either Low, Medium or High. To turn auto volume control off, select the Off screen button.

Rear Audio Control (If equipped)

The Rear Seat Audio Controls interface to the radio using Low Speed GM LAN and allow the rear seat passengers to control the cabin's audio system. Rear occupants can turn the radio on/off, change the volume, change input sources, seek and cycle presets. For additional information on Rear Audio Controls, refer to the vehicle owners manual.

VIDEO ENTERTAINMENT SYSTEM DESCRIPTION AND OPERATION

Each item in the list below represents topics covered below:

- System Overview
- Media Disc Player
- Video Display Screens
- Remote Control
- Wireless Headphones
- Audio/Video Input Adapter

System Overview

The Rear Seat Infotainment system is an infotainment system targeted at rear seat occupants using one or more displays and headphones. It is capable of playing Blu-ray movies and DVDs, has a HDMI input and can play video files that are stored on USB drives. Older variants also had a SD card slot and could display pictures. Rear occupants can source front audio sources (ie AM, FM, XM, etc) for playback through their headphones. Rear occupants interact with the system using an infrared remote control.

The Rear Seat Infotainment system can also be used by front seat occupants by interacting with the center stack. Audio generated by the Rear Seat Infotainment system can be routed to the cabin speakers, the Rear Seat Infotainment system can fill the role of a traditional CD player and the Rear Seat Infotainment system can send video content to the front display when the vehicle is in park.

The Rear Seat Infotainment System supports the following video codecs: 3GPP, MPEG-1, MPEG-2, MPEG-4, H.234, H.264, AVCHD, Flash, Windows Media Video, DIVx (versions 3.11, 4, 5 and 6), Xvid, Nero and Real Media.

The Rear Seat Infotainment System supports the following audio codecs: MP3, Windows Media Audio, ACC, ACC+, OGG Vorbis, Waveform (.wav), Audio Interchange File Format and AC-3.

Media Disc Player

The Media Disc Player is a separate component from the radio. The Media Disc Player receives power, ground and serial data from the vehicle harness.

The Media Disc Player is responsible for the majority of the processing done by the Rear Seat Infotainment system. It plays optical media, decodes digital media, processes remote inputs and handles serial communication on both the MOST bus and GM LAN.

The Media Disc Player connects to the MOST bus in order to send and receive audio as well as send and receive commands.

The Media Disc Player uses GM LAN for diagnostics, calibration and for monitoring normal vehicle operation (ie seat massage settings, etc).

The Media Disc Player connects to external video displays using LVDS cables. In addition to carrying video content these cables also carry audio content, which is transmitted to the rear headphones using infrared transmitters in the rear displays and relay received remote control commands from the rear displays to the Media Disc Player.

The Media Disc Player provides a discreet circuit to control the power state of the rear displays.

Video Display Screens

Front Display

When the vehicle is in PARK, the front display is capable of showing video sourced from the media disc player. Information is transmitted to the display from the media disc player via a LVDS cable. On screen controls are available to provide the operator with playback controls and other options.

Rear Displays

Depending on the vehicle, the rear displays are located in the back of the front seats or in the roof area. The displays show video from the media disc player or an AUX input device.

The displays receive power and ground from the vehicle harness. A discrete control circuit from the Media Disc Player is used to control the power state of the displays. The displays receive all other video, audio and control information (including stow and deploy commands) via the LVDS cable. The displays relay remote control commands to the Media Disc Player via the LVDS cable.

One display contains the infrared transmitters for the wireless headphones and the remote control. During operation, the infrared transmitters may be visible as illuminated LEDs. Both displays contain an infrared receiver for the remote control.

Remote Control

The wireless remote control is used to control the Rear Seat Infotainment system from the rear seat. Infrared signals from the remote control are received by the infrared receivers in the rear displays and then transmitted to the Media Disc Player via LVDS. The remote control can be used to turn the rear displays on or off, to change system settings and to select the source for the displays. Refer to the Owners Manual for additional information on remote control functions.

Direct sunlight, very bright light and loss of line of sight may affect the ability of the infrared receivers to respond to signals from the remote control.

Wireless Headphones

Wireless headphones allow for rear seat passengers to listen to an audio source without disturbing front seat passengers. The wireless headphones receive audio signals from the infrared transmitter in the left display. This transmission requires line of sight, so audio may be interrupted if anything blocks the signal.

A power button on the headphones is used to turn the headphones on. A red LED will illuminate when the headphones are turned on. The headphones automatically turn off if they lose the infrared signal from the system for approximately 4 minutes in order to preserve their battery power.

Each set of headphones has a rotary volume control on one of the earpieces.

Two distinct audio feeds are available to the headphones, which allows each rear passenger to hear unique audio content. Pressing the button in the center of the headphone volume knob will switch the headphone between channels.

Auxiliary Inputs

The rear seat entertainment system has an auxiliary input assembly that contains two USB ports, an HDMI port and a wired headphone jack with volume control. Refer to the Owners Manual for information on compatible devices and supported media types/formats.

Audio/Video Input Adapter

The Audio/Video Input Adapter contains a HDMI port, USB ports and a wired headphone jack. In older vehicles it also contained a SD card slot.

The assembly receives fused battery voltage and ground from the harness to power the internal hub device as well as providing additional amperage to power USB devices and MHL. It connects to the Media Disc Player through the vehicle harness, a USB cable and a LVDS cable.

HDMI port

An HDMI cable is required to connect an HDMI device to the rear seat entertainment system. HDMI streams are sent from the Audio/Video Input Adapter to the Media Disc Player via a LVDS cable.

Once a device is connected to the HDMI port, the device may be sourced to one or both of the rear displays using the remote control.

USB ports

The USB ports are connect to a USB hub, which is internal to the Audio/Video Input Adapter.

The internal hub device interfaces directly with the Media Disc Player via a standard USB cable with mini type USB connectors. In-line cable connections are typically found between the console and I/P harness.

The USB port allows connectivity to the Rear Seat Infotainment system from portable media players and/or a USB storage device (memory stick/ flash drive).

Once a supported device is connected to a USB port, the device may be sourced to one or both of the rear displays using the remote control.

Wired Headphone Jack

The wired headphone jack is used to connect an additional set of headphones to the system. Audio for the wired headphone jack can be from either the left or the right display source and is selected using the remote control.

A rotary control near the headphone jack is used to adjust the volume.

2017 ACCESSORIES & EQUIPMENT

Cellular, Entertainment and Navigation - Diagnostic Information and Procedures - CT6

DIAGNOSTIC INFORMATION AND PROCEDURES

DTC B0997: AUXILIARY ELECTRONIC CONTROL UNIT PERFORMANCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B0997 3A

Auxiliary Electronic Control Unit Performance Incorrect Component Installed

DTC B0997 39

Auxiliary Electronic Control Unit Performance Internal Electronic Failure

Circuit/System Description

The Info Display Module monitors itself for internal failures and reports its condition to the Human Machine Interface Control Module when requested. The info display also reports electronic identification information when requested.

Conditions for Running DTC

- Ignition On/Vehicle in Service Mode.
- The system voltage is 9-16 V
- DTC B101E is not set as current in the Human Machine Interface Control Module
- The test is run once during Human Machine Interface Control Module wake up

Conditions for Setting the DTC

B0997 3A

The Info Display Module has reported identification information that differs from the information calibrated in the Human Machine Interface Control Module.

B0997 39

The Info Display Module reports an internal malfunction.

Action Taken When DTC Sets

The Human Machine Interface Control Module will set the DTC and the Info Display Module will have limited or no functionality.

Conditions for Clearing the DTC

The Human Machine Interface Control Module detects a compatible Info Display Module with no internal malfunctions reported.

Reference Information

Schematic Reference

[Radio/Navigation System Schematics](#)

Connector End View Reference

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

Description and Operation

[Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

[Circuit/System Verification](#)

1. Ignition On/Vehicle in Service Mode. Infotainment system ON.
2. Verify DTC B101E is not set
 - **If DTC B101E is set**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .

- **If DTC B101E is not set**
3. Verify DTC B0997 is not set
 - **If DTC B0997 is set**

Replace the P17 Info Display Module.

- **If DTC B0997 is not set**
4. All OK

[Repair Instructions](#)

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Radio Control Assembly Replacement](#)

DTC B1024: CIRCUIT BOARD TEMPERATURE SENSOR (AUDIO AMPLIFIER)

[Diagnostic Instructions](#)

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

[DTC Descriptor](#)

DTC B1024 11

Circuit Board Temperature Sensor Above Maximum Threshold

[Circuit/System Description](#)

The audio amplifier monitors the internal circuitry for excessive temperature. When the amplifier senses an internal circuitry temperature greater than 95°C (203°F), the amplifier will set DTC B1024 11 and shut down until the internal circuitry cools below 90°C (194°F). No external circuit diagnosis is involved.

Conditions for Running the DTC

- Radio ON.
- Battery voltage must be between 9-16 volts.

Conditions for Setting the DTC

The audio amplifier detects an over-heat condition greater than 95°C (203°F) of the internal amplifier circuitry.

Action Taken When the DTC Sets

The audio amplifier will shut down and all speakers will be inoperative.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 100 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

Extended use or extremely high volume especially in warm weather conditions may cause this DTC to set. Under these conditions it may be normal for this DTC to set to prevent permanent damage to the audio amplifier circuitry.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

NOTE: Allow the vehicle cabin to cool if the temperature inside the vehicle is excessive before proceeding with this diagnostic procedure.

1. Verify the DTC sets outside of the Conditions for Running and Setting. Since most occurrences of this DTC are caused by extreme vehicle cabin temperatures due to ambient conditions, review with the customer the conditions under which the DTC set.

- **If the DTC sets within the Conditions for Running and Setting.**

The system is operating as designed, All OK.

- **If the DTC sets outside the Conditions for Running and Setting.**

2. Using the scan tool, clear the DTC.
3. Verify the DTC does not set while operating the infotainment system under the conditions the customer experienced the concern.

- **If the DTC sets**

Replace the T3 Audio Amplifier

- **If the DTC does not set**

4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the diagnostic procedure.

[Control Module References](#) for audio amplifier replacement, setup and programming

DTC B1024: CIRCUIT BOARD TEMPERATURE SENSOR (HUMAN MACHINE INTERFACE CONTROL MODULE)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B1024 53

Circuit Board Temperature Sensor Below Minimum Threshold

DTC B1024 54

Circuit Board Temperature Sensor Above Maximum Threshold

Circuit/System Description

The human machine interface control module monitors the internal circuitry for excessive temperature. When a temperature outside of the range is detected, the module sets the DTC and limits its operation to avoid damage.

Conditions for Running the DTC

- Ignition On/Vehicle in Service Mode.
- The system voltage is 9-16 V
- The test is run once per second when the infotainment system is operating

Conditions for Setting the DTC

B1024 53

The module senses an internal temperature less than -40Â°C (-40Â°F).

B1024 54

The module senses an internal temperature greater than 69Â°C (156Â°F).

Action Taken When the DTC Sets

- The human machine interface control module sets the DTC.
- A message is displayed indicating that the system performance is being impacted by the excessive temperature condition.
- The module stops communicating on the MOST Bus network, but does not interrupt communication on the network.
- The infotainment system and the Info Display Module will have limited or no functionality.
- Components or other subsystems that interface with the infotainment system may have limited or no functionality.

Conditions for Clearing the DTC

- The internal temperature is between -40°C (-40°F) and 69°C (156°F).
- A history DTC will clear once 100 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

Under certain conditions it may be normal for this DTC to set to prevent permanent damage to the module.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE: Allow the vehicle cabin to cool if the temperature inside the vehicle is excessive before proceeding with this diagnostic procedure.

1. Verify the DTC sets outside of the Conditions for Running and Setting. Since most occurrences of this DTC are caused by extreme vehicle cabin temperatures due to ambient conditions, review with the customer the conditions under which the DTC set.
 - **If the DTC sets within the Conditions for Running and Setting.**
The system is operating as designed, All OK.
 - **If the DTC sets outside the Conditions for Running and Setting.**
2. Using the scan tool, clear the DTC.
3. Verify the DTC does not set while operating the infotainment system under the conditions the customer experienced the concern.
 - **If the DTC sets**

- If the DTC does not set

4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for human machine interface control module replacement, programming and setup.

DTC B1025-B1215: AUDIO OUTPUT CIRCUIT (UQA)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

DTC Descriptors

DTC B1025

Audio Output 1 Circuit

DTC B1035

Audio Output 2 Circuit

DTC B1045

Audio Output 3 Circuit

DTC B1055

Audio Output 4 Circuit

DTC B1065

Audio Output 5 Circuit

DTC B1075

Audio Output 6 Circuit

DTC B1085

Audio Output 7 Circuit

DTC B1095

Audio Output 8 Circuit

For symptom byte information, refer to [Symptom Byte List](#).

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 1 Signal Circuits (Left Front Door)	B1025 02	B1025 04	B1025 01	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 2 Signal Circuits (Right Front Door)	B1035 02	B1035 04	B1035 01	-
Audio Output 3 Signal Circuits (Subwoofer)	B1045 02	B1045 04	B1045 01	-
Audio Output 4 Signal Circuits (Center I/P)	B1055 02	B1055 04	B1055 01	-
Audio Output 5 Signal Circuits (Left Rear Door)	B1065 02	B1065 04	B1065 01	-
Audio Output 6 Signal Circuits (Right Rear Door)	B1075 02	B1075 04	B1075 01	-
Audio Output 7 Signal Circuits (Left I/P)	B1085 02	B1085 04	B1085 01	-
Audio Output 8 Signal Circuits (Right I/P)	B1095 02	B1095 04	B1095 01	-

Circuit/System Description

The Media Oriented Systems Transport (MOST) is a high-speed multimedia network technology. The serial MOST bus uses a ring topology and synchronous data communication to transmit audio, video, data and control information between any devices attached.

The audio amplifier is a participant on the MOST network. The audio amplifier receives audio inputs and control information from the MOST bus.

Each of the audio output channel circuits (+) and (-), at the audio amplifier have a DC bias voltage that is approximately one half of the battery voltage. When using a DMM, each of the audio output channel circuits will measure approximately 6.5V DC. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound.

Diagnostic Aids

- Improper speaker mounting or loose trim may cause an audible buzz or distortion. Inspect the appropriate speaker and the surrounding interior trim for proper and secure mounting.

The EL-50334-6 Audio System Diagnostic CD contains audio tracks that can be used to duplicate and isolate such concerns. Tracks 11 and 12 contain audio sweep tones for testing for speaker and grill rattles.

If the speaker or surrounding interior trim is found to be loose or improperly secured, correctly secure the item.

- The test tones on the CD may be copied to a USB drive or other device to use during testing.
- Some audio output circuits are connected to more than one speaker, dependant on vehicle equipment. It may be necessary to disconnect one or more speakers during testing of some circuits.

Conditions for Running the DTC

NOTE: DTC B1325 must not be set as current for the amplifier to run any of the following tests.

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04

The test is run once during amplifier wake-up.

Conditions for Setting the DTC

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01

A short to voltage is detected on the specified (+) or (-) signal circuit

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02

A short to ground is detected on the specified (+) or (-) signal circuit

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04

An open is detected on the specified (+) or (-) signal circuit

Action Taken When the DTC Sets

The amplifier mutes the output channel and no sound is present from the speaker(s) that have a current circuit fault.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information.

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode. Infotainment system ON, mute OFF.
2. Verify clear audio is heard from each speaker, adjusting fade and balance controls to test each speaker individually.

- **If audio is inoperative from one or more speakers or the audio emitted is not clear**

Refer to Circuit/System Testing.

- **If clear audio is heard from all speakers**

3. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the appropriate P19 Speaker. Ignition On/Vehicle in Service Mode. Infotainment system ON, mute OFF.
2. Test for 5-7 V between the appropriate signal circuit terminals listed below and ground.
 - door and I/P speakers audio (-) circuit terminal 1
 - door and I/P speakers audio (+) circuit terminal 2
 - subwoofer audio (-) circuit terminal A
 - subwoofer audio (+) circuit terminal B
 - **If less than 5 V**
 1. Ignition OFF, disconnect the X1 and X2 harness connectors at the T3 Audio Amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 Audio Amplifier.
 - **If greater than 7 V**
 1. Ignition OFF, disconnect the X1 and X2 harness connectors at the T3 Audio Amplifier. Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 Audio Amplifier.
 - **If 5-7 V**
3. Test or replace the P19 Speaker.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Speaker Replacement Reference](#)
- [Control Module References](#) for audio amplifier replacement, programming and setup.

DTC B1025-B1215: AUDIO OUTPUT CIRCUIT (UQS)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

DTC Descriptors

DTC B1025

Audio Output 1 Circuit

DTC B1035

Audio Output 2 Circuit

DTC B1045

Audio Output 3 Circuit

DTC B1055

Audio Output 4 Circuit

DTC B1065

Audio Output 5 Circuit

DTC B1075

Audio Output 6 Circuit

DTC B1085

Audio Output 7 Circuit

DTC B1095

Audio Output 8 Circuit

DTC B1105

Audio Output 9 Circuit

DTC B1115

Audio Output 10 Circuit

For symptom byte information, refer to [Symptom Byte List](#) .

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 1 Signal Circuits (Left Front Door)	B1025 02	B1025 04	B1025 01	-
Audio Output 2 Signal Circuits (Right Front Door)	B1035 02	B1035 04	B1035 01	-
Audio Output 3 Signal Circuits (Subwoofer)	B1045 02	B1045 04	B1045 01	-
Audio Output 4 Signal Circuits (Center I/P)	B1055 02	B1055 04	B1055 01	-
Audio Output 5 Signal Circuits (Left Rear Door)	B1065 02	B1065 04	B1065 01	-
Audio Output 6 Signal Circuits (Right Rear Door)	B1075 02	B1075 04	B1075 01	-
Audio Output 7 Signal Circuits (Left I/P)	B1085 02	B1085 04	B1085 01	-
Audio Output 8 Signal Circuits (Right I/P)	B1095 02	B1095 04	B1095 01	-
Audio Output 9 Signal Circuits (Left Rear Surround)	B1105 02	B1105 04	B1105 01	-
Audio Output 10 Signal Circuits (Right Rear Surround)	B1115 02	B1115 04	B1115 01	-

Circuit/System Description

The Media Oriented Systems Transport (MOST) is a high-speed multimedia network technology. The serial MOST bus uses a ring topology and synchronous data communication to transmit audio, video, data and control information between any devices attached.

The audio amplifier is a participant on the MOST network. The audio amplifier receives audio inputs and control information from the MOST bus.

Each of the audio output channel circuits (+) and (-), at the audio amplifier have a DC bias voltage that is approximately one half of the battery voltage. When using a DMM, each of the audio output channel circuits will measure approximately 6.5 V DC. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound.

Diagnostic Aids

- Improper speaker mounting or loose trim may cause an audible buzz or distortion. Inspect the appropriate speaker and the surrounding interior trim for proper and secure mounting.

The EL-50334-6 Audio System Diagnostic CD contains audio tracks that can be used to duplicate and isolate such concerns. Tracks 11 and 12 contain audio sweep tones for testing for speaker and grill rattles.

If the speaker or surrounding interior trim is found to be loose or improperly secured, correctly secure the item.

- The test tones on the CD may be copied to a USB drive or other device to use during testing.
- Some audio output circuits are connected to more than one speaker, dependant on vehicle equipment. It may be necessary to disconnect one or more speakers during testing of some circuits.

Conditions for Running the DTC

NOTE: DTC B1325 must not be set as current for the amplifier to run any of the following tests.

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01, B1105 01, B1115 01

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02, B1105 02, B1115 02

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04, B1105 04, B1115 04

The test is run once during amplifier wake-up.

Conditions for Setting the DTC

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01, B1105 01, B1115 01

A short to voltage is detected on the specified (+) or (-) signal circuit

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02, B1105 02, B1115 02

A short to ground is detected on the specified (+) or (-) signal circuit

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04, B1105 04, B1115 04

An open is detected on the specified (+) or (-) signal circuit

Action Taken When the DTC Sets

The amplifier mutes the output channel and no sound is present from the speaker(s) that have a current circuit fault.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information.

Special Tools

EL-50334-50 USB Cable and Adapter Kit

Circuit/System Verification

1. Ignition ON, infotainment system ON, mute OFF.
2. Verify clear audio is heard from each speaker, adjusting fade and balance controls to test each speaker individually.
 - **If audio is inoperative from one or more speakers or the audio emitted is not clear**
Refer to Circuit/System Testing.
 - **If clear audio is heard from all speakers**
3. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the appropriate P19 Speaker. Ignition ON, infotainment system ON, mute OFF.
2. Test for 5-7 V between the appropriate signal circuit terminals listed below and ground.
 - door, I/P speakers and surround audio (-) circuit terminal 1
 - door, I/P speakers and surround audio (+) circuit terminal 2
 - subwoofer audio (-) circuit terminal A
 - subwoofer audio (+) circuit terminal B

- **If less than 5 V**

1. Ignition OFF, disconnect the X1 and X2 harness connectors at the T3 Audio Amplifier.
2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 Audio Amplifier.

- **If greater than 7 V**

1. Ignition OFF, disconnect the X1 and X2 harness connectors at the T3 Audio Amplifier.
Ignition ON.
2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 Audio Amplifier.

- **If 5-7 V**

3. Test or replace the P19 Speaker.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Speaker Replacement Reference**
- **Control Module References** for audio amplifier replacement, programming and setup.

DTC B1025-B1215: AUDIO OUTPUT CIRCUIT (UQH)

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provide an overview of each diagnostic category.

DTC Descriptors

DTC B1025

Audio Output 1 Circuit

DTC B1035

Audio Output 2 Circuit

DTC B1045

Audio Output 3 Circuit

DTC B1065

Audio Output 5 Circuit

DTC B1075

Audio Output 6 Circuit

DTC B1085

Audio Output 7 Circuit

DTC B1095

Audio Output 8 Circuit

DTC B1105

Audio Output 9 Circuit

DTC B1115

Audio Output 10 Circuit

DTC B1125

Audio Output 11 Circuit

DTC B1135

Audio Output 12 Circuit

DTC B1145

Audio Output 13 Circuit

DTC B1155

Audio Output 14 Circuit

DTC B1165

Audio Output 15 Circuit

DTC B1175

Audio Output 16 Circuit

DTC B1185

Audio Output 17 Circuit

DTC B1195

Audio Output 18 Circuit

DTC B1215

Audio Output 20 Circuit

For symptom byte information, refer to [Symptom Byte List](#) .

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 1 Signal Circuits (Center I/P)	B1025 02	B1025 04	B1025 01	-
Audio Output 2 Signal Circuits (Rear Center)	B1035 02	B1035 04	B1035 01	-
Audio Output 3 Signal Circuits (Left Rear Shelf)	B1045 02	B1045 04	B1045 01	-
Audio Output 4 Signal Circuits (Right Rear Shelf)	B1055 02	B1055 04	B1055 01	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 5 Signal Circuits (Left Rear Door)	B1065 02	B1065 04	B1065 01	-
Audio Output 6 Signal Circuits (Right Rear Door)	B1075 02	B1075 04	B1075 01	-
Audio Output 7 Signal Circuits (Left Front I/P)	B1085 02	B1085 04	B1085 01	-
Audio Output 8 Signal Circuits (Right Front I/P)	B1095 02	B1095 04	B1095 01	-
Audio Output 9 Signal Circuits (Left Front Door)	B1105 02	B1105 04	B1105 01	-
Audio Output 10 Signal Circuits (Right Front Door)	B1115 02	B1115 04	B1115 01	-
Audio Output 11 Signal Circuits (Left A-Pillar)	B1125 02	B1125 04	B1125 01	-
Audio Output 12 Signal Circuits (Right A-Pillar)	B1135 02	B1135 04	B1135 01	-
Audio Output 13 Signal Circuits (Left Driver Headrest)	B1145 02	B1145 04	B1145 01	-
Audio Output 14 Signal Circuits (Right Driver Headrest)	B1155 02	B1155 04	B1155 01	-
Audio Output 15 Signal Circuits (Left Passenger Headrest)	B1165 02	B1165 04	B1095 01	-
Audio Output 16 Signal Circuits (Right Passenger Headrest)	B1175 02	B1175 04	B1175 01	-
Audio Output 17 Signal Circuits (Left Front Subwoofer)	B1185 02	B1185 04	B1185 01	-
Audio Output 18 Signal Circuits (Right Front Subwoofer)	B1195 02	B1195 04	B1095 01	-
Audio Output 20 Signal Circuits (Rear Subwoofer)	B1215 02	B1215 04	B1215 01	-

Circuit/System Description

The Media Oriented Systems Transport (MOST) is a high-speed multimedia network technology. The serial MOST bus uses a ring topology and synchronous data communication to transmit audio, video, data and control information between any devices attached.

The primary audio amplifier is a participant on the MOST network. The audio amplifier receives audio inputs and control information from the MOST bus.

Each of the audio output channel circuits (+) and (-), at the audio amplifier have a DC bias voltage that is approximately one half of the battery voltage. When using a DMM, each of the audio output channel circuits will measure approximately 6.5 V DC. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound.

The system is also equipped with 3 Secondary amplifiers, that receive inputs from the primary amplifier. These amplifiers power the 3 subwoofers located throughout the vehicle. The amplifiers are not on the serial data bus and should be diagnosed on an individual basis.

Diagnostic Aids

- Improper speaker mounting or loose trim may cause an audible buzz or distortion. Inspect the appropriate speaker and the surrounding interior trim for proper and secure mounting.

The EL-50334-6 Audio System Diagnostic CD contains audio tracks that can be used to duplicate and isolate such concerns. Tracks 11 and 12 contain audio sweep tones for testing for speaker and grill rattles.

If the speaker or surrounding interior trim is found to be loose or improperly secured, correctly secure the item.

- The test tones on the CD may be copied to a USB drive or other device to use during testing.
- Some audio output circuits are connected to more than one speaker, dependant on vehicle equipment. It may be necessary to disconnect one or more speakers during testing of some circuits.

Conditions for Running the DTC

NOTE: DTC B1325 must not be set as current for the amplifier to run any of the following tests.

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01, B1105 01, B1115 01, B1125 01, B1135 01, B1145 01, B1155 01, B1165 01, B1175 01, B1185 01, B1195 01, B1215 01

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02, B1105 02, B1115 02, B1125 02, B1135 02, B1145 02, B1155 02, B1165 02, B1175 02, B1185 02, B1195 02, B1215 02

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04, B1105 04, B1115 04, B1125 04, B1135 04, B1145 04, B1155 04, B1165 04, B1175 04, B1185 04, B1195 04, B1215 04

The test is run once during amplifier wake-up.

Conditions for Setting the DTC

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01, B1105 01, B1115 01, B1125 01, B1135 01, B1145 01, B1155 01, B1165 01, B1175 01, B1185 01, B1195 01, B1215 01

A short to voltage is detected on the specified (+) or (-) signal circuit

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02, B1105 02, B1115 02, B1125 02, B1135 02, B1145 02, B1155 02, B1165 02, B1175 02, B1185 02, B1195 02, B1215 02

A short to ground is detected on the specified (+) or (-) signal circuit

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04, B1105 04, B1115 04, B1125 04, B1135 04, B1145 04, B1155 04, B1165 04, B1175 04, B1185 04, B1195 04, B1215 04

An open is detected on the specified (+) or (-) signal circuit

Action Taken When the DTC Sets

The amplifier mutes the output channel and no sound is present from the speaker(s) that have a current circuit fault.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode. Infotainment system ON, mute OFF.
2. Verify DTC B123A - B123C are not present.
 - **If DTC B123A-B123C are present**
Refer to [DTC B123A-B123C](#)
 - **If DTC B123A-B123C are not present**
3. Verify clear audio is heard from each speaker, adjusting fade and balance controls to test each speaker individually.
 - **If audio is inoperative from one or more speakers or the audio emitted is not clear**
 1. Verify audio is inoperative from any speaker besides a subwoofer.
 - If Audio is inoperative from a subwoofer
Refer to Subwoofer Circuit Malfunction.
 - If Audio is inoperative from any speaker besides a subwoofer.
Refer to Speaker Circuit Malfunction
 - **If clear audio is heard from all speakers**
4. All OK.

Circuit/System Testing

Speaker Circuit Malfunction

1. Ignition OFF, disconnect the harness connector at the appropriate P19 speaker. Ignition On/Vehicle in Service Mode. Infotainment system ON, mute OFF.

2. Test for 5-7 V between the appropriate signal circuit terminals listed below and ground.

- Door and Left I/P, Right I/P, Rear shelf, Rear center speakers audio (-) circuit terminal 1
- Door and Left I/P, Right I/P, Rear shelf, Rear center speakers audio (+) circuit terminal 2
- A-Pillar speakers audio (-) circuit terminal 3
- A-Pillar speakers audio (+) circuit terminal 4
- Center I/P speakers audio (-) circuit terminal 6
- Center I/P speakers audio (+) circuit terminal 1
- Headrest speakers audio (-) circuit terminal A
- Headrest speakers audio (+) circuit terminal B

• **If less than 5 V**

1. Ignition OFF, disconnect the appropriate harness connector(s) at the T3 audio amplifier.

2. Test for infinite resistance between the signal circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the signal circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the T3 audio amplifier.

• **If greater than 7 V**

1. Ignition OFF, disconnect the appropriate harness connector(s) at the T3 audio amplifier.

2. Test for less than 1 V between the signal circuit and ground.

- If 1 V or greater, repair the short to voltage on the circuit.
- If less than 1 V, replace the T3 audio amplifier.

• **If between 5-7 V**

3. Test or replace the P19 speaker.

Subwoofer Circuit Malfunction

1. Ignition OFF, disconnect the X1 harness connector at the appropriate secondary audio amplifier.

2. Test for less than 10 Ω between the appropriate ground circuit terminal listed below and ground.

- Left and Right Front Subwoofer circuit terminal 6
- Rear Subwoofer circuit terminal 14

• **If 10 Ω or greater**

1. Ignition OFF.

2. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

• **If less than 10 Ω**

3. Ignition On/Vehicle in Service Mode. Verify a test lamp illuminates between the appropriate B+ circuit terminal listed below and ground.

- Left and Right Front Amplifier circuit terminal 3
- Rear Amplifier circuit terminal 7

• **If the test lamp does not illuminate and the circuit fuse is good**

1. Ignition OFF, remove the test lamp.

2. Test for less than 2 Ω in the B+ circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.

• **If the test lamp does not illuminate and the circuit fuse is open**

1. Ignition OFF, remove the test lamp.

2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the secondary amplifier
- **If the test lamp illuminates**
4. Ignition OFF, disconnect the X1 harness connector at the appropriate secondary amplifier, Ignition On/Vehicle in Service Mode.
5. Radio ON, Test for 2.5-3.5 V between the appropriate control circuit listed below and ground.
 - Left and Right Front Amplifier circuit terminal 2
 - Rear Amplifier circuit terminal 5
 - **If less than 2.5 V**
 1. Ignition OFF, disconnect the appropriate harness connector at the T3 Audio Amplifier.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 Audio Amplifier.
 - **If greater than 3.5 V**
 1. Ignition OFF, disconnect the appropriate harness connector at the T3 Audio Amplifier.
 2. Test for less than 1 V between the control circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 Audio Amplifier.
 - **If between 2.5-3.5 V**
6. Radio ON, mute OFF.
7. Test for 3-5 V between the appropriate signal circuit terminals listed below and ground:
 - Left and Right front subwoofer control (+) circuit terminal 4
 - Left and Right front subwoofer control (-) circuit terminal 5
 - Rear Subwoofer control (+) circuit terminal 3
 - Rear Subwoofer control (-) circuit terminal 2
 - **If less than 3 V**
 1. Ignition OFF, disconnect the X4 harness connector at the T3 Amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 audio amplifier.
 - **If greater than 5 V**
 1. Ignition OFF, disconnect the X4 harness connector at the T3 amplifier, Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 audio amplifier.
 - **If between 3-5 V**
8. Ignition OFF, connect all harness connectors.
9. Disconnect the harness connector at the appropriate P19 Speaker. Ignition On/Vehicle in Service Mode. Radio ON.
10. Test for 5-7 V between the appropriate signal circuit terminals listed below and ground:
 - Left and Right front subwoofer control (+) circuit terminal 2

- Left and Right front subwoofer control (-) circuit terminal 1
 - Rear Subwoofer control (+) circuit terminal B
 - Rear Subwoofer control (-) circuit terminal A
 - **If less than 5 V**
 1. Ignition OFF, disconnect the X1 harness connector at the Secondary Amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the secondary amplifier.
 - **If greater than 7 V**
 1. Ignition OFF, disconnect the X1 harness connector at the Secondary amplifier, Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the Secondary amplifier.
 - **If between 5-7 V**
11. Test or replace the P19 Speaker.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Speaker Replacement Reference](#)
- [Control Module References](#) for audio amplifier replacement, programming and setup.

DTC B123A-B123C: AUDIO AMPLIFIER CONTROL CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B123A

Left Front Audio Amplifier Control Circuit

DTC B123B

Right Front Audio Amplifier Control Circuit

DTC B123C

Rear Audio Amplifier Control Circuit

For symptom byte information, refer to [Symptom Byte List](#).

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	B123A 2B, B123B 2B, B123C 2B, 1	B123A 2B, B123B 2B, B123C 2B, 1	-	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Remote Enable Circuit	B123A 2B, B123B 2B, B123C 2B, 1	B123A 2B, B123B 2B, B123C 2B, 1	B123A 2B, B123B 2B, B123C 2B, 2, 1	-
Speaker Control Circuits	B123C 02, 2, 1	B123C 04, 2, 1	B123C 00, B123C 2B, 2, 1	-
Ground	-	B123A 2B, B123B 2B, B123C 2B, 1	-	-
1. all components requiring remote enable inoperative 2. components will not power off with infotainment system				

Circuit/System Description

When the radio/amplifier is on, a discrete 3 V signal is supplied on the control circuit to each secondary audio amplifier. This signal is used to control the power state of the component. Each secondary audio amplifier controls the audio for its appropriate speaker.

Conditions for Running the DTC

- The radio/amplifier is ON.
- The system voltage is 9-16 V

Conditions for Setting the DTC

- The amplifier detects an open, short to ground or short to voltage on the control circuit.
- The above condition is present for greater than 250 mS.

Action Taken When the DTC Sets

- All components connected on the control circuit will be inoperative.

Conditions for Clearing the DTC

- The condition for setting the DTC no longer exists.
- After the ignition has been OFF for a sufficient amount of time to allow the amplifier to enter a low power/sleep state, the amplifier will re-enable the output on the following ignition cycle and the DTC will become history.
- A history DTC clears after 50 malfunction-free ignition cycles.

Diagnostic Aids

- This DTC may be stored as a history DTC without affecting the operation of the radio/infotainment systems.
- The radio's current limiting logic may not re-enable the output on the entertainment remote enable circuit until after the radio performs a full power-down. It may be necessary to wait 5 minutes between each test attempt with the key OFF and retained accessory power OFF.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition » On / Vehicle » In Service Mode
2. Verify no other DTCs are present.

- **If any other DTCs are present**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .

- **If no other DTCs are present**

3. Verify DTC B123A or B123B is not current.

- **If DTC B123A or B123B is current.**

Refer to Circuit/System Testing B123A or B123B.

- **If DTC B123A or B123B is not current**

4. Verify DTC B123C is not current.

- **If DTC B123C is current.**

Refer to Circuit/System Testing B123C

- **If DTC B123C is not current.**

5. All OK.

Circuit/System Testing

B123A or B123B

1. Ignition OFF, radio OFF.
2. Disconnect the X1 harness connector at the appropriate Secondary Audio Amplifier.
3. Test for less than 10 Ω between the test points: Ground circuit terminal 6 & Ground
 - **If 10 Ω or greater**
 1. Disconnect the ground connection: G305
 2. Test for less than 2 Ω between the test points: Ground circuit terminal 6 & Ground
 - If 2 Ω or greater » Repair the open/high resistance in the circuit.
 - If less than 2 Ω » Repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
4. Verify a test lamp turns On between the test points: B+ circuit terminal 8 & Ground
 - **If the test lamp does not illuminate and the circuit fuse is good**
 1. Ignition OFF, remove the test lamp.
 2. Test for less than 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.
 - **If the test lamp does not illuminate and the circuit fuse is open**
 1. Ignition OFF, remove the test lamp.
 2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.

- **If the test lamp illuminates**

5. Ignition On/Vehicle in Service Mode. Radio ON.

6. Test for 2.5-3.5 V between the control circuit terminal 2 and ground:

- **If less than 2.5 V**

1. Ignition OFF, disconnect the appropriate harness connector at the T3 Audio Amplifier.
2. Test for infinite resistance between the control circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the signal circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the T3 Audio Amplifier.

- **If greater than 3.5 V**

1. Ignition OFF, disconnect the appropriate harness connector at the T3 Audio Amplifier.
2. Test for less than 1 V between the control circuit and ground.

- If 1 V or greater, repair the short to voltage on the circuit.
- If less than 1 V, replace the T3 Audio Amplifier.

- **If between 2.5-3.5 V.**

7. Test or replace the Secondary Amplifier/Subwoofer Enclosure

B123C

1. Ignition OFF, radio OFF.

2. Disconnect the X1 harness connector at the appropriate Secondary Audio Amplifier.

3. Test for less than 10 Ω between the test points: Ground circuit terminal 14 & Ground

- **If 10 Ω or greater**

1. Disconnect the ground connection: G305
2. Test for less than 2 Ω between the test points: Ground circuit terminal 14 & Ground
 - If 2 Ω or greater» Repair the open/high resistance in the circuit.
 - If less than 2 Ω » Repair the open/high resistance in the ground connection.

- **If less than 10 Ω**

4. Verify a test lamp turns On between the test points: B+ circuit terminal 7 & Ground

- **If the test lamp does not illuminate and the circuit fuse is good**

1. Ignition OFF, remove the test lamp.
2. Test for less than 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.

- **If the test lamp does not illuminate and the circuit fuse is open**

1. Ignition OFF, remove the test lamp.
2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.

- **If the test lamp illuminates**

5. Ignition On/Vehicle in Service Mode. Radio ON.

6. Test for 2.5-3.5 V between the control circuit terminal 5 and ground:

- **If less than 2.5 V**

1. Ignition OFF, disconnect the appropriate harness connector at the T3 Audio Amplifier.
2. Test for infinite resistance between the control circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the signal circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.

- If less than 2 Ω , replace the T3 Audio Amplifier.
- **If greater than 3.5 V**
 1. Ignition OFF, disconnect the appropriate harness connector at the T3 Audio Amplifier.
 2. Test for less than 1 V between the control circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 Audio Amplifier.
- **If between 2.5-3.5 V.**
- 7. Ignition OFF, Reconnect harness connector at the appropriate Secondary Audio Amplifier. Disconnect the harness connector at the P19AC Speaker, Ignition ON/ Vehicle in Service Mode. Infotainment system ON, mute OFF.
- 8. Test for 3-8 V between the appropriate signal circuit terminals listed below and ground.
 - Rear Subwoofer (-) circuit terminal A
 - Rear Subwoofer (+) circuit terminal B
- **If less than 3 V**
 1. Ignition OFF, disconnect the appropriate harness connector at the Secondary Audio Amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the Secondary Audio Amplifier.
- **If greater than 8 V**
 1. Ignition OFF, disconnect the appropriate harness connector at the Secondary Audio Amplifier.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the Secondary Audio Amplifier.
- **If between 3-8 V**
- 9. Test or replace the P19AC Speaker

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for amplifier replacement, programming and setup

DTC B124B: USB 1 CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B124B

USB 1 Circuit

For symptom byte information refer to [Symptom Byte List](#) .

Diagnostic Fault Information

--	--

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	B124B, 2	B124B, 1	-	-
USB Cable	B124B	B124B	B124B	-
Ground	-	1	-	-
1. Fault may affect one or more components, dependant on fault location 2. Fault affects multiple components, dependant on vehicle equipment				

Circuit/System Description

The infotainment system has a USB port and a Auxiliary Audio Input Jack located in the center console. The receptacle assembly receives fused battery voltage and ground from the harness to power the internal hub device as well as providing additional amperage to power USB devices.

The internal hub device interfaces directly with the human machine interface control module via a standard USB cable. A Mini type USB connector is used to connect the human machine interface control module and the USB receptacle. Standard USB male to female connections are typically used for connecting USB cables together where an in-line connection is required. An in-line cable connection is typically found between the console and I/P harness.

Auxiliary Audio Input Jack

When a portable audio playback device is connected to the 3.5 mm (1/8 in.) auxiliary audio input jack an internal switch opens the detection signal circuit within the hub. The HMI detects the device and AUX becomes available as an audio source. Audio signals from the device are converted from analog to digital, these signals are then sent to the HMI from the auxiliary input jack via USB.

USB Port

The USB port allows connectivity to the infotainment system from portable media players or a USB storage device (memory stick/ flash drive). When a device is connected to the USB port, the system detects the device and switches to USB as the audio source. Once connected, the device can be controlled from the radio controls.

Not all portable media player devices or file types are compatible. Refer to the owner's manual for information on USB devices, control and operation.

Conditions for Running the DTC

- Ignition On/Vehicle in Service Mode.
- The system voltage is 9-16 V
- The infotainment system is ON
- The test is run once per second when the infotainment system is operating

Conditions for Setting the DTC

B124B 0B

The human machine interface control module detects an excessive current condition on the USB 5 V circuit.

B124B 04

The human machine interface control module does not detect the vehicle hub device.

B124B 11

The human machine interface control module detects an additional hub device attached to the vehicle USB port.

Action Taken When the DTC Sets

The USB port is inoperative while the DTC is current.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

- This DTC may be set due to the connection of an incompatible or faulty USB device.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

- **EL-50334-20** Multi-Media Interface Tester (MIT)
- **EL-50334-50** USB Cable and Adapter Kit
- **EL-50334-14** Infotainment Test Cable

Circuit/System Verification

1. Verify DTC B124B is not set. Since occurrences of this DTC can be caused by an incompatible or faulty USB device, review with the customer the conditions under which their concern occurred.

- **If DTC B124B is set.**

Refer to Circuit/System Testing.

- **If DTC B124B is not set.**

2. Ignition On/Vehicle in Service Mode. Infotainment system ON.
3. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the X83 Auxiliary Audio Input USB port and select the USB test mode.
4. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the infotainment system while operating the system to play audio from the test tool.

- **If audio is not heard from the test tool**

Refer to Circuit/System Testing

- **If audio is heard from test tool**

5. Verify the infotainment system can be switched to AUX as the audio source with the EL-50334-20 Multi-Media Interface Tester (MIT) connected to the auxiliary audio input jack.

- **If the infotainment system can not be switched to AUX as the audio source**

Refer to Circuit/System Testing

- **If the infotainment system can be switched to AUX as the audio source**

6. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the vehicle infotainment system while operating the test tool to begin audio playback.

- **If audio is not heard from the test tool.**

Refer to Circuit/System Testing

- **If audio is heard from the test tool.**

7. All OK

Circuit/System Testing

1. Ignition OFF, disconnect the X1 harness connector at the X83 Auxiliary Audio Input.

2. Test for less than 10 Ω between the ground circuit terminal 4 and ground.

- **If 10 Ω or greater**

1. Ignition OFF.

2. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 10 Ω**

3. Verify that a test lamp illuminates between the B+ circuit terminal 6 and ground.

- **If the test lamp does not illuminate**

1. Ignition OFF, remove the test lamp.

2. Test for less than 2 Ω in the B+ circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.

- **If the test lamp illuminates**

4. Verify the USB cable is properly connected at all components and in-line connections and there is no damage to the cable or connections.

- **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.

- **If no connection problems or cable damage is noted.**

5. Connect the X1 harness connector at the X83 Auxiliary Audio Input.

6. Disconnect the vehicle USB cable X3 harness connector at the K74 Human Machine Interface Control Module and the X83 Auxiliary Audio Input Adapter.

7. Connect the EL-50034-14 Infotainment Test Cable and the EL-50334-2 Type-A Female to Mini-B Male Cable together. Connect the assembled test cable to the K74 Human Machine Interface Control Module and the X83 Auxiliary Audio Input.

8. Ignition On/Vehicle in Service Mode. Infotainment system ON.

9. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the X83 Auxiliary Audio Input USB port and select the USB test mode.

10. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the infotainment system while operating the system to play audio from the test tool.

- **If audio is not heard from the test tool**

1. Replace the X83 Auxiliary Audio Input Adapter. Connect all harness connectors.

2. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the X83 Auxiliary Audio Input USB port and select the USB test mode.

3. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the infotainment system while operating the system to play audio from the test tool.

- If audio is not heard from the test tool, replace the K74 Human Machine Interface Control Module.
 - **If audio is heard from the test tool**
11. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the X83 Auxiliary Audio Input AUX port and select the AUX test mode.
 12. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the infotainment system while operating the system to play audio from the test tool.
 - **If audio is not heard from the test tool**
 1. Replace the X83 Auxiliary Audio Input Adapter. Connect all harness connectors.
 - **If audio is heard from the test tool.**
 13. Replace the vehicle USB cable between the K74 Human Machine Interface Control Module and the X83 Auxiliary Audio Input Adapter.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Audio Disc Player and USB Receptacle Replacement](#)
- [Control Module References](#) for human machine interface control module replacement, programming and setup.

DTC B124F: UNIVERSAL SERIAL BUS (USB) PROGRAMMING

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B124F

Universal Serial Bus (USB) Programming

For symptom byte information, refer to [Symptom Byte List](#) .

Circuit/System Description

Certain devices in the entertainment system must be programmed with specific software and other information to operate correctly. This DTC is the result of an unsuccessful USB programming event of the device. The symptom byte information is for engineering reference only. No external circuit diagnosis is involved

Conditions for Running the DTC

Once upon each USB Programming Event.

Conditions for Setting the DTC

The programming event was incomplete or completed with errors.

Action Taken When the DTC Sets

The entertainment system has limited or no functionality.

Conditions for Clearing the DTC

The programming event completes successfully.

Diagnostic Aids

DTC B124F could set if a programming attempt was made when the module already had the latest update available installed.

Circuit/System Verification

1. Ignition ON/vehicle in Service Mode.
2. Verify DTC B124F is not set.
 - **If DTC B124F is set**
 1. Program the device that set the DTC.
 2. Verify the DTC does not set.
 - If DTC is set, replace the device that set the DTC.
 - If the DTC is not set
 - 3. All OK.
 - **If DTC B124F is not set**
3. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for device replacement, programming and setup.

DTC B125A: ANTENNA 1 SIGNAL CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B125A 02

Antenna 1 Signal Circuit Short to Ground

DTC B125A 04

Antenna 1 Signal Circuit Open Circuit

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Radio Antenna Coax	B125A 02	B125A 04	1	-
Antenna Module Ground	-	1	-	-
1. May exhibit possible AM/FM interference.				

Circuit/System Description

The diversity antenna system uses antennas applied as appliques to the rear glass and two antenna modules. The right antenna 1 module receives both AM and FM signals, while the left antenna 2 module receives FM signals only. The antenna module receives the signals from the glass antenna. Each antenna module is connected to the radio by a coaxial cable.

The radio antenna module is enabled when the radio is turned on. The radio provides battery voltage to the antenna module using the center conductor of the antenna coaxial cable. When a 12 V signal is seen by the module on the center conductor of the antenna coax, the received signals are amplified.

When the AM band is selected on the radio, the antenna 1 module connects the AM antenna to the radio. When the FM band is selected, both antenna modules provide FM signals to the radio.

Conditions for Running the DTC

- Ignition On/Vehicle in Service Mode.
- Battery voltage must be between 9-16 V.

Conditions for Setting the DTC

B125A 02

The radio detects a short to ground in the antenna 1 signal circuit center conductor.

B125A 04

The radio detects an open in the antenna 1 signal circuit center conductor.

Action Taken When the DTC Sets

Radio reception may be poor or not available.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear after 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

Poor radio reception may be due to multiple influences, some of which may not be vehicle related. Areas which have high RF traffic or block the signal path may cause a degradation in radio reception. Radio reception may also be influenced by items within the vehicle, but not part of the radio system. Such examples are aftermarket electrical accessories or other items which may generate noise in the vehicle electrical system. Aftermarket window tinting, especially when there is a metallic in the film, may reduce radio reception.

AM reception is highly dependent on the antenna module receiving battery voltage from the radio and being properly grounded. When the antenna module does not receive power, AM stations may not be received and FM reception may be limited. If the module is not properly grounded, excessive interference in the signal may occur or reception may be limited.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Circuit/System Verification

1. Inspect the antenna located in the rear window. Verify all branches of the antennas are intact, with no scratches or other damage.
 - **If damage is found**

Repair or replace as necessary
 - **If no damage is found**
2. Ignition On/Vehicle in Service Mode. Infotainment system ON.
3. Verify station reception is normal when tuned to several known good AM and FM stations.
 - **If AM or FM reception is poor.**

Refer to Circuit/System Testing
 - **If reception is normal**
4. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the radio antenna coax cable from the A11 Radio and from the T23L Radio Antenna Amplifier-Left.
2. Verify the antenna coax cable passes the coax cable component test. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test**

Replace the antenna coax cable
 - **If the coax cable passes the test**
3. Connect the antenna coax cable to the A11 Radio. Ignition On/Vehicle in Service Mode. Infotainment system ON.
4. Verify a test lamp illuminates between the antenna coax cable center terminal and ground at the T23L Radio Antenna Amplifier-Left connector.
 - **If the test lamp does not illuminate**

Replace the A11 Radio.
 - **If the test lamp illuminates**
5. Test or replace the T23L Radio Antenna Amplifier-Left.

Component Testing

CAUTION: Refer to [Test Probe Caution](#) .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**

Replace the coax cable

- **If less than 5 Ω**
3. Test for less than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
 4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.
 - **If less than infinite resistance**
Replace the coax cable
 - **If infinite resistance**
 5. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Radio Antenna Amplifier Replacement \(Body Side\)](#) [Radio Antenna Amplifier Replacement \(Headliner\)](#)

[Control Module References](#) for radio replacement, programming and setup.

DTC B125B: ANTENNA 2 SIGNAL CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B125B 02

Antenna 2 Signal Circuit Short to Ground

DTC B125B 04

Antenna 2 Signal Circuit Open Circuit

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Radio Antenna Coax	B125B 02	B125B 04	1	-
Antenna Module Ground	-	1	-	-
1. May exhibit possible AM/FM interference.				

Circuit/System Description

The diversity antenna system uses antennas applied as appliques to the rear glass and two antenna modules. The right antenna 1 module receives both AM and FM signals, while the left antenna 2 module receives FM signals only. The antenna module receives the signals from the glass antenna. Each antenna module is connected to the radio by a coaxial cable.

The radio antenna module is enabled when the radio is turned on. The radio provides battery voltage to the antenna module using the center conductor of the antenna coaxial cable. When a 12 V signal is seen by the module on the center conductor of the antenna coax, the received signals are amplified.

When the AM band is selected on the radio, the antenna 1 module connects the AM antenna to the radio. When the FM band is selected, both antenna modules provide FM signals to the radio.

Conditions for Running the DTC

- Ignition ON.
- Battery voltage must be between 9-16 V.

Conditions for Setting the DTC

B125B 02

The radio detects a short to ground in the antenna 2 signal circuit center conductor.

B125B 04

The radio detects an open in the antenna 2 signal circuit center conductor.

Action Taken When the DTC Sets

Radio reception may be poor or not available.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear after 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

Poor radio reception may be due to multiple influences, some of which may not be vehicle related. Areas which have high RF traffic or block the signal path may cause a degradation in radio reception. Radio reception may also be influenced by items within the vehicle, but not part of the radio system. Such examples are aftermarket electrical accessories or other items which may generate noise in the vehicle electrical system. Aftermarket window tinting, especially when there is a metallic in the film, may reduce radio reception.

AM reception is highly dependent on the antenna module receiving battery voltage from the radio and being properly grounded. When the antenna module does not receive power, AM stations may not be received and FM reception may be limited. If the module is not properly grounded, excessive interference in the signal may occur or reception may be limited.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Circuit/System Verification

1. Inspect the antenna located in the rear window. Verify all branches of the antennas are intact, with no scratches or other damage.
 - **If damage is found**

Repair or replace as necessary
 - **If no damage is found**
2. Ignition ON, infotainment system ON.
3. Verify station reception is normal when tuned to several known good AM and FM stations.
 - **If AM or FM reception is poor.**

Refer to Circuit/System Testing
 - **If reception is normal**
4. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the radio antenna coax cable from the A11 Radio and from the T23R Radio Antenna Amplifier-Right.
2. Verify the antenna coax cable passes the coax cable component test. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test**

Replace the antenna coax cable
 - **If the coax cable passes the test**
3. Connect the antenna coax cable to the A11 Radio. Ignition ON, infotainment system ON.
4. Verify a test lamp illuminates between the antenna coax cable center terminal and ground at the T23R Radio Antenna Amplifier-Right connector.
 - **If the test lamp does not illuminate**

Replace the A11 Radio.
 - **If the test lamp illuminates**
5. Test or replace the T23R Radio Antenna Amplifier-Right.

Component Testing

CAUTION: Refer to [Test Probe Caution](#) .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**

Replace the coax cable

- **If less than 5 Ω**

3. Test for less than 5 Ω between the coax cable outer shield end to end.

- **If 5 Ω or greater**

Replace the coax cable

- **If less than 5 Ω**

4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.

- **If less than infinite resistance**

Replace the coax cable

- **If infinite resistance**

5. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Radio Antenna Amplifier Replacement \(Body Side\)](#) [Radio Antenna Amplifier Replacement \(Headliner\)](#)

[Control Module References](#) for radio replacement, programming and setup.

DTC B125C: SATELLITE ANTENNA CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B125C 01

Satellite Antenna Circuit Short to Battery

DTC B125C 02

Satellite Antenna Circuit Short to Ground

DTC B125C 04

Satellite Antenna Circuit Open

Circuit/System Description

The digital radio receiver, located inside the radio, receives digital radio information from the digital radio antenna located on the outside of the vehicle. The digital radio receiver is connected to the digital radio antenna via a shielded coax cable. The digital radio antenna contains an amplifier which is powered by the radio through the coax cable.

Conditions for Running the DTC

This DTC is run every 300 milliseconds.

Conditions for Setting the DTC

The radio detects a circuit fault in the digital radio antenna.

Action Taken When the DTC Sets

The radio displays No XM Signal or Check Antenna.

Conditions for Clearing the DTC

- A current DTC clears when the condition for setting the DTC is no longer present.
- A history DTC clears after 100 malfunction-free ignition cycles.

Diagnostic Aids

The digital radio antenna requires a clear line of sight to the sky to operate properly. Reception may be limited, intermittent or unavailable inside structures.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Special Tools

EL-48028 Digital Radio Test Antenna

For equivalent regional tools, refer to [Special Tools](#) and [Special Tools \(MIT Tool Instructions\)](#).

Circuit/System Verification

1. With the vehicle outside in an area with an unobstructed view of the southern sky, tune to XM.
2. Verify DTC B125C is not set as current and the No XM Signal message is not displayed on the radio.
 - **If DTC B125C is set as current or the No XM Signal message is displayed.**
Refer to Circuit/System Testing.
 - **If DTC B125C is not set as current and the No XM Signal message is not displayed.**
3. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the digital radio antenna coax cable from the A11 Radio. Connect the **EL-48028** Digital Radio Test Antenna to the radio and place on the roof of the vehicle.
2. Ignition ON, radio tuned to XM channel 1.
3. Verify DTC B125C is not set as current and XM reception is improved.
 - **If DTC B125C is set as current or XM reception is not improved**
Replace the A11 Radio.
 - **If DTC B125C is not set as current and XM reception is improved**
4. Ignition OFF, disconnect the digital radio antenna coax cable from the T4H Digital Radio Antenna.

5. Verify the digital radio antenna coax cable passes the coax cable component test. Refer to

Component Testing.

- **If the coax cable does not pass the test**

Replace the antenna coax cable

- **If the coax cable passes the test**

6. Test or replace the T4H Digital Radio Antenna.

Component Testing

CAUTION: Refer to **Test Probe Caution** .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.

2. Test for less than 5 Ω between coax cable center terminal end to end.

- **If 5 Ω or greater**

Replace the coax cable

- **If less than 5 Ω**

3. Test for less than 5 Ω between the coax cable outer shield end to end.

- **If 5 Ω or greater**

Replace the coax cable

- **If less than 5 Ω**

4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.

- **If less than infinite resistance**

Replace the coax cable

- **If infinite resistance**

5. All OK

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **High Frequency Antenna Replacement**
- **Control Module References** for radio replacement, programming and setup.

DTC B125E: DIGITAL AUDIO BROADCAST (DAB) CIRCUIT (EXCEPT IO6 WITH CW1)

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC B125E 01

DTC B125E 02

Digital Audio Broadcast (DAB) Circuit Short to Ground

DTC B125E 04

Digital Audio Broadcast (DAB) Circuit Open

Circuit/System Description

The diversity antenna system uses antennas applied as appliques to the rear glass and a antenna amplifier and a antenna module. The antenna amplifier receives both AM and FM signals, while the left antenna module receives FM and DAB signals. The antenna amplifier and module receive the signals from the glass antenna. Each antenna amplifier and module is connected to the radio by a coaxial cable. when equipped with the digital audio broadcast receiver, the antenna module provides the FM2 signals and the digital audio signals to the radio via two separate coax cables.

The digital audio broadcast receiver, located inside the radio, receives digital radio information from the antenna module. The digital audio broadcast receiver is connected to the antenna module via a shielded coax cable. The module contains an amplifier which is powered by the radio through the coax cable.

Conditions for Running the DTC

This DTC is run every 300 milliseconds.

Conditions for Setting the DTC

The radio detects a circuit fault in the digital radio antenna.

Action Taken When the DTC Sets

The digital radio has limited or no reception.

Conditions for Clearing the DTC

- A current DTC clears when the condition for setting the DTC is no longer present.
- A history DTC clears after 100 malfunction-free ignition cycles.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Circuit/System Testing

1. Ignition OFF, disconnect the digital radio antenna coax cable from the T23R Radio Antenna Amplifier-Right and the A11 Radio.
2. Verify the digital radio antenna coax cable passes the coax cable component test. Refer to **Component Testing**.
 - **If the coax cable does not pass the test**
Replace the antenna coax cable
 - **If the coax cable passes the test**
3. Replace the T23R Radio Antenna Amplifier-Right.
4. Ignition ON, A11 radio ON, tune to digital band.
5. Verify DTC B125E is not set as current and digital reception is improved.
 - **If DTC B125E is set as current or digital reception is improved**
Replace the A11 Radio.
 - **If DTC B125E is not set as current and digital reception is improved**
6. All OK.

Component Testing

CAUTION: Refer to **Test Probe Caution** .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
3. Test for less than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.
 - **If less than infinite resistance**
Replace the coax cable
 - **If infinite resistance**
5. All OK

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Radio Antenna Amplifier Replacement (Body Side) Radio Antenna Amplifier Replacement (Headliner)**

- [Control Module References](#) for radio replacement, programming and setup.

DTC B125E: DIGITAL AUDIO BROADCAST (DAB) CIRCUIT (IO6 WITH CW1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B125E 01

Digital Audio Broadcast (DAB) Short to Battery

DTC B125E 02

Digital Audio Broadcast (DAB) Circuit Short to Ground

DTC B125E 04

Digital Audio Broadcast (DAB) Circuit Open

Circuit/System Description

The diversity antenna system uses antennas applied as appliques to the rear glass and a antenna amplifier and a antenna module. The antenna amplifier receives both AM and FM signals, while the left antenna module receives FM and DAB signals. The antenna amplifier and module receive the signals from the glass antenna. Each antenna amplifier and module is connected to the Navigation Control Module by a coaxial cable. when equipped with the digital audio broadcast receiver, the antenna module provides the FM2 signals and the digital audio signals to the Navigation Control Module via two separate coax cables.

The digital audio broadcast receiver, located inside the Navigation Control Module, receives digital radio information from the antenna module. The digital audio broadcast receiver is connected to the antenna module via a shielded coax cable. The module contains an amplifier which is powered by the Navigation Control Module through the coax cable.

Conditions for Running the DTC

This DTC is run every 300 milliseconds.

Conditions for Setting the DTC

The Navigation Control Module detects a circuit fault in the digital radio antenna.

Action Taken When the DTC Sets

The digital radio has limited or no reception.

Conditions for Clearing the DTC

- A current DTC clears when the condition for setting the DTC is no longer present.
- A history DTC clears after 100 malfunction-free ignition cycles.

Reference Information

Schematic Reference

[Radio/Navigation System Schematics](#)

Connector End View Reference

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Circuit/System Testing

1. Ignition OFF, disconnect the digital radio antenna coax cable from the T23 Radio Antenna Amplifier and the K31 Navigation Control Module.
2. Verify the digital radio antenna coax cable passes the coax cable component test. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test**
Replace the antenna coax cable
 - **If the coax cable passes the test**
3. Replace the T23 Radio Antenna Amplifier.
4. Ignition ON, radio ON, tune to digital band.
5. Verify DTC B125E is not set as current and digital reception is improved.
 - **If DTC B125E is set as current or digital reception is improved**
Replace the K31 Navigation Control Module.
 - **If DTC B125E is not set as current and digital reception is improved**
6. All OK.

Component Testing

CAUTION: Refer to [Test Probe Caution](#) .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
3. Test for less than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.

- If less than infinite resistance

Replace the coax cable

- If infinite resistance

5. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Radio Antenna Amplifier Replacement \(Body Side\)](#) [Radio Antenna Amplifier Replacement \(Headliner\)](#)
- [Control Module References](#) for control module replacement, programming and setup.

DTC B125F: FRONT CENTER SPEAKER MOTOR

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

NOTE: This procedure may also diagnose malfunctions that are not detected by a DTC.

DTC B125F

Front Center Speaker Motor

Symptom Byte Information: [Symptom Byte List](#)

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	B125F 2B, B125F 3C, B125F 61	B125F 2B, B125F 3C, B125F 61	-	-
Signal circuit terminal 3	B125F 61, B125F 2B	B125F 61	B125F 2B, B125F 3C, B125F 61	-
Signal circuit terminal 4	B125F 2B, B125F 3C, B125F 61	B125F 2B, B125F 3C	B125F 2B, B125F 3C, B125F 61	-
Signal circuit terminal 9	B125F 2B, B125F 3C, B125F 61	B125F 2B, B125F 3C, B125F 61	B125F 2B, B125F 3C, B125F 61	-
Signal circuit terminal 7	B125F 61	B125F 3C, B125F 2B	B125F 2B, B125F 3C, B125F 61	-
Signal circuit terminal 8	B125F 2B, B125F 3C, B125F 61	B125F 2B, B125F 3C, B125F 61	B125F 2B, B125F 3C, B125F 61	-
Ground	-	B125F 2B, B125F 3C, B125F 61	-	-

Circuit/System Description

Circuit	Description
B+	Circuit is supplied with B+ via F30DA Fuse.
Signal circuit terminal 3	Circuit is temporarily supplied with Battery Voltage to command state of device
Signal circuit terminal 4	Circuit is pulsed with Battery Voltage to control device direction
Signal circuit terminal 9	Signal Circuit to monitor status of device
Signal circuit terminal 7	Signal circuit to notify device is in full up position
Signal circuit terminal 8	Signal circuit to notify device is in full down position
Ground	Chassis Ground

Component	Description
T3 Audio Amplifier	The module controls the diagnostic and functional properties of the Center Speaker.
P19B Speaker - Center Instrument Panel	Component position will be raised and lowered when commanded by the amplifier.

When the amplifier is commanded on, a signal is sent to the speaker motor to wake up. Battery voltage is then pulsed for 5 seconds from the amplifier to the speaker motor. Once the speakers reach the desired position, battery voltage is passed through one of the dedicated position lines.

Conditions for Running the DTC

Radio=On

Conditions for Setting the DTC

DTC B125F 61

The Amplifier is receiving a valid response from the component, but component never reaches final position.

DTC B125F 2B

The Amplifier is not receiving feedback of the directional circuit operation

DTC B125F 3C

The Amplifier is not receiving a valid position status signal.

Actions Taken When the DTC Sets

P19B Speaker - Center Instrument Panel=Disabled

Conditions for Clearing the DTC

- A current DTC will clear on the next malfunction-free ignition cycle.
- A history DTC will clear after 100 consecutive malfunction-free ignition cycles.

Diagnostic Aids

Once connector is disconnected at the speaker, the Amplifier will only supply power for less than a second when radio is turned on.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Radio/Audio System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References

Circuit/System Verification

1. Radio=On
2. Verify the center speakers raise from dashboard.
 - If speakers do not raise from dashboard

Refer to Circuit/System Testing
 - If speakers do raise from dashboard
3. Ignition OFF, radio OFF
4. Verify the center speakers lower into the dashboard.
 - If speakers do not lower into the dashboard.

Refer to Circuit/System Testing
 - If speakers do lower into the dashboard.
5. All OK.

Circuit/System Testing

1. Ignition/Vehicle & All vehicle systems Off

NOTE: It may take up to 2 min for all vehicle systems to power down before an accurate ground or low reference circuit continuity test can be performed.

2. Disconnect the electrical connector: P19B Speaker - Center Instrument Panel
3. Test for less than 10 Ω between the test points: Ground circuit terminal 10 @ Component harness & Ground
 - **If 10 Ω or greater**
 1. Disconnect the ground connection: G202
 2. Test for less than 2 Ω between the test points: Ground circuit terminal 10 @ Component harness & Ground
 - If 2 Ω or greater Repair the open/high resistance in the circuit.
 - If less than 2 Ω Repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
4. Verify a test lamp turns On between the test points: B+ circuit terminal 5 & Ground
 - **If the test lamp does not turn On and the circuit fuse is OK**
 1. Remove Test Lamp
 2. Test for less than 2 Ω between the test points: B+ circuit terminal 5 & F30DA Fuse
 - If 2 Ω or greater Repair the open/high resistance in the circuit.
 - If less than 2 Ω Verify the fuse is OK and there is voltage at the fuse.

- **If the test lamp does not turn On and the circuit fuse is open**

1. Remove & Test Lamp

2. Test for infinite resistance between the test points: B+ circuit terminal 5 & Ground

- If less than infinite resistance & Repair the short to ground on the circuit.
- If infinite resistance & Replace the component: P19B Speaker- Center Instrument Panel.

- **If the test lamp turns On**

5. Ignition/Vehicle & Off & Remove & Test lamp

6. Disconnect the electrical connector: T3 Audio Amplifier

7. Ignition On/Vehicle in Service Mode.

8. Test for less than 1 V between the test points:

- Signal circuit terminal 3 @ Component harness & Ground
- Signal circuit terminal 4 @ Component harness & Ground
- Signal circuit terminal 7 @ Component harness & Ground
- Signal circuit terminal 8 @ Component harness & Ground
- Signal circuit terminal 9 @ Component harness & Ground
- If 1 V or greater & Repair the short to voltage on the circuit.
- If less than 1 V

1. Test for infinite resistance between the test points:

- Signal circuit terminal 3 & Ground
- Signal circuit terminal 4 & Ground
- Signal circuit terminal 7 & Ground
- Signal circuit terminal 8 & Ground
- Signal circuit terminal 9 & Ground
- If less than infinite resistance & Repair the short to ground on the circuit.
- If infinite resistance

2. Test for less than 2 Ω between the test points:

- Signal circuit terminal 3 @ Component harness & Terminal 13 @ Control module harness
- Signal circuit terminal 4 @ Component harness & Terminal 12 @ Control module harness
- Signal circuit terminal 7 @ Component harness & Terminal 11 @ Control module harness
- Signal circuit terminal 8 @ Component harness & Terminal 15 @ Control module harness
- Signal circuit terminal 9 @ Component harness & Terminal 14 @ Control module harness
- If 2 Ω or greater & Repair the open/high resistance in the circuit.
- If less than 2 Ω Replace the component: P19B Speaker - Center Instrument Panel

9. Ignition & On / Vehicle & In Service Mode Radio=On

10. Verify the center speakers raise from dashboard.

- If speakers do not raise from dashboard

Replace the component: T3 Audio Amplifier

- If speakers do raise from dashboard

11. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Radio Front Center Speaker Replacement \(UQA, UQS\) Radio Front Center Speaker Replacement \(UQH\)](#)
- For control module replacement, programming and setup, refer to [Control Module References](#)

DTC B1265: ENTERTAINMENT SYSTEM REMOTE ENABLE CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B1265

Entertainment System Remote Enable Circuit

For symptom byte information, refer to [Symptom Byte List](#).

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Remote Enable	B1265 02, 1, 2	B1265 02, 1, 2	B1265 02, 1, 2	-
1. All components requiring remote enable inoperative 2. Components will not power off with infotainment system				

Circuit/System Description

When the radio is on, a discrete 12 V signal is supplied on the entertainment remote enable circuit to the Navigation Control Module. This signal is used to control the power state of the component.

Conditions for Running the DTC

- The radio is ON.
- The system voltage is 9-16 V

Conditions for Setting the DTC

- The radio detects an open, short to ground or short to voltage on the entertainment remote enable circuit.
- The above condition is present for greater than 250 mS.

Action Taken When the DTC Sets

- The radio implements a current limiting mode and disables the output on the entertainment remote enable circuit.
- All components connected on the entertainment remote enable circuit will be inoperative.

Conditions for Clearing the DTC

- The condition for setting the DTC no longer exists.
- After the ignition has been OFF for a sufficient amount of time to allow the radio to enter a low power/sleep state, the radio will re-enable the output on the following ignition cycle and the DTC will become history.
- A history DTC clears after 50 malfunction-free ignition cycles.

Diagnostic Aids

- This DTC may be stored as a history DTC without affecting the operation of the radio/infotainment systems.

- The radio's current limiting logic may not re-enable the output on the entertainment remote enable circuit until after the radio performs a full power-down. It may be necessary to wait 5 minutes between each test attempt with the key OFF and retained accessory power OFF.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

- [Navigation System Description and Operation \(with CW1\)](#)
- [Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information.

Circuit/System Testing

1. Ignition OFF, radio OFF, remove the radio B+ fuse.
2. Disconnect the X1 harness connector at the K31 Navigation Control Module.
3. Install the radio B+ fuse. Ignition ON, A11 Radio ON.
4. Connect a test lamp between the control circuit terminal 2 and ground.
5. Verify the test lamp turns ON and OFF when commanding the Remote Enable Circuit On and Off with a scan tool.
 - **If the test lamp is always OFF**
 1. Ignition OFF, remove the test lamp, disconnect the X1 harness connector at the A11 Radio.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the control circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the A11 Radio.
 - **If the test lamp is always ON**
 1. Ignition OFF, remove the test lamp, disconnect the X1 harness connector at the A11 Radio, ignition ON.
 2. Test for less than 1 V between the control circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the A11 Radio.
 - **If the test lamp turns ON and OFF**
6. Test or replace the K31 Navigation Control Module.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for radio or navigation control module replacement, programming and setup.

DTC B1271: THEFT PROTECTION ACTIVE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B1271 00

Theft Protection Active

Circuit/System Description

When the Control Module is initially installed in the vehicle, the Control Module receives VIN information via serial data. The Control Module stores a portion of the VIN and compares this sequence to the VIN information received each time the Control Module powers on. The VIN in the Control Module is a single one-time learn.

The Control Module theft deterrent system is intended to disable or limit Control Module functionality if incorrect vehicle information is received by the Control Module. The Control Module disables functionality if the VIN information received by the Control Module does not match the VIN information that has been learned by the Control Module. This DTC is generated by the module when the Theft Protection is activated.

Conditions for Running the DTC

This DTC test runs when the radio changes from OFF to ON.

Conditions for Setting the DTC

The Control Module has learned a correct VIN sequence and the VIN information received via serial data does NOT match the learned VIN sequence.

Action Taken When the DTC Sets

- The Control Module may be disabled or have limited functionality.
- The display will indicate that theft protection is active.

Conditions for Clearing the DTC

The Control Module receives the correct VIN information via serial data.

Diagnostic Aids

A possible cause of incorrect VIN info could be the Control Module was originally installed in another vehicle.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode. Control Module ON.
2. Verify DTC B1271 is not set in Control Module.
 - **If DTC B1271 is set in Control Module**
Replace the Control Module.
 - **If DTC B1271 is not set in Control Module**
3. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for Control Module replacement, programming and setup.

DTC B1277: MICROPHONE 1 INPUT SIGNAL CIRCUIT (EXCEPT IO6 WITH CW1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

DTC Descriptors

DTC B1277

Microphone 1 Input Signal Circuit

For symptom byte information, refer to [Symptom Byte List](#)

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Microphone Signal	B1277 02	B1277 04	B1277 04	-
Microphone Low Reference	B1277 02	B1277 04	-	-

Circuit/System Description

The human machine interface control module uses the cellular telephone microphone for voice recognition and cellular features. The human machine interface control module provides a bias voltage to each microphone (+) and (-) signal circuits for operation of the microphone.

Conditions for Running the DTC

The human machine interface control module performs a self diagnostic of the microphone circuits once after initial power up.

Conditions for Setting the DTC

B1277 02

The human machine interface control module detects an short to ground in the cellular phone microphone high signal circuit.

B1277 04

The following conditions will set this DTC:

- The human machine interface control module detects an open/high resistance in the cellular phone microphone high signal circuit.
- The human machine interface control module detects an open/high resistance in the microphone low signal circuit.

Action Taken When the DTC Sets

The voice recognition system malfunctions or is inoperative.

Conditions for Clearing the DTC

- A current DTC clears when the self diagnostic passes on the next ignition cycle.
- A history DTC clears when the ignition cycle counter reaches the reset threshold without a repeat of the malfunction.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the B24 Cellular Phone Microphone. Ignition On/Vehicle in Service Mode.
2. Test for 9-11 V between the signal circuit terminal B and ground.
 - **If less than 9 V**
 1. Ignition OFF, disconnect the X1 harness connector at the K74 Human Machine Interface Control Module.

2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground in the circuit.
 - If infinite resistance
3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K74 Human Machine Interface Control Module.
- **If greater than 11 V**
 1. Ignition OFF, disconnect the X1 harness connector at the K74 Human Machine Interface Control Module. Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K74 Human Machine Interface Control Module.
 - **If between 9-11 V**
 3. Test for less than 1 V between the signal circuit terminal A and ground.
 - **If greater than 1 V**
 1. Ignition OFF, X1 harness connector at the K74 Human Machine Interface Control Module. Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage in the circuit.
 - If less than 1 V, replace the K74 Human Machine Interface Control Module.
 - **If less than 1 V**
 4. Ignition OFF, disconnect the X1 harness connector at the K74 Human Machine Interface Control Module.
 5. Test for infinite resistance between the B24 Cellular Phone Microphone signal circuit terminal A and ground.
 - **If less than infinite resistance**
Repair the short to ground in the circuit
 - **If infinite resistance**
 6. Test for less than 2 Ω in the signal circuit end to end.
 - **If 2 Ω or greater**
Repair the open/high resistance in the circuit
 - **If less than 2 Ω**
 7. Replace the B24 Cellular Phone Microphone.
 8. Ignition On/Vehicle in Service Mode.
 9. Verify the DTC does NOT set.
 - **If the DTC sets**
Replace the K74 Human Machine Interface Control Module
 - **If the DTC does not set**
10. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Mobile Telephone Microphone Replacement](#)
- [Control Module References](#) for human machine interface control module replacement, programming and setup.

DTC B1277: MICROPHONE 1 INPUT SIGNAL CIRCUIT (IO6 WITH CW1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

DTC Descriptors

DTC B1277

Microphone 1 Input Signal Circuit

For symptom byte information, refer to [Symptom Byte List](#)

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Microphone Signal	B1277 02	B1277 04	B1277 04	-
Microphone Low Reference	B1277 02	B1277 04	-	-

Circuit/System Description

The Navigation Control Module uses the cellular telephone microphone for voice recognition. The Navigation Control Module provides a bias voltage to each microphone (+) and (-) signal circuits for operation of the microphone.

Conditions for Running the DTC

The Navigation control module performs a self diagnostic of the microphone circuits once after initial power up.

Conditions for Setting the DTC

B1277 02

The Navigation control module detects an short to ground in the cellular phone microphone high signal circuit.

B1277 04

The following conditions will set this DTC:

- The Navigation control module detects an open/high resistance in the cellular phone microphone high signal circuit.
- The Navigation control module detects an open/high resistance in the microphone low signal circuit.

Action Taken When the DTC Sets

The voice recognition system malfunctions or is inoperative.

Conditions for Clearing the DTC

- A current DTC clears when the self diagnostic passes on the next ignition cycle.
- A history DTC clears when the ignition cycle counter reaches the reset threshold without a repeat of the malfunction.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the B24 Cellular Phone Microphone. Ignition ON.
2. Test for 9-11 V between the signal circuit terminal B and ground.
 - **If less than 9 V**
 1. Ignition OFF, disconnect the X1 harness connector at the K31 Navigation Control Module.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground in the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K31 Navigation Control Module.
 - **If greater than 11 V**
 1. Ignition OFF, disconnect the X1 harness connector at the K31 Navigation Control Module. Ignition ON.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K31 Navigation Control Module.
 - **If between 9-11 V**
3. Test for less than 1 V between the signal circuit terminal A and ground.
 - **If greater than 1 V**
 1. Ignition OFF, X1 harness connector at the K31 Navigation Control Module. Ignition ON.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage in the circuit.
 - If less than 1 V, replace the K31 Navigation Control Module.
 - **If less than 1 V**
4. Ignition OFF, disconnect the X1 harness connector at the K31 Navigation Control Module.
5. Test for infinite resistance between the B24 Cellular Phone Microphone signal circuit terminal A and ground.
 - **If less than infinite resistance**

Repair the short to ground in the circuit
 - **If infinite resistance**
6. Test for less than 2 Ω in the signal circuit end to end.

- **If 2 Ω or greater**

Repair the open/high resistance in the circuit

- **If less than 2 Ω**

7. Replace the B24 Cellular Phone Microphone.

8. Ignition ON

9. Verify the DTC does NOT set.

- **If the DTC sets**

Replace the K31 Navigation Control Module

- **If the DTC does not set**

10. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Mobile Telephone Microphone Replacement](#)
- [Control Module References](#) for Navigation control module replacement, programming and setup.

DTC B127A: AUXILIARY VIDEO INPUT SIGNAL CIRCUIT OPEN CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B127A 04

Auxiliary Video Input Signal Circuit Open Circuit

Circuit/System Description

The rear seat entertainment system has an auxiliary input assembly that contains a USB port, RCA type audio/video jacks and a wired headphone jack with volume control. Refer to the Owners Manual for information on compatible devices and supported media types/formats.

The USB port interfaces with a hub device, internal to the assembly. The assembly receives fused battery voltage and ground from the harness to power the internal hub device as well as providing additional amperage to power USB devices.

The internal hub device interfaces directly with the disc player via a standard USB cable. A Mini type USB connector is used to connect the cable at the disc player and the auxiliary input assembly. Mini type USB male to female connections are used for connecting USB cables together where an in-line connection is required. An in-line cable connection is typically found between the console and I/P harness.

The USB port allows connectivity to the rear seat entertainment system from portable media players or a USB storage device (memory stick/ flash drive).

Once a supported device is connected to the USB port, the device may be sourced to one or both of the rear displays using the remote control.

Conditions for Running the DTC

- Ignition is ON or in the ACC position

- The system voltage is 9-16 V
- The rear seat entertainment system is ON
- The test is run once per second when the rear seat entertainment system is operating.

Conditions for Setting the DTC

The Media Disc Player does not detect the vehicle hub device.

Action Taken When the DTC Sets

The USB port is inoperative while the DTC is current.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

This DTC may be set due to the connection of an incompatible or faulty device.

Reference Information

Schematic Reference

Video System Schematics (UWG)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

Control Module References for scan tool information

Special Tools

EL-50334-20 Multi-Media Interface Tester (MIT)

Circuit/System Verification

1. Verify DTC B127A is not set. Since occurrences of this DTC can be caused by an incompatible or faulty USB device, review with the customer the conditions under which their concern occurred.
 - **If DTC B127A is set.**
Refer to Circuit/System Testing.
 - **If DTC B127A is not set.**
2. Ignition ON, rear seat entertainment system ON.
3. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the rear seat entertainment system USB port and select the USB test mode.

4. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the rear seat entertainment system while operating the system to play audio from the test tool.

- **If audio is not heard from the test tool**

Refer to Circuit/System Testing

- **If audio is heard from the test tool**

5. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the X1 harness connector at the X82 Audio/Video Input Adapter.

2. Test for less than 10 Ω between the ground circuit terminal 4 and ground.

- **If 10 Ω or greater**

1. Ignition OFF.

2. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 10 Ω**

3. Verify that a test lamp illuminates between the B+ circuit terminal 6 and ground.

- **If the test lamp does not illuminate**

1. Ignition OFF, remove the test lamp.

2. Test for less than 2 Ω in the B+ circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.

- **If the test lamp illuminates**

4. Verify the USB cable is properly connected at the X82 Audio/Video Input Adapter, A33 Media Disc Player and the console to I/P in-line connector and there is no damage to the cable or connections.

- **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.

- **If no connection problems or cable damage is noted.**

5. Replace the X82 Audio/Video Input Adapter. Connect all harness connectors.

6. Ignition ON, rear seat entertainment system ON.

7. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the X82 Audio/Video Input Adapter USB port and select the USB test mode.

8. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the rear seat entertainment system while operating the system to play audio from the test tool.

- **If audio is not heard from the test tool**

1. Replace the A33 Media Disc Player.

2. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the X82 Audio/Video Input Adapter USB port and select the USB test mode.

3. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the rear seat entertainment system while operating the system to play audio from the test tool.

- If audio is not heard from the test tool, replace the USB cable connected to the X82 Audio/Video Input Adapter. Verify audio is heard from the test tool. If audio is not heard from the test tool, replace the USB cable connected to the A33 Media Disc Player.
- If audio is heard from the test tool.

4. All OK

- **If audio is heard from the test tool**

9. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Audio/Video Receptacle Replacement](#)
- [Control Module References](#) for media disc player replacement, programming and setup.

DTC B127E: FRONT VIDEO DISPLAY OUTPUT SIGNAL

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B127E 00

Front Video Display Output Signal

Circuit/System Description

The infotainment display and controls are a separate component from the radio, combined into an assembly. The assembly is supplied battery voltage and ground from the vehicle harness. The human machine interface control module communicates digital video data for on-screen display through a dedicated cable containing the LVDS data circuits.

Control information, touch communications and dimming level for the display are communicated via a LIN serial data circuit to the human machine interface control module.

If the human machine interface control module detects the display is not responding to the output on the LVDS circuits, the human machine interface control module sets the DTC.

Conditions for Running the DTC

- Ignition is ON or in the ACC position
- The system voltage is 9-16 V
- The infotainment system is ON
- The test is continuously when the infotainment system is operating

Conditions for Setting the DTC

The human machine interface control module detects the display is not responding to the output on the LVDS circuits.

Action Taken When the DTC Sets

- The human machine interface control module sets this DTC
- No images are shown on the Info Display Module

Conditions for Clearing the DTC

- The human machine interface control module detects a properly synced digital video signal.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

[Radio/Navigation System Schematics](#)

Connector End View Reference

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Special Tools

- EL-50334-2 Type A female to Mini B male USB Cable
- EL-50334-14 Infotainment Test Cable

Circuit/System Testing

1. Vehicle OFF/Ignition OFF.
2. Verify the LVDS interface cable is properly connected at the P17 Info Display Module X2 and the K74 Human Machine Interface Control Module X5 connections and there is no damage to the cable or connections.
3. Ignition ON/Vehicle in Service Mode, infotainment system ON.
4. Verify the P17 Info Display Module does not display an image.
 - **If the P17 Info Display Module displays an image.**
All OK.
 - **If the P17 Info Display Module does not display an image.**
5. Vehicle OFF/Ignition OFF.
6. Disconnect the LVDS interface cable from the P17 Info Display Module X2.
7. Connect the EL-50334-2 Type A female to Mini B male USB Cable to the P17 Info Display Module X2. Connect the EL-50334-14 Infotainment Test Cable to the adapter.
8. Disconnect the LVDS interface cable from the K74 Human Machine Interface Control Module X5. Connect the EL-50334-14 Infotainment Test cable to the K74 Human Machine Interface Module X5.
9. Ignition ON/Vehicle in Service Mode, infotainment system ON.
10. Verify the P17 Info Display Module displays an image.
 - **If the P17 Info Display Module does not display an image**
 1. Replace the P17 Info Display Module. Connect all harness connectors.
 2. Ignition ON/Vehicle in Service Mode, infotainment system ON.
 3. Verify the P17 Info Display Module displays an image.
 - If the P17 Info Display Module still does not display an image, replace the K74 Human Machine Interface Control Module.
 - If the P17 Info Display Module displays an image.
 4. All OK.
 - **If the P17 Info Display Module displays an image.**
11. Replace the vehicle LVDS interface cable from the P17 Info Display Module X2 to the K74 Human Machine Interface Module X5.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Radio Control Assembly Replacement](#)
- [Control Module References](#) for human machine interface control module replacement, programming and setup.

DTC B128B: VIDEO DISPLAY OUTPUT SIGNAL - SIGNAL AMPLITUDE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B128B 18

Video Display Output Signal - Signal Amplitude < Minimum

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Rear Display B+	B1280 18*	B1280 18*	-	-
Rear Display Control	B1280 18*	B1280 18*	-	-
Rear Display Ground	-	B1280 18*	-	-
LVDS Cable	B128B 18*	B128B 18*	B128B 18*	-
*One or both rear seat entertainment displays inoperative				

Circuit/System Description

The rear displays are located in the back of the driver and passenger seat. The rear display screens may be sourced to view video from the front display.

The rear displays receives power and ground from the vehicle harness. A discrete control circuit from the media disc player is used to control the power state of the displays. The displays receive all other video, audio and control information via the LVDS cable.

If the media disc player detects that the rear display is not responding to the output on the LVDS circuits, the media disc player sets the DTC will not display mirrored images from the front display.

Conditions for Running the DTC

- Ignition is ON or in the ACC position
- The system voltage is 9-16 V
- The infotainment system is ON
- The test is run continuously when the rear seat entertainment is operating

Conditions for Setting the DTC

The media disc player detects that one or both of the rear displays is not responding to the output on the LVDS circuits.

Action Taken When the DTC Sets

- The media disc player sets the DTC
- Information is not shown on rear display

Conditions for Clearing the DTC

- The media disc player detects a properly synced digital video signal.
- A history DTC will clear once 40 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

- When this DTC is set, RSE video output is shut down.

Reference Information

Schematic Reference

Video System Schematics (UWG)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify no other DTCs are set.
 - **If any other DTCs are set**
Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .
 - **If no other DTCs are set.**
3. Ignition ON, rear seat entertainment system ON, sourced to front display.
4. Verify rear display turns on with the system.
 - **If the screen does not turn on**
Refer to Circuit/System Testing
 - **If screen turns on with the system.**
5. All OK.

Circuit/System Testing

1. Ignition OFF.
2. Verify the LVDS interface cable is properly connected at the appropriate P22 Video Display and the A33 Media Disc Player and there is no damage to the cable or connections.
3. Ignition ON, infotainment system ON.
4. Verify the P22 Video Display does display an image with rear seat entertainment sourced to front display.
 - **If the P22 Video Display does not display an image.**
 1. Ignition OFF.

2. Replace the video interface cable.
3. Ignition ON, infotainment system ON.
4. Verify the P22 Video Display does display an image.
 - If the P22 Video Display does not display an image
5. Replace the P22 Video Display. Connect all harness connectors.
6. Ignition ON, infotainment system ON.
7. Verify the P22 Video Display does display an image.
 - If the P22 Video Display still does not display an image, replace the A33 Media Disc Player.
 - If the P22 Video Display does display an image.
8. All OK.
 - **If the P22 Video Display does display an image.**
5. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Video Display Replacement](#)
- [Control Module References](#) for media disc player replacement, programming and setup.

DTC B128F: LEFT/RIGHT VIDEO DISPLAY MODE CONTROL SIGNAL

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B1288 62

Left Video Display Mode Control Signal - actuator stuck open

DTC B1288 63

Left Video Display Mode Control Signal - actuator stuck closed

DTC B128F 62

Right Video Display Mode Control Signal - actuator stuck open

DTC B128F 63

Right Video Display Mode Control Signal - actuator stuck closed

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	B128F, B1288, 1	B128F, B1288, 1	-	-
Remote Enable Control	B1265 02, 3	B128F, B1288, 1	2	-
LVDS Cable	-	B128F, B1288	-	-
Ground	-	B128F, B1288, 1	-	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
1. Display will not move when requested 2. Noticeable pop noise may be noticed in audio system when vehicle is started 3. All devices controlled by this circuit will be inoperative.				

Circuit/System Description

The RSE module controls the position of the P22 Video Display via the LVDS cable. When the UP position is desired, the RSE Module sends a signal via the P22 Video Display LVDS cable, which commands the P22 Video Display actuator to raise the display. When the display reaches the fully raised position, the actuator controller sends a signal to the RSE Module.

To lower the display, the RSE Module sends a signal via the LVDS Cable, which commands the P22 Video Display actuator to lower the display. When the display reaches the fully lowered position, the actuator controller sends a signal to the RSE Module.

The display automatically returns to the lowered position when the ignition is turned OFF. When the ignition is turned ON, the radio commands the display to return to it's previous position, raised or lowered, that was commanded during the previous ignition cycle.

Conditions for Running the DTC

The RSE Module is ON.

Conditions for Setting the DTC

DTC B1288 62

The RSE module has made 3 repeat requests to lower the left display without receiving the correct signal from the actuator indicating the display reached the lowered position.

DTC B1288 63

The RSE module has made 3 repeat requests to raise the left display without receiving the correct signal from the actuator indicating the display reached the raised position.

DTC B128F 62

The RSE module has made 3 repeat requests to lower the right display without receiving the correct signal from the actuator indicating the display reached the lowered position.

DTC B128F 63

The RSE module has made 3 repeat requests to raise the right display without receiving the correct signal from the actuator indicating the display reached the raised position.

Action Taken When the DTC Sets

The RSE Module cancels the raise or lower request and the display either does not move or returns automatically to it's previous position.

Conditions for Clearing the DTC

- A current DTC will clear when the conditions for setting are no longer present.
- A history DTC will clear after 100 malfunction free ignition cycles.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode.
2. Verify no other DTCs are set.
 - **If any other DTCs are set**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .
 - **If no other DTCs are set.**
3. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.
4. Verify rear displays raise when the system turns ON.
 - **If the display does not raise**

Refer to Circuit/System Testing
 - **If the display does raise.**
5. All OK.

Circuit/System Testing

1. Ignition OFF.
2. Disconnect the X1 harness connector at the appropriate P22 Video Display.
3. Test for less than 10 Ω between the ground circuit terminal 3 and ground.
 - **If 10 Ω or greater.**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω .**
4. Verify that a test lamp illuminates between the B+ circuit terminal 1 and ground.
 - **If the test lamp does not illuminate and the circuit fuse is good**
 1. Ignition OFF, remove the test lamp.
 2. Test for less than 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.
 - **If the test lamp does not illuminate and the circuit fuse is open**
 1. Ignition OFF, remove the test lamp.
 2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.

- If infinite resistance
3. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the P22 Video Display
 - **If the test lamp illuminates**
 5. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.
 6. Test for 5 V or greater between the control circuit terminal 2 and ground.
 - **If less than 5 V.**
 1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the control circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the A33 Media Disc Player.
 - **If 5 V or greater.**
 7. Ignition OFF.
 8. Verify the LVDS cable is properly connected at the P22 Video Display, A33 Media Disc Player and all in-line connectors and there is no damage to the cable or connections.
 - **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.
 - **If no connection problems or cable damage is noted.**
 9. Test or replace the appropriate P22 Video Display

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the diagnostic procedure.

- [Video Display Replacement](#)
- [Control Module References](#) for media disc player replacement, setup and programming.

DTC B1280: REAR SEAT ENTERTAINMENT INPUT SIGNAL CIRCUIT SIGNAL AMPLITUDE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B1280 18

Rear Seat Entertainment Input Signal Circuit Signal Amplitude < Minimum

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Rear Seat Entertainment Display B+	B1280 18*	B1280 18*	-	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Rear Seat Entertainment Display Control	B1280 18*	B1280 18*	-	-
Rear Seat Entertainment Display Ground	-	B1280 18*	-	-
LVDS Cable	B1280 18*	B1280 18*	B1280 18*	-
*One or both rear seat entertainment displays inoperative				

Circuit/System Description

The P22 Video Displays are located in the back of the driver and front passenger seats. The Displays show video from the media disc player.

The Displays receive power and ground from the vehicle body harness. A discrete control circuit from the disc player is used to control the power state of the displays.

The displays receive all other video, audio and control information via the LVDS cable. The LVDS cable connected to the media disc player contains two pairs of data circuits, one pair for each of the rear displays. A splitter cable is used to separate the data circuits to each individual display, providing separate information to each display.

Conditions for Running the DTC

- Ignition On/Vehicle in Service Mode.
- The system voltage is 9-16 V
- The rear seat entertainment system is ON
- The test is run continuously when the rear seat entertainment is operating

Conditions for Setting the DTC

The media disc player detects that one or both of the rear displays is not responding to the output on the LVDS circuits.

Action Taken When the DTC Sets

- The media disc player sets the DTC
- Information is not shown on one or both of the rear displays

Conditions for Clearing the DTC

- The media disc player detects a properly synced digital video signal.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

- When this DTC is set, one or both of the displays will not power on with the system.
- The media disc player supplies a current limited voltage signal on the control circuit to the rear displays. When tested at the display, the voltage measured will be approximately 10% less than the available battery voltage. For example, with the battery at 12.6 volts, the expected measurement would be approximately 11.3 volts. Although the voltage is near battery voltage, the limited amperage on the circuit is insufficient to light a test lamp.

Reference Information

Schematic Reference

Video System Schematics (UWG)

Connector End View Reference

Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Special Tools

- **EL-50334-2** Type A female to Mini B male USB Cable
- **EL-50334-4** Type A female to Mini B female Adapter
- **EL-50334-12** Infotainment Test Cable - RSE
- **EL-50334-13** Infotainment Test Cable - RSE Splitter
- **EL-50334-14** Infotainment Test Cable

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode.
2. Verify no other DTCs are set.
 - **If any other DTCs are set**
Refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .
 - **If no other DTCs are set.**
3. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.
4. Verify both rear seat displays turn on with the system.
 - **If one screen only does not turn on**
Refer to Circuit/System Testing - One Screen Inoperative
 - **If both screens do not turn on**
Refer to Circuit/System Testing - Both Screens Inoperative
 - **If both screens turn on with the system.**
5. All OK.

Circuit/System Testing

One Screen Inoperative

1. Ignition OFF.
2. Disconnect the X1 harness connector at the inoperative P22 Video Display.
3. Test for less than 10 Ω between the ground circuit terminal 3 and ground.
 - **If 10 Ω or greater.**
 1. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω .**

4. Verify that a test lamp illuminates between the B+ circuit terminal 1 and ground.

- **If the test lamp does not illuminate.**

Repair the open/high resistance in the circuit

- **If the test lamp illuminates.**

5. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.

6. Test for 5 V or greater between the control circuit terminal 2 and ground.

- **If less than 5 V.**

1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player.

2. Test for infinite resistance between the control circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the control circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the A33 Media Disc Player.

- **If 5 V or greater.**

7. Ignition OFF.

8. Verify the LVDS cable is properly connected at the P22 Video Display, A33 Media Disc Player and all in-line connectors and there is no damage to the cable or connections.

- **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.

- **If no connection problems or cable damage is noted.**

9. Connect the X1 harness connector at the P22 Video Display.

10. Disconnect the X2 harness connector at the operating P22 Video Display.

NOTE: In the following steps, the test tools are used to create a jumper for the LVDS cable from the operating display to the inoperative display.

11. Connect the EL-50334-4 Type A female to Mini B female Adapter to the harness of the operating P22 Video Display. Connect the EL-50334-14 Infotainment Test Cable to the adapter.

12. Disconnect the X2 harness connector at the inoperative P22 Video Display. Connect the EL-50334-14 Infotainment Test Cable to the inoperative P22 Video Display.

13. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.

14. Verify the P22 Video Display turns on.

- **If the P22 Video Display does not turn on.**

Replace the P22 Video Display.

- **If the P22 Video Display turns on.**

15. Disconnect the test cable and adapter from the harness of the operating P22 Video Display. Connect all harness connectors at operating P22 Video Display.

16. Disconnect the X4 harness connector at the A33 Media Disc Player.

17. Connect the EL-50334-12 Infotainment Test Cable - RSE to the A33 Media Disc Player. Connect the EL-50334-13 Infotainment Test Cable - RSE Splitter to the EL-50334-12 Infotainment Test Cable - RSE. Connect the EL-50334-14 Infotainment Test Cable and the EL-50334-2 Type A female to Mini B male USB Cable together. Connect the assembled test cables to the longer end of the EL-50334-13 Infotainment Test Cable - RSE Splitter and the inoperative P22 Video Display.

NOTE: In the following steps, the test tools are assembled and used to bypass the vehicle LVDS cable assembly to determine if there is an output from the A33 Media Disc player on LVDS.

18. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.

19. Verify the P22 Video Display does NOT turn ON.

- **If the P22 Video Display turns on.**

Replace the appropriate LVDS cable.

- **If the P22 Video Display does not turn on.**

20. Test or replace the A33 Media Disc Player.

Both Screens Inoperative

1. Ignition OFF.

2. Disconnect the X1 harness connector at each of the P22 Video Displays.

3. Test for less than 10 Ω between each ground circuit terminal 3 and ground.

- **If 10 Ω or greater.**

1. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 10 Ω .**

4. Verify that a test lamp illuminates between each B+ circuit terminal 1 and ground.

- **If the test lamp does not illuminate and the circuit fuse is good.**

1. Ignition OFF, remove the test lamp.

2. Test for less 2 Ω in the B+ circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.

- **If the test lamp does not illuminate and the circuit fuse is open.**

1. Ignition OFF, remove the test lamp.

2. Test for infinite resistance between the B+ circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance.

3. Replace the fuse.

4. Connect the harness connectors at the P22F Video Display.

5. Ignition ON, rear seat entertainment system ON.

6. Verify the fuse does not open.

- If the fuse opens, replace the P22F Video Display.
- If the fuse does not open, replace the P22E Video Display.

- **If the test lamp illuminates.**

5. Test for 5 V or greater between the control circuit terminal 2 and ground at each display.

- **If less than 5 V.**

1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player.

2. Test for infinite resistance between the control circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the control circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the A33 Media Disc Player.

- **If 5 V or greater.**

6. Ignition OFF.

7. Connect the X1 harness connectors at both of the P22 Video Displays.

8. Verify the LVDS cable is properly connected at the P22E Video Display, P22F Video Display, A33 Media Disc Player and all in-line connectors and there is no damage to the cable or connections.

- **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.

- **If no connection problems or cable damage is noted.**

9. Disconnect the X4 harness connector at the A33 Media Disc Player and the X2 harness connector at the P22E Video Display.
10. Connect the EL-50334-12 Infotainment Test Cable - RSE to the A33 Media Disc Player. Connect the EL-50334-13 Infotainment Test Cable - RSE Splitter to the EL-50334-12 Infotainment Test Cable - RSE. Connect the EL-50334-14 Infotainment Test Cable and the EL-50334-2 Type A female to Mini B male USB Cable together. Connect the assembled test cables to the longer end of the EL-50334-13 Infotainment Test Cable - RSE Splitter and the P22E Video Display.

NOTE: In the following steps, the test tools are assembled and used to bypass the vehicle LVDS cable assembly to determine if there is an output from the A33 Media Disc player on LVDS.

11. Ignition ON, rear seat entertainment system ON.
12. Verify the P22E Video Display turns on with the system.

- **If the P22E Video Display does not turn on.**

Replace the A33 Media Disc Player.

- **If the P22E Video Display turns on.**

13. Replace the appropriate vehicle LVDS cable in the body harness.
14. Connect all harness connectors at all components.
15. Ignition ON, rear seat entertainment system ON.
16. Verify both the P22 Video Displays turn on.

- **If the P22 Video Displays do not turn on.**

Replace the vehicle LVDS cable connected to the A33 Media Disc Player.

- **If the P22 Video Displays turn on.**

17. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Video Display Replacement](#)
- [Control Module References](#) for media disc player replacement, programming and setup.

DTC B1282: DISPLAY NOT RESPONDING - SIGNAL AMPLITUDE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B1282 18

Display not responding-signal amplitude < minimum

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Front Display B+	B1282 18*	B1282 18*	-	-
Front Display Control	B1282 18*	B1282 18*	-	-
Front Display Ground	-	B1282 18*	-	-
LVDS Cable	B1282 18*	B1282 18*	B1282 18*	-
*One or both rear seat entertainment displays inoperative				

Circuit/System Description

The front display is located in the dash between the driver and passenger seat. The front display screen may be sourced to show video from the disc player.

The display receives power and ground from the vehicle harness. A LIN circuit from the radio is used to control the power state of the display.

The display receives all other video, audio and control information via the LVDS cable.

Conditions for Running the DTC

- Ignition is ON or in the ACC position
- The system voltage is 9-16 V
- The infotainment system is ON
- The test is run continuously when the rear seat entertainment is operating

Conditions for Setting the DTC

The media disc player detects that one or both of the rear displays is not responding to the output on the LVDS circuits.

Action Taken When the DTC Sets

- The media disc player sets the DTC
- Information is not shown on front display

Conditions for Clearing the DTC

- The media disc player detects a properly synced digital video signal.
- A history DTC will clear once 40 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

- When this DTC is set, RSE video output is shut down.

Reference Information

Schematic Reference

Video System Schematics (UWG)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- **Circuit Testing**

- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify no other DTCs are set.
 - **If any other DTCs are set**
Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#).
 - **If no other DTCs are set.**
3. Ignition ON, rear seat entertainment system ON, front display sourcing media from media disc player.
4. Verify front display turns on with the system.
 - **If the screen does not turn on**
Refer to Circuit/System Testing
 - **If screen turns on with the system.**
5. All OK.

Circuit/System Testing

1. Ignition OFF.
2. Verify the LVDS interface cable is properly connected at the P17 Info Display Module X3 and the A33 Media Disc Player X5 connections and there is no damage to the cable or connections.
3. Ignition ON, infotainment system ON.
4. Verify the P17 Info Display Module does not display an image with the front display sourcing media from media disc player.
 - **If the P17 Info Display Module displays an image.**
All OK.
 - **If the P17 Info Display Module does not display an image.**
5. Ignition OFF.
6. Replace the video interface cable.
7. Ignition ON, infotainment system ON.
8. Verify the P17 Info Display Module displays an image.
 - **If the P17 Info Display Module does not display an image**
 1. Replace the P17 Info Display Module. Connect all harness connectors.
 2. Ignition ON, infotainment system ON.
 3. Verify the P17 Info Display Module displays an image.
 - If the P17 Info Display Module still does not display an image, replace the A33 Media Disc Player.
 - If the P17 Info Display Module displays an image.
 4. All OK.
 - **If the P17 Info Display Module displays an image.**
9. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Radio Control Assembly Replacement](#)
- [Control Module References](#) for media disc player replacement, programming and setup.

DTC B1288: LEFT/RIGHT VIDEO DISPLAY MODE CONTROL SIGNAL

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B1288 62

Left Video Display Mode Control Signal - actuator stuck open

DTC B1288 63

Left Video Display Mode Control Signal - actuator stuck closed

DTC B128F 62

Right Video Display Mode Control Signal - actuator stuck open

DTC B128F 63

Right Video Display Mode Control Signal - actuator stuck closed

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	B128F, B1288, 1	B128F, B1288, 1	-	-
Remote Enable Control	B1265 02, 3	B128F, B1288, 1	2	-
LVDS Cable	-	B128F, B1288	-	-
Ground	-	B128F, B1288, 1	-	-
1. Display will not move when requested 2. Noticeable pop noise may be noticed in audio system when vehicle is started 3. All devices controlled by this circuit will be inoperative.				

Circuit/System Description

The RSE module controls the position of the P22 Video Display via the LVDS cable. When the UP position is desired, the RSE Module sends a signal via the P22 Video Display LVDS cable, which commands the P22 Video Display actuator to raise the display. When the display reaches the fully raised position, the actuator controller sends a signal to the RSE Module.

To lower the display, the RSE Module sends a signal via the LVDS Cable, which commands the P22 Video Display actuator to lower the display. When the display reaches the fully lowered position, the actuator controller sends a signal to the RSE Module.

The display automatically returns to the lowered position when the ignition is turned OFF. When the ignition is turned ON, the radio commands the display to return to its previous position, raised or lowered, that was commanded during the previous ignition cycle.

Conditions for Running the DTC

The RSE Module is ON.

Conditions for Setting the DTC

DTC B1288 62

The RSE module has made 3 repeat requests to lower the left display without receiving the correct signal from the actuator indicating the display reached the lowered position.

DTC B1288 63

The RSE module has made 3 repeat requests to raise the left display without receiving the correct signal from the actuator indicating the display reached the raised position.

DTC B128F 62

The RSE module has made 3 repeat requests to lower the right display without receiving the correct signal from the actuator indicating the display reached the lowered position.

DTC B128F 63

The RSE module has made 3 repeat requests to raise the right display without receiving the correct signal from the actuator indicating the display reached the raised position.

Action Taken When the DTC Sets

The RSE Module cancels the raise or lower request and the display either does not move or returns automatically to it's previous position.

Conditions for Clearing the DTC

- A current DTC will clear when the conditions for setting are no longer present.
- A history DTC will clear after 100 malfunction free ignition cycles.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information.

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode.
2. Verify no other DTCs are set.
 - **If any other DTCs are set**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .

- **If no other DTCs are set.**

3. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.

4. Verify rear displays raise when the system turns ON.

- **If the display does not raise**

Refer to Circuit/System Testing

- **If the display does raise.**

5. All OK.

Circuit/System Testing

1. Ignition OFF.

2. Disconnect the X1 harness connector at the appropriate P22 Video Display.

3. Test for less than 10 Ω between the ground circuit terminal 3 and ground.

- **If 10 Ω or greater.**

1. Ignition OFF.

2. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 10 Ω .**

4. Verify that a test lamp illuminates between the B+ circuit terminal 1 and ground.

- **If the test lamp does not illuminate and the circuit fuse is good**

1. Ignition OFF, remove the test lamp.

2. Test for less than 2 Ω in the B+ circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.

- **If the test lamp does not illuminate and the circuit fuse is open**

1. Ignition OFF, remove the test lamp.

2. Test for infinite resistance between the B+ circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for infinite resistance between the signal circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance, replace the P22 Video Display

- **If the test lamp illuminates**

5. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.

6. Test for 5 V or greater between the control circuit terminal 2 and ground.

- **If less than 5 V.**

1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player.

2. Test for infinite resistance between the control circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the control circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the A33 Media Disc Player.

- **If 5 V or greater.**

7. Ignition OFF.

8. Verify the LVDS cable is properly connected at the P22 Video Display, A33 Media Disc Player and all in-line connectors and there is no damage to the cable or connections.

- **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.

- **If no connection problems or cable damage is noted.**

9. Test or replace the appropriate P22 Video Display

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the diagnostic procedure.

- [Video Display Replacement](#)
- [Control Module References](#) for media disc player replacement, setup and programming.

DTC B12A1: AUDIO CONTROL REQUEST CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B12A1 01

Audio Control Request Circuit Short to Battery

DTC B12A1 02

Audio Control Request Circuit Short to Ground

DTC B12A1 04

Audio Control Request Circuit Open

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Control Request Circuit	DTC B12A1 02	DTC B12A1 04, 1	DTC B12A1 01, 1	-
1. Navigation Control Module Malfunction				

Circuit/System Description

The Navigation Control Module plays events on the info display module. The Navigation Control Module sends a request to the radio via the audio request signal circuit. If the radio grants the request, the radio plays the audio through the speakers.

Conditions for Running the DTC

- The radio is ON.
- The system voltage is 9-16 V

Conditions for Setting the DTC

- The radio detects an open, short to ground or short to voltage on the Audio Control Request Circuit.
- The above condition is present for greater than 250 mS.

Action Taken When the DTC Sets

Audio playback inoperative while the DTC is current.

Conditions for Clearing the DTC

- The DTC becomes history on the next ignition cycle after the conditions for setting the DTC are no longer present.
- A history DTC will clear once 100 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

- [Navigation System Description and Operation \(with CW1\)](#)
- [Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

1. Ignition OFF, disconnect the X2 harness connector at the K31 Navigation Control Module, ignition ON.
2. Test for less than 1 V between the signal circuit terminal 4 and ground.
 - **If 1 V or greater**
 1. Ignition OFF, disconnect the X1 harness connector at the A11 Radio, ignition ON.
 2. Test for less than 1 V in the signal circuit end to end.
 - If 1 V or Greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the A11 Radio.
 - **If less than 1 V**
3. Ignition OFF, disconnect X1 harness connector at the A11 Radio.
4. Test for infinite resistance between the signal circuit Terminal 17 and ground.
 - **If less than infinite resistance**

Repair the short to ground on the circuit.
 - **If infinite resistance**
5. Test for less than 2 Ω in the signal circuit end to end.
 - **If 2 Ω or greater .**

Repair the open/high resistance in the circuit
 - **If less than 2 Ω**
6. Replace the K31 Navigation Control Module, connect all harness connectors.
7. Ignition ON, Radio ON.
8. Verify DTC B12A1 is not set.

- If DTC B12A1 is set

Replace A11 Radio

- If DTC B12A1 is not set

9. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for radio or Navigation Control Module replacement, programming and setup.

DTC B12A3: DISPLAY CONTROL REQUEST CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B12A3 01

Display Control Request Circuit Short to Battery

DTC B12A3 02

Display Control Request Circuit Short to Ground

DTC B12A3 04

Display Control Request Circuit Open

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Video Display Request Circuit	DTC B12A3 02	DTC B12A3 04, 1	DTC B12A3 01, 1	-
1. Navigation Control Malfunction				

Circuit/System Description

The Navigation Control Module can play events on the info display module. The Navigation Control Module sends a request to the radio via the video display request signal circuit. If the radio grants the request, the radio sends a command to the info display module via serial data.

Conditions for Running the DTC

- The radio is ON.
- The system voltage is 9-16 V

Conditions for Setting the DTC

- The radio detects an open, short to ground or short to voltage on the Display Control Request Circuit.
- The above condition is present for greater than 250 mS.

Action Taken When the DTC Sets

Video playback on the info display module inoperative while the DTC is current.

Conditions for Clearing the DTC

- The DTC becomes history on the next ignition cycle after the conditions for setting the DTC are no longer present.
- A history DTC will clear once 100 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

- [Navigation System Description and Operation \(with CW1\)](#)
- [Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information.

Circuit/System Testing

1. Ignition OFF, disconnect the X1 harness connector at the K31 Navigation Control Module, ignition ON.
2. Test for less than 1 V between the signal circuit terminal 6 and ground.
 - **If 1 V or greater**
 1. Ignition OFF, disconnect the X1 harness connector at the A11 Radio, ignition ON.
 2. Test for less than 1 V in the signal circuit end to end.
 - If 1 V or Greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the A11 Radio.
 - **If less than 1 V**
3. Ignition OFF, disconnect X1 harness connector at the A11 Radio.
4. Test for infinite resistance between the signal circuit Terminal 16 and ground.
 - **If less than infinite resistance**

Repair the short to ground on the circuit.
 - **If infinite resistance**
5. Test for less than 2 Ω in the signal circuit end to end.
 - **If 2 Ω or greater .**

Repair the open/high resistance in the circuit
 - **If less than 2 Ω**
6. Replace the K31 Navigation Control Module, connect all harness connectors.
7. Ignition ON, Radio ON.
8. Verify DTC B12A3 is not set.

- If DTC B12A3 is set

Replace A11 Radio

- If DTC B12A3 is not set

9. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for Radio or Navigation Control Module replacement, programming and setup.

DTC B12A4: INFOTAINMENT FACEPLATE CONTROL MODULE A

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B12A4 39

Infotainment Faceplate Control Module A Internal Electronic Failure

DTC B12A4 45

Infotainment Faceplate Control Module A Build Variant not Programmed

Circuit/System Description

The radio communicates with the radio controls via serial data. This DTC indicates a fault in the radio controls. No external circuits are involved. The radio may continue to respond normally to faceplate functions when this DTC is set.

Conditions for Running the DTC

- Ignition is ON or in the ACC position.
- The system voltage is at least 9.5 V and no more than 15.5 V.
- All the above conditions are present for greater than 10 seconds.

Conditions for Setting the DTC

The radio receives an improper status response indicating an internal ECU fault in the radio controls.

Action Taken when the DTC Sets

No action is taken.

Conditions for Clearing the DTC

- A current DTC clears when the radio receives a proper status response message back from the radio control assembly.
- A history DTC clears after 50 malfunction-free ignition cycles.

Diagnostic Aids

- This DTC may be stored as a history DTC without affecting the operation of the radio controls.
- If stored only as a history DTC and not retrieved as a current DTC, do not replace the radio controls.
- If this DTC is retrieved as both a current and history DTC, replace the radio controls.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information.

Circuit/System Verification

1. Ignition ON.
2. Verify DTC B12A4 39 is not set.
 - **If DTC B12A4 39 is set**
Replace the P17 Info Display Module.
 - **If DTC B12A4 39 is not set**
3. Verify DTC B12A4 45 is not set.
 - **If DTC B12A4 45 is set**
 1. Verify the A20 Radio/HVAC Controls or A22 Radio Controls can be programmed using Service Programming System (SPS). Refer to Control Module References .
 - If Service Programming System (SPS) programming is supported, program the A20 Radio/HVAC Controls or A22 Radio Controls and verify the DTC does not set while operating the vehicle within the Conditions for Running the DTC. If the DTC sets, replace the P17 Info Display Module.
 - If Service Programming System (SPS) programming is not supported.
 2. Replace the P17 Info Display Module.
 - **If DTC B12A4 45 is not set**
4. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair.

Control Module References for Info Display Module replacement, programming and setup.

DTC B12A8: OPTICAL MEDIA DRIVE THEFT LOCKED

Diagnostic Instructions

- Perform the Diagnostic System Check - Vehicle prior to using this diagnostic procedure.
- Review Strategy Based Diagnosis for an overview of the diagnostic approach.
- Diagnostic Procedure Instructions provides an overview of each diagnostic category.

DTC Descriptor

DTC B12A8 00

Optical Media Drive Theft Locked

Circuit/System Description

When the Media Disc Player is initially installed in the vehicle, it receives VIN information via serial data. The Media Disc Player stores a portion of the VIN and compares this sequence to the VIN information received each time the Media Disc Player powers on. The VIN in the Media Disc Player is a single one-time learn.

The Media Disc Player theft deterrent system is intended to disable or limit Media Disc Player functionality if incorrect vehicle information is received by the Media Disc Player. The Media Disc Player disables functionality if the VIN information received by the Media Disc Player does not match the VIN information that has been learned by the Media Disc Player. This DTC is generated by the module when the Theft Protection is activated.

Conditions for Running the DTC

This test runs once per second while the Media Disc Player is being accessed.

Conditions for Setting the DTC

The Media Disc Player has learned a correct VIN sequence and the VIN information received via serial data does NOT match the learned VIN sequence.

Action Taken When the DTC Sets

The Media Disc Player may be disabled or have limited functionality.

Conditions for Clearing the DTC

The Media Disc Player receives the correct VIN information via serial data.

Diagnostic Aids

A possible cause of incorrect VIN information could be the Media Disc Player was originally installed in another vehicle.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information.

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode.
2. Verify DTC B12A8 is not set.
 - **If DTC B12A8 is set**

Replace the A33 Media Disc Player.
 - **If DTC B12A8 is not set**
3. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for media disc player replacement, programming and setup.

DTC B1446 OR B1447: BACKUP POWER SOURCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B1446

Replace Backup Power Source Below Minimum Threshold

DTC B1447

Backup Power Source Open Circuit

For symptom byte information, refer to [Symptom Byte List](#)

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Backup Battery B+	B1447 03	B1447 04	-	-
Backup Battery Low Reference	B1447 03	B1447 04	-	-

Circuit/System Description

The backup power source provides voltage to the telematics communication interface control module, to be able to successfully place a call in the event of a main battery disconnect during a collision event.

Conditions for Running the DTC

B1446 03

- Ignition On/Vehicle in Service Mode.
- System voltage is between 9.5 and 15.5 V.
- DTC B1447 is not set.

B1447 04

- Ignition On/Vehicle in Service Mode.
- System voltage is between 9.5 and 15.5 V.

- The above conditions are present for greater than 10 s.

Conditions for Setting the DTC

B1446 03

The telematics communication interface control module detects that the backup power source voltage has dropped below the minimum threshold value.

B1447 04

The telematics communication interface control module detects no voltage from the backup power source.

Action Taken When the DTC Sets

B1446 03

The OnStar® status LED turns red.

B1447 04

- The OnStar® status LED turns red.
- The telematics communication interface control module will be unable to place a call in the event of a main battery disconnect during a collision event.

Conditions for Clearing the DTC

- A current DTC B1446 will clear when the telematics communication interface control module detects the voltage of the backup power source is above the minimum threshold value.
- A current DTC B1447 will clear when the telematics communication interface control module detects voltage from the backup power source.
- A history DTC clears after 50 malfunction-free ignition cycles.

Diagnostic Aids

- Shorting the backup power source positive voltage circuit to the backup power source ground circuit or chassis ground will activate the internal circuit protection of the backup power source, rendering the backup power source inoperative.
- DTC B1447 may set if the K73 Telematics Communication Interface Control Module has been incorrectly disconnected or serviced. When disconnecting the K73 Telematics Communication Interface Control Module, disconnect the harness connector X1 at the K73 Telematics Communication Interface Control Module prior to disconnecting any other harness connectors. This will ensure the backup power source is preserved when voltage is removed from the K73 Telematics Communication Interface Control Module.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- Testing for Intermittent Conditions and Poor Connections
- Circuit Testing

- [Wiring Repairs](#)
- [Connector Repairs](#)

Circuit/System Testing

1. Ignition OFF/Vehicle OFF and all vehicle systems OFF, disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module. It may take up to 2 minutes for all vehicle systems to power down.
2. Test for greater than 12.3 V between the B+ circuit terminal 14 and the low reference circuit terminal 13.
 - **If 12.3 V or less**
 1. Disconnect the C3 Telematics Communication Interface Control Module Battery.
 2. Test for infinite resistance between the circuits listed below and ground.
 - B+ circuit terminal 14
 - Low reference circuit terminal 13.
 - If less than infinite resistance, repair the short to ground in the circuit.
 - If infinite resistance.
 3. Test for less than 2 Ω in the circuits end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω replace the C3 Telematics Communication Interface Control Module Battery.
 - **If greater than 12.3 V**
3. Replace the K73 Telematics Communication Interface Control Module.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Communication Interface Module Battery Replacement](#)
- [Control Module References](#) for telematics communication interface control module replacement, programming and setup.

DTC B2455: CELLULAR PHONE MICROPHONE CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

DTC Descriptors

DTC B2455 01

Cellular Phone Microphone Circuit Short to Battery

DTC B2455 02

Cellular Phone Microphone Circuit Short to Ground

DTC B2455 04

Cellular Phone Microphone Circuit Open/High Resistance

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Signal Terminal B	B2455 02	B2455 04	-	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Low Reference Terminal A	-	B2455 04	B2455 01	-

Circuit/System Description

The telematics communication interface control module provides the cellular phone microphone with a supplied voltage on the cellular phone microphone signal circuit. When the microphone is in use, voice data from the user is sent back to the telematics communication interface control module on the cellular microphone low reference circuit.

Conditions for Running the DTC

- Ignition ON/Vehicle in Service Mode.
- The system voltage is at least 9.5 V and no more than 15.5 V.
- All the above conditions are present for greater than 10 s.

Conditions for Setting the DTC

B2455 01

The telematics communication interface control module detects a short to voltage in the cellular phone microphone signal circuit for 10 s or greater.

B2455 02

The telematics communication interface control module detects a short to ground in the cellular phone microphone signal circuit for 10 s or greater.

B2455 04

The following conditions will set this DTC:

- The telematics communication interface control module detects an open/high resistance in the cellular phone microphone signal circuit for 10 s or greater.
- The telematics communication interface control module detects an open/high resistance in the microphone low reference circuit for 10 s or greater.

Action Taken When the DTC Sets

- The telematics status LED turns red.
- The telematics communication interface control module will not receive a signal from the cellular phone microphone.
- Calls can be placed but the caller cannot be heard.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

[Circuit/System Testing](#)

1. Ignition OFF/vehicle OFF, disconnect the harness connector at the B24 Cellular Phone Microphone, ignition ON/vehicle in Service Mode.
2. Test for 8.0-10.5 V between the signal circuit terminal B and ground.
 - **If less than 8.0 V**
 1. Ignition OFF/vehicle OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground in the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K73 Telematics Communication Interface Control Module.
 - **If greater than 10.5 V**
 1. Ignition OFF/vehicle OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K73 Telematics Communication Interface Control Module.
 - **If between 8.0-10.5 V**
3. Test for less than 1 V between the low reference circuit terminal A and ground.
 - **If greater than 1 V**
 1. Ignition OFF/vehicle OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
 2. Test for less than 1 V between the low reference circuit and ground.
 - If 1 V or greater, repair the short to voltage in the circuit.
 - If less than 1 V, replace the K73 Telematics Communication Interface Control Module.
 - **If less than 1 V**
4. Test for greater than 8 V between the signal circuit terminal B and the low reference circuit terminal A.
 - **If less than 8 V**
 1. Ignition OFF/vehicle OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module.
 2. Test for infinite resistance between the low reference circuit and ground.
 - If less than infinite resistance, repair the short to ground in the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the vehicle K73 Telematics Communication Interface Control Module.

- **If greater than 8 V**

5. Test or replace the B24 Cellular Phone Microphone.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Mobile Telephone Microphone Replacement](#)
- [Control Module References](#) for control module replacement, programming and setup.

DTC B2462: GLOBAL POSITIONING SYSTEM (UE1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B2462 02

Global Positioning System Short to Ground

DTC B2462 04

Global Positioning System Open

Circuit/System Description

The navigation antenna is connected to the Telematics Communication Interface Control Module. The module supplies 5 V to the antenna to power the internal amplifier through the center conductor of the antenna coax cable.

When the vehicle is equipped with the optional navigation system, a Navigation Antenna Signal Splitter is installed to distribute the navigation signal to both the Telematics Communication Interface Control Module and the Human Machine Interface Control Module. The Human Machine Interface Control Module supplies 5 V through the coax cable to power the Navigation Antenna Signal Splitter.

Conditions for Running the DTC

- Radio On.
- System voltage is greater than 9 V and less than 16 V.
- The navigation system/telematics communication interface control module tests the GPS antenna every 10 s.

Conditions for Setting the DTC

B2462 02

The Telematics Communication Interface Control Module or Human Machine Interface Control Module detects a short to ground on the GPS antenna signal circuit.

B2462 04

The Telematics Communication Interface Control Module or Human Machine Interface Control Module detects an open/high resistance on the GPS antenna signal circuit.

Action Taken When the DTC Sets

- The Telematics Communication Interface Control Module or Human Machine Interface Control Module uses the last reported position and the vehicle speed signal to calculate the vehicle position.
- Route guidance may be inaccurate.
- Turn by turn navigation may be inaccurate or inoperative.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 50 consecutive malfunction - free ignition cycles have occurred.

Diagnostic Aids

- The scan tool Telematics Communication Interface Control Module GPS signal parameter will display a Yes or No dependent upon whether or not the module sees an increment of the seconds transmitted by GPS signals to the Telematics Communication Interface Control Module. Upon entering this screen, the GPS signal title will initially display Yes, regardless of the presence of time increment, for at least 2 seconds, while the algorithm in the scan tool determines the status of the clock. If increment is found, Yes is continually displayed. If the clock remains static, No is displayed. The scan tool looks for increment every second, regardless of current display.
- Inaccurate or aged GPS position concerns which are no longer present may have been due to the temporary loss of GPS signal reception by the vehicle. Conditions such as tunnels or parking structures will restrict the cellular phone and navigation antenna from a clear view of the satellites in the sky and may have caused this temporary data loss.
- The GPS requires a clear line of sight to the sky to operate properly. In most cases the GPS will not have reception near tall buildings or inside structures.

Reference Information

Schematic Reference

- [OnStar/Telematics Schematics](#)
- [Radio/Navigation System Schematics](#)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

- [OnStar Description and Operation](#)
- [Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

Control Module References for scan tool information

Special Tools

EL-49903 OnStar® Antenna Diagnostic Tool Kit

Circuit/System Verification

NOTE: The following verification requires the vehicle to be outside with an

unobstructed view of the southern sky. Allow 5 minutes after turning the ignition ON for the vehicle to acquire the GPS satellites signal.

1. Ignition ON/vehicle in Service Mode.
2. Verify that DTC B2462 is not set in the Telematics Communication Interface Control Module.
 - **If DTC B2462 is set in the Telematics Communication Interface Control Module and the vehicle is not equipped with a navigation system**
Refer to Circuit/System Testing Without Navigation System.
 - **If DTC B2462 is set in the Telematics Communication Interface Control Module and the vehicle is equipped with a navigation system**
Refer to Circuit/System Testing With Navigation System.
 - **If DTC B2462 is not set in the Telematics Communication Interface Control Module**
3. Verify an OnStar® advisor can locate the vehicle after performing a blue button press.
 - **If the advisor can not locate the vehicle and the vehicle is not equipped with a navigation system**
Refer to Circuit/System Testing Without Navigation System
 - **If the advisor can not locate the vehicle and the vehicle is equipped with a navigation system**
Refer to Circuit/System Testing With Navigation System.
 - **If the advisor can locate the vehicle**
4. Verify DTC B2462 is not set in the Human Machine Interface Control Module.
 - **If DTC B2462 is set in the Human Machine Interface Control Module**
Refer to Circuit/System Testing With Navigation System - Step 9.
 - **If DTC B2462 is not set in the Human Machine Interface Control Module**
5. Verify that the NO GPS symbol/message is not displayed on the radio display.
 - **If the NO GPS symbol/message is displayed**
Refer to Circuit/System Testing With Navigation System - Step 9.
 - **If the NO GPS symbol/message is not displayed**
6. All OK.

Circuit/System Testing

without Navigation System

1. Ignition OFF/vehicle OFF, disconnect the GPS and cellular coax cable connector at the K73 Telematics Communication Interface Control Module.

NOTE: You must perform the Circuit/System Verification before proceeding with Circuit/System Testing.

2. Attach both leads of the EL-49903-1 OnStar® test antenna to the EL-49903-5 combiner. Using the EL-49903-6 coax cable attach the grey connector to the combiner and the brown connector to the K73 Telematics Communication Interface Control Module. Place the test antenna on the roof of the vehicle, ignition ON.
3. Verify DTC B2462 is not set or that the OnStar® advisor can locate the vehicle.
 - **If DTC B2462 is set or the advisor can not locate the vehicle**
Replace the K73 Telematics Communication Interface Control Module.

- **If DTC B2462 is not set or the advisor can locate the vehicle**

4. Test the coax cable between the K73 Telematics Communication Interface Control Module and the T4G Cellular Phone, Navigation and Digital Radio Antenna. Refer to [Component Testing](#).

- **If the coax cable does not pass the test**

Replace the coax cable.

- **If the coax cable passes the test**

5. Test or replace the T4G Cellular Phone, Navigation and Digital Radio Antenna.

with Navigation System

1. Ignition OFF/vehicle OFF, disconnect the T4G Cellular Phone, Navigation and Digital Radio Antenna coax cable at the T15 Navigation Antenna Signal Splitter.

NOTE: You must perform the Circuit/System Verification before proceeding with Circuit/System Testing.

2. Attach both leads of the EL-49903-1 OnStar® test antenna to the EL-49903-5 combiner. Using the EL-49903-7 coax cable attach one grey connector to the combiner and the other grey connector to the T15 Navigation Antenna Signal Splitter. Place the test antenna on the roof of the vehicle, ignition ON.

3. Verify DTC B2462 is not set or that the OnStar® advisor can locate the vehicle.

- **If DTC B2462 is not set or the advisor can locate the vehicle**

1. Test the coax cable between the T15 Navigation Antenna Signal Splitter and the T4G Cellular Phone, Navigation and Digital Radio Antenna. Refer to [Component Testing](#).

- **If the coax cable does not pass the test**

Replace the coax cable.

- **If the coax cable passes the test**

2. Replace the T4G cellular phone, navigation and digital radio antenna.

- **If DTC B2462 is set or if the advisor can not locate the vehicle**

4. Ignition OFF/vehicle OFF, disconnect the GPS and cellular coax cable connector at the K73 Telematics Communication Interface Control Module.

5. Attach both leads of the EL-49903-1 OnStar® test antenna to the EL-49903-5 combiner. Using the EL-49903-6 coax cable attach the grey connector to the combiner and the brown connector to the K73 Telematics Communication Interface Control Module. Place the test antenna on the roof of the vehicle, ignition ON.

6. Verify DTC B2462 is not set or that the OnStar® advisor can locate the vehicle.

- **If DTC B2462 is set or the advisor can not locate the vehicle.**

Replace the K73 Telematics Communication Interface Control Module.

- **If DTC B2462 is not set or the advisor can locate the vehicle.**

7. Ignition OFF/vehicle OFF.

8. Test the coax cable between the T15 Navigation Antenna Signal Splitter and the K73 Telematics Communication Interface Control Module. Refer to [Component Testing](#).

- **If the coax cable does not pass the test.**

Replace the coax cable.

- **If the coax cable passes the test.**

9. Ignition OFF/vehicle OFF, disconnect the blue GPS coax cable connector at the K74 Human Machine Interface Control Module.

10. Attach the EL-49903-1 OnStar® test antenna blue connector to the K74 Human Machine Interface Control Module and place the test antenna on the roof of the vehicle.

11. Ignition ON/vehicle in Service Mode.

12. Verify DTC B2462 is not set or that the NO GPS symbol/message is not displayed on the radio.

- **If DTC B2462 is set or the NO GPS symbol/message is displayed**

Replace the K74 Human Machine Interface Control Module

- **If DTC B2462 is not set or if the NO GPS symbol/message is not displayed.**

13. Ignition OFF/vehicle OFF.

14. Test the coax cable between the T15 Navigation Antenna Signal Splitter and the K74 Human Machine Interface Control Module. Refer to [Component Testing](#).

- **If the coax cable does not pass the test.**

Replace the coax cable.

- **If the coax cable passes the test.**

15. Test or replace the T15 Navigation Antenna Signal Splitter.

Component Testing

CAUTION: Refer to [Test Probe Caution](#) .

NOTE:

- **Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.**
- **To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.**
- **The vehicle may be equipped with sectioned coax. Test each section and replace only the faulty section, not the entire length of coax.**

Coax Cable Test

1. Ignition OFF/vehicle OFF, disconnect the coax cable at both components.

2. Test for less than 5 Ω between the coax cable center terminal end to end.

- **If 5 Ω or greater**

Replace the coax cable.

- **If less than 5 Ω**

3. Test for greater than 5 Ω between the coax cable outer shield end to end.

- **If 5 Ω or greater**

Replace the coax cable.

- **If less than 5 Ω**

4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.

- **If less than infinite resistance**

Replace the coax cable.

- **If infinite resistance**

5. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [High Frequency Antenna Replacement](#)
- [Control Module References](#) for Human Machine Interface control module or Telematics Communication Interface Control Module replacement, programming and setup.

DTC B2462: GLOBAL POSITIONING SYSTEM SIGNAL (WITHOUT UE1 & CW1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B2462

Global Positioning System Signal

For symptom byte information, refer to [Symptom Byte List](#) .

Circuit Description

The navigation antenna is connected to the human machine interface control module by a shielded coaxial cable. The human machine interface control module supplies 5 V through the coax cable to power the internal antenna amplifier.

Conditions for Running the DTC

- Radio On.
- System voltage is greater than 9 V and less than 16 V.
- The human machine interface control module tests the GPS antenna every 10 seconds.

Conditions for Setting the DTC

B2462 01

The human machine interface control module detects a short to B+ on the GPS antenna signal circuit.

B2462 02

The human machine interface control module detects a short to ground on the GPS antenna signal circuit.

B2462 04

The human machine interface control module detects an open/high resistance on the GPS antenna signal circuit.

Actions Taken When the DTC Sets

- The human machine interface control module uses the last reported position and the vehicle speed signal to calculate the vehicle position.
- Route guidance may be inaccurate.
- Turn by turn navigation may be inaccurate or inoperative.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

The navigation antenna requires a clear line of sight to the sky to operate properly. The GPS may have limited, intermittent or no reception near tall buildings or inside structures.

Reference Information

Schematic Reference

Connector End View Reference

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

Description and Operation

[Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

EL-49903 OnStar® Antenna Diagnostic Tool Kit

[Circuit/System Testing](#)

1. Ignition OFF, disconnect the navigation antenna coax cable connector at the K74 Human Machine Interface Control Module. Connect the **EL-49903** GM OnStar® antenna diagnostic tool kit to the K74 Human Machine Interface Control Module, place the test antenna on the roof of the vehicle.
2. Ignition ON, infotainment system ON, navigation selected.
3. Verify DTC B2462 is not set.
 - **If DTC B2462 is set**

Replace the K74 Human Machine Interface Control Module.
 - **If DTC B2462 is not set**
4. Ignition OFF, disconnect the radio navigation coax cable at the T4G Navigation Antenna.
5. Verify the radio navigation coax cable passes the coax cable component test. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test**

Replace the coax cable
 - **If the coax cable passes the test**
6. Test or replace the T4G Navigation Antenna.

[Component Testing](#)

CAUTION: Refer to [Test Probe Caution](#) .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
3. Test for less than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.
 - **If less than infinite resistance**
Replace the coax cable
 - **If infinite resistance**
5. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the diagnostic procedure.

- [High Frequency Antenna Replacement](#)
- [Control Module References](#) for human machine interface control module replacement, programming and setup.

DTC B2462: GLOBAL POSITIONING SYSTEM SIGNAL (CW1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B2462

Global Positioning System Signal

For symptom byte information, refer to [Symptom Byte List](#).

Circuit/System Description

The navigation antenna is connected to the Navigation Control Module via a coax cable. The Navigation control module supplies 5 V through the coax cable to power the internal antenna amplifier.

Conditions for Running the DTC

- Radio On.
- System voltage is greater than 9 V and less than 16 V.
- The Navigation control module tests the GPS antenna every 10 seconds.

Conditions for Setting the DTC

B2462 01

The Navigation control module detects a short to B+ on the GPS antenna signal circuit.

B2462 02

The Navigation control module detects a short to ground on the GPS antenna signal circuit.

B2462 04

The Navigation control module detects an open/high resistance on the GPS antenna signal circuit.

Action Taken When the DTC Sets

- The Navigation control module uses the last reported position and the vehicle speed signal to calculate the vehicle position.
- Route guidance may be inaccurate.
- Turn by turn navigation may be inaccurate or inoperative.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

- This DTC can only be retrieved from the Navigation control module.
- The navigation antenna requires a clear line of sight to the sky to operate properly. The GPS may have limited, intermittent or no reception near tall buildings or inside structures.

Reference Information

Schematic Reference

- [Radio/Navigation System Schematics](#)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

- [Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

EL-49903 Test Antenna Diagnostic Tool Kit

Circuit/System Testing

1. Ignition OFF, disconnect the navigation antenna coax cable connector at the K31 Navigation Control Module. Connect the **EL-49903** Test Antenna Diagnostic tool kit to the K31 Navigation Control Module, place the test antenna on the roof of the vehicle.
2. Ignition ON, infotainment system ON, navigation selected.
3. Verify DTC B2462 is not set.

- **If DTC B2462 is set**

Replace the K31 Navigation Control Module.

- **If DTC B2462 is not set**

4. Ignition OFF, disconnect the Navigation control module coax cable.

5. Verify the Navigation control module coax cable passes the coax cable component test. Refer to **Component Testing**.

- **If the coax cable does not pass the test**

Replace the coax cable

- **If the coax cable passes the test**

6. Test or replace the T4G Navigation Antenna.

Component Testing

CAUTION: Refer to **Test Probe Caution** .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.

2. Test for less than 5 Ω between coax cable center terminal end to end.

- **If 5 Ω or greater**

Replace the coax cable

- **If less than 5 Ω**

3. Test for less than 5 Ω between the coax cable outer shield end to end.

- **If 5 Ω or greater**

Replace the coax cable

- **If less than 5 Ω**

4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.

- **If less than infinite resistance**

Replace the coax cable

- **If infinite resistance**

5. All OK

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **High Frequency Antenna Replacement**
- **Control Module References** for Navigation control module replacement, programming and setup.

DTC B2470: CELLULAR PHONE ANTENNA CIRCUIT MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B2470 02

Cellular Phone Antenna Circuit Malfunction Short to Ground

DTC B2470 04

Cellular Phone Antenna Circuit Malfunction Open Circuit

Circuit/System Description

The primary cellular phone antenna element is connected to the telematics communication interface control module (violet connector) via a shielded coaxial cable. Cellular communication takes place on both the primary cellular antenna signal circuit and the GPS/secondary cellular antenna signal circuit. This diagnostic only applies to the primary cellular antenna signal circuit. Internal to the antenna on the cellular antenna signal circuit resistance is used to apply a load, which the telematics communication interface control module uses to detect the presence of the antenna.

Conditions for Running the DTC

- Ignition in the RUN or ACC position.
- System voltage is between 9.5 V and 15.5 V.
- The above conditions are present for greater than 1 s.

Conditions for Setting the DTC

- **B2470 02**
- The telematics communication interface control module detects a short to ground on the primary cellular antenna signal circuit.
- **B2470 04**
- The telematics communication interface control module detects an open or high resistance on the primary cellular antenna signal circuit.
- The above conditions are present for greater than 1 s.

Action Taken When the DTC Sets

- The OnStar® status LED turns red.

Conditions for Clearing the DTC

- The telematics communication interface control module detects the presence of a cellular antenna.
- A history DTC clears after 50 malfunction-free ignition cycles.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

EL-49903 GM OnStar® Antenna Diagnostic Tool Kit

Circuit/System Testing

NOTE:

- The vehicle may be equipped with sectioned coax. Test each section and replace only the faulty section, not the entire length of coax.
- The following verification requires the vehicle to be outside with an unobstructed view of the southern sky. Allow 5 min after turning the ignition ON for the GPS satellites to acquire vehicle signal.

1. Ignition OFF and all vehicle systems OFF, disconnect the violet primary cellular coax cable connector at the K73 Telematics Communication Interface Control Module. It may take up to 2 min for all vehicle systems to power down.
2. Using the **EL-49903-1** GM OnStar® test antenna connect the violet coax cable to the K73 Telematics Communication Interface Control Module. Place the test antenna on the roof of the vehicle, ignition ON.
3. Verify the DTC does not set or a call can be completed to the OnStar® Call Center while operating the vehicle within the conditions for the fault.
 - **If the DTC sets or a call can not be completed to the OnStar® Call Center**
Replace the K73 Telematics Communications Interface Control Module.
 - **If the DTC does not set or a call can be completed to the OnStar® Call Center**
4. Ignition OFF.
5. Disconnect the **EL-49903-1** GM OnStar® test antenna from the K73 Telematics Communication Interface Control Module
6. Test the coax cable. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test**
Replace the coax cable.
 - **If the coax cable passes the test**
7. Test or replace the T4D Cellular Phone and GPS Antenna.

Component Testing

CAUTION: Refer to [Test Probe Caution](#)

NOTE:

- Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.
- To prevent false readings when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

1. Test for less than 5 Ω between the coax cable center terminal end to end.

- **If 5 Ω or greater**

Replace the coax cable.

- **If less than 5 Ω**

2. Test for greater than 5 Ω between the coax cable outer shield end to end.

- **If 5 Ω or greater**

Replace the coax cable.

- **If less than 5 Ω**

3. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.

- **If less than infinite resistance**

Replace the coax cable.

- **If infinite resistance**

4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair procedure.

- [High Frequency Antenna Replacement](#)
- [Control Module References](#) for telematics communication interface control module replacement, setup and programming.

DTC B2476 OR B2482: CELLULAR PHONE SELECT SERVICE SWITCH

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B2476 or B2482

Cellular Phone Select Service Switch

For symptom byte information, refer to [Symptom Byte List](#)

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
10 V Reference	B2476 02	B2476 04	B2476 04	-
Signal	1	1	B2476 59	B2476 59, B2482 00
Ground	-	B2476 04	-	-
1. OnStar® Buttons Inoperative				

Circuit/System Description

The OnStar® button assembly consists of 3 buttons: Call/Answer, OnStar® Call Center and OnStar® Emergency. The telematics communication interface control module supplies the OnStar® button assembly with 10 V via the 10 V reference circuit. Each of the buttons, when pressed, completes the circuit across a resistor allowing a specific voltage to be returned to the telematics communication interface control module over the keypad signal circuit. Depending upon the voltage range returned, the telematics communication interface control module is able to identify which button has been pressed.

Conditions for Running the DTC

- Ignition ON/vehicle in Service Mode.
- Battery voltage must be between 9-16 V.

Conditions for Setting the DTC

B2476 02

The telematics communication interface control module detects a short to ground on the 10 V reference circuit

B2476 04

The telematics communication interface control module detects an open/high resistance on the keypad supply voltage circuit or the ground circuit.

B2482 and B2476 59

The telematics communication interface control module detects a valid signal on the keypad signal circuit for longer than 15 s. If one of the OnStar® buttons is held or stuck for 15 s or greater, the telematics communication interface control module will set this DTC.

Action Taken When the DTC Sets

- The OnStar® status LED turns red.
- No calls can be placed.
- The telematics communication interface control module will ignore all inputs from the OnStar® button assembly.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE: Contact the OnStar® Call Center first before pressing the emergency

button in order to notify them of the test.

1. Ignition ON/vehicle in Service Mode.
2. Verify that each button of the S51 Telematics Button Assembly operates normally by pressing each button individually.
 - **If none of the buttons operate normally**
Refer to Circuit/System testing
 - **If some, but not all, of the buttons operate normally**
Test or replace the S51 Telematics Button Assembly
 - **If all of the buttons operate normally**
3. All OK.

Circuit/System Testing

1. Ignition OFF/vehicle OFF and all vehicle systems OFF, disconnect the harness connector at the S51 Telematics Button Assembly. It may take up to 2 min for all vehicle systems to power down.
2. Test for less than 10 Ω between the ground circuit terminal 6 and ground.
 - **If 10 Ω or greater**
 1. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
3. Ignition ON/vehicle in Service Mode.
4. Test for 8.0-10.5 V between the 10 V reference circuit terminal 1 and the ground circuit terminal 6.
 - **If less than 8.0 V**
 1. Ignition OFF/vehicle OFF, disconnect the harness connector at the K73 Telematics Communication Interface Control Module.
 2. Test for infinite resistance between the 10 V reference circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the 10 V reference circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K73 Telematics Communication Interface Control Module.
 - **If greater than 10.5 V**
 1. Ignition OFF/vehicle OFF, disconnect the harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
 2. Test for less than 1 V between the 10 V reference circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K73 Telematics Communication Interface Control Module.
 - **If between 8.0-10.5 V**
5. Ignition OFF/vehicle OFF.
6. Test for 500-900 Ω between the signal circuit terminal 3 and the ground circuit terminal 6.
 - **If less than 500 Ω**
 1. Disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.

- If infinite resistance, replace the K73 Telematics Communication Interface Control Module.
 - **If greater than 900 Ω**
 1. Disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V
 3. Ignition OFF/vehicle OFF.
 4. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K73 Telematics Communication Interface Control Module.
 - **If between 500-900 Ω**
7. Test or replace the S51 Telematics Button Assembly.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Communication Center Call Switch Replacement](#)
- [Control Module References](#) for telematics communication interface control module replacement, programming and setup.

SYMPTOMS - CELLULAR COMMUNICATION

NOTE: The following steps must be completed before using the symptom table.

1. Perform the [Diagnostic System Check - Vehicle](#) before using the Symptom Tables in order to verify that all of the following are true:
 - There are no DTCs set.
 - The control modules can communicate via the serial data link.
2. Review the system operation in order to familiarize yourself with the system functions. Refer to [OnStar Description and Operation](#).

Visual/Physical Inspection

- Inspect for aftermarket devices which could affect the operation of the OnStar[®] System. Refer to [Checking Aftermarket Accessories](#).
- Inspect for easily accessible or visible system components for obvious damage or conditions which could cause the symptom.

Intermittent

Faulty electrical connections or wiring may be the cause of intermittent conditions. Refer to [Testing for Intermittent Conditions and Poor Connections](#).

Symptom List

Refer to a symptom diagnostic procedure from the following list in order to diagnose the symptom:

- [No Global Positioning System \(GPS\) Reception \(UE1\)No Global Positioning System \(GPS\) Reception \(without UE1 & CW1\)No Global Positioning System \(GPS\) Reception \(CW1\)](#)
- [OnStar Microphone Malfunction](#)
- [OnStar Audio Malfunction](#)
- [OnStar Button LED Malfunction](#)
- [OnStar Call Center Remote Function Requests Malfunction](#)
- [OnStar Button Malfunction](#)

- [Unable to Contact OnStar Call Center](#)
- [OnStar Voice Recognition Malfunction](#)
- [OnStar Steering Wheel Control Functions Malfunction](#)

SYMPTOMS - ENTERTAINMENT

IMPORTANT: The following steps must be completed before using the symptom table.

1. Perform the [Diagnostic System Check - Vehicle](#) before using the Symptom Tables in order to verify that all of the following are true:
 - There are no DTCs set.
 - The control modules can communicate via the serial data link.
2. Review the system operation in order to familiarize yourself with the system functions. Refer to [Radio/Audio System Description and Operation](#).

Visual/Physical Inspection

- Inspect for aftermarket devices which could affect the operation of the Radio/Audio System. Refer to [Checking Aftermarket Accessories](#).
- Inspect for easily accessible or visible system components for obvious damage or conditions which could cause the symptom.

Intermittent

Faulty electrical connections or wiring may be the cause of intermittent conditions. Refer to [Testing for Intermittent Conditions and Poor Connections](#).

Symptom List

Refer to a symptom diagnostic procedure from the following list in order to diagnose the symptom:

- [Application Malfunction](#)
- [Auxiliary Audio Input Malfunction](#)
- [Audio/Video Player Adapter - Audio or Video Malfunction](#)
- [Bluetooth Malfunction](#)
- [Eject Malfunction](#)
- [Media Disc Player Malfunction \(without UWG\)](#)[Media Disc Player Malfunction \(with UWG\)](#)
- [Digital Radio Poor or No Reception](#)
- [No Global Positioning System \(GPS\) Reception \(UE1\)](#)[No Global Positioning System \(GPS\) Reception \(without UE1 & CW1\)](#)[No Global Positioning System \(GPS\) Reception \(CW1\)](#)
- [Radio Poor Reception](#)
- [Speaker Malfunction \(UQA\)](#)[Speaker Malfunction \(UQS\)](#)[Speaker Malfunction \(UQH\)](#)
- [Video Entertainment System Remote Control Malfunction](#)
- [Video Entertainment System Wireless Headphone Malfunction](#)
- [Voice Recognition Malfunction \(IO6 with UE1\)](#)[Voice Recognition Malfunction \(IO6 without UE1\)](#)

APPLICATION MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

Circuit/System Description

The term application refers to any piece of software that works on a system (hardware) that is being operated by its own software. Applications are typically small software programs which uses the hardware to perform a specific task, as opposed to operating the entire system.

Diagnostic Aids

- For an application to be used, it must be installed on both the vehicle infotainment system and a compatible mobile device.
- The application must work correctly on the device to work with the vehicle infotainment system.
- The user may be required to log-in to the application on the mobile device before using the application from the vehicle controls.
- Applications use the mobile device and connection to a service provider to operate. Connection quality issues or service provider data transmission issues can give the appearance of a vehicle malfunction.
- The device must be connected to the system. This may be done wirelessly via Bluetooth® or via the vehicle USB port.

When a mobile device is connected via Bluetooth®, some or all of the device controls may be unavailable from the radio controls. This varies dependent upon the device being used. Refer to the vehicle owner manual, supplements and the device manufacturer's information for information on devices, control and operation.

Refer to the device manufacturer's information for the preferred connection method.

- The device must be unlocked and any additional applications should be closed.
- If the device has any sound enhancement features such as noise reduction or echo control, these features should be turned off.
- A low battery condition in the mobile device may not allow the device to connect to the system or can create communication issues with the device. Verify the device battery state of charge and re-charge or replace as needed.
- If a 'Please See Device' or similar type error message is displayed, this may indicate the device has lost its connection to the vehicle or the device has lost its external data connection.
- If a cable is used for connection, attempt to connect the device using a different cable; cables can deteriorate over time or become damaged.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information.

Circuit/System Verification

1. Verify the application is installed on the mobile device and is up to date.

- **If the application is not installed or is not up to date.**

Install or update the application on the device.

- **If the application is installed on the mobile device and is up to date**

2. Verify the application operates correctly on the mobile device.

- **If the application is not operating correctly on the mobile device.**

Refer to the application web site.

- **If the application is operating correctly on the mobile device.**

3. Verify the K74 Human Machine Interface Control Module calibrations are current.

- **If the calibrations are not current**

Reprogram the K74 Human Machine Interface Control Module and re-evaluate the concern.

- **If no update calibrations are available**

4. Verify the application is installed on the K74 Human Machine Interface Control Module and is up to date.

- **If the application is not installed or is not up to date.**

Install or update the application and re-evaluate the concern.

- **If the application is installed and is up to date**

5. Ignition On/Vehicle in Service Mode. Infotainment system ON.

6. Verify the mobile device can connect to the infotainment system. Refer to the owner manual for information on the preferred connection method for the device.

- **If the mobile device cannot connect to the vehicle infotainment system.**
- If unable to connect via Bluetooth, refer to [Bluetooth Malfunction](#).
- If unable to connect via USB, refer to [Auxiliary Audio Input Malfunction](#).
- **If the mobile device connects to the vehicle infotainment system.**

7. Launch the application.

8. Verify the application operates properly with the vehicle infotainment system.

- **If the application does not function properly**

Refer to diagnostic aids.

- **If the application functions properly**

9. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

AUDIO/VIDEO PLAYER ADAPTER - AUDIO OR VIDEO MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	2	1	-	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Rear Wired Headphone - Left Audio Signal	3	3	3	-
Rear Wired Headphone - Right Audio Signal	4	4	4	-
Rear Wired Headphone - Audio Common Signal	5	5	-	-
USB cable	1	B127A, U0196, 1	-	-
HDMI cable	6	U0196, 6	-	-
Ground	-	1	-	-
1. Rear seat entertainment USB inoperative 2. Fault affects multiple components, multiple DTCs set 3. No, reduced or distorted left side audio from rear wired headphone 4. No, reduced or distorted right side audio from rear wired headphone 5. No, reduced or distorted audio from rear wired headphone 6. Rear seat entertainment HDMI Port inoperative				

Circuit/System Description

The rear seat entertainment system has an auxiliary input assembly that contains two USB ports, an HDMI port and a wired headphone jack with volume control. Refer to the Owners Manual for information on compatible devices and supported media types/formats.

HDMI port

An HDMI cable is required to connect an HDMI device to the rear seat entertainment system. The auxiliary HDMI input allows connection to many devices, some examples are: Video games, disc players, cameras, smart phones and tablets.

USB ports

The USB ports interface with a hub device, internal to the console assembly. The assembly receives fused battery voltage and ground from the harness to power the internal hub device as well as providing additional amperage to power USB devices.

The internal hub device interfaces directly with the media disc player via a standard USB cable and an LVDS cable (for the HDMI). Mini type USB connectors are used to connect the cables at the media disc player and the auxiliary input assembly. Mini type USB male to female connections are used for connecting USB cables together where in-line connections are required. In-line cable connections are typically found between the console and I/P harness.

The USB port allows connectivity to the rear seat entertainment system from portable media players or a USB storage device (memory stick/ flash drive).

Once a supported device is connected to the USB or HDMI port, the device may be sourced to one or both of the rear displays using the remote control.

Wired Headphone Jack

The wired headphone jack is used to connect an additional set of headphones to the system. Audio for the wired headphone jack can be from either the left or the right screen source and is selected using the remote control.

Audio to the wired headphone jack is transmitted through the vehicle harness from the media disc player. A rotary control near the headphone jack is used to adjust the volume.

Diagnostic Aids

- Refer to the owners manual or supplements for information on operating the rear seat entertainment system, compatible media and compatible devices.
- Verify the external audio or video device is operating normally before performing this diagnostic procedure.

Reference Information

Schematic Reference

Video System Schematics (UWG)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information.

Special Tools

EL-50334-20 Multi-Media Interface Tester (MIT)

Circuit/System Verification

1. Verify no DTCs are present.
 - **If any DTCs are present**
Refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .
 - **If no DTCs are present**
2. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.
3. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the rear seat entertainment system USB port and select the USB test mode.
4. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the rear seat entertainment system while operating the system to play audio from the test tool.
 - **If audio is not heard from the test tool**
Refer to Circuit/System Testing - USB/HDMI Port
 - **If audio is heard from the test tool**
5. Connect a compatible device to the X82 Audio/Video Input Adapter HDMI port. Operate the rear seat entertainment system to connect to the HDMI port as the source.
6. Verify that audio and video from the device can be accessed while operating the device.
 - **If the audio or video from the device cannot be accessed**
Refer to Circuit/System Testing - USB/HDMI Port
 - **If the audio or video from the device can be accessed**

7. Connect a wired headphone to the X82 Audio/Video Input Adapter headphone jack. Operate the rear seat entertainment system to connect an available audio source to the wired headphone jack.
8. Verify that audio from the source can be heard with the wired headphones, adjusting the rotary volume control as necessary.

- **If the audio cannot be heard**

Refer to Circuit/System Testing - Wired Headphone Jack

- **If the audio can be heard**

9. Verify the wired headphone audio volume increases and decreases while operating the rotary volume control.

- **If the wired headphone audio volume cannot be adjusted**

Test or replace the X82 Audio/Video Input Adapter

- **If the wired headphone audio volume can be adjusted**

10. All OK.

Circuit/System Testing

USB/ HDMI Port

1. Ignition OFF, disconnect the X1 harness connector at the X82 Audio/Video Input Adapter.
2. Test for less than 10 Ω between the ground circuit terminal 4 and ground.
 - **If 10 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
3. Verify that a test lamp illuminates between the B+ circuit terminal 6 and ground.
 - **If the test lamp does not illuminate**
 1. Ignition OFF, remove the test lamp.
 2. Test for less than 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - **If the test lamp illuminates**
4. Verify the USB and LVDS cables are properly connected at the X82 Audio/Video Input Adapter, A33 Media Disc Player and the console to I/P in-line connector and there is no damage to the cable or connections.

- **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.

- **If no connection problems or cable damage is noted.**

5. Replace the X82 Audio/Video Input Adapter. Connect all harness connectors.
6. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.
7. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the X82 Audio/Video Input Adapter USB port and select the USB test mode.
8. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the rear seat entertainment system while operating the system to play audio from the test tool.
 - **If audio is not heard from the test tool**
 1. Replace the A33 Media Disc Player.
 2. Connect the EL-50334-20 Multi-Media Interface Tester (MIT) to the X82 Audio/Video Input Adapter USB port and select the USB test mode.
 3. Verify the audio from the EL-50334-20 Multi-Media Interface Tester (MIT) is heard through the rear seat entertainment system while operating the system to play audio from

the test tool.

- If audio is not heard from the test tool, replace the USB cable connected to the X82 Audio/Video Input Adapter. Verify audio is heard from the test tool. If audio is not heard from the test tool, replace the USB cable connected to the A33 Media Disc Player.
- If audio is heard from the test tool.

All OK.

- **If audio is heard from the test tool**

1. Connect a compatible device to the X82 Audio/Video Input Adapter HDMI port. Operate the rear seat entertainment system to connect to the HDMI port as the source.
2. Verify that audio and video from the device can be accessed while operating the device.
 - If audio/video can not be accessed from the device, replace the LVDS cable connected to the X82 Audio/Video Input Adapter. Verify audio/video can be accessed from the device. If audio/video cannot be accessed from the device, replace the A33 Media Disc Player.
 - If audio/video can be accessed from the device.

All OK.

9. All OK

Wired Headphone Jack

1. Ignition OFF, disconnect the X1 harness connector at the X82 Audio/Video Input Adapter. Ignition On/Vehicle in Service Mode. Infotainment system ON.
2. Test for less than 1 V between the signal circuits listed below and ground:
 - Left audio headphone signal circuit terminal 1
 - Right audio headphone signal circuit terminal 2
 - Audio common headphone signal circuit terminal 3
 - **If 1 V or greater**
 1. Ignition OFF, disconnect the X2 harness connector at the A33 Media Disc Player. Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the A33 Media Disc Player.
 - **If less than 1 V**
3. Ignition OFF, disconnect the X2 harness connector at the A33 Media Disc Player.
4. Test for infinite resistance between the signal circuits listed below and ground:
 - Left audio headphone signal circuit terminal 1
 - Right audio headphone signal circuit terminal 2
 - Audio common headphone signal circuit terminal 3
 - **If less than infinite resistance**

Repair the short to ground on the circuit.
 - **If infinite resistance**
5. Test for less than 5 Ω between the signal circuit terminals listed below:
 - A33 Media Disc Player signal circuit terminal 1 X2 and the X82 Audio/Video Input Adapter signal circuit terminal 1 X1
 - A33 Media Disc Player signal circuit terminal 2 X2 and the X82 Audio/Video Input Adapter signal circuit terminal 2 X1
 - A33 Media Disc Player signal circuit terminal 3 X2 and the X82 Audio/Video Input Adapter signal circuit terminal 3 X1

- **If 5 Ω or greater**

Repair the open/high resistance in the circuit.

- **If less than 5 Ω**

6. Replace the X82 Audio/Video Input Adapter. Connect all harness connectors.
7. Connect a wired headphone to the X82 Audio/Video Input Adapter headphone jack. Operate the rear seat entertainment system to connect an available audio source to the wired headphone jack.
8. Verify that audio from the source can be heard with the wired headphones, adjusting the rotary volume control as necessary.

- **If the audio cannot be heard**

Test or replace the A33 Media Disc Player.

- **If the audio can be heard**

9. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Audio Disc Player and USB Receptacle Replacement](#)
- [Control Module References](#) for media disc player replacement, programming and setup.

AUXILIARY AUDIO INPUT MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B124B

USB 1 Circuit

For symptom byte information, refer to [Symptom Byte List](#).

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	B124B, 2	B124B, 1	-	-
USB Cable	B124B	B124B	B124B	-
Ground	-	1	-	-
1. Fault may affect one or more components, dependant on fault location 2. Fault affects multiple components, dependant on vehicle equipment				

Circuit/System Description

The infotainment system has a USB port and a Auxiliary Audio Input Jack located in the center console. The receptacle assembly receives fused battery voltage and ground from the harness to power the internal hub device as well as providing additional amperage to power USB devices.

The internal hub device interfaces directly with the human machine interface control module via a standard USB cable. A Mini type USB connector is used to connect the human machine interface control module and the USB receptacle. Standard USB male to female connections are typically used for connecting USB cables together where an in-line connection is required. An in-line cable connection is typically found between the console and I/P harness.

Auxiliary Audio Input Jack

When a portable audio playback device is connected to the 3.5 mm (1/8 in.) auxiliary audio input jack an internal switch opens the detection signal circuit within the hub. The HMI detects the device and AUX becomes available as an audio source. Audio signals from the device are converted from analog to digital, these signals are then sent to the HMI from the auxiliary input jack via USB.

USB Port

The USB port allows connectivity to the infotainment system from portable media players or a USB storage device (memory stick/ flash drive). When a device is connected to the USB port, the system detects the device and switches to USB as the audio source. Once connected, the device can be controlled from the radio controls.

Not all portable media player devices or file types are compatible. Refer to the owner's manual for information on USB devices, control and operation.

Conditions for Running the DTC

- Ignition On/Vehicle in Service Mode.
- The system voltage is 9-16 V
- The infotainment system is ON
- The test is run once per second when the infotainment system is operating

Conditions for Setting the DTC

B124B 0B

The human machine interface control module detects an excessive current condition on the USB 5 V circuit.

B124B 04

The human machine interface control module does not detect the vehicle hub device.

B124B 11

The human machine interface control module detects an additional hub device attached to the vehicle USB port.

Action Taken When the DTC Sets

The USB port is inoperative while the DTC is current.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

- This DTC may be set due to the connection of an incompatible or faulty USB device.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

- **EL-50334-20** Multi-Media Interface Tester (MIT)
- **EL-50334-50** USB Cable and Adapter Kit
- **EL-50334-14** Infotainment Test Cable

Circuit/System Verification

1. Verify DTC B124B is not set. Since occurrences of this DTC can be caused by an incompatible or faulty USB device, review with the customer the conditions under which their concern occurred.
 - **If DTC B124B is set.**

Refer to Circuit/System Testing.
 - **If DTC B124B is not set.**
2. Ignition On/Vehicle in Service Mode. Infotainment system ON.
3. Connect the **EL-50334-20** Multi-Media Interface Tester (MIT) to the X83 Auxiliary Audio Input USB port and select the USB test mode.
4. Verify the audio from the **EL-50334-20** Multi-Media Interface Tester (MIT) is heard through the infotainment system while operating the system to play audio from the test tool.
 - **If audio is not heard from the test tool**

Refer to Circuit/System Testing
 - **If audio is heard from test tool**
5. Verify the infotainment system can be switched to AUX as the audio source with the **EL-50334-20** Multi-Media Interface Tester (MIT) connected to the auxiliary audio input jack.
 - **If the infotainment system can not be switched to AUX as the audio source**

Refer to Circuit/System Testing
 - **If the infotainment system can be switched to AUX as the audio source**
6. Verify the audio from the **EL-50334-20** Multi-Media Interface Tester (MIT) is heard through the vehicle infotainment system while operating the test tool to begin audio playback.
 - **If audio is not heard from the test tool.**

Refer to Circuit/System Testing
 - **If audio is heard from the test tool.**
7. All OK

Circuit/System Testing

1. Ignition OFF, disconnect the X1 harness connector at the X83 Auxiliary Audio Input.
2. Test for less than 10 Ω between the ground circuit terminal 4 and ground.
 - **If 10 Ω or greater**

1. Ignition OFF.
2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
- **If less than 10 Ω**
3. Verify that a test lamp illuminates between the B+ circuit terminal 6 and ground.
 - **If the test lamp does not illuminate**
 1. Ignition OFF, remove the test lamp.
 2. Test for less than 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - **If the test lamp illuminates**
4. Verify the USB cable is properly connected at all components and in-line connections and there is no damage to the cable or connections.
 - **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.
 - **If no connection problems or cable damage is noted.**
5. Connect the X1 harness connector at the X83 Auxiliary Audio Input.
6. Disconnect the vehicle USB cable X3 harness connector at the K74 Human Machine Interface Control Module and the X83 Auxiliary Audio Input Adapter.
7. Connect the **EL-50034-14** Infotainment Test Cable and the **EL-50334-2** Type-A Female to Mini-B Male Cable together. Connect the assembled test cable to the K74 Human Machine Interface Control Module and the X83 Auxiliary Audio Input.
8. Ignition On/Vehicle in Service Mode. Infotainment system ON.
9. Connect the **EL-50334-20** Multi-Media Interface Tester (MIT) to the X83 Auxiliary Audio Input USB port and select the USB test mode.
10. Verify the audio from the **EL-50334-20** Multi-Media Interface Tester (MIT) is heard through the infotainment system while operating the system to play audio from the test tool.
 - **If audio is not heard from the test tool**
 1. Replace the X83 Auxiliary Audio Input Adapter. Connect all harness connectors.
 2. Connect the **EL-50334-20** Multi-Media Interface Tester (MIT) to the X83 Auxiliary Audio Input USB port and select the USB test mode.
 3. Verify the audio from the **EL-50334-20** Multi-Media Interface Tester (MIT) is heard through the infotainment system while operating the system to play audio from the test tool.
 - If audio is not heard from the test tool, replace the K74 Human Machine Interface Control Module.
 - **If audio is heard from the test tool**
11. Connect the **EL-50334-20** Multi-Media Interface Tester (MIT) to the X83 Auxiliary Audio Input AUX port and select the AUX test mode.
12. Verify the audio from the **EL-50334-20** Multi-Media Interface Tester (MIT) is heard through the infotainment system while operating the system to play audio from the test tool.
 - **If audio is not heard from the test tool**
 1. Replace the X83 Auxiliary Audio Input Adapter. Connect all harness connectors.
 - **If audio is heard from the test tool.**
13. Replace the vehicle USB cable between the K74 Human Machine Interface Control Module and the X83 Auxiliary Audio Input Adapter.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Audio Disc Player and USB Receptacle Replacement](#)

- [Control Module References](#) for human machine interface control module replacement, programming and setup.

BLUETOOTH MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

Circuit/System Description

Bluetooth® wireless technology is a short-range communications technology intended to replace the cables connecting portable and/or fixed devices while maintaining high levels of security. The operating range of the signal is approximately 30 feet.

The available features and functions are determined by the type of device and the software within the devices being used. For a feature or function to operate, it must be supported in both devices.

The Bluetooth® hardware is internal to the human machine interface control module. The human machine interface control module supports streaming of data (music, voice, information) from cellular phones and other mobile devices that support those features. The human machine interface control module is also capable of interfacing with cellular phones for hands-free features.

Refer to the vehicle owner manual, supplements and the device manufacturer's information for information on devices, control, operation and pairing instructions.

Diagnostic Aids

- Verify the mobile device is properly configured for the feature being used. Refer to the device manufacturer's information.
- Verify the function/feature that is being used is supported by the mobile device.
- The device must be paired to the system to use the available Bluetooth® feature(s). The pairing process must only be performed once for each device, unless that device's information is deleted.
- The system can store pairing information for multiple devices, but can only be actively connected to one at any given time.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

EL-50334-20 Multi-Media Interface Tester (MIT)**Circuit/System Verification**

1. Verify no DTCs are present.

- **If any DTCs are present**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .

- **If no DTCs are present**

2. Verify the K74 Human Machine Interface Control Module calibrations are current.

- **If the K74 Human Machine Interface Control Module calibrations are not current**

Reprogram the K74 Human Machine Interface Control Module and re-evaluate the concern.

- **If no update calibrations are available**

3. Ignition On/Vehicle in Service Mode. Infotainment system ON.

NOTE: The MIT tool can be used to test either cellular phone or streaming audio functions. Refer to the tool instructions and perform the appropriate test(s) related to the customers concern in the following steps.

4. Verify the infotainment system successfully pairs with the MIT tool.

- **If the infotainment system does not successfully pair with the MIT tool.**

Replace the K74 Human Machine Interface Control Module.

- **If the infotainment system successfully pairs with the MIT tool.**

5. Verify the infotainment system successfully completes the desired feature test using the MIT tool.

- **If the feature test is not successful**

Replace the K74 Human Machine Interface Control Module.

- **If the feature test is successful**

6. All OK. Refer to [Diagnostic Aids](#).

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

Control Module References for human machine interface control module replacement, programming and setup.

EJECT MALFUNCTION**Diagnostic Instructions**

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Media Disc Eject Switch B+	1, 2	2	-	-
Media Eject Signal	2	2	2	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Media Disc Eject Switch Ground	-	2	-	-
1. Fault affects multiple components, multiple DTCs set 2. Eject switch inoperative.				

Circuit/System Description

The media disc player is a separate component from the radio. The media disc player receives power, ground and serial data from the vehicle harness. The media disc player receives control information and outputs audio to the infotainment system over the MOST bus.

When equipped with the rear seat entertainment system, the media disc player is also the control module for the rear seat entertainment system, responsible for video output, infrared audio, rear screen controls and source selections.

The eject switch for the media disc player is a touch type switch that is attached to the Rear HVAC Trim plate. The switch assembly receives battery voltage and ground from the vehicle harness. A discrete eject signal circuit is provided to the switch assembly from the media disc player. When the switch is touched, the signal circuit is pulled low through the assembly and the media disc player ejects the disc.

Diagnostic Aids

The media disc player supplies current limited voltage signal on the eject signal circuit. When tested at the switch, the voltage measured will be approximately 10% less than the available battery voltage. For example, with the battery at 12.6 volts, the expected measurement would be approximately 11.3 volts.

Although the voltage is near battery voltage, the limited amperage on the circuit is insufficient to light a test lamp.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information.

Circuit/System Verification

1. Verify no DTCs are present.
 - If any DTCs are present

- **If no DTCs are present**

2. Ignition ON, infotainment system ON. Insert a disc in the A33 Media Disc Player.

3. Verify the disc ejects after touching the eject switch.

- **If the disc does not eject**

Refer to Circuit/System Testing

- **If the disc ejects**

4. All OK.

Circuit/System Testing

1. Ignition OFF and all vehicle systems OFF, disconnect the harness connector at the S140 Media Disc Eject Switch. It may take up to 2 minutes for all vehicle systems to power down.

2. Test for less than 10 Ω between the ground circuit terminal 4 and ground.

- **If 10 Ω or greater**

1. Ignition OFF.

2. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 10 Ω**

3. Verify a test lamp illuminates between the B+ circuit terminal 1 and ground.

- **If the test lamp does not illuminate**

Repair the open/high resistance in the circuit.

- **If the test lamp illuminates**

4. Ignition ON.

5. Verify a test lamp does not illuminate between the control circuit terminal 3 and ground.

- **If the test lamp illuminates**

1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player. Ignition ON.

2. Test for less than 1 V between the signal circuit and ground.

- If 1 V or greater, repair the short to voltage the circuit.
- If less than 1 V, replace the A33 Media Disc Player.

- **If the test lamp does not illuminate**

6. Test for 10 V or greater between the control circuit terminal 3 and ground.

- **If less than 10 V.**

1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player.

2. Test for infinite resistance between the control circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the control circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the A33 Media Disc Player.

- **If 10 V or greater.**

7. Replace the S140 Media Disc Eject Switch. Connect all harness connectors.

8. Ignition ON, infotainment system ON. Insert a disc in the A33 Media Disc Player.

9. Verify the disc ejects after touching the eject switch.

- **If the disc does not eject**

Replace the A33 Media Disc Player.

- **If the disc ejects**

10. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Disc Eject Switch Replacement](#)
- [Control Module References](#) for media disc player replacement, programming and setup.

DIGITAL RADIO POOR OR NO RECEPTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B125C 01

Satellite Antenna Circuit Short to Battery

DTC B125C 02

Satellite Antenna Circuit Short to Ground

DTC B125C 04

Satellite Antenna Circuit Open

Circuit/System Description

The digital radio receiver, located inside the radio, receives digital radio information from the digital radio antenna located on the outside of the vehicle. The digital radio receiver is connected to the digital radio antenna via a shielded coax cable. The digital radio antenna contains an amplifier which is powered by the radio through the coax cable.

Conditions for Running the DTC

This DTC is run every 300 milliseconds.

Conditions for Setting the DTC

The radio detects a circuit fault in the digital radio antenna.

Action Taken When the DTC Sets

The radio displays No XM Signal or Check Antenna.

Conditions for Clearing the DTC

- A current DTC clears when the condition for setting the DTC is no longer present.
- A history DTC clears after 100 malfunction-free ignition cycles.

Diagnostic Aids

The digital radio antenna requires a clear line of sight to the sky to operate properly. Reception may be limited, intermittent or unavailable inside structures.

Reference Information

[Radio/Navigation System Schematics](#)

Connector End View Reference

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

Description and Operation

[Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Special Tools

EL-48028 Digital Radio Test Antenna

For equivalent regional tools, refer to [Special Tools](#) and/or [Special Tools \(MIT Tool Instructions\)](#) .

[Circuit/System Verification](#)

1. With the vehicle outside in an area with an unobstructed view of the southern sky, tune to XM.
2. Verify DTC B125C is not set as current and the No XM Signal message is not displayed on the radio.
 - **If DTC B125C is set as current or the No XM Signal message is displayed.**
Refer to Circuit/System Testing.
 - **If DTC B125C is not set as current and the No XM Signal message is not displayed.**
3. All OK.

[Circuit/System Testing](#)

1. Ignition OFF, disconnect the digital radio antenna coax cable from the A11 Radio. Connect the **EL-48028** Digital Radio Test Antenna to the radio and place on the roof of the vehicle.
2. Ignition ON, radio tuned to XM channel 1.
3. Verify DTC B125C is not set as current and XM reception is improved.
 - **If DTC B125C is set as current or XM reception is not improved**
Replace the A11 Radio.
 - **If DTC B125C is not set as current and XM reception is improved**
4. Ignition OFF, disconnect the digital radio antenna coax cable from the T4H Digital Radio Antenna.
5. Verify the digital radio antenna coax cable passes the coax cable component test. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test**
Replace the antenna coax cable
 - **If the coax cable passes the test**
6. Test or replace the T4H Digital Radio Antenna.

[Component Testing](#)

CAUTION: Refer to [Test Probe Caution](#) .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
3. Test for less than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.
 - **If less than infinite resistance**
Replace the coax cable
 - **If infinite resistance**
5. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [High Frequency Antenna Replacement](#)
- [Control Module References](#) for radio replacement, programming and setup.

ONSTAR MICROPHONE MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Microphone High Signal Terminal 9	B2455 02	B2455 04	B2455 04	-
Microphone Low Signal Terminal 10	B2455 02	B2455 04	B2455 04	-
Cellular Telephone Voice Signal Terminal 6	2	1	2	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Cellular Telephone Voice Low Signal Terminal 12	-	2	2	-
1. Voice Cannot be Heard by Telephone Conversation Partner 2. Customer Voice may be distorted for Telephone Conversation Partner				

Circuit/System Description

The telematics communication interface control module provides the cellular phone microphone with a supplied voltage on the cellular phone microphone signal circuit. When the cellular phone microphone is in use, voice data from the user is sent back to the telematics communication interface control module on the signal circuit then sent through to the human machine interface control module during cellular phone conversations.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information.

Circuit/System Verification

NOTE: It is necessary to have the vehicle in a quiet, open outside area where a cellular call can be successfully placed and GPS data can be received from satellites.

1. Ignition ON/vehicle in Service Mode.
2. Verify that DTC B2455 is not set.
 - **If DTC B2455 is set**
Refer to [DTC B2455](#).
 - **If DTC B2455 is not set**
3. Verify that your voice is heard clearly by the OnStar Call Center after completing a blue button press.
 - **If your voice can not be heard clearly**
Refer to Circuit/System Testing - Microphone Malfunction.
 - **If your voice can be heard clearly**

4. Verify that a successful OnStar voice command when completing a blue button press.

- **If your voice can not be heard clearly**

Refer to Circuit/System Testing - Cellular Telephone Voice Malfunction.

- **If your voice can be heard clearly**

5. All OK.

Circuit/System Testing

Microphone Malfunction

1. Ignition OFF/vehicle OFF, disconnect the harness connector at the B24 Cellular Phone Microphone, ignition ON/vehicle in Service Mode.

2. Test for 8.0-10.5 V between the signal circuit terminal B and ground.

- **If less than 8.0 V**

1. Ignition OFF/vehicle OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module.

2. Test for infinite resistance between the signal circuit and ground.

- If less than infinite resistance, repair the short to ground in the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the signal circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the vehicle K73 Telematics Communication Interface Control Module.

- **If greater than 10.5 V**

1. Ignition OFF/vehicle OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.

2. Test for less than 1 V between the signal circuit and ground.

- If 1 V or greater, repair the short to voltage on the circuit.
- If less than 1 V, replace the K73 Telematics Communication Interface Control Module.

- **If between 8.0-10.5 V**

3. Test for less than 1 V between the low signal circuit terminal A and ground.

- **If greater than 1 V**

1. Ignition OFF/vehicle OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.

2. Test for less than 1 V between the signal circuit and ground.

- If 1 V or greater, repair the short to voltage in the circuit.
- If less than 1 V, repair the K73 Telematics Communication Interface Control Module.

- **If less than 1 V**

4. Test for greater than 8 V between the signal circuit terminal B and the low signal circuit terminal A.

- **If less than 8 V**

1. Ignition OFF/vehicle OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module.

2. Test for infinite resistance between the low signal circuit and ground.

- If less than infinite resistance, repair the short to ground in the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the low signal circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the vehicle K73 Telematics Communication Interface Control Module.

- **If greater than 8 V**

5. Test or replace the B24 Cellular Phone Microphone.

Cellular Telephone Voice Malfunction

1. Ignition OFF/vehicle OFF and vehicle systems OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module and the X1 harness connector at the K74 Human Machine Interface Control Module, ignition ON/vehicle in Service Mode.
2. Test for less than 1 V between each signal circuit listed below and ground:
 - K73 Telematics Communication Interface Control Module signal circuit Terminal 6
 - K73 Telematics Communication Interface Control Module signal circuit Terminal 12
 - **If greater than 1 V**
Repair the short to voltage in the circuit.
 - **If less than 1 V**
3. Ignition OFF/vehicle OFF.
4. Test for infinite resistance between the between each signal circuit listed below and ground:
 - K73 Telematics Communication Interface Control Module signal circuit Terminal 6
 - K73 Telematics Communication Interface Control Module signal circuit Terminal 12
 - **If less than infinite resistance**
Repair the short to ground on the circuit.
 - **If infinite resistance**
5. Test for less than 2 Ω in between each signal circuit listed below end to end:
 - K73 Telematics Communication Interface Control Module signal circuit Terminal 6
 - K73 Telematics Communication Interface Control Module signal circuit Terminal 12
 - **If 2 Ω or greater**
Repair the open/high resistance in the circuit.
 - **If less than 2 Ω**
6. Replace the K73 Telematics Communication Interface Control Module.
7. Verify that your voice is heard clearly by the OnStar® Call Center after completing a blue button press.
 - **If your voice can not be heard clearly**
Replace the K74 Human Machine Interface Control Module.
 - **If your voice can be heard clearly**
8. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Mobile Telephone Microphone Replacement](#)
- [Control Module References](#) for human machine interface control module or telematics communication interface control module replacement, programming and setup.

MEDIA DISC PLAYER MALFUNCTION (WITHOUT UWG)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

Circuit/System Description

The media disc player is a separate component in the infotainment system. The media disc player receives power, ground and serial data from the vehicle harness.

Control information and digital audio output is communicated over the MOST bus.

Diagnostic Aids

- Scratched or damaged discs may reduce audio quality or create other playback issues or create disc loading errors.
- Labels applied to discs can get caught and create disc loading or ejection issues.
- Always use a known good compatible disc when evaluating disc player concerns. The **EL-50334-50** USB Cable and Adapter Kit contains a compact disc that can be used for evaluation purposes and other tests.
- Refer to the owners manual for compatible disc and format types.
- Disc player power, ground and MOST communication circuit issues will create DTCs stored in other modules and will affect the entire infotainment system. The purpose of this diagnostic is to address disc player only concerns where the remaining system functions normally.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Special Tools

EL-50334-50 USB Cable and Adapter Kit

Circuit/System Verification

1. Verify no DTCs are present.
 - **If any DTCs are present**
Refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .
 - **If no DTCs are present**
2. Using a known good compact disc, verify the A33 Media Disc Player loads the disc.
 - **If the A33 Media Disc Player does not load the disc**
Replace the A33 Media Disc Player.

- **If the A33 Media Disc Player loads the disc**
3. Verify the infotainment system successfully plays the audio from the disc.
 - **If the infotainment system does not play the audio from the disc.**
 1. Attempt to playback audio from another disc
 - If audio cannot be played from any disc, replace the A33 Media Disc Player.
 - If the infotainment system plays the audio from the disc.
 - **If the infotainment system plays the audio from the disc.**
 4. Verify the A33 Media Disc Player ejects the disc.
 - **If the A33 Media Disc Player does not eject the disc**

Replace the A33 Media Disc Player.
 - **If the A33 Media Disc Player ejects the disc**
 5. All OK. Refer to **Diagnostic Aids**.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

Control Module References for media disc player replacement, programming and setup.

MEDIA DISC PLAYER MALFUNCTION (WITH UWG)

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provide an overview of each diagnostic category.

Circuit/System Description

The media disc player is a separate component in the infotainment system. The media disc player receives power, ground and serial data from the vehicle harness.

Control information and digital audio output is communicated over the MOST bus. The media disc player also communicates on low speed GMLAN.

The media disc player is also the control module for the rear seat entertainment system, responsible for video output, infrared audio, screen controls and source selections for the system. All information to the video screens is communicated over the LVDS cables. One cable is connected to the front display and a second cable is connected to both rear displays.

Diagnostic Aids

- Scratched or damaged discs may reduce audio quality or create other playback issues or create disc loading errors.
- Labels applied to discs can get caught and create disc loading or ejection issues.
- Always use a known good compatible disc when evaluating disc player concerns. The **EL-50334-50** USB Cable and Adapter Kit contains a compact disc that can be used for audio evaluation purposes and other tests.
- Refer to the owners manual for compatible disc and format types.
- Disc player power, ground and MOST communication circuit issues will create DTCs stored in other modules and will affect the entire infotainment system. The purpose of this diagnostic is to address disc player only concerns where the remaining system functions normally.
- If the disc player wakes on GMLAN but does not receive a wake signal on the MOST communication enable circuit, the disc player will operate in MOST bypass mode. The disc player will allow MOST data communications to pass through, but will not actively communicate on the MOST bus. The infotainment system will operate, but audio disc playback and the rear seat entertainment system will not function. No DTCs will be set if this occurs. A short to ground or

short to voltage on the MOST communication enable circuit will create DTCs stored in other modules and will affect the entire infotainment system.

- If the disc player cannot communicate on low speed GMLAN, but is awake and communicating on MOST, the infotainment system will operate normally, including all disc player and rear seat entertainment functions. If this occurs, no DTCs will be set but the scan tool will be unable to communicate with the disc player.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Special Tools

EL-50334-50 USB Cable and Adapter Kit

Circuit/System Verification

1. Verify no DTCs are present.
 - **If any DTCs are present**
Refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .
 - **If no DTCs are present**
2. Using a known good compact disc, verify the A33 Media Disc Player loads the disc.
 - **If the A33 Media Disc Player does not load the disc**
Replace the A33 Media Disc Player.
 - **If the A33 Media Disc Player loads the disc**
3. Verify the infotainment system successfully plays the audio from the disc.
 - **If the infotainment system does not play the audio from the disc.**
 1. Attempt to playback audio from another disc
 - If audio cannot be played from any disc, refer to Circuit/System testing.
 - **If the infotainment system plays the audio from the disc.**
4. Verify the A33 Media Disc Player ejects the disc.
 - **If the A33 Media Disc Player does not eject the disc**
Refer to **Eject Malfunction**.
 - **If the A33 Media Disc Player ejects the disc**

5. All OK. Refer to [Diagnostic Aids](#).

Circuit/System Testing

1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player.
2. Test for less than 10 Ω between the ground circuit terminal 7 and ground.
 - **If 10 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
3. Verify that a test lamp illuminates between the B+ circuit terminal 1 and ground.
 - **If the test lamp does not illuminate and the circuit fuse is good**
 1. Ignition OFF, remove the test lamp.
 2. Test for less than 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.
 - **If the test lamp does not illuminate and the circuit fuse is open**
 1. Ignition OFF, remove the test lamp.
 2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - **If the test lamp illuminates**
4. Ignition On/Vehicle in Service Mode.
5. Test for 9-13 V between the control circuit terminal 10 and ground.
 - **If not 9-13 V.**

Repair the open/high resistance in the circuit.
 - **If 9-13 V.**
6. Replace the A33 Media Disc Player.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for media disc player replacement, programming and setup.

ONSTAR AUDIO MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio High Signal terminal 1	1	1	1	-
Audio Low Signal terminal 2	1	1	1	-
1. No (or Noisy) OnStar® Audio				

Circuit/System Description

When an OnStar® keypress is made, a serial data message is sent to the audio system to mute all radio functions and output OnStar® originated audio. After the audio system is muted, the telematics communication interface control module transmits signals to the audio system on the audio signal and audio common circuits.

Reference Information

Schematic Reference

- **OnStar/Telematics Schematics**
- **Radio/Navigation System Schematics**

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition ON/vehicle in Service Mode, radio ON.
2. Verify that audio is heard clearly through all speaker channels when tuning radio to a known good station.
 - **If audio is not heard clearly**

Refer to **Speaker Malfunction (UQA)**, **Speaker Malfunction (UQS)** and/or **Speaker Malfunction (UQH)**
 - **If audio is heard clearly**
3. Verify that the Connecting to OnStar® message is heard clearly through the audio system when the OnStar® blue button is pressed.
 - **If OnStar® message is noisy or distorted**

Refer to Circuit/System Testing
 - **If OnStar® message is heard clearly**
4. All OK.

Circuit/System Testing

1. Ignition OFF/vehicle OFF and all vehicle systems OFF, disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
2. Test for less than 4 V between each of the signal circuits listed below and ground:
 - Terminal 1
 - Terminal 2

- **If 4 V or greater**

1. Ignition OFF/vehicle OFF, disconnect the X1 harness connector at the A11 Radio, ignition ON/vehicle in Service Mode.

2. Test for less than 1 V between the signal circuits and ground.

- If greater than 1 V, repair the short to voltage on the circuit.
- If less than 1 V, replace the A11 Radio.

- **If less than 4 V**

3. Ignition OFF/vehicle OFF.

4. Test for infinite resistance between each of the signal circuits listed below and ground:

- Terminal 1
- Terminal 2

- **If less than infinite resistance**

Repair the short to ground on the circuit.

- **If infinite resistance**

5. Disconnect the X1 harness connector at the A11 Radio.

6. Test for less than 2 Ω in each of the signal circuits listed below end to end:

- K73 Telematics Communication Interface Control Module Terminal 1 X2
- K73 Telematics Communication Interface Control Module Terminal 2 X2

- **If 2 Ω or greater**

Repair the open/high resistance on the circuit.

- **If less than 2 Ω**

7. Replace the K73 Telematics Communication Interface Control Module.

8. Verify that the Connecting to OnStar® message is heard clearly through the audio system when the OnStar® blue button is pressed.

- **If audio is not heard clearly**

Replace the A11 Radio.

- **If audio is heard clearly**

9. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for radio or telematics communication interface control module replacement, programming and setup.

NO GLOBAL POSITIONING SYSTEM (GPS) RECEPTION (UE1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B2462 02

Global Positioning System Short to Ground

DTC B2462 04

Circuit/System Description

The navigation antenna is connected to the Telematics Communication Interface Control Module. The module supplies 5 V to the antenna to power the internal amplifier through the center conductor of the antenna coax cable.

When the vehicle is equipped with the optional navigation system, a Navigation Antenna Signal Splitter is installed to distribute the navigation signal to both the Telematics Communication Interface Control Module and the Human Machine Interface Control Module. The Human Machine Interface Control Module supplies 5 V through the coax cable to power the Navigation Antenna Signal Splitter.

Conditions for Running the DTC

- Radio On.
- System voltage is greater than 9 V and less than 16 V.
- The navigation system/telematics communication interface control module tests the GPS antenna every 10 s.

Conditions for Setting the DTC

B2462 02

The Telematics Communication Interface Control Module or Human Machine Interface Control Module detects a short to ground on the GPS antenna signal circuit.

B2462 04

The Telematics Communication Interface Control Module or Human Machine Interface Control Module detects an open/high resistance on the GPS antenna signal circuit.

Action Taken When the DTC Sets

- The Telematics Communication Interface Control Module or Human Machine Interface Control Module uses the last reported position and the vehicle speed signal to calculate the vehicle position.
- Route guidance may be inaccurate.
- Turn by turn navigation may be inaccurate or inoperative.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 50 consecutive malfunction - free ignition cycles have occurred.

Diagnostic Aids

- The scan tool Telematics Communication Interface Control Module GPS signal parameter will display a Yes or No dependent upon whether or not the module sees an increment of the seconds transmitted by GPS signals to the Telematics Communication Interface Control Module. Upon entering this screen, the GPS signal title will initially display Yes, regardless of the presence of time increment, for at least 2 seconds, while the algorithm in the scan tool determines the status of the clock. If increment is found, Yes is continually displayed. If the clock remains static, No is displayed. The scan tool looks for increment every second, regardless of current display.
- Inaccurate or aged GPS position concerns which are no longer present may have been due to the temporary loss of GPS signal reception by the vehicle. Conditions such as tunnels or parking structures will restrict the cellular phone and navigation antenna from a clear view of the satellites in the sky and may have caused this temporary data loss.
- The GPS requires a clear line of sight to the sky to operate properly. In most cases the GPS will not have reception near tall buildings or inside structures.

Reference Information

- [OnStar/Telematics Schematics](#)
- [Radio/Navigation System Schematics](#)

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

- [OnStar Description and Operation](#)
- [Radio/Audio System Description and Operation](#)

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

[Control Module References](#) for scan tool information

EL-49903 OnStar® Antenna Diagnostic Tool Kit

[Circuit/System Verification](#)

NOTE: The following verification requires the vehicle to be outside with an unobstructed view of the southern sky. Allow 5 minutes after turning the ignition ON for the vehicle to acquire the GPS satellites signal.

1. Ignition ON/vehicle in Service Mode.
2. Verify that DTC B2462 is not set in the Telematics Communication Interface Control Module.
 - **If DTC B2462 is set in the Telematics Communication Interface Control Module and the vehicle is not equipped with a navigation system**

Refer to Circuit/System Testing Without Navigation System.
 - **If DTC B2462 is set in the Telematics Communication Interface Control Module and the vehicle is equipped with a navigation system**

Refer to Circuit/System Testing With Navigation System.
 - **If DTC B2462 is not set in the Telematics Communication Interface Control Module**
3. Verify an OnStar® advisor can locate the vehicle after performing a blue button press.
 - **If the advisor can not locate the vehicle and the vehicle is not equipped with a navigation system**

Refer to Circuit/System Testing Without Navigation System
 - **If the advisor can not locate the vehicle and the vehicle is equipped with a navigation system**

Refer to Circuit/System Testing With Navigation System.
 - **If the advisor can locate the vehicle**
4. Verify DTC B2462 is not set in the Human Machine Interface Control Module.

- **If DTC B2462 is set in the Human Machine Interface Control Module**

Refer to Circuit/System Testing With Navigation System - Step 9.

- **If DTC B2462 is not set in the Human Machine Interface Control Module**

5. Verify that the NO GPS symbol/message is not displayed on the radio display.

- **If the NO GPS symbol/message is displayed**

Refer to Circuit/System Testing With Navigation System - Step 9.

- **If the NO GPS symbol/message is not displayed**

6. All OK.

Circuit/System Testing

without Navigation System

1. Ignition OFF/vehicle OFF, disconnect the GPS and cellular coax cable connector at the K73 Telematics Communication Interface Control Module.

NOTE: You must perform the Circuit/System Verification before proceeding with Circuit/System Testing.

2. Attach both leads of the EL-49903-1 OnStar® test antenna to the EL-49903-5 combiner. Using the EL-49903-6 coax cable attach the grey connector to the combiner and the brown connector to the K73 Telematics Communication Interface Control Module. Place the test antenna on the roof of the vehicle, ignition ON.

3. Verify DTC B2462 is not set or that the OnStar® advisor can locate the vehicle.

- **If DTC B2462 is set or the advisor can not locate the vehicle**

Replace the K73 Telematics Communication Interface Control Module.

- **If DTC B2462 is not set or the advisor can locate the vehicle**

4. Test the coax cable between the K73 Telematics Communication Interface Control Module and the T4G Cellular Phone, Navigation and Digital Radio Antenna. Refer to [Component Testing](#).

- **If the coax cable does not pass the test**

Replace the coax cable.

- **If the coax cable passes the test**

5. Test or replace the T4G Cellular Phone, Navigation and Digital Radio Antenna.

with Navigation System

1. Ignition OFF/vehicle OFF, disconnect the T4G Cellular Phone, Navigation and Digital Radio Antenna coax cable at the T15 Navigation Antenna Signal Splitter.

NOTE: You must perform the Circuit/System Verification before proceeding with Circuit/System Testing.

2. Attach both leads of the EL-49903-1 OnStar® test antenna to the EL-49903-5 combiner. Using the EL-49903-7 coax cable attach one grey connector to the combiner and the other grey connector to the T15 Navigation Antenna Signal Splitter. Place the test antenna on the roof of the vehicle, ignition ON.

3. Verify DTC B2462 is not set or that the OnStar® advisor can locate the vehicle.

- **If DTC B2462 is not set or the advisor can locate the vehicle**

1. Test the coax cable between the T15 Navigation Antenna Signal Splitter and the T4G Cellular Phone, Navigation and Digital Radio Antenna. Refer to [Component Testing](#).

- **If the coax cable does not pass the test**

Replace the coax cable.

- If the coax cable passes the test
2. Replace the T4G cellular phone, navigation and digital radio antenna.
 - **If DTC B2462 is set or if the advisor can not locate the vehicle**
 4. Ignition OFF/vehicle OFF, disconnect the GPS and cellular coax cable connector at the K73 Telematics Communication Interface Control Module.
 5. Attach both leads of the EL-49903-1 OnStar® test antenna to the EL-49903-5 combiner. Using the EL-49903-6 coax cable attach the grey connector to the combiner and the brown connector to the K73 Telematics Communication Interface Control Module. Place the test antenna on the roof of the vehicle, ignition ON.
 6. Verify DTC B2462 is not set or that the OnStar® advisor can locate the vehicle.
 - **If DTC B2462 is set or the advisor can not locate the vehicle.**

Replace the K73 Telematics Communication Interface Control Module.

- **If DTC B2462 is not set or the advisor can locate the vehicle.**

7. Ignition OFF/vehicle OFF.
8. Test the coax cable between the T15 Navigation Antenna Signal Splitter and the K73 Telematics Communication Interface Control Module. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test.**

Replace the coax cable.

- **If the coax cable passes the test.**

9. Ignition OFF/vehicle OFF, disconnect the blue GPS coax cable connector at the K74 Human Machine Interface Control Module.
10. Attach the EL-49903-1 OnStar® test antenna blue connector to the K74 Human Machine Interface Control Module and place the test antenna on the roof of the vehicle.
11. Ignition ON/vehicle in Service Mode.
12. Verify DTC B2462 is not set or that the NO GPS symbol/message is not displayed on the radio.
 - **If DTC B2462 is set or the NO GPS symbol/message is displayed**

Replace the K74 Human Machine Interface Control Module

- **If DTC B2462 is not set or if the NO GPS symbol/message is not displayed.**

13. Ignition OFF/vehicle OFF.
14. Test the coax cable between the T15 Navigation Antenna Signal Splitter and the K74 Human Machine Interface Control Module. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test.**

Replace the coax cable.

- **If the coax cable passes the test.**

15. Test or replace the T15 Navigation Antenna Signal Splitter.

Component Testing

CAUTION: Refer to [Test Probe Caution](#) .

NOTE:

- Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.
- To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

- The vehicle may be equipped with sectioned coax. Test each section and replace only the faulty section, not the entire length of coax.

Coax Cable Test

1. Ignition OFF/vehicle OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between the coax cable center terminal end to end.
 - **If 5 Ω or greater**
Replace the coax cable.
 - **If less than 5 Ω**
3. Test for greater than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**
Replace the coax cable.
 - **If less than 5 Ω**
4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.
 - **If less than infinite resistance**
Replace the coax cable.
 - **If infinite resistance**
5. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [High Frequency Antenna Replacement](#)
- [Control Module References](#) for Human Machine Interface control module or Telematics Communication Interface Control Module replacement, programming and setup.

NO GLOBAL POSITIONING SYSTEM (GPS) RECEPTION (WITHOUT UE1 & CW1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B2462

Global Positioning System Signal

For symptom byte information, refer to [Symptom Byte List](#).

Circuit Description

The navigation antenna is connected to the human machine interface control module by a shielded coaxial cable. The human machine interface control module supplies 5 V through the coax cable to power the internal antenna amplifier.

Conditions for Running the DTC

- Radio On.
- System voltage is greater than 9 V and less than 16 V.
- The human machine interface control module tests the GPS antenna every 10 seconds.

Conditions for Setting the DTC

B2462 01

The human machine interface control module detects a short to B+ on the GPS antenna signal circuit.

B2462 02

The human machine interface control module detects a short to ground on the GPS antenna signal circuit.

B2462 04

The human machine interface control module detects an open/high resistance on the GPS antenna signal circuit.

Actions Taken When the DTC Sets

- The human machine interface control module uses the last reported position and the vehicle speed signal to calculate the vehicle position.
- Route guidance may be inaccurate.
- Turn by turn navigation may be inaccurate or inoperative.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

The navigation antenna requires a clear line of sight to the sky to operate properly. The GPS may have limited, intermittent or no reception near tall buildings or inside structures.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

EL-49903 OnStar® Antenna Diagnostic Tool Kit

[Circuit/System Testing](#)

1. Ignition OFF, disconnect the navigation antenna coax cable connector at the K74 Human Machine Interface Control Module. Connect the **EL-49903** GM OnStar® antenna diagnostic tool kit to the K74 Human Machine Interface Control Module, place the test antenna on the roof of the vehicle.
2. Ignition ON, infotainment system ON, navigation selected.
3. Verify DTC B2462 is not set.
 - **If DTC B2462 is set**

Replace the K74 Human Machine Interface Control Module.
 - **If DTC B2462 is not set**
4. Ignition OFF, disconnect the radio navigation coax cable at the T4G Navigation Antenna.
5. Verify the radio navigation coax cable passes the coax cable component test. Refer to **Component Testing**.
 - **If the coax cable does not pass the test**

Replace the coax cable
 - **If the coax cable passes the test**
6. Test or replace the T4G Navigation Antenna.

Component Testing

CAUTION: Refer to **Test Probe Caution** .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**

Replace the coax cable
 - **If less than 5 Ω**
3. Test for less than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**

Replace the coax cable
 - **If less than 5 Ω**
4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.
 - **If less than infinite resistance**

Replace the coax cable
 - **If infinite resistance**
5. All OK

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **High Frequency Antenna Replacement**

- [Control Module References](#) for human machine interface control module replacement, programming and setup.

NO GLOBAL POSITIONING SYSTEM (GPS) RECEPTION (CW1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B2462

Global Positioning System Signal

For symptom byte information, refer to [Symptom Byte List](#).

Circuit/System Description

The navigation antenna is connected to the Navigation Control Module via a coax cable. The Navigation control module supplies 5 V through the coax cable to power the internal antenna amplifier.

Conditions for Running the DTC

- Radio On.
- System voltage is greater than 9 V and less than 16 V.
- The Navigation control module tests the GPS antenna every 10 seconds.

Conditions for Setting the DTC

B2462 01

The Navigation control module detects a short to B+ on the GPS antenna signal circuit.

B2462 02

The Navigation control module detects a short to ground on the GPS antenna signal circuit.

B2462 04

The Navigation control module detects an open/high resistance on the GPS antenna signal circuit.

Action Taken When the DTC Sets

- The Navigation control module uses the last reported position and the vehicle speed signal to calculate the vehicle position.
- Route guidance may be inaccurate.
- Turn by turn navigation may be inaccurate or inoperative.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

- This DTC can only be retrieved from the Navigation control module.
- The navigation antenna requires a clear line of sight to the sky to operate properly. The GPS may have limited, intermittent or no reception near tall buildings or inside structures.

Reference Information

- [Radio/Navigation System Schematics](#)

Connector End View Reference

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

EL-49903 Test Antenna Diagnostic Tool Kit

[Circuit/System Testing](#)

1. Ignition OFF, disconnect the navigation antenna coax cable connector at the K31 Navigation Control Module. Connect the **EL-49903** Test Antenna Diagnostic tool kit to the K31 Navigation Control Module, place the test antenna on the roof of the vehicle.
2. Ignition ON, infotainment system ON, navigation selected.
3. Verify DTC B2462 is not set.
 - **If DTC B2462 is set**

Replace the K31 Navigation Control Module.
 - **If DTC B2462 is not set**
4. Ignition OFF, disconnect the Navigation control module coax cable.
5. Verify the Navigation control module coax cable passes the coax cable component test. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test**

Replace the coax cable
 - **If the coax cable passes the test**
6. Test or replace the T4G Navigation Antenna.

[Component Testing](#)

CAUTION: Refer to [Test Probe Caution](#) .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
3. Test for less than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.
 - **If less than infinite resistance**
Replace the coax cable
 - **If infinite resistance**
5. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [High Frequency Antenna Replacement](#)
- [Control Module References](#) for Navigation control module replacement, programming and setup.

ONSTAR BUTTON LED MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Control Terminal 4	1	1	2	-
Control Terminal 5	1	1	2	-
Ground	-	B2476 04	-	-
1. OnStar® Indicator Inoperative 2. Indicator Illuminated At All Times				

Circuit Description

The OnStar® status Indicators are located in the button assembly. The Green Indicator is illuminated when the system is ON and operating normally. When the Green Indicator is green and flashing, it is an indication that a call is in progress. When the Red Indicator is illuminated, a system malfunction is present. In the event there is a system malfunction and the OnStar® system is still able to make a call, the Indicator will flash red during the call. The OnStar® Indicators are controlled by the telematics communication interface control module via the keypad Green Indicator control circuit and the keypad Red Indicator control circuit.

Reference Information

Schematic Reference

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

[OnStar Description and Operation](#)

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

[Control Module References](#) for scan tool information

[Circuit/System Verification](#)

NOTE: If the green LED is off with the ignition ON and the LED does not function when commanded with the scan tool, contact the OnStar® Center to confirm the vehicle has a current subscription.

1. Ignition ON/vehicle in Service Mode.
2. Verify no DTCs are set.
 - **If any DTCs are set**
Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#)
 - **If no DTCs are set**
3. Verify that the Green Indicator turns ON and OFF when commanding the Green Indicator ON and OFF with a scan tool.
 - **If the Green Indicator does not turn ON and OFF**
Refer to Circuit/System Testing - Green Indicator Test
 - **If the Green Indicator turns ON and OFF**
4. Verify that the Red Indicator turns ON and OFF when commanding the Red Indicator ON and OFF with a scan tool.
 - **If the Red Indicator does not turn ON and OFF**
Refer to Circuit/System Testing - Red Indicator Test
 - **If the Red Indicator turns ON and OFF**
5. All OK.

[Circuit/System Testing](#)

[Green Indicator Test](#)

1. Ignition OFF/vehicle OFF and all vehicle systems OFF, disconnect the harness connector at the S51 Telematics Button Assembly. It may take up to 2 min for all vehicle systems to power down.
2. Test for less than 10 Ω between the ground circuit terminal 6 and ground.
 - **If 10 Ω or greater**
 1. Ignition OFF/vehicle OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
3. Ignition ON/vehicle in Service Mode.
 4. Test for less than 1 V between the control circuit terminal 4 and ground while commanding the Green Indicator OFF with a scan tool.
 - **If 1 V or greater**
 1. Ignition OFF/vehicle OFF, disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
 2. Test for less than 1 V between the control circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K73 Telematics Communication Interface Control Module.
 - **If less than 1 V**
 5. Test for greater than 8 V between the control circuit terminal 4 and ground while commanding the Green Indicator ON with a scan tool.
 - **If 8 V or less**
 1. Ignition OFF/vehicle OFF, disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the control circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K73 Telematics Communication Interface Control Module.
 - **If greater than 8 V**
 6. Test or replace the S51 Telematics Button Assembly.

Red Indicator Test

1. Ignition OFF/vehicle OFF and all vehicle systems OFF, disconnect the harness connector at the S51 Telematics Button Assembly. It may take up to 2 min for all vehicle systems to power down.
2. Test for less than 10 Ω between the ground circuit terminal 6 and ground.
 - **If 10 Ω or greater**
 1. Ignition OFF/vehicle OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
3. Ignition ON/vehicle in Service Mode.
4. Test for less than 1 V between the control circuit terminal 5 and ground while commanding the Red Indicator OFF with a scan tool.
 - **If 1 V or greater**
 1. Ignition OFF/vehicle OFF, disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
 2. Test for less than 1 V between the control circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K73 Telematics Communication Interface Control Module.
 - **If less than 1 V**

5. Test for greater than 8 V between the control circuit terminal 5 and ground while commanding the Red Indicator ON with a scan tool.

- **If 8 V or less**

1. Ignition OFF/vehicle OFF, disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module.
2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
3. Test for less than 2 Ω in the control circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K73 Telematics Communication Interface Control Module.

- **If greater than 8 V**

6. Test or replace the S51 Telematics Button Assembly.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Communication Center Call Switch Replacement**
- **Control Module References** for telematics communication interface control module replacement, programming and setup.

ONSTAR CALL CENTER REMOTE FUNCTION REQUESTS MALFUNCTION

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Circuit/System Description

The telematics communication interface control module has the capability of commanding the horn, initiating door lock/unlock or operating the exterior lamps using the serial data circuits. These functions are commanded by the OnStar® Call Center per a customer request.

Diagnostic Aids

The customer concern may have been due to a lack of cellular service in a given area or a failure in the National Cellular Network infrastructure that has since been corrected.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**

- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

NOTE:

- It is necessary to inform the OnStar® Call Center advisor that this call is for vehicle diagnostic purposes.
- It is necessary to have the vehicle in an open outside area where a cellular call can be successfully placed and GPS data can be received from satellites.

1. Ignition ON/vehicle in Service Mode.

2. Verify that the horn, lights and the door locks on the vehicle operate properly.

- **If an applicable vehicle system does not operate properly**

Refer to [Diagnostic System Check - Vehicle](#).

- **If all applicable vehicle systems operate properly**

3. Verify that a call can be successfully placed to the OnStar® Call Center by pressing the blue OnStar® button.

- **If unable to contact the OnStar® call center**

Refer to [Unable to Contact OnStar Call Center](#).

- **If able to contact the OnStar® Call Center**

4. Verify with the OnStar® advisor that all remote functions (door locks, lights and horn) work.

- **If the remote functions do not operate when requested**

Replace the K73 Telematics Communication Interface Control Module

- **If the remote functions operate when requested**

5. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for telematics communication interface control module replacement, programming and setup.

ONSTAR BUTTON MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

For symptom byte information refer to [Symptom Byte List](#)

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
10 V Reference	B2476 02	B2476 04	B2476 04	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Signal	1	1	B2476 59	B2476 59, B2482 00
Ground	-	B2476 04	-	-

1. OnStar® Buttons Inoperative

Circuit/System Description

The OnStar® button assembly consists of 3 buttons: Call/Answer, OnStar® Call Center and OnStar® Emergency. The telematics communication interface control module supplies the OnStar® button assembly with 10 V via the keypad supply voltage circuit. Each of the buttons, when pressed, completes the circuit across a resistor allowing a specific voltage to be returned to the telematics communication interface control module over the keypad signal circuit. Depending upon the voltage range returned, the telematics communication interface control module is able to identify which button has been activated.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

NOTE: Contact the OnStar® Call Center first before pressing the emergency button in order to notify them of the test.

1. Ignition ON/vehicle in Service Mode.
2. Verify no DTCs are set.

- If any DTCs are set

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#)

- If no DTCs are set

3. Verify that each button of the S51 Telematics Button Assembly operates normally by pressing each button individually.

- If none of the buttons operate normally

Refer to Circuit/System Testing.

- If some, but not all, of the buttons operate normally

Test or replace the S51 Telematics Button Assembly.

- **If all of the buttons operate normally**

4. All OK.

Circuit/System Testing

1. Ignition OFF/vehicle OFF and all vehicle systems OFF, disconnect the harness connector at the S51 Telematics Button Assembly. It may take up to 2 min for all vehicle systems to power down.
2. Test for less than 10 Ω between the ground circuit terminal 6 and ground.

- **If 10 Ω or greater**

1. Ignition OFF/vehicle OFF.
2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 10 Ω**

3. Ignition ON/vehicle in Service Mode.

4. Test for 8.0-10.5 V between the 10 V reference circuit terminal 1 and ground.

- **If less than 8.0 V**

1. Ignition OFF/vehicle OFF, disconnect the harness connector at the K73 Telematics Communication Interface Control Module.
2. Test for infinite resistance between the 10 V reference circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
3. Test for less than 2 Ω in the 10 V reference circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K73 Telematics Communication Interface Control Module.

- **If greater than 10.5 V**

1. Ignition OFF/vehicle OFF, disconnect the harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
2. Test for less than 1 V between the 10 V reference circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K73 Telematics Communication Interface Control Module.

- **If between 8.0-10.5 V**

5. Ignition OFF/vehicle OFF.

6. Test for 500-900 Ω between the signal circuit terminal 3 and ground.

- **If less than 500 Ω**

1. Disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module.
2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the K73 Telematics Communication Interface Control Module.

- **If greater than 900 Ω**

1. Disconnect the X1 harness connector at the K73 Telematics Communication Interface Control Module, ignition ON/vehicle in Service Mode.
2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V
3. Ignition OFF/vehicle OFF.

4. Test for less than 2 Ω in the signal circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the K73 Telematics Communication Interface Control Module.

- **If between 500-900 Ω**

7. Test or replace the S51 Telematics Button Assembly.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Communication Center Call Switch Replacement](#)
- [Control Module References](#) for telematics communication interface control module replacement, programming and setup.

ONSTAR STEERING WHEEL CONTROL FUNCTIONS MALFUNCTION

Some vehicles equipped with the OnStar[®] system have the capability of accessing voice mailboxes and other automated phone systems by means of the steering wheel controls, while the OnStar[®] Personal Calling feature is in use. If the "Talk" or "Mute" button (depending upon the vehicle) on the steering wheel controls is depressed during an OnStar[®] Personal Calling call, the telematics communication interface control module receives the message on the serial data bus from either the radio or body control module. This message is interpreted as a request to turn any spoken numbers into dual tone multi-frequency tones to be delivered over the airwaves to the phone system the user is communicating with. Complete instructions for operation of these features can be found in the information provided to the customer with the OnStar[®] system.

The steering wheel controls are a resistor network that consist of multiple momentary contact switches and a series of resistors. The switches and resistor network are arranged so that each switch has a different resistance value. When a switch is pressed, a voltage drop occurs in the resistor network, which produces a specific voltage value unique to the switch selected, to be interpreted by either the radio or BCM. In the event the OnStar[®] steering wheel control functions are inoperative, technicians should refer to [Steering Wheel Controls Malfunction](#), to begin diagnosis of the steering wheel control concern.

RADIO INFORMATION DISPLAY MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Circuit/System Description

The infotainment display and controls are a separate component from the radio, combined into an assembly. The assembly is supplied battery voltage and ground from the vehicle harness. The human machine interface control module communicates digital video data for on-screen display through a dedicated cable containing the LVDS data circuits.

Control information, touch communications and dimming level for the display are communicated via a LIN serial data circuit to the human machine interface control module.

Diagnostic Aids

Malfunctions may include blank screen.

Reference Information

Schematic Reference

[Radio/Navigation System Schematics](#)

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

1. Vehicle OFF/Ignition OFF.
2. Verify the LVDS interface cable is properly connected at the P17 Info Display Module X2 and the K74 Human Machine Interface Control Module X5 connections and there is no damage to the cable or connections.
3. Ignition ON/Vehicle in Service Mode, infotainment system ON.
4. Verify the P17 Info Display Module does not display an image.
 - **If the P17 Info Display Module displays an image.**
All OK.
 - **If the P17 Info Display Module does not display an image.**
5. Vehicle OFF/Ignition OFF.
6. Disconnect the LVDS interface cable from the P17 Info Display Module X2.
7. Connect the EL-50334-2 Type A female to Mini B male USB Cable to the P17 Info Display Module X2. Connect the EL-50334-14 Infotainment Test Cable to the adapter.
8. Disconnect the LVDS interface cable from the K74 Human Machine Interface Control Module X5. Connect the EL-50334-14 Infotainment Test cable to the K74 Human Machine Interface Module X5.
9. Ignition ON/Vehicle in Service Mode, infotainment system ON.
10. Verify the P17 Info Display Module displays an image.
 - **If the P17 Info Display Module does not display an image**
 1. Replace the P17 Info Display Module. Connect all harness connectors.
 2. Ignition ON/Vehicle in Service Mode, infotainment system ON.
 3. Verify the P17 Info Display Module displays an image.
 - If the P17 Info Display Module still does not display an image, replace the K74 Human Machine Interface Control Module.
 - If the P17 Info Display Module displays an image.
 4. All OK.
 - **If the P17 Info Display Module displays an image.**
11. Replace the vehicle LVDS interface cable from the P17 Info Display Module X2 to the K74 Human Machine Interface Module X5.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Radio Control Assembly Replacement**

- [Control Module References](#) for human machine interface control module replacement, programming and setup.

RADIO POOR RECEPTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B125A 02

Antenna 1 Signal Circuit Short to Ground

DTC B125A 04

Antenna 1 Signal Circuit Open Circuit

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Radio Antenna Coax	B125A 02	B125A 04	1	-
Antenna Module Ground	-	1	-	-
1. May exhibit possible AM/FM interference.				

Circuit/System Description

The diversity antenna system uses antennas applied as appliques to the rear glass and two antenna modules. The right antenna 1 module receives both AM and FM signals, while the left antenna 2 module receives FM signals only. The antenna module receives the signals from the glass antenna. Each antenna module is connected to the radio by a coaxial cable.

The radio antenna module is enabled when the radio is turned on. The radio provides battery voltage to the antenna module using the center conductor of the antenna coaxial cable. When a 12 V signal is seen by the module on the center conductor of the antenna coax, the received signals are amplified.

When the AM band is selected on the radio, the antenna 1 module connects the AM antenna to the radio. When the FM band is selected, both antenna modules provide FM signals to the radio.

Conditions for Running the DTC

- Ignition On/Vehicle in Service Mode.
- Battery voltage must be between 9-16 V.

Conditions for Setting the DTC

B125A 02

The radio detects a short to ground in the antenna 1 signal circuit center conductor.

B125A 04

The radio detects an open in the antenna 1 signal circuit center conductor.

Action Taken When the DTC Sets

Radio reception may be poor or not available.

Conditions for Clearing the DTC

- The condition responsible for setting the DTC no longer exists.
- A history DTC will clear after 50 consecutive malfunction-free ignition cycles have occurred.

Diagnostic Aids

Poor radio reception may be due to multiple influences, some of which may not be vehicle related. Areas which have high RF traffic or block the signal path may cause a degradation in radio reception. Radio reception may also be influenced by items within the vehicle, but not part of the radio system. Such examples are aftermarket electrical accessories or other items which may generate noise in the vehicle electrical system. Aftermarket window tinting, especially when there is a metallic in the film, may reduce radio reception.

AM reception is highly dependent on the antenna module receiving battery voltage from the radio and being properly grounded. When the antenna module does not receive power, AM stations may not be received and FM reception may be limited. If the module is not properly grounded, excessive interference in the signal may occur or reception may be limited.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Inspect the antenna located in the rear window. Verify all branches of the antennas are intact, with no scratches or other damage.
 - **If damage is found**
Repair or replace as necessary
 - **If no damage is found**
2. Ignition On/Vehicle in Service Mode. Infotainment system ON.
3. Verify station reception is normal when tuned to several known good AM and FM stations.
 - **If AM or FM reception is poor.**
Refer to Circuit/System Testing
 - **If reception is normal**
4. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the radio antenna coax cable from the A11 Radio and from the T23L Radio Antenna Amplifier-Left.
2. Verify the antenna coax cable passes the coax cable component test. Refer to [Component Testing](#).
 - **If the coax cable does not pass the test**
Replace the antenna coax cable
 - **If the coax cable passes the test**
3. Connect the antenna coax cable to the A11 Radio. Ignition On/Vehicle in Service Mode. Infotainment system ON.
4. Verify a test lamp illuminates between the antenna coax cable center terminal and ground at the T23L Radio Antenna Amplifier-Left connector.
 - **If the test lamp does not illuminate**
Replace the A11 Radio.
 - **If the test lamp illuminates**
5. Test or replace the T23L Radio Antenna Amplifier-Left.

Component Testing

CAUTION: Refer to [Test Probe Caution](#) .

NOTE: Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.

To prevent false reading when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Ignition OFF, disconnect the coax cable at both components.
2. Test for less than 5 Ω between coax cable center terminal end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
3. Test for less than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**
Replace the coax cable
 - **If less than 5 Ω**
4. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.
 - **If less than infinite resistance**
Replace the coax cable
 - **If infinite resistance**
5. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

Control Module References for radio replacement, programming and setup.

SPEAKER REPLACEMENT REFERENCE

Component	Repair Instruction
Center I/P Speaker	<u>Radio Front Center Speaker Replacement (UQA, UQS) Radio Front Center Speaker Replacement (UQH)</u>
Left and Right I/P Speaker	<u>Radio Front Speaker Replacement</u>
Front Door Speaker	<u>Radio Front Side Door Speaker Replacement</u>
Front Headrest Speaker	<u>Driver or Passenger Seat Head Restraint Replacement</u>
Front A-Pillar Speaker	<u>Radio Windshield Side Garnish Molding Speaker Replacement</u>
Rear Door Speaker	<u>Radio Rear Side Door Speaker Replacement</u>
Rear Window Shelf/ Surround Speaker	<u>Radio Rear Surround Speaker Replacement</u>
Rear Door Tweeter Speaker	<u>Radio Rear Side Door Upper Speaker Replacement</u>
Rear Center Speaker	<u>Radio Front Floor Console Speaker Replacement</u>
Front Subwoofer Speaker	<u>Front Floor Speaker Replacement</u>
Rear Subwoofer Speaker	<u>Radio Rear Speaker Replacement (UQA, UQS) Radio Rear Speaker Replacement (UQH)</u>

SPEAKER MALFUNCTION (UQA)

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provide an overview of each diagnostic category.

DTC Descriptors

DTC B1025

Audio Output 1 Circuit

DTC B1035

Audio Output 2 Circuit

DTC B1045

Audio Output 3 Circuit

DTC B1055

Audio Output 4 Circuit

DTC B1065

Audio Output 5 Circuit

DTC B1075

Audio Output 6 Circuit

DTC B1085

Audio Output 7 Circuit

DTC B1095

For symptom byte information, refer to [Symptom Byte List](#).

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 1 Signal Circuits (Left Front Door)	B1025 02	B1025 04	B1025 01	-
Audio Output 2 Signal Circuits (Right Front Door)	B1035 02	B1035 04	B1035 01	-
Audio Output 3 Signal Circuits (Subwoofer)	B1045 02	B1045 04	B1045 01	-
Audio Output 4 Signal Circuits (Center I/P)	B1055 02	B1055 04	B1055 01	-
Audio Output 5 Signal Circuits (Left Rear Door)	B1065 02	B1065 04	B1065 01	-
Audio Output 6 Signal Circuits (Right Rear Door)	B1075 02	B1075 04	B1075 01	-
Audio Output 7 Signal Circuits (Left I/P)	B1085 02	B1085 04	B1085 01	-
Audio Output 8 Signal Circuits (Right I/P)	B1095 02	B1095 04	B1095 01	-

Circuit/System Description

The Media Oriented Systems Transport (MOST) is a high-speed multimedia network technology. The serial MOST bus uses a ring topology and synchronous data communication to transmit audio, video, data and control information between any devices attached.

The audio amplifier is a participant on the MOST network. The audio amplifier receives audio inputs and control information from the MOST bus.

Each of the audio output channel circuits (+) and (-), at the audio amplifier have a DC bias voltage that is approximately one half of the battery voltage. When using a DMM, each of the audio output channel circuits will measure approximately 6.5 V DC. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound.

Diagnostic Aids

- Improper speaker mounting or loose trim may cause an audible buzz or distortion. Inspect the appropriate speaker and the surrounding interior trim for proper and secure mounting.

The EL-50334-6 Audio System Diagnostic CD contains audio tracks that can be used to duplicate and isolate such concerns. Tracks 11 and 12 contain audio sweep tones for testing for speaker and grill rattles.

If the speaker or surrounding interior trim is found to be loose or improperly secured, correctly secure the item.

- The test tones on the CD may be copied to a USB drive or other device to use during testing.
- Some audio output circuits are connected to more than one speaker, dependant on vehicle equipment. It may be necessary to disconnect one or more speakers during testing of some circuits.

Conditions for Running the DTC

NOTE: DTC B1325 must not be set as current for the amplifier to run any of the following tests.

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04

The test is run once during amplifier wake-up.

Conditions for Setting the DTC

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01

A short to voltage is detected on the specified (+) or (-) signal circuit

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02

A short to ground is detected on the specified (+) or (-) signal circuit

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04

An open is detected on the specified (+) or (-) signal circuit

Action Taken When the DTC Sets

The amplifier mutes the output channel and no sound is present from the speaker(s) that have a current circuit fault.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode. Infotainment system ON, mute OFF.
2. Verify clear audio is heard from each speaker, adjusting fade and balance controls to test each speaker individually.

- If audio is inoperative from one or more speakers or the audio emitted is not clear

Refer to Circuit/System Testing.

- If clear audio is heard from all speakers

3. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the appropriate P19 Speaker. Ignition On/Vehicle in Service Mode. Infotainment system ON, mute OFF.
2. Test for 5-7 V between the appropriate signal circuit terminals listed below and ground.
 - door and I/P speakers audio (-) circuit terminal 1
 - door and I/P speakers audio (+) circuit terminal 2
 - subwoofer audio (-) circuit terminal A
 - subwoofer audio (+) circuit terminal B
 - **If less than 5 V**
 1. Ignition OFF, disconnect the X1 and X2 harness connectors at the T3 Audio Amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 Audio Amplifier.
 - **If greater than 7 V**
 1. Ignition OFF, disconnect the X1 and X2 harness connectors at the T3 Audio Amplifier. Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 Audio Amplifier.
- **If 5-7 V**
3. Test or replace the P19 Speaker.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Speaker Replacement Reference](#)
- [Control Module References](#) for audio amplifier replacement, programming and setup.

SPEAKER MALFUNCTION (UQS)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

DTC Descriptors

DTC B1025

Audio Output 1 Circuit

DTC B1035

Audio Output 2 Circuit

DTC B1045

Audio Output 3 Circuit

DTC B1055

Audio Output 4 Circuit

DTC B1065

Audio Output 5 Circuit

DTC B1075

Audio Output 6 Circuit

DTC B1085

Audio Output 7 Circuit

DTC B1095

Audio Output 8 Circuit

DTC B1105

Audio Output 9 Circuit

DTC B1115

Audio Output 10 Circuit

For symptom byte information, refer to [Symptom Byte List](#).**Diagnostic Fault Information**

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 1 Signal Circuits (Left Front Door)	B1025 02	B1025 04	B1025 01	-
Audio Output 2 Signal Circuits (Right Front Door)	B1035 02	B1035 04	B1035 01	-
Audio Output 3 Signal Circuits (Subwoofer)	B1045 02	B1045 04	B1045 01	-
Audio Output 4 Signal Circuits (Center I/P)	B1055 02	B1055 04	B1055 01	-
Audio Output 5 Signal Circuits (Left Rear Door)	B1065 02	B1065 04	B1065 01	-
Audio Output 6 Signal Circuits (Right Rear Door)	B1075 02	B1075 04	B1075 01	-
Audio Output 7 Signal Circuits (Left I/P)	B1085 02	B1085 04	B1085 01	-
Audio Output 8 Signal Circuits (Right I/P)	B1095 02	B1095 04	B1095 01	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 9 Signal Circuits (Left Rear Surround)	B1105 02	B1105 04	B1105 01	-
Audio Output 10 Signal Circuits (Right Rear Surround)	B1115 02	B1115 04	B1115 01	-

Circuit/System Description

The Media Oriented Systems Transport (MOST) is a high-speed multimedia network technology. The serial MOST bus uses a ring topology and synchronous data communication to transmit audio, video, data and control information between any devices attached.

The audio amplifier is a participant on the MOST network. The audio amplifier receives audio inputs and control information from the MOST bus.

Each of the audio output channel circuits (+) and (-), at the audio amplifier have a DC bias voltage that is approximately one half of the battery voltage. When using a DMM, each of the audio output channel circuits will measure approximately 6.5 V DC. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound.

Diagnostic Aids

- Improper speaker mounting or loose trim may cause an audible buzz or distortion. Inspect the appropriate speaker and the surrounding interior trim for proper and secure mounting.

The EL-50334-6 Audio System Diagnostic CD contains audio tracks that can be used to duplicate and isolate such concerns. Tracks 11 and 12 contain audio sweep tones for testing for speaker and grill rattles.

If the speaker or surrounding interior trim is found to be loose or improperly secured, correctly secure the item.

- The test tones on the CD may be copied to a USB drive or other device to use during testing.
- Some audio output circuits are connected to more than one speaker, dependant on vehicle equipment. It may be necessary to disconnect one or more speakers during testing of some circuits.

Conditions for Running the DTC

NOTE: DTC B1325 must not be set as current for the amplifier to run any of the following tests.

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01, B1105 01, B1115 01

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02, B1105 02, B1115 02

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04, B1105 04, B1115 04

The test is run once during amplifier wake-up.

Conditions for Setting the DTC

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01, B1105 01, B1115 01

A short to voltage is detected on the specified (+) or (-) signal circuit

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02, B1105 02, B1115 02

A short to ground is detected on the specified (+) or (-) signal circuit

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04, B1105 04, B1115 04

An open is detected on the specified (+) or (-) signal circuit

Action Taken When the DTC Sets

The amplifier mutes the output channel and no sound is present from the speaker(s) that have a current circuit fault.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

EL-50334-50 USB Cable and Adapter Kit

Circuit/System Verification

1. Ignition ON, infotainment system ON, mute OFF.
2. Verify clear audio is heard from each speaker, adjusting fade and balance controls to test each speaker individually.
 - **If audio is inoperative from one or more speakers or the audio emitted is not clear**
Refer to Circuit/System Testing.
 - **If clear audio is heard from all speakers**
3. All OK.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the appropriate P19 Speaker. Ignition ON, infotainment system ON, mute OFF.
2. Test for 5-7 V between the appropriate signal circuit terminals listed below and ground.
 - door, I/P speakers and surround audio (-) circuit terminal 1
 - door, I/P speakers and surround audio (+) circuit terminal 2
 - subwoofer audio (-) circuit terminal A
 - subwoofer audio (+) circuit terminal B
 - **If less than 5 V**
 1. Ignition OFF, disconnect the X1 and X2 harness connectors at the T3 Audio Amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 Audio Amplifier.
 - **If greater than 7 V**
 1. Ignition OFF, disconnect the X1 and X2 harness connectors at the T3 Audio Amplifier. Ignition ON.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 Audio Amplifier.
 - **If 5-7 V**
3. Test or replace the P19 Speaker.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Speaker Replacement Reference](#)
- [Control Module References](#) for audio amplifier replacement, programming and setup.

SPEAKER MALFUNCTION (UQH)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

DTC Descriptors

DTC B1025

Audio Output 1 Circuit

DTC B1035

Audio Output 2 Circuit

DTC B1045

Audio Output 3 Circuit

DTC B1065

Audio Output 5 Circuit

DTC B1075

Audio Output 6 Circuit

DTC B1085

Audio Output 7 Circuit

DTC B1095

Audio Output 8 Circuit

DTC B1105

Audio Output 9 Circuit

DTC B1115

Audio Output 10 Circuit

DTC B1125

Audio Output 11 Circuit

DTC B1135

Audio Output 12 Circuit

DTC B1145

Audio Output 13 Circuit

DTC B1155

Audio Output 14 Circuit

DTC B1165

Audio Output 15 Circuit

DTC B1175

Audio Output 16 Circuit

DTC B1185

Audio Output 17 Circuit

DTC B1195

Audio Output 18 Circuit

DTC B1215

Audio Output 20 Circuit

For symptom byte information, refer to [Symptom Byte List](#) .

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 1 Signal Circuits (Center I/P)	B1025 02	B1025 04	B1025 01	-

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Audio Output 2 Signal Circuits (Rear Center)	B1035 02	B1035 04	B1035 01	-
Audio Output 3 Signal Circuits (Left Rear Shelf)	B1045 02	B1045 04	B1045 01	-
Audio Output 4 Signal Circuits (Right Rear Shelf)	B1055 02	B1055 04	B1055 01	-
Audio Output 5 Signal Circuits (Left Rear Door)	B1065 02	B1065 04	B1065 01	-
Audio Output 6 Signal Circuits (Right Rear Door)	B1075 02	B1075 04	B1075 01	-
Audio Output 7 Signal Circuits (Left Front I/P)	B1085 02	B1085 04	B1085 01	-
Audio Output 8 Signal Circuits (Right Front I/P)	B1095 02	B1095 04	B1095 01	-
Audio Output 9 Signal Circuits (Left Front Door)	B1105 02	B1105 04	B1105 01	-
Audio Output 10 Signal Circuits (Right Front Door)	B1115 02	B1115 04	B1115 01	-
Audio Output 11 Signal Circuits (Left A-Pillar)	B1125 02	B1125 04	B1125 01	-
Audio Output 12 Signal Circuits (Right A-Pillar)	B1135 02	B1135 04	B1135 01	-
Audio Output 13 Signal Circuits (Left Driver Headrest)	B1145 02	B1145 04	B1145 01	-
Audio Output 14 Signal Circuits (Right Driver Headrest)	B1155 02	B1155 04	B1155 01	-
Audio Output 15 Signal Circuits (Left Passenger Headrest)	B1165 02	B1165 04	B1095 01	-
Audio Output 16 Signal Circuits (Right Passenger Headrest)	B1175 02	B1175 04	B1175 01	-
Audio Output 17 Signal Circuits (Left Front Subwoofer)	B1185 02	B1185 04	B1185 01	-
Audio Output 18 Signal Circuits (Right Front Subwoofer)	B1195 02	B1195 04	B1095 01	-
Audio Output 20 Signal Circuits (Rear Subwoofer)	B1215 02	B1215 04	B1215 01	-

Circuit/System Description

The Media Oriented Systems Transport (MOST) is a high-speed multimedia network technology. The serial MOST bus uses a ring topology and synchronous data communication to transmit audio, video, data and control information between any devices attached.

The primary audio amplifier is a participant on the MOST network. The audio amplifier receives audio inputs and control information from the MOST bus.

Each of the audio output channel circuits (+) and (-), at the audio amplifier have a DC bias voltage that is approximately one half of the battery voltage. When using a DMM, each of the audio output channel circuits will measure approximately 6.5V DC. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound.

The system is also equipped with 3 Secondary amplifiers, that receive inputs from the primary amplifier. These amplifiers power the 3 subwoofers located throughout the vehicle. The amplifiers are not on the serial data bus and should be diagnosed on an individual basis.

Diagnostic Aids

- Improper speaker mounting or loose trim may cause an audible buzz or distortion. Inspect the appropriate speaker and the surrounding interior trim for proper and secure mounting.

The EL-50334-6 Audio System Diagnostic CD contains audio tracks that can be used to duplicate and isolate such concerns. Tracks 11 and 12 contain audio sweep tones for testing for speaker and grill rattles.

If the speaker or surrounding interior trim is found to be loose or improperly secured, correctly secure the item.

- The test tones on the CD may be copied to a USB drive or other device to use during testing.
- Some audio output circuits are connected to more than one speaker, dependant on vehicle equipment. It may be necessary to disconnect one or more speakers during testing of some circuits.

Conditions for Running the DTC

NOTE: DTC B1325 must not be set as current for the amplifier to run any of the following tests.

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01, B1105 01, B1115 01, B1125 01, B1135 01, B1145 01, B1155 01, B1165 01, B1175 01, B1185 01, B1195 01, B1215 01

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02, B1105 02, B1115 02, B1125 02, B1135 02, B1145 02, B1155 02, B1165 02, B1175 02, B1185 02, B1195 02, B1215 02

The test is run initially upon amplifier wake-up and periodically every one second after amplifier operation begins.

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04, B1105 04, B1115 04, B1125 04, B1135 04, B1145 04, B1155 04, B1165 04, B1175 04, B1185 04, B1195 04, B1215 04

The test is run once during amplifier wake-up.

Conditions for Setting the DTC

DTC B1025 01, B1035 01, B1045 01, B1055 01, B1065 01, B1075 01, B1085 01, B1095 01, B1105 01, B1115 01, B1125 01, B1135 01, B1145 01, B1155 01, B1165 01, B1175 01, B1185 01, B1195 01, B1215 01

A short to voltage is detected on the specified (+) or (-) signal circuit

DTC B1025 02, B1035 02, B1045 02, B1055 02, B1065 02, B1075 02, B1085 02, B1095 02, B1105 02, B1115 02, B1125 02, B1135 02, B1145 02, B1155 02, B1165 02, B1175 02, B1185 02, B1195 02, B1215 02

A short to ground is detected on the specified (+) or (-) signal circuit

DTC B1025 04, B1035 04, B1045 04, B1055 04, B1065 04, B1075 04, B1085 04, B1095 04, B1105 04, B1115 04, B1125 04, B1135 04, B1145 04, B1155 04, B1165 04, B1175 04, B1185 04, B1195 04, B1215 04

An open is detected on the specified (+) or (-) signal circuit

Action Taken When the DTC Sets

The amplifier mutes the output channel and no sound is present from the speaker(s) that have a current circuit fault.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 50 consecutive malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode. Infotainment system ON, mute OFF.
2. Verify DTC B123A - B123C are not present.

- **If DTC B123A-B123C are present**

Refer to **DTC B123A-B123C**

- **If DTC B123A-B123C are not present**

3. Verify clear audio is heard from each speaker, adjusting fade and balance controls to test each speaker individually.

- **If audio is inoperative from one or more speakers or the audio emitted is not clear**

1. Verify audio is inoperative from any speaker besides a subwoofer.

- If Audio is inoperative from a subwoofer

Refer to Subwoofer Circuit Malfunction.

- If Audio is inoperative from any speaker besides a subwoofer.

Refer to Speaker Circuit Malfunction

- **If clear audio is heard from all speakers**

4. All OK.

Circuit/System Testing

Speaker Circuit Malfunction

1. Ignition OFF, disconnect the harness connector at the appropriate P19 speaker. Ignition On/Vehicle in Service Mode. Infotainment system ON, mute OFF.
 2. Test for 5-7 V between the appropriate signal circuit terminals listed below and ground.
 - Door and Left I/P, Right I/P, Rear shelf, Rear center speakers audio (-) circuit terminal 1
 - Door and Left I/P, Right I/P, Rear shelf, Rear center speakers audio (+) circuit terminal 2
 - A-Pillar speakers audio (-) circuit terminal 3
 - A-Pillar speakers audio (+) circuit terminal 4
 - Center I/P speakers audio (-) circuit terminal 6
 - Center I/P speakers audio (+) circuit terminal 1
 - Headrest speakers audio (-) circuit terminal A
 - Headrest speakers audio (+) circuit terminal B
 - **If less than 5 V**
 1. Ignition OFF, disconnect the appropriate harness connector(s) at the T3 audio amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 audio amplifier.
 - **If greater than 7 V**
 1. Ignition OFF, disconnect the appropriate harness connector(s) at the T3 audio amplifier.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 audio amplifier.
 - **If between 5-7 V**
3. Test or replace the P19 speaker.

Subwoofer Circuit Malfunction

1. Ignition OFF, disconnect the X1 harness connector at the appropriate secondary audio amplifier.
 2. Test for less than 10 Ω between the appropriate ground circuit terminal listed below and ground.
 - Left and Right Front Subwoofer circuit terminal 6
 - Rear Subwoofer circuit terminal 14
 - **If 10 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
3. Ignition On/Vehicle in Service Mode. Verify a test lamp illuminates between the appropriate B+ circuit terminal listed below and ground.
- Left and Right Front Amplifier circuit terminal 3

- Rear Amplifier circuit terminal 7
- **If the test lamp does not illuminate and the circuit fuse is good**
 1. Ignition OFF, remove the test lamp.
 2. Test for less than 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.
- **If the test lamp does not illuminate and the circuit fuse is open**
 1. Ignition OFF, remove the test lamp.
 2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the secondary amplifier
- **If the test lamp illuminates**
- 4. Ignition OFF, disconnect the X1 harness connector at the appropriate secondary amplifier, Ignition On/Vehicle in Service Mode.
- 5. Radio ON, Test for 2.5-3.5 V between the appropriate control circuit listed below and ground.
 - Left and Right Front Amplifier circuit terminal 2
 - Rear Amplifier circuit terminal 5
 - **If less than 2.5 V**
 1. Ignition OFF, disconnect the appropriate harness connector at the T3 Audio Amplifier.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 Audio Amplifier.
 - **If greater than 3.5 V**
 1. Ignition OFF, disconnect the appropriate harness connector at the T3 Audio Amplifier.
 2. Test for less than 1 V between the control circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 Audio Amplifier.
 - **If between 2.5-3.5 V**
- 6. Radio ON, mute OFF.
- 7. Test for 3-5 V between the appropriate signal circuit terminals listed below and ground:
 - Left and Right front subwoofer control (+) circuit terminal 4
 - Left and Right front subwoofer control (-) circuit terminal 5
 - Rear Subwoofer control (+) circuit terminal 3
 - Rear Subwoofer control (-) circuit terminal 2
 - **If less than 3 V**
 1. Ignition OFF, disconnect the X4 harness connector at the T3 Amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the T3 audio amplifier.
 - **If greater than 5 V**
 1. Ignition OFF, disconnect the X4 harness connector at the T3 amplifier, Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.

- If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the T3 audio amplifier.
 - **If between 3-5 V**
8. Ignition OFF, connect all harness connectors.
 9. Disconnect the harness connector at the appropriate P19 Speaker. Ignition On/Vehicle in Service Mode. Radio ON.
 10. Test for 5-7 V between the appropriate signal circuit terminals listed below and ground:
 - Left and Right front subwoofer control (+) circuit terminal 2
 - Left and Right front subwoofer control (-) circuit terminal 1
 - Rear Subwoofer control (+) circuit terminal B
 - Rear Subwoofer control (-) circuit terminal A
 - **If less than 5 V**
 1. Ignition OFF, disconnect the X1 harness connector at the Secondary Amplifier.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the secondary amplifier.
 - **If greater than 7 V**
 1. Ignition OFF, disconnect the X1 harness connector at the Secondary amplifier, Ignition On/Vehicle in Service Mode.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the Secondary amplifier.
 - **If between 5-7 V**
 11. Test or replace the P19 Speaker.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Speaker Replacement Reference](#)
- [Control Module References](#) for audio amplifier replacement, programming and setup.

UNABLE TO CONTACT ONSTAR CALL CENTER

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC B2470 02

Cellular Phone Antenna Circuit Malfunction Short to Ground

DTC B2470 04

Cellular Phone Antenna Circuit Malfunction Open Circuit

Circuit/System Description

The primary cellular phone antenna element is connected to the telematics communication interface control module (violet connector) via a shielded coaxial cable. Cellular communication takes place on both the primary cellular antenna signal circuit and the GPS/secondary cellular antenna signal circuit. This diagnostic only applies to the primary cellular antenna signal circuit. Internal to the antenna on the cellular antenna signal circuit resistance is used to apply a load, which the telematics communication interface control module uses to detect the presence of the antenna.

Conditions for Running the DTC

- Ignition in the RUN or ACC position.
- System voltage is between 9.5 V and 15.5 V.
- The above conditions are present for greater than 1 s.

Conditions for Setting the DTC

- **B2470 02**
- The telematics communication interface control module detects a short to ground on the primary cellular antenna signal circuit.
- **B2470 04**
- The telematics communication interface control module detects an open or high resistance on the primary cellular antenna signal circuit.
- The above conditions are present for greater than 1 s.

Action Taken When the DTC Sets

- The OnStar® status LED turns red.

Conditions for Clearing the DTC

- The telematics communication interface control module detects the presence of a cellular antenna.
- A history DTC clears after 50 malfunction-free ignition cycles.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

EL-49903 GM OnStar® Antenna Diagnostic Tool Kit

Circuit/System Testing

NOTE:

- The vehicle may be equipped with sectioned coax. Test each section and replace only the faulty section, not the entire length of coax.
- The following verification requires the vehicle to be outside with an unobstructed view of the southern sky. Allow 5 min after turning the ignition ON for the GPS satellites to acquire vehicle signal.

1. Ignition OFF and all vehicle systems OFF, disconnect the violet primary cellular coax cable connector at the K73 Telematics Communication Interface Control Module. It may take up to 2 min for all vehicle systems to power down.
2. Using the **EL-49903-1** GM OnStar[®] test antenna connect the violet coax cable to the K73 Telematics Communication Interface Control Module. Place the test antenna on the roof of the vehicle, ignition ON.
3. Verify the DTC does not set or a call can be completed to the OnStar[®] Call Center while operating the vehicle within the conditions for the fault.

- **If the DTC sets or a call can not be completed to the OnStar[®] Call Center**

Replace the K73 Telematics Communications Interface Control Module.

- **If the DTC does not set or a call can be completed to the OnStar[®] Call Center**

4. Ignition OFF.
5. Disconnect the **EL-49903-1** GM OnStar[®] test antenna from the K73 Telematics Communication Interface Control Module
6. Test the coax cable. Refer to **Component Testing**.
 - **If the coax cable does not pass the test**

Replace the coax cable.
 - **If the coax cable passes the test**
7. Test or replace the T4D Cellular Phone and GPS Antenna.

Component Testing

CAUTION: Refer to **Test Probe Caution**

NOTE:

- Before testing the coax cable, check the cable exterior for being pinched, cut, damaged or having loose connections at the components, which can cause reception issues.
- To prevent false readings when testing the center coax terminals, use care not to ground the test probe on the outer housing/shield.

Coax Cable Test

1. Test for less than 5 Ω between the coax cable center terminal end to end.
 - **If 5 Ω or greater**

Replace the coax cable.
 - **If less than 5 Ω**
2. Test for greater than 5 Ω between the coax cable outer shield end to end.
 - **If 5 Ω or greater**

Replace the coax cable.
 - **If less than 5 Ω**
3. Test for infinite resistance between the coax cable center terminal and the coax cable outer shield.

- **If less than infinite resistance**

Replace the coax cable.

- **If infinite resistance**

4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair procedure.

- [High Frequency Antenna Replacement](#)
- [Control Module References](#) for telematics communication interface control module replacement, setup and programming.

VIDEO DISPLAY MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Rear Seat Entertainment Display B+	B1280 18, 1, 2	B1280 18, 1, 2	-	-
Rear Seat Entertainment Display Control	B1280 18, 2	B1280 18, 2	-	-
Rear Seat Entertainment Display Ground	-	B1280 18, 1, 2	-	-
LVDS Cable	B1280 18, 1	B1280 18, 1	B1280 18, 1	-
1. One or both rear seat entertainment displays will not display video 2. One or both rear seat entertainment displays will not operate/deploy				

Circuit/System Description

The P22 Video Displays are located in the back of the driver and passenger front seats. The Displays show video from the media disc player.

The Displays receive power and ground from the vehicle body harness. A discrete control circuit from the media disc player is used to control the power state of the Displays.

The Displays receive all other video, audio and control information via the LVDS cable. The LVDS cable connected to the media disc player contains two pairs of data circuits, one pair for each of the rear displays. A splitter cable is used to separate the data circuits to each individual display, providing separate information to each display.

Diagnostic Aids

- When this DTC is set, one or both of the displays will not power on with the system.
- The media disc player supplies a current limited voltage signal on the control circuit to the rear displays. When tested at the display, the voltage measured will be approximately 10% less than the available battery voltage. For example, with the battery at 12.6 volts, the expected measurement would be approximately 11.3 volts. Although the voltage is near battery voltage, the limited amperage on the circuit is insufficient to light a test lamp.

Reference Information

Schematic Reference

Video System Schematics (UWG)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

- **EL-50334-2** Type A female to Mini B male USB Cable
- **EL-50334-4** Type A female to Mini B female Adapter
- **EL-50334-12** Infotainment Test Cable - RSE
- **EL-50334-13** Infotainment Test Cable - RSE Splitter
- **EL-50334-14** Infotainment Test Cable

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode.
2. Verify no other DTCs are set.
 - **If any other DTCs are set**
Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .
 - **If no other DTCs are set.**
3. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.
4. Verify both rear seat displays can be turned on with the remote.
 - **If one screen only does not turn on**
Refer to Circuit/System Testing - One Screen Inoperative
 - **If both screens do not turn on**
Refer to Circuit/System Testing - Both Screens Inoperative
 - **If both screens can be turned on with the remote.**
5. All OK.

Circuit/System Testing

One Screen Inoperative

1. Ignition OFF.
2. Disconnect the X1 harness connector at the inoperative P22 Video Display.

3. Test for less than 10 Ω between the ground circuit terminal 3 and ground.

- **If 10 Ω or greater.**

1. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 10 Ω .**

4. Verify that a test lamp illuminates between the B+ circuit terminal 1 and ground.

- **If the test lamp does not illuminate.**

Repair the open/high resistance in the circuit

- **If the test lamp illuminates.**

5. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.

6. Test for 5 V or greater between the control circuit terminal 2 and ground.

- **If less than 5 V.**

1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player.

2. Test for infinite resistance between the control circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the control circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the A33 Media Disc Player.

- **If 5 V or greater.**

7. Ignition OFF.

8. Verify the LVDS cable is properly connected at the P22 Video Display, A33 Media Disc Player and all in-line connectors and there is no damage to the cable or connections.

- **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.

- **If no connection problems or cable damage is noted.**

9. Connect the X1 harness connector at the P22 Video Display.

10. Disconnect the X2 harness connector at the operating P22 Video Display.

NOTE: In the following steps, the test tools are used to create a jumper for the LVDS cable from the operating display to the inoperative display.

11. Connect the EL-50334-4 Type A female to Mini B female Adapter to the harness of the operating P22 Video Display. Connect the EL-50334-14 Infotainment Test Cable to the adapter.

12. Disconnect the X2 harness connector at the inoperative P22 Video Display. Connect the EL-50334-14 Infotainment Test Cable to the inoperative P22 Video Display.

13. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.

14. Verify the P22 Video Display turns on.

- **If the P22 Video Display does not turn on.**

Replace the P22 Video Display.

- **If the P22 Video Display turns on.**

15. Disconnect the test cable and adapter from the harness of the operating P22 Video Display. Connect all harness connectors at operating P22 Video Display.

16. Disconnect the X4 harness connector at the A33 Media Disc Player.

17. Connect the EL-50334-12 Infotainment Test Cable - RSE to the A33 Media Disc Player. Connect the EL-50334-13 Infotainment Test Cable - RSE Splitter to the EL-50334-12 Infotainment Test Cable - RSE. Connect the EL-50334-14 Infotainment Test Cable and the EL-50334-2 Type A

female to Mini B male USB Cable together. Connect the assembled test cables to the longer end of the EL-50334-13 Infotainment Test Cable - RSE Splitter and the inoperative P22 Video Display.

NOTE: In the following steps, the test tools are assembled and used to bypass the vehicle LVDS cable assembly to determine if there is an output from the A33 Media Disc player on LVDS.

18. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.
19. Verify the P22 Video Display does NOT turn ON.

- **If the P22 Video Display turns on.**

Replace the appropriate LVDS cable.

- **If the P22 Video Display does not turn on.**

20. Test or replace the A33 Media Disc Player.

Both Screens Inoperative

1. Ignition OFF.
2. Disconnect the X1 harness connector at each of the P22 Video Displays.
3. Test for less than 10 Ω between each ground circuit terminal 3 and ground.
 - **If 10 Ω or greater.**
 1. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω .**
4. Verify that a test lamp illuminates between each B+ circuit terminal 1 and ground.
 - **If the test lamp does not illuminate and the circuit fuse is good.**
 1. Ignition OFF, remove the test lamp.
 2. Test for less 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.
 - **If the test lamp does not illuminate and the circuit fuse is open.**
 1. Ignition OFF, remove the test lamp.
 2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance.
 3. Replace the fuse.
 4. Connect the harness connectors at the P22F Video Display.
 5. Ignition ON, rear seat entertainment system ON.
 6. Verify the fuse does not open.
 - If the fuse opens, replace the P22F Video Display.
 - If the fuse does not open, replace the P22E Video Display.
 - **If the test lamp illuminates.**
5. Test for 5 V or greater between the control circuit terminal 2 and ground at each display.
 - **If less than 5 V.**
 1. Ignition OFF, disconnect the X1 harness connector at the A33 Media Disc Player.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the control circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.

- If less than 2 Ω , replace the A33 Media Disc Player.

- **If 5 V or greater.**

6. Ignition OFF.

7. Connect the X1 harness connectors at both of the P22 Video Displays.

8. Verify the LVDS cable is properly connected at the P22E Video Display, P22F Video Display, A33 Media Disc Player and all in-line connectors and there is no damage to the cable or connections.

- **If connection problems or cable damage is noted.**

Perform the appropriate repair or replacement to correct any issues.

- **If no connection problems or cable damage is noted.**

9. Disconnect the X4 harness connector at the A33 Media Disc Player and the X2 harness connector at the P22E Video Display.

10. Connect the EL-50334-12 Infotainment Test Cable - RSE to the A33 Media Disc Player. Connect the EL-50334-13 Infotainment Test Cable - RSE Splitter to the EL-50334-12 Infotainment Test Cable - RSE. Connect the EL-50334-14 Infotainment Test Cable and the EL-50334-2 Type A female to Mini B male USB Cable together. Connect the assembled test cables to the longer end of the EL-50334-13 Infotainment Test Cable - RSE Splitter and the P22E Video Display.

NOTE: In the following steps, the test tools are assembled and used to bypass the vehicle LVDS cable assembly to determine if there is an output from the A33 Media Disc player on LVDS.

11. Ignition ON, rear seat entertainment system ON.

12. Verify the P22E Video Display turns on with the system.

- **If the P22E Video Display does not turn on.**

Replace the A33 Media Disc Player.

- **If the P22E Video Display turns on.**

13. Replace the appropriate vehicle LVDS cable in the body harness.

14. Connect all harness connectors at all components.

15. Ignition ON, rear seat entertainment system ON.

16. Verify both the P22 Video Displays turn on.

- **If the P22 Video Displays do not turn on.**

Replace the vehicle LVDS cable connected to the A33 Media Disc Player.

- **If the P22 Video Displays turn on.**

17. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Video Display Replacement](#)
- [Control Module References](#) for media disc player replacement, programming and setup.

VIDEO ENTERTAINMENT SYSTEM REMOTE CONTROL MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Circuit/System Description

The rear displays are located in the back of the driver and front passenger seats. The rear seatback display screens show video from the media disc player or an AUX input device.

The seatback displays receive power and ground from the vehicle harness. A discrete control circuit from the media disc player is used to control the power state of the displays. The displays receive all other video, audio and control information via the LVDS cable.

The left display contains the infrared transmitters for the wireless headphones. During operation, the infrared transmitters may be visible as illuminated LEDs. The LEDs are not on visible on the right video screen. Both displays contain an infrared receiver for the remote control.

The wireless remote control is used to operate the system from the rear seat. Infrared signals from the remote control are received by the infrared receivers in each of the seatback displays. The remote control can be used to turn the rear screens on or off, to change system settings and to select the source for the screens from the media available to the infotainment system. Refer to the Owners Manual for additional information on remote control functions.

Reference Information

Schematic Reference

Video System Schematics (UWG)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE: **Test or replace the remote control batteries before performing the circuit/system verification.**

1. Verify no DTCs are present.

- **If any DTCs are present**

Refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .

- **If no DTCs are present**

2. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON.

3. Verify that all remote control buttons operate and perform the correct function.

- **If some, but not all, controls operate.**

Replace the remote control.

- **If all controls are inoperative.**

1. Replace the remote control.

2. Verify that all remote control buttons operate and perform the correct function.

- If all controls are inoperative, refer to Circuit/System Testing
 - If all controls operate and perform the correct function.
3. All OK.
 - **If all controls operate and perform the correct function.**
 4. All OK.

Circuit/System Testing

1. Disconnect the harness connectors at the P22F Video Display - Passenger Seatback.
2. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON. Select screen 1 on the remote control.
3. Verify that the rear seat entertainment system can be controlled using the remote control.
 - **If the rear seat entertainment system cannot be controlled**
 1. Replace the P22E Video Display- Driver Seatback.
 2. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON. Select screen 1 on the remote control.
 3. Verify that the rear seat entertainment system can be controlled using the remote control.
 - If the rear seat entertainment system cannot be controlled, replace the A33 Media Disc Player.
 - If the rear seat entertainment system can be controlled.
 4. Proceed to Step 4.
 - **If the rear seat entertainment system can be controlled**
4. Connect the harness connectors at the P22F Video Display - Passenger Seatback.
5. Disconnect the harness connectors at the P22E Video Display - Driver Seatback.
6. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON. Select screen 2 on the remote control.
7. Verify that the rear seat entertainment system can be controlled using the remote control.
 - **If the rear seat entertainment system cannot be controlled**
 1. Replace the P22F Video Display- Passenger Seatback.
 2. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON. Select screen 2 on the remote control.
 3. Verify that the rear seat entertainment system can be controlled using the remote control.
 - If the rear seat entertainment system cannot be controlled, replace the A33 Media Disc Player.
 - If the rear seat entertainment system can be controlled
 4. All OK.
 - **If the rear seat entertainment system can be controlled**
8. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Video Display Replacement](#)
- [Control Module References](#) for media disc player replacement, programming and setup.

VIDEO ENTERTAINMENT SYSTEM WIRELESS HEADPHONE MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Circuit/System Description

The rear displays are located in the back of the driver and front passenger seats. The rear seatback display screens show video from the media disc player or an AUX input device.

The seatback displays receive power and ground from the vehicle harness. A discrete control circuit from the media disc player is used to control the power state of the displays. The displays receive all other video, audio and control information via the LVDS cable.

The left display contains the infrared transmitters for the wireless headphones. During operation, the infrared transmitters may be visible as illuminated LEDs. The LEDs are not on visible on the right video screen. Both displays contain an infrared receiver for the remote control.

A power button on the headphone is used to turn the headphone on. A red LED illuminated when the headphone is turned ON. The headphones automatically turn OFF if they lose the infrared signal from the system for approximately 4 minutes in order to preserve their battery power. The signal may be lost if the system is turned off or if the headphones are out of range of the infrared signal transmitters.

Each set of headphones has a rotary volume control on one of the earpieces. To adjust the volume, adjust this control.

Audio to the wireless headphones is provided over 2 channels. Audio for channel 1 is from the source of the left display, audio for channel 2 is from the right display. This allows rear seat passengers to utilize the screens individually without disturbing one another. Pressing the button in the center of the headphone volume will switch the headphone between channels.

Reference Information

Schematic Reference

Video System Schematics (UWG)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Video Entertainment System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information.

Circuit/System Verification

NOTE: **Test or replace the headphone batteries before performing the circuit/system verification.**

1. Verify no DTCs are present.

- **If any DTCs are present**

Refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .

- **If no DTCs are present**

2. Turn ON the wireless headphones.

3. Verify the power indicator lamp on all wireless headphone illuminates.

- **If the power indicator lamp does not illuminate on all wireless headphones.**

Replace the inoperative headphone.

- **If the power indicator lamp illuminates on all wireless headphones.**

4. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON. Using the remote control, select an audio source for the P22E Video Display - Driver Seatback.

5. Verify that audio is heard from channel 1 on each headphone, using the headphone controls to select channel 1.

- **If audio is heard from some, but not all, headphones.**

Replace the inoperative headphone.

- **If audio is not heard from any headphones or the audio heard is not clear.**

1. Replace the P22E Video Display - Driver Seatback.

2. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON. Using the remote control, select an audio source for the P22E Video Display - Driver Seatback.

3. Verify that audio is heard from channel 1 on each headphone, using the headphone controls to select channel 1.

- If audio is heard from some, but not all, headphones, replace the inoperative headphone.
- If audio is not heard from any headphones or the audio heard is not clear, replace the A33 Media Disc Player.
- If audio is heard from all headphones.

4. All OK.

- **If audio is heard from all headphones.**

6. Using the remote control, select an audio source for the P22F Video Display - Passenger Seatback.

7. Verify that audio is heard from channel 2 on each headphone, using the headphone controls to select channel 2.

- **If audio is heard from some, but not all, headphones.**

Replace the inoperative headphone.

- **If audio is not heard from any headphones or the audio heard is not clear.**

1. Replace the P22E Video Display - Driver Seatback.

2. Ignition On/Vehicle in Service Mode. Rear seat entertainment system ON. Using the remote control, select an audio source for the P22F Video Display- Passenger Seatback.

3. Verify that audio is heard from channel 2 on each headphone, using the headphone controls to select channel 2.

- If audio is heard from some, but not all, headphones, replace the inoperative headphone.
- If audio is not heard from any headphones or the audio heard is not clear, replace the A33 Media Disc Player.
- If audio is heard from all headphones.

4. All OK.

- **If clear audio is heard from all headphones.**

8. All OK.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Video Display Replacement**
- **Control Module References** for media disc player replacement, programming and setup.

ONSTAR VOICE RECOGNITION MALFUNCTION

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Circuit/System Description

The telematics communication interface control module is capable of interpreting voice commands received over the cellular microphone circuit. Speech recognition allows the user to speak to one computer in the vehicle and one reached over the cellular communication network. The module attempts to understand the users command and responds by speaking back or by taking the appropriate action, e.g. dialing the phone.

Reference Information

Schematic Reference

OnStar/Telematics Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

OnStar Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Circuit/System Verification

NOTE:

- It is necessary to have the vehicle in an open outside area where a cellular call can be successfully placed and GPS data can be received from satellites.
- The vehicle should be located in a quiet area.

1. Ignition ON/vehicle in Service Mode, press the blue OnStar® Call button.
2. Verify that your voice is heard clearly by the OnStar® Call center.

- **If your voice can not be heard clearly**

Refer to **OnStar Microphone Malfunction**

- **If your voice can be heard clearly**

3. Verify that the system responds appropriately to all voice commands by pressing the voice command button and attempting to operate the system using multiple voice commands.

- **If the OnStar® system does not respond to any voice commands**

Replace the K73 Telematics Communication Interface Control Module

- **If the OnStar® system responds to some, but not all voice commands**

Refer to **OnStar Description and Operation** for tips on proper pronunciation.

- **If the OnStar® system responds to all voice commands**

4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair procedure.

[Control Module References](#) for telematics communication interface control module replacement, programming and setup.

VOICE RECOGNITION MALFUNCTION (IO6 WITH UE1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Voice Recognition Audio Signal	1	1	1	-
Voice Recognition Audio Low Reference	-	1	-	-
1. infotainment system voice recognition inoperative				

Circuit/System Description

When voice recognition for the infotainment system is started, voice signals from the cellular phone microphone are passed through the telematics communication interface control module to the Human Machine Interface Control Module via the voice recognition audio circuits.

Diagnostic Aids

- Refer to the Owners Manual and/or the Navigation System Owners Manual for voice recognition use and commands.
- When the system recognizes the command the system will either perform the function or ask to confirm the choice by clearly saying "yes" or "no".
- If experiencing difficulty with the system recognizing a command, confirm that the command is correct.
- Background noise such as a climate control fan positioned on high, open windows or very loud outside noises, can cause voice commands to be misunderstood.

Reference Information

Schematic Reference

[Radio/Navigation System Schematics](#)

Connector End View Reference

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

Description and Operation

[Radio/Audio System Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)

- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information.

Circuit/System Verification

1. Verify the OnStar® voice recognition system is operating normally.
 - **If the OnStar® voice recognition system is not operating normally.**
Refer to [OnStar Voice Recognition Malfunction](#).
 - **If the OnStar® voice recognition system is operating normally.**
2. Ignition On/Vehicle in Service Mode. Infotainment system ON.
3. Begin voice recognition for the infotainment system and clearly speak one of the available commands.

NOTE: Refer to the Owners Manual and/or the Navigation System Owners Manual for voice recognition use and commands.

4. Verify the infotainment system responds correctly to the command.
 - **If the infotainment system does not respond correctly to the command.**
 1. Clearly speak a different command.
 2. Verify the infotainment system responds correctly to the command.
 - If the infotainment system does not respond correctly to any commands, refer to Circuit/System Testing.
 - If the infotainment system responds correctly to the command.
 3. Refer to the Owners Manual and/or the Navigation System Owners Manual for hints on speaking commands.
 - **If the infotainment system responds correctly to the command.**
5. All OK

Circuit/System Testing

1. Ignition OFF, disconnect the X1 harness connector at the K74 Human Machine Interface Control Module.
2. Disconnect the X2 harness connector at the K73 Telematics Communication Interface Control Module. Ignition On/Vehicle in Service Mode.
3. Test for less than 1 V between the signal circuit terminal listed below and ground.
 - Voice recognition audio signal terminal 6
 - Voice recognition audio low reference terminal 12
 - **If 1 V greater**
Repair the short to voltage on the circuit.
 - **If less than 1 V**
4. Ignition OFF.
5. Test for infinite resistance between the signal circuits listed below and ground:
 - Voice recognition audio signal terminal 6
 - Voice recognition audio low reference terminal 12
 - **If less than infinite resistance**
Repair the short to ground on the circuit.

- **If infinite resistance**

6. Test for less than 5 Ω between the terminals listed below:

- K74 Human Machine Interface Control Module signal circuit terminal 1 X1 and the K73 Telematics Communication Interface Control Module signal circuit terminal 6 X2
- K74 Human Machine Interface Control Module low reference circuit terminal 2 X1 and the K73 Telematics Communication Interface Control Module low reference circuit terminal 12 X2
- **If 5 Ω greater**

Repair the open/high resistance in the circuit.

- **If less than 5 Ω**

7. Replace the K74 Human Machine Interface Control Module. Connect all harness connectors.

8. Begin voice recognition for the infotainment system and clearly speak one of the available commands.

NOTE: Refer to the Owners Manual and/or the Navigation System Owners Manual for voice recognition use and commands.

9. Verify the infotainment system responds correctly to the command.

- **If the infotainment system does not respond correctly to the command**

1. Clearly speak a different command.

2. Verify the infotainment system responds correctly to the command.

- If the infotainment system does not respond correctly to any commands, replace the K73 Telematics Communication Interface Control Module.

- **If the infotainment system responds correctly to the command**

10. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for human machine interface control module or telematics communication interface control replacement, programming and setup.

VOICE RECOGNITION MALFUNCTION (IO6 WITHOUT UE1)

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Microphone Signal	B1277 02	B1277 04	B1277 04	-
Microphone Low Reference	B1277 02	B1277 04	-	-

Circuit/System Description

The human machine interface control module uses the cellular telephone microphone for voice recognition and cellular features. The human machine interface control module provides a bias voltage to each microphone (+) and (-) signal circuits for operation of the microphone.

Diagnostic Aids

- Refer to the Owners Manual and/or the Navigation System Owners Manual for voice recognition use and commands.
- When the system recognizes the command the system will either perform the function or ask to confirm the choice by clearly saying "yes" or "no".
- If experiencing difficulty with the system recognizing a command, confirm that the command is correct.
- Background noise such as a climate control fan positioned on high, open windows or very loud outside noises, can cause voice commands to be misunderstood.

Reference Information

Schematic Reference

Radio/Navigation System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

Radio/Audio System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition ON, infotainment system ON.
2. Begin voice recognition for the infotainment system and clearly speak one of the available commands.

NOTE: Refer to the Owners Manual and/or the Navigation System Owners Manual for voice recognition use and commands.

3. Verify the infotainment system responds correctly to the command.
 - **If the infotainment system does not respond correctly to the command.**
 1. Clearly speak a different command.
 2. Verify the infotainment system responds correctly to the command.
 - If the infotainment system does not respond correctly to any commands, refer to Circuit/System Testing.
 - If the infotainment system responds correctly to the command.
 3. Refer to the Owners Manual and/or the Navigation System Owners Manual for hints on speaking commands.
 - **If the infotainment system responds correctly to the command.**
4. All OK

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the B24 Cellular Phone Microphone. Ignition ON.

2. Test for 9-11 V between the signal circuit terminal B and ground.
 - **If less than 9 V**
 1. Ignition OFF, disconnect the X1 harness connector at the K74 Human Machine Interface Control Module.
 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground in the circuit.
 - If infinite resistance
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K74 Human Machine Interface Control Module.
 - **If greater than 11 V**
 1. Ignition OFF, disconnect the X1 harness connector at the K74 Human Machine Interface Control Module. Ignition ON.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K74 Human Machine Interface Control Module.
 - **If between 9-11 V**
3. Test for less than 1 V between the signal circuit terminal A and ground.
 - **If greater than 1 V**
 1. Ignition OFF, X1 harness connector at the K74 Human Machine Interface Control Module. Ignition ON.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage in the circuit.
 - If less than 1 V, replace the K74 Human Machine Interface Control Module.
 - **If less than 1 V**
4. Ignition OFF, disconnect the X1 harness connector at the K74 Human Machine Interface Control Module.
5. Test for infinite resistance between the B24 Cellular Phone Microphone signal circuit terminal A and ground.
 - **If less than infinite resistance**

Repair the short to ground in the circuit
 - **If infinite resistance**
6. Test for less than 2 Ω in the signal circuit end to end.
 - **If 2 Ω or greater**

Repair the open/high resistance in the circuit
 - **If less than 2 Ω**
7. Replace the B24 Cellular Phone Microphone.
8. Ignition ON, infotainment system ON.
9. Begin voice recognition for the infotainment system and clearly speak one of the available commands.
10. Verify the infotainment system responds correctly to the command.
 - **If the infotainment system does not respond correctly to the command.**
 1. Clearly speak a different command.
 2. Verify the infotainment system responds correctly to the command.
 - If the infotainment system does not respond correctly to any commands, replace the K74 Human Machine Interface Control Module.
 - If the infotainment system responds correctly to the command.

3. Refer to the Owners Manual and/or the Navigation System Owners Manual for hints on speaking commands.

- **If the infotainment system responds correctly to the command.**

11. All OK.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Mobile Telephone Microphone Replacement**
 - **Control Module References** for human machine interface control module replacement, programming and setup.
-

cardiagn.com

2017 ACCESSORIES & EQUIPMENT

Cellular, Entertainment and Navigation - Repair Instructions - CT6

REPAIR INSTRUCTIONS

MOBILE TELEPHONE MICROPHONE REPLACEMENT

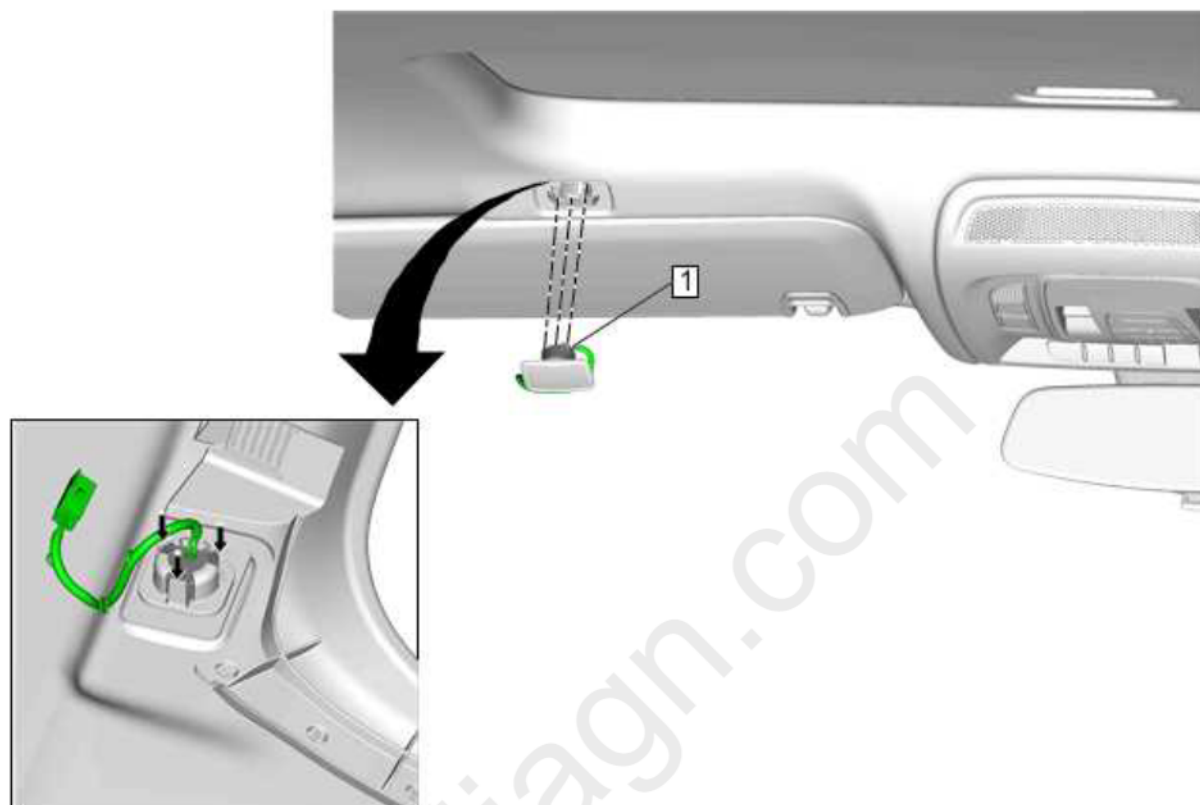


Fig. 1: Mobile Telephone Microphone

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure It is only necessary to lower the headliner. Only do those steps in headliner replacement that will lower the headliner enough to gain access to the part. Refer to Headlining Trim Panel Replacement (Without C3U) and/or Headlining Trim Panel Replacement (With C3U)	
1	Mobile Telephone Microphone Procedure 1. Disconnect the electrical connector. 2. Unlock the [3x] tabs to release the microphone from the trim plate. 3. Transfer components as necessary.

PERIPHERAL HUMAN MACHINE INTERFACE CONTROL MODULE REPLACEMENT

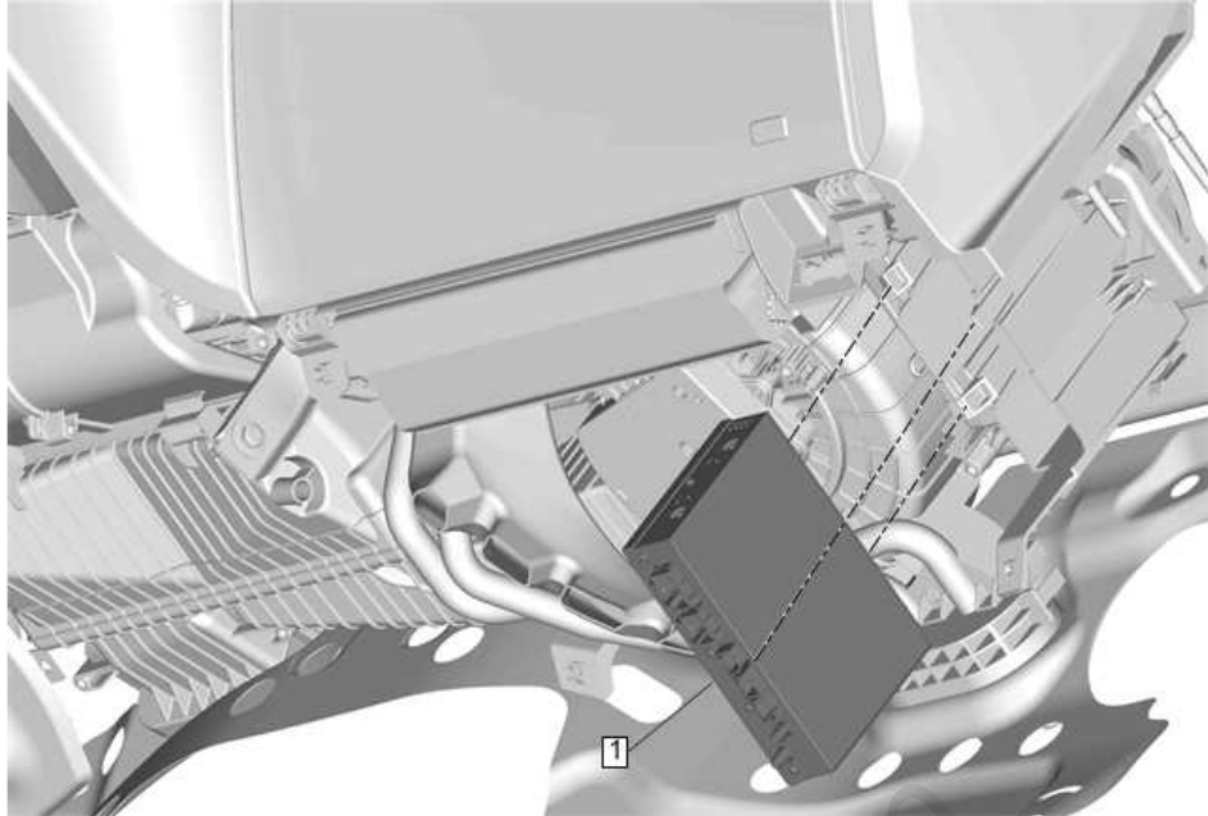


Fig. 2: Peripheral Human Machine Interface Control Module

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Instrument Panel Lower Trim Panel Insulator Replacement - Right Side</u>	
1	Peripheral Human Machine Interface Control Module Procedure 1. Disconnect the electrical connectors. 2. Release the retaining tabs. 3. <u>Control Module References</u> for programming and set up information, if required.

HUMAN MACHINE INTERFACE CONTROL MODULE REPLACEMENT

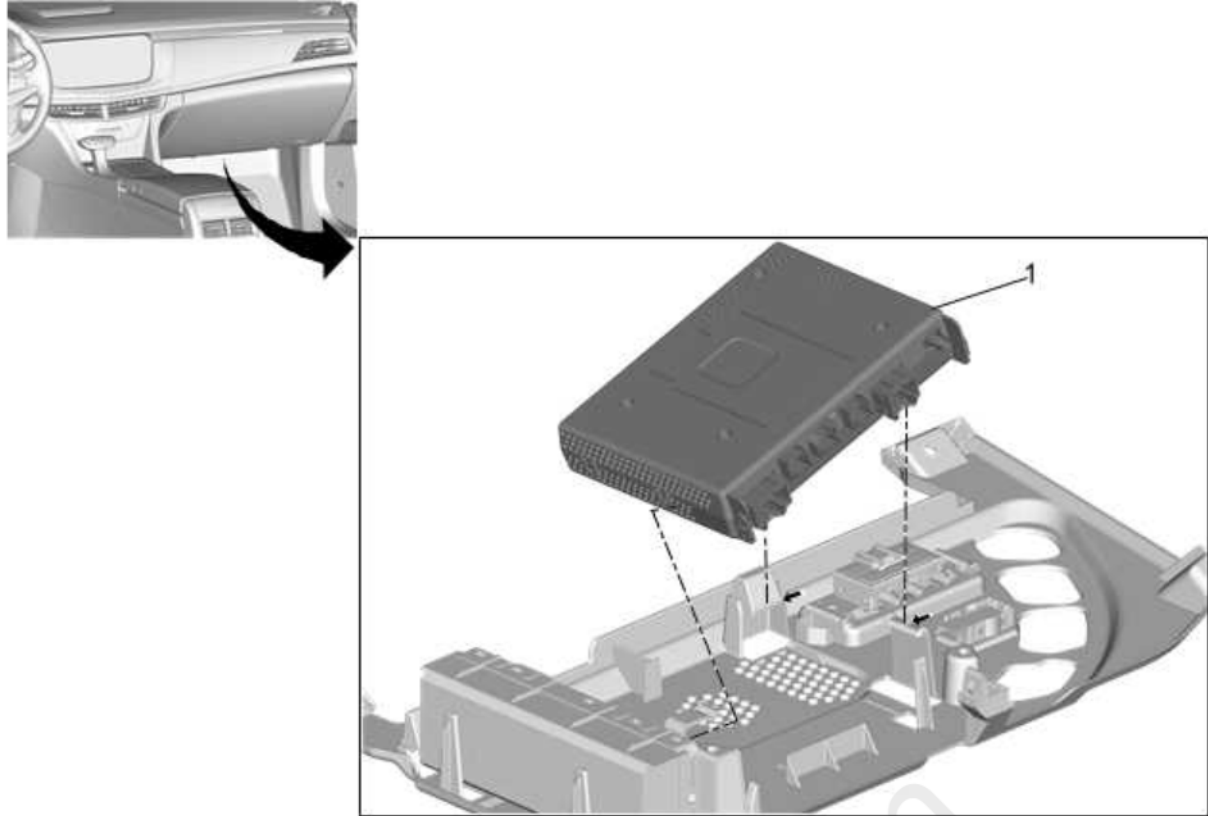


Fig. 3: Human Machine Interface Control Module

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Instrument Panel Lower Trim Panel Insulator Replacement - Right Side</u>	
1	Human Machine Interface Control Module Procedure 1. Release the retaining tabs. 2. <u>Control Module References</u> for programming and set up procedures, if required.

COMMUNICATION CENTER CALL SWITCH REPLACEMENT

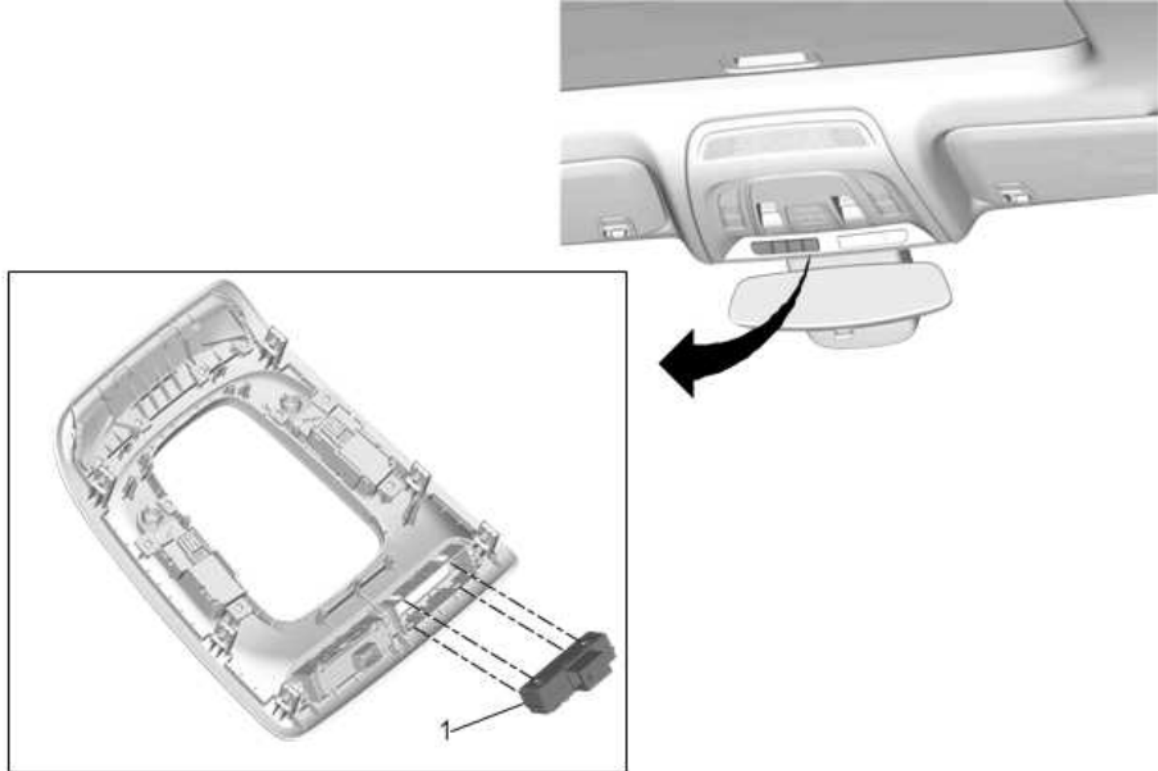


Fig. 4: Communication Center Call Switch
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Roof Console Replacement</u>	
1	Communication Center Call Switch Procedure Release the 4 tabs on the switch to remove from the roof console.

COMMUNICATION INTERFACE MODULE REPLACEMENT

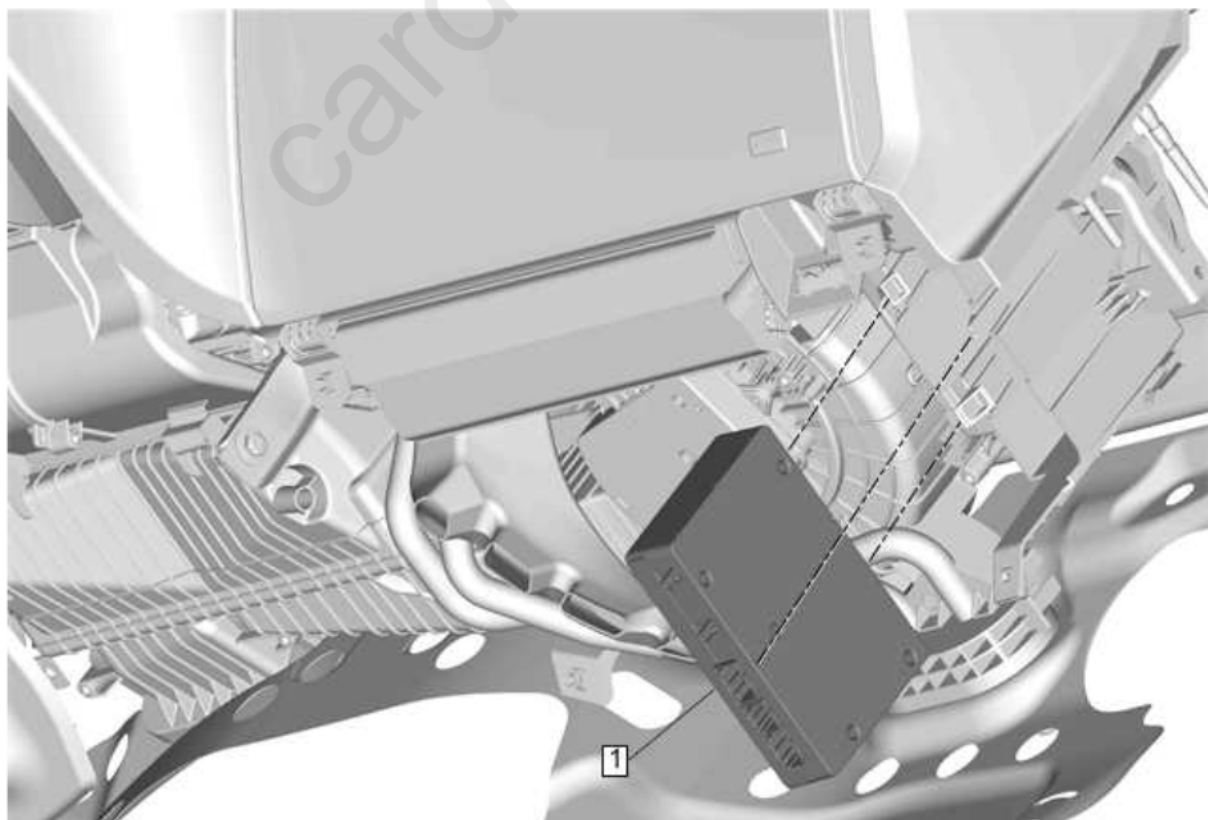


Fig. 5: Communication Interface Module
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Instrument Panel Lower Trim Panel Insulator Replacement - Right Side	
1	Communication Interface Module Procedure 1. Disconnect the electrical connectors. 2. Release the retaining tabs. 3. Control Module References for programming and set up information, if required.

COMMUNICATION INTERFACE MODULE BATTERY REPLACEMENT

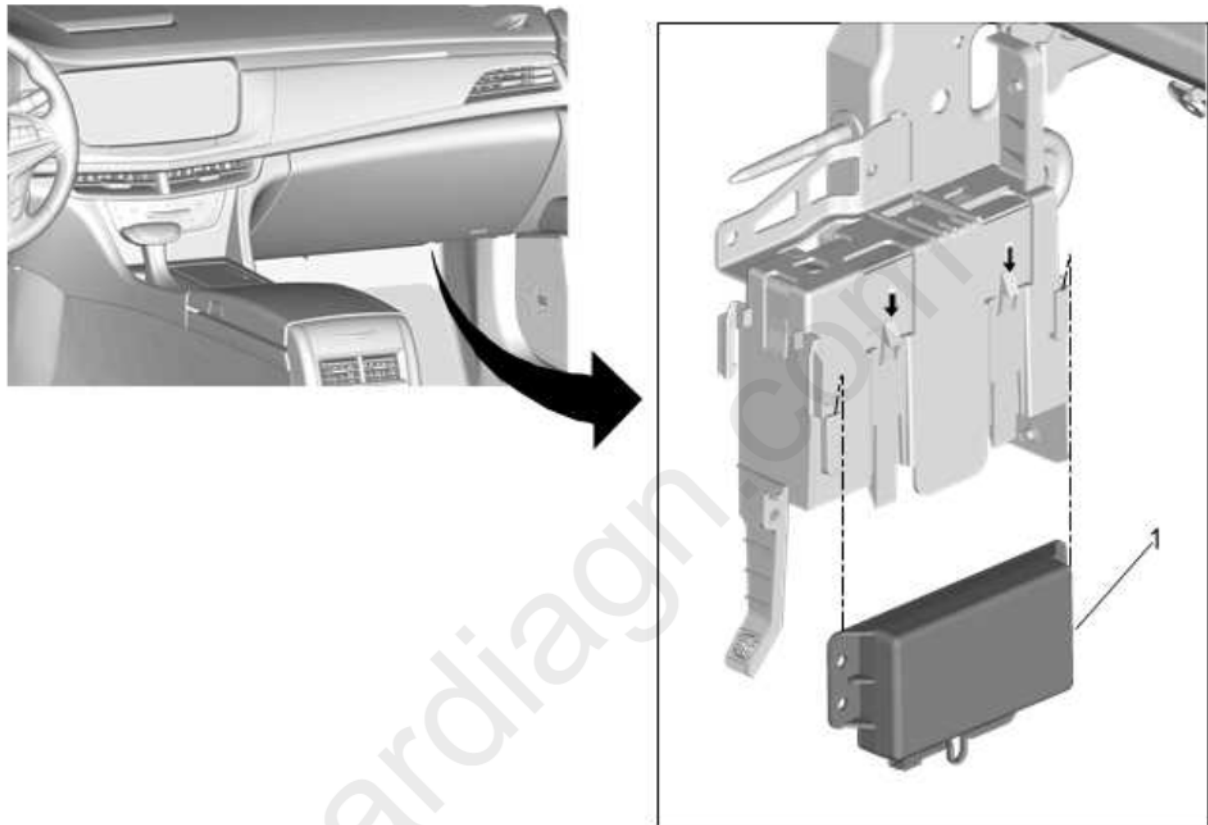


Fig. 6: Communication Interface Module Battery
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Instrument Panel Lower Trim Panel Insulator Replacement - Right Side	
1	Communication Interface Module Battery Procedure 1. Disconnect the electrical connector. 2. Release the retaining tabs.

COMMUNICATION INTERFACE MODULE BRACKET REPLACEMENT

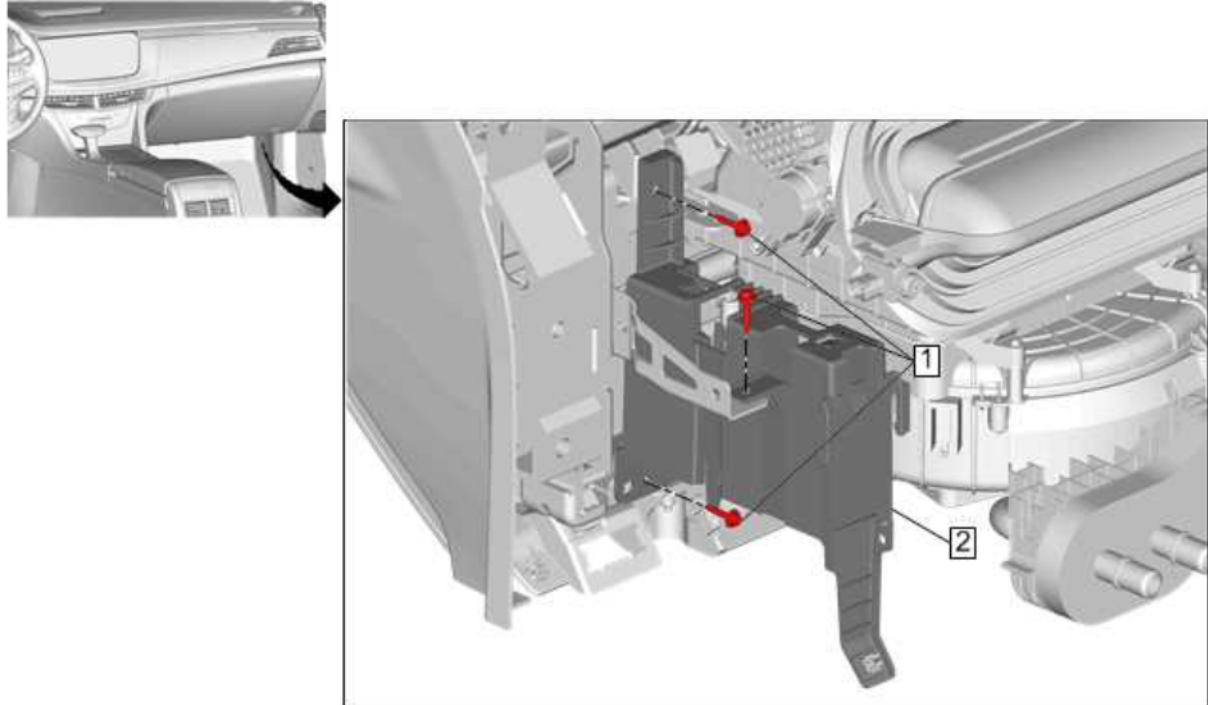


Fig. 7: Communication Interface Module Bracket
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
Communication Interface Module Replacement	
1	Communication Interface Module Bracket Bolt [3x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Communication Interface Module Bracket

RADIO BRACKET REPLACEMENT

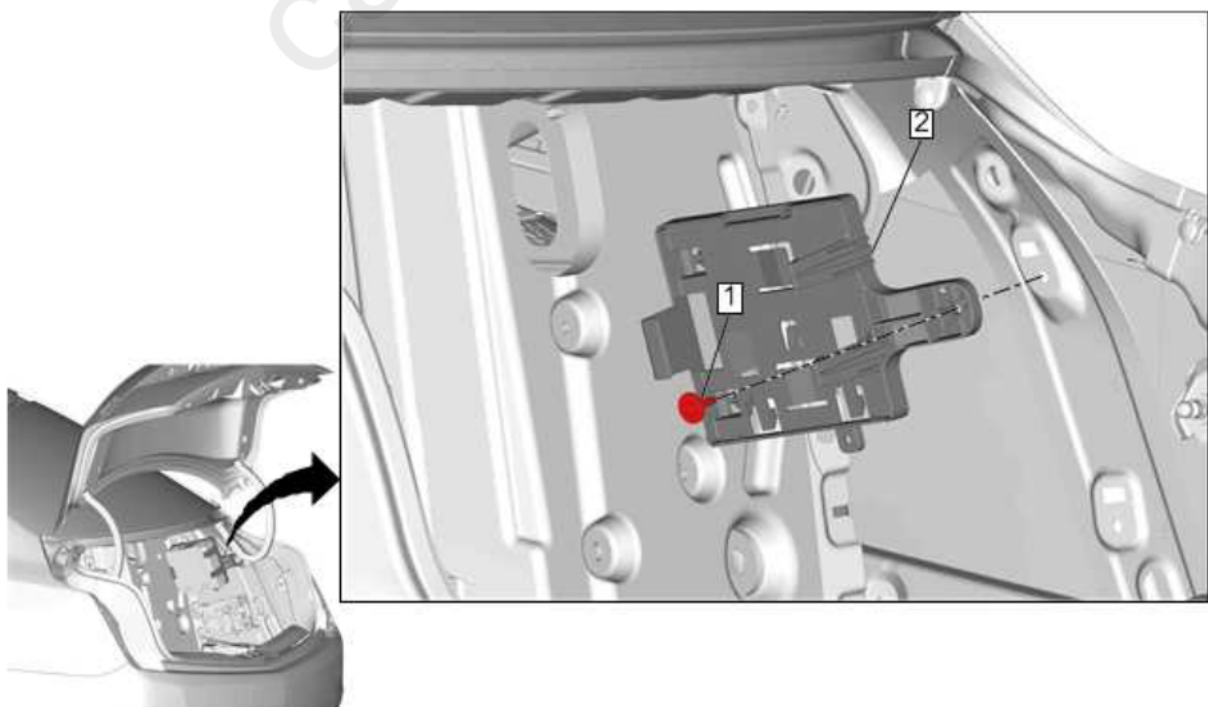


Fig. 8: Radio Bracket
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Radio Replacement</u>	
1	Radio Bracket Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 9 N.m (80 lb in)
2	Radio Bracket Procedure Transfer components as necessary.

RADIO REPLACEMENT

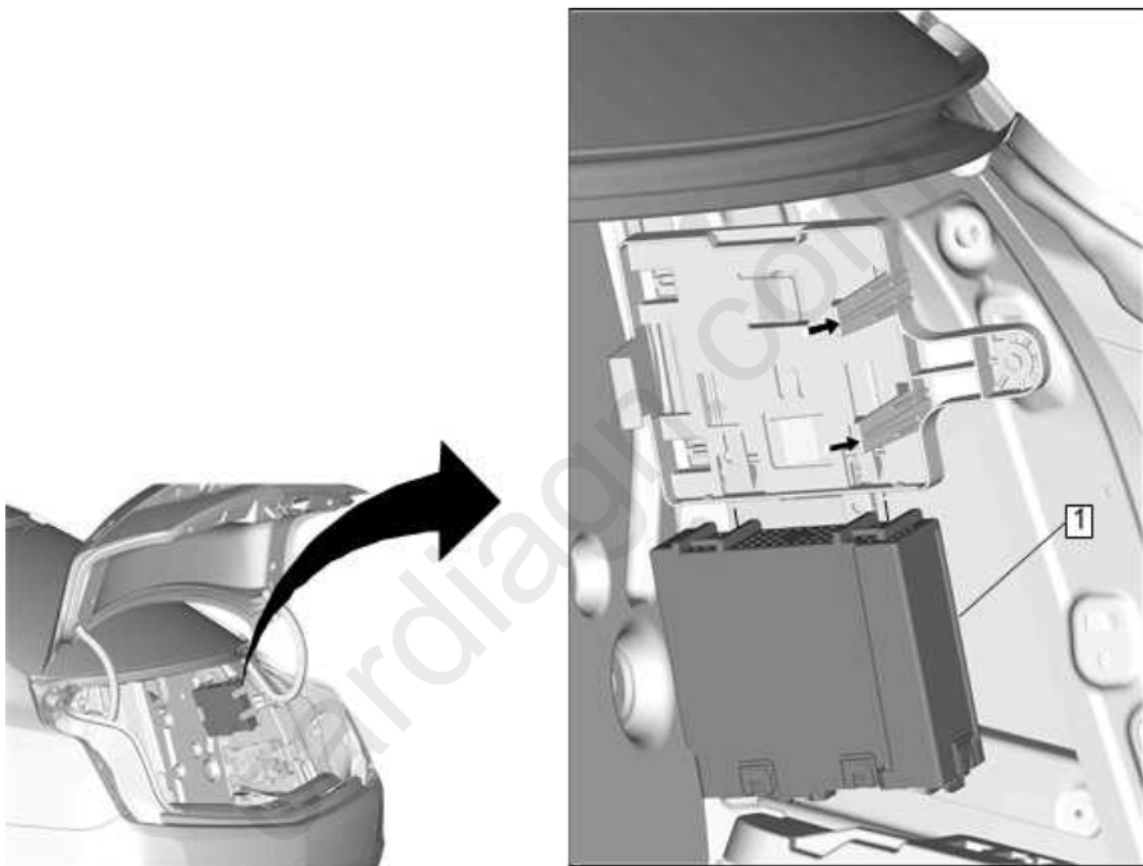


Fig. 9: Radio

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Compartment Side Trim Replacement - Right Side (Without HP9)</u> <u>Rear Compartment Side Trim Replacement - Right Side (With HP9)</u>	
1	Radio Procedure 1. Disconnect the electrical connectors. 2. Push the 2 tabs to release the radio from the bracket. 3. <u>Control Module References</u> for programming and setup information, if required.

RADIO CONTROL ASSEMBLY REPLACEMENT

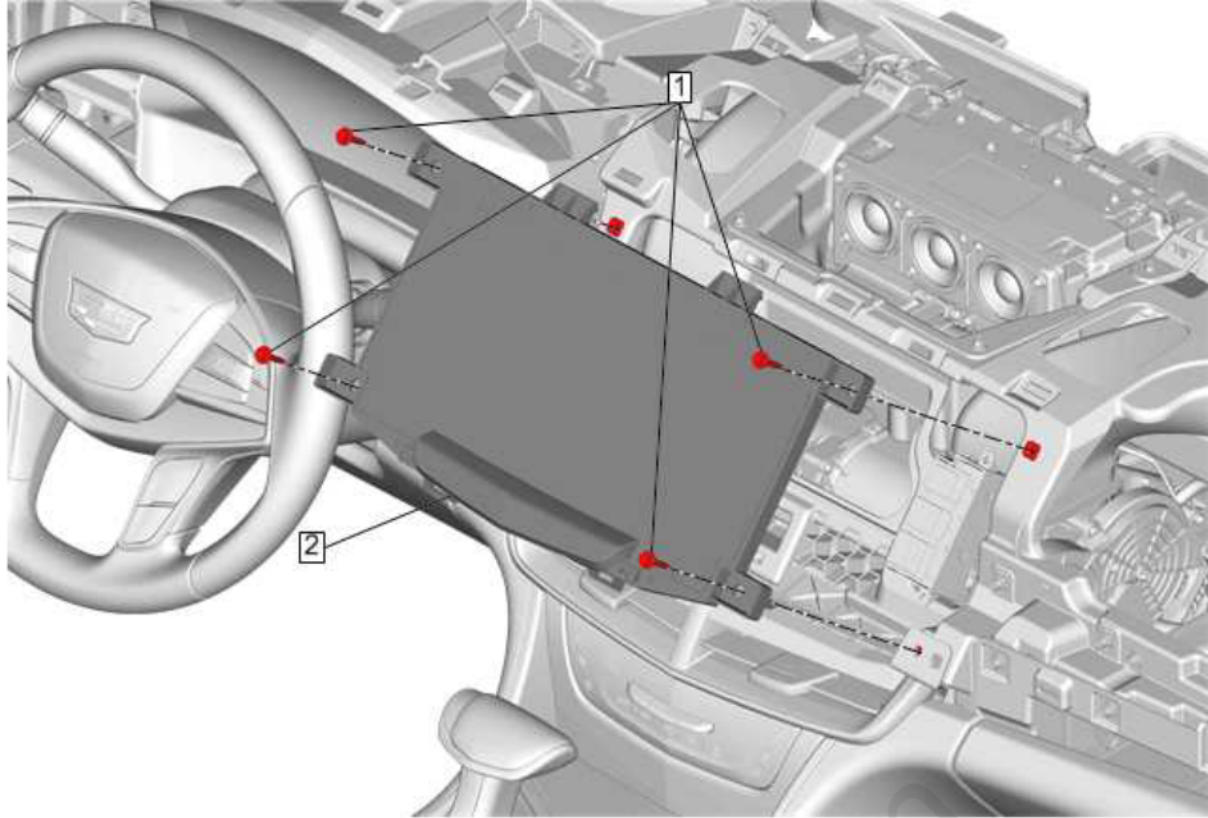


Fig. 10: Radio Control Assembly

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Instrument Panel Upper Trim Panel Replacement	
1	Radio Control Bolt [4x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Radio Control Procedure 1. Disconnect the electrical connectors. 2. Control Module References for programming and set up procedures, if required.

ACTIVE NOISE CANCELLATION MICROPHONE GRILLE REPLACEMENT (FRONT)



Fig. 11: Active Noise Cancellation Microphone Grille (Front)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure It is only necessary to lower the headlining. Only do those steps in the headlining procedure that will allow access to the component being removed. Refer to Headlining Trim Panel Replacement (Without C3U) and/or Headlining Trim Panel Replacement (With C3U) .	
1	Active Noise Cancellation Microphone Grille Procedure 1. Unlock the retaining tabs. 2. Use a suitable tool.

ACTIVE NOISE CANCELLATION MICROPHONE GRILLE REPLACEMENT (REAR)

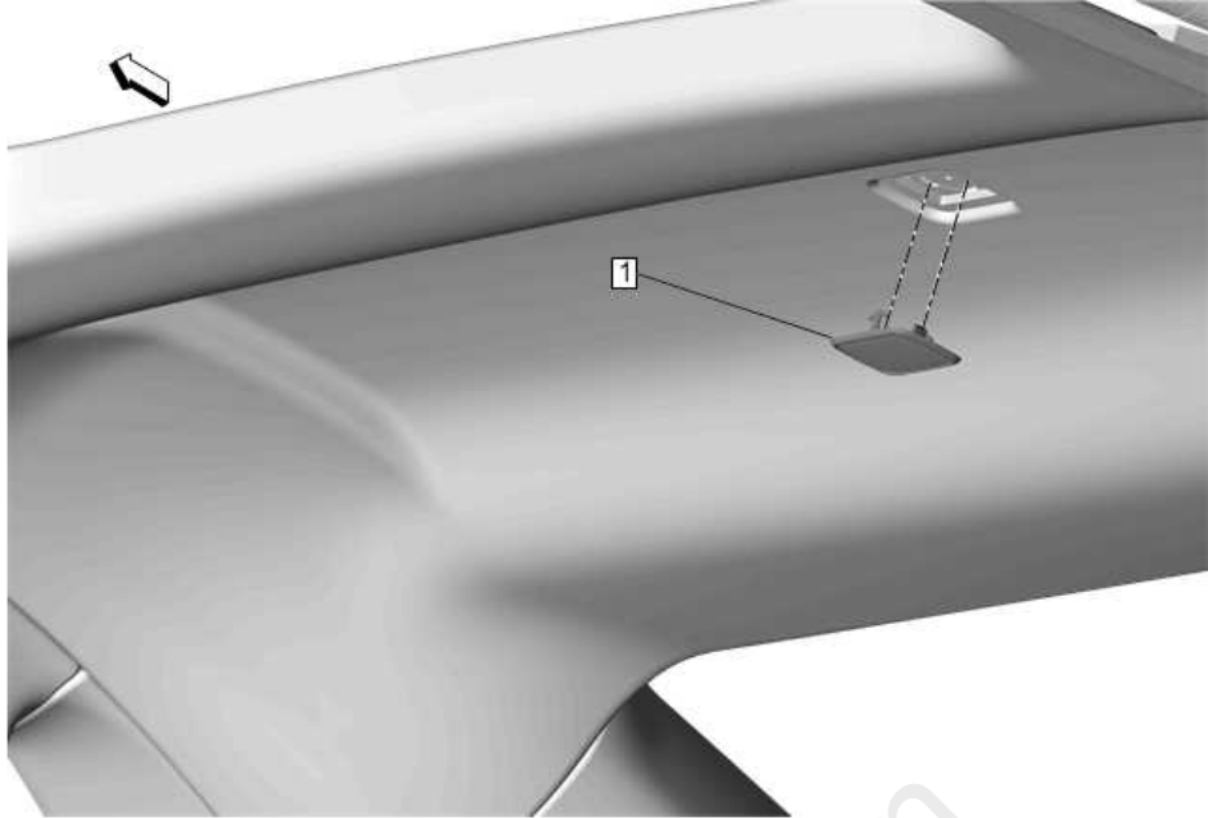


Fig. 12: Active Noise Cancellation Microphone Grille (Rear)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure It is only necessary to lower the headlining. Only do those steps in the headlining procedure that will allow access to the component being removed. Refer to Headlining Trim Panel Replacement (Without C3U) and/or Headlining Trim Panel Replacement (With C3U)	
1	Active Noise Cancellation Microphone Grille Procedure 1. Unlock the retaining tabs. 2. Use a suitable tool.

ACTIVE NOISE CANCELLATION MICROPHONE REPLACEMENT

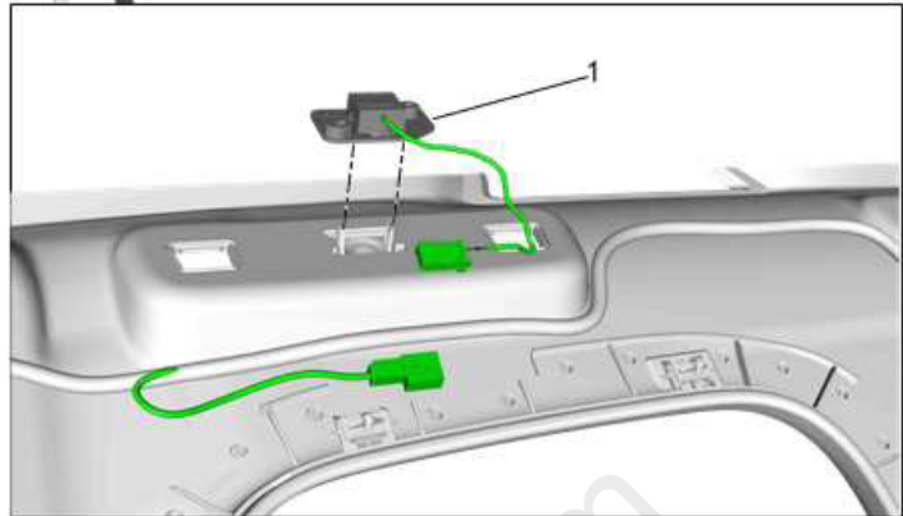


Fig. 13: Active Noise Cancellation Microphone
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Lower the area of the headliner according to the location of the microphone being replaced. Refer to Headlining Trim Panel Replacement (Without C3U) and/or Headlining Trim Panel Replacement (With C3U) .	
1	Active Noise Cancellation Microphone [3x] Procedure 1. Disconnect the electrical connector. 2. Unlock the retaining tabs. 3. Use a suitable tool. 4. Apply insulator tape over glued locations to prevent squeaks and rattles as needed.

AUDIO DISC PLAYER AND USB RECEPTACLE REPLACEMENT

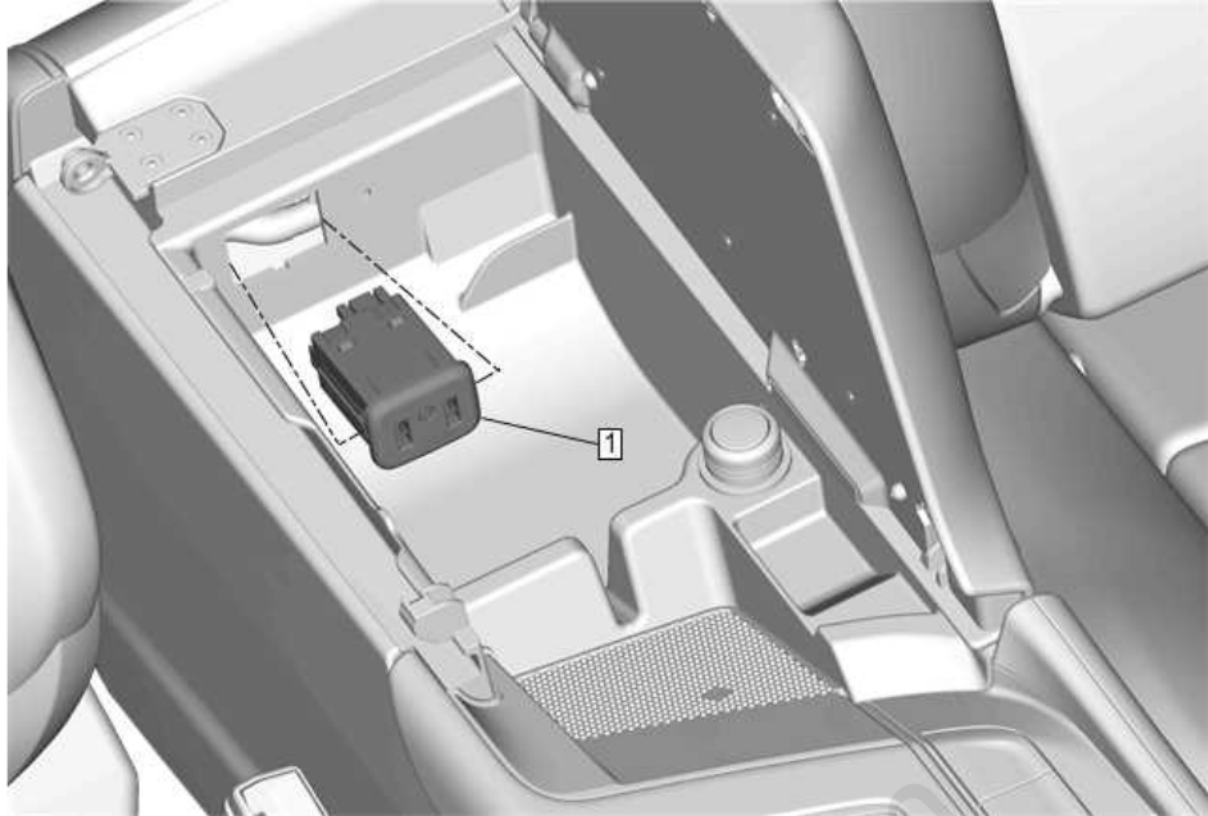


Fig. 14: Audio Disc Player and USB Receptacle
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Front Floor Console Armrest» Open	
1	Audio Disc Player and USB Receptacle Procedure 1. Use a flat bladed plastic tool to remove. 2. Disconnect the electrical connector.

RADIO SPEAKER AMPLIFIER REPLACEMENT

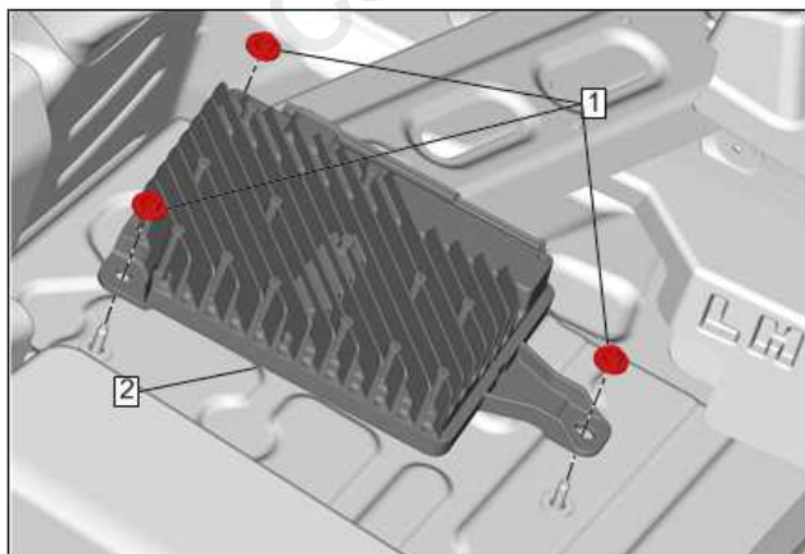


Fig. 15: Radio Speaker Amplifier
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Compartment Side Trim Replacement - Left Side (Without HP9)</u> <u>Rear Compartment Side Trim Replacement - Left Side (With HP9)</u>	
1	Radio Speaker Amplifier Nut [3x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 6 N.m (53 lb in)
2	Radio Speaker Amplifier Procedure 1. Disconnect the electrical connectors. 2. <u>Control Module References</u> for programming and set up procedures, if required.

RADIO REAR SPEAKER AMPLIFIER REPLACEMENT

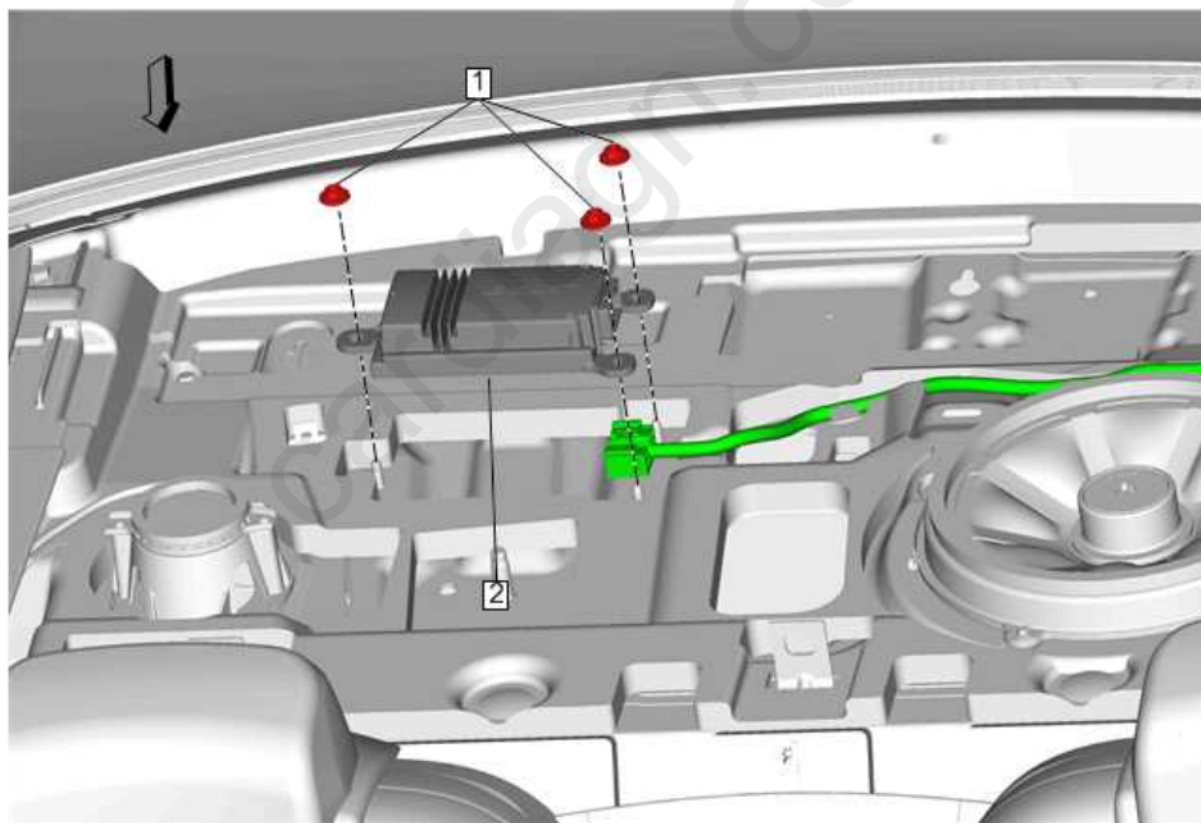


Fig. 16: Radio Rear Speaker Amplifier
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Window Panel Trim Replacement</u>	
Empty space for additional content	

Callout	Component Name
1	Radio Rear Speaker Amplifier Nut [3x] CAUTION: Refer to Fastener Caution . Tighten 6 N.m (53 lb in)
2	Radio Rear Speaker Amplifier Procedure 1. Disconnect the electrical connector. 2. Control Module References for programming and set up procedures, if required.

RADIO SPEAKER 2ND AUXILIARY AMPLIFIER REPLACEMENT

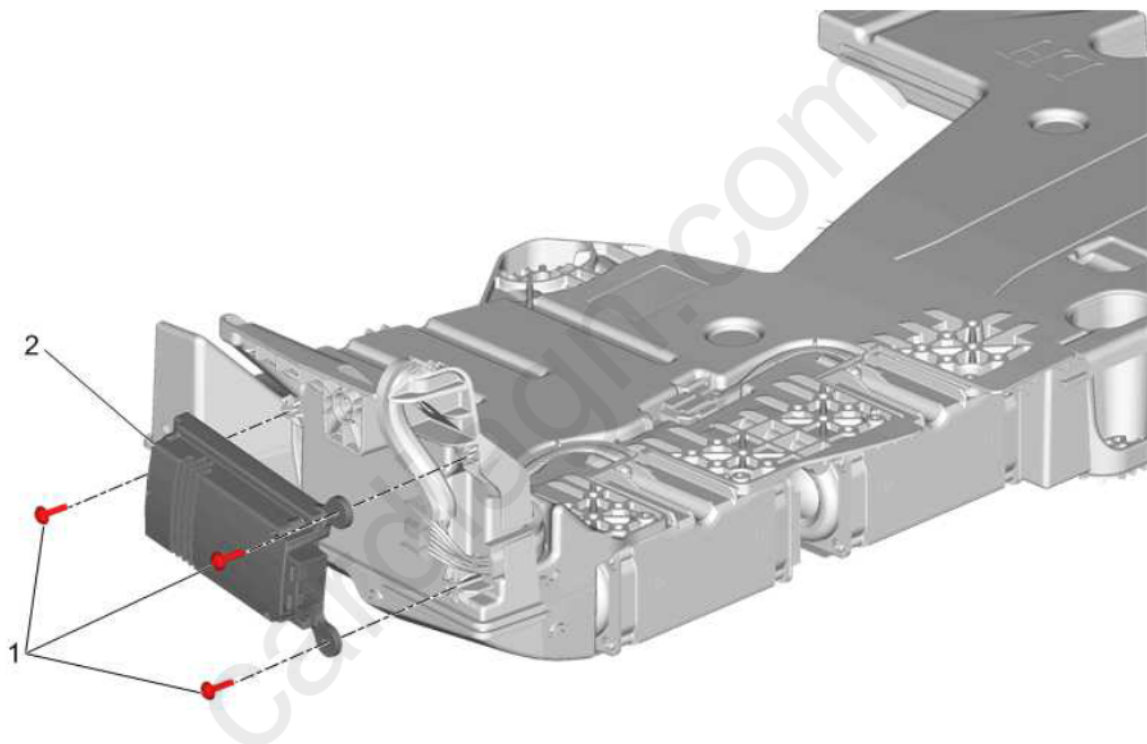


Fig. 17: Radio Speaker 2nd Auxiliary Amplifier
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Front Floor Speaker Replacement	
1	Radio Speaker 2nd Auxiliary Amplifier Bolt CAUTION: Fastener Caution Tighten 2.5 N.m (22 lb in)
2	Radio Speaker 2nd Auxiliary Amplifier Procedure Disconnect the electrical connector.

AUDIO/VIDEO RECEPTACLE REPLACEMENT

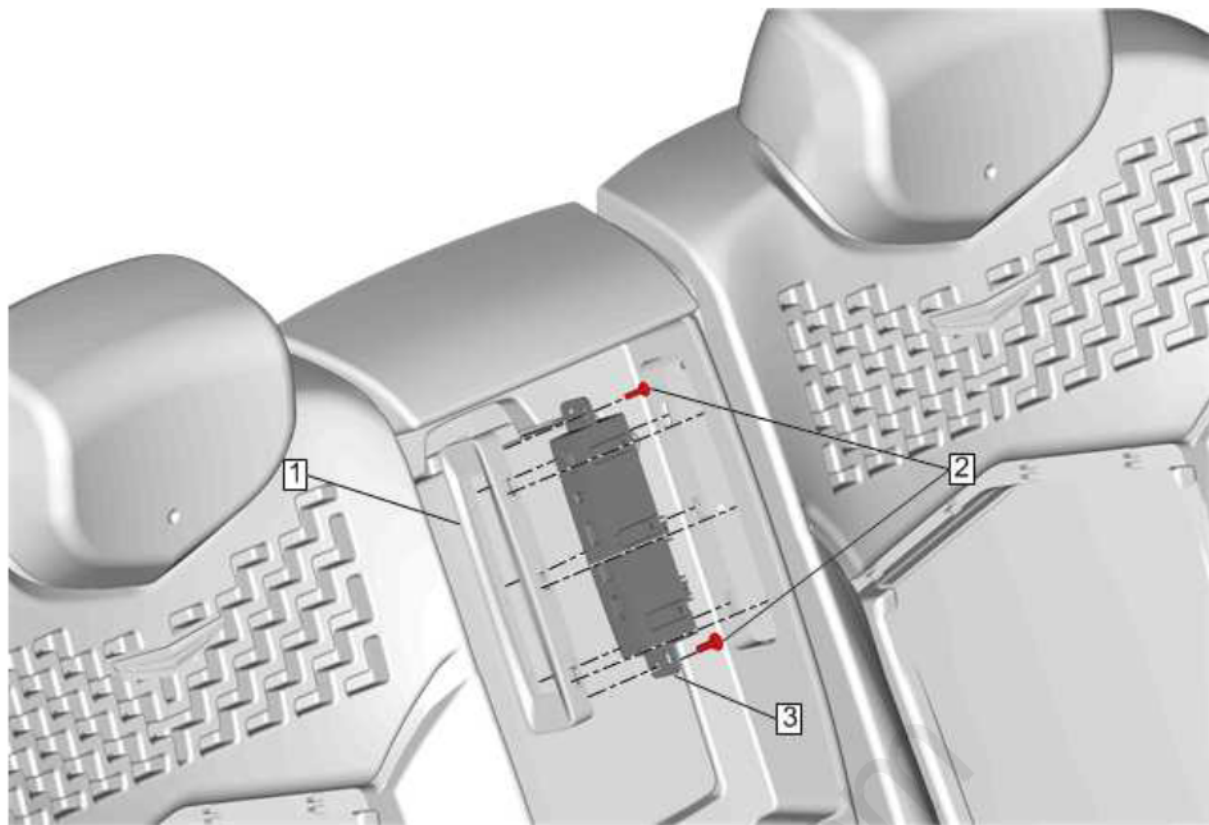


Fig. 18: Audio/Video Receptacle

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Seat Back Cushion Removal and Installation</u>	
1	Bezel Procedure 1. Disconnect the electrical connectors. 2. Release the [6x] retaining tabs.
2	Audio/Video Receptacle Bolt [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 1 N.m (9 lb in)
3	Audio/Video Receptacle

MULTIMEDIA RECEPTACLE REPLACEMENT (EXCEPT PLATINUM)

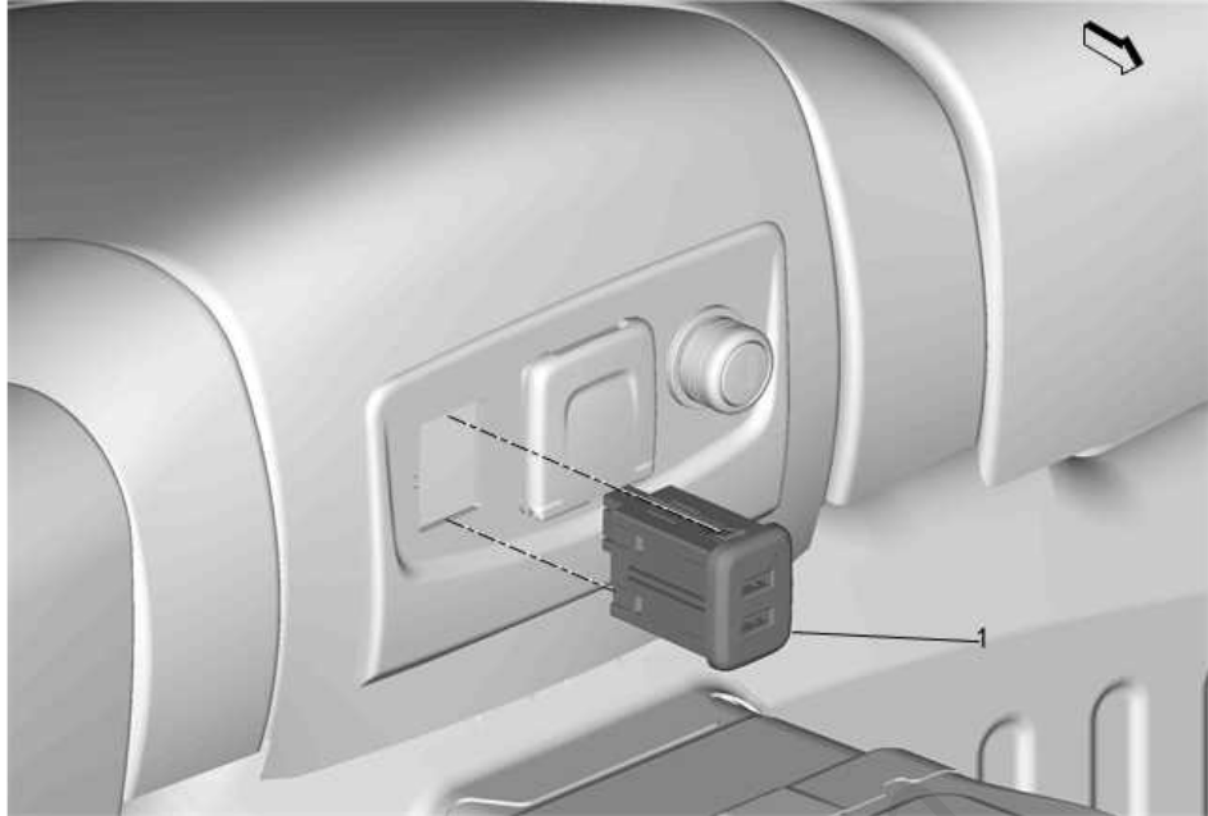


Fig. 19: Multimedia Receptacle (Except Platinum)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Multimedia Receptacle Procedure 1. Use a flat bladed plastic tool to remove. 2. Unlock the retaining tabs. 3. Disconnect the electrical connector.

MULTIMEDIA RECEPTACLE REPLACEMENT (PLATINUM)

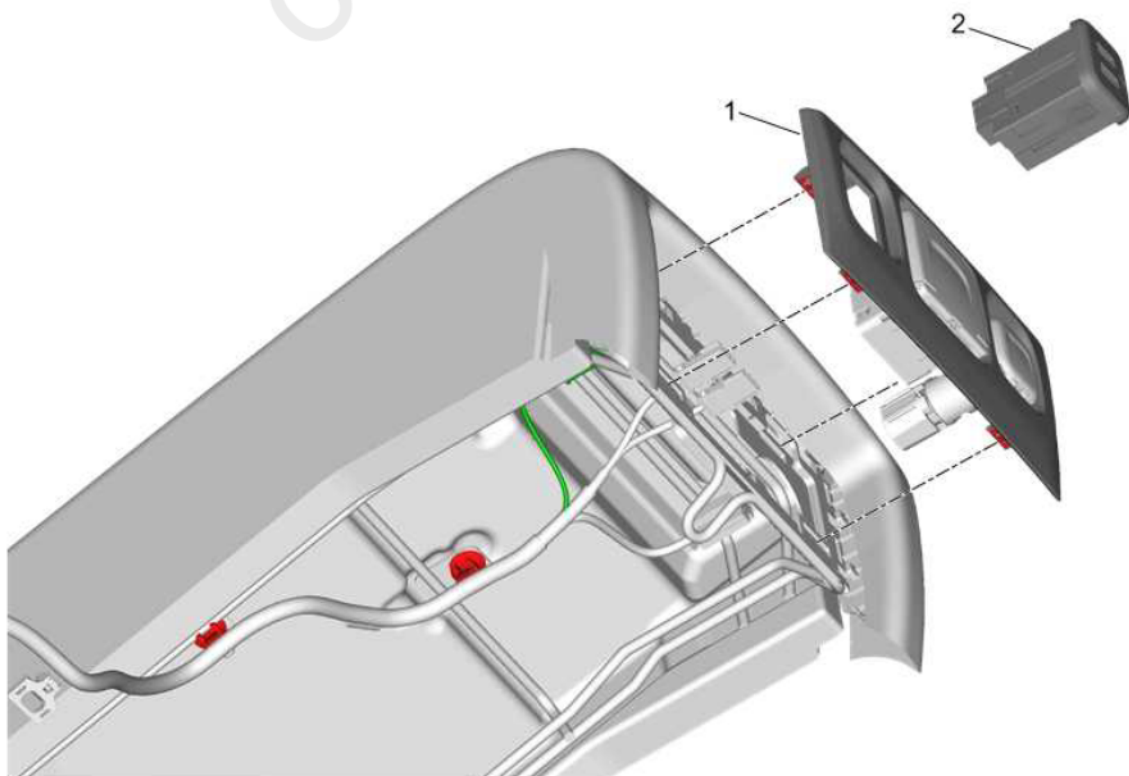


Fig. 20: Multimedia Receptacle (Platinum)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Rear Seat Cushion Removal and Installation (Platinum 20%) Rear Seat Cushion Removal and Installation (Platinum 40%)	
1	USB Receptacle Bezel Procedure 1. Use a flat bladed plastic tool to remove. 2. Unlock the retaining tabs. 3. Disconnect the electrical connector.
2	Multimedia Receptacle Procedure 1. Use a flat bladed plastic tool to remove. 2. Unlock the retaining tabs.

NAVIGATION SIGNAL SPLITTER REPLACEMENT

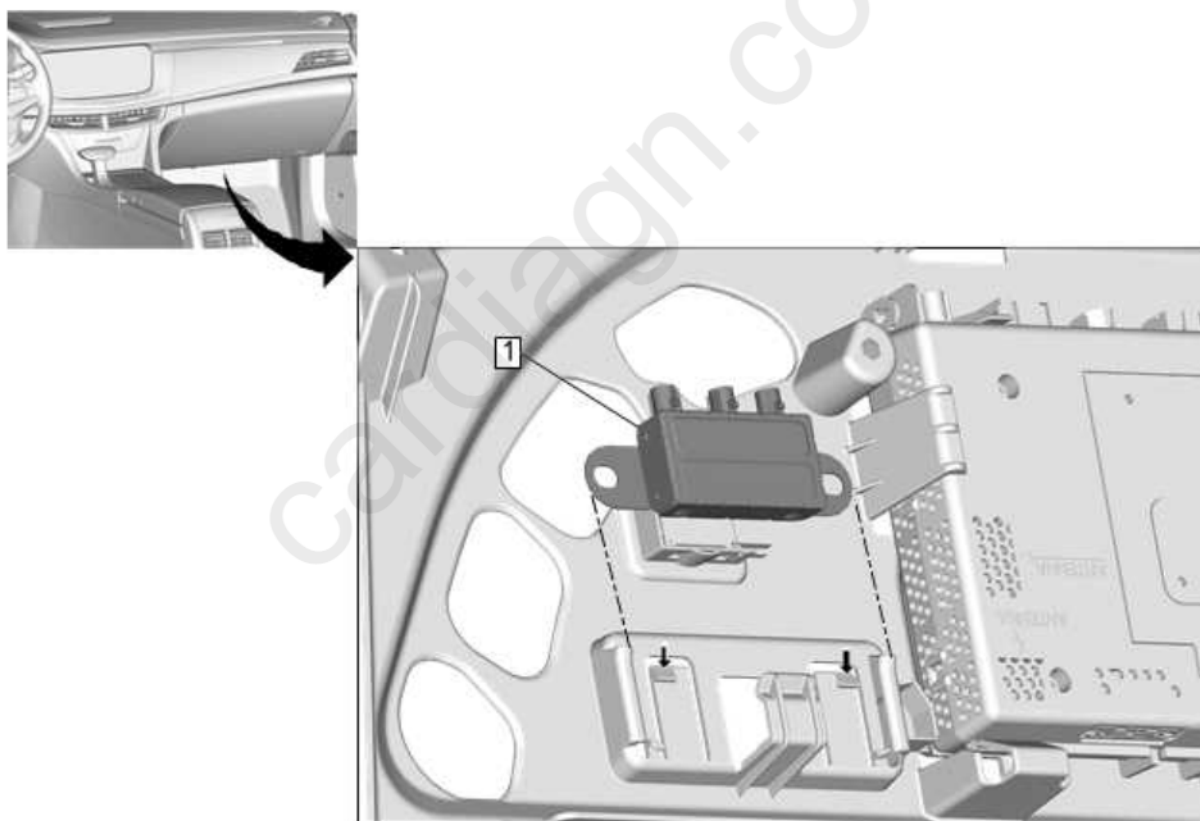


Fig. 21: Navigation Signal Splitter
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Instrument Panel Lower Trim Panel Insulator Replacement - Right Side	
1	Navigation Signal Splitter Procedure Release the retaining tabs.

RADIO ANTENNA COIL REPLACEMENT (EXCEPT RPO C24)

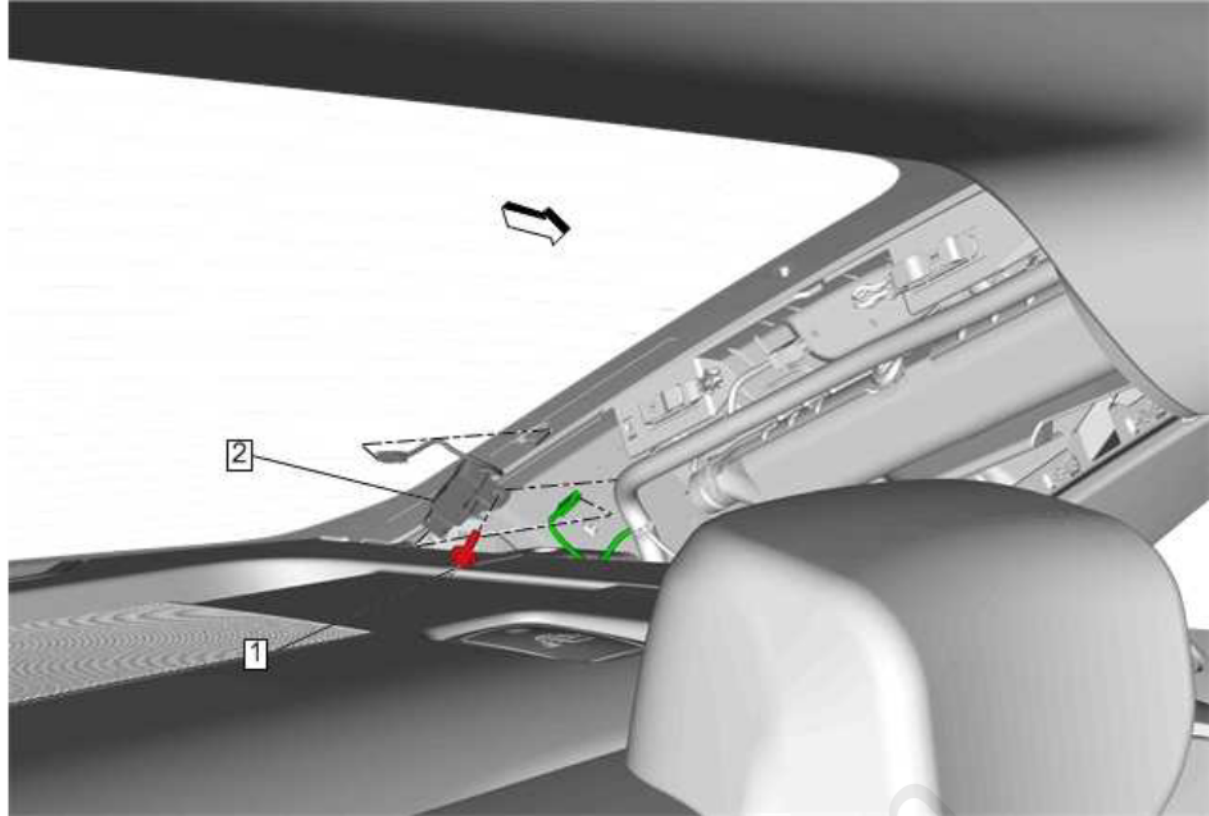


Fig. 22: Radio Antenna Coil (Except RPO C24)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Body Side Rear Window Garnish Molding Replacement</u>	
1	Radio Antenna Coil Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 9 N.m (80 lb in)
2	Radio Antenna Coil Procedure Disconnect the electrical connector.

RADIO ANTENNA COIL REPLACEMENT (RPO C24)

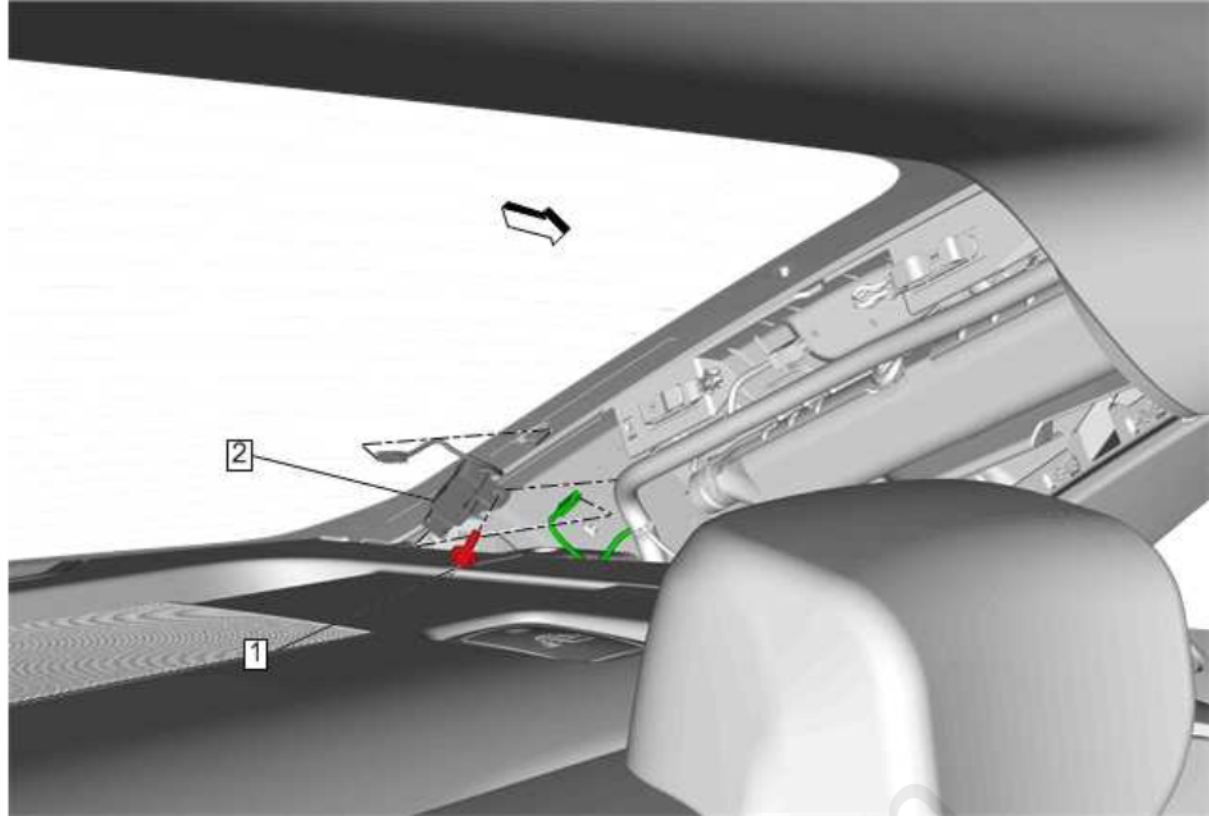


Fig. 23: Radio Antenna Coil

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures <u>Body Side Rear Window Garnish Molding Replacement</u> - Remove the Auxiliary Air Conditioning Air Outlet Duct - Left Side. Refer to <u>Auxiliary Air Conditioning Air Outlet Duct Replacement (Right Side)</u> and/or <u>Auxiliary Air Conditioning Air Outlet Duct Replacement (Left Side)</u>	
1	Radio Antenna Coil Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 9 N.m (80 lb in)
2	Radio Antenna Coil Procedure Disconnect the electrical connector.

RADIO ANTENNA GROUND COIL REPLACEMENT

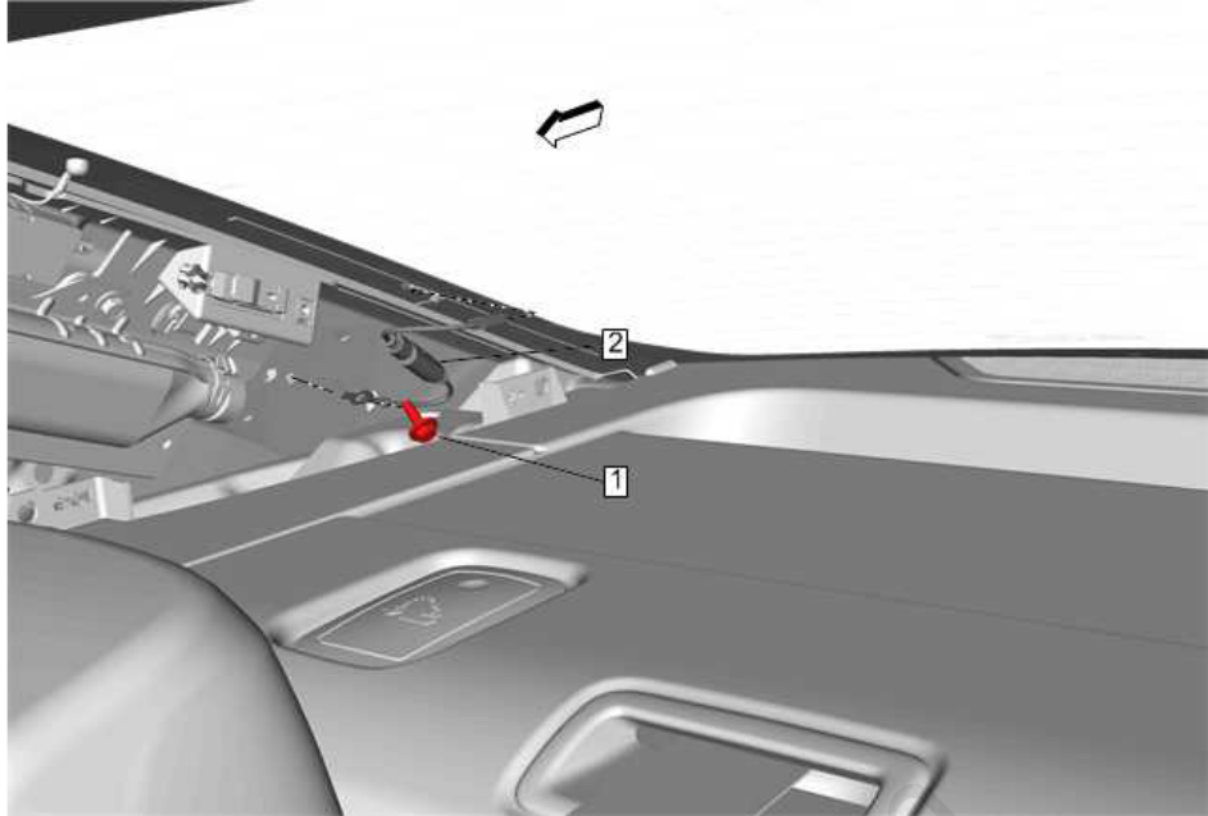


Fig. 24: Radio Antenna Ground Coil

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Body Side Rear Window Garnish Molding Replacement</u>	
1	Radio Antenna Coil Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 9 N.m (80 lb in)
2	Radio Antenna Ground Coil Procedure Disconnect the electrical connector.

DIGITAL RADIO TRANSCEIVER MODULE ANTENNA REPLACEMENT

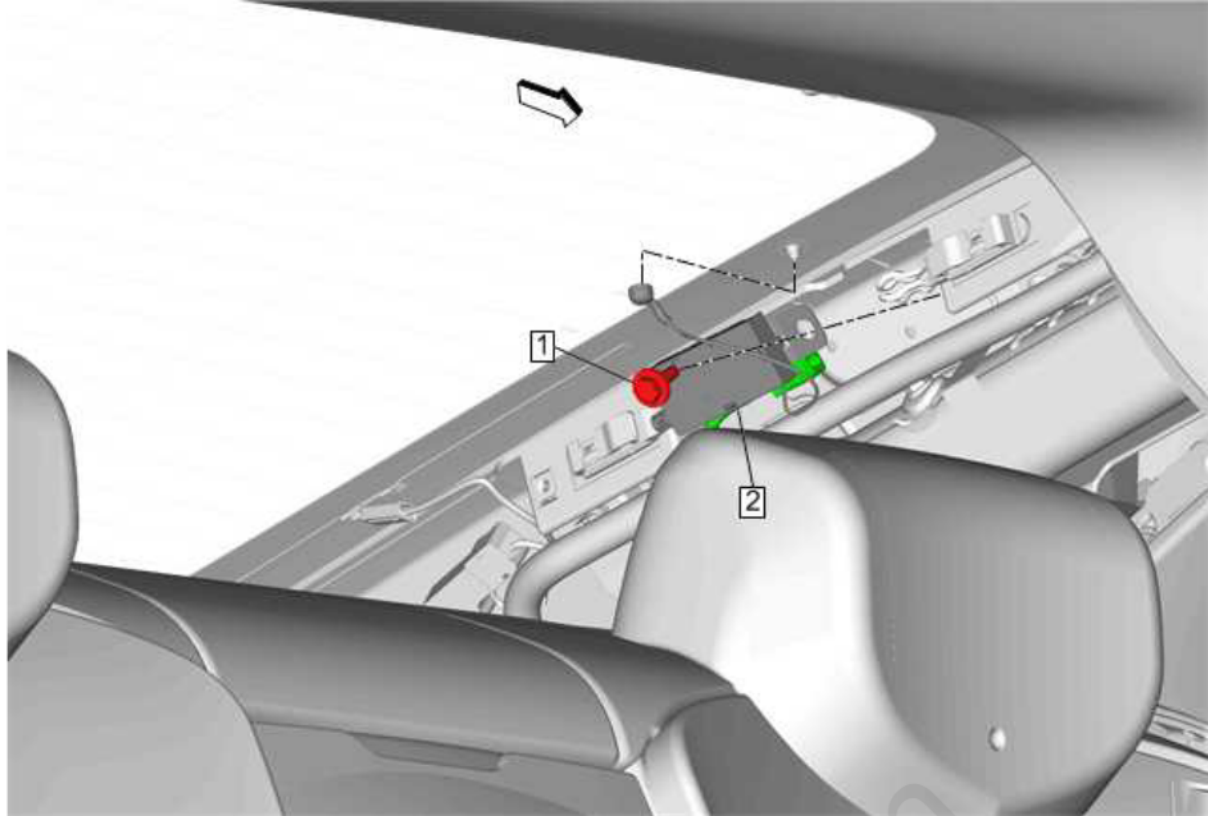


Fig. 25: Digital Radio Transceiver Module Antenna

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Body Side Rear Window Garnish Molding Replacement</u>	
1	Radio Antenna Module Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 9 N.m (80 lb in)
2	Radio Antenna Amplifier Procedure 1. Disconnect the electrical connector. 2. Unsnap the wire from the glass.

RADIO ANTENNA AMPLIFIER REPLACEMENT (BODY SIDE)

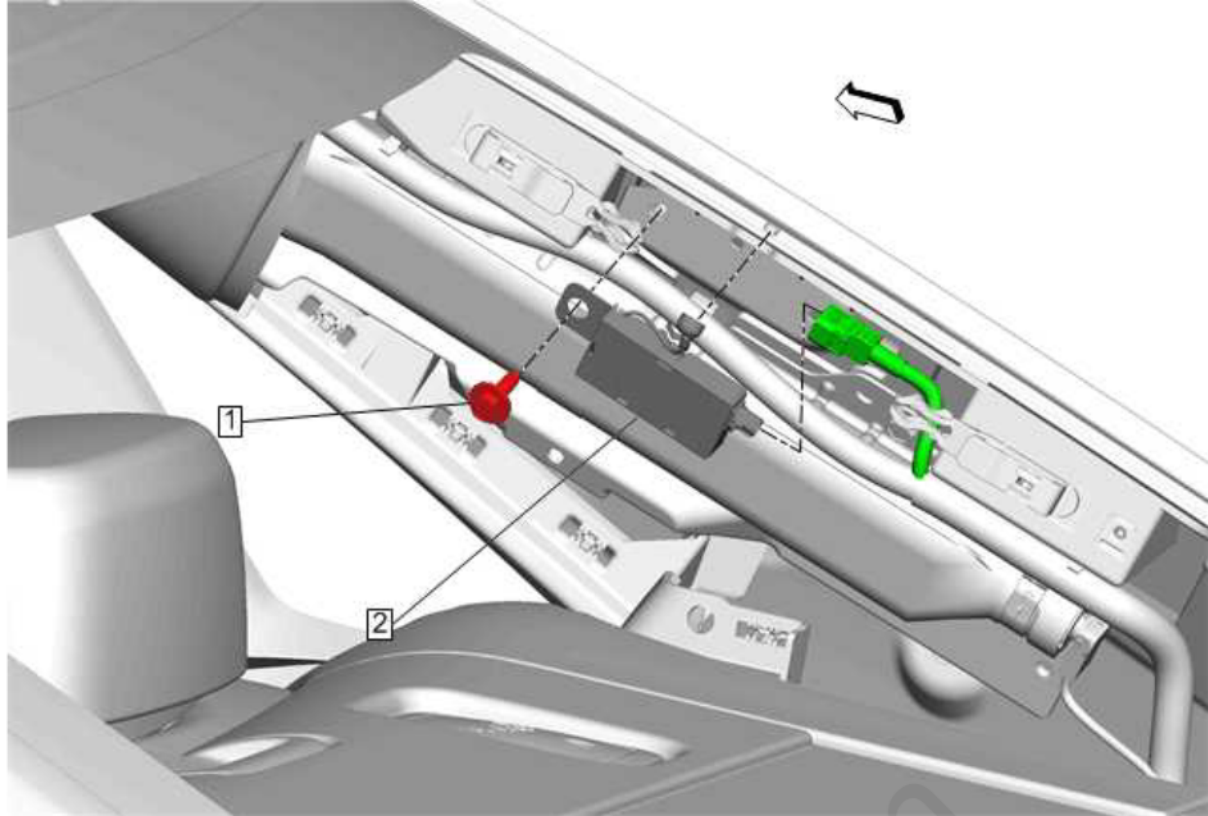


Fig. 26: Radio Antenna Amplifier (Body Side)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Body Side Rear Window Garnish Molding Replacement</u>	
1	Radio Antenna Module Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 9 N.m (80 lb in)
2	Radio Antenna Amplifier Procedure Disconnect the electrical connector.

RADIO ANTENNA AMPLIFIER REPLACEMENT (HEADLINER)

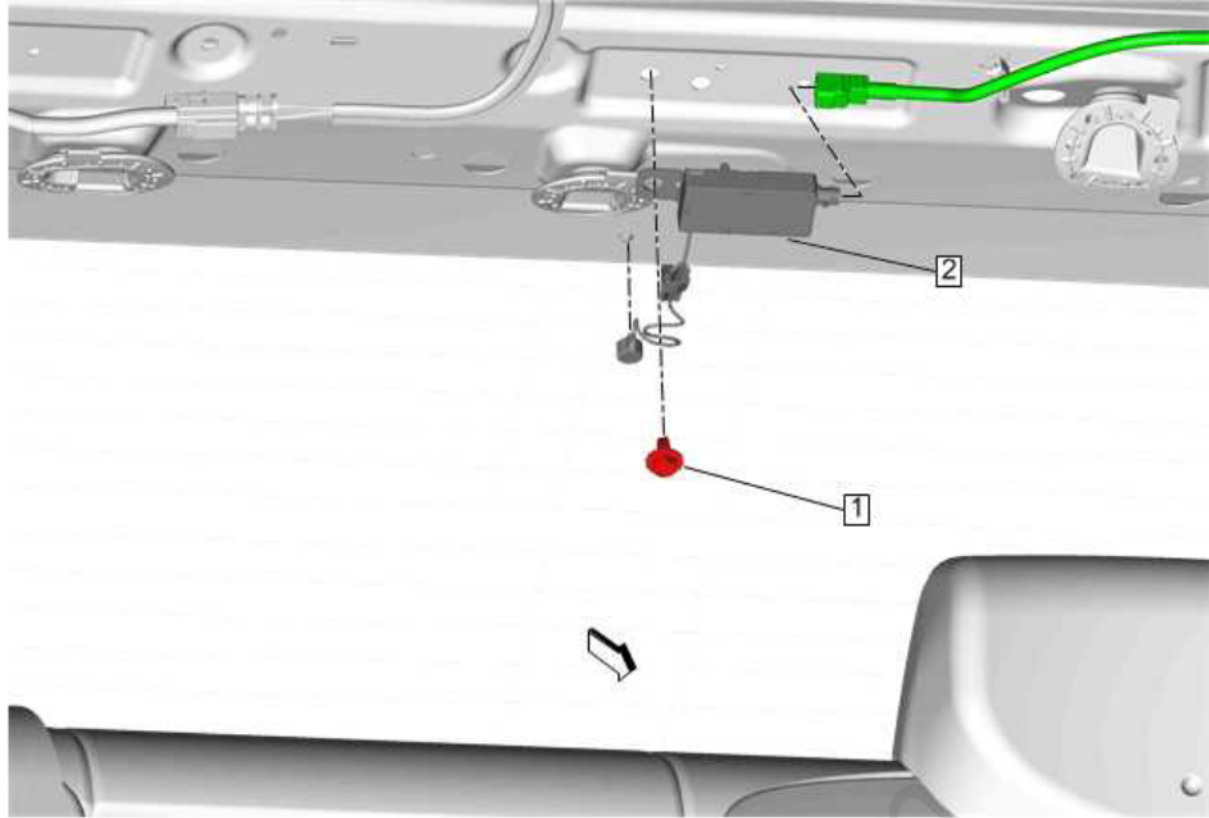


Fig. 27: Radio Antenna Amplifier (Headliner)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure It is only necessary to lower the headliner. Only do those steps in headliner replacement that will lower the headliner enough to gain access to the part. Refer to Headlining Trim Panel Replacement (Without C3U) and/or Headlining Trim Panel Replacement (With C3U)	
1	Radio Antenna Module Bolt CAUTION: Refer to Fastener Caution . Tighten 9 N.m (80 lb in)
2	Radio Antenna Amplifier Procedure 1. Disconnect the electrical connector. 2. Release the wire lead retainer. 3. Unsnap the wire from the glass.

TELEVISION ANTENNA CABLE REPLACEMENT

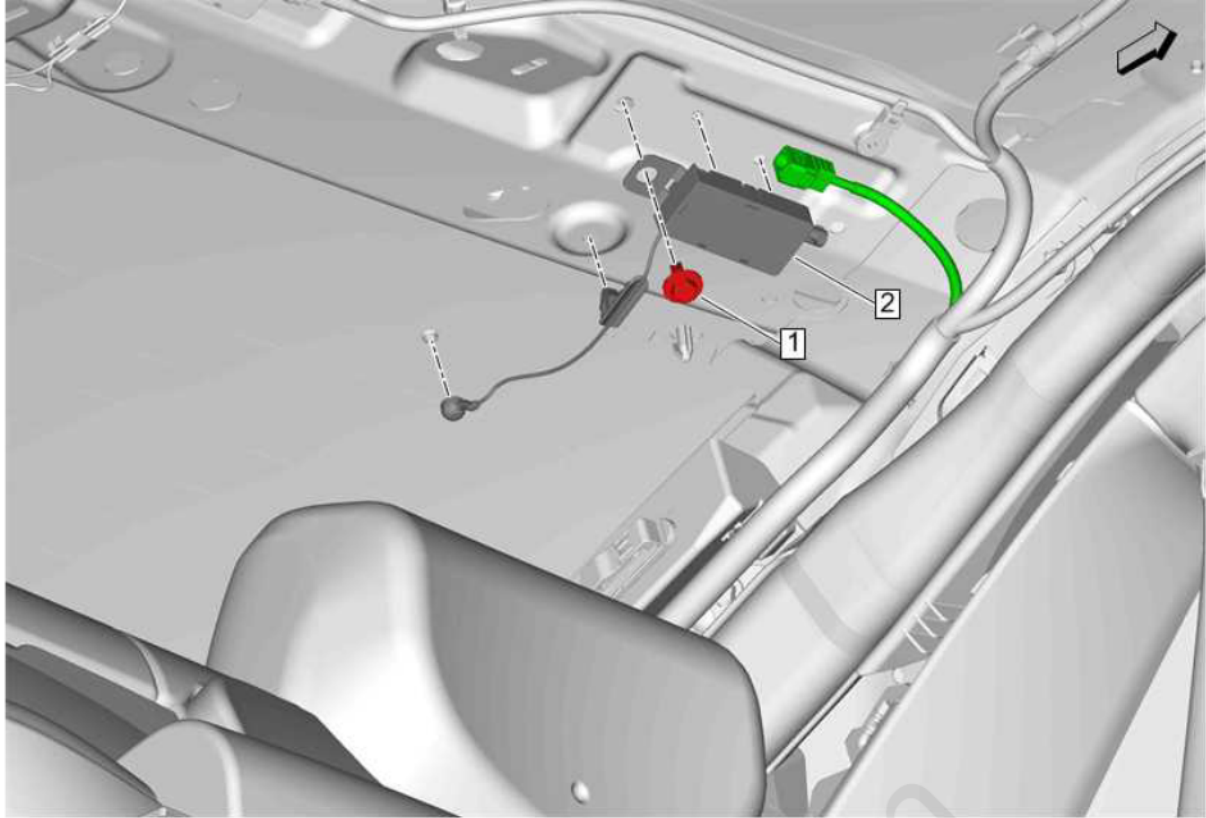


Fig. 28: Television Antenna Cable

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure It is only necessary to lower the headlining. Only do those steps in the headlining procedure that will allow access to the component being removed. Refer to Headlining Trim Panel Replacement (Without C3U) and/or Headlining Trim Panel Replacement (With C3U) .	
1	Radio Antenna Module Bolt CAUTION: Fastener Caution Tighten 9 N.m (80 lb in)
2	Television Antenna Cable Procedure 1. Disconnect the electrical connector. 2. Unsnap the wire from the glass.

VIDEO PLAYER REPLACEMENT

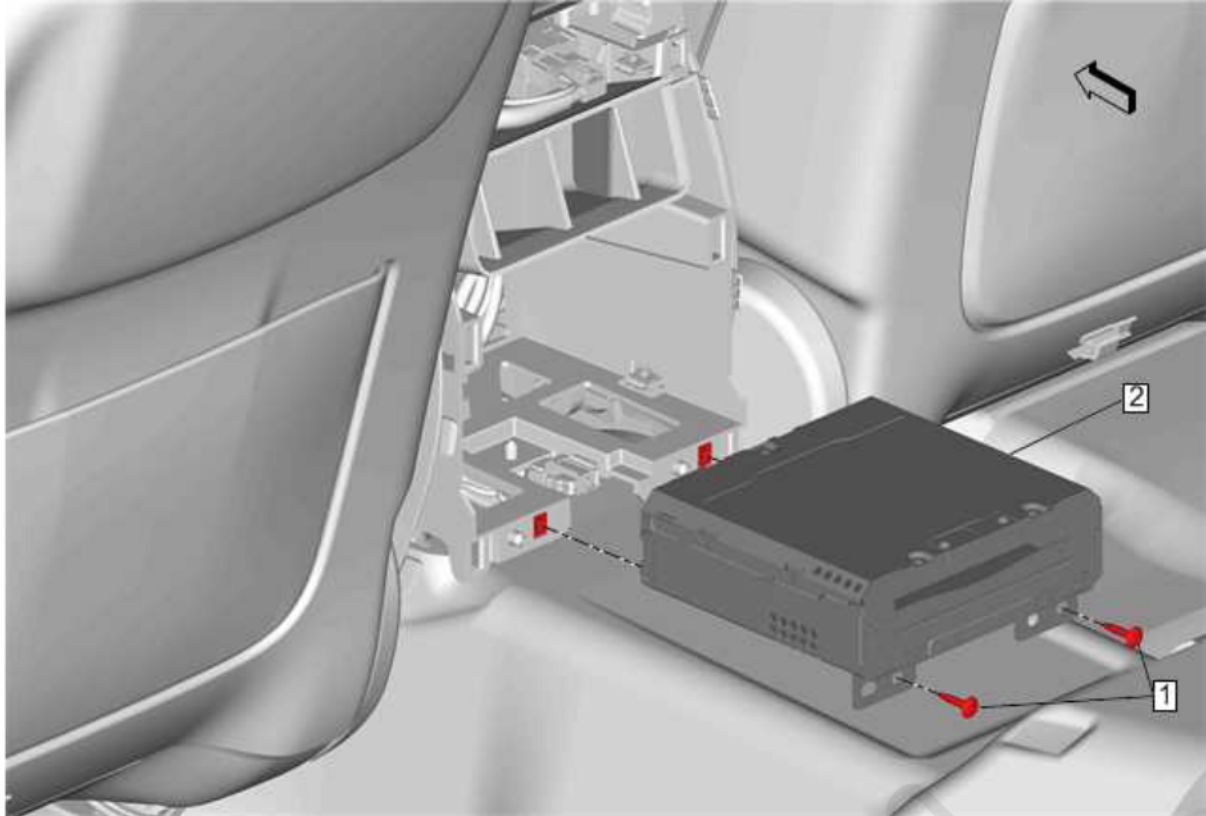


Fig. 29: Video Player

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Front Floor Console Extension Panel Replacement - Left Side	
1	Front Floor Console Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Video Player Procedure Use a 90 degree pick to release the connector position assurances and connectors.

INFOTAINMENT CONTROL SWITCH REPLACEMENT

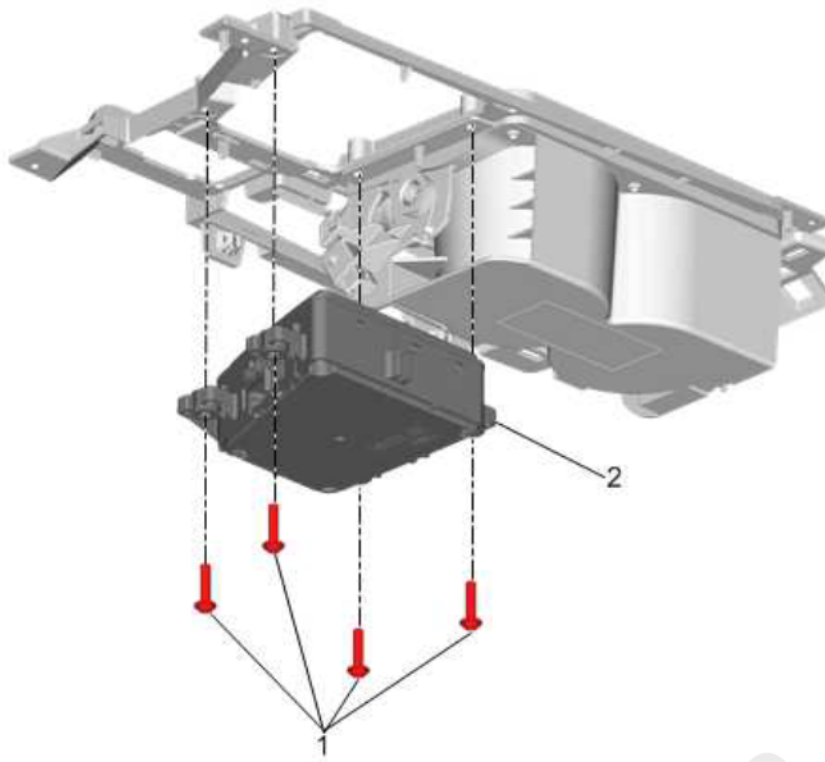


Fig. 30: Infotainment Control Switch
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
<u>Front Floor Console Applique Replacement</u>	
1	Front Floor Console Bolt [4x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Infotainment Control Switch

VIDEO DISPLAY REPLACEMENT

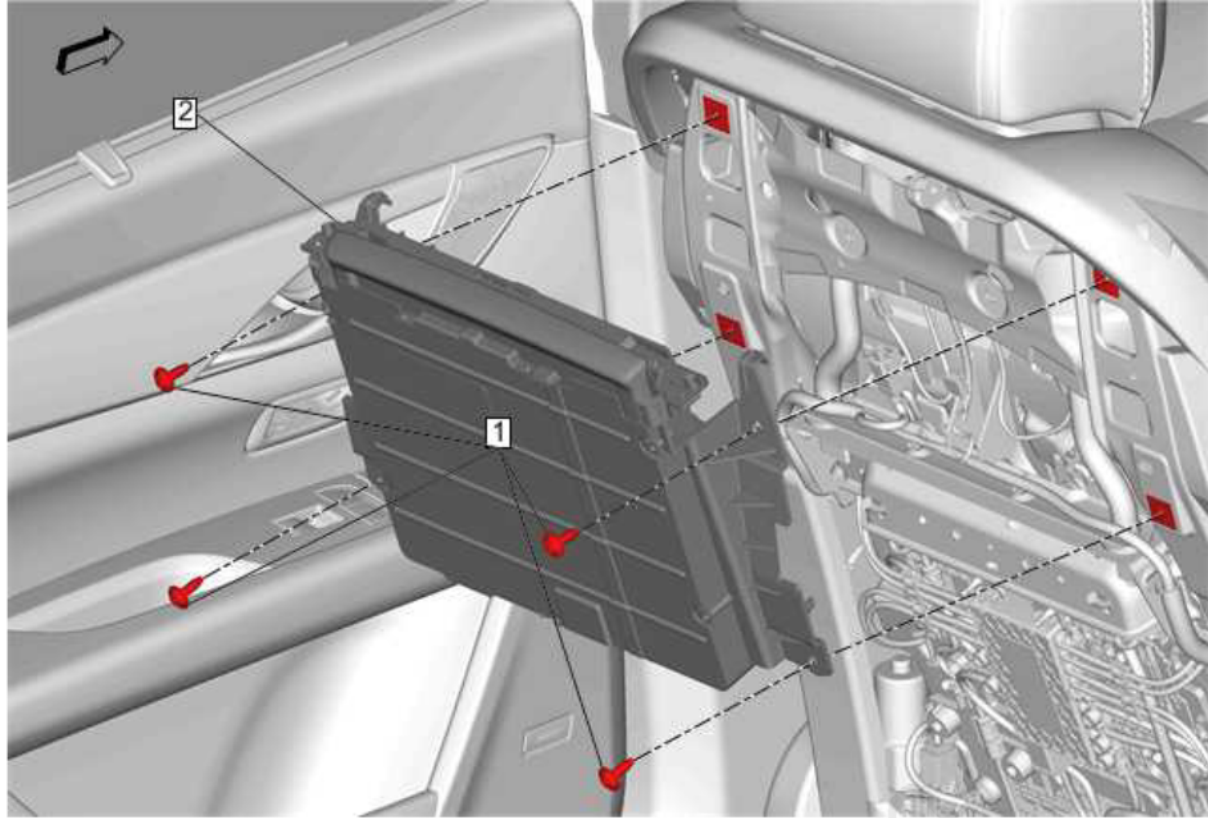


Fig. 31: Video Display

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Front Seat Back Cushion Finish Panel Replacement (without UWG) Front Seat Back Cushion Finish Panel Replacement (with UWG)	
1	Video Display Bracket Bolt [4x] CAUTION: Refer to Fastener Caution . Tighten 7 N.m (62 lb in)
2	Video Display

VIDEO DISPLAY BEZEL REPLACEMENT

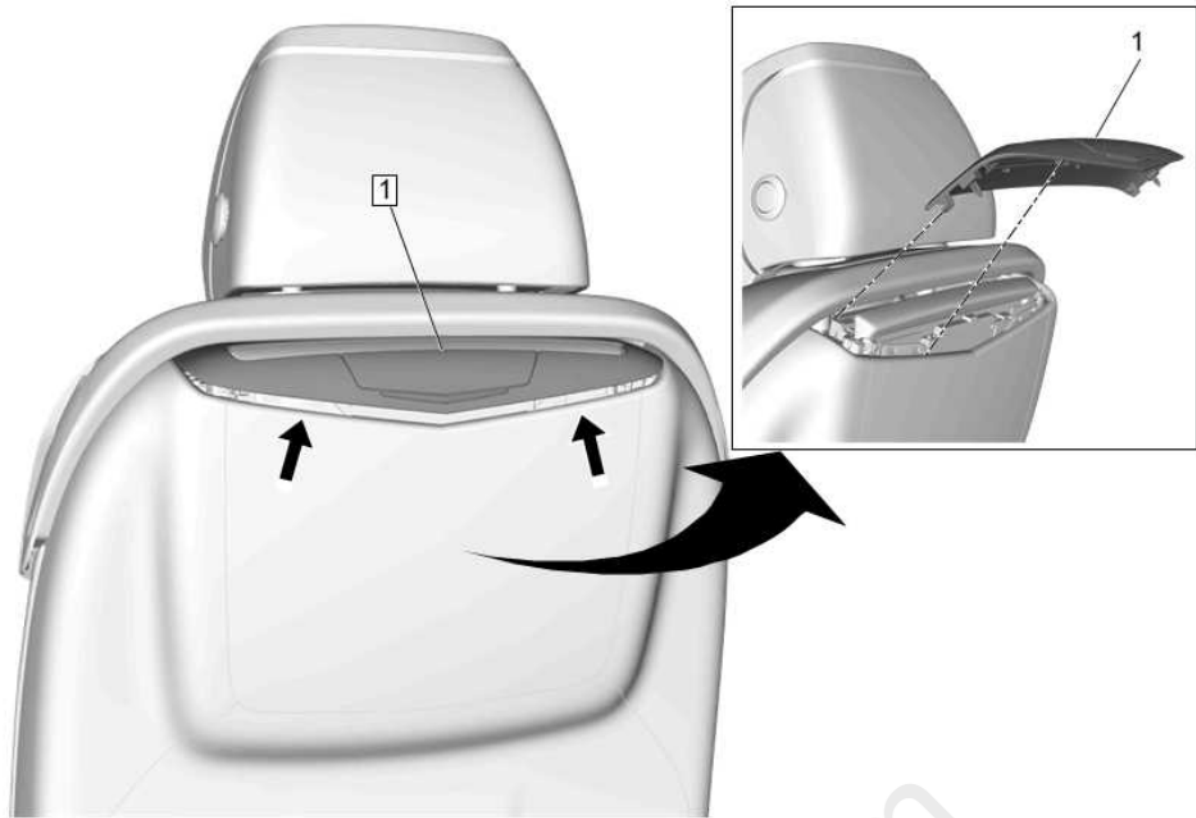


Fig. 32: Video Display Bezel

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Video Display Bezel Procedure 1. Using a flat-bladed plastic trim tool, start at the bottom center of the bezel and slide the tool over to locate, and release the two retainers. 2. Lift the bezel up and disengage it from the seat frame.

RADIO FRONT CENTER SPEAKER REPLACEMENT (UQA, UQS)

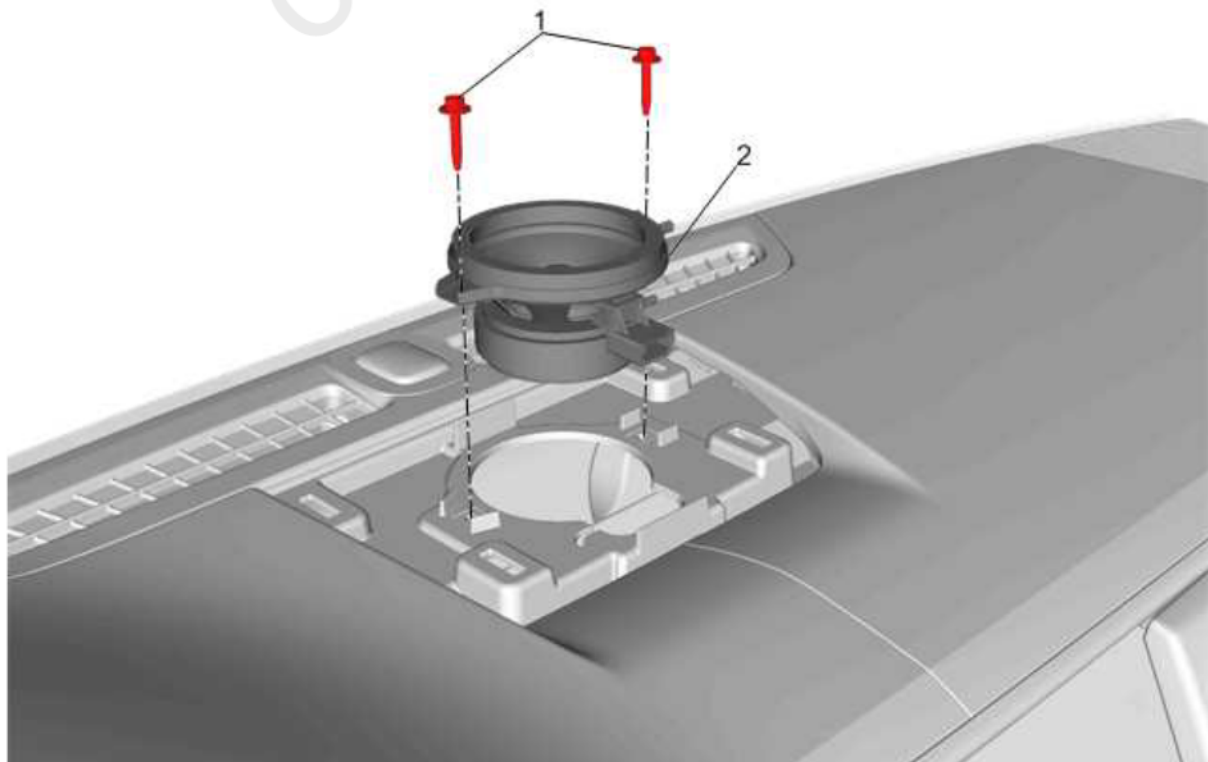


Fig. 33: Radio Front Center Speaker (UQA, UQS)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Radio Front Center Speaker Grille Replacement</u>	
1	Radio Front Center Speaker Bolt [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Radio Front Center Speaker Procedure Disconnect the electrical connector.

RADIO FRONT CENTER SPEAKER REPLACEMENT (UQH)

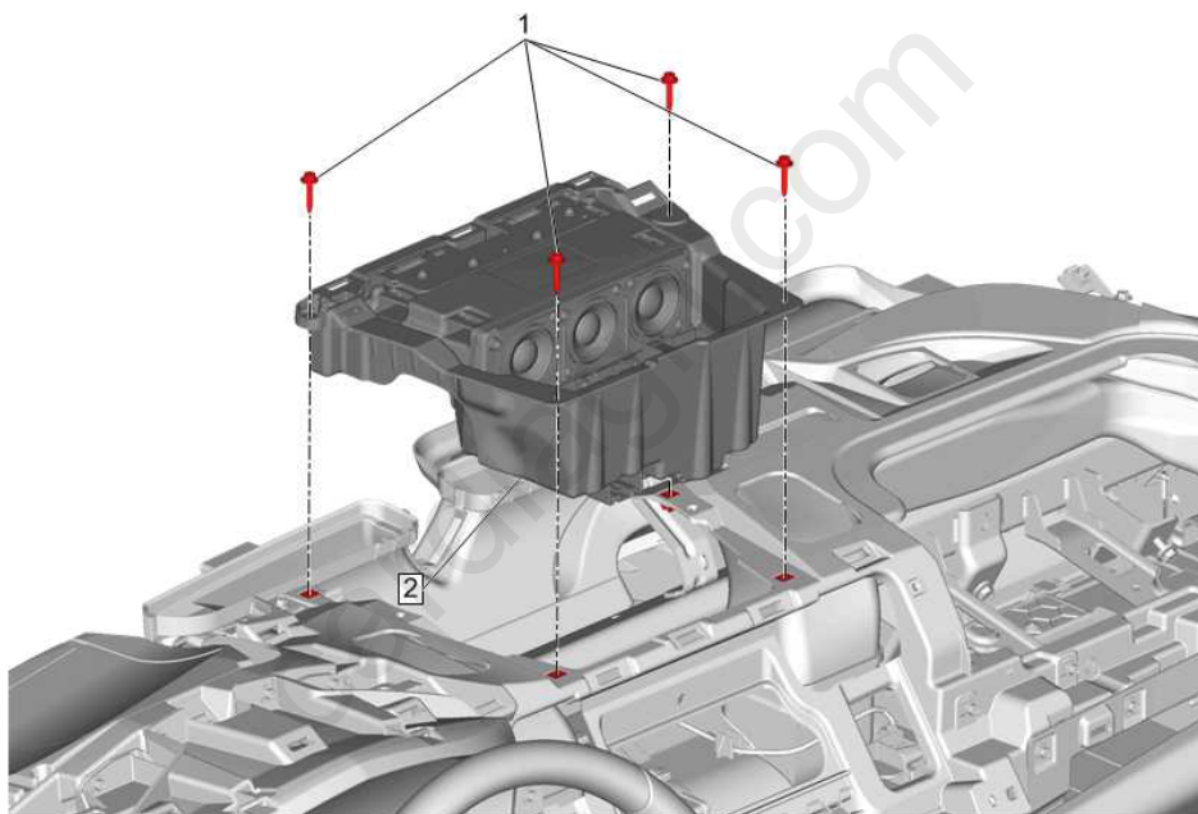


Fig. 34: Radio Front Center Speaker (UQH)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Radio Control Assembly Replacement</u>	
1	Radio Front Center Speaker Bolt [4x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)

Callout	Component Name
2	Radio Front Center Speaker Procedure Disconnect the electrical connector.

RADIO FRONT SPEAKER GRILLE REPLACEMENT

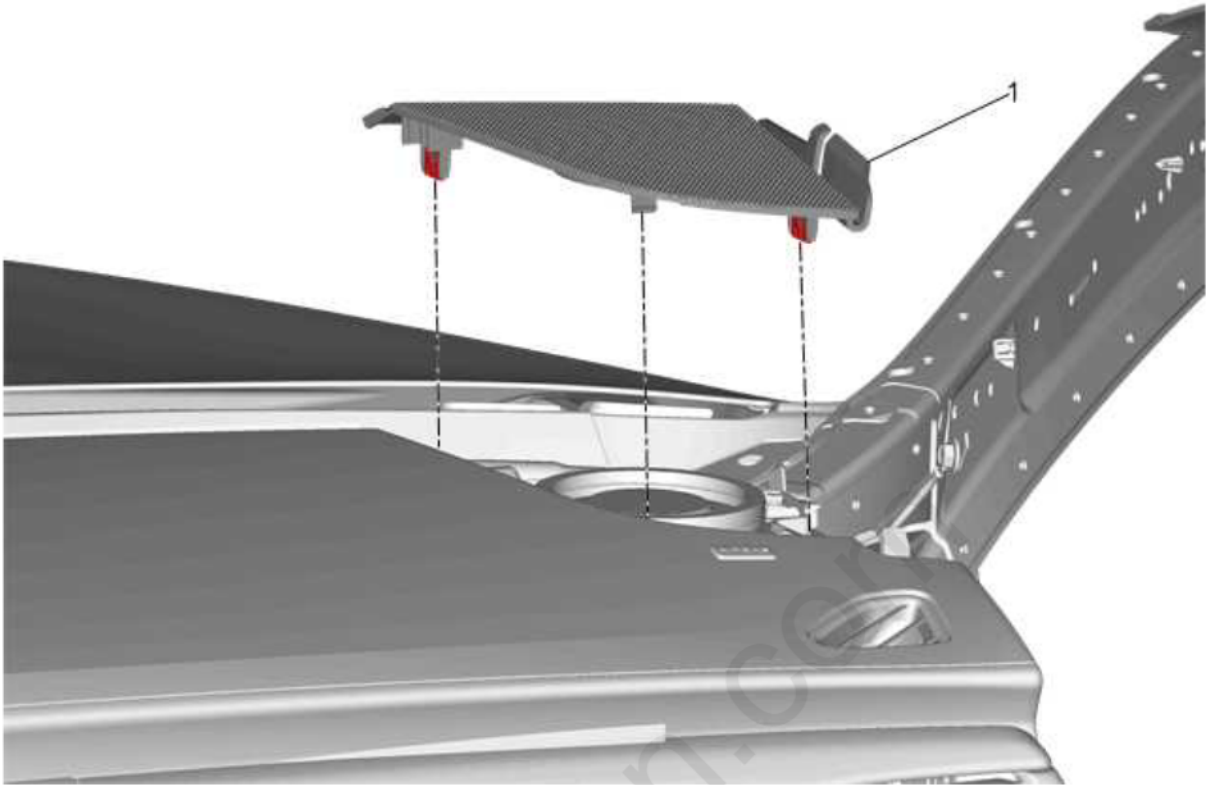


Fig. 35: Radio Front Speaker Grille
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Windshield Garnish Molding Replacement</u>	
1	Radio Front Speaker Grille Procedure Use a flat bladed plastic tool to remove.

RADIO FRONT CENTER SPEAKER GRILLE REPLACEMENT

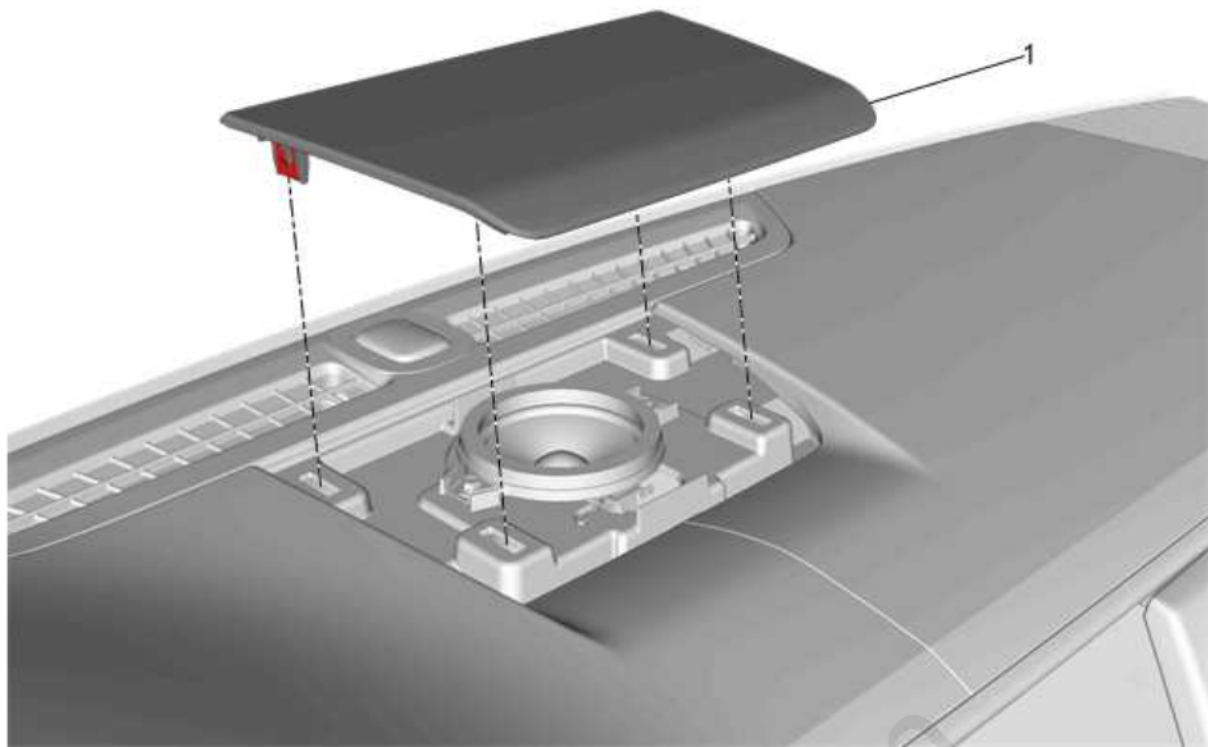


Fig. 36: Radio Front Center Speaker Grille
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Radio Front Center Speaker Grille Procedure Use a flat bladed plastic tool to remove.

RADIO REAR SPEAKER GRILLE REPLACEMENT

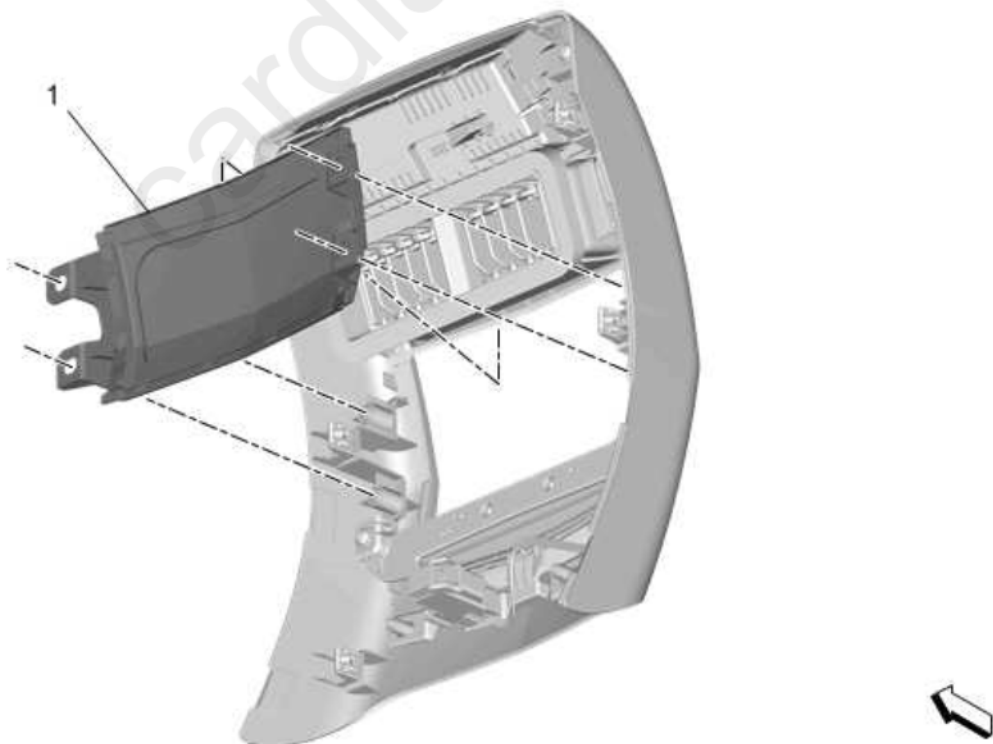


Fig. 37: Radio Rear Speaker Grille
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

Callout	Component Name
Preliminary Procedure	
<u>Radio Front Floor Console Speaker Replacement</u>	
1	Radio Rear Speaker Grille

RADIO FRONT SPEAKER REPLACEMENT

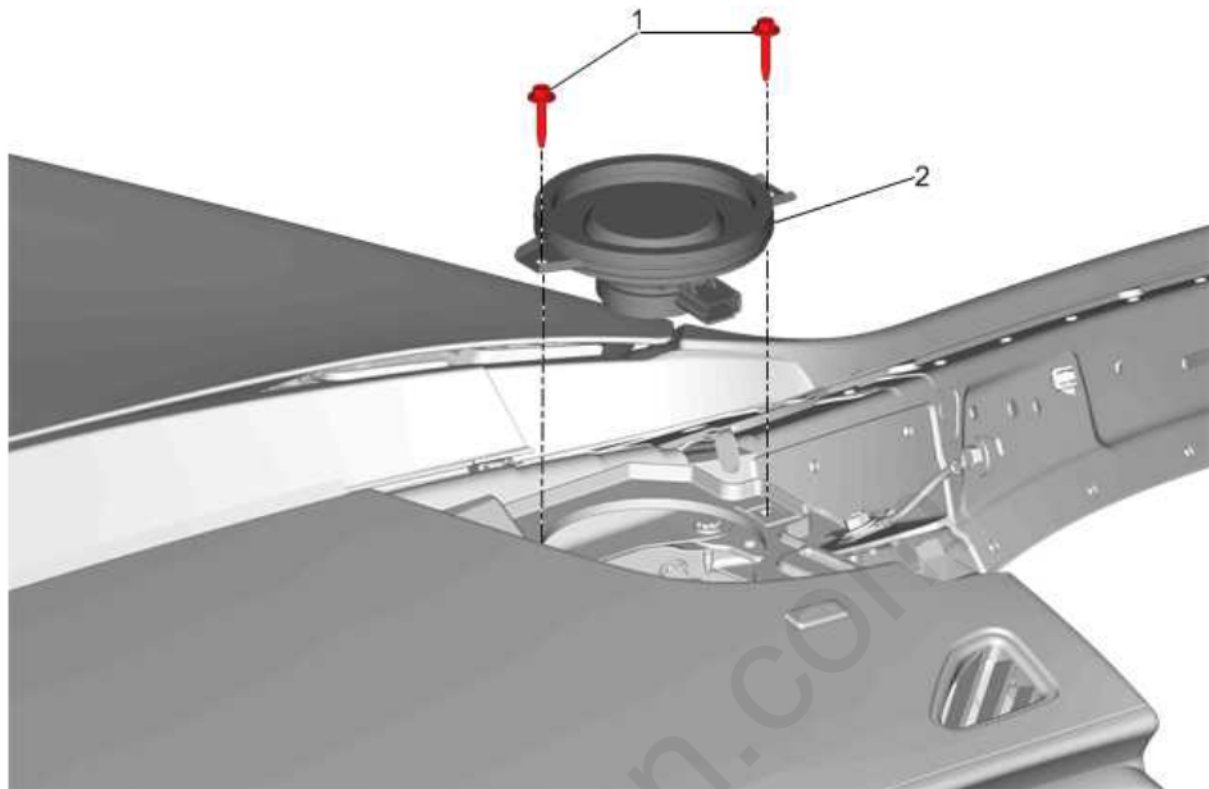


Fig. 38: Radio Front Speaker

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
<u>Radio Front Speaker Grille Replacement</u>	
1	Radio Front Speaker Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Radio Front Speaker Procedure Disconnect the electrical connector.

RADIO WINDSHIELD SIDE GARNISH MOLDING SPEAKER REPLACEMENT

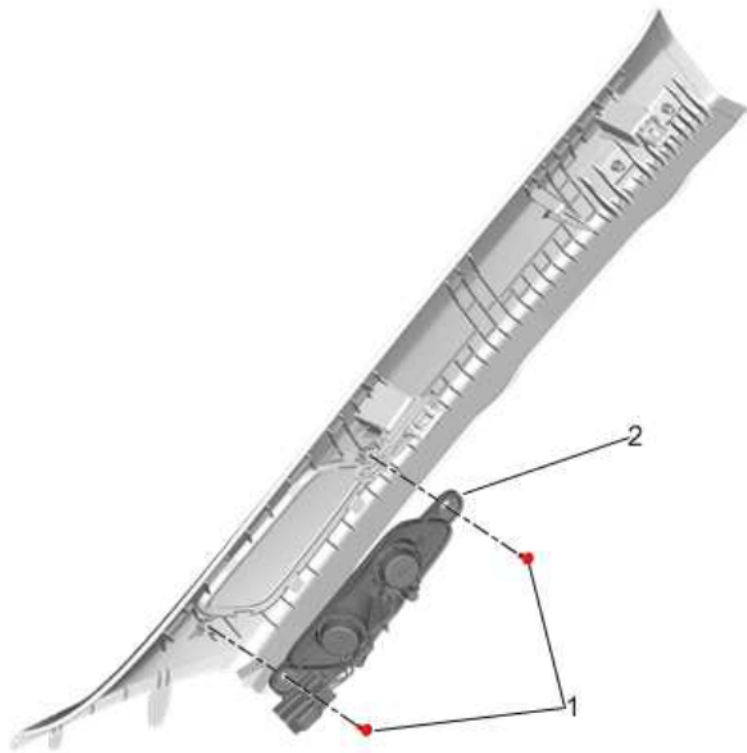


Fig. 39: Radio Windshield Side Garnish Molding Speaker
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Windshield Garnish Molding Replacement	
1	Windshield Garnish Molding Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Radio Windshield Side Garnish Molding Speaker

HIGH FREQUENCY ANTENNA REPLACEMENT

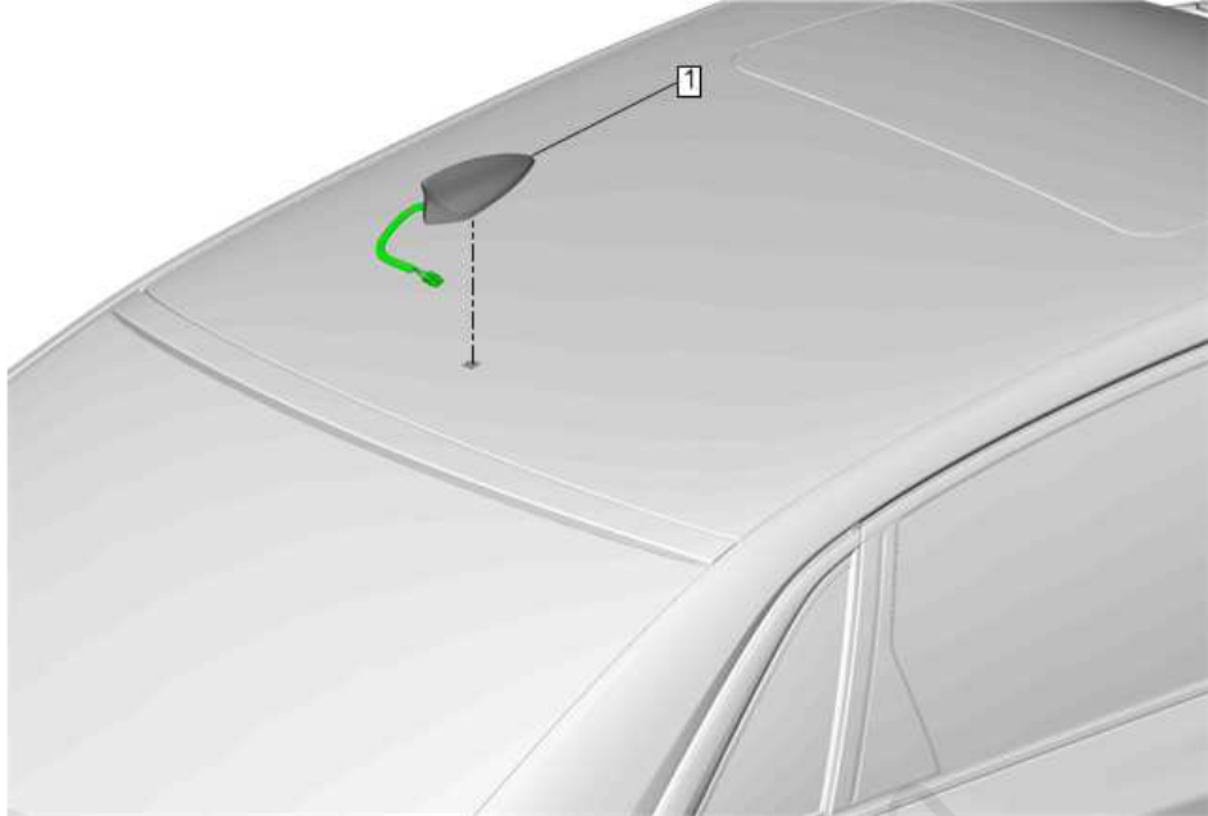


Fig. 40: High Frequency Antenna

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure It is only necessary to lower the headliner. Only do those steps in headliner replacement that will lower the headliner enough to gain access to the part. Refer to Headlining Trim Panel Replacement (Without C3U) and/or Headlining Trim Panel Replacement (With C3U)	
1	High Frequency Antenna CAUTION: Refer to Fastener Caution . Procedure 1. Loosen the integral nut. 2. Disconnect the electrical connectors. 3. Disconnect the antenna cables. 4. Feed the wiring and cable up through the hole in the roof panel. Tighten 9 N.m (80 lb in)

RADIO FRONT SIDE DOOR SPEAKER REPLACEMENT

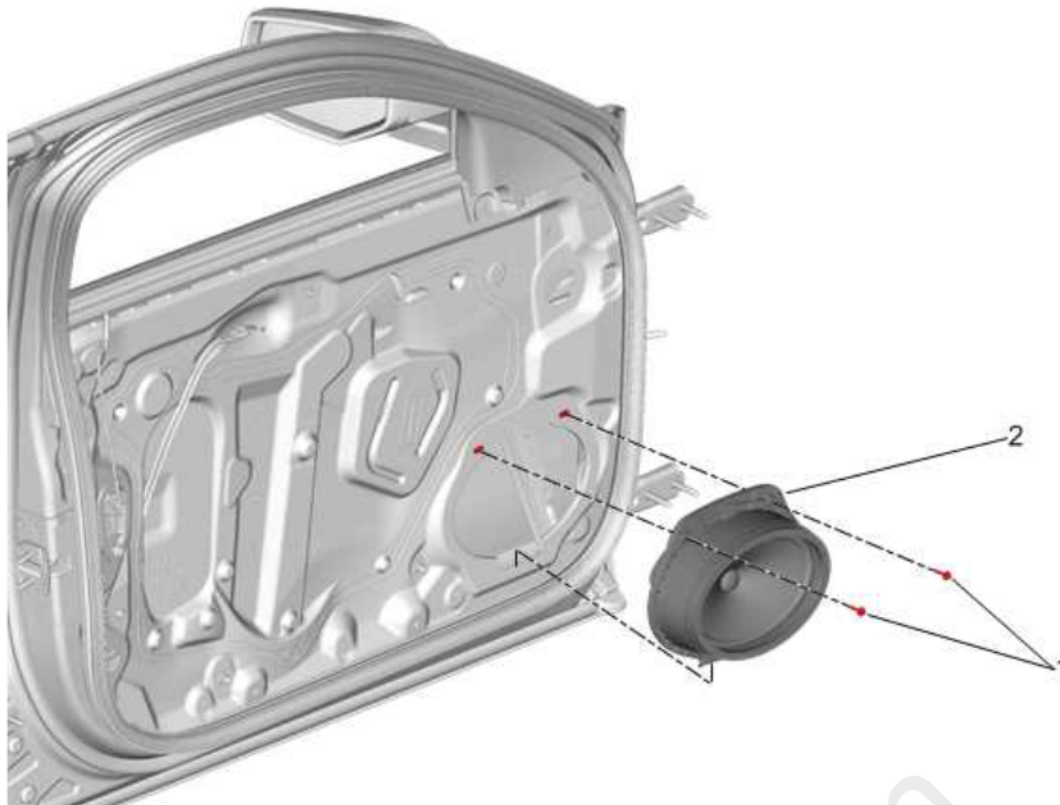


Fig. 41: Radio Front Side Door Speaker

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Front Side Door Trim Replacement	
1	Radio Front Side Door Speaker Fastener [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Radio Front Side Door Speaker Procedure Disconnect the electrical connector.

RADIO FRONT FLOOR CONSOLE SPEAKER REPLACEMENT

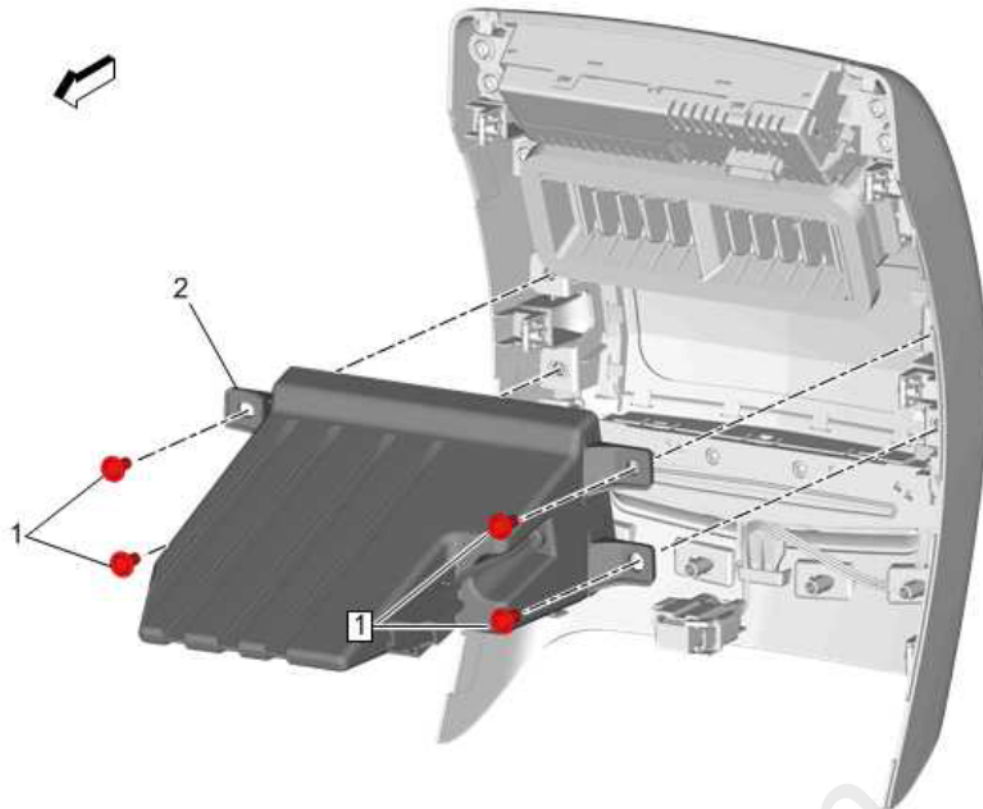


Fig. 42: Radio Front Floor Console Speaker
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
Front Floor Console Rear Trim Panel Replacement	
1	Front Floor Console Bolt [4x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Radio Front Floor Console Speaker

FRONT FLOOR SPEAKER REPLACEMENT

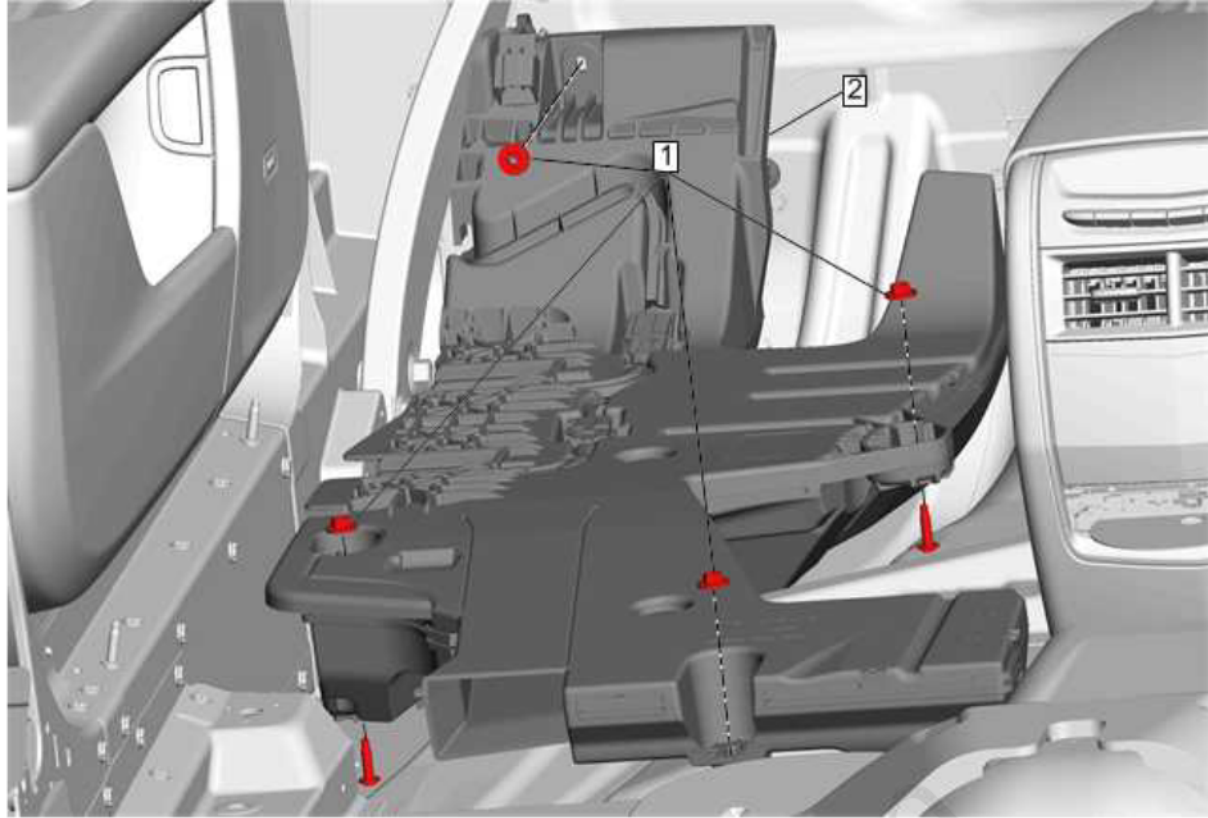


Fig. 43: Front Floor Speaker

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Front Floor Panel Carpet Replacement - Left Side or Front Floor Panel Carpet Replacement - Right Side	
1	Front Floor Speaker Nut [4x] CAUTION: Refer to Fastener Caution . Tighten 6 N.m (53 lb in)
2	Front Floor Speaker Procedure Disconnect the electrical connector.

RADIO REAR SPEAKER REPLACEMENT (UQA, UQS)

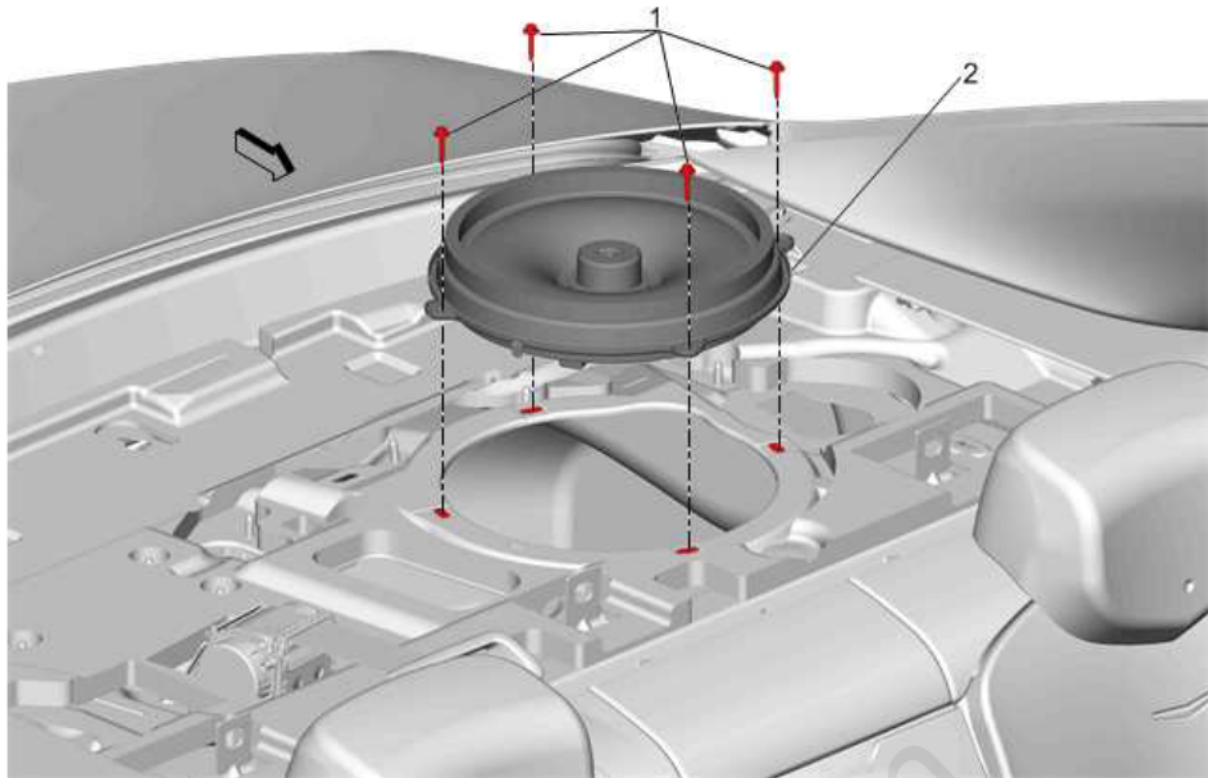


Fig. 44: Radio Rear Speaker (UQA, UQS)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Rear Window Panel Trim Replacement	
1	Radio Rear Speaker Bolt [4x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Radio Rear Speaker Procedure Disconnect the electrical connector.

RADIO REAR SPEAKER REPLACEMENT (UQH)

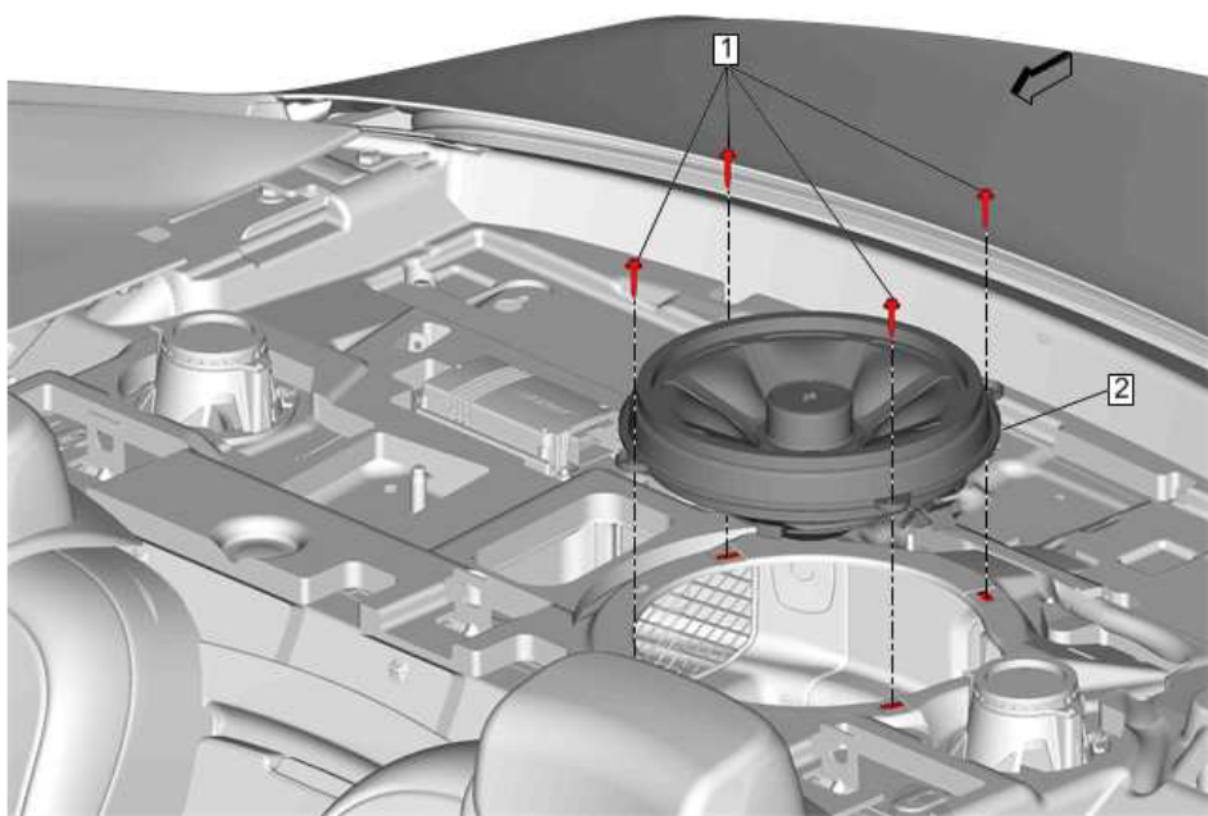


Fig. 45: Radio Rear Speaker (UQH)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Window Panel Trim Replacement</u>	
1	Radio Rear Speaker Bolt [4x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Radio Rear Speaker Procedure Disconnect the electrical connector.

RADIO REAR SURROUND SPEAKER REPLACEMENT

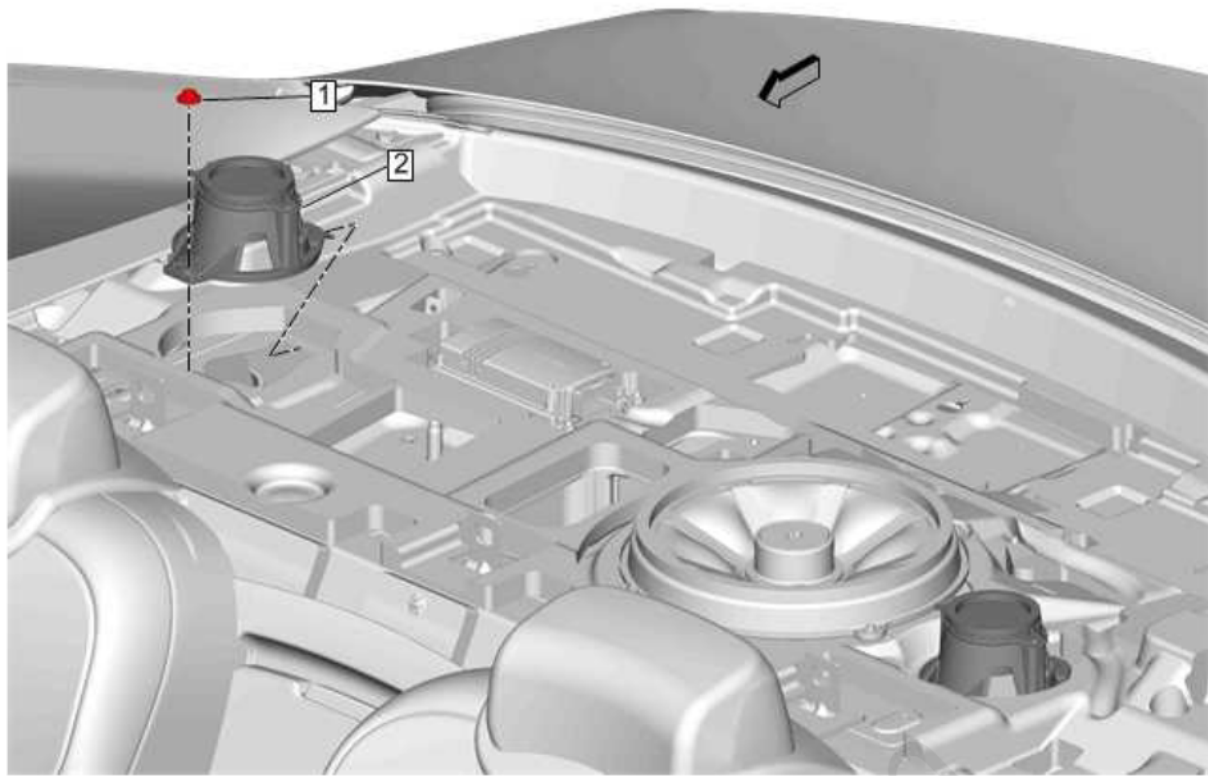


Fig. 46: Radio Rear Surround Speaker

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Window Panel Trim Replacement</u>	
1	Radio Rear Speaker Nut CAUTION: Refer to <u>Fastener Caution</u> . Tighten 6 N.m (53 lb in)
2	Radio Rear Surround Speaker Procedure Disconnect the electrical connector.

DISC EJECT SWITCH REPLACEMENT (WITH STOWAGE BIN)

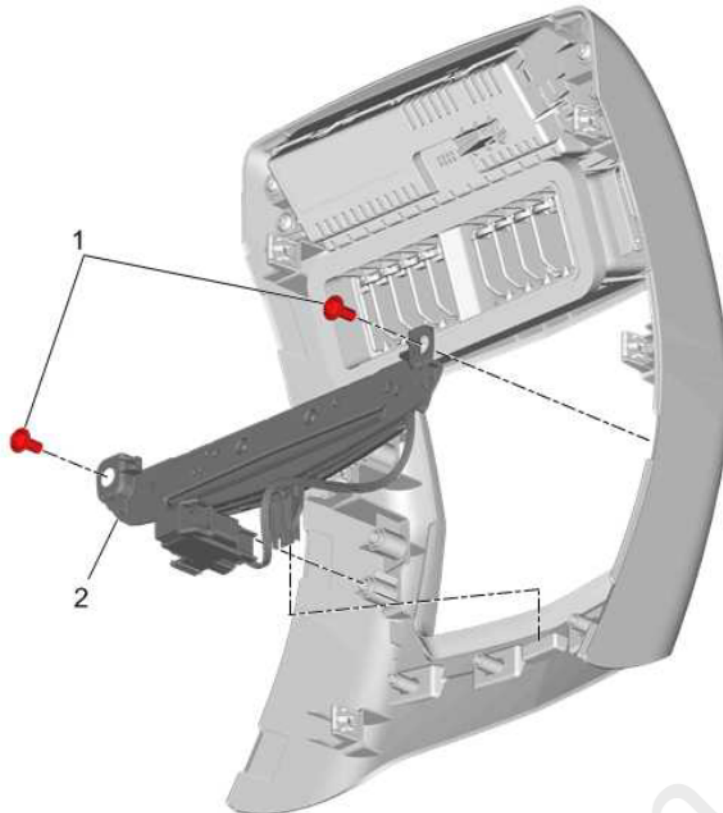


Fig. 47: Disc Eject Switch

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front floor console rear stowage tray - middle. Refer to Front Floor Console Rear Stowage Tray Replacement (Middle Without Radio Front Floor Console Speaker) Front Floor Console Rear Stowage Tray Replacement (Lower Without Radio Front Floor Console Speaker) Front Floor Console Rear Stowage Tray Replacement (Lower With Radio Front Floor Console Speaker)	
1	Front Floor Console Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Disc Eject Switch

DISC EJECT SWITCH REPLACEMENT (WITH SPEAKER)

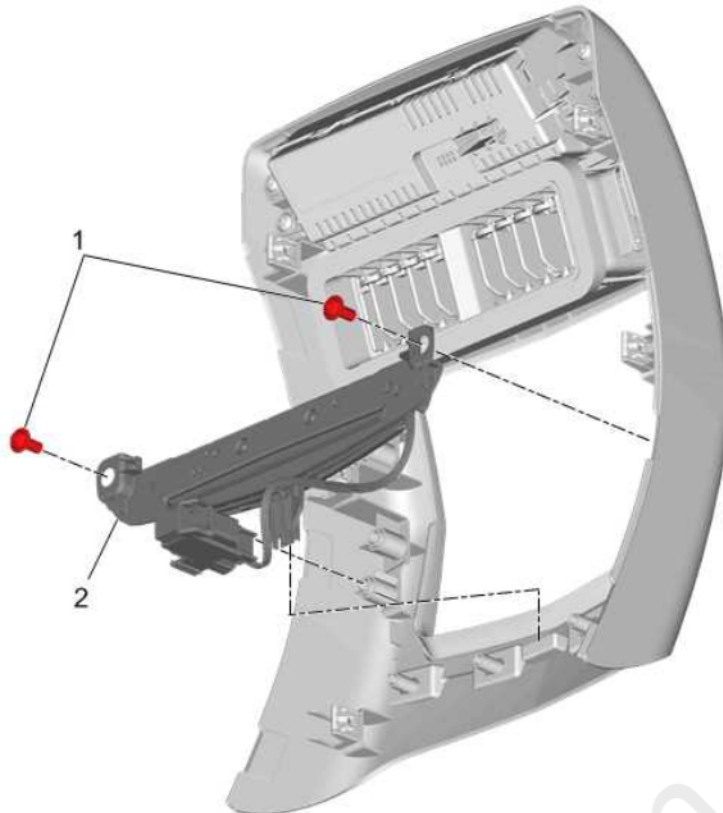


Fig. 48: Disc Eject Switch

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Radio Rear Speaker Grille Replacement</u>	
1	Front Floor Console Bolt [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Disc Eject Switch

RADIO CONTROL SWITCH REPLACEMENT - STEERING WHEEL (RIGHT UPPER)

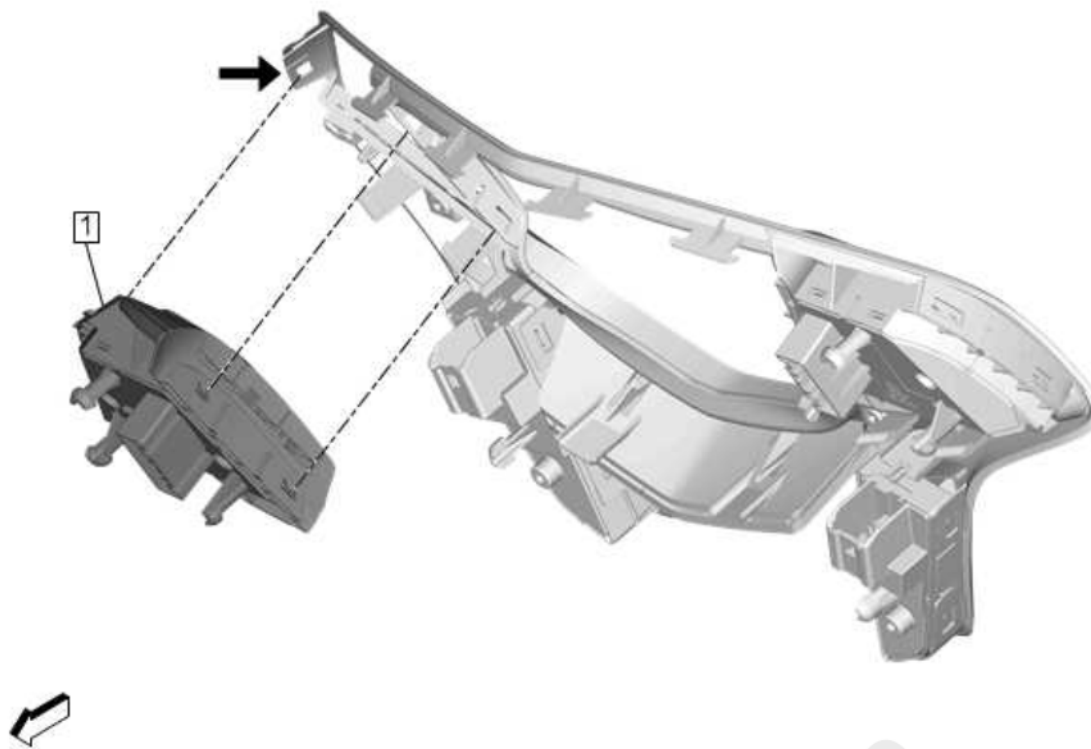


Fig. 49: Radio Control Switch - Steering Wheel (Right Upper)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
<u>Steering Wheel Spoke Cover Replacement</u>	
1	Radio Control Switch - Steering Wheel Procedure Release the retaining tabs and remove the radio control switch from the steering wheel spoke cover.

RADIO CONTROL SWITCH REPLACEMENT - STEERING WHEEL (RIGHT LOWER)

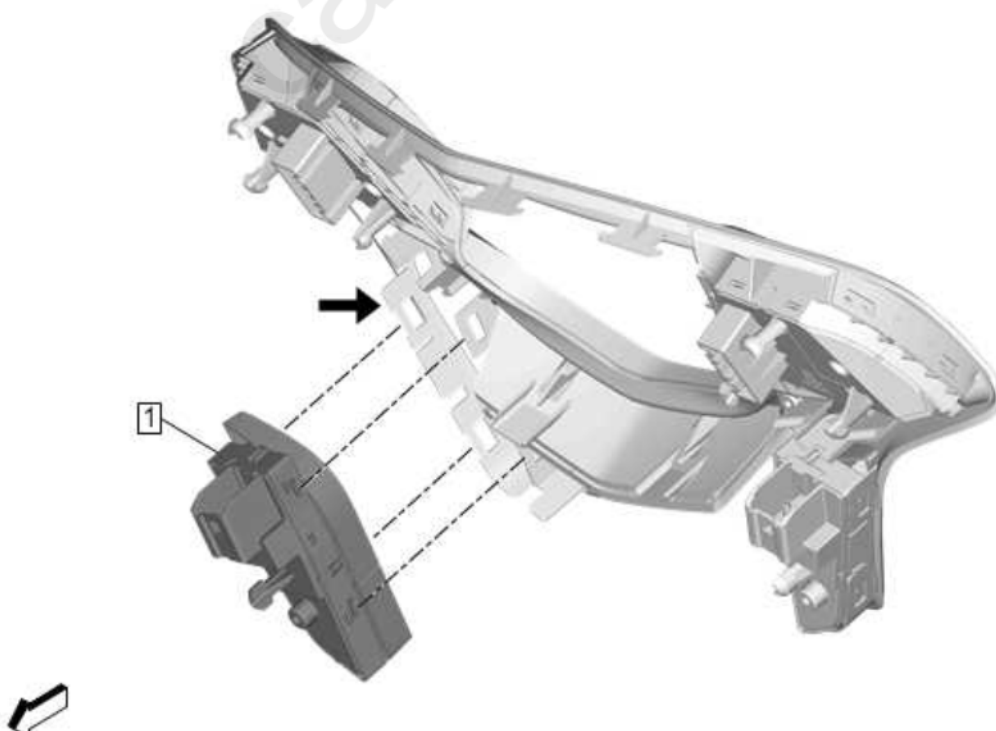


Fig. 50: Radio Control Switch - Steering Wheel (Right Lower)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Steering Wheel Spoke Cover Replacement	
1	Radio Control Switch - Steering Wheel Procedure Release the retaining tabs and remove the radio control switch from the steering wheel spoke cover.

RADIO REAR SIDE DOOR SPEAKER REPLACEMENT

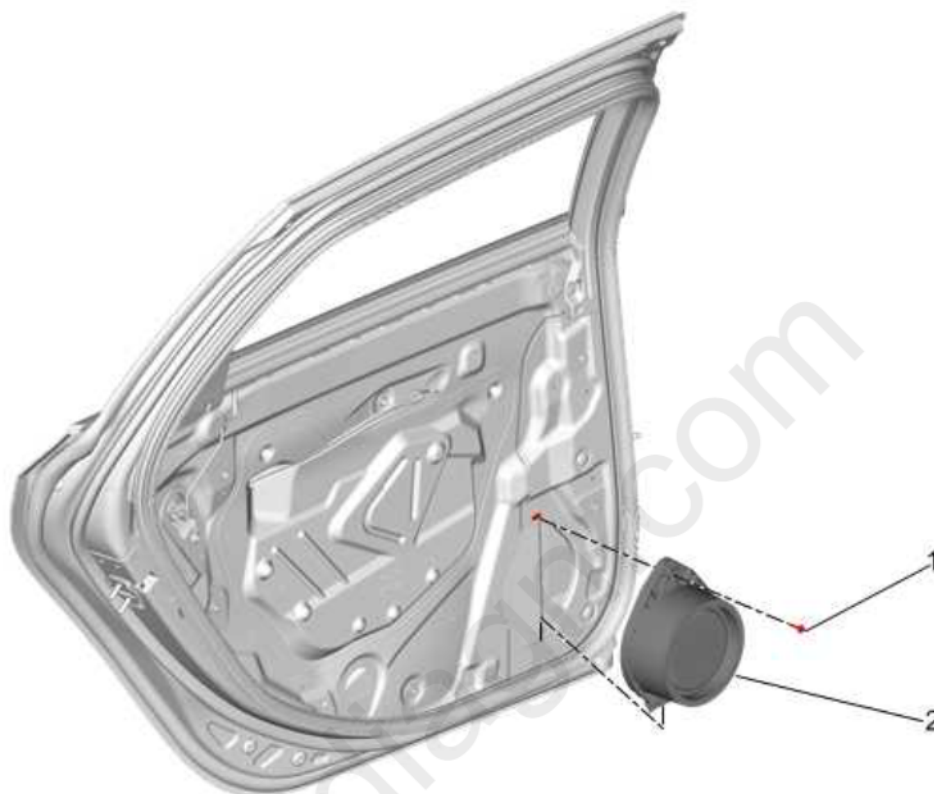


Fig. 51: Radio Rear Side Door Speaker
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Rear Side Door Trim Replacement	
1	Radio Rear Side Door Speaker Fastener CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Radio Rear Side Door Speaker Procedure Disconnect the electrical connector.

RADIO REAR SIDE DOOR UPPER SPEAKER REPLACEMENT

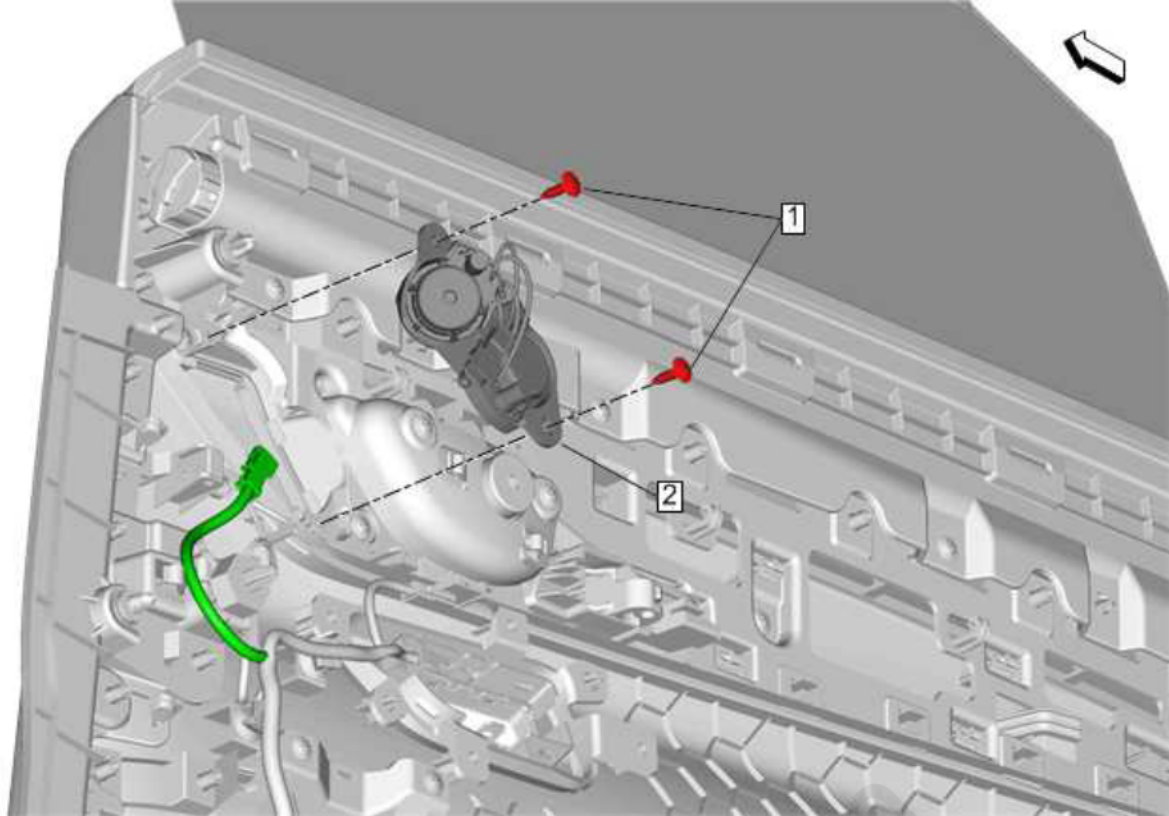


Fig. 52: Radio Rear Side Door Upper Speaker
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Side Door Trim Replacement</u>	
1	Radio Rear Side Door Upper Speaker Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Radio Rear Side Door Upper Speaker Procedure Disconnect the electrical connector.

REGULATORY EMERGENCY CALL BACKUP SPEAKER REPLACEMENT

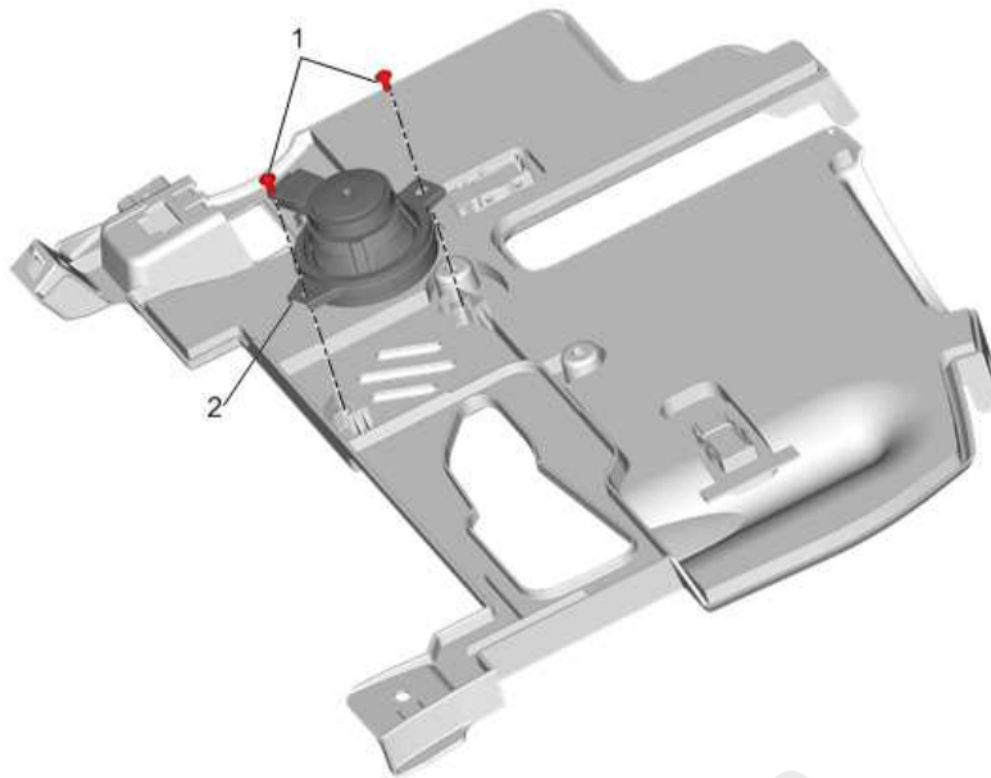


Fig. 53: Regulatory Emergency Call Backup Speaker

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Instrument Panel Lower Trim Panel Insulator Replacement - Left Side</u>	
1	Regulatory Emergency Call Backup Speaker Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 1.2 N.m (11 lb in)
2	Regulatory Emergency Call Backup Speaker

2017 ACCESSORIES & EQUIPMENT

Cellular, Entertainment and Navigation - Schematic Wiring Diagrams - CT6

SCHEMATIC WIRING DIAGRAMS

RADIO/NAVIGATION SYSTEM WIRING SCHEMATICS

Radio Power, Ground, Serial Data and Subsystem References


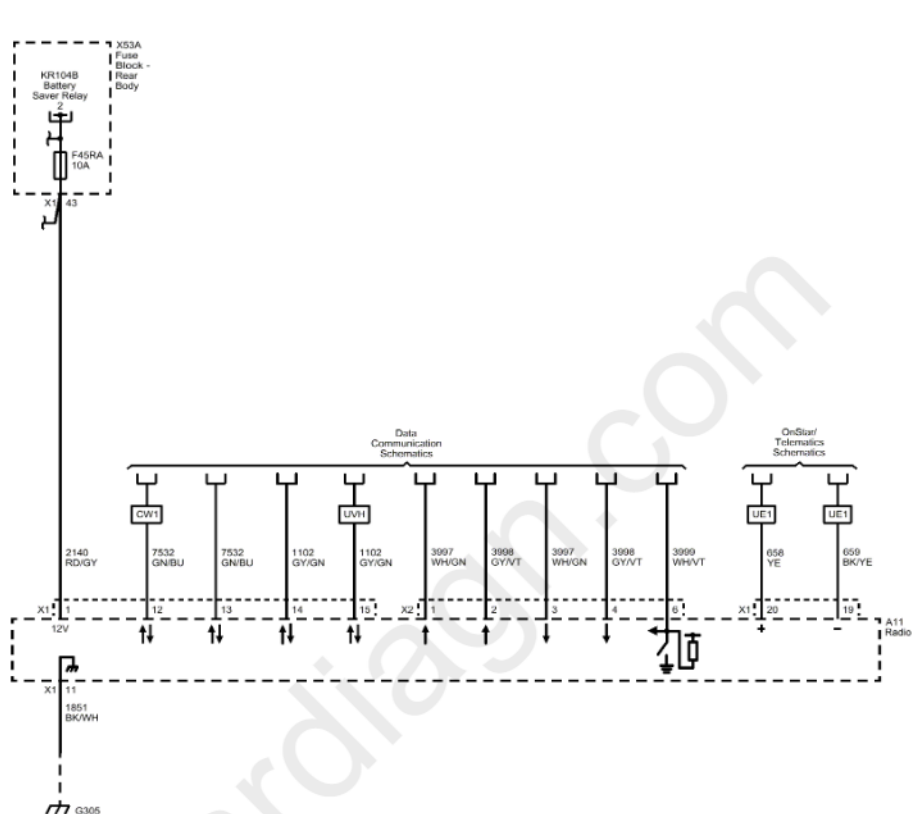



Fig. 1: Radio Power, Ground, Serial Data and Subsystem References

Courtesy of GENERAL MOTORS COMPANY

Media Disc Player Power, Ground and Serial Data (WCN)



Audio Amplifier Power, Ground, Serial Data and Subsystem References



Human Machine Interface Power, Ground, Serial Data and Subsystem References

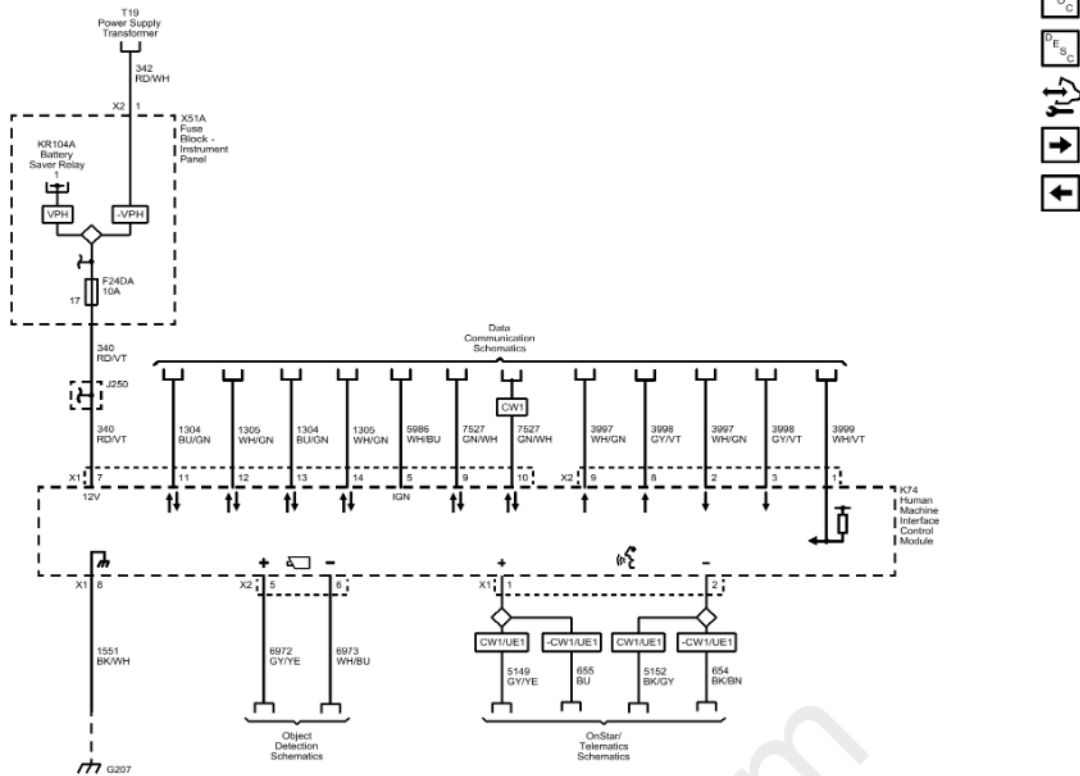


Fig. 4: Human Machine Interface Power, Ground, Serial Data and Subsystem References
Courtesy of GENERAL MOTORS COMPANY

Navigation Control Module (CW1)


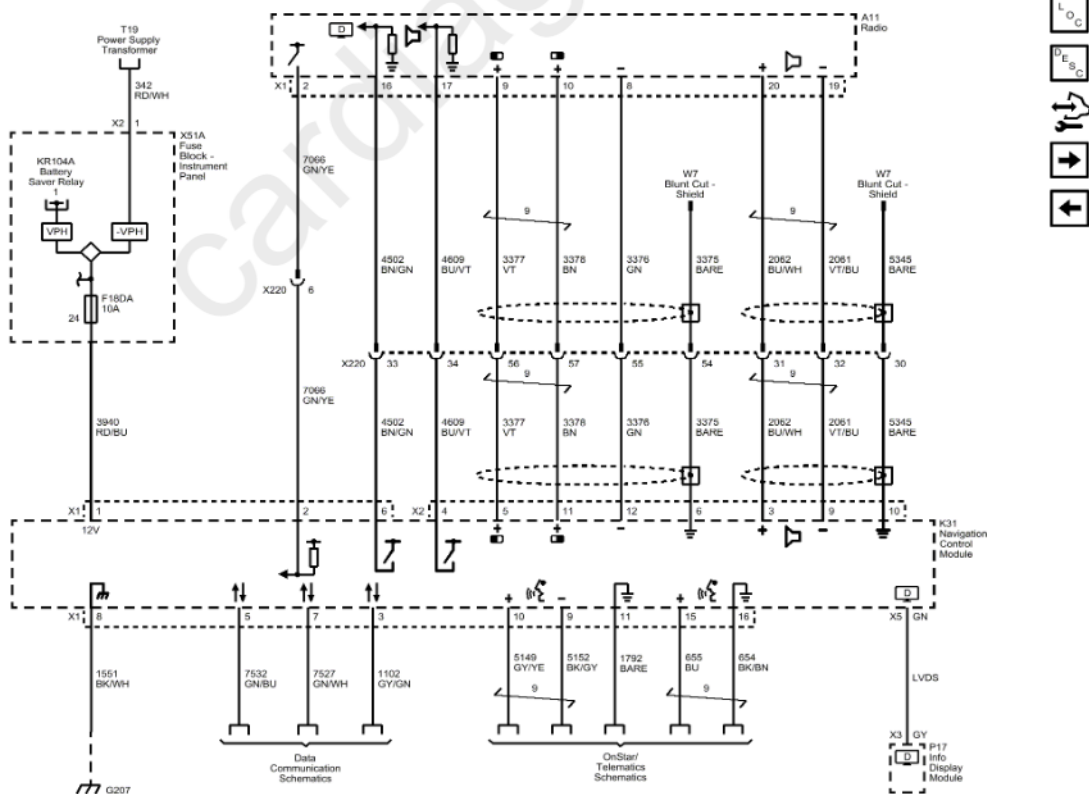



Fig. 5: Navigation Control Module (CW1)
Courtesy of GENERAL MOTORS COMPANY

Info Display



Courtesy of GENERAL MOTORS COMPANY

Speakers (UQS)



Courtesy of GENERAL MOTORS COMPANY

Speakers - Front Doors, Front Tweeters, Instrument Panel and Center Console (UQH)

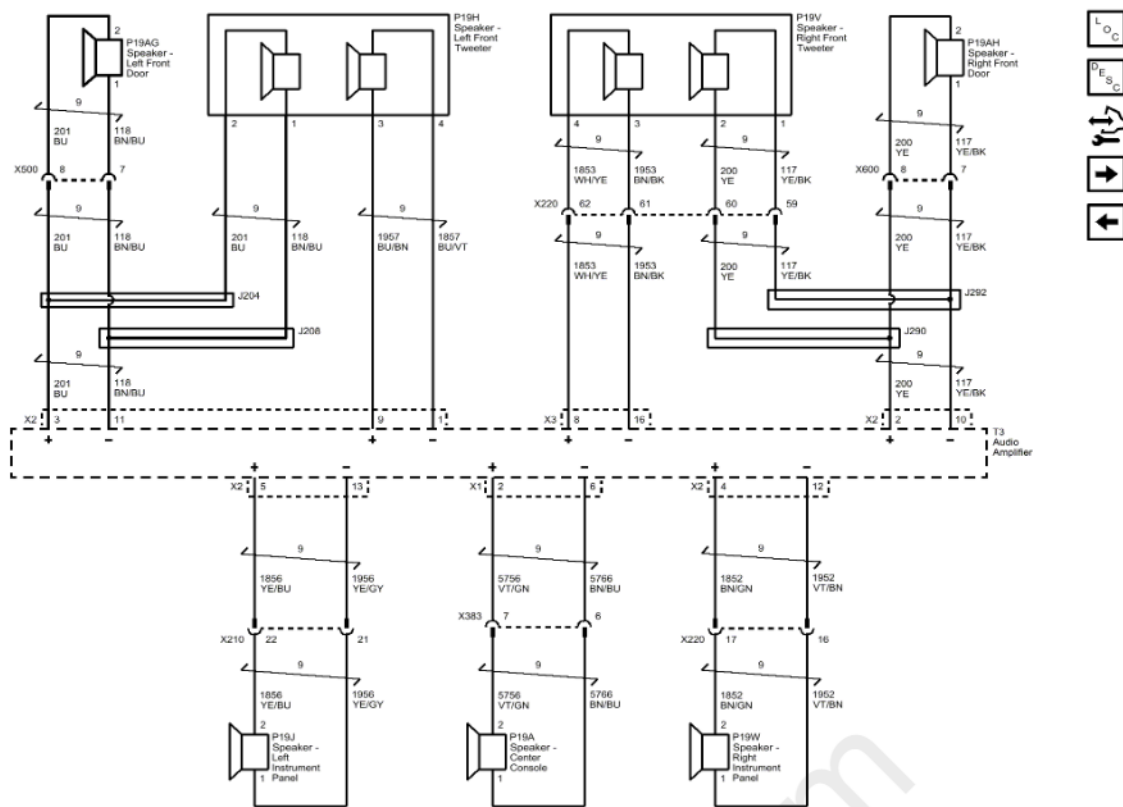


Fig. 10: Speakers - Front Doors, Front Tweeters, Instrument Panel and Center Console (UQH)
 Courtesy of GENERAL MOTORS COMPANY

Speakers - Front Seats (UQH)

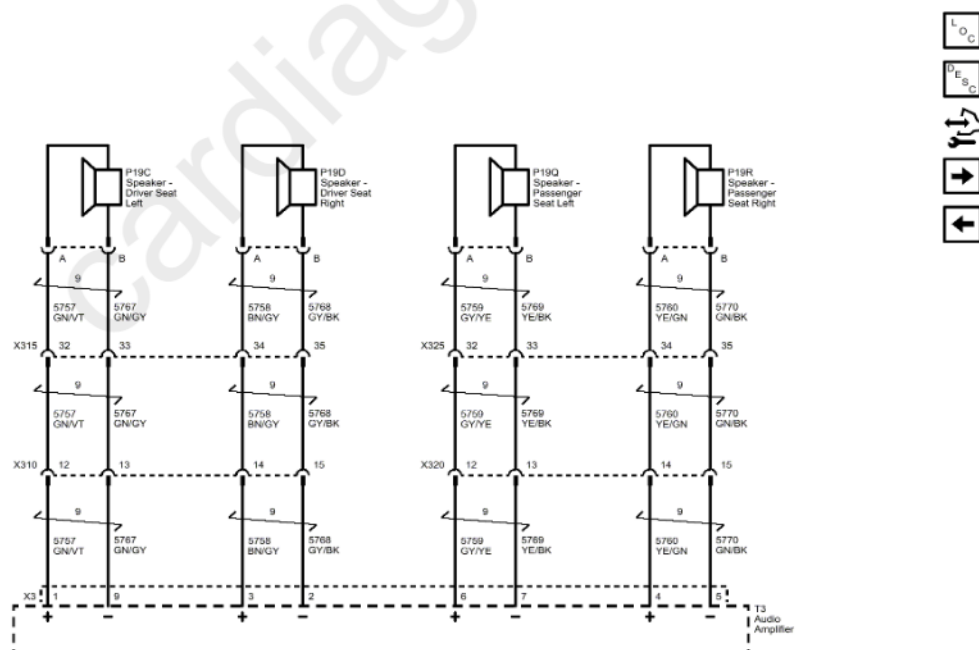


Fig. 11: Speakers - Front Seats (UQH)
 Courtesy of GENERAL MOTORS COMPANY

Speakers - Rear Doors and Rear Window Shelf (UQH)

Speakers - Left Subwoofer (UQH)

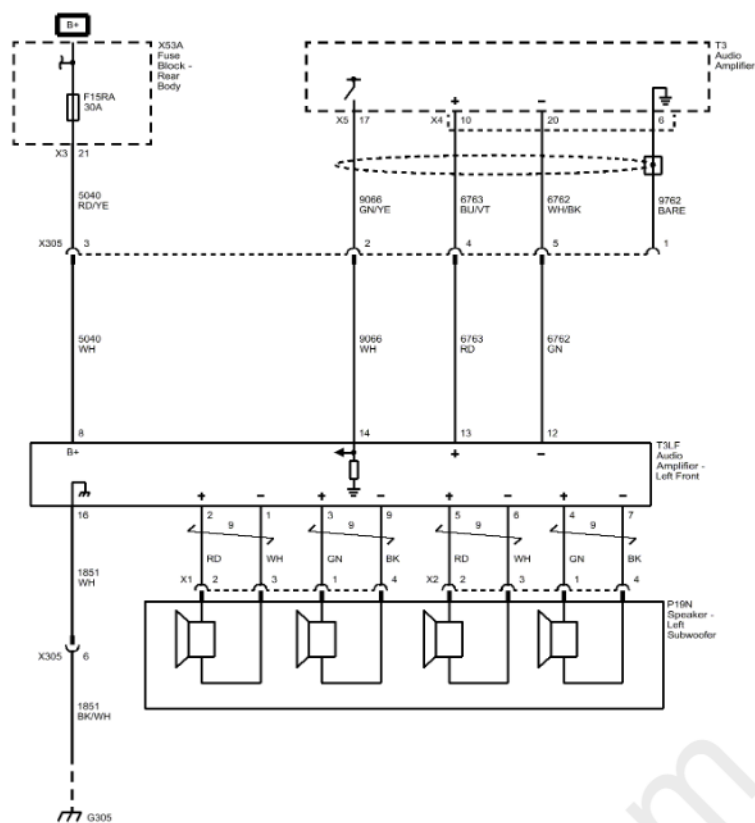


Fig. 14: Speakers - Left Subwoofer (UQH)
Courtesy of GENERAL MOTORS COMPANY

Speakers - Right Subwoofer (UQH)

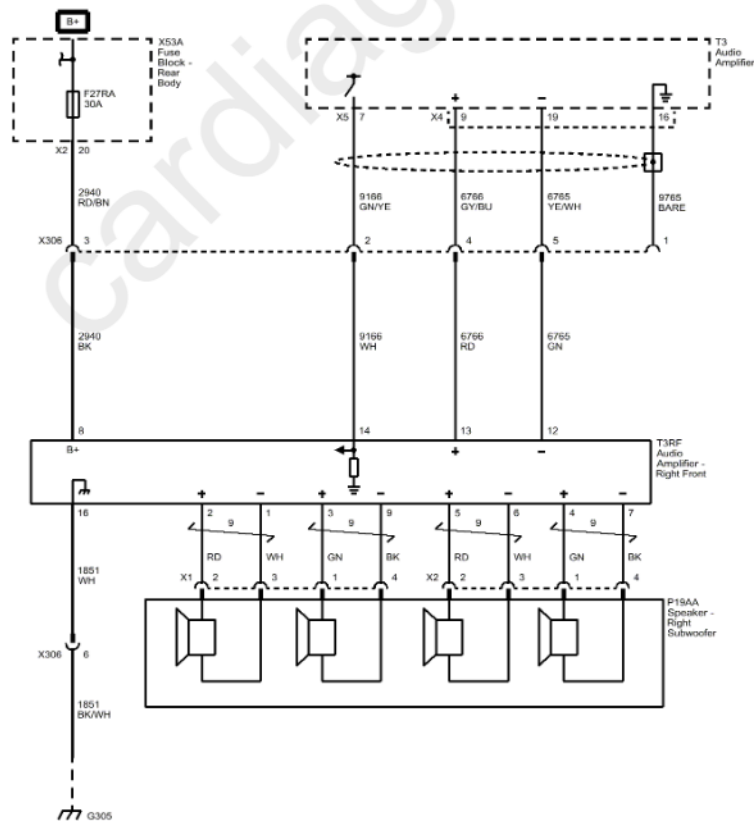


Fig. 15: Speakers - Right Subwoofer (UQH)
Courtesy of GENERAL MOTORS COMPANY

Speakers - Rear Subwoofer (UQH)


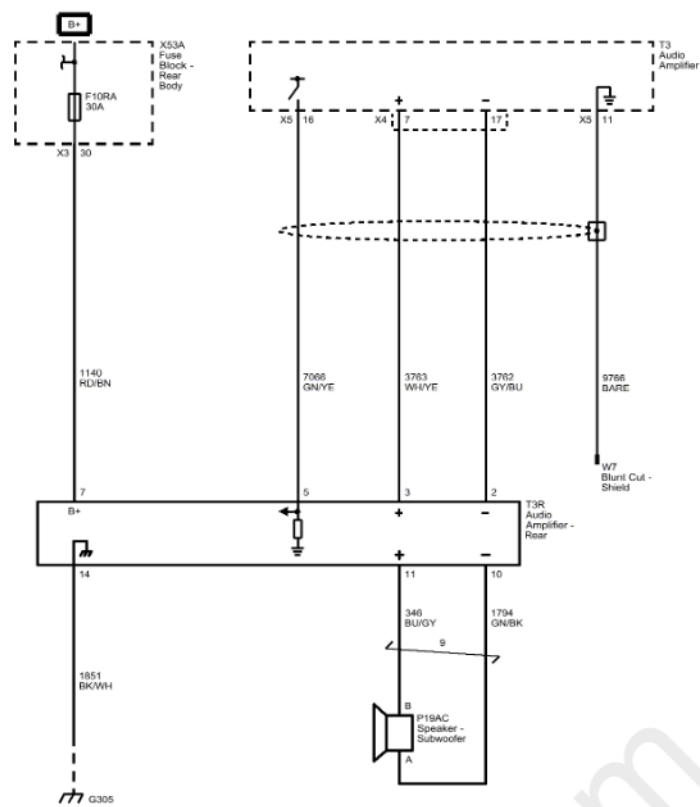


Fig. 16: Speakers - Rear Subwoofer (UQH)
 Courtesy of GENERAL MOTORS COMPANY

Antennas (without CW1)



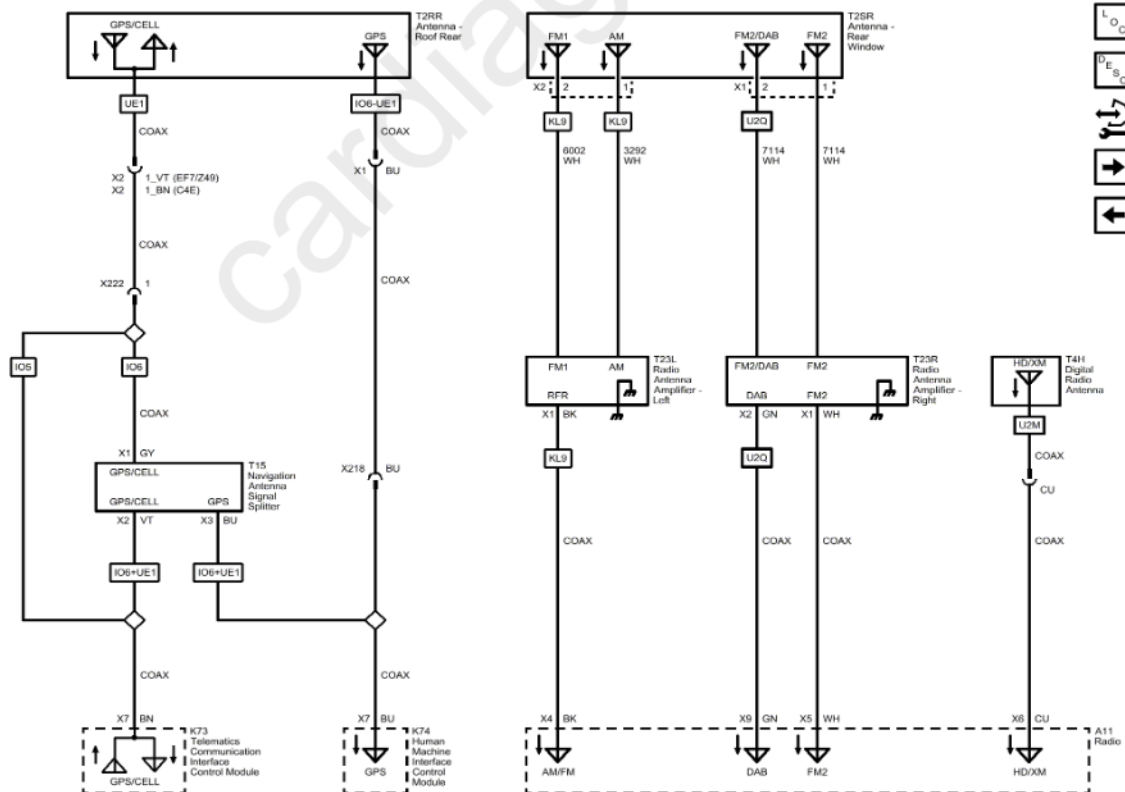


Fig. 17: Antennas (without CW1)
 Courtesy of GENERAL MOTORS COMPANY

Antennas (CW1)



Courtesy of GENERAL MOTORS COMPANY

Media Disc Player Power, Ground, Serial Data, Subsystem References and Media Disc Eject Switch



Courtesy of GENERAL MOTORS COMPANY

cardiagn.com

2017 ACCESSORIES & EQUIPMENT

Cellular, Entertainment and Navigation - Special Tools and Equipment - CT6

SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS

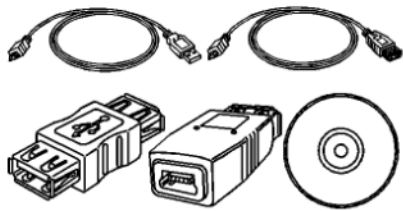
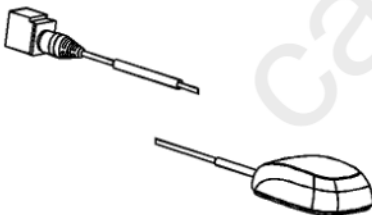
Illustration	Tool Number/Description
	EL-50334-20 Multi-Media Interface Tester (MIT)
	EL-50334-50 USB Cable and Adapter Kit
	EL-48028 Digital Radio Test Antenna
	EL-49903-1 Test Antenna, Navn-Cell Comm

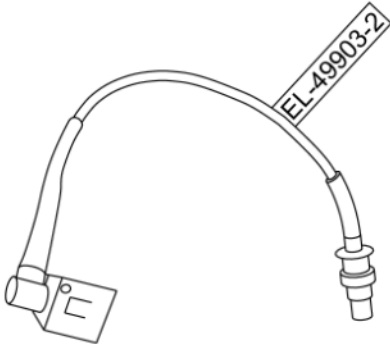
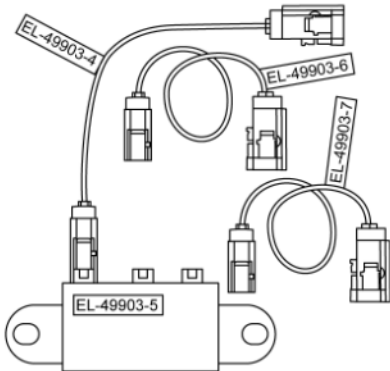
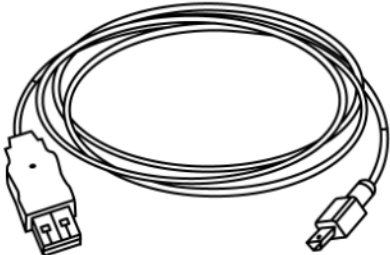
Illustration	Tool Number/Description
	EL-49903-2 Adapter Cable-UHF RT Angle
	EL-49903-3A Combiner Kit, Test Antenna
	EL-50334-12 Infotainment Test Cable - RSE
	EL-50334-13 Infotainment Test Cable - RSE Splitter
	EL-50334-14 Infotainment Test Cable

Illustration	Tool Number/Description
	EL-50334-15 Video Bypass Cable

SPECIAL TOOLS (MIT TOOL INSTRUCTIONS)

Bluetooth Pairing for Vehicles with Radio RPO: UF7

Either reset the pin code on the radio to 0000 or go under Device Info on the radio and see what the pin code is (to enter it later on the MIT).

1. Turn the BT discoverable ON in the radio Bluetooth® settings.
2. Press Pair Device on radio (DO NOT PRESS SEARCH BLUETOOTH DEVICES ON THE RADIO).
3. Press the Pair button on the MIT.
4. When the three LED lights begin flashing on the MIT, enter the pin code (either 0000 if you reset it to that or what the radio pin code was).
5. MIT will then automatically connect with the radio and should show "MIT Connected" message.

Make test call and the audio streaming test.

Holden Radio Bluetooth Pairing Instructions

1. Using the radio controls, place the radio into "Discoverable Mode".
2. Place the MIT into Bluetooth® mode by pressing TEST SELECTOR until the Bluetooth® LED is illuminated.
3. With the MIT in Bluetooth® mode Press and Release the #1 button (the Bluetooth® LED will begin to slowly blink).
4. Now Press and release the PAIR/CALL button on the MIT (the Bluetooth® LED will begin to blink a little faster).
5. On the radio Enter the PASSKEY when prompted: (press "0000" then Press "OK").
6. The MIT and radio will PAIR and CONNECT (the Bluetooth® LED will be Fast Flashing).
7. Use as regular MIT at this point.

For all other Radios

Testing the Bluetooth Function

1. Verify connection of the MIT to the USB port.
2. Press and release the TEST SELECTOR button until the Bluetooth® LED illuminates.
3. Disable all other Bluetooth® devices present in the vehicle (ie. cell phones, laptops, etc.).

Standard Bluetooth Pairing/Bonding

1. Use the vehicle controls to place the radio into Bluetooth® Pairing mode. The vehicle will prompt you with a security code.
2. Press and release the PAIR/CALL button. The Bluetooth® LED will blink slowly while preparing to have a security code entered.
3. Wait for the all three LEDs to blink confirming it is ready to have the security code entered.
4. Enter the code with the MIT keypad and hit ENTER.

5. The Bluetooth® LED will blink slowly while pairing/bonding and move to a quick flash once paired/bonded.

The vehicle should confirm pairing/bonding is complete.

Streaming Audio

1. Confirm pairing/bonding is complete - the Bluetooth® LED will be in a quick flash mode.
2. On some radios the MIT automatically begins streaming audio via A2DP. The audio playback will confirm that the Bluetooth® connection using streaming and the audio is working correctly.
3. On other radios you will need to select Bluetooth® Audio from the Source menu to verify Audio Streaming.
4. Audio playback confirms that the Bluetooth® connection using Streaming Audio is working correctly.
5. Placing a test call will temporarily stop the streaming audio function, but upon disconnection of that test call,

the streaming audio from the MIT will resume.

To Place a Test Call

1. Confirm pairing/bonding is complete - the Bluetooth® LED will be in a quick flash mode. If the vehicle is equipped with streaming audio and the radio is set to play a Bluetooth® audio file, the streaming audio playback will be audible.
2. Press and release PAIR/CALL button to place a test call. Streaming audio will be temporarily turned off.
3. Use the vehicle controls to answer the call.
4. Audio playback confirms that the Bluetooth connectivity is working correctly.

NOTE: If the call is not answered within several rings, the MIT's audio files will not transmit, even though an active call is occurring.

5. Use the vehicle controls to end the call. If applicable, streaming audio will resume.

NOTE: The MIT will remain paired/bonded when the call is ended by the vehicle. To re-test the call function, place the MIT in Bluetooth mode and press and release the Pair button to reconnect. When testing is completed, delete MIT from the audio system before returning the vehicle to the customer.

Testing the AUX/Line-In Function

1. Verify connection of the MIT as stated above.
2. Press and release the TEST SELECTOR button until the MIT AUX LED illuminates.
3. Use the vehicle controls to put the audio system into Audio (Line-In) mode.
4. Audio playback confirms that the audio input is working correctly.

Testing the USB Function

1. Verify connection of the MIT as stated above.
2. Press and release the TEST SELECTOR button until the MIT USB LED illuminates.
3. Use the vehicle controls to put the audio system into USB mode.
4. Audio playback confirms that the USB is working correctly.

NOTE: Volume levels may vary dependent upon vehicle audio system.

Troubleshooting Guide

If the MIT unit is still not working properly after following the below troubleshooting, the unit is malfunctioning and should be repaired or replaced.

Unit not Working

- Verify the MIT is powered on correctly as indicated by the green Power LED.
- If Power LED is not illuminated, verify USB power source is working properly.
- If USB power adapter is being used to power the MIT, check and, if necessary, replace the fuse in adapter.

Problem with Aux/Line-In Test

- Verify Aux/Line- In test cable is inserted properly into the vehicle audio input jack. Verify the MIT is in Aux/Line-In mode as indicated by the red AUX LED.
- Verify the vehicle audio system is in Auxiliary or Line-in mode. Verify the vehicle audio system volume is turned up and not in mute mode.

Problem with USB Test

- Verify MIT is in USB mode as indicated by the red USB LED. Verify the vehicle audio system is in USB mode.
- Verify the vehicle audio system volume is turned up and not in mute mode.

Problem with Bluetooth Pairing

- Delete previous devices stored in the device list of the radio and the pair the MIT
- Remove USB cable, and then reconnect to reset the MIT. Carefully follow the bonding instructions for the correct Passkey procedure.

Problem with Bluetooth Test Call Audio

- Verify the MIT is paired with the vehicle. This is indicated by the quick flashing Bluetooth LED.
 - Audio system should have indicated the MIT is bonded.
-

2017 ACCESSORIES & EQUIPMENT**Cellular, Entertainment and Navigation - Specifications - Fastener Specifications - CT6****SPECIFICATIONS****FASTENER SPECIFICATIONS****Reusable Threaded Fastener Tightening Specifications**

NOTE: <i>All fasteners listed in this table can be reused after removal.</i>	
Application	Specification
	Metric (English)
Audio/Video Receptacle Bolt	1 N.m (9 lb in)
Communication Interface Module Bracket Bolt	2.5 N.m (22 lb in)
Front Floor Console Bolt	2.5 N.m (22 lb in)
Front Floor Speaker Nut	6 N.m (53 lb in)
High Frequency Antenna	9 N.m (80 lb in)
Radio Antenna Coil Bolt	9 N.m (80 lb in)
Radio Antenna Module Bolt	9 N.m (80 lb in)
Radio Bracket Bolt	9 N.m (80 lb in)
Radio Control Bolt	2.5 N.m (22 lb in)
Radio Front Center Speaker Bolt	2.5 N.m (22 lb in)
Radio Front Side Door Speaker Fastener	2.5 N.m (22 lb in)
Radio Front Speaker Bolt	2.5 N.m (22 lb in)
Radio Rear Side Door Speaker Fastener	2.5 N.m (22 lb in)
Radio Rear Side Door Upper Speaker Bolt	2.5 N.m (22 lb in)
Radio Rear Speaker Amplifier Nut	6 N.m (53 lb in)
Radio Rear Speaker Bolt	2.5 N.m (22 lb in)
Radio Rear Speaker Nut	6 N.m (53 lb in)
Radio Speaker Amplifier Nut	6 N.m (53 lb in)
Radio Speaker 2nd Auxiliary Amplifier Bolt	2.5 N.m (22 lb in)
Regulatory Emergency Call Backup Speaker Bolt	1.2 N.m (11 lb in)
Video Display Bracket Bolt	7 N.m (62 lb in)
Windshield Garnish Molding Bolt	2.5 N.m (22 lb in)