



Seat Adjustments


See pages 12 – 14 for important safety information and warnings about how to properly position seats and seat-backs.

Make all seat adjustments before you start driving.

Your Acura has power adjustments for both front seats. The two power seat adjustment switches are on the outside edge of the seat bottom.


You can adjust the power seats with the ignition switch in any position.

Driver's Seat Adjustments

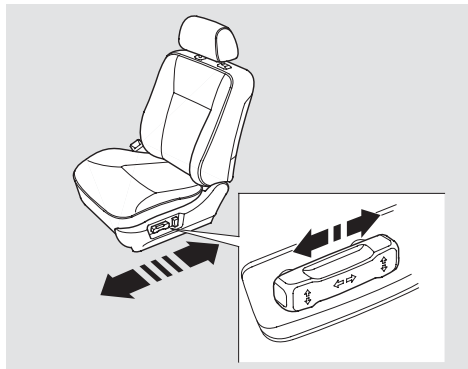


The long horizontal switch adjusts the seat bottom in several directions. The short vertical switch adjusts the seat-back angle.


Push the horizontal switch forward or backward to move the seat forward or backward.

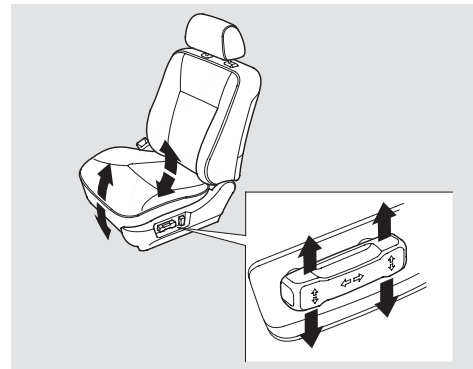

Pull up or push down on the front of the switch to move the seat bottom's front edge up or down. Pull up or push down on the rear of the switch to move the rear of the seat bottom up or down.

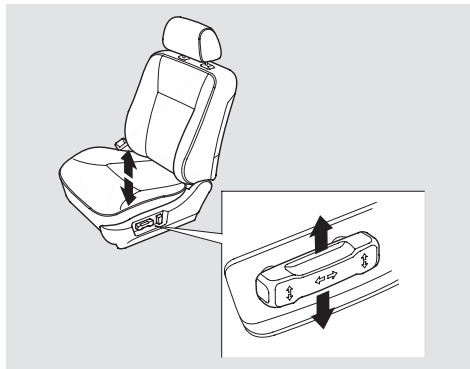

Pull the center of the horizontal switch up to raise the seat. Push it down to lower the seat.

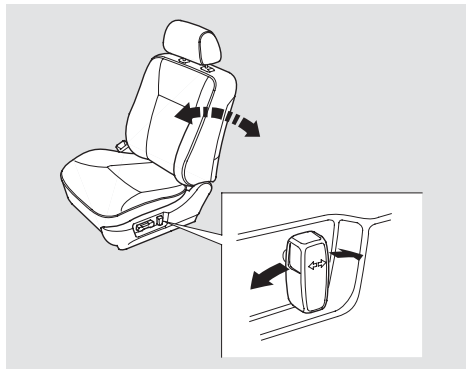


Adjust the seat-back angle by pushing the rear switch in the direction you want to move.

The driver's seat includes a memory feature. Two seat positions can be stored in separate memories. You can then select a memorized position by pushing the appropriate memory button. Refer to page [93](#) for how to memorize and select the seat positions.




Seat Adjustments

Driver's Lumbar Support

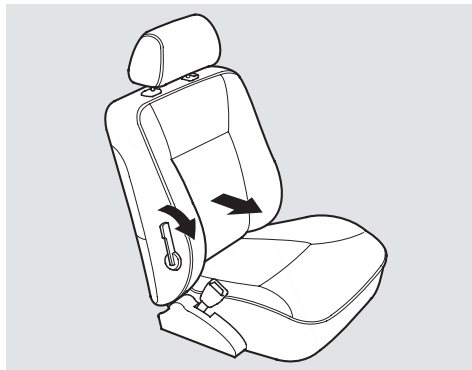

Vary the lumbar support by moving the lever on the right side of the seat-back. Pivot the lever forward until it stops, then let it return. Doing this several times adjusts the lumbar support through its full range.

Front Passenger's Seat Adjustments

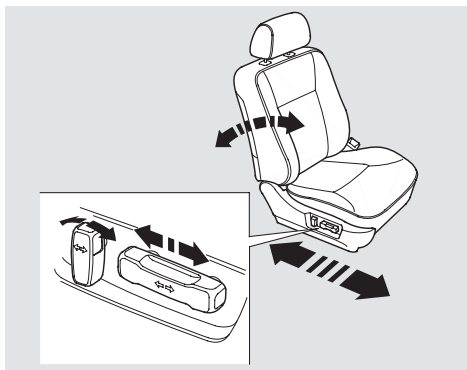


The seat adjustment switches are on the outside edge of the seat bottom. Push the long horizontal switch forward or backward to move the seat bottom in that direction. Adjust the seat-back angle by pushing the vertical switch in the direction you want to move.

Head Restraints

See page [14](#) for important safety information and a warning about how to properly position the head restraints.

The head restraints help protect you and your passengers from whiplash and other injuries. They are most effective when you adjust them so the back of the occupant's head rests against the center of the restraint. A taller person should adjust the restraint as high as possible.


Seat Adjustments, Armrest

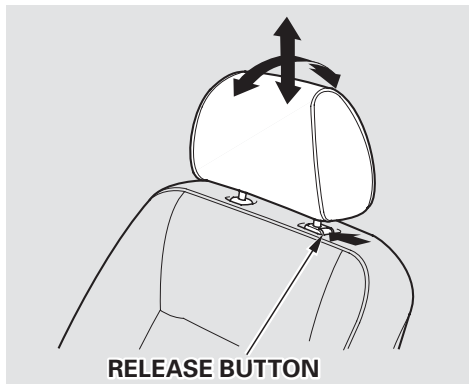

The head restraints adjust for height and tilt. You need both hands to adjust the restraint. Do not attempt to adjust it while driving. To raise it, pull upward. To lower the restraint, push the release button sideways and push the restraint down. To adjust the tilt, pivot the head restraint to the desired position.

To remove a head restraint for cleaning or repair, pull it up as far as it will go. Push the release button and pull the restraint out of the seat-back.

Armrest

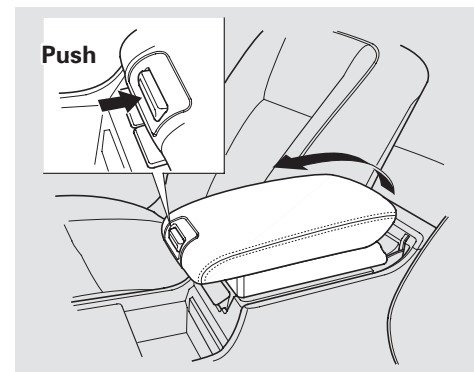

The lid of the console compartment can be used as an armrest at the high or low position. To raise the armrest, push the button on the lid. Make sure the armrest is securely latched. To lower it, press the button and push the armrest down until it latches.

Make sure the passengers' hands or fingers are away from the armrest before pushing it down.




Armrest



The rear seat armrest is located at the center of the rear seat. Pivot it down to use it.

Trunk Pass-through Cover

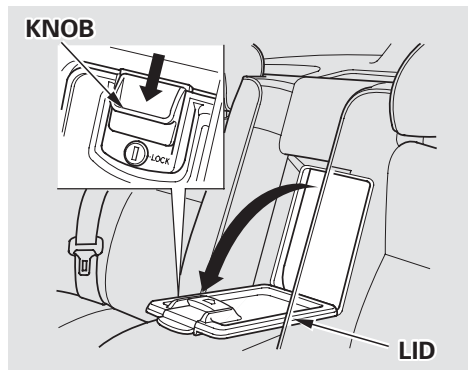

The pass-through cover can be opened from either side; it folds forward onto the center armrest. Open the cover by sliding the knob downward and pushing or pulling on the cover. To close the cover, swing it up and push firmly on the top. Make sure it latches properly.

Make sure all items in the trunk and those extending through the pass-through are secured.

For security, this cover can be locked and unlocked only with the master key. To lock the cover, insert the key and turn it clockwise.

Never drive with this cover open and the trunk lid open.
See **Carbon Monoxide Hazard** on page [49](#).