
ENGINE

CONTENTS

SERVICE SPECIFICATIONS	2	CRANKSHAFT PULLEY	9
SEALANTS	2	CAMSHAFT AND CAMSHAFT	
SPECIAL TOOLS	2	OIL SEAL	10
ENGINE ADJUSTMENTS	4	OIL PAN	13
1. Drive Belt Tension Check	4	CRANKSHAFT OIL SEAL	15
2. Auto Tensioner Check	5	CYLINDER HEAD GASKET	17
3. Lash Adjuster Check	5	TIMING BELT AND TIMING BELT B	21
4. Lash Adjuster Replacement	7	ENGINE ASSEMBLY	27
5. Ignition Timing Check	7		
6. Idle Speed Check and Idle Mixture Check	7		
7. Compression Pressure Check	7		
8. Manifold Vacuum Check	8		

SERVICE SPECIFICATIONS

Items	Standard value	Limit
Basic ignition timing	5° BTDC ± 3°	–
Ignition timing (at idle)	Approx. 5° BTDC	–
Idle speed rpm	850 ± 50	–
CO contents %	0.6 or less	–
HC contents ppm	300 or less	–
Compression pressure kg/cm ² – rpm	11.5 – 250	Min. 9.7 – 250
Compression pressure difference of all cylinders kg/cm ²	–	Max. 1.0
Intake manifold vacuum kPa {mmHg}	–	Min. 55 {410}
Cylinder head bolt shank length mm	–	99.4



SEALANTS









Items	Specified sealants
Rocker cover	Semi-drying sealant: THREEBOND 1207D [MZ 100168] (containing 150 g)
Oil pan	Semi-drying sealant: THREEBOND 1207F [MZ 100191] (containing 150 g)




NOTE:

Given in [] are MITSUBISHI GENUINE PART numbers.

SPECIAL TOOLS

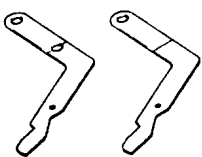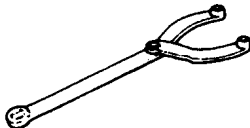Tool	Number	Name	Use
	MD998782	Valve lifter set	Replacing the lash adjuster
	MB990767	End yoke holder	• Holding the crankshaft pulley • Holding the camshaft sprocket

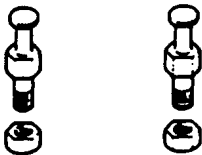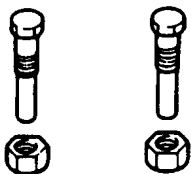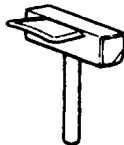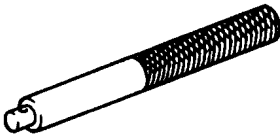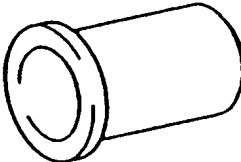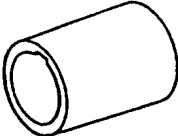Tool	Number	Name	Use
	MD998719	Crankshaft pulley holder pin	• Holding the crankshaft pulley • Holding the camshaft sprocket
	MD998715	Pulley holder pin	
	MD998713	Camshaft oil seal installer	Pressfitting the camshaft oil seal
	MD998727	Oil pan remover	Removing the oil pan
	MD998781	Flywheel stopper	Securing the flywheel or drive plate
	MD998776	Crankshaft rear oil seal installer	Pressfitting the crankshaft rear oil seal
	MB990938	Handle	
	MD998382	Crankshaft front oil seal installer	Installing the crankshaft front oil seal
	MD998285	Crankshaft front oil seal guide	

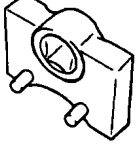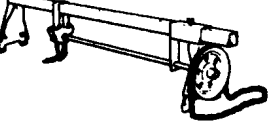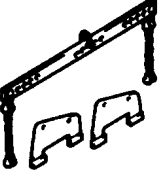Tool	Number	Name	Use
	MB991654	Cylinder head bolt wrench	Removing and reinstalling the cylinder head bolt
	MD998767	Tensioner pulley socket wrench	Timing belt tension adjustment
	Recommended tool MZ203826 by Anzen Jidosha or MZ203827 by Banzai	Engine lifter	Supporting the engine assembly during removal and installation of the transmission
	MD991453	Engine assembly hanger	

ENGINE ADJUSTMENTS


1. DRIVE BELT TENSION CHECK


NOTE

Use of the auto tensioner eliminates the need for belt tension adjustment. Check that the indicator mark on the auto tensioner is in the range of A shown.

If it is outside the specified range (i.e., in range of B shown), replace the drive belt.

(For the removal and installation of the drive belt, refer to P.11-9.)

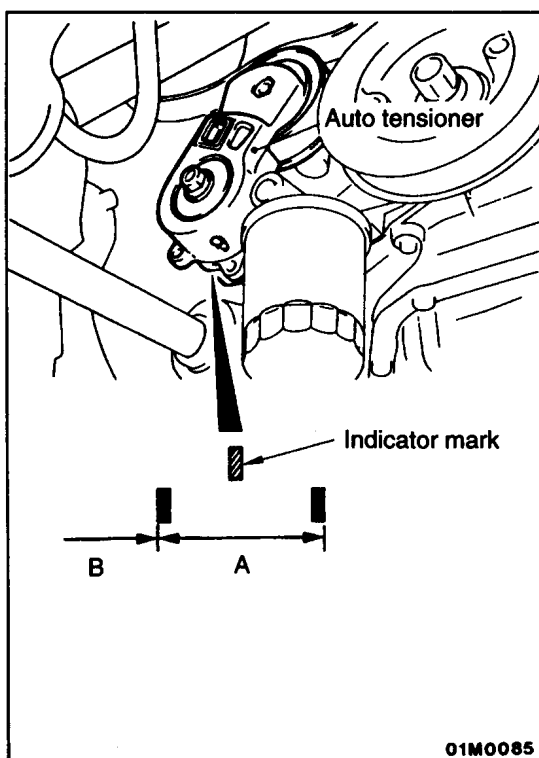

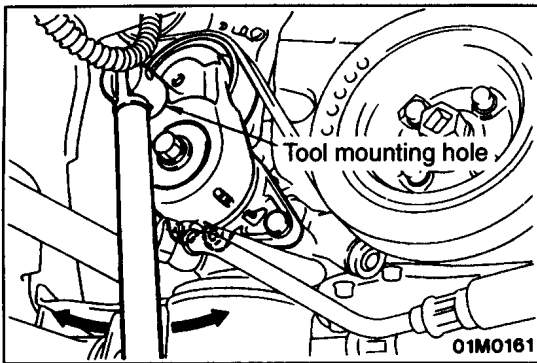

2. AUTO TENSIONER CHECK

- (1) Stop the engine from the idle speed and check that the belt rests within the auto tensioner pulley width.
- (2) Remove the drive belt.
(For the removal of the drive belt, refer to P.11-9.)
- (3) Fit a spinner handle or similar tool into the tool mounting hole of the auto tensioner and turn the tensioner clockwise and counterclockwise to ensure that it does not bind.
- (4) If step (1) or (3), or both, have been checked abnormally, replace the auto tensioner.
- (5) Reinstall the drive belt.

3. LASH ADJUSTER CHECK

NOTE

If an unusual knocking noise can be heard immediately after the engine has started or while it is running and if that is probably attributable to the lash adjuster, make the following checks.

- (1) Check the engine oil and add or change oil as necessary.

NOTE

- (1) If the engine oil level is low, air is taken in through the oil screen, entering the oil passage.
- (2) If the oil level is too high, the cranks agitate oil causing oil to trap a large amount of air.
- (3) Air does not easily separate from a deteriorated oil that can contain an increased amount of air.

When air trapped in oil for these reasons gets into the high-pressure chamber of the lash adjuster, the air in the high-pressure chamber is compressed to shrink the lash adjuster excessively while the valve is opening, resulting in an unusual noise occurring. This is the same symptom developing when the valve clearance is adjusted to an excessive value.

The problem in this case is gone when air is released from the lash adjuster.



- (2) Start the engine and carry out several cycles (10 or less) of mild racing*.



If the noise is gone after racing, it indicates that air has been released from the high-pressure chamber of the lash adjuster, restoring the lash adjuster to normal operating conditions.

*: Gradually (extending over a 30-sec. period) increase the engine speed from idle speed to 3,000 r/min and then reduce it down to the idle speed gradually (extending over a 30-sec. period).

NOTE

- (1) If the vehicle is parked on a slope for a long time, the amount of oil in the lash adjuster will decrease, causing air to get into the high-pressure chamber when the engine is started.
- (2) After the vehicle has been parked for a long time, oil drains out of the oil passage and it takes a long time for the oil to reach the lash adjuster. This can cause air to get into the high-pressure chamber.

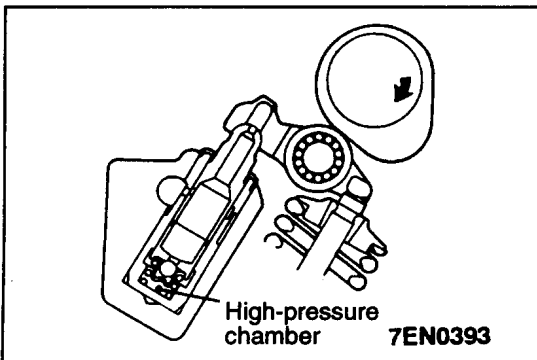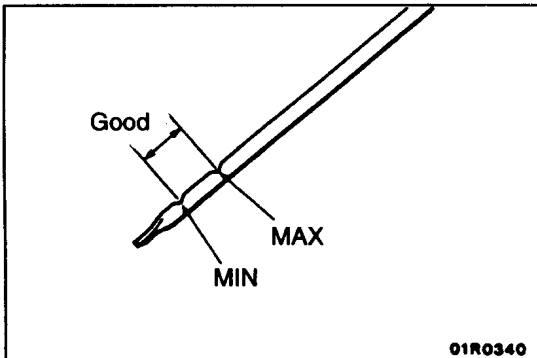

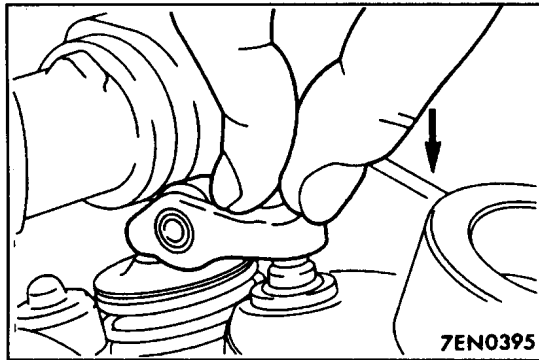
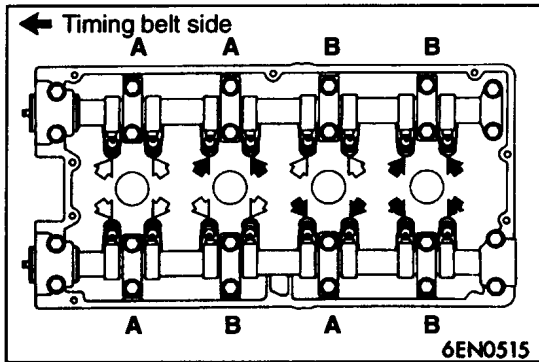


- (3) If the noise is not eliminated by racing, follow these steps to check the lash adjuster.
- Stop the engine.
 - Bring no. 1 cylinder to TDC on the compression stroke.
 - Push the rocker arms indicated by arrow A on the left to see if they go down.
 - Slowly turn the crankshaft clockwise 360°.
 - Perform the same step as step c for rocker arms indicated by arrow B.

- Push the part of the rocker arm which contacts the top of the lash adjuster. If the rocker arm can be easily moved down to the bottom, the lash adjuster is defective, requiring replacement. When the lash adjuster is replaced, be sure first to bleed the lash adjuster of air before installation. Then, perform steps a through e to ensure that no abnormal symptoms are noted.

NOTE

- The leak-down test is an effective means to accurately determine if the lash adjuster is operational or not.
- For the leak-down test and bleeding procedures, refer to ENGINE WORKSHOP MANUAL. If the rocker arm is felt binding and cannot be pushed downward as you push it, the lash adjuster is operational. Check for other possible causes for the noise.

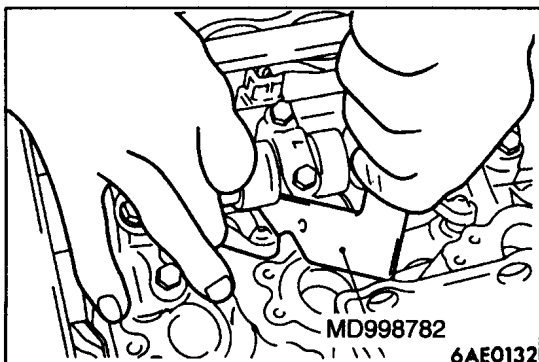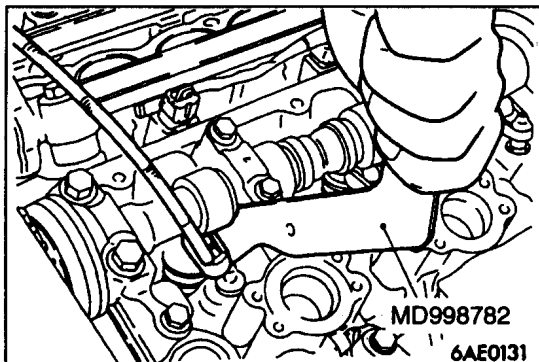

(4) Lash adjuster replacement

Caution

From the cylinder from which the lash adjuster is to be removed, turn the crankshaft to lower the piston, as the valve contacts the piston when pushed down. A rocker arm cannot be removed if it is lifted by the cam. If this is the case, turn the crankshaft so that the arm is not lifted.

- Using the special tool, push the valve downward to remove the roller rocker arm.
- Remove the lash adjuster from the cylinder head.
- Mount a brandnew lash adjuster which has been bled of air in the cylinder head.
- Using the special tool, lower the valve and install the roller rocker arm.

NOTE

To mount the roller rocker arm, first place the pivot side of the rocker arm on the lash adjuster, then push down the valve; next, place the slipper side of the rocker arm on the valve system side.

4. LASH ADJUSTER REPLACEMENT

Refer to (4) of the preceding paragraph.

5. IGNITION TIMING CHECK

Check that ignition timing is at the standard value.

Standard value: approx. 5° BTDC

NOTE

Ignition timing is variable within about $\pm 7^\circ$, even under normal operating.

6. IDLE SPEED CHECK AND IDLE MIXTURE CHECK

- (1) Run the engine at 2,000 to 3,000 r/min for 2 minutes.
- (2) Check the CO and HC contents at idle.

Standard value

CO contents: 0.6% or less

HC contents: 300 ppm or less

7. COMPRESSION PRESSURE CHECK

- (1) Before inspection, check that the engine oil, starter and battery are normal. In addition, set the vehicle to the pre-inspection condition.
- (2) Remove all of the spark plugs.
- (3) Disconnect the crank angle sensor connector.


NOTE


Doing this will prevent the engine-ECU from carrying out ignition and fuel injection.

- (4) Cover the spark plug hole with a shop towel etc., and after the engine has been cranked, check that no foreign material is adhering to the shop towel.

Caution

- (1) Keep away from the spark plug hole when cranking.
- (2) If compression is measured with water, oil, fuel, etc., that has come from cracks inside the cylinder, these materials will become heated and will gush out from the spark plug hole, which is dangerous.

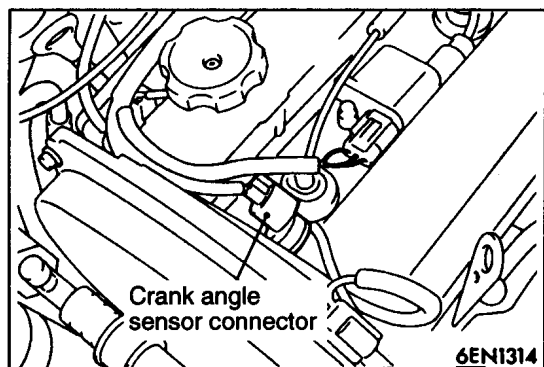

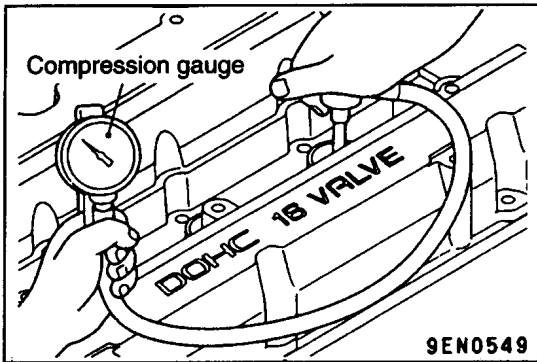

- (5) Set compression gauge to one of the spark plug holes.
- (6) Crank the engine with the throttle valve fully open and measure the compression pressure.

Standard value

(at engine speed of 250 r/min): 11.5 kg/cm²

Limit (at engine speed of 250 r/min): 9.7 kg/cm²


- (7) Measure the compression pressure for all the cylinders, and check that the pressure differences of the cylinders are below the limit.

Limit: Max. 1.0 kg/cm²

- (8) If there is a cylinder with compression or a compression difference that is outside the limit, pour a small amount of engine oil through the spark plug hole, and repeat the operations in steps (5) through (7).
 - a. If the compression increases after oil is added, the cause of the malfunction is a worn or damaged piston ring and/or cylinder inner surface.
 - b. If the compression does not rise after oil is added, the cause is a burnt or defective valve seat, or pressure is leaking from the gasket.
- (9) Connect the crank angle sensor connector.
- (10) Install the spark plugs.
- (11) Install the ignition coil and connect the ignition coil connector.
- (12) Erase the diagnosis codes by keeping the battery minus (–) cable disconnected for more than 10 seconds.

NOTE

This will erase the diagnosis code resulting from the crank angle sensor connector being disconnected.

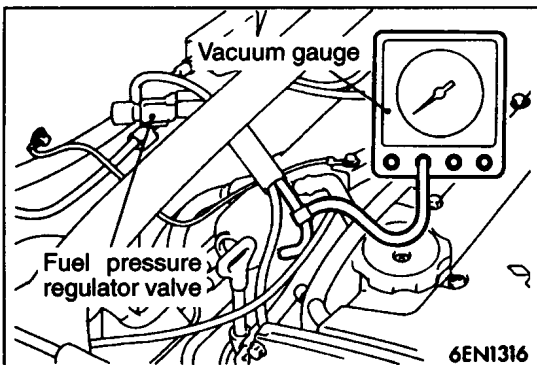

8. MANIFOLD VACUUM CHECK

- (1) Before inspection, set the vehicle to the pre-inspection condition.
- (2) Connect a tachometer connector.
- (3) Attach a three-way union to the vacuum hose between the fuel pressure regulator valve and the intake manifold, and connect a vacuum gauge.
- (4) Start the engine and check that idle speed is within standard value.

Standard value: 850 ± 50 r/min

5. Check the manifold vacuum at idling.


Limit: Min. 55 kPa {410 mmHg}

CRANKSHAFT PULLEY**REMOVAL AND INSTALLATION****Pre-removal Operation**

- Under Cover Removal

Post-installation Operation

- Drive Belt Tension Adjustment (Refer to P.11-4.)
- Under Cover Installation

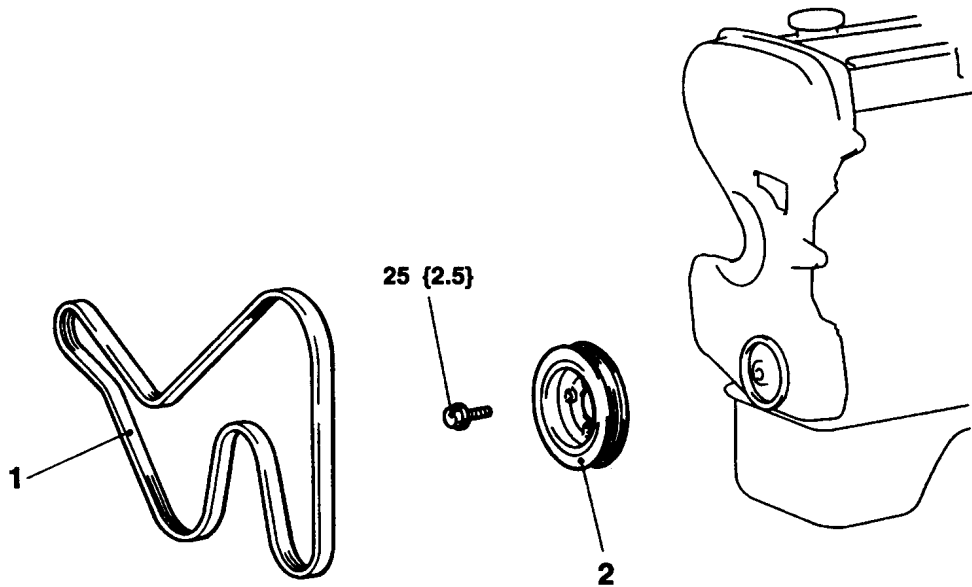

01M0165


Unit: Nm {kgf·m}

Removal steps

1. Drive belt
2. Crankshaft pulley

REMOVAL SERVICE POINT**◀A▶ DRIVE BELT REMOVAL**

- (1) Align the hole in the auto tensioner bracket with that in the arm and insert a screwdriver into the holes.
- (2) Remove the drive belt.

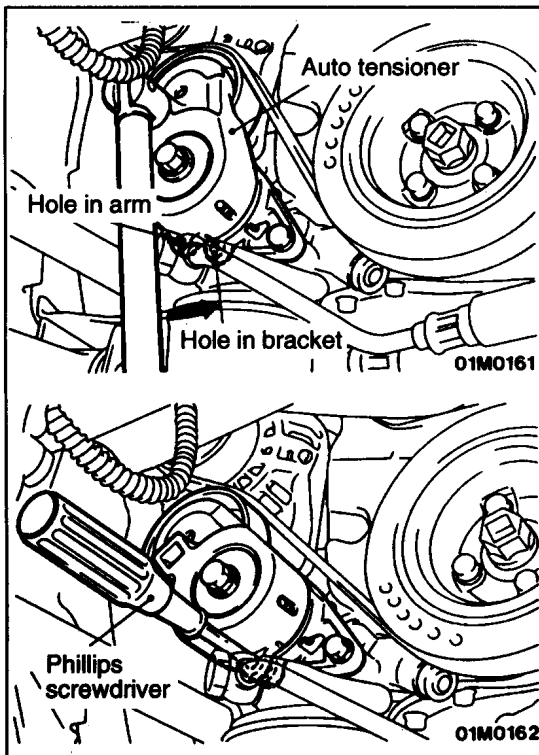


CAMSHAFT AND CAMSHAFT OIL SEAL

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- | | |
|--|--|
| (1) Engine Coolant Draining and Refilling
(2) Air Hose C Removal and Installation
(Refer to GROUP 15 – Intercooler.)
(3) Spark Plug Cable and Ignition Coil Assembly Removal and Installation | (4) Air Pipe Removal and Installation
(Refer to GROUP 15 – Air Control Valve.)
(5) Timing Belt Removal and Installation
(Refer to P.11-21.) |
|--|--|

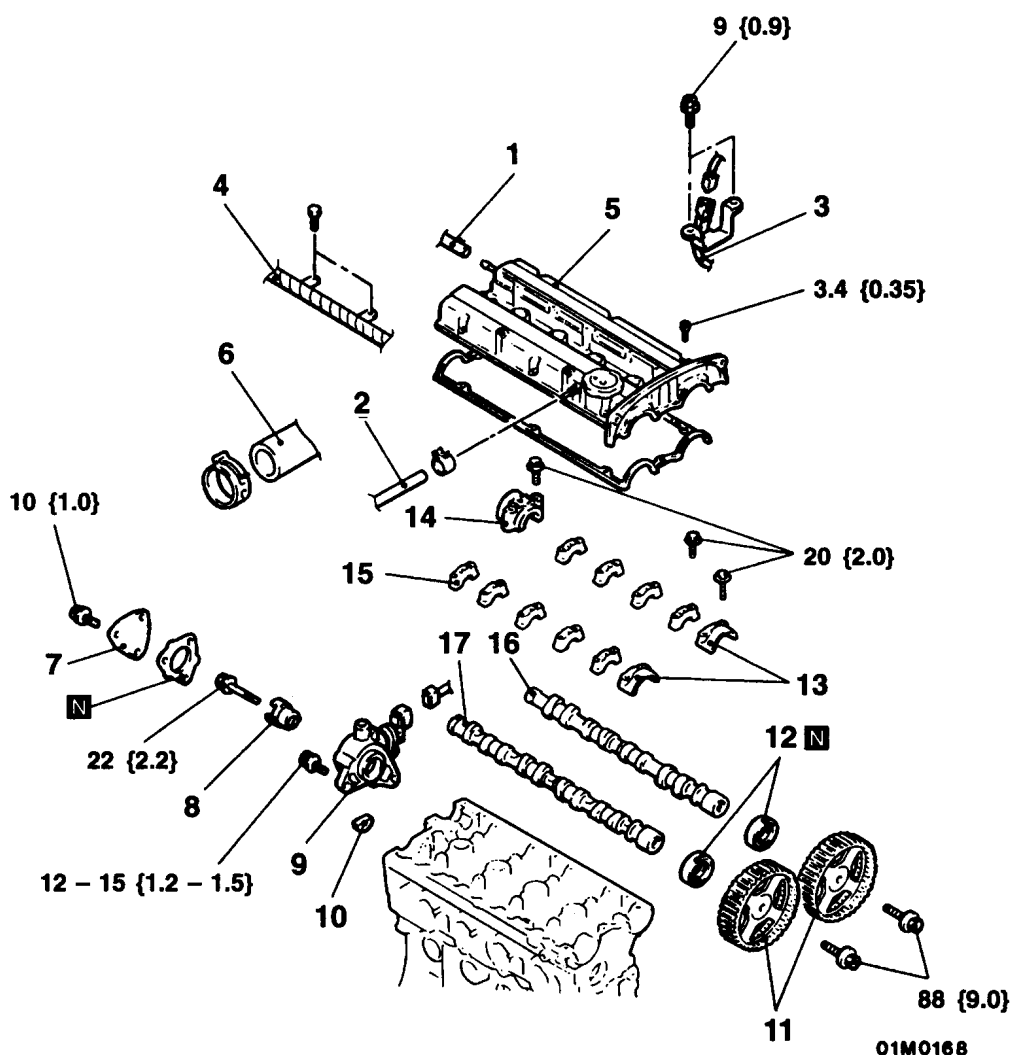


Unit: Nm {kgf·m}

Removal steps


- | | |
|--|--|
| 1. Breather hose connection
2. PCV hose connection
3. Crank angle sensor bracket connection
4. Control harness connection
5. Rocker cover
6. Radiator upper hose connection
7. Cover
8. Cam position sensing cylinder | 9. Cam position sensor support
10. Semi-circular packing
11. Camshaft sprocket
12. Camshaft oil seal
13. Front cam cap
14. Rear cam cap
15. Cam cap
16. Camshaft (exhaust side)
17. Camshaft (intake side) |
|--|--|

Grease and adhesive application points

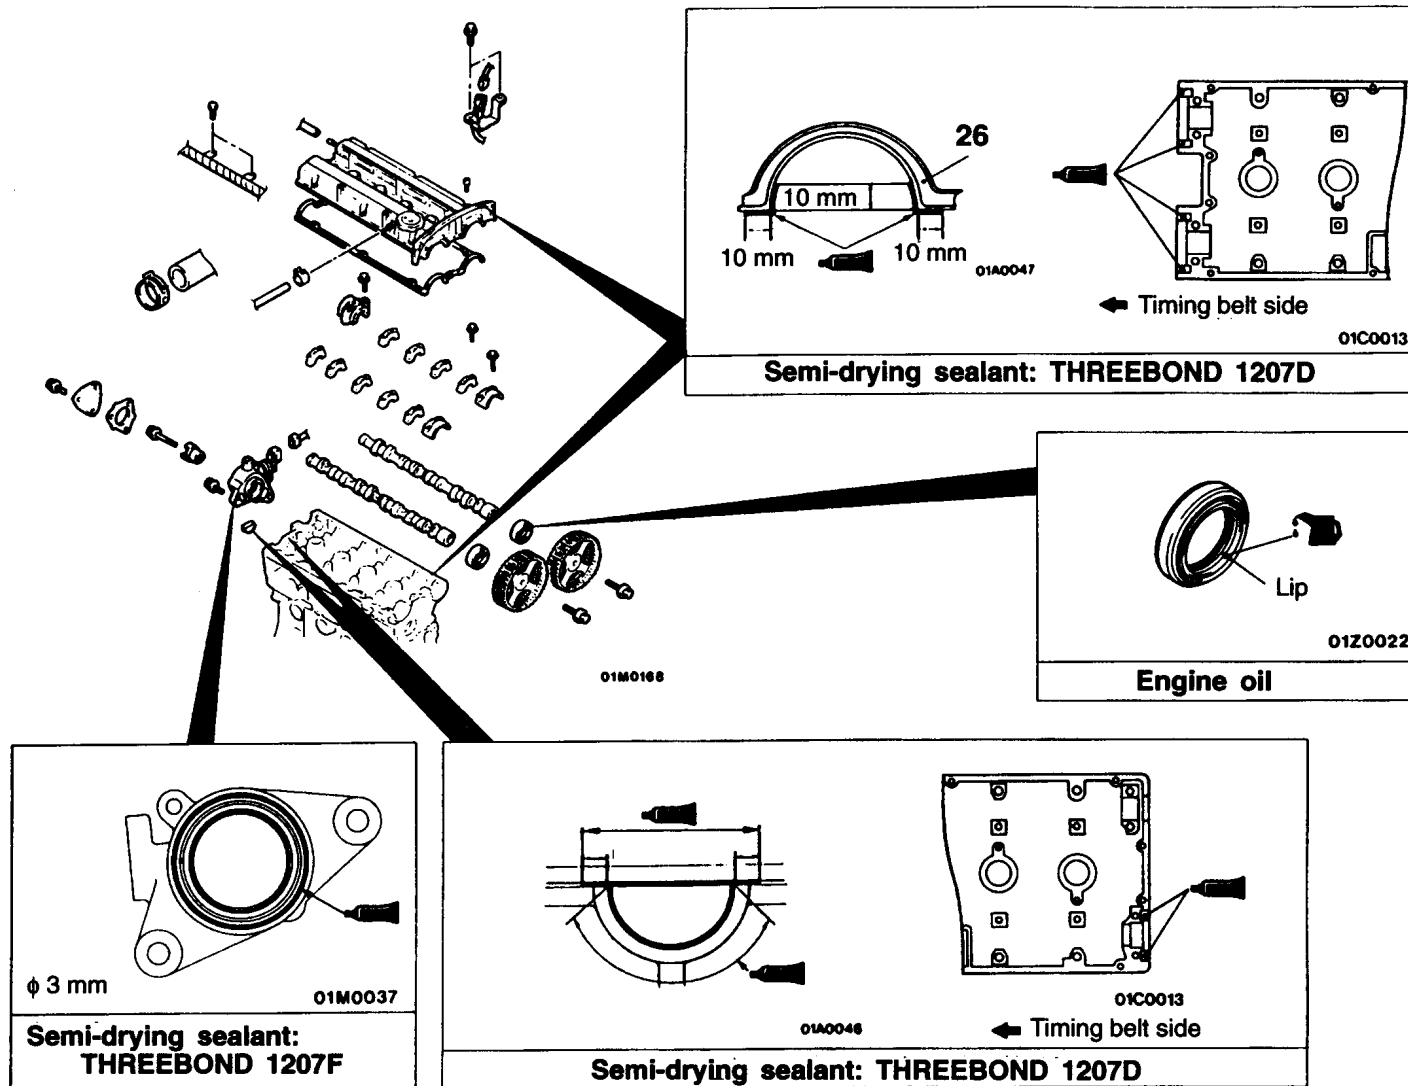

REMOVAL SERVICE POINT

◀▶ CAMSHAFT SPROCKET REMOVAL

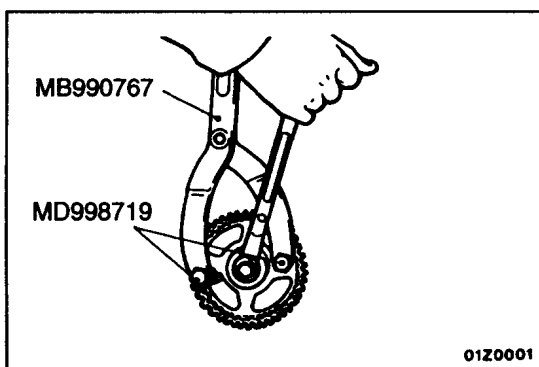


INSTALLATION SERVICE POINTS


▶◀ CAMSHAFT INSTALLATION

- (1) Apply engine oil to the cams and journals of the camshaft.
- (2) Mount the camshaft on the cylinder head.

Caution

Make sure that the camshaft has a unique orientation for installation, the intake side and exhaust side. The exhaust camshaft has a slit in the rear end face.

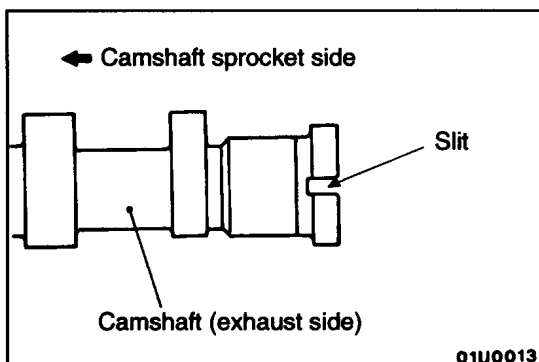

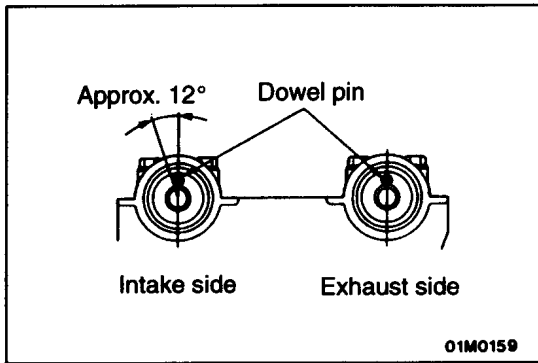


►B◄ CAM CAP / REAR CAP / FRONT CAM CAP INSTALLATION

- (1) Locate the camshaft dowel pins as illustrated.

- (2) Temporarily tighten cam cap in two to three steps, then torque it to specification.

Tightening torque: 20 Nm {2.0 kgf·m}

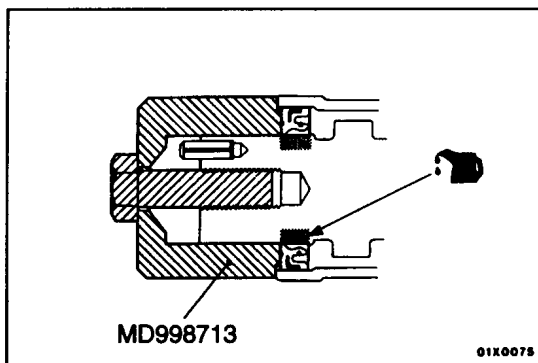


►C◄ CAMSHAFT OIL SEAL INSTALLATION

- (1) Apply engine oil to the entire periphery of the oil seal lip.
- (2) Pressfit the oil seal as shown.

►D◄ CAMSHAFT SPROCKET INSTALLATION

As you did during removal, secure the camshaft sprocket with the special tool and tighten bolt to specification.

Tightening torque: 88 Nm {9.0 kgf·m}

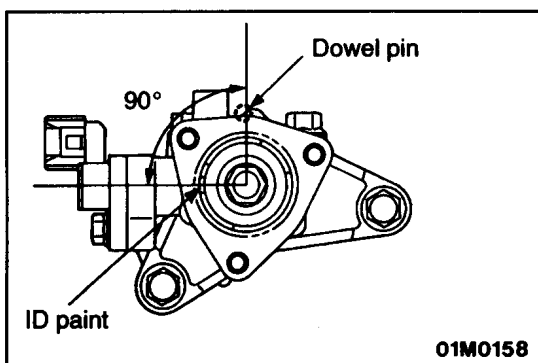

►E◄ CAM POSITION SENSING CYLINDER

Install the cam position sensing cylinder so that the ID paint on the cam position sensing cylinder is 90° with respect to the camshaft dowel pin as shown.




OIL PAN

REMOVAL AND INSTALLATION

Pre-removal and Post-Installation Operation

- (1) Under Cover Removal and Installation
- (2) Front Exhaust Pipe Removal and Installation
(Refer to GROUP 15.)

- (3) Oil Level Gauge Removal and Installation
- (4) Engine Oil Draining and Supplying

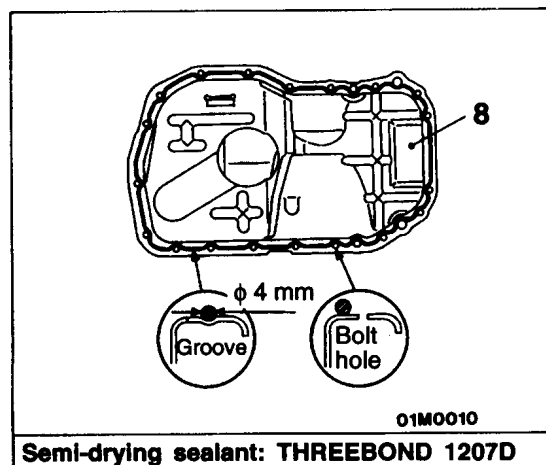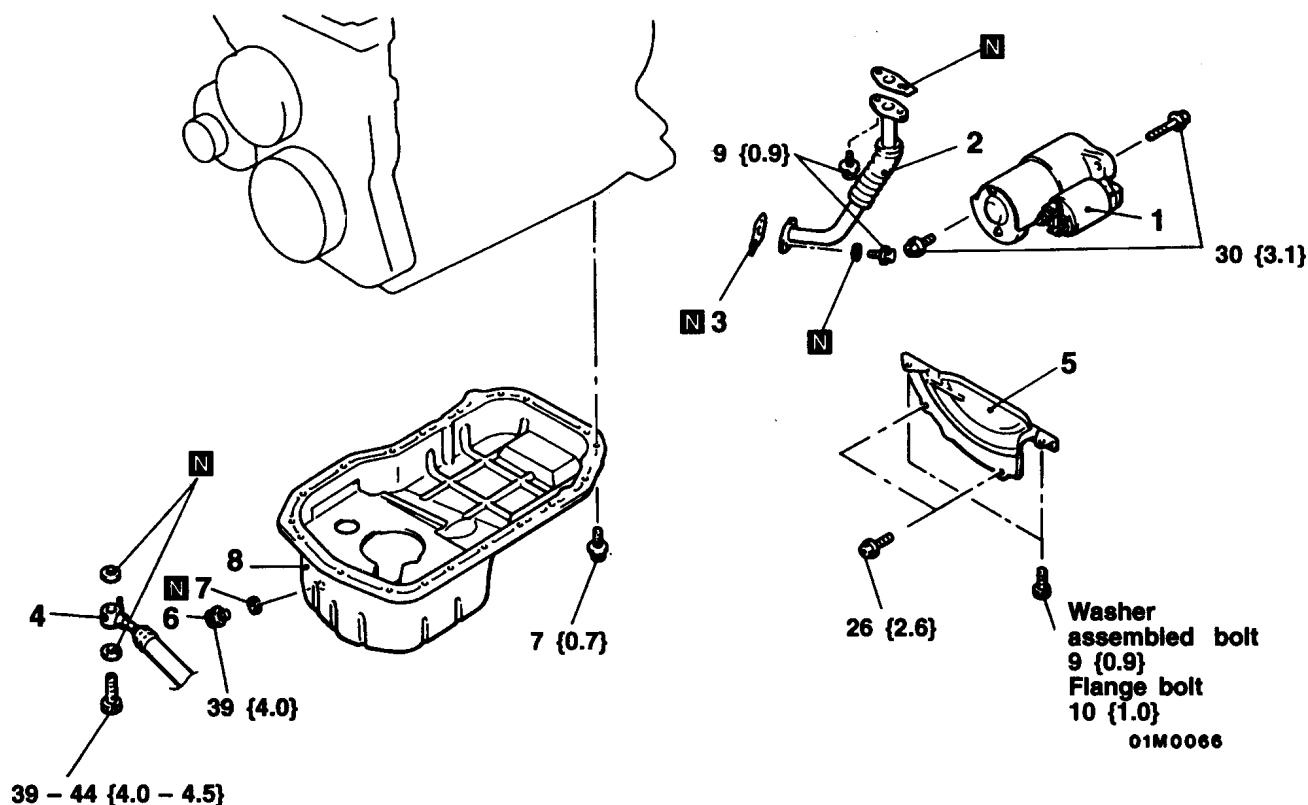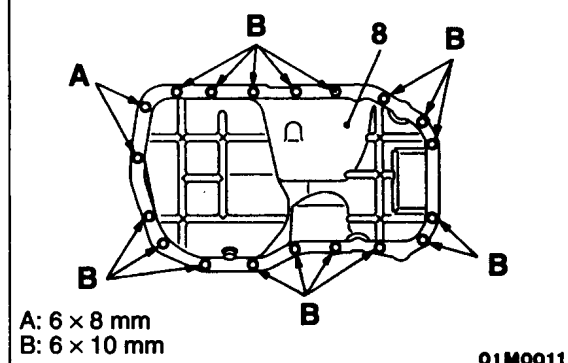**Identification of bolt location**



Unit: Nm {kgf · m}

Removal steps


1. Starter
2. Oil return pipe
3. Oil return pipe gasket
4. Engine oil cooler return pipe



5. Bell housing cover
6. Drain plug
7. Drain plug gasket
8. Oil pan

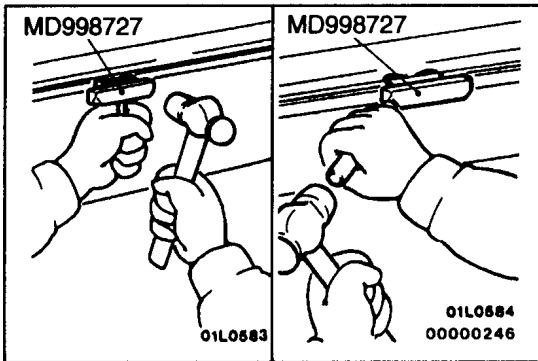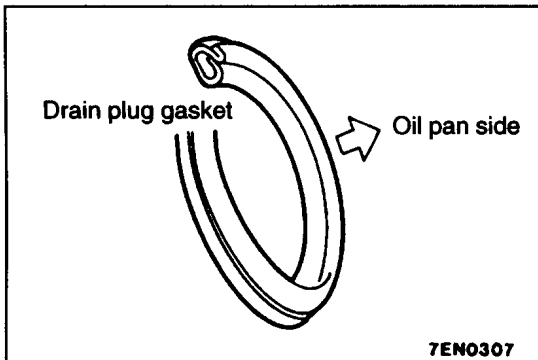**REMOVAL SERVICE POINT****◀A▶ OIL PAN REMOVAL****INSTALLATION SERVICE POINTS****▶A◀ DRAIN PLUG GASKET INSTALLATION**


Install the drain plug gasket in the direction so that it faces as shown in the illustration.

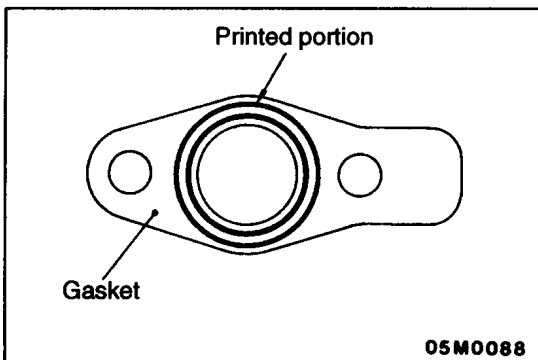**▶B◀ OIL RETURN PIPE GASKET INSTALLATION**


Install the gasket with the printed portion toward the oil pan.

CRANKSHAFT OIL SEAL

REMOVAL AND INSTALLATION

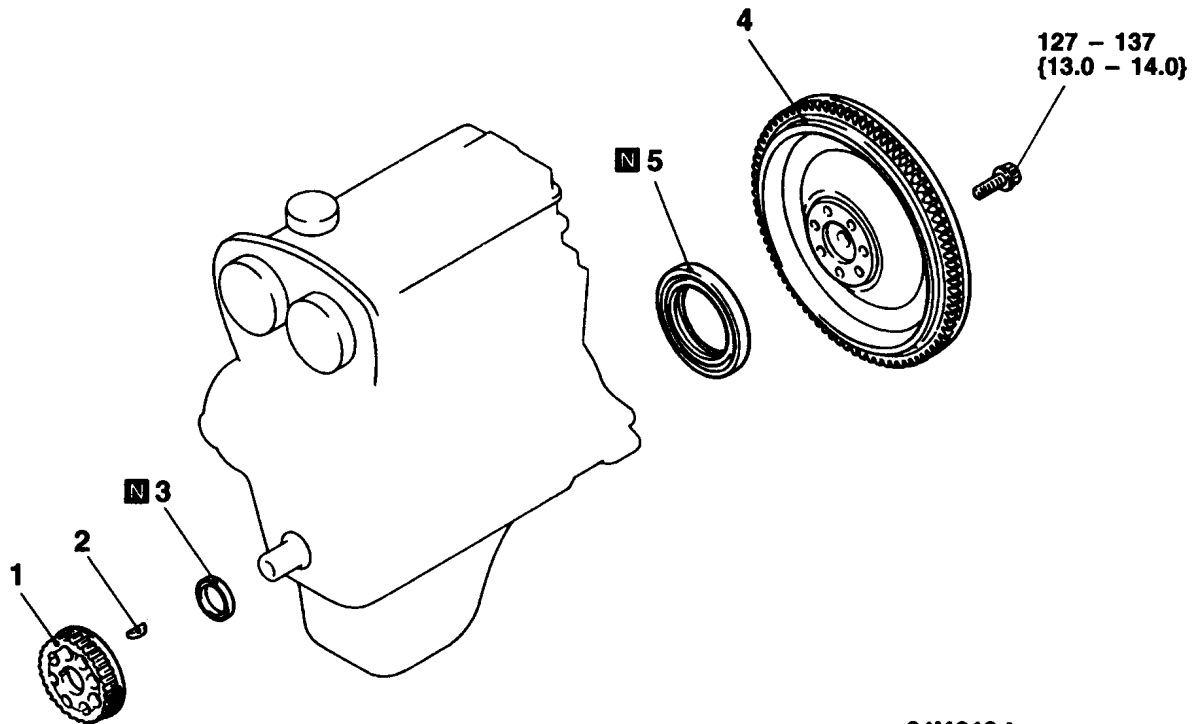

01M0164

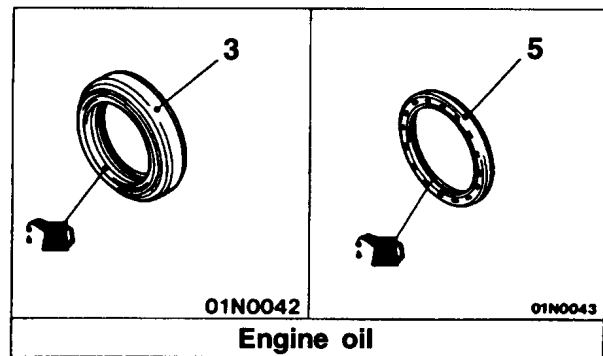

Unit: Nm {kgf·m}

Crankshaft front oil seal removal steps


- Timing belt and timing belt B (Refer to P.11-21.)
 - Crank angle sensor (Refer to GROUP 16.)
1. Crankshaft sprocket B
2. Key
3. Crankshaft front oil seal



Crankshaft rear oil seal removal steps

- Transmission assembly
 - Clutch cover and disc
4. Flywheel
5. Crankshaft rear oil seal




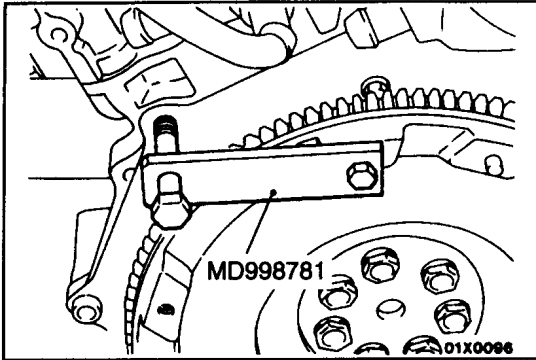

REMOVAL SERVICE POINT

◀▶ FLYWHEEL ASSEMBLY REMOVAL

Use the special tool to secure the flywheel assembly and remove the bolts.

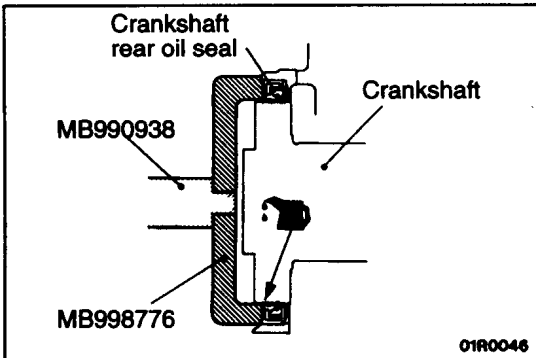

INSTALLATION SERVICE POINTS


▶▶ CRANKSHAFT REAR OIL SEAL INSTALLATION

- (1) Apply a small amount of engine oil to the entire circumference of the oil seal lip.
- (2) Install the oil seal with the special tool as far as the chamfered position of the oil seal case as shown in the illustration.

▶▶ FLYWHEEL ASSEMBLY INSTALLATION

Use the special tool to hold the flywheel in the same manner as removal, and install the bolt. Tighten the bolts to the specification.

Tightening torque: 127 – 137 Nm {13.0 – 14.0 kgf·m}

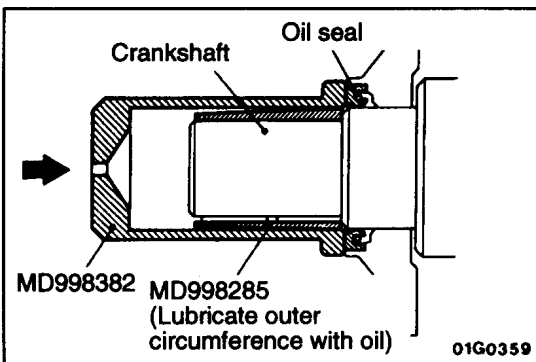

▶▶ CRANKSHAFT FRONT OIL SEAL INSTALLATION

Apply a small amount of engine oil to the entire circumference of the oil seal lip.



Pressfit the oil seal until it is flush with the chamfered end of the oil pump case.

CYLINDER HEAD GASKET**REMOVAL AND INSTALLATION****Pre-removal Operation**

- (1) Fuel Discharge Prevention
- (2) Engine Oil Removal
- (3) Strut Tower Bar Removal
- (4) Timing Belt Removal (Refer to P.11-21.)
- (5) Thermostat Case Assembly Removal
(Refer to GROUP 14 – Water Hose Pipe.)
- (6) Front Exhaust Pipe Removal (Refer to GROUP 15.)

Post-installation Operation

- (1) Front Exhaust Pipe Installation
(Refer to GROUP 15.)
- (2) Thermostat Case Assembly Installation
(Refer to GROUP 14 – Water Hose Pipe.)
- (3) Engine Oil Filling
- (4) Timing Belt Installation (Refer to P.11-21.)
- (5) Strut Tower Bar Installation
- (6) Accelerator Cable Adjustment

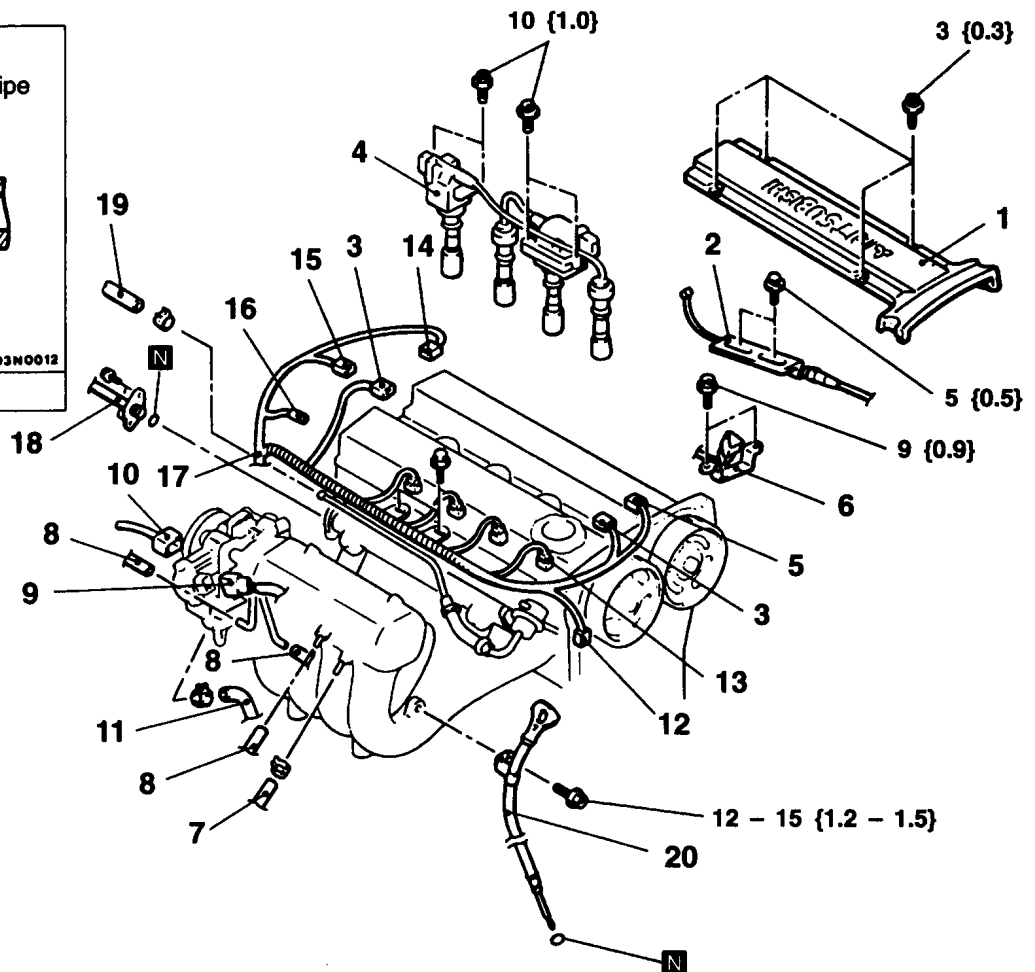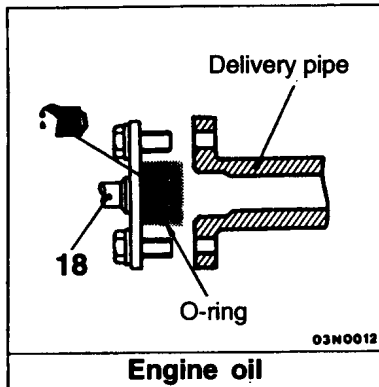


02M0009

Unit: Nm {kgf·m}

Removal steps

- | | |
|--|--|
| 1. Center cover | 11. Water hose connection |
| 2. Accelerator cable connection | 12. Oxygen sensor connector |
| 3. Ignition coil connector | 13. Injector connector |
| 4. Ignition coil | 14. Cam position sensor connector |
| 5. Crank angle sensor connector | 15. Coolant temperature sensor connector |
| 6. Crank angle sensor bracket connection | 16. Water temperature gauge unit connector |
| 7. Brake booster vacuum hose connection | 17. Control harness |
| 8. Vacuum hose connection | ▶D◀ 18. Fuel pipe pressure hose connection |
| 9. TPS connector | 19. Fuel return hose connection |
| 10. ISC motor connector | 20. Oil level gauge guide assembly |

78 → 0 → 20 → +90° → +90°
 {8.0 → 0 → 2.0 → +90° → +90°}

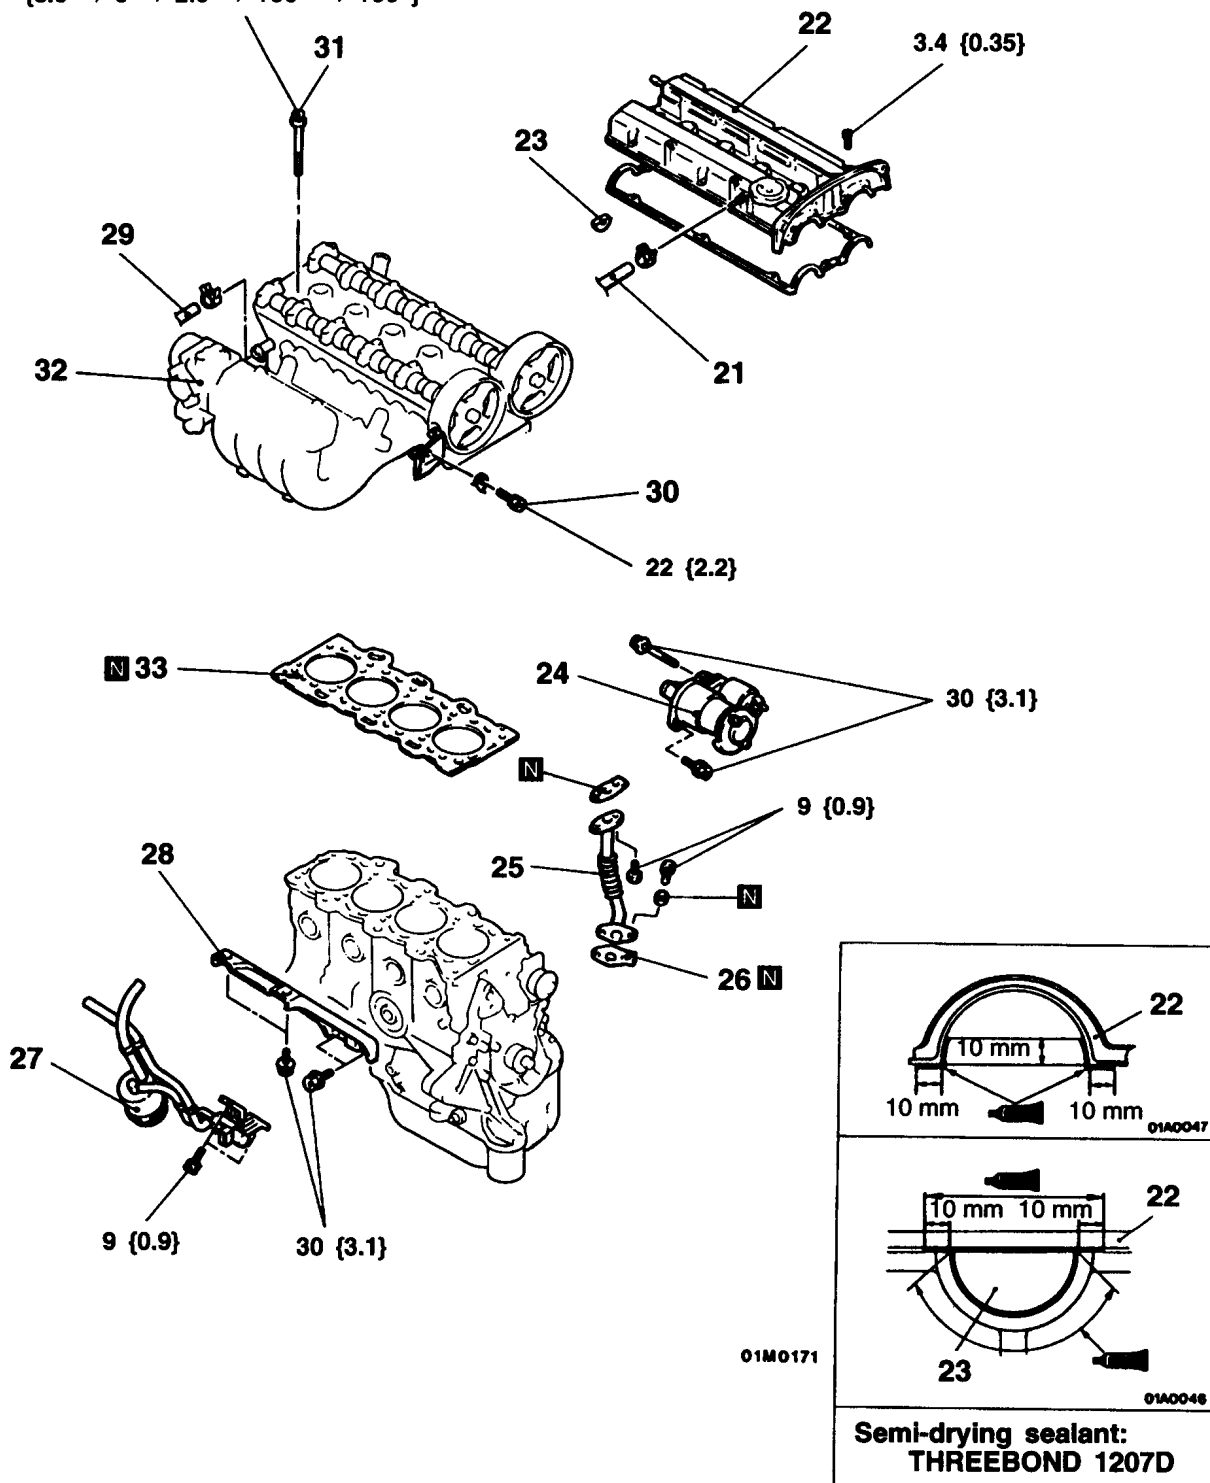


Removal steps

- 21. PCV hose connection
- 22. Rocker cover
- 23. Semi-circular packing
- 24. Starter
- 25. Oil return pipe
- 26. Oil return pipe gasket
- 27. Vacuum tank/solenoid valve/vacuum hose assembly

- 28. Intake manifold stay
- 29. Heater hose connection
- 30. Alternator brace stay mounting bolt
- 31. Cylinder head bolt
- 32. Cylinder head assembly
- 33. Cylinder head gasket

◀A▶ ▶B▶

▶A▶

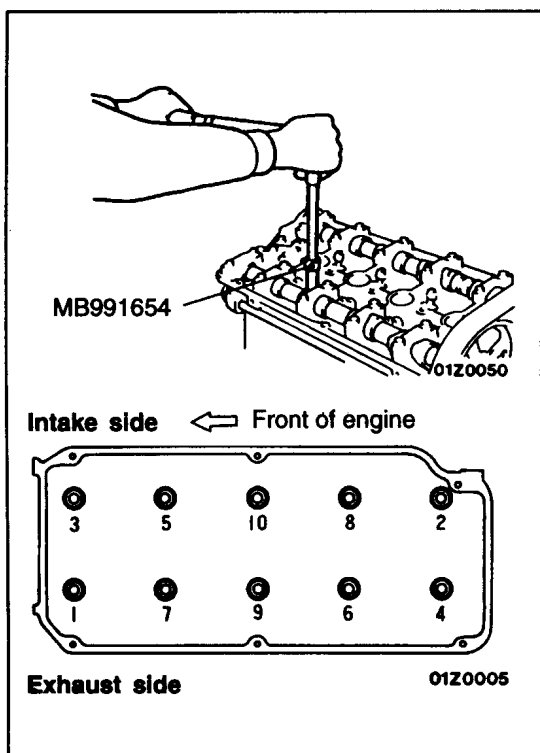

REMOVAL SERVICE POINT

◀A▶ CYLINDER HEAD BOLT REMOVAL

Loosen the bolts in 2 or 3 steps in order of the numbers shown in the illustration, and remove the cylinder head assembly.

INSTALLATION SERVICE POINTS

▶A◀ CYLINDER HEAD GASKET INSTALLATION


- (1) Wipe off all oil and grease from the gasket mounting surface.
- (2) Install so that the shapes of the cylinder head holes match the shapes of the respective cylinder head gasket holes.


▶B◀ CYLINDER HEAD BOLT INSTALLATION

- (1) When installing the cylinder head bolts, the length below the head of the bolts should be within the limit. If it is outside the limit, replace the bolts.

Limit (A): 99.4 mm

- (2) Apply a small amount of engine oil to the thread section and the washer of the cylinder head bolt.

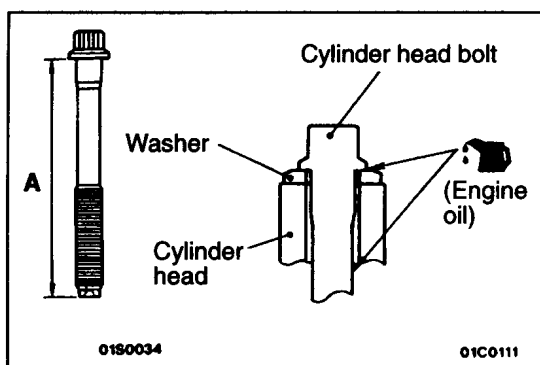


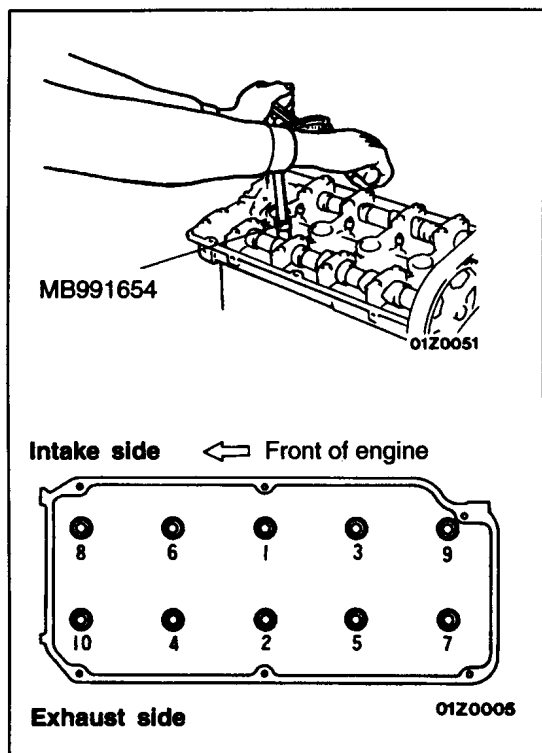


(3) Tighten the bolts by the following procedure.

Step	Operation
1	Tighten to 78 Nm {8.0 kgf·m} in the order shown in the illustration.
2	Fully loosen in the reverse order of that shown in the illustration.
3	Tighten to 20 Nm {2.0 kgf·m} in the order shown in the illustration.
4	Mark the head of the cylinder head bolt and cylinder head by paint, then tighten 90° of a turn in the order shown in the illustration.
5	Tighten 90° of a turn in the order shown in the illustration. Check that the painted mark of the head bolt is lined up with that of the cylinder head.

Caution

- (1) Always make a tightening angle just 90°. If it is less than 90°, the head bolt will be loosened.
- (2) If it is more than 90°, remove the head bolt and repeat the procedure from step 1.

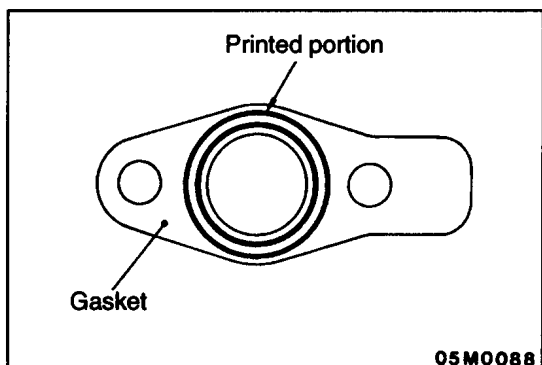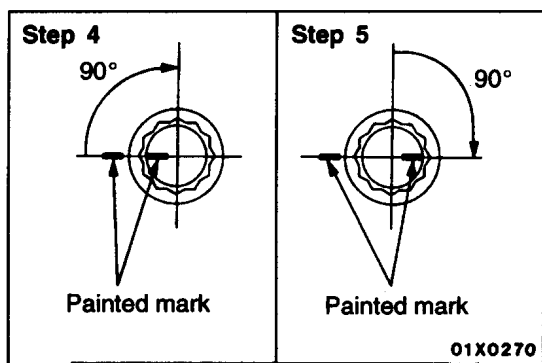

►C◄ OIL RETURN PIPE GASKET INSTALLATION

Install the gasket with the printed portion toward the oil pan.



►D◄ HIGH-PRESSURE FUEL HOSE INSTALLATION

- (1) Apply a small amount of new engine oil to the O-ring, then fit the O-ring in the delivery pipe.

Caution

Do not let any engine oil get into the delivery pipe.

- (2) Check that the high pressure hose turns smoothly. If the hose does not turn smoothly, the O-ring is probably being clamped. Disconnect the high-pressure fuel hose and check the O-ring for damage. After this, re-install the hose to the delivery pipe and check that the hose turns smoothly.
- (3) Tighten the mounting bolts to the specification.

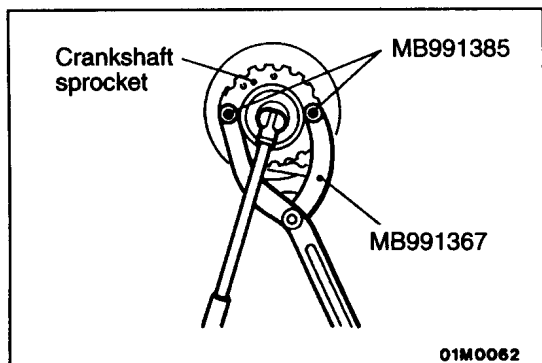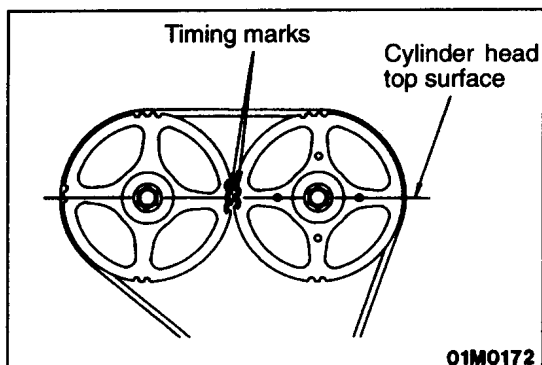

REMOVAL SERVICE POINTS

◀A▶ TIMING BELT REMOVAL

- (1) Turn the crankshaft in the forward direction (clockwise) to align the timing marks and bring no. 1 cylinder to TDC on the compression stroke.

Caution

Always turn the crankshaft in the forward direction.

- (2) Loosen the tension pulley center bolt and remove the timing belt.

Caution



If the timing belt is to be reused, mark the back side of the belt with an arrow indicating the direction of rotation (clockwise) using a chalk.

◀B▶ CRANKSHAFT SPROCKET REMOVAL

◀C▶ TIMING BELT B REMOVAL

Caution


If timing belt B is to be reused, mark the back side of the belt with an arrow indicating the direction of rotation (clockwise) using a chalk.

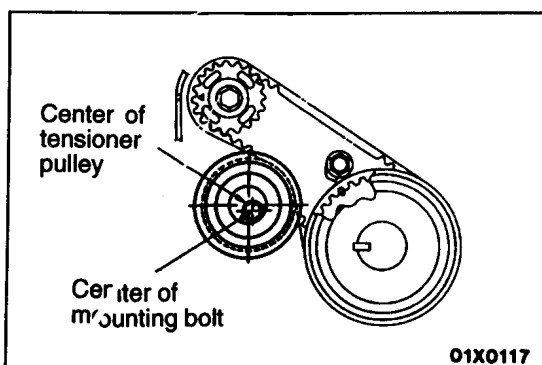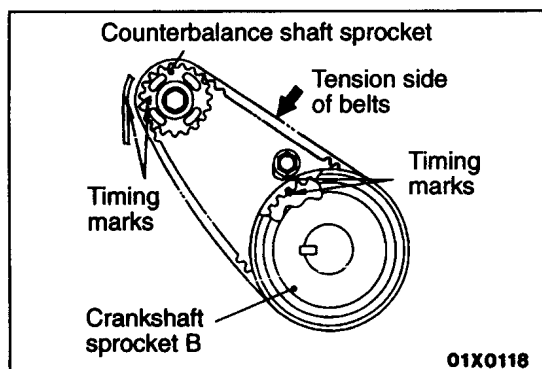

INSTALLATION SERVICE POINTS

▶A◀ TIMING BELT B / TIMING BELT B TENSIONER INSTALLATION

- (1) Follow these steps to install timing belt B.
 - a. Check that the timing marks on crankshaft sprocket B and counterbalance shaft sprocket are aligned with the corresponding timing marks.
 - b. Mount timing belt B onto crankshaft sprocket B and counterbalance sprocket. At this time, ensure that the tension side of the belt is taut.
- (2) Follow these steps to adjust the tension in timing belt B.
 - a. Position the timing belt B tensioner so that the center of the tensioner pulley is located on the upper left side with respect to the center of the mounting bolt and, at the same time, the tension pulley flange is on the front side of the engine. Then, temporarily secure the timing belt B tensioner in position.

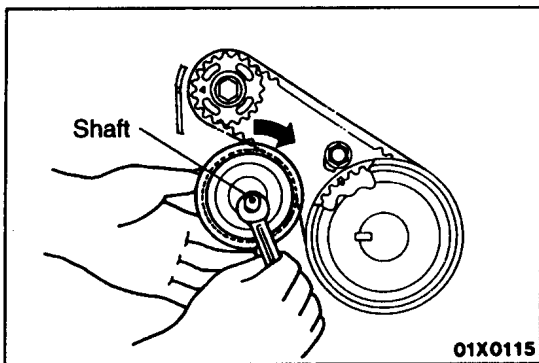



- b. Holding the timing belt "B" tensioner up with your finger in the direction of the arrow, place pressure on the timing belt so that the tension side of the belt is taut. Now tighten the bolt to fix the tensioner.

Caution

When tightening the bolt, ensure that the tensioner pulley shaft does not rotate with the bolt. Allowing it to rotate with the bolt can cause excessive tension on the belt.

- c. To ensure that the tension is correct, depress the belt in the arrowed direction with a finger. If not, adjust.

Standard value: 5 – 7 mm

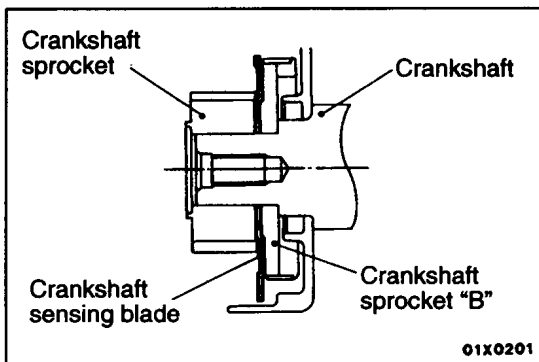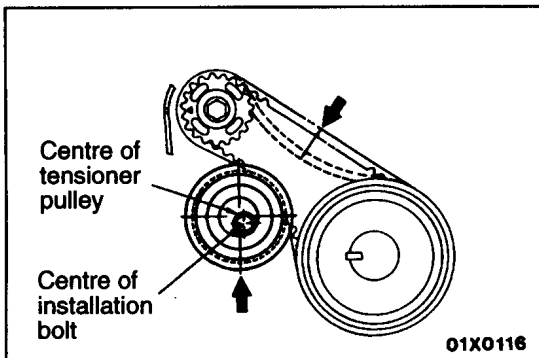

►B◄ CRANKSHAFT SENSING BLADE INSTALLATION

When installing, make sure the direction is correct. See figure.

►C◄ CRANKSHAFT SPROCKET INSTALLATION

- (1) Apply the minimum amount of engine oil to the bearing surface and thread of the crankshaft bolt.
- (2) While holding the crankshaft sprocket in the same manner as at the removal, tighten the bolt to the specified torque.

Tightening torque: 108 – 127 Nm {11.0 – 13.0 kgf·m}

►D◄ AUTO TENSIONER INSTALLATION

- (1) Apply 98 to 196 N {10 to 20 kgf} force to the auto tensioner by pressing it against a metal (cylinder block, etc.), and measure the movement of the push rod.


Standard value: Within 1 mm


A: Length when it is free (not pressed)

B: Length when it is pressed

A – B: Movement

- (2) If it is out of the standard value, replace the auto tensioner.

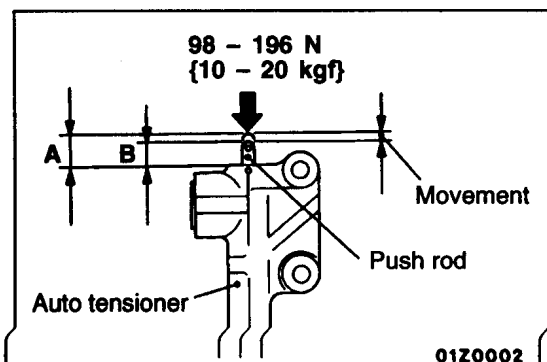


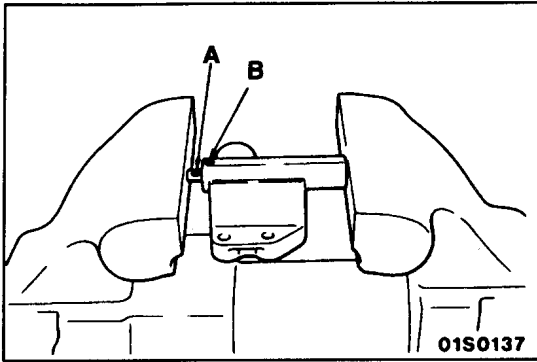

- (3) Use a press or vice to gently compress the auto tensioner push rod until pin hole A of the push rod and pin hole B of the tensioner cylinder are aligned.

Caution

If the compression speed is too fast, the rod may become damaged, so be sure to carry out this operation slowly.

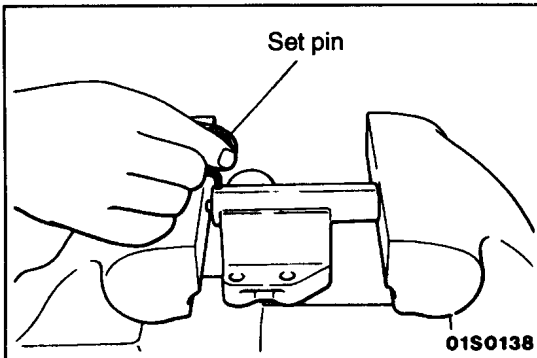

- (4) Once the holes are aligned, insert the set pin.



NOTE

When replacing the auto tensioner with a new part, the pin will be in the auto tensioner.


- (5) Install the auto tensioner to the engine.

►E◄ TIMING BELT INSTALLATION


- (1) Align the timing marks on the camshaft sprocket, crankshaft sprocket and oil pump sprocket.

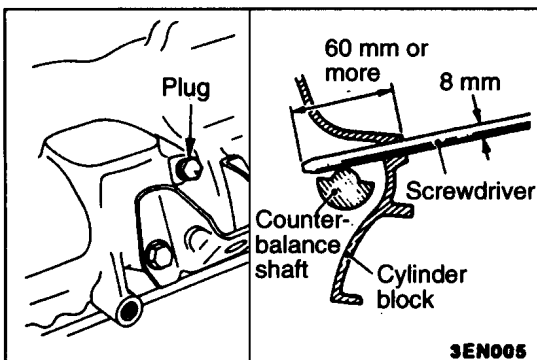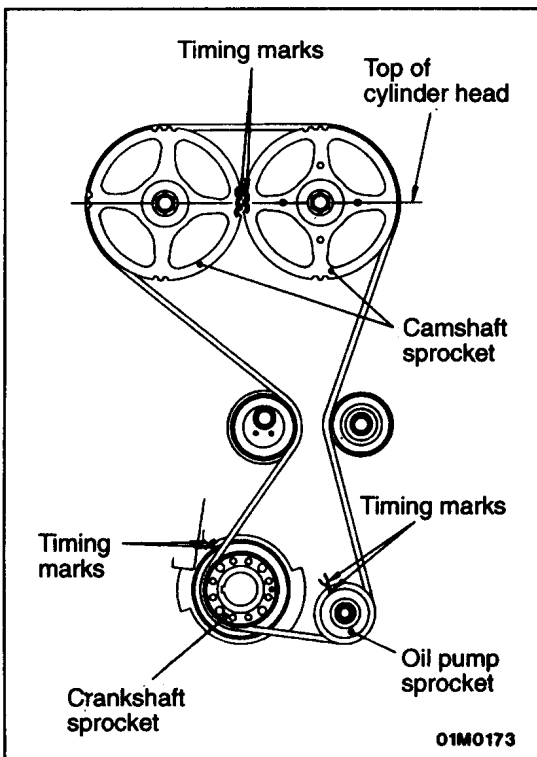


- (2) After aligning the timing mark on the oil pump sprocket, remove the cylinder block plug and insert a Phillips screwdriver with a diameter of 8 mm, and check to be sure that the screwdriver goes in 60 mm or more. If the screwdriver will only go in 20 – 25 mm before striking the counterbalance shaft, turn the sprocket once, realign the timing mark and check that the screwdriver goes in 60 mm or more. The screwdriver should not be taken out until the timing belt is installed.

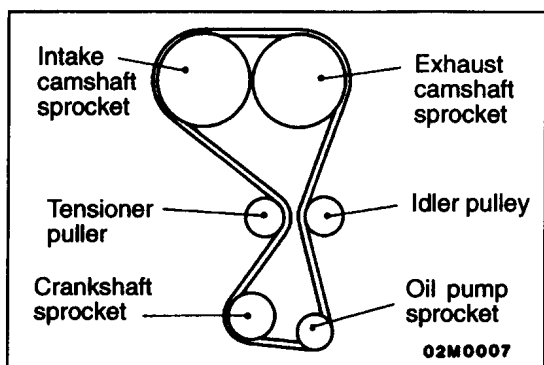


- (3) Use these procedures to install the timing belt with care not to allow its tension side to slack off.
- Mount the timing belt on the crankshaft sprocket, oil pump sprocket, and idler pulley, in that order.

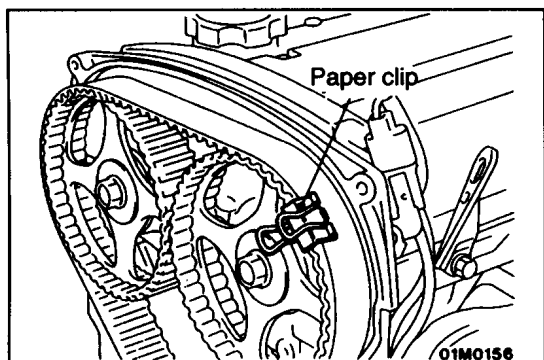

- Fit the timing belt over the camshaft sprocket on the exhaust side and fit a paper clip at the location shown.

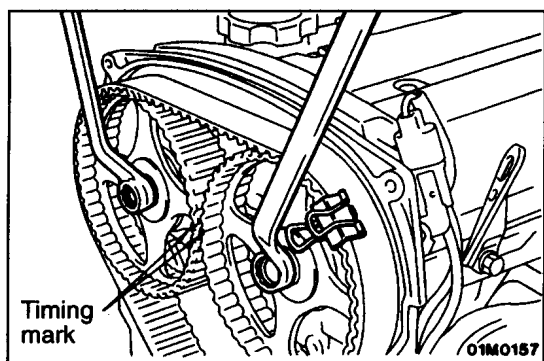

- Using two wrenches, align the timing marks with the top surface of the cylinder head. While so doing, mount the timing belt onto the camshaft sprocket on the intake side.

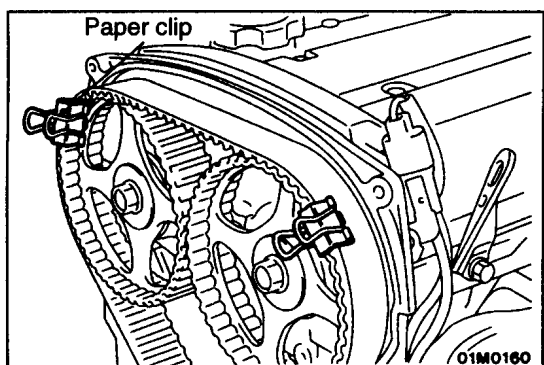


- Fit another paper clip at the location shown.
- Install the timing belt to the tensioner pulley.
- Remove the two paper clips.

Caution

After the timing belt has been installed, apply a force to the belt in the direction opposite the turning direction of camshaft sprocket and, with the tension side of the belt kept taut, recheck that each timing belt is located at the respective correct position.

- Ensure that the pinhole in the tensioner pulley center bolt is located on the bottom side and, with the timing belt kept lightly pressed by the tensioner pulley, temporarily tighten the center bolt.
- Check that the timing marks of timing belts are aligned with each other.
- Adjust the timing belt for tension.

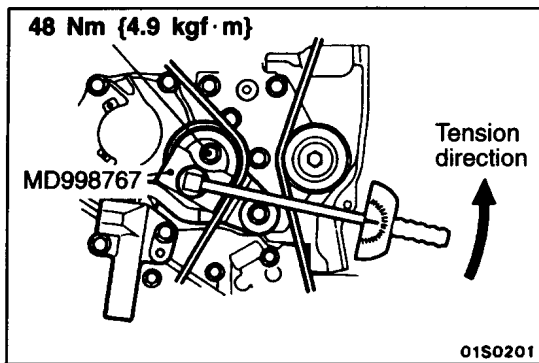

►F◄ TIMING BELT TENSION ADJUSTMENT

- (1) After turning the crankshaft 1/4 of a revolution in the anticlockwise direction, turn it in the clockwise direction until the timing marks are aligned.
- (2) Loosen the tensioner pulley fixing bolt, and then use the special tool and a torque wrench to tighten the fixing bolt to the specified torque while applying tension to the timing belt.

Standard value: 3.5 Nm {0.36 kgf·m} <Timing belt tension torque>

Caution

When tightening the fixing bolt, make sure that the tensioner pulley does not turn with the bolt.

- (3) Remove the set pin from the auto tensioner. At this time, it must be pulled out easily. Turn the crankshaft two revolutions in the clockwise direction, and leave it alone for 15 minutes. Then move in and out the set pin to check that it moves smoothly.


NOTE

If the set pin does not move smoothly, measure the amount of protrusion of the auto tensioner. The auto tensioner is considered good if the protrusion meets the standard value.

Standard value (A): 3.8 – 4.5 mm

If the amount of protrusion is outside the standard value, repeat the operation in steps (1) to (3).

- (4) Check again to be sure that the timing marks of each sprocket are aligned.

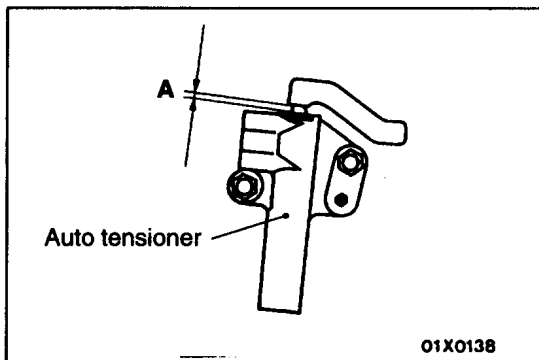

ENGINE ASSEMBLY



REMOVAL AND INSTALLATION

Pre-removal Operation

- (1) Fuel Discharge Prevention
- (2) Hood Removal
- (3) Strut Tower Bar Removal
- (4) Air Hose C Removal
(Refer to GROUP 15 – Intercooler.)
- (5) Radiator Assembly Removal (Refer to GROUP 14.)
- (6) Under Cover Removal
- (7) Front Exhaust Pipe Removal (Refer to GROUP 15.)

Post-installation Operation

- (1) Front Exhaust Pipe Installation
(Refer to GROUP 15.)
- (2) Under Cover Installation
- (3) Radiator Assembly Installation
(Refer to GROUP 14.)
- (4) Accelerator Cable Adjustment
- (5) Air Hose C Installation
(Refer to GROUP 15 – Intercooler.)
- (6) Strut Tower Bar Installation
- (7) Hood Installation

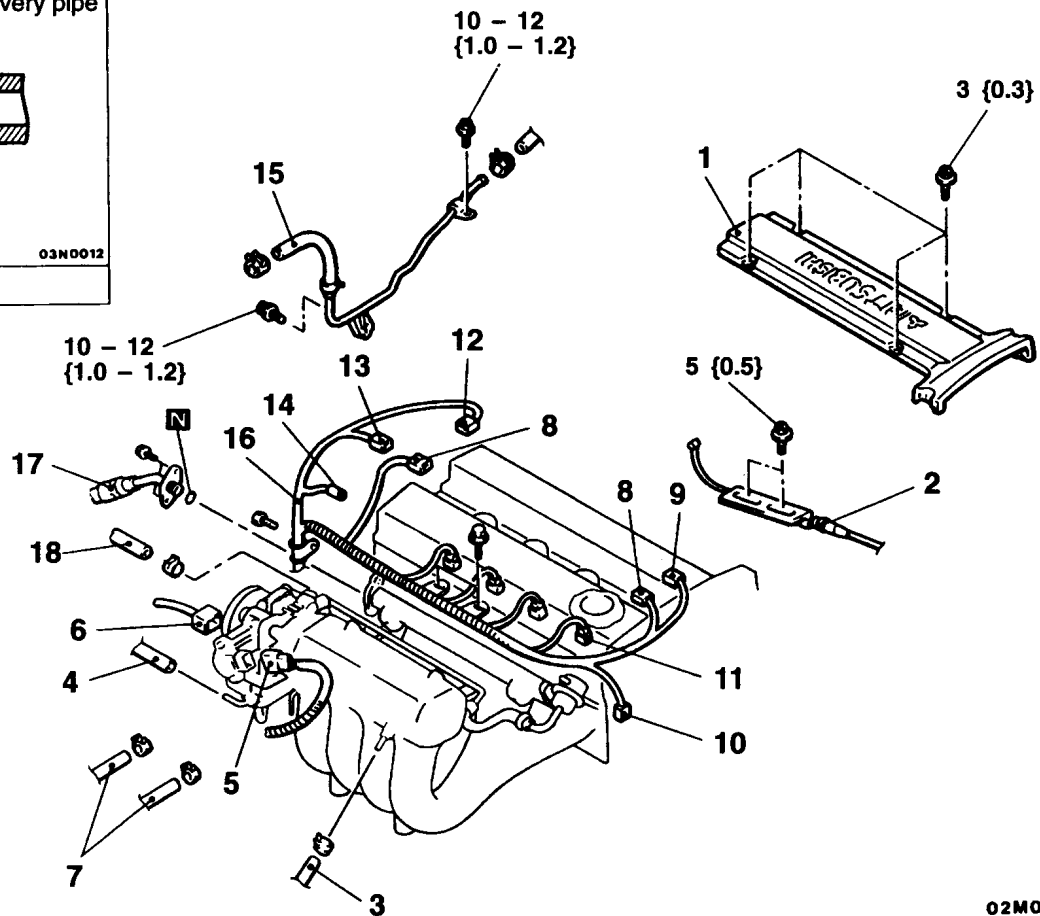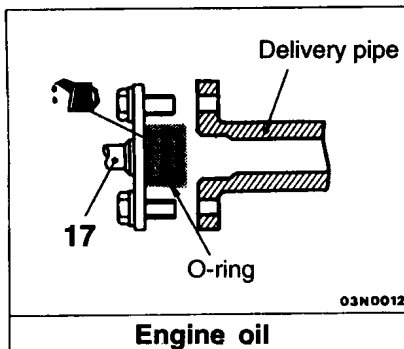


Unit: Nm {kgf · m}


Removal steps

- | | |
|---|--|
| 1. Center cover | 11. Injector connector |
| 2. Accelerator cable | 12. Cam position sensor connector |
| 3. Brake booster vacuum hose connection | 13. Coolant temperature sensor connector |
| 4. Vacuum hose connection | 14. Coolant temperature gauge unit connector |
| 5. Throttle position sensor connector | 15. Vacuum pipe/hose assembly |
| 6. Idle speed control motor connector | 16. Control harness |
| 7. Heater hose connection | 17. High-pressure fuel hose connection |
| 8. Ignition coil connector | 18. Fuel return hose connection |
| 9. Crank angle sensor connector | |
| 10. Oxygen sensor connector | |



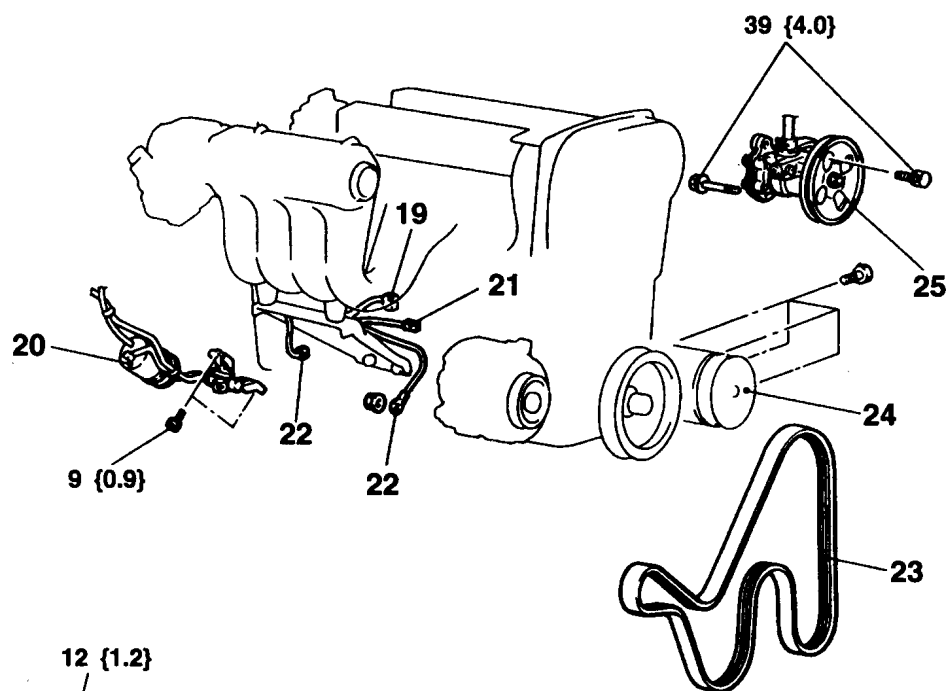

01M0167

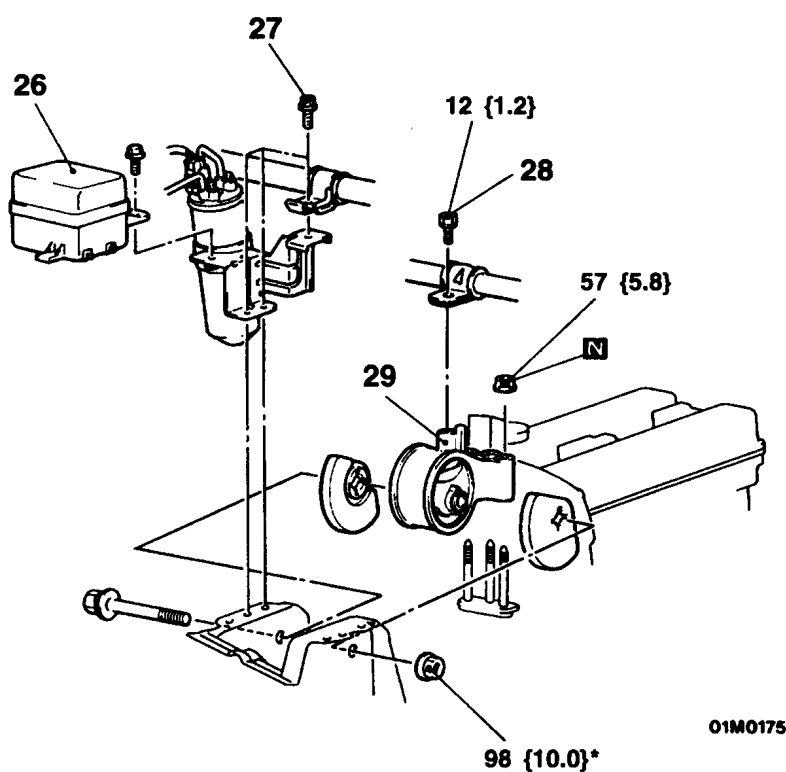

01M0175

Unit: Nm {kgf·m}


- 19. Solenoid valve connector
- 20. Vacuum tank/solenoid valve/vacuum hose assembly
- 21. Oil pressure switch connector
- 22. Alternator connector
 - Drive belt tension inspection (Refer to P.11-4.)
- 23. Drive belt
- 24. A/C compressor
- 25. Power steering oil pump
 - Transmission assembly

- 26. A/C relay box
- 27. A/C receiver bracket mounting bolt
- 28. Oil pressure hose mounting bolt
- 29. Engine mount bracket
- 30. Engine assembly

**Caution**

Mounting locations marked by * should be provisionally tightened, and then fully tightened after placing the vehicle horizontally and loading the full weight of the engine on the vehicle body.



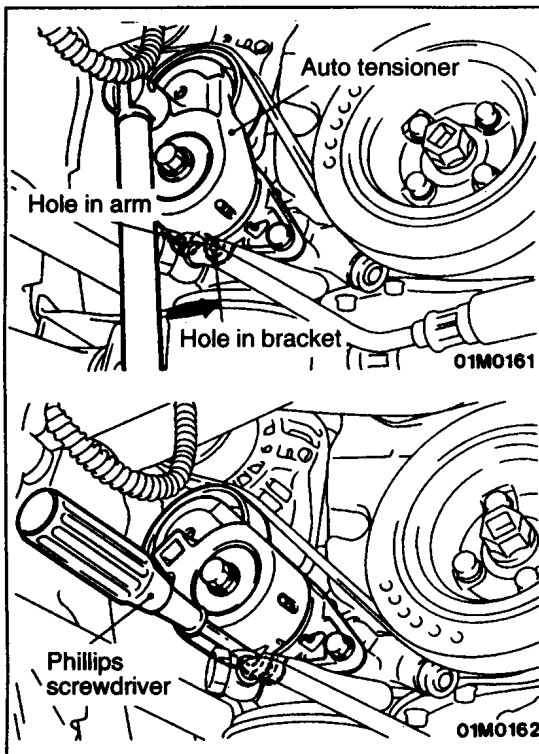

REMOVAL SERVICE POINTS

◀A▶ DRIVE BELT REMOVAL

- (1) Align the hole in the auto tensioner bracket with that in the arm and insert a screwdriver into the holes.
- (2) Remove the drive belt.

◀B▶ POWER STEERING OIL PUMP REMOVAL

Remove the power steering oil pump from the bracket with the hose attached.

NOTE

Place the removed power steering oil pump in a place where it will not be a hindrance when removing and installing the engine assembly, and tie it with a cord.

◀C▶ A/C COMPRESSOR REMOVAL


Disconnect the A/C compressor connector and remove the compressor from the compressor bracket with the hose still attached.

NOTE

Place the removed A/C compressor where it will not be a hindrance when removing and installing the engine assembly, and tie it with a cord.

◀D▶ ENGINE MOUNT BRACKET REMOVAL

- (1) Support the engine with a garage jack.
- (2) Remove the special tools which was attached when the transmission assembly was removed.
- (3) Hold the engine assembly with a chain block or similar tool.
- (4) Place a garage jack against the engine oil pan with a piece of wood in between, jack up the engine so that the weight of the engine is no longer being applied to the engine mount bracket, and then remove the engine mount bracket.

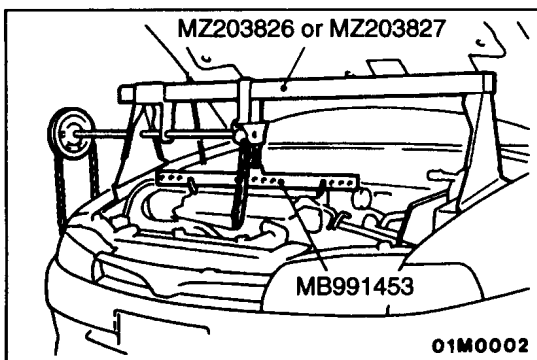


◀E▶ ENGINE ASSEMBLY REMOVAL

After checking that all cables, hoses and harness connectors, etc., are disconnected from the engine, lift the chain block slowly to remove the engine assembly upward from the engine compartment.

INSTALLATION SERVICE POINTS**▶A◀ ENGINE ASSEMBLY INSTALLATION**

Install the engine assembly, checking that the cables, hoses, and harness connectors are not clamped.

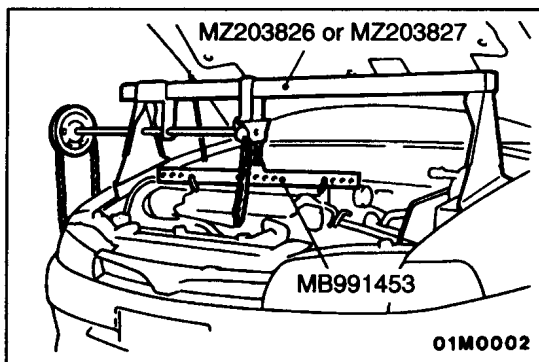**▶B◀ ENGINE MOUNT BRACKET INSTALLATION**

- (1) Place a garage jack against the engine oil pan with a piece of wood in between, and install the engine mount bracket while adjusting the position of the engine.
- (2) Support the engine with the garage jack.
- (3) Remove the chain block and support the engine assembly with the special tools.

▶C◀ HIGH-PRESSURE FUEL HOSE INSTALLATION

- (1) Apply a small amount of new engine oil to the O-ring, then fit the O-ring in the delivery pipe.

Caution

Do not let any engine oil get into the delivery pipe.

- (2) Check that the high pressure hose turns smoothly. If the hose does not turn smoothly, the O-ring is probably being clamped. Disconnect the high-pressure fuel hose and check the O-ring for damage. After this, re-install the hose to the delivery pipe and check that the hose turns smoothly.
- (3) Tighten the mounting bolt to the specification.