



Clutch Switch Signal (M/T)

This signals the ECM when the clutch is engaged.

Inspection of clutch switch signal.

Check for an open in the wire (MTCLS line):

1. Turn the ignition switch ON (II).
2. Measure voltage between ECM connector terminals C4 and A26.

Is voltage less than 1.0 V?

YES

NO

Check the clutch switch:

1. Turn the ignition switch OFF.
2. Disconnect the 3P connector from the clutch switch.
3. Check for continuity between the clutch switch connector terminals No. 1 and No. 3.

Is there continuity?

YES

NO

- Adjust the clutch switch.
- Replace the clutch switch.

Check for an open in the wire (MTCLS line):

1. Turn the ignition switch ON (II).
2. Measure voltage between the clutch switch connector terminal No. 1 and body ground.

Is there approx. 5 V?

YES

NO

Repair open in the wire between the ECM (C4) and the clutch switch.

Repair open in BLK wire between the clutch switch and G401 (located behind left kick panel).

Check for short in the wire (MTCLS line):

1. Depress the clutch pedal.
2. Measure voltage between ECM connector terminals C4 and A26.

(To page 11-126)

ECM CONNECTORS

A (26P)

C (12P)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26


1	2	3	4	5	6
7	8	9	10	11	12

LG1
(BRN/BLK)

MTCLS
(PNK)


Terminal side of male terminals

CLUTCH SWITCH 3P CONNECTOR

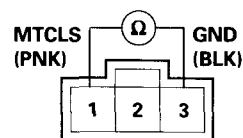

Wire side of female terminals

CLUTCH SWITCH 3P CONNECTOR

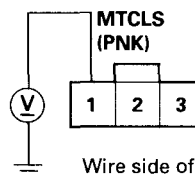

Wire side of female terminals

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

LG1
(BRN/BLK)

MTCLS
(PNK)

(cont'd)

Idle Control System

Clutch Switch Signal (M/T) (cont'd)

(From page 11-125)

