

AUDIO SYSTEM

CONTENTS

	page		page
GENERAL INFORMATION		REMOTE CD CHANGER TEST	14
INTRODUCTION	1	REMOVAL AND INSTALLATION	
DESCRIPTION AND OPERATION		DOOR MOUNTED SPEAKER	15
INTERFERENCE ELIMINATION	1	INSTRUMENT PANEL SPEAKER	15
POWER ANTENNA	2	MANUAL ANTENNA AND MAST	16
REMOTE AMPLIFIER	2	POWER ANTENNA MAST	16
REMOTE CD CHANGER	2	POWER ANTENNA	16
DIAGNOSIS AND TESTING		RADIO	17
AUDIO DIAGNOSTIC TEST PROCEDURES	2	REAR QUARTER PANEL SPEAKER	17
DIAGNOSTIC CONDITIONS	13	REMOTE AMPLIFIER	18
MANUAL ANTENNA	13	REMOTE CD CHANGER AND MOUNTING	
POWER ANTENNA	14	BRACKET	18

GENERAL INFORMATION

INTRODUCTION

For operation of the factory installed standard and optional radios with cassette or compact disc player, refer to the Sound Systems Operating Instructions in the Owners Manual supplied with the vehicle.

The manual antenna mast has a swirl shape to prevent antenna whistle. The power antenna is a one piece design to reduce mast damage because it is more flexible.

The vehicles are shipped with fuse 5 removed from the Junction Block. The fuse replaces the ignition-off draw (IOD) connector. Fuse 5 is a ten amp fuse. When removed it prevents the battery from discharging during storage. For specific wiring and location, refer to Group 8W, Wiring Diagrams.

The vehicle has two speaker systems:

Standard Speaker System

- Two instrument panel speakers
- Two door speakers
- Two rear quarter panel speakers

Infinity Amplified Speaker System

- Amplifier mounted under the passenger seat
- Two instrument panel speakers
- Two door speakers
- Two rear quarter panel speakers

While driving the amplifier provides unique sound equalizations when the convertible top is in the up position or in the down position. The amplifier remembers which mode it is in as long as the battery voltage (B+) is supplied to the amplifier. If the battery voltage is removed for only a few minutes by:

- Disconnecting the battery

- Dead battery
- Fuse Removal
- Amplifier disconnected

The amplifier reverts to a top up condition even if the top is down. If the amplifier mode does not match the convertible top position, operate the convertible top one cycle and the will reset amplifier to the correct mode.

DESCRIPTION AND OPERATION

INTERFERENCE ELIMINATION

Some components used on the vehicles are equipped with a capacitor to suppress radio frequency interference/static.

Capacitors are mounted in various locations internal to the generator, instrument cluster and windshield wiper motor.

To eliminate radio interference, ground straps are used in different areas of the vehicle. These ground circuits should be securely tightened to assure good metal to metal contact. The ground straps conduct very small high frequency electrical signals to ground and require clean surface contact area. The radio ground is supplied from the instrument panel harness and is attached to the rear of the radio. Some engines have other ground straps to eliminate further radio interference:

- Engine to shock tower, 2.0L - 2.4L - 2.5L engines
- Engine to transmission, 2.5L engine
- Muffler to bumper beam, 2.0L - 2.4L engines

Radio resistance type spark plug cables in the high tension circuit of the ignition system complete the interference suppression. Faulty or deteriorated spark plug wires should be replaced.

DESCRIPTION AND OPERATION (Continued)

POWER ANTENNA

The power operated radio antenna is a whip type antenna, extended and retracted by a reversible electric motor.

The Automatic Power Antenna is controlled by a combination of an internal relay and limit switches which, are built into the antenna motor housing. This antenna is actuated when the radio is switched ON and the ignition switch in ON or ACCESSORY position. When the ignition switch or the radio is turned OFF the antenna mast should retract fully.

Many antenna problems may be avoided by frequent cleaning of the antenna mast. Clean the antenna mast with a clean soft cloth.

Before an antenna is removed, the antenna performance should be tested to decide if it is a reception problem or an operational problem.

Whenever a operational malfunction occurs, first verify that the radio antenna wire harness is properly connected. Check all connectors before starting normal diagnosis and repair procedures.

REMOTE AMPLIFIER

The amplifier is located under the right front seat.

When the radio system is ON, and all or some speakers are not operating or have a noise distortion refer to the diagnostic tests. Refer to Group 8W, Wiring Diagrams for Pin numbers and location.

REMOTE CD CHANGER

The remote CD changer is located in the center console and is capable of holding up to six disc in a magazine. The magazine can be ejected at anytime that the ignition switch is in the ON position. After the ignition switch is turned OFF, the magazine can only be ejected within one minute. After that period, the magazine will be locked in the CD changer.

DIAGNOSIS AND TESTING**AUDIO DIAGNOSTIC TEST PROCEDURES**

CAUTION: The CD changer/player will only operate between approximate temperatures of -23°C and +65°C (-10°F and +145°F).

Whenever a radio malfunction occurs;

(1) First check FUSES in the Junction Block:



- (a) Fuse 5, Memory feed – Power Antenna and/or Power Amplifier (if equipped)
- (b) Fuse 7, Illumination
- (c) Fuse 14, Ignition feed

NOTE: The vehicles are shipped with the INTERIOR LAMP fuse disconnected.

(2) Verify, the radio wire harness are properly connected before starting normal diagnosis and repair procedures. Refer to Audio Diagnostic Charts and/or Group 8W, Wiring Diagrams.

DIAGNOSIS AND TESTING (Continued)

RADIO CONNECTORS




VIEW FROM
WIRE END

LEGEND:


- 1 - AMP ON-OFF SIGNAL/ANT UP SIGNAL
- 2 - LEFT REAR SPEAKER FEED (+)
- 3 - RIGHT REAR SPEAKER FEED (+)
- 4 - LEFT FRONT SPEAKER FEED (+)
- 5 - RIGHT FRONT SPEAKER FEED (+)
- 6 - LEFT REAR SPEAKER RETURN (-)
- 7 - RIGHT REAR SPEAKER RETURN (-)

- 1 - RADIO MUTE
- 2 - LEFT FRONT SPEAKER RETURN (-)
- 3 - RIGHT FRONT SPEAKER RETURN (-)
- 4 - MARKER -- (HEAD/PARK LAMPS)
- 5 - DIMMER -- (PANEL, LAMPS, VARIABLE)
- 6 - ACCESSORY -- (SWITCHED B+)
- 7 - BATTERY -- (MEMORY)


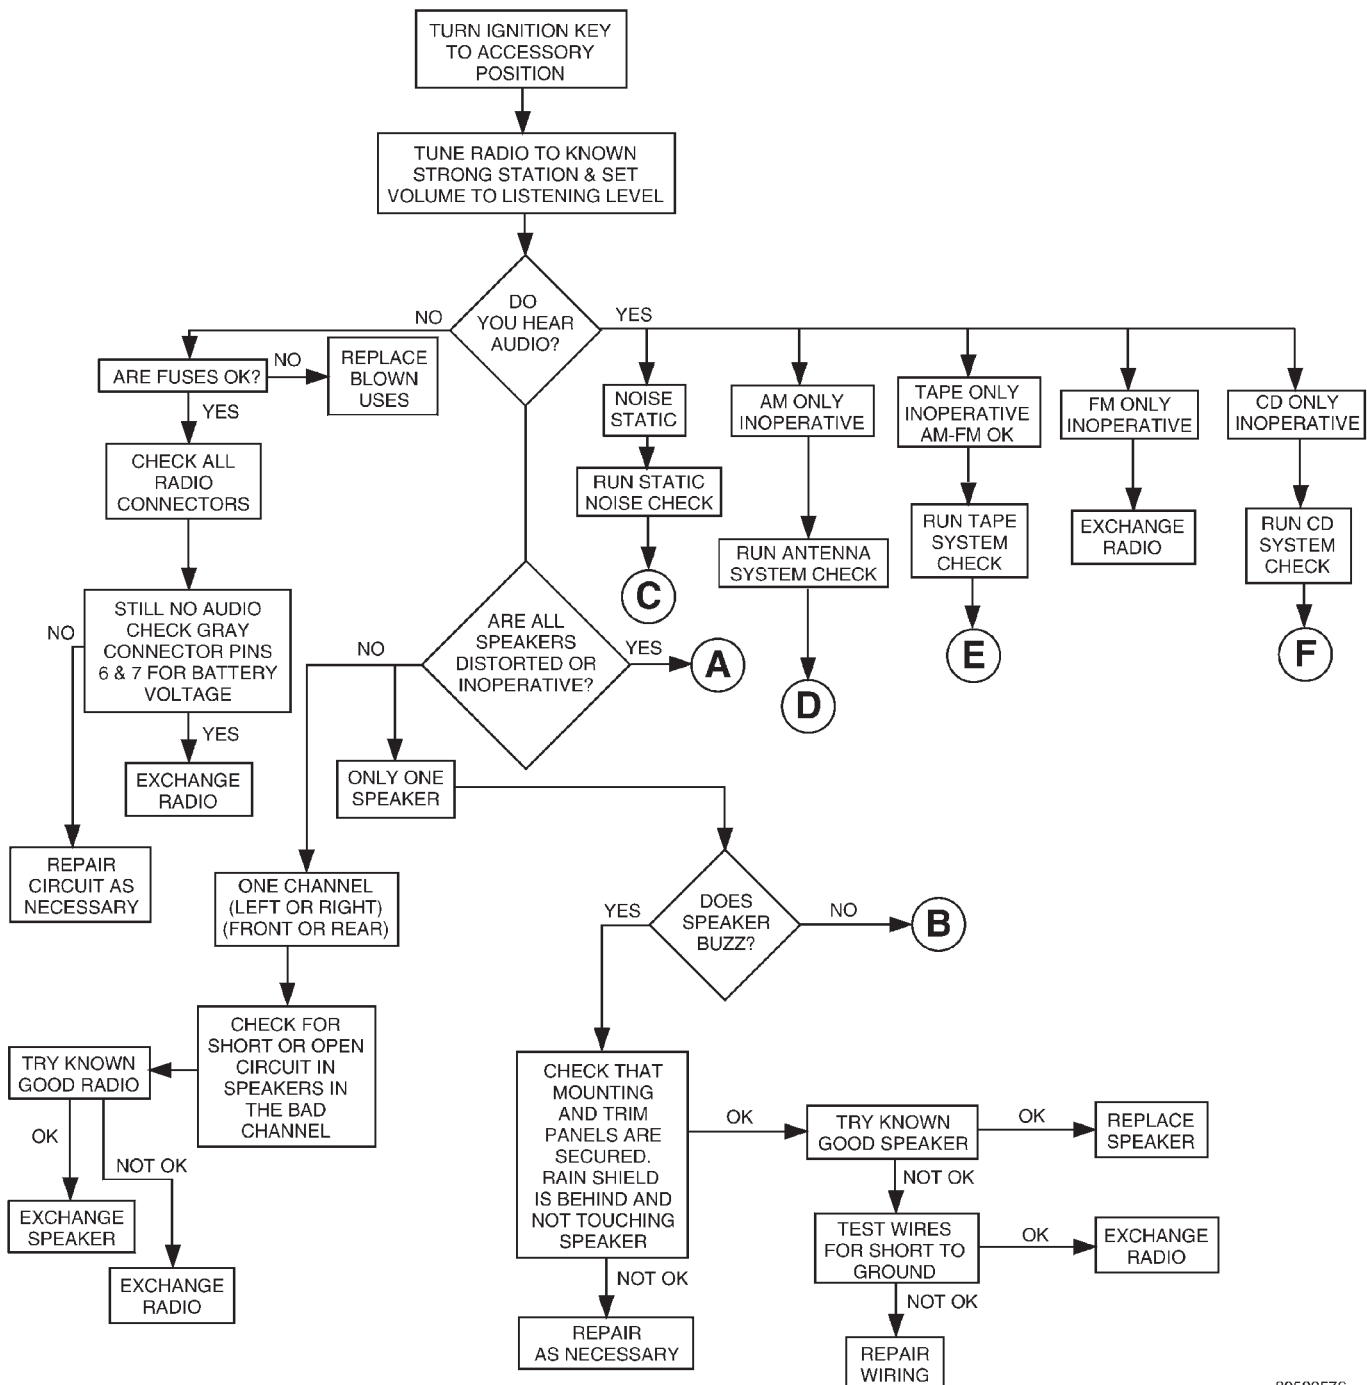


80500576

DIAGNOSIS AND TESTING (Continued)

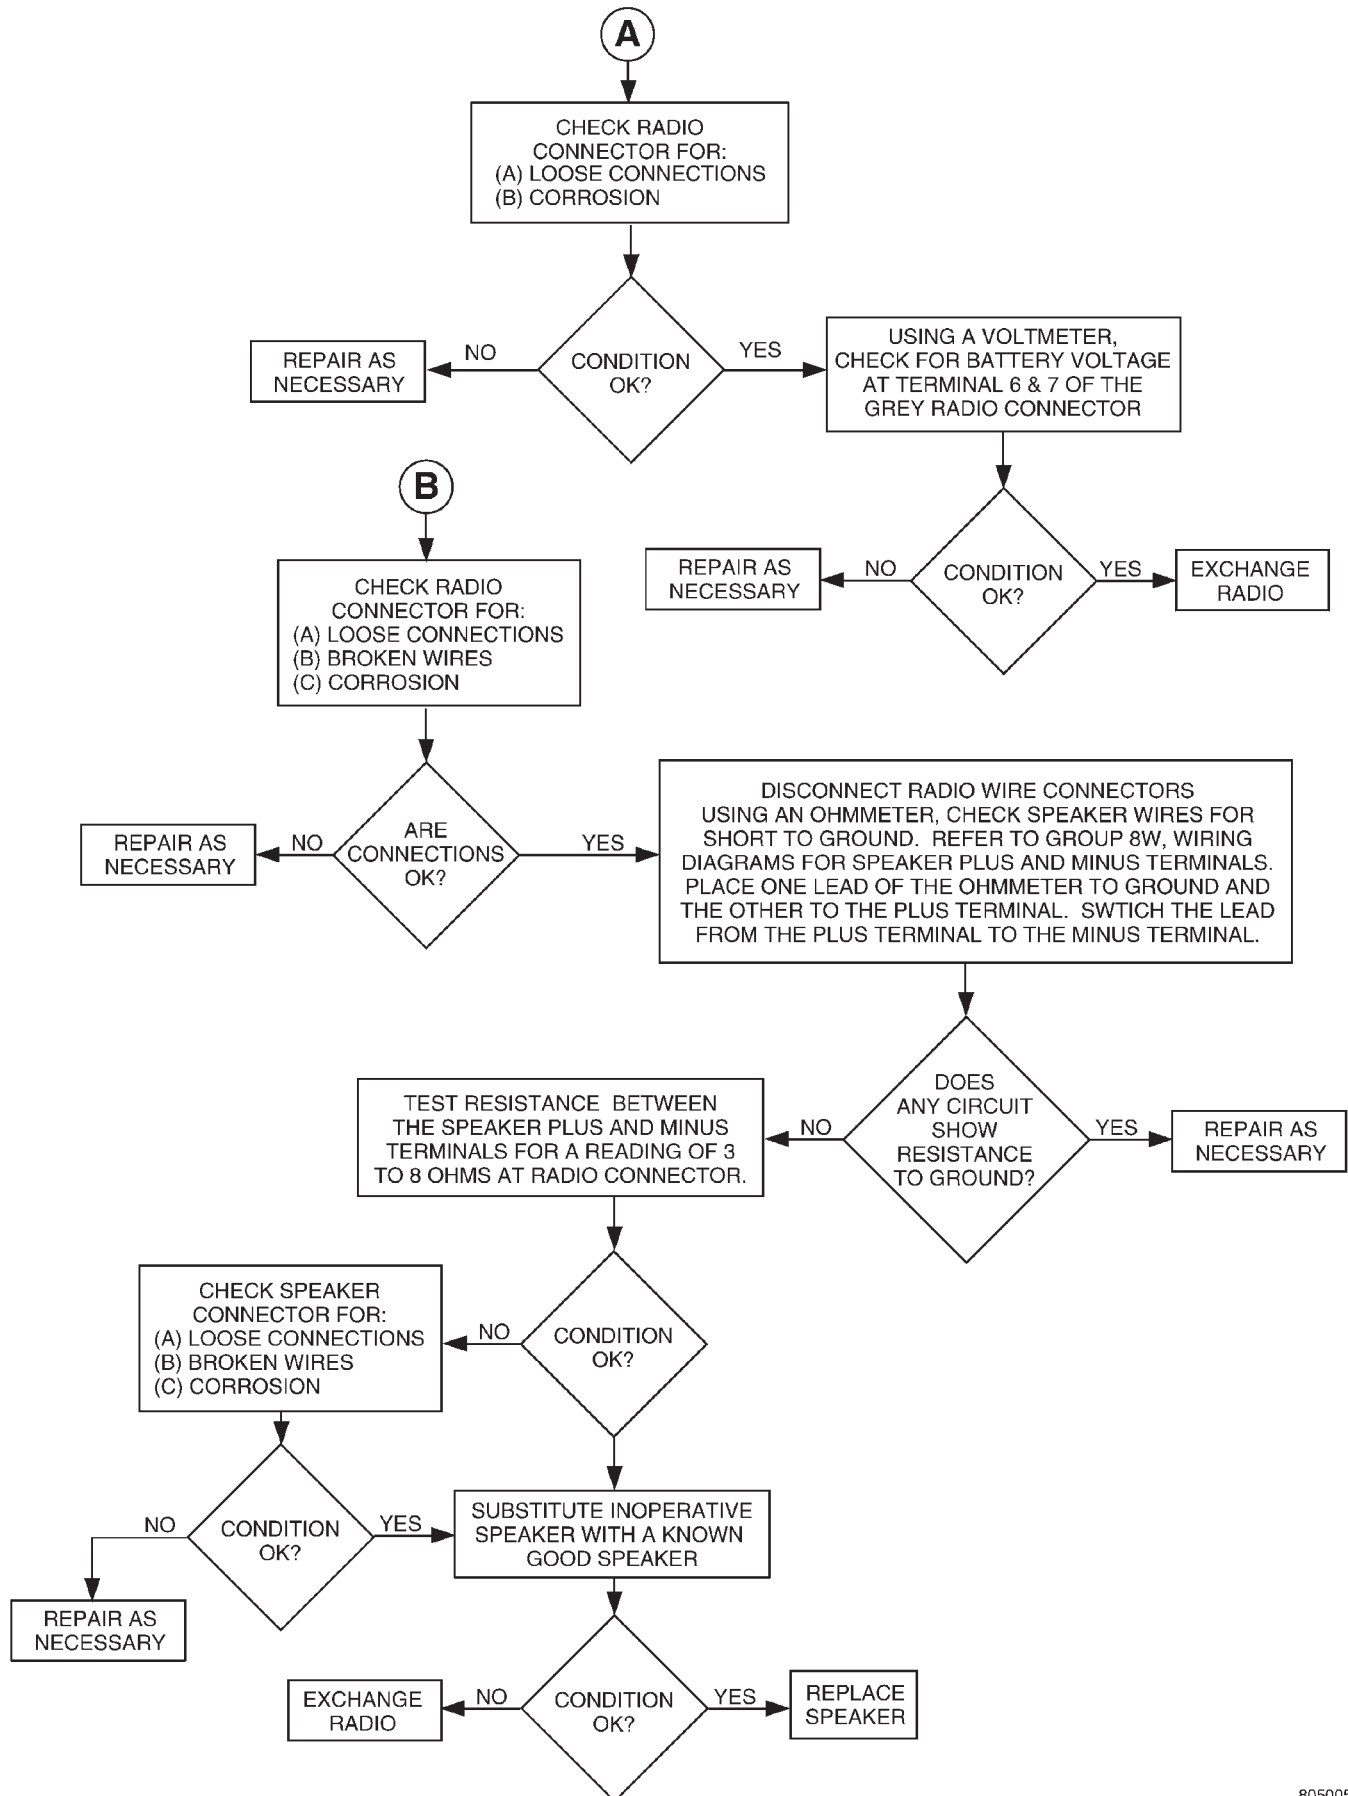


DIAGNOSIS AND TESTING (Continued)

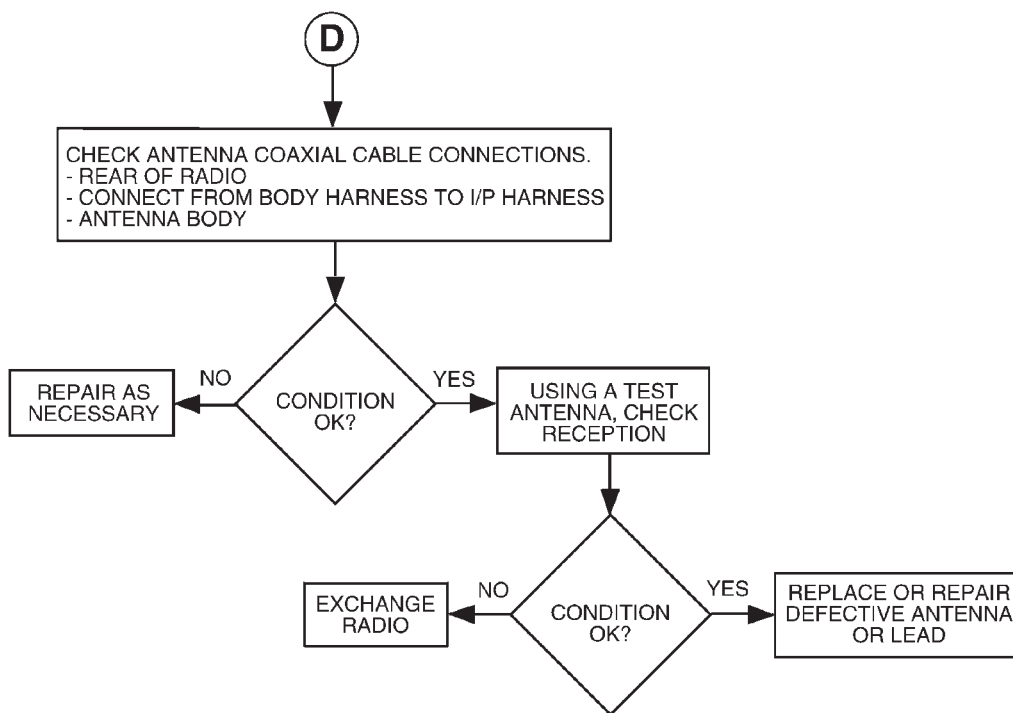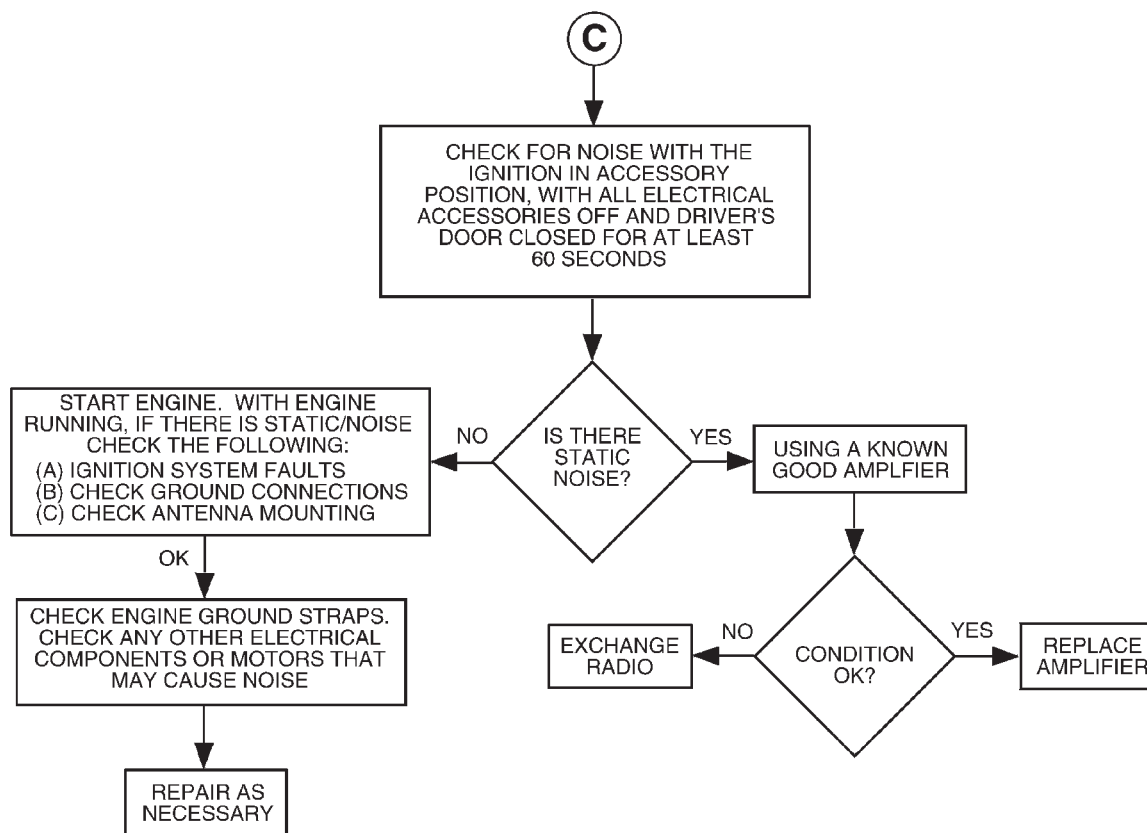


8050057b

DIAGNOSIS AND TESTING (Continued)


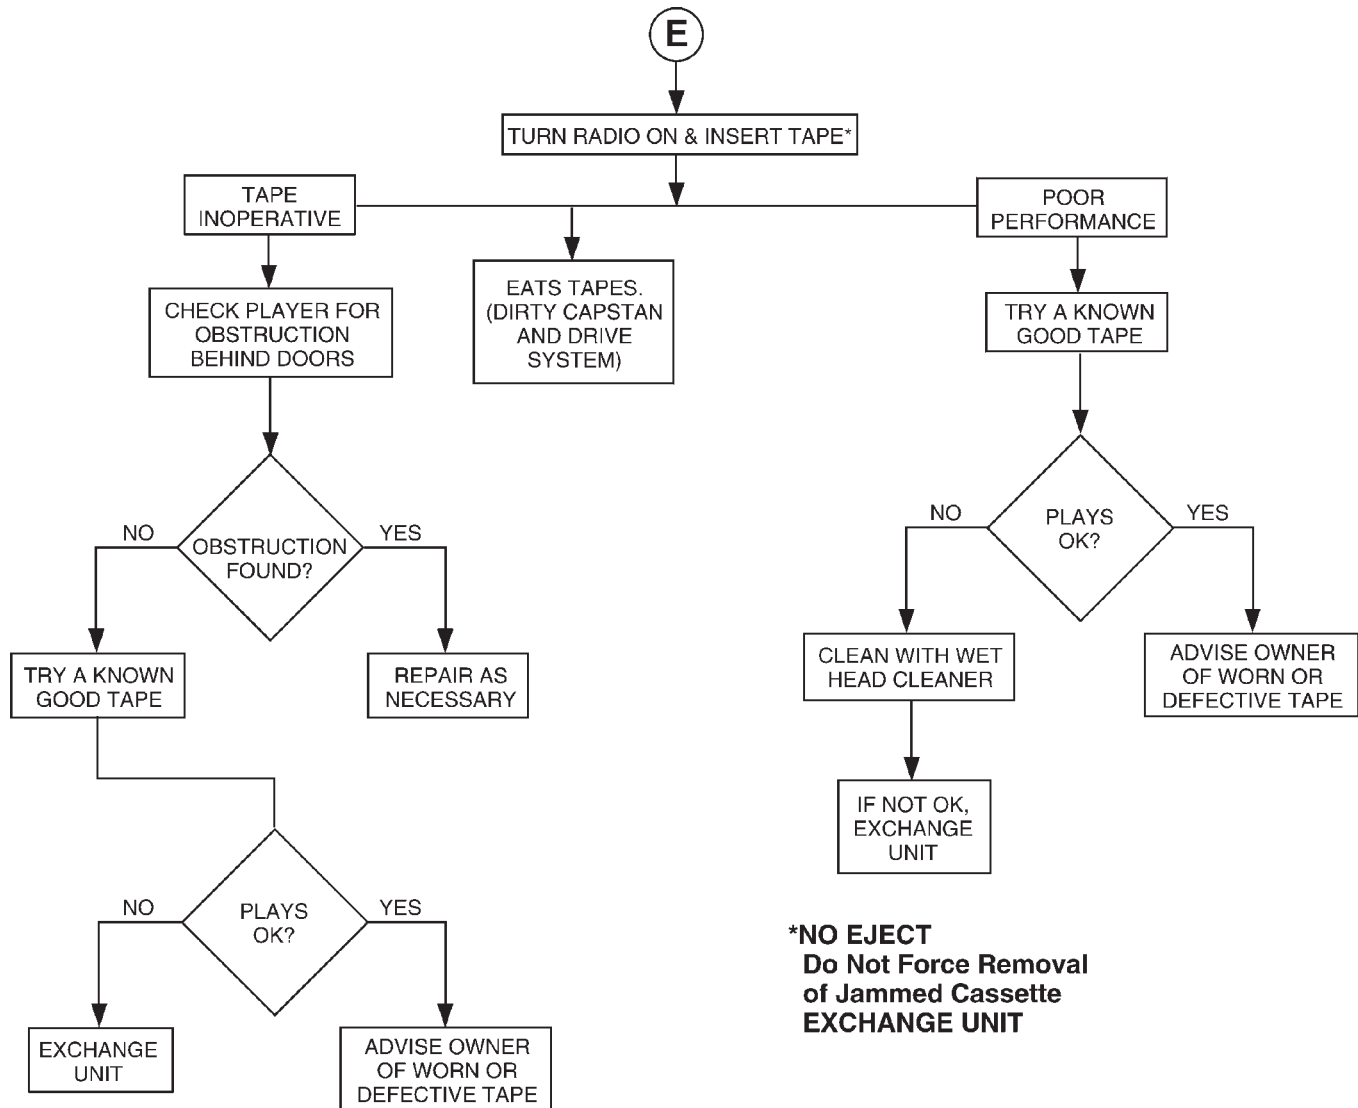
**CHECK TAPES FOR:**

- **CRACKED OR WARPED CASE**
- **LOOSE LABEL ON CASE**
- **TAPE PAD MISSING**
- **TAPE SPOOL(S) JAMMING**

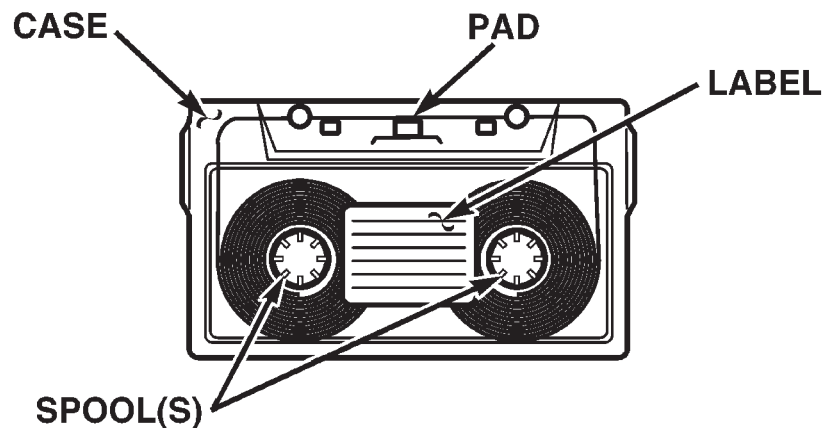

DIAGNOSIS AND TESTING (Continued)

RADIO CONNECTORS




VIEW FROM
WIRE END

LEGEND:


- 1 - AMP ON-OFF SIGNAL/ANT UP SIGNAL
- 2 - LEFT REAR SPEAKER FEED (+)
- 3 - RIGHT REAR SPEAKER FEED (+)
- 4 - LEFT FRONT SPEAKER FEED (+)
- 5 - RIGHT FRONT SPEAKER FEED (+)
- 6 - LEFT REAR SPEAKER RETURN (-)
- 7 - RIGHT REAR SPEAKER RETURN (-)

- 1 - RADIO MUTE
- 2 - LEFT FRONT SPEAKER RETURN (-)
- 3 - RIGHT FRONT SPEAKER RETURN (-)
- 4 - MARKER -- (HEAD/PARK LAMPS)
- 5 - DIMMER -- (PANEL, LAMPS, VARIABLE)
- 6 - ACCESSORY -- (SWITCHED B+)
- 7 - BATTERY -- (MEMORY)

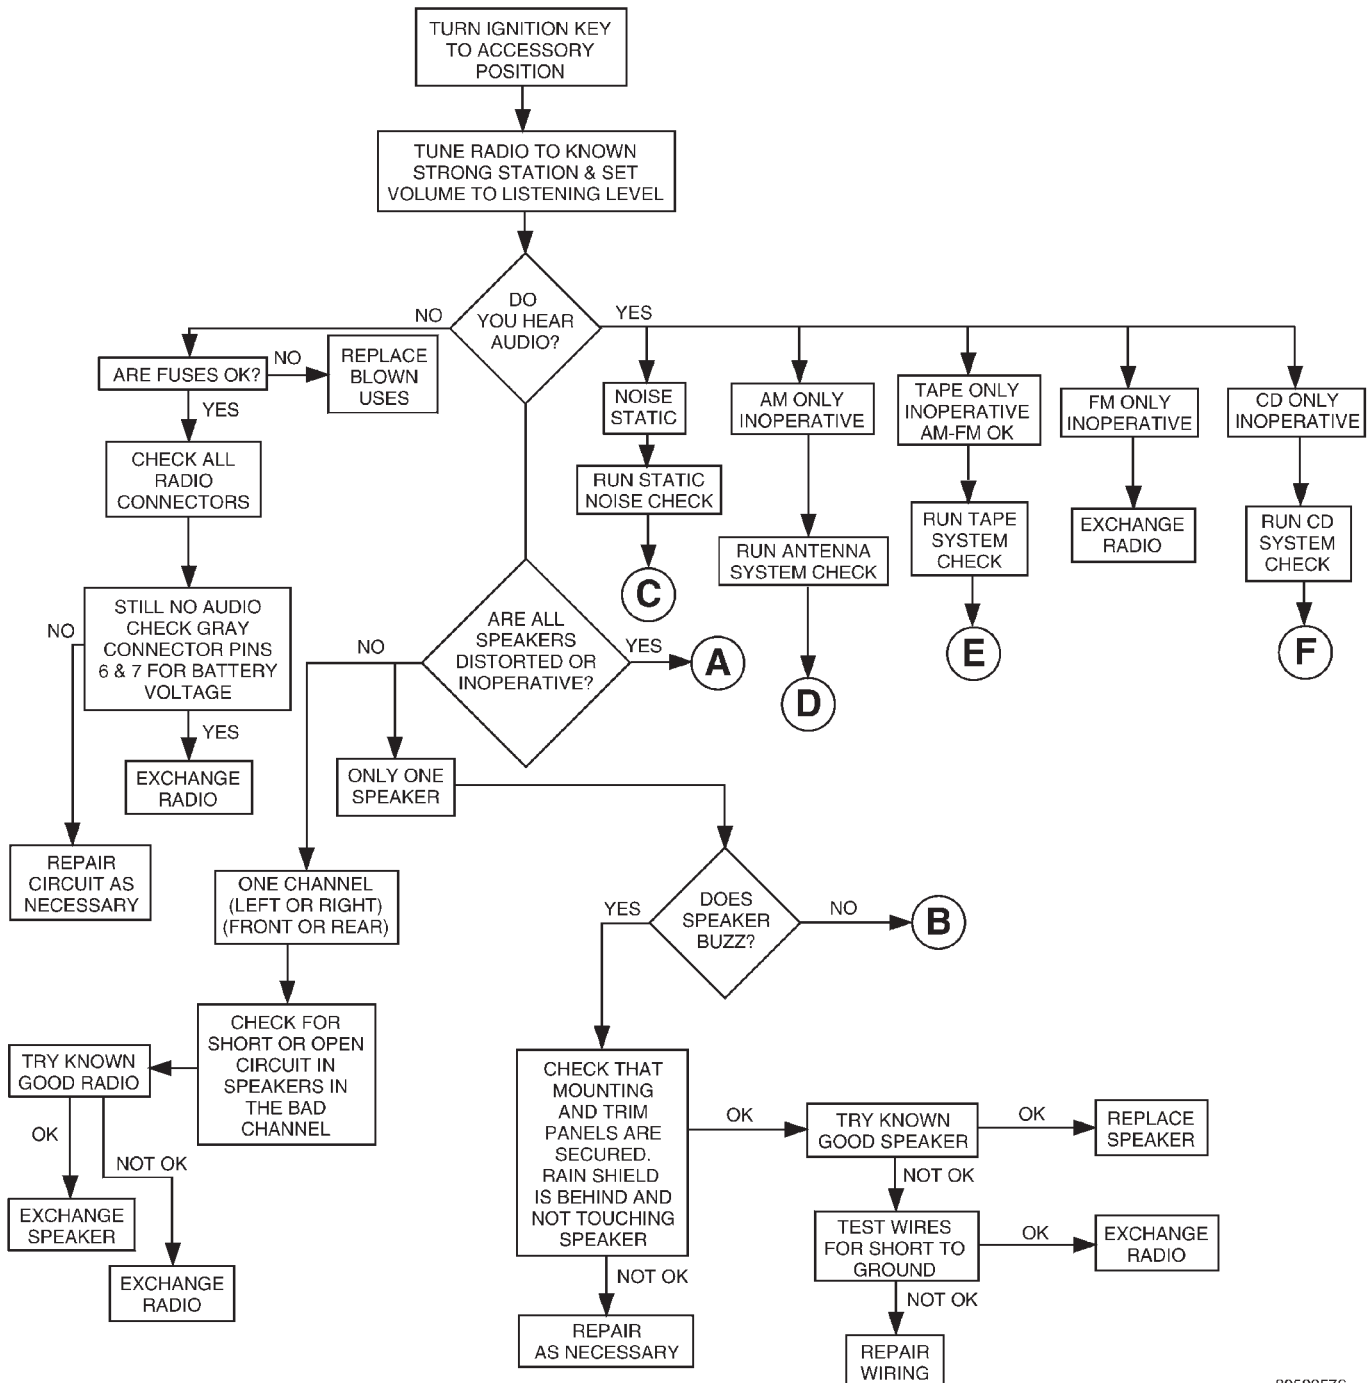

80500576


DIAGNOSIS AND TESTING (Continued)

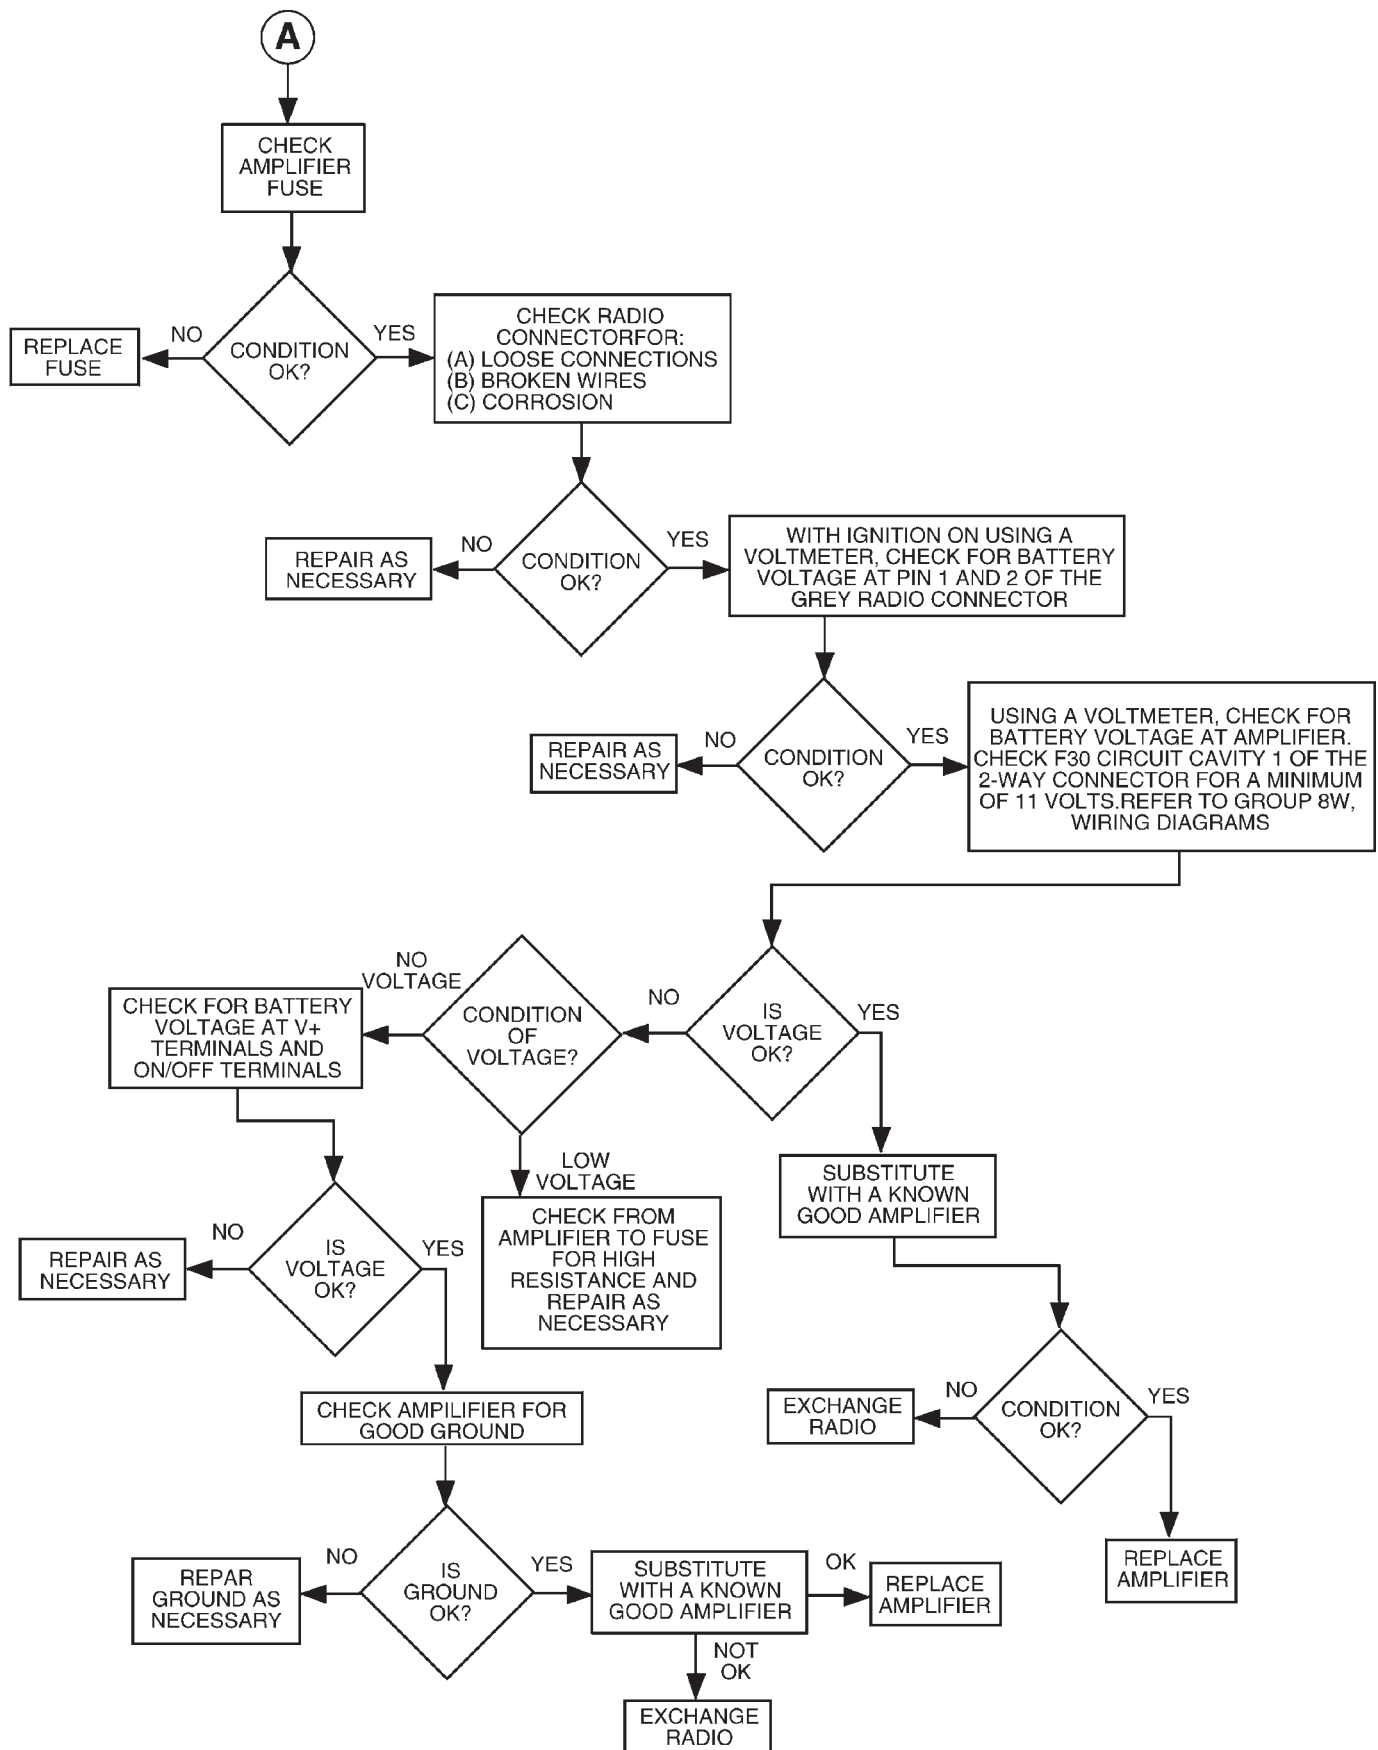

80500571



INFINITY AMPLIFIED SYSTEM CONTINUED

DIAGNOSIS AND TESTING (Continued)

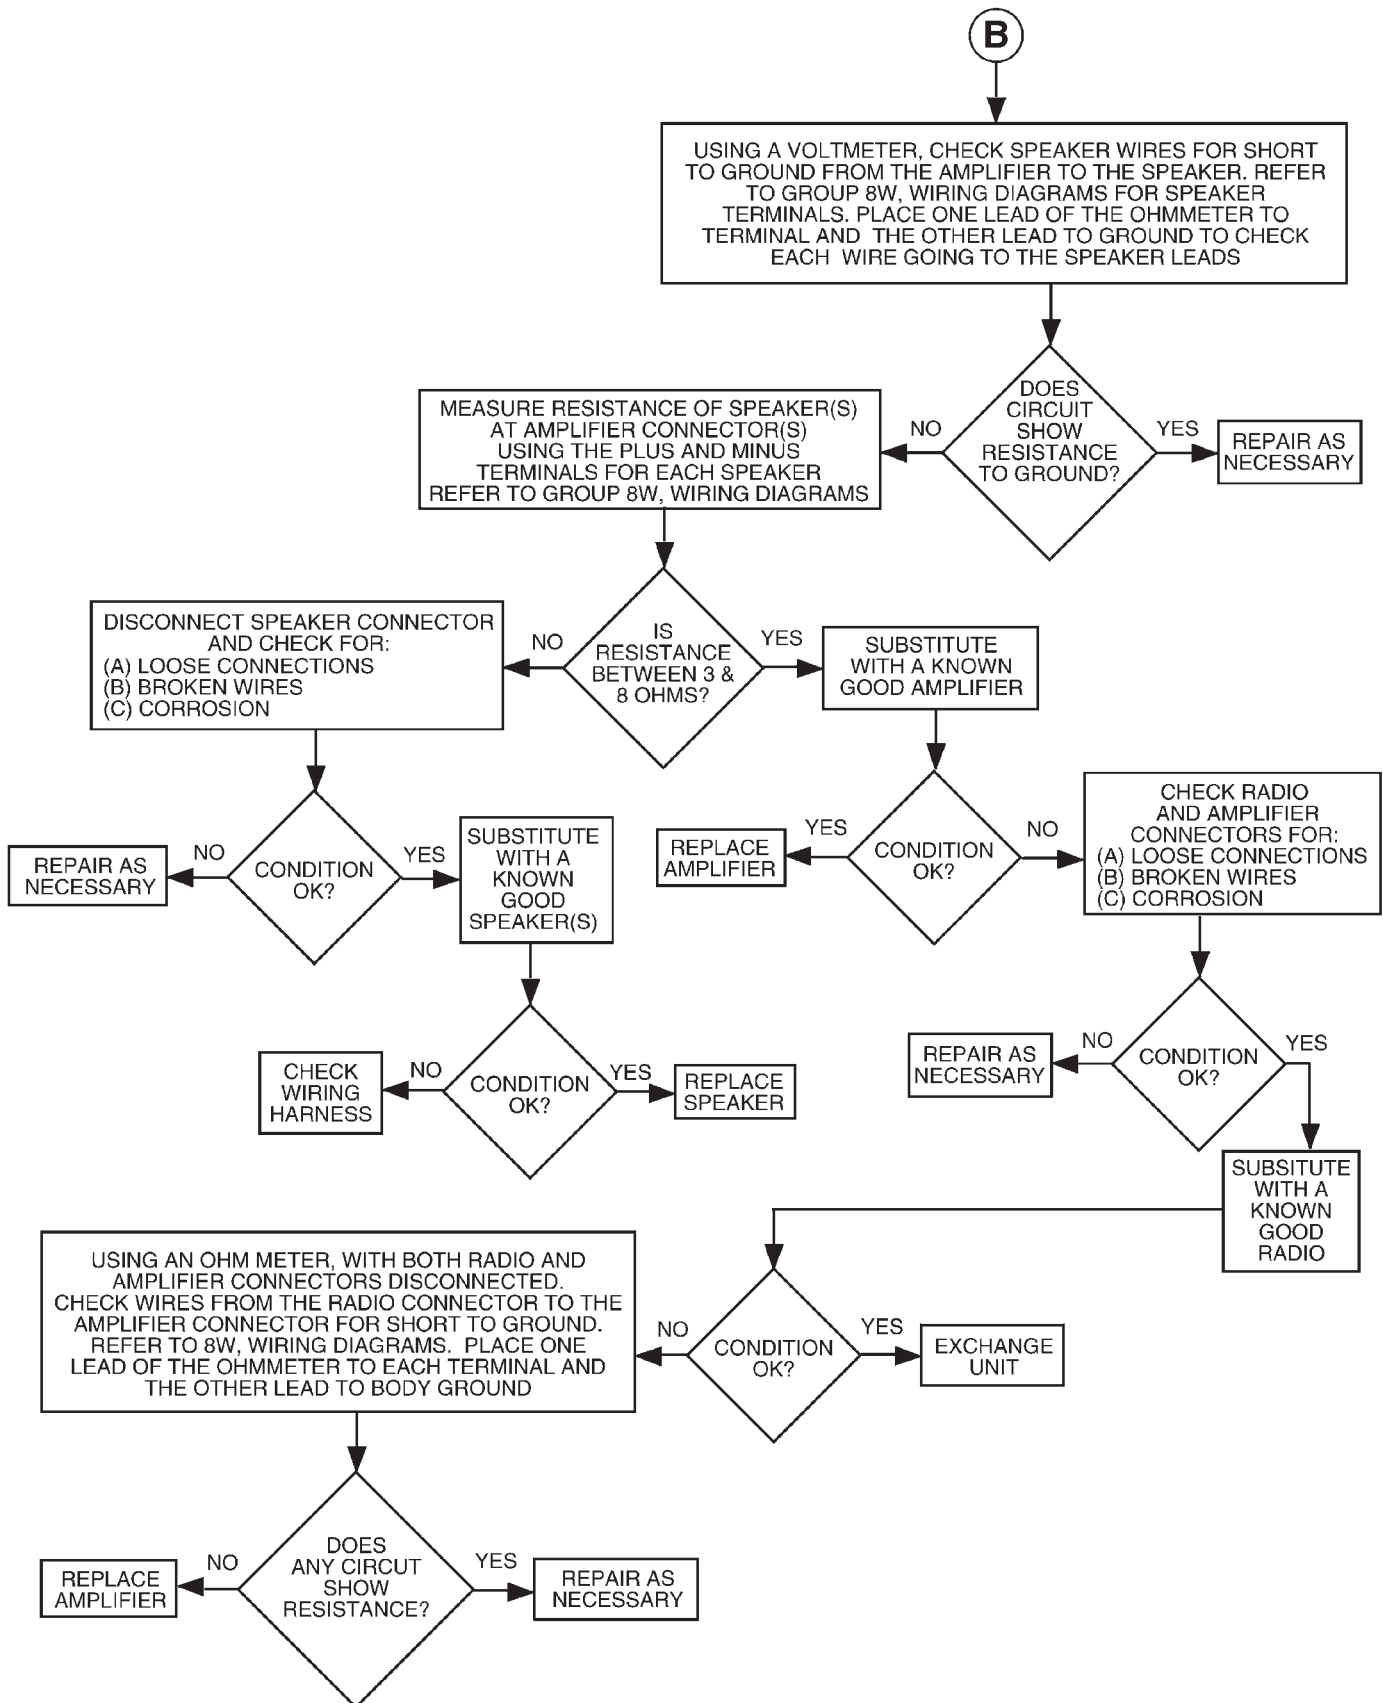


80500580

DIAGNOSIS AND TESTING (Continued)

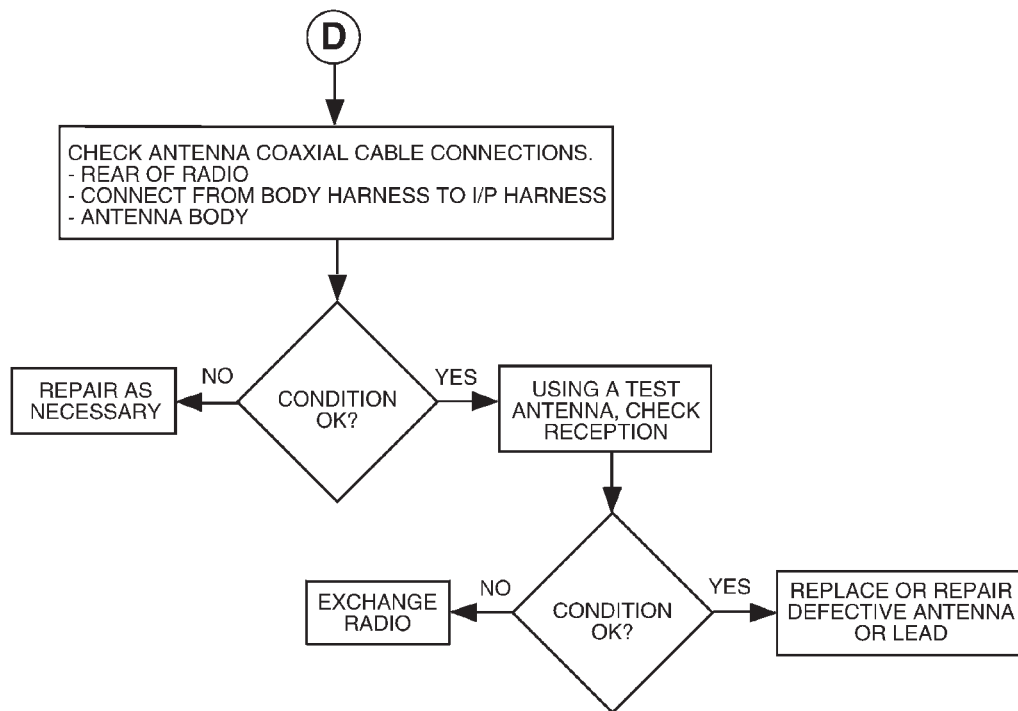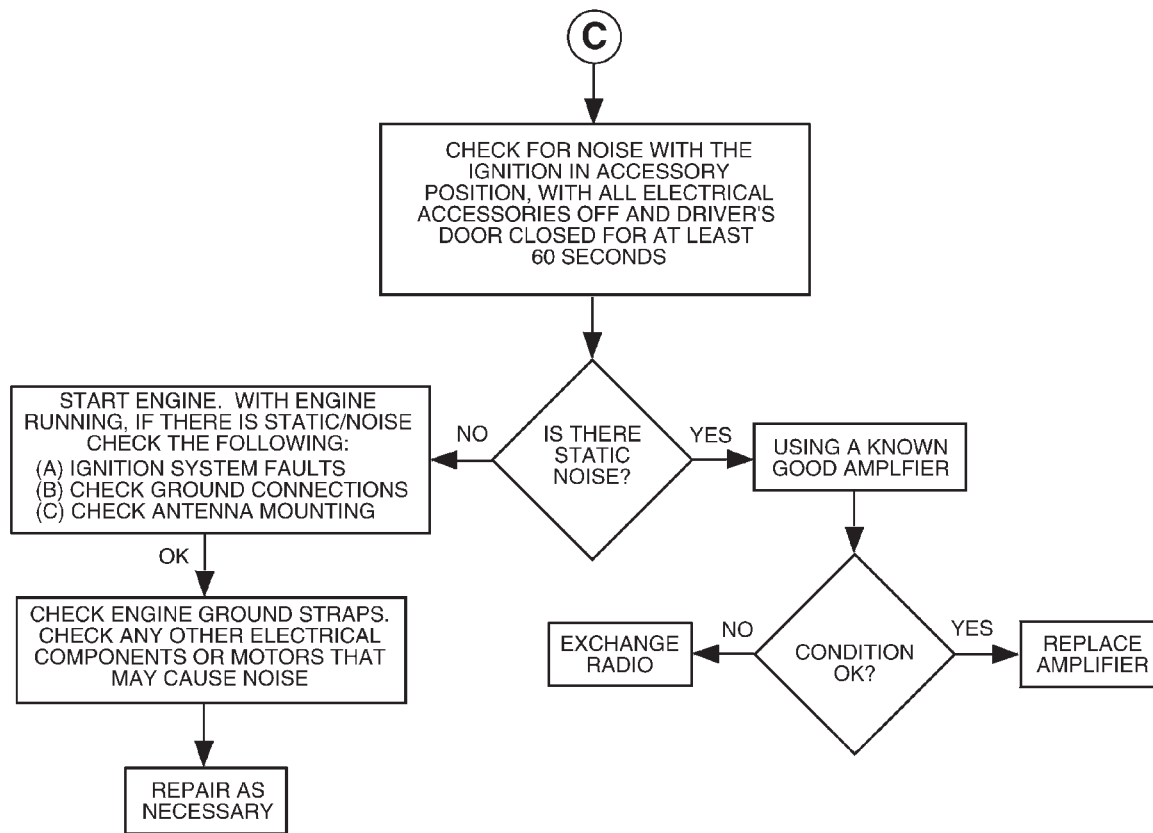


8050057b


DIAGNOSIS AND TESTING (Continued)

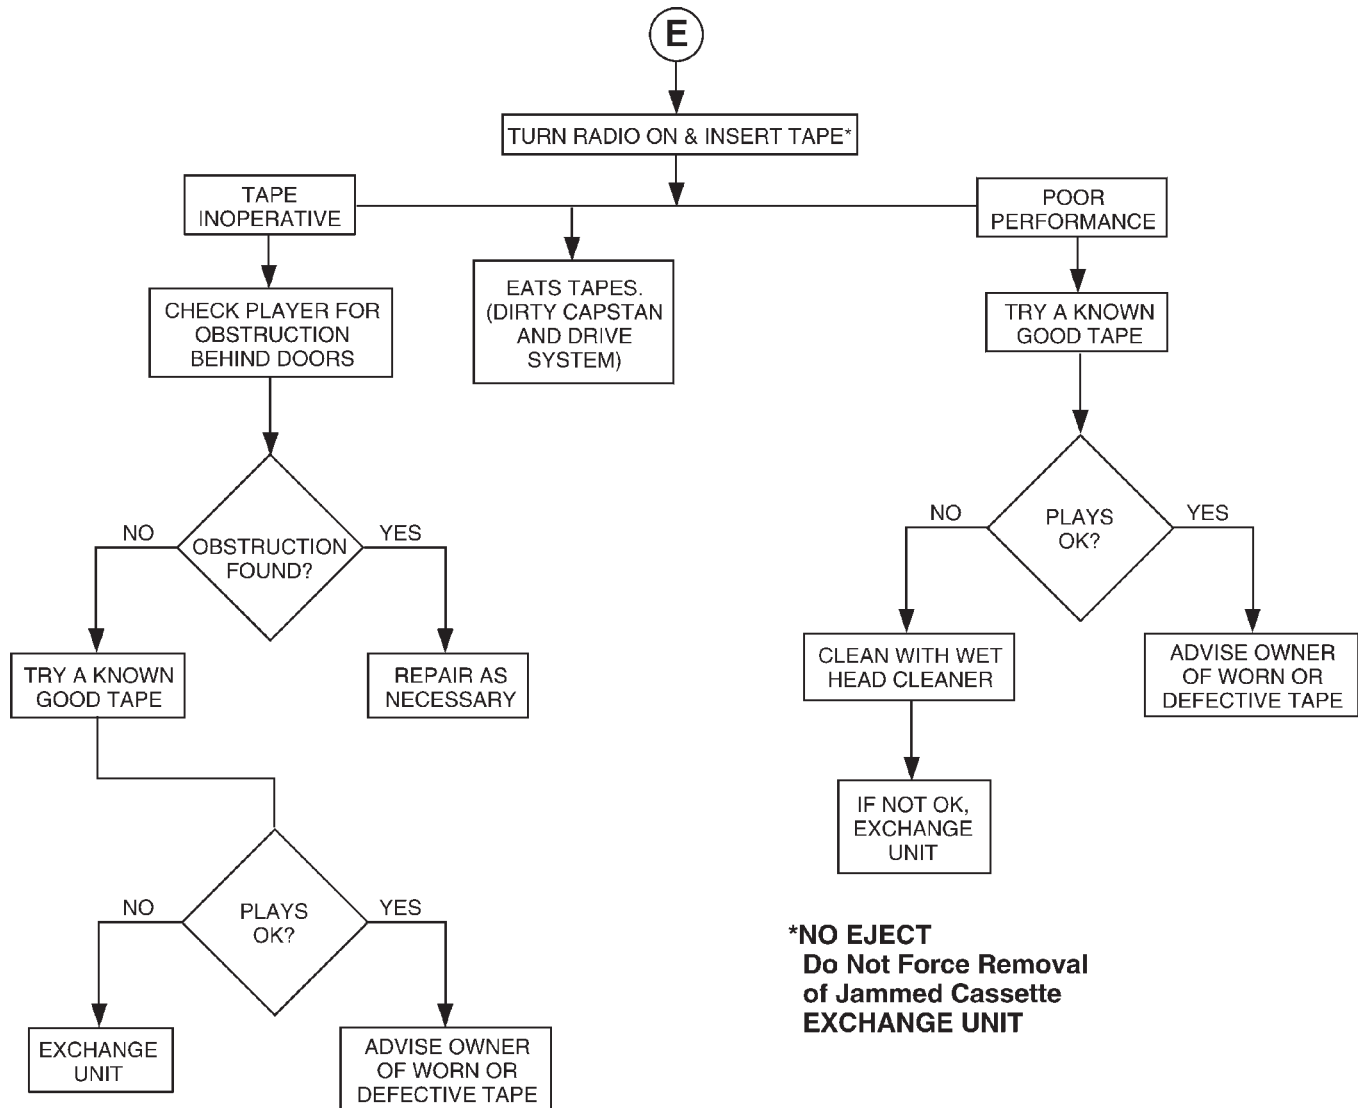

- CHECK TAPES FOR:**
- **CRACKED OR WARPED CASE**
 - **LOOSE LABEL ON CASE**
 - **TAPE PAD MISSING**
 - **TAPE SPOOL(S) JAMMING**

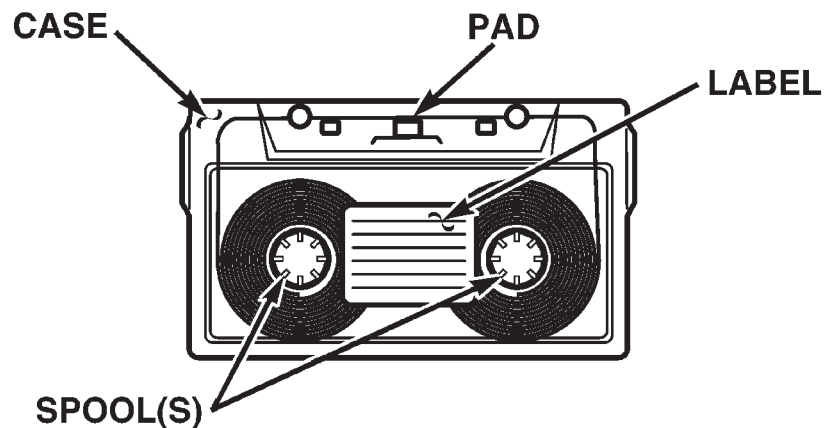

DIAGNOSIS AND TESTING (Continued)

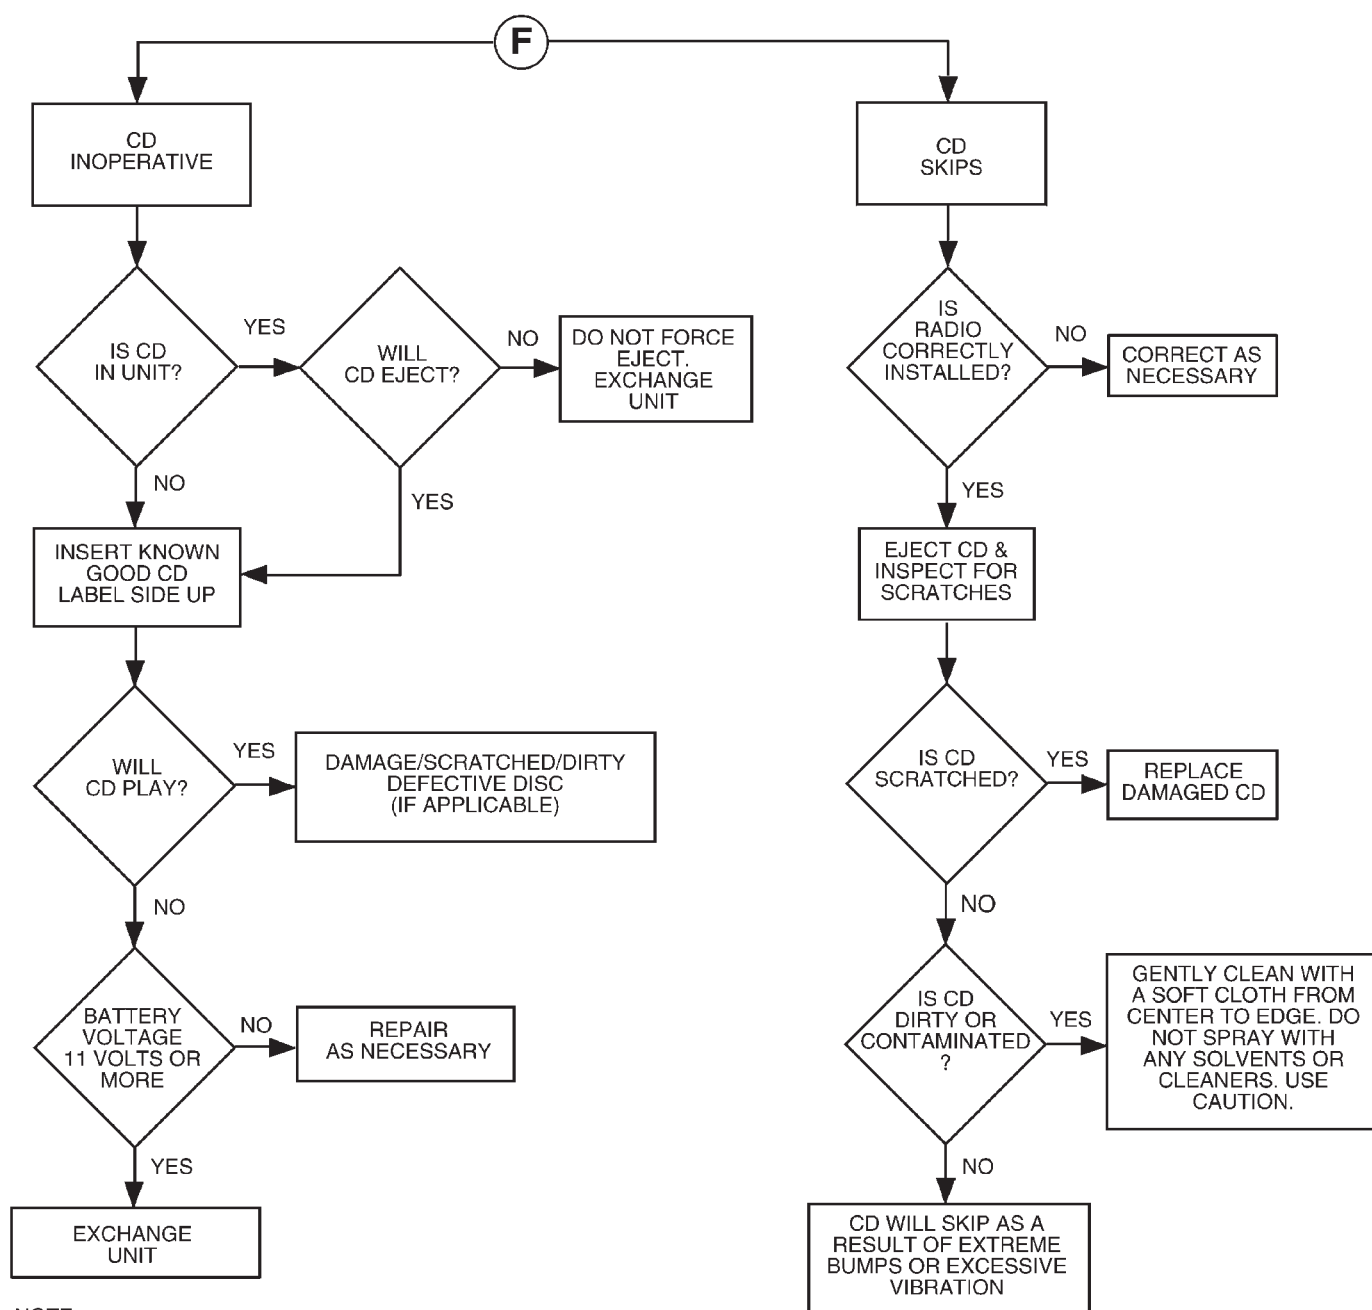

NOTE:
THE CD PLAYER WILL ONLY OPERATE BETWEEN
APPROXIMATE TEMPERATURES OF -23°C AND
+65°C (-10°F AND +145°F)

DIAGNOSIS AND TESTING (Continued)

DIAGNOSTIC CONDITIONS

NOISE DISTORTION IN ALL SPEAKERS

Does the distortion occur through all operations:

- AM and FM stations
- Cassette tape
- Compact disc

If not, check for radio interference, damaged tape or disc that may be causing the distortion. Refer to Sound Systems Operating Instructions in the Owners Manual for cleaning procedures of the cassette tape player.

- Check battery voltage, for 11 Volts or more
- Check amplifier connector for proper connection
- If OK, check radio, refer to Radio Diagnosis
- If OK, check circuit between the radio and the amplifier. If OK, check between the amplifier and the speakers.
- If OK, replace amplifier

ELECTRICAL NOISE DISTORTION ONE SPEAKER

- Remove output signal connector from amplifier and check for short to ground on the speaker with the distortion. Refer to Group 8W, Wiring Diagrams for the appropriate pin numbers.

- If shorted to ground, disconnect speaker connector and recheck from the amplifier for short to ground.

- If still shorted to ground, repair wires. Not shorted to ground, replace speaker.

- Not shorted to ground, check speaker resistance at amplifier connector for two to five ohms.

- If resistance is OK, refer to Radio Diagnosis. If radio checks OK, replace amplifier.

- If resistance is less than two ohms, replace speaker. If resistance is OK, repair wires

MECHANICAL NOISE DISTORTION

- Check trim for loose parts, and speaker attachments for buzzes, repair as necessary.

- Remove speaker that is still connected and listen for distortion. If distortion remains, replace speaker.

ONE SPEAKER NON-OPERATIVE

- Remove connector from amplifier and check for two to five ohms resistance to the non-operative speaker. Refer to Group 8W, Wiring Diagrams for the appropriate pin numbers.

- If resistance is less than two ohms, test speaker for resistance.

- If OK, refer to Audio Diagnostic Test Procedures. If not OK, replace speaker.

ALL SPEAKERS NON-OPERATIVE

- Check radio for being ON, are the display lights on

- Radio not ON, refer to Radio Diagnosis

- Check fuses, amplifier connectors and wires for proper connection

- Check for good ground

- Check amplifier, for battery voltage and ON/OFF voltage

(1) Battery voltage OK and NO voltage at the ON/OFF terminal, check for short or open in the ON/OFF circuit.

(2) ON/OFF voltage OK, and NO battery voltage, check for short or open in battery circuit.

(3) Prior to replacing amplifier check fuse 5 in the Junction Block. If not OK, replace fuse. If fuse blows again disconnect amplifier B+ wire connector. Refer to Group 8W, Wiring Diagrams for the proper connector.

(4) If fuse still blows the problem is not the amplifier. If fuse does not blow replace the amplifier.

(5) If shorted or open circuit repair as necessary.


MANUAL ANTENNA

Check for short or open circuits with an ohmmeter or continuity light once the antenna cable is disconnected from the radio. The radio coax cable has a connector that connects behind the between passenger seat and console.

(1) Continuity should be present between the antenna base and radio end pin of antenna cable plug (Fig. 1).

(2) No continuity should be observed or a very high resistance of several megohms between the ground shell of the connector and radio end pin.

(3) Continuity should be observed between the ground shell of the connector and the mounting hardware in the trunk right rear quarter panel

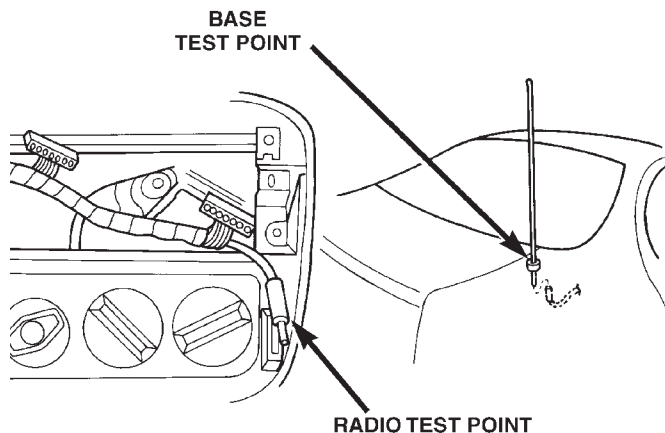

80a243a8

Fig. 1 Antenna Test Points

DIAGNOSIS AND TESTING (Continued)

POWER ANTENNA

(1) Antenna not operating check Fuse 5 in the Junction Block. If not OK, replace fuse. If OK, test for battery at the antenna wire connector. If OK, go to Step 2. If not OK, repair as necessary.

(2) To extend antenna, using jumper wires, attach one end to a battery positive source and the other to the red and green wire terminals for up direction. Connect the second lead to a good ground or to the antenna mounting bracket (Fig. 2).

(3) To retract antenna attach the battery positive source to the red wire terminal for the down direction. Connect the second lead to a good ground or to the antenna mounting bracket.

(4) If the motor will not operate, replace the antenna assembly.

(5) If the motor runs freely and the antenna does not extend or retract, the mast or drive assembly is at fault. Remove the mast and verify that all the drive teeth are intact. If not replace mast.

(6) If the mast jumps or travel rate is slow during operation or the motor labors.

(a) Check for bent mast. If bent replace mast.

(b) Check for dirty mast and clean it as necessary. If corroded, replace mast.

NOTE: Do not grease or lubricate the mast.

(c) If cleaning the antenna mast does not solve the problem, the antenna mast should be replaced.

(7) If mast fails to extend or retract completely, or motor continued to operate after full extension or retraction of mast. Check for broken teeth on the mast drive rod or bent mast.

(8) If the mast checks good, the antenna assembly should be replaced.

REMOTE CD CHANGER TEST

CD changer inoperative.

(1) The CD changer receives its power and ground through the radio via the DIN connector. Verify that the radio powers up and functions before proceeding.

(2) With the radio turned ON, check the radio display when pushing the MODE/EJECT button to select the CD mode.

(a) If the display shows - - - , then insert a CD magazine in the changer.

(b) If the display shows nocrd, then insert a CD into the magazine.

(c) If the display shows Err xxxx, then check the error message table below.

(d) If the radio only switches between AM and FM turning modes, then perform the following:

(I) Check the connection of the DIN cable to the CD changer and radio.

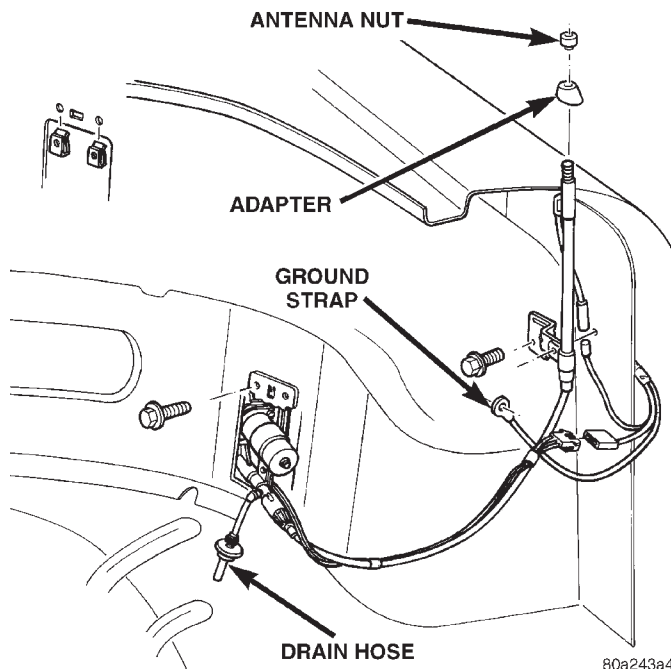


Fig. 2 Power Antenna Assembly


(II) If OK, then check the DIN cable at the CD changer side.

(III) Make sure the DIN cable is connected to the radio and radio is turned ON and operating. Check for battery voltage at Pins 6 and 7 using Pin 8 for ground.

(IV) If OK, then replace CD changer.

(V) If not OK, then remove DIN cable from radio and changer. Check DIN cable for continuity from connector to connector, using a ohmmeter on each Pin.

(VI) If the DIN cable OK, then replace the radio.

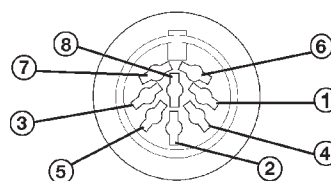

DIN Cable Connector

DIN CABLE PIN-OUTS			
PIN 1	DATA BUS (-)	PIN 5	AUDIO IN (L)
PIN 2	AUDIO GRD	PIN 6	BATTERY
PIN 3	DATA BUS (+)	PIN 7	IGNITION
PIN 4	AUDIO IN (R)	PIN 8	GROUND

ERROR MESSAGES		
DIS-PLAY	EXPLANATION	WHAT TO DO
nocd	No disc or discs in magazine	Load discs in magazine
- - - -	No magazine in player	Load magazine in player
Err HOT	Player overheating	Allow to cool down
Err EE EE	Communication problem	Turn ignition OFF to reset, check cable connection. If OK, replace changer.
Err E-01	Deadlock problem	Replace changer.
Err E-02	Disc eject problem	Replace changer.
Err E-06	Elevator problem	Replace Changer.
Err E-07	Magazine eject problem	Check that the magazine is OK. If OK, replace changer.
Err PLAY	Discs cannot play	Check disc loading, or try another disc. If OK, replace changer.

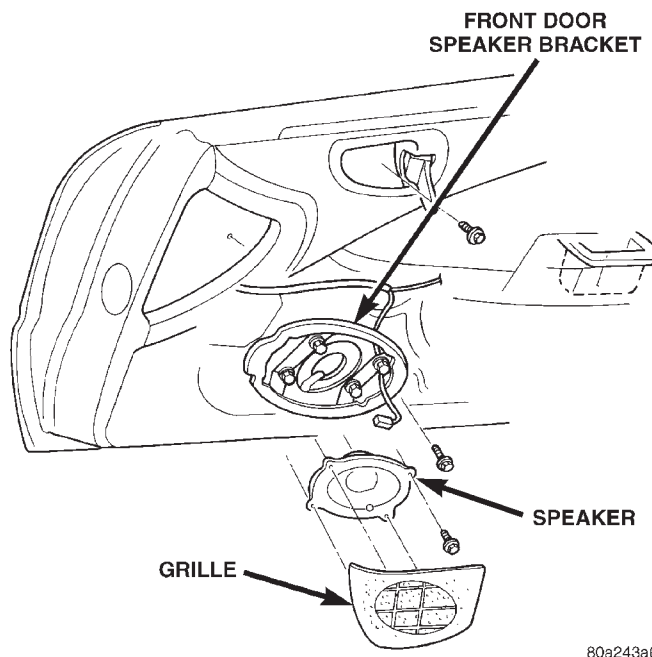


Fig. 3 Door Mounted Speaker

INSTRUMENT PANEL SPEAKER

CAUTION: Do not operate the radio with speaker leads detached. Damage to the output devices may result.

REMOVAL AND INSTALLATION

DOOR MOUNTED SPEAKER

CAUTION: Do not operate the radio with speaker leads detached. Damage to the output devices may result.

REMOVAL

- (1) Carefully, pry speaker grille away from door trim panel (Fig. 3).
- (2) Remove four speaker retaining screws.
- (3) Pull speaker away from door and disconnect wiring.

INSTALLATION

For installation reverse above procedures. Ensure speaker is in the proper position


REMOVAL

- (1) Remove instrument panel top cover:
 - (a) Remove screw from right side of the top cover.
 - (b) Carefully, pry up each end of top cover to disengage clips (Fig. 4).
 - (c) Lift rear edge of top cover using a trim stick along rear edge.
 - (d) While lifting rear edge slide top cover rearward to disengage front clips and remove the top cover.
- (2) To remove right or left speaker remove two retaining screws. Lift up speaker and disconnect wire connector (Fig. 5).

REMOVAL AND INSTALLATION (Continued)


INSTALLATION

For installation, reverse the above procedures.

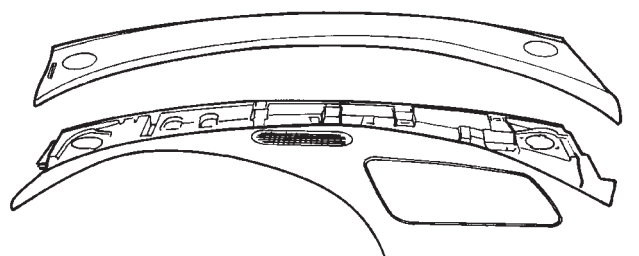

958F-17

Fig. 4 Instrument Panel Top Cover

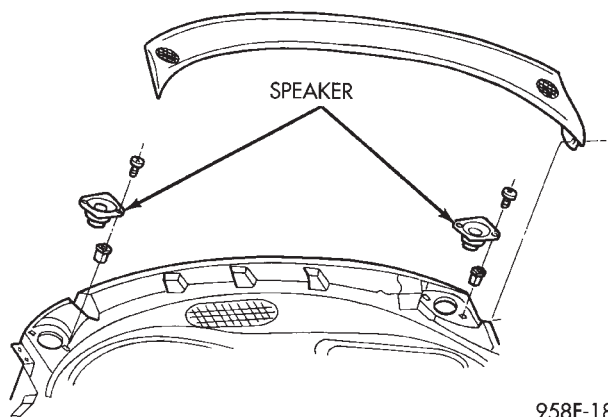

958F-18

Fig. 5 Instrument Panel Speakers


MANUAL ANTENNA AND MAST

REMOVAL

- (1) Inside trunk, pull the right side trunk liner aside.
- (2) Unplug antenna lead from base of antenna body.
- (3) Remove antenna mast by unscrewing mast from antenna body. Use tape (electrical) to prevent scratching of the mast.
- (4) Remove cap nut and adapter (Fig. 6).
- (5) Pull antenna body down through the quarter panel.

INSTALLATION

For installation reverse above procedures. Check that the locating tab is in-line with the slot in the body before installing antenna. Tighten cap nut to 7 N·m (65 in. lbs.).

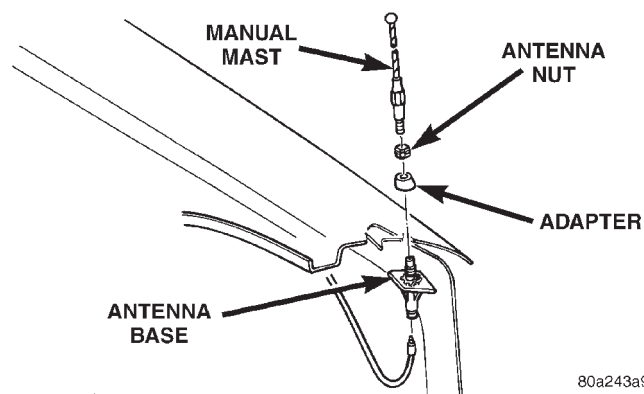

80a243a9

Fig. 6 Antenna Mounting Removal

POWER ANTENNA

REMOVAL

- (1) Disconnect battery negative cable.
- (2) Inside trunk, pull trunk liner aside.
- (3) Remove motor mounting screws.
- (4) Unplug antenna lead from pigtail connector, disconnect wire connector, remove drain tube from grommet (Fig. 2).
- (5) Remove cap nut and adapter.
- (6) Pull antenna body down through the hole in the quarter panel.

INSTALLATION

For installation reverse the above procedures. Tighten antenna cap to 7 N·m (65 in. lbs.) torque.


POWER ANTENNA MAST

REMOVAL

- (1) Remove cap nut.
- (2) Turn ignition key to ACCESSORY position and turn on radio.
- (3) While the mast is moving up pull upward to remove mast, contact spring and drive rod from the mast tube.

INSTALLATION

- (1) Insert new drive rod into mast tube with drive teeth toward antenna motor (Fig. 7).
- (2) Turn off radio and guide mast into tube. The mast may not be fully lowered when first installed.
- (3) Replace the cap nut and tighten to 7 N·m (65 in. lbs.) torque.
- (4) Turn radio on and off to extend and retract antenna. Mast should be fully lowered after recycling.

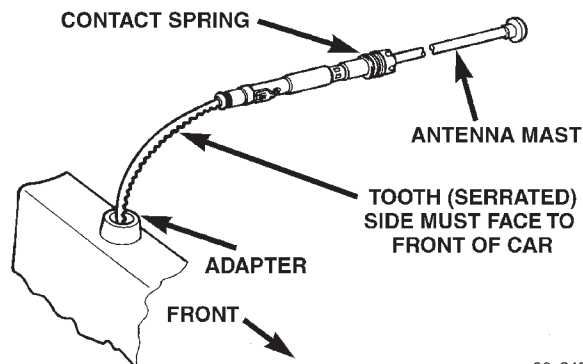

80a243a5

Fig. 7 Power Mast Replacement

REMOVAL AND INSTALLATION (Continued)

RADIO

REMOVAL

- (1) Remove center bezel by pulling straight back (Fig. 8).
- (2) Remove two radio mounting screws (Fig. 9).
- (3) Turn OFF radio and ignition switch. DO NOT disconnect the radio with ignition switch ON.
- (4) Pull radio from panel and disconnect wire connectors and antenna lead from radio.
- (5) Remove radio.

INSTALLATION

For installation, reverse the above procedure.

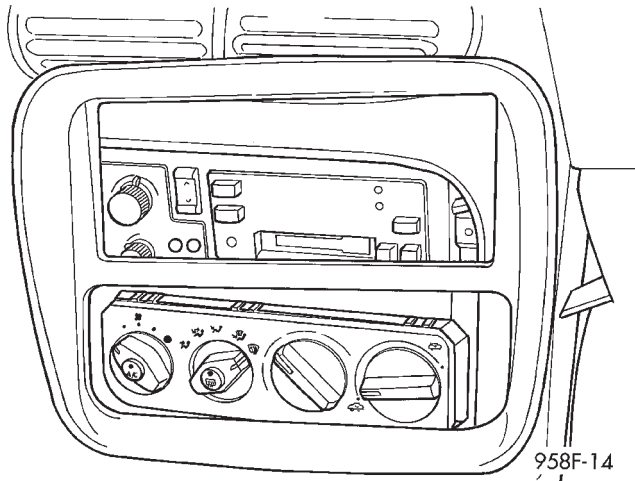


Fig. 8 Center Bezel Removal

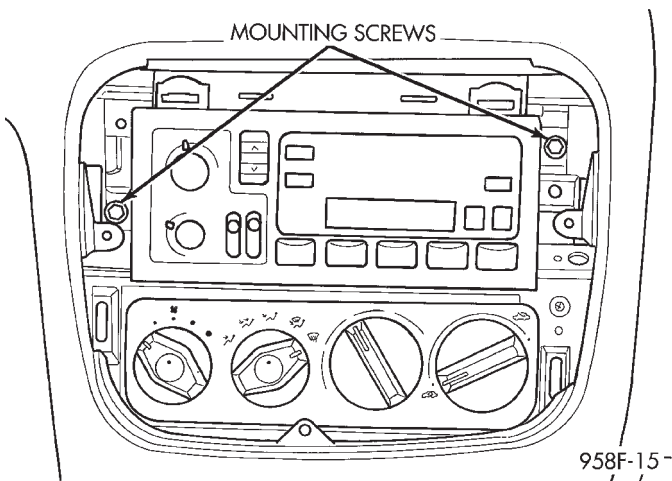


Fig. 9 Radio Assembly

REAR QUARTER PANEL SPEAKER

CAUTION: Do not operate the radio with speaker leads detached. Damage to the output devices may result.

REMOVAL

- (1) Remove rear quarter panel trim grille.
- (2) Remove four retaining screws (Fig. 10).
- (3) Disconnect wire connector and remove speaker.

INSTALLATION

For installation reverse the above procedure. Be sure that the wire connectors are facing rearward in vehicle.

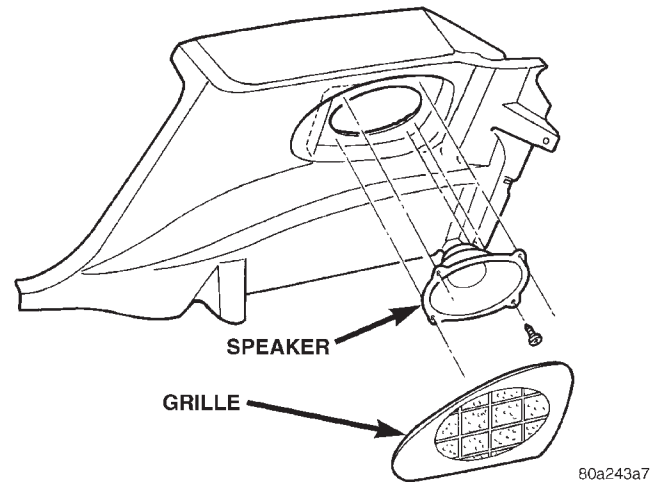


Fig. 10 Rear Speakers

REMOVAL AND INSTALLATION (Continued)

REMOTE AMPLIFIER**REMOVAL**

(1) Loosen the two attaching screws and the nut (Fig. 11).

(2) Disconnect the electrical connector and remove amplifier.

INSTALLATION

For installation, reverse the above procedure. Tighten fasteners to 4 N·m (40 in. lbs.) torque.

REMOTE CD CHANGER AND MOUNTING BRACKET**REMOVAL**

(1) Turn ignition switch to the OFF position.

(2) Remove the instrument cluster hood. Refer to Group 8E, Instrument Panel and Systems for removal procedures.

(3) Remove the two CD changer attaching screws located under the HVAC control.


(4) Slide the CD changer/power outlet assembly rearward in the vehicle.

(5) Disconnect CD cable, power outlet, and the light socket assembly wire connectors.

(6) Remove the CD changer.

INSTALLATION

For installation, reverse the above procedure.

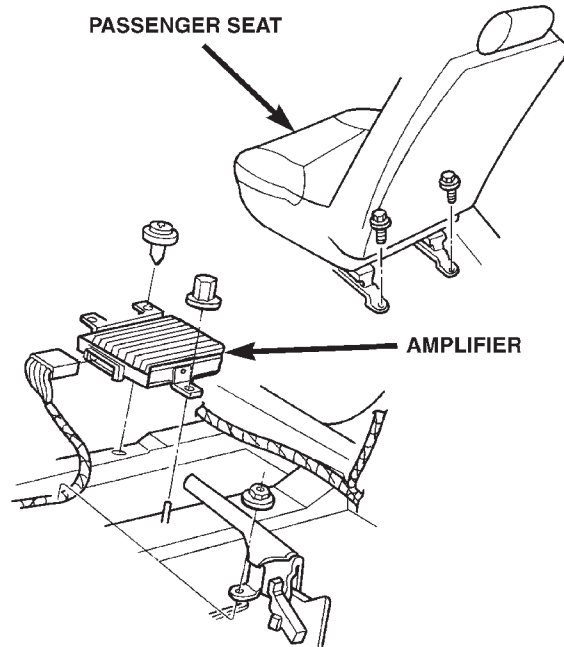

80a243aa

Fig. 11 Amplifier Location